Lecture 14 Wireless Communication

CE346 – Microcontroller System Design Branden Ghena – Fall 2024

Some slides borrowed from: Josiah Hester (Northwestern), Prabal Dutta (UC Berkeley)

Administriva

- Last postlab questions! Be sure the answer them
- I'm still ordering more hardware if people need things
 - I'll place the next order on Friday
 - After that I'll probably order things once a week
- How to get project help
 - Office hours
 - Piazza post (I've added some posts on general stuff)
 - Find guides on the Internet

Today's Goals

- Explore important issues in wireless communication
 - Physical and Data Link layers particularly

- Describe several wireless networks that are very important to modern Internet of Things devices
 - Bluetooth Low Energy
 - Thread and Zigbee (802.15.4)
 - WiFi (802.11)
 - Low-Power Wide-Area Networks

nRF52833 supports these!

But our Microbit library doesn't (2)



Except for 15.4, which IS now supported! See example apps

Outline


Wireless Communication Overview

- Wireless Protocols
 - Overview
 - Bluetooth Low Energy
 - 802.15.4
 - WiFi
 - Low-Power Wide-Area Networks

Wireless: high-level idea

- Normally, we want to keep all electric signals contained in a wire
 - Don't want to receive interference from other signals or cause interference
- Antennas are good at the opposite:
 - They spill electrical signals out into the world
 - They receive electrical signals from the world

 This means we can send information from one device to another without wires!

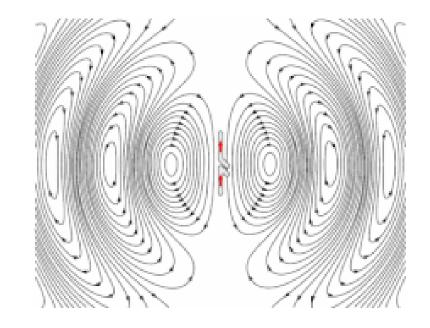

Why use wireless?

There are no wires!

- No need to install and maintain wires
 - Reduces cost
 - Simplifies deployment place devices wherever makes sense
- Supports mobile users
 - Move around office, campus, city
 - Move devices around home


What is hard about wireless?

There are no wires!

- Wired networks are constant, reliable, and physically isolated
 - Ethernet has the same throughput minute-to-minute
 - Bits sent through Ethernet or USB are (usually) received
- Wireless networks are variable, error-prone, and shared
 - WiFi throughput changes based on location and walls
 - Signals from nearby devices interfere with your signals
 - Individual bits might flip or never be heard at all


Wireless is a shared medium

- Wired communication has signals confined to a conductor
 - Copper or fiber
 - Guides energy to destination
 - Protects signal from interference
- Wireless communication is inherently broadcast
 - Energy is distributed in space
 - Signals must compete with other signals in same frequency band

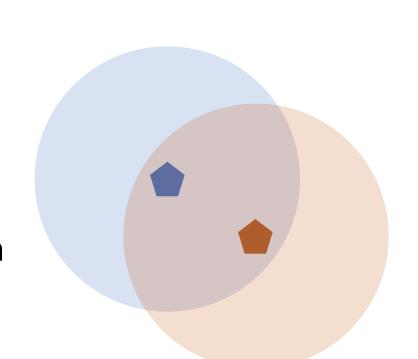


Increasing network capacity is challenging

- Wired networks just add more wires
 - Buses are many signals in parallel to send more data

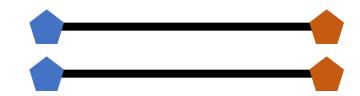


- Wireless networks are harder
 - Adding more links just increases interference
 - Need to expand to different frequencies

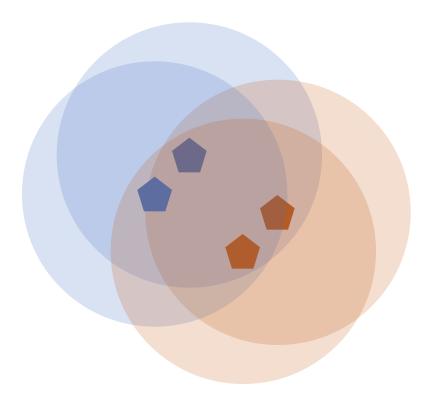


Model of RF communication

- Energy that radiates spherically from an antenna at a "carrier frequency"
 - Good enough for understanding communication
- Attenuation with distance
 - Density of energy reduces over time, distance
 - Signal strength reduced, errors go up
- Two key features
 - Range and data rate affect error rates
 - Spatial reuse of frequencies

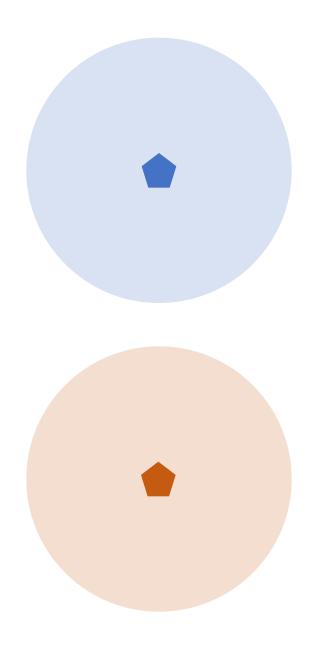

Signal qualities

- 1. Signal strength
 - The amount of energy transmitted/received
- 2. Signal frequency and bandwidth
 - Which "channel" the signal is sent on
- 3. Signal modulation
 - How data is encoded in the signal

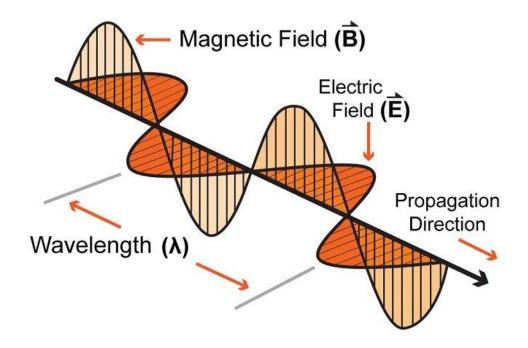

Signal qualities

1. Signal strength


The amount of energy transmitted/received

2. Signal frequency and bandwidth

Which "channel" the signal is sent on

3. Signal modulation

How data is encoded in the signal

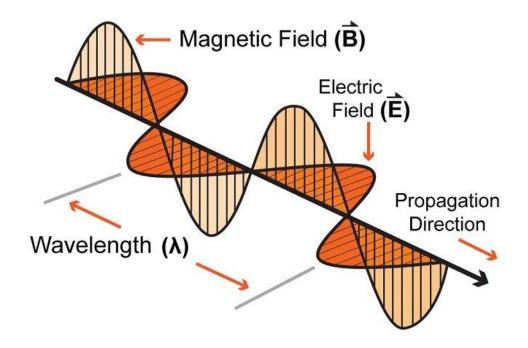

Wireless signals are incredibly low power

- Maximum BLE transmit power for the nRF52840:
 - 8 dBm -> $6.31 \text{ mW} (10^{-3})$
- Minimum BLE receive power for the nRF52840:
 - -95 dBm -> 316.2 fW (10⁻¹⁵)

- Signal strength decreases in energy spherically
 - Eventually the signal is too quiet to receive reliably

Signal strength varies significantly across technologies

- Bluetooth Low Energy (local area)
 - nRF52840 transmit power: 8 dBm (6.31 milliwatt)
 - nRF52840 receive sensitivity: -95 dBm (316.2 femtowatt)
- LoRa (wide area)
 - SX127X LoRa transmit power: 20 dBm (100 milliwatt)
 - SX127X LoRa receive sensitivity: -148 dBm (1.6 attowatt)

Signal qualities

1. Signal strength


The amount of energy transmitted/received

2. Signal frequency and bandwidth


Which "channel" the signal is sent on

3. Signal modulation

How data is encoded in the signal

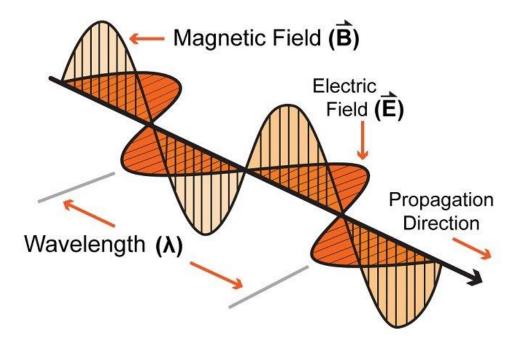


RF communication

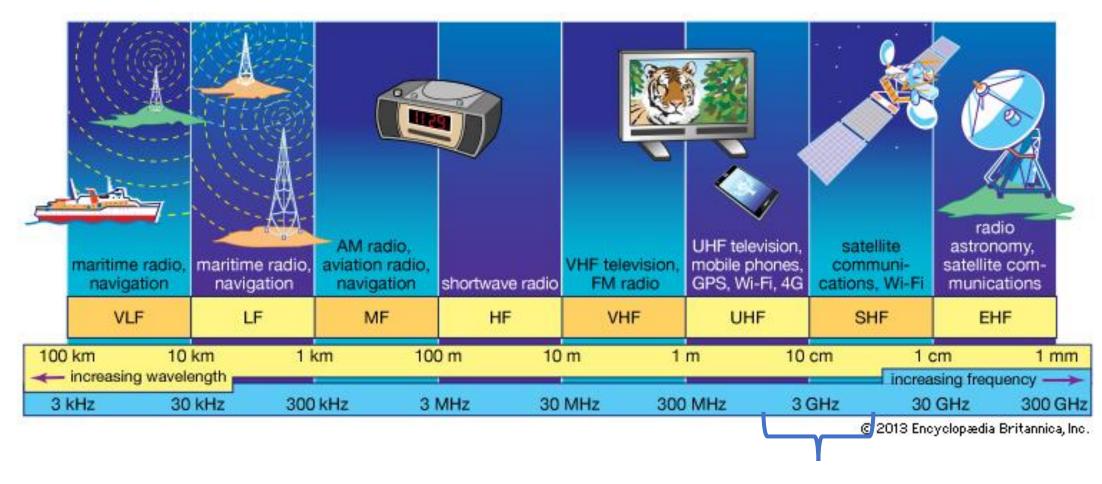

IoT focus


Wireless spectrum is allocated to specific uses

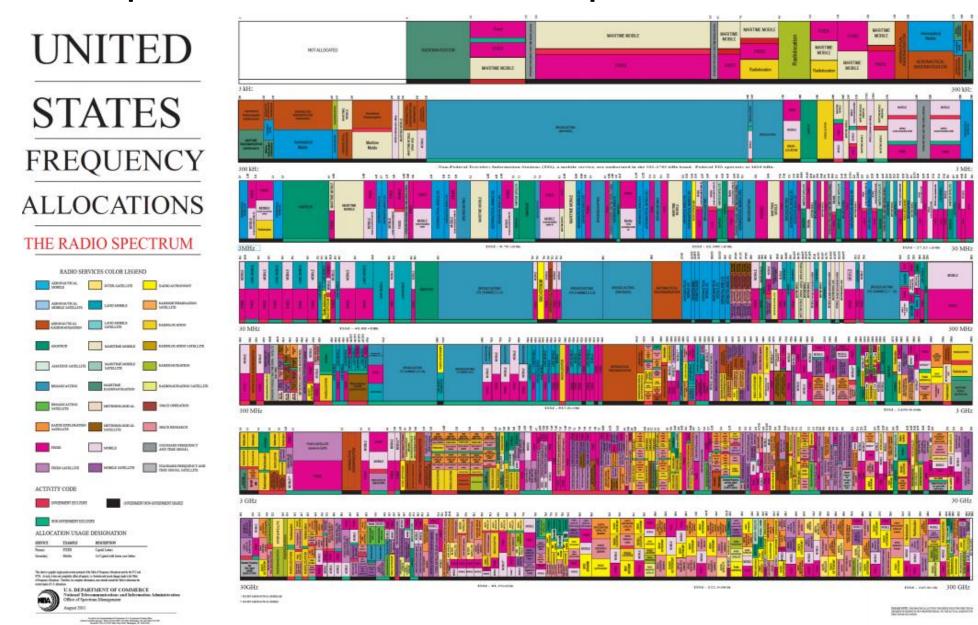

Unlicensed bands are where IoT thrives

- 902 MHz 928 MHz
 - LPWANs

- 2.4 GHz to 2.5 GHz
 - WiFi, BLE, Thread
- 5 GHz
 - Faster WiFi

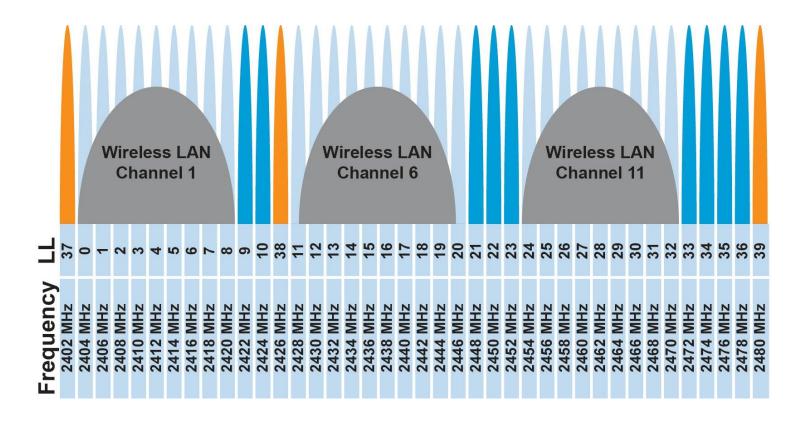


- Cellular uses licensed bands at great cost
 - Why pay?

Unlicensed bands are where IoT thrives

902 MHz – 928 MHzLPWANs

- 2.4 GHz to 2.5 GHz
 WiFi, BLE, Thread
- 5 GHz
 - Faster WiFi

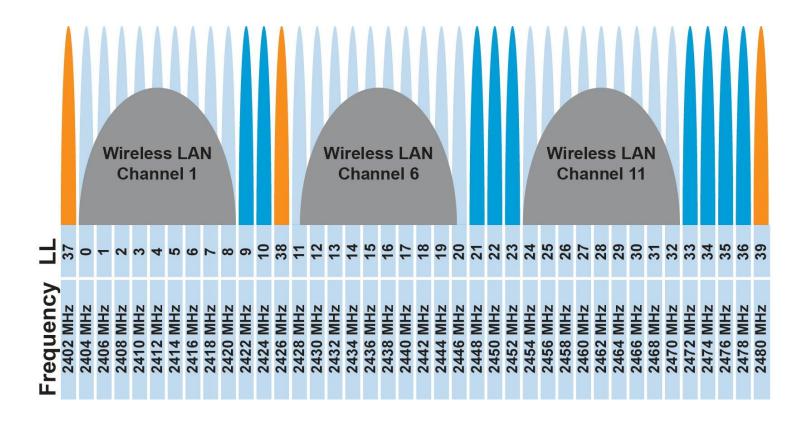

- Cellular uses licensed bands at great cost
 - Why pay? No interference from other users

Signal qualities

1. Signal strength


The amount of energy transmitted/received

2. Signal frequency and bandwidth

• Which "channel" the signal is sent on


3. Signal modulation

How data is encoded in the signal

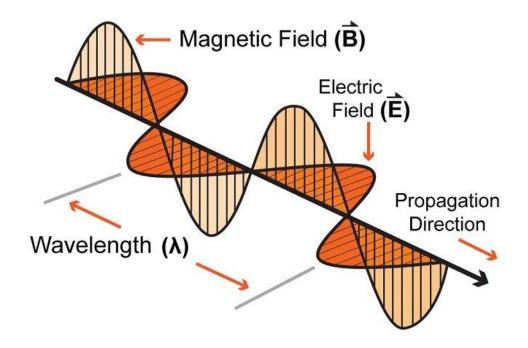


Modulation

- Encoding signal data in an analog "carrier" signal
 - Carrier signal defines the frequency
 - Modulation scheme + data define bandwidth required

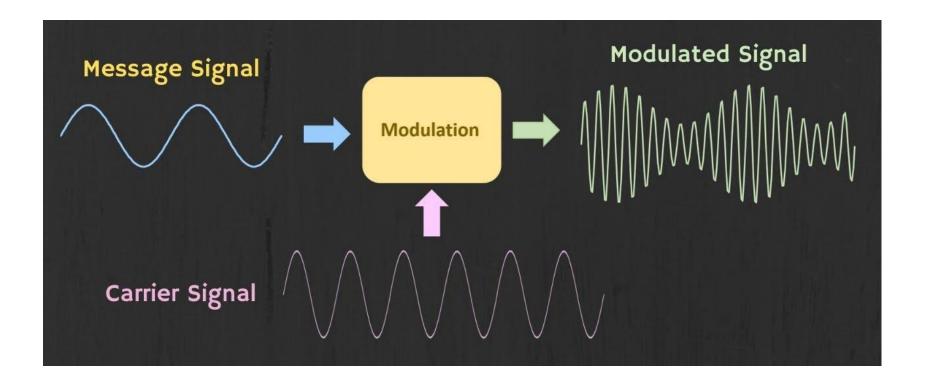

Common modulation types

- Encoding binary data on a signal
- Amplitude-shift Keying (ASK)
 - Modify amplitude of carrier signal
 - On-Off Keying (OOK) is an extreme example
- Frequency-shift Keying (FSK)
 - Modify frequency of carrier signal

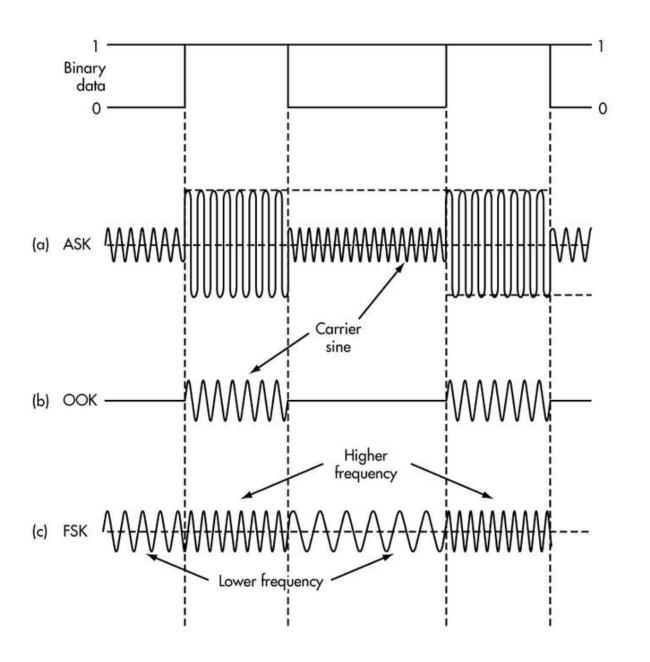

Break + Open Question

- What lets some protocols travel further than others?
 - WiFi is about 100 meters
 - Cellular is more than 1000 meters

Break + Open Question

What lets some protocols travel further than others?

- WiFi is about 100 meters
- Cellular is more than 1000 meters
- Multiple different parameters affect this
 - More transmit power
 - More receive sensitivity (receive at a lower power)
 - Modulation that makes it easier to recover bits without errors
 - Bandwidth can also affect error rates, which in turn affects distance
 - Frequency kinda-sorta, but not as much as people think

Outline

Wireless Communication Overview

Wireless Protocols

- Overview
- Bluetooth Low Energy
- 802.15.4
- WiFi
- Low-Power Wide-Area Networks

What is the role of a wireless protocol?

- Multiple methods exist for sending bits wirelessly
- Protocols make choices about how to use them
 - 1. Select exact configurations for bit communication (Physical Layer)
 - 2. Determine how to send packets of data (Data Link Layer)
 - What are the fields within a packet?
 - Which device sends a packet and when can it do so?
 - 3. Organize communication between devices (Network Layer)
 - How are devices named?
 - How is communication directed between those devices?

Framing

- Typical packet structure
 - Preamble Existence of packet and synchronization of clocks
 - Header Addresses, Type, Length
 - Data Payload plus higher layer headers (e.g. IP packet)
 - Trailer Padding, CRC

Preamble	Destination Address			Data	CRC
----------	------------------------	--	--	------	-----

- Wireless considerations
 - Control information for Physical Layer
 - Ensure robustness for header
 - Possibly different data rates for different parts of packet

Medium Access Control

How does a network determine which transmitter gets to transmit?

- Remember: the wireless medium is inherently broadcast
 - Two simultaneous transmitters may lose both packets

Analogy: wireless medium as acoustic

- Activity: How do we determine who gets to speak?
 - Two simultaneous speakers also lose both "transmissions"

Analogy: wireless medium as acoustic

- Activity: How do we determine who gets to speak?
 - Two simultaneous speakers also lose both "transmissions"
- Eye contact (or raise hand) -> out-of-band communication
- Wait until it's quiet for some time -> carrier sense multiple access
- Strict turn order -> time division multiple access
- Just speak and hope it works -> ALOHA
- Everybody sing at different tones -> frequency division multiple access (stretching the metaphor)
- Others?

ALOHA

- ALOHAnet (1971)
 - University of Hawaii Norman Abramson
 - First demonstration of wireless packet network
- Rules
 - 1. If you have data to send, send it
- Two (or more) simultaneous transmissions will collide and be lost
 - Wait a duration of time for an acknowledgement
 - If transmission was lost, try sending again "later"
 - Want some kind of exponential backoff scheme here

CSMA/CA – Carrier Sense Multiple Access with Collision Avoidance

- First listen for a duration and determine if anyone is transmitting
 - If idle, you can transmit
 - If busy, wait and try again later

"listen before send"

- More expensive than Aloha, but far more reliable
 - Higher energy and lower data rate due to time spent listening
 - Don't mess up messages that have already started
 - Collisions can only occur if there are multiple waiting devices

TDMA – Time Division Multiple Access

- Split transmissions in time
 - Devices share the same channel
- Splits time into fixed-length windows
 - Each device is assigned one or more windows
 - Can build a priority system here with uneven split among devices
- Requires synchronization between devices
 - Often devices must listen periodically to resynchronize
 - Less efficient use of slots reduce synchronization
 - Large guard windows. E.g., 1.5 second slot for a 1 second transmission

Break + Question

Access controls to shared busses in wired systems as well!

Which of these MAC protocols is I2C using?

Which of these MAC protocols is USB using?

Break + Question

Access controls to shared busses in wired systems as well!


- Which of these MAC protocols is I2C using?
 - CSMA/CA senses the carrier to detect collisions


- Which of these MAC protocols is USB using?
 - TDMA Host decides when each device can talk


Outline


Wireless Communication Overview


- Wireless Protocols
 - Overview
 - Bluetooth Low Energy
 - · 802.15.4
 - WiFi
 - Low-Power Wide-Area Networks

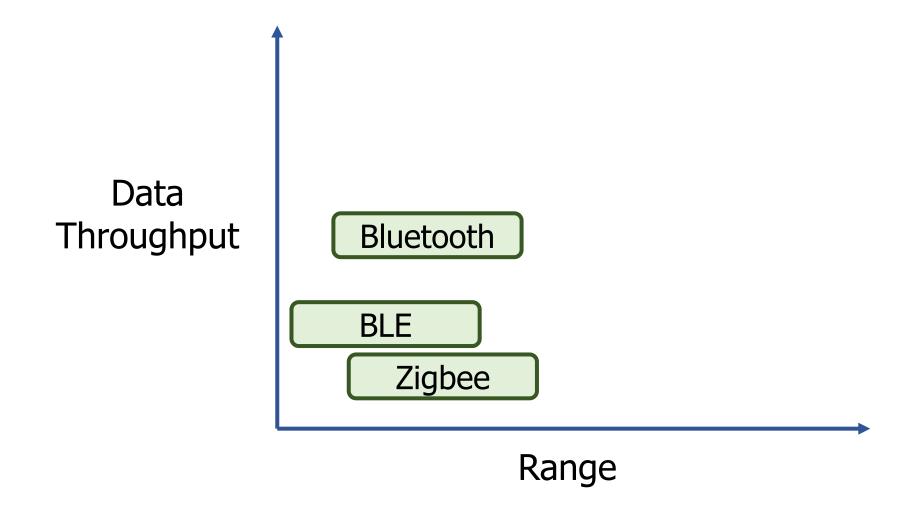

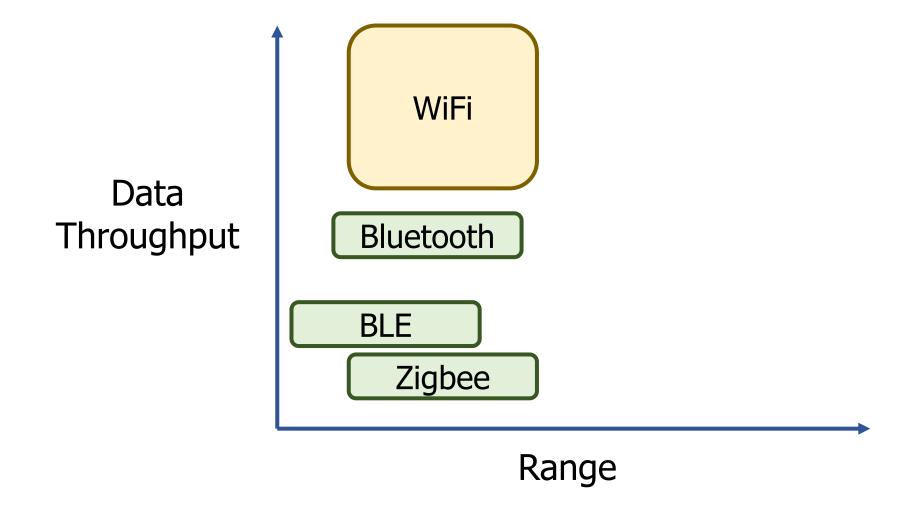

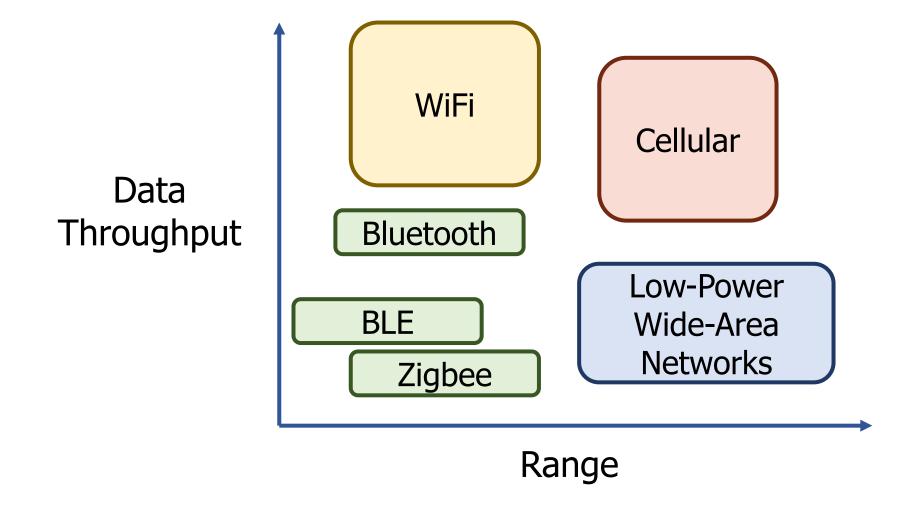

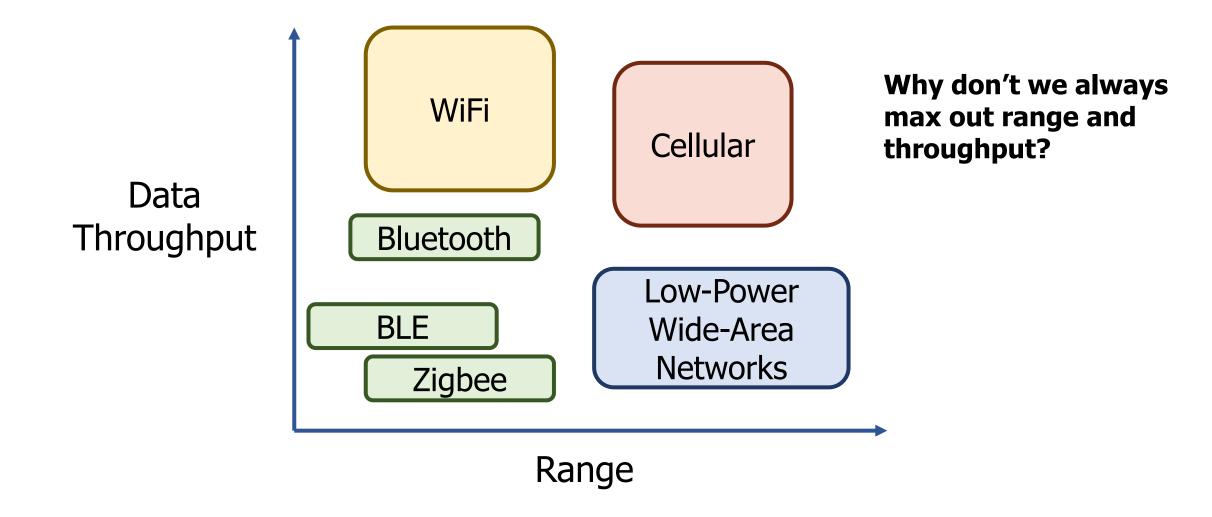

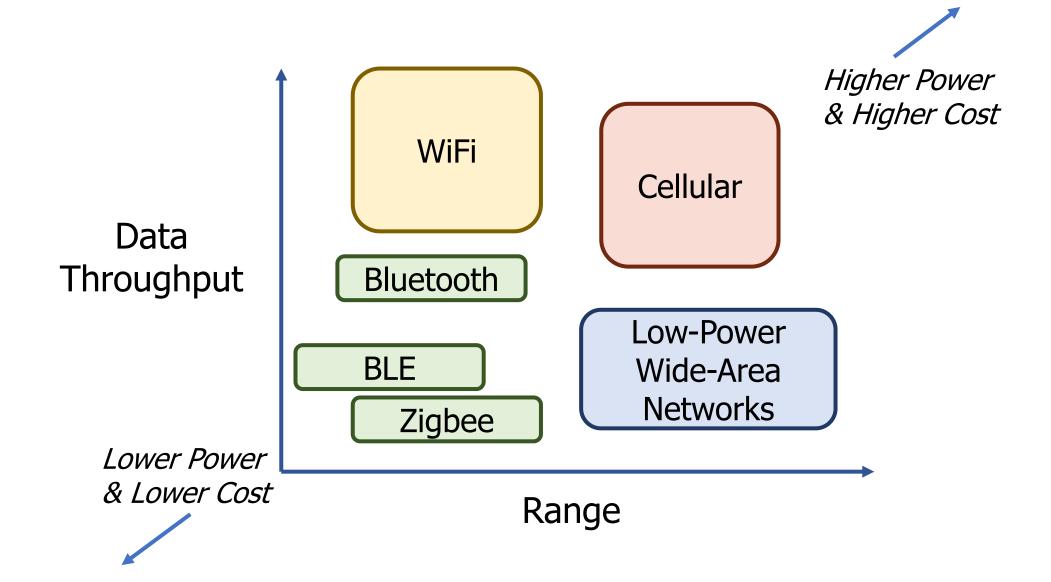

Protocols

Bluetooth Low Energy

• 802.15.4 – Zigbee and Thread

• WiFi

Low-Power Wide-Area Networks

Bluetooth Low Energy

- Bluetooth Classic was good for enabling device to device communication
 - But not particularly fast discovery or low energy operation
- Bluetooth Low Energy was developed to improve this
 - Focuses on low-energy interactions
 - Much lower throughput that Bluetooth

- Supported by hardware devices already in smartphones
 - Humans can interact directly with nearby devices!!

BLE mechanisms


Advertising

- Discovery
- Advertisements broadcast messages indicating device details
- Ephemeral, uni-directional communication from Advertiser to Scanner(s)
- ALOHA access control

Connections

- Interaction
- Bi-directional communication between Peripheral and Central
- Maintained for some duration
- TDMA access control

BLE network topology

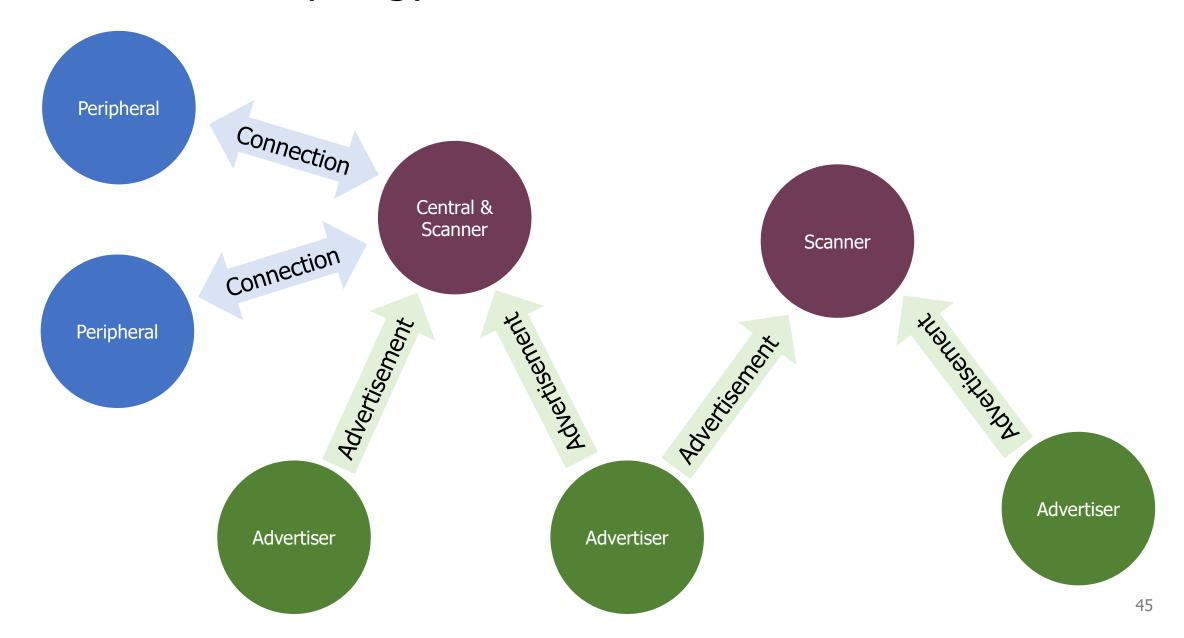

Protocols

Bluetooth Low Energy

• **802.15.4** – **Zigbee** and **Thread**

WiFi


Low-Power Wide-Area Networks

802.15.4 & Thread & Zigbee

- 802.15.4 is a low-energy method for transmitting bits (physical layer)
 - Radio chips have been widely available for 15-20 years
- Significant amounts of sensor network research have focused on building layers on top of 802.15.4
 - Access control layers (CSMA)
 - Network layers
- Thread is a selection of these possibilities to make a network
 - Uses IPv6 networking!!
- Zigbee makes slightly different selections
 - Focuses on automatic interpretation and discovery of sensors and actuators


802.15.4 topology

• Expects use cases as Star or Mesh networks

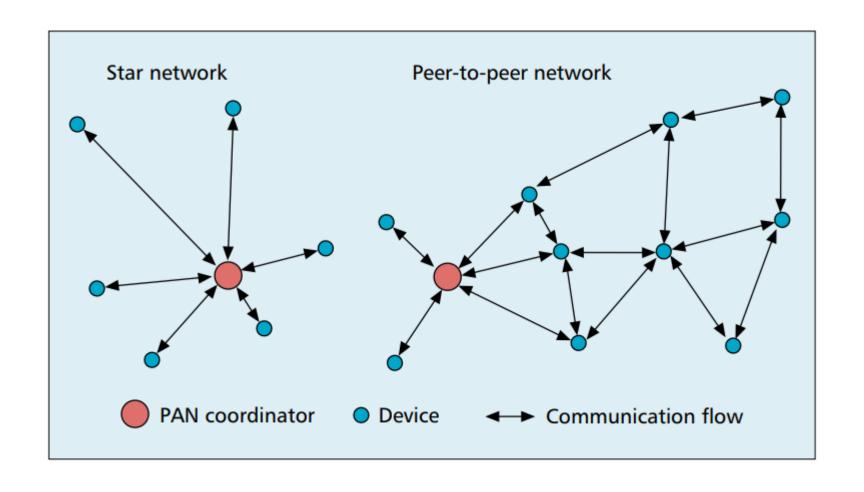

Matter standard



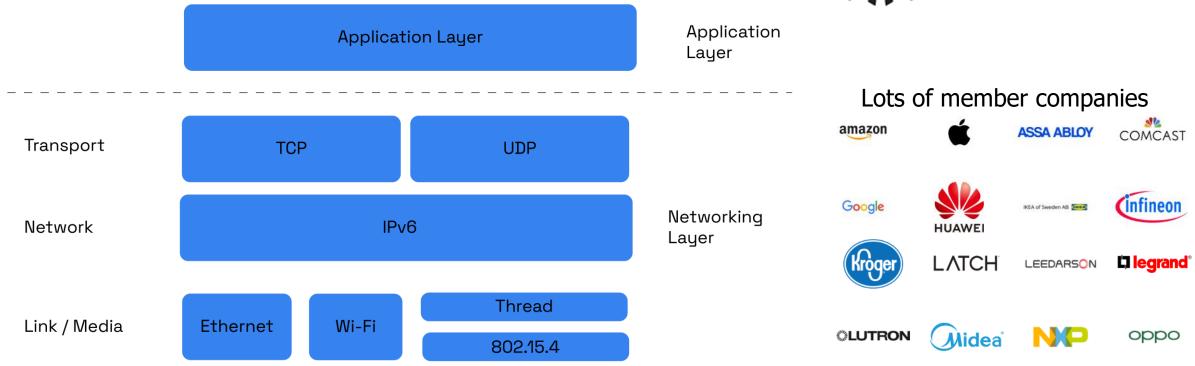

- Standard for interoperable smart home devices (October 2022)
 - Uses IPv6 over 802.15.4/Thread to send packets
 - Uses standardized device classes with descriptors for application logic

Protocols

Bluetooth Low Energy

• 802.15.4 – Zigbee and Thread

WiFi

Low-Power Wide-Area Networks

WiFi (802.11)

- Ubiquitous wireless communication
 - High energy requirements for high throughput communication
- Now accessible through relatively low power radios
 - ESP32, Electric Imp, and company
 - Still significantly more effort than BLE or Thread
- IoT devices can use the same WiFi that's already available
 - No need for additional infrastructure!!

802.11 major amendments

	Protocol	Year	Frequency	PHY	Max Rate	Range
-	802.11	1997	2.4 GHz	DSSS/FHSS	2 Mbps	20 m
1	802.11b	1999	2.4 GHz	DSSS	11 Mbps	35 m
2	802.11a	1999	5 GHz	OFDM	54 Mbps	35 m
3	802.11g	2003	2.4 GHz	OFDM	54 Mbps	38 m
4	802.11n	2009	2.4/5 GHz	OFDM + MIMO	600 Mbps	70 m
5	802.11ac	2013	5 GHz	OFDM + MIMO	3.4 Gbps	35 m


- 802.11b was very popular but is now usually unsupported
- 802.11a never saw major deployment
- WiFi Alliance rebranded 802.11ac as "WiFi 5" and backported scheme

WiFi bandwidth




• More bandwidth means higher data rate (with same error rate)

WiFi bandwidth

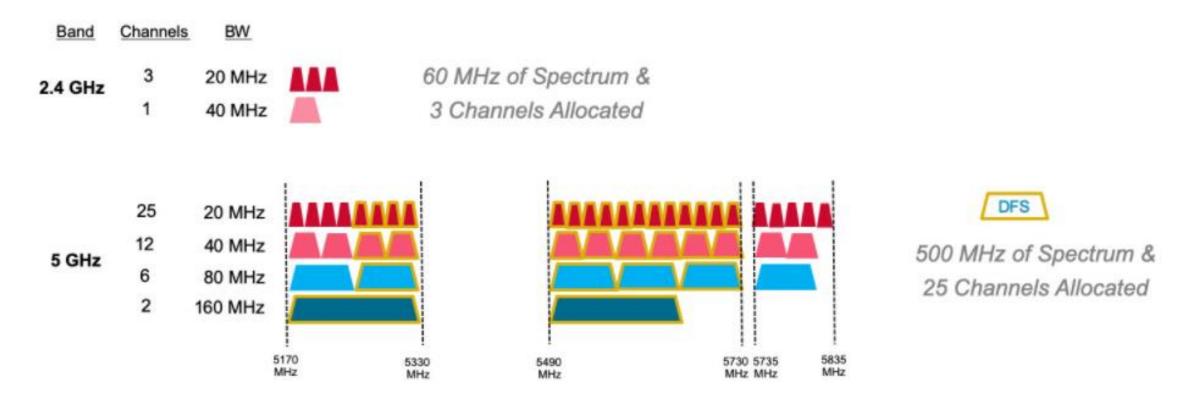

- More bandwidth means higher data rate (with same error rate)
- 5 GHz band allows larger bandwidth allocations for more data rate

WiFi 6E: WAY more bandwidth means better data rates

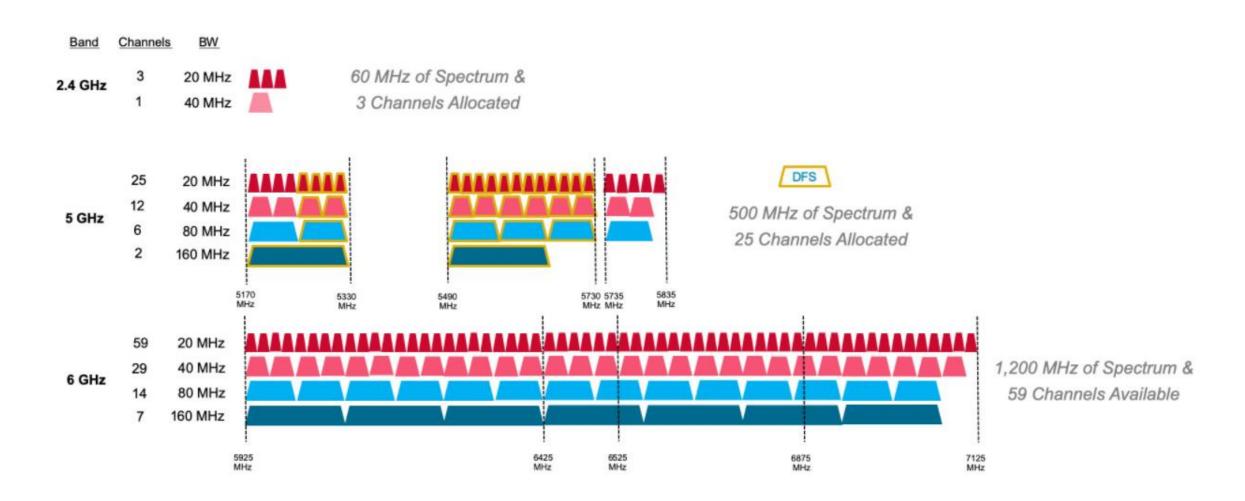

Protocols

Bluetooth Low Energy

• 802.15.4 – Zigbee and Thread

• WiFi

Low-Power Wide-Area Networks

LPWANS: How do we collect data from a sensor?

Manually collect measurements

Connect it to WiFi (or Ethernet)

Pay for cellular access

PINANCIAL

NOB HILL

BELDEN PLACE

LK GULCH LOWER NOB HILL

THE EAST CUT

RINCON HILL

TENDERLOIN

YER OA BUENA

SOUTH BEAL

CIVIC CENTER

SOUTH PARK

SOMA

CHINA BASIN

ALLEY

MISSION BAY

ESIGN DISTRICT

SION

MISSION

OTRERO HILL

OGPATCH

DOLOR

CLARENDON

CENTRAL WATERFROM 57

PRESIDIO OF

LPWANS: How do we collect data from MANY sensors?

Manually collect measurements

Connect it to WiFi (or Ethernet)

Pay for cellular access



We need another network option

Requirements:

- Wide area of coverage
 - Deploy fewer gateways
- Low power
 - So we can deploy on batteries
- Doesn't need high throughput
 - Sensor data is relatively small



LPWANs (Low-Power Wide-Area Networks)


- How do we collect data from city-scale deployments?
 - There's an unmet need for long-range, but low-throughput networks
 - Existing cellular technologies focus on human requirements
- Still a brand new space (relatively)
 - Unlicensed-band technologies since 2015: Sigfox and LoRaWAN
 - Cellular technologies since 2019: LTE-M and NB-IoT
- Focus on long-range, low-energy, low-throughput
 - One gateway can cover an entire city!!

LoRaWAN

Open communication standard built with proprietary LoRa PHY

- Low rate (1-20 kbps) and long range (~5 km)
 - Shorter range than Sigfox but much higher bit rate
- Most popular LPWAN protocol
 - Target of academic research
 - Industry involvement in hardware and deployments

LoRaWAN network details

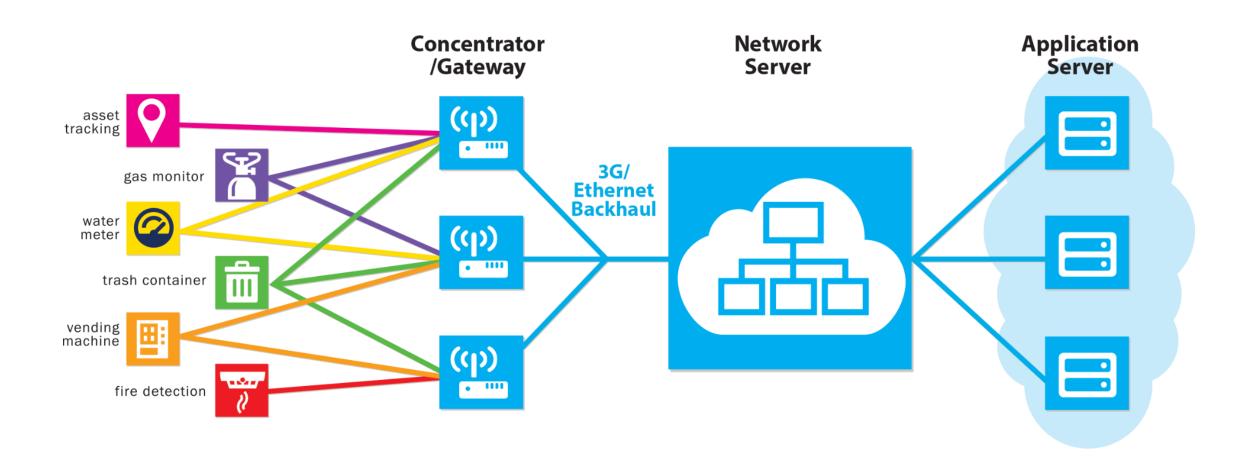

If you find this interesting...

- I also teach a special topics course!
 - CS433 Wireless Protocols for the Internet of Things
 - Spring quarter 2025
 - Lab course, similar to this one but more on-your-own
 - Design project instead of a final project
- Spend some time learning and playing around with wireless protocols. Especially
 - Bluetooth Low Energy
 - 802.15.4 (Thread and Zigbee)
 - WiFi (802.11)
 - LPWANs (LoRaWAN and others)

Outline

Wireless Communication Overview

- Wireless Protocols
 - Overview
 - Bluetooth Low Energy
 - 802.15.4
 - WiFi
 - Low-Power Wide-Area Networks