Data File C:\CHEM32\1\DATA\19060701\19060701 2009-07-17 22-09-51\10.D

Sample Name: 10

Acq. Operator : Brittni Seq. Line : 10 Acq. Instrument : Instrument 1 Location : Vial 10

Inj Volume : 5 μl


 $\label{lem:condition} Sequence \ \mbox{File} \quad : \ \mbox{C:\hem32\1\DATA\19060701\ 2009-07-17\ 22-09-51\19060701.S}$

Method : C:\CHEM32\1\DATA\19060701\19060701 2009-07-17 22-09-51\FID_TCD_2019.M (

Sequence Method)

Last changed : 7/17/2009 10:09:50 PM by Brittni
Method Info : Method for FID and TCD columns

Created by Nate Heili Date: July 25, 2018

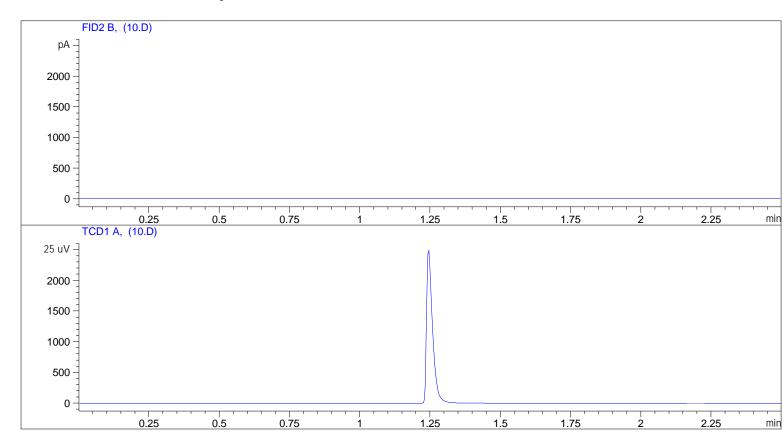

Area Percent Report

Sorted By : Retention Time Multiplier: : 1.0000 Dilution: : 1.0000 Use Multiplier & Dilution Factor with ISTDs

No peaks found

*** End of Report ***