Data File C:\CHEM32\1\DATA\19060501\19060501 2009-07-15 18-54-56\21.D

Sample Name: 21

\_\_\_\_\_\_

Acq. Operator : Brittni Seq. Line : 21
Acq. Instrument : Instrument 1 Location : Vial 21
Injection Date : 7/15/2009 8:01:53 PM Inj : 1

Injection bate . 7/15/2009 6.01.55 FW Inj.

Inj Volume : 5 μl


 $\label{eq:conditional_condition} Sequence \ \mbox{File} \quad : \ \mbox{C:\hem32\label{lem32\labeleq} 19060501\labeleq} \ 19060501\labeleq \ 2009-07-15\labeleq \ 18-54-56\labeleq \ 19060501\labeleq \ 2009-07-15\labeleq \ 18-54-56\labeleq \ 2009-07-15\labeleq \ 20$ 

Method : C:\CHEM32\1\DATA\19060501\19060501 2009-07-15 18-54-56\FID\_TCD\_2019.M (

Sequence Method)

Last changed : 7/15/2009 6:54:55 PM by Brittni
Method Info : Method for FID and TCD columns

Created by Nate Heili Date: July 25, 2018

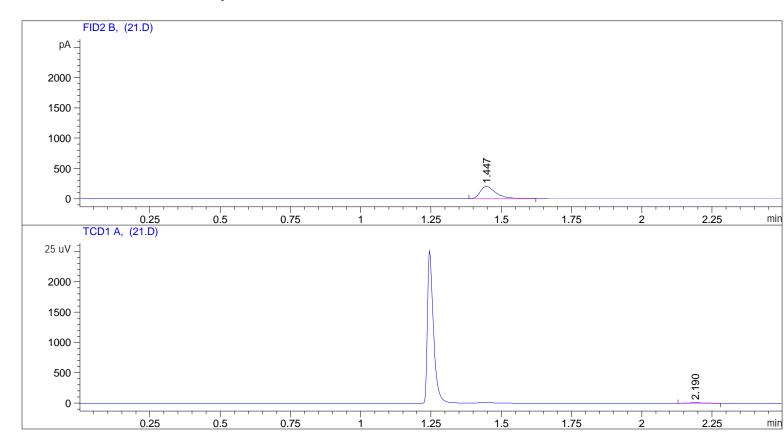

.\_\_\_\_\_

## Area Percent Report

\_\_\_\_\_

Sorted By : Retention Time Multiplier: : 1.0000 Dilution: : 1.0000 Use Multiplier & Dilution Factor with ISTDs

Signal 1: FID2 B, Signal 2: TCD1 A,

Peak	RetTi me	Si g	Type	Area	Hei ght	Area
#	[min]					%
1	1. 447	1	BB	772. 64050	200. 50615	96. 32760
2	2. 190	2	BB	29. 45619	8. 64519	3.67240

Total s: 802. 09669 209. 15134

Data File C:\CHEM32\1\DATA\19060501\19060501 2009-07-15 18-54-56\21.D

Sample Name: 21

-----

\*\*\* End of Report \*\*\*