Data File C:\CHEM32\1\DATA\19060701\19060701 2009-07-17 22-09-51\14.D

Sample Name: 14

\_\_\_\_\_\_

Acq. Operator : Brittni Seq. Line : 14 Acq. Instrument : Instrument 1 Location : Vial 14

Inj Volume : 5 μl


 $\label{eq:sequence} \textbf{Sequence File} \quad : \quad \textbf{C: \chem32\1\DATA\19060701\ 2009-07-17\ 22-09-51\19060701. S}$ 

Method : C:\CHEM32\1\DATA\19060701\19060701 2009-07-17 22-09-51\FID\_TCD\_2019.M (

Sequence Method)

Last changed : 7/17/2009 10:09:50 PM by Brittni
Method Info : Method for FID and TCD columns

Created by Nate Heili Date: July 25, 2018

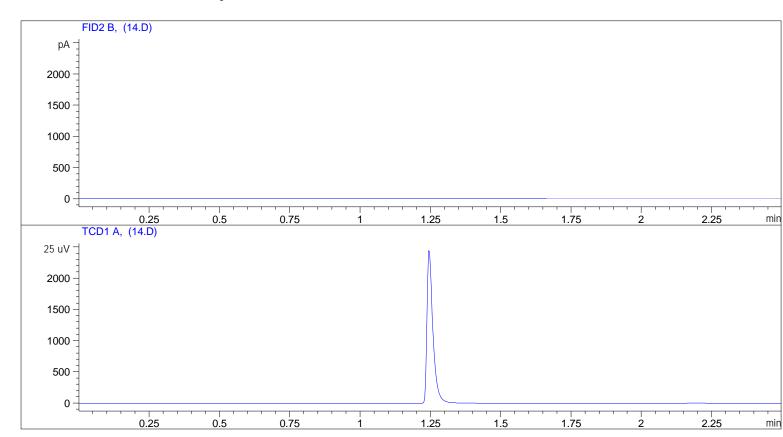

------

## Area Percent Report

\_\_\_\_\_

Sorted By : Retention Time Multiplier: : 1.0000 Dilution: : 1.0000 Use Multiplier & Dilution Factor with ISTDs

No peaks found

\_\_\_\_\_\_

\*\*\* End of Report \*\*\*