Assignment 2: Drum Machine

Handed out: Monday, 15 February 2016 **Due: Wednesday, 11 March 2016**

Introduction:

Your task is to create a digital audio system which plays sequenced drum loops with various tempos and styles, depending on input from several sensors.

Your drum machine will play drum samples which will be given to you in preloaded buffers. Each buffer contains a single drum sound. You will also be given a collection of patterns describing how the drum samples should be ordered into loops. Your task will be to create the audio code that plays the samples in the specified loop.

The speed of the loops and which loop to play at any given time will be selectable by sensors attached to the BeagleBone Black, including an accelerometer which measures the tilt of the board, a potentiometer and two buttons. Your code will handle reading the sensor data and using it to control the parameters of the audio sequencer.


Required Materials:

- Real-Time DSP Kit (BeagleBone Black with BeagleRT Cape and cables)
- 1 3-axis accelerometer board
- 1 potentiometer
- 2 buttons
- 1 LED
- Resistors (10k for buttons, 470Ω for LED)
- Code template from QMplus
- Bela build scripts for compiling code

Instructions:

1. Overview of the task

Your task in this assignment is to create an audio *sequencer* system which is capable of playing sampled drum sounds at precise times. The sounds themselves are held in buffers (each buffer containing one single drum sound), and the patterns are specified in arrays. A simple example pattern is shown below, which would play in a loop of 16 events:

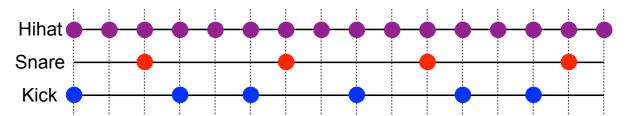

Your job will be to play the sounds at the right time, to manage the overall timing of the sequence (keeping track of where you are in the sequence and when the next event should arrive), and to select between different patterns depending on sensor input data.

2. Playing a drum from a sample buffer

In this step, you should write code so that pressing a button plays a drum sound.

See the appendix for how to wire the button to the BeagleBone Black. Your button-reading code should go in gpio.cpp. Inside gpioLoop(), you should add three things:

- Initialise the GPIO input on the correct pin (at the beginning of the function)
- Read the button value and check if it has changed from unpressed to pressed (in the while loop). If it is pressed, set the value of gTriggerButton1 to indicate the drum should play. *Hint: think of the Week 6b code where we made a button press trigger an envelope.*

Your audio code should go in render.cpp. The drum sample buffers are stored in the array gDrumSampleBuffers (where each element of the array is a buffer holding a different drum sound). The lengths of each sample are stored in the array gDrumSampleBufferLengths. For example, gDrumSampleBufferLengths[0] holds the length of the drum sample stored in gDrumSampleBuffers[0].

To trigger the sound, add/change code within render(). You should check the value of gTriggerButton1, which was used in gpio.cpp. When it is set, you should start playing sound from the buffer (and reset the variable). A variable gReadPointer has been declared for you, which you can use to play sound from the drum buffer. You need to do three things:

- Start the read pointer at 0 when the button is pressed
- Copy samples from the drum buffer to the output audio buffer in render () (remember both channels!), incrementing the read pointer after each sample.
- Stop when the read pointer reaches the end of the drum buffer.

Hint: think about what the default value of gReadPointer should be before you press the button. Implement this in the top of the file.

3. Multiple drums at once

Playing real drum patterns will often require multiple sounds to be active at once. Here, we will create a scheme for playing up to 16 sounds at once; these could be different drums or even multiple copies of the same drum (e.g. if playing the same sound again before the first one has finished).

In this step, rather than having one read pointer, we will have an array of them. First replace gReadPointer with an array called gReadPointers, which contains 16 elements. Then create a second array of 16 elements, type int, which will hold which buffer is associated with each read pointer. You might call this gDrumBufferForReadPointer or similar.

3a. Starting a drum sound

Fill in the function called startPlayingDrum(). This function should be called whenever you want to play a new drum sound. It takes as an argument the index of the drum to play (i.e. which buffer within gDrumSampleBuffers). Your code should do the following:

- Find the first read pointer that is not already being used to play a drum (*Hint: use a for() loop to go through and check each element of the array. The* break; *statement lets you stop the loop once you find a read pointer that isn't being used.*)
- Use gDrumBufferForReadPointer to indicate which buffer should be played, and reset the read pointer to 0 to make it start playing.
- If there are no read pointers free (all 16 in use-- unlikely), you can return without playing the sound. (There are other options-- voice stealing-- but we don't need to do that here.)

3b. Playing the drum sounds

Once you have created these two arrays, your code in render() should go through each read pointer in the array (*Hint: for() loop*). Check whether the read pointer is actually associated with a drum sound (*Hint: use gDrumBufferForReadPointer; what kind of value might you assign to indicate that the particular read pointer isn't used right now?*). Also check whether the read pointer has reached the end of the buffer, and if so, change gDrumBufferForReadPointer to indicate that the pointer is no longer active.

For every active read pointer, mix the drum sound from the buffer into your audio output. *Hint: You may need to reduce the overall level of the output to avoid clipping with multiple drums.*

3c. Testing multiple drums

Attach two buttons to your BBB. Extend your code from Step 2 to use <code>gTriggerButton1</code> and <code>gTriggerButton2</code> to play two different drum sounds. When one of the triggers is set, call <code>startPlayingDrum()</code> to initiate the sound. You should be able to play both at the same time without glitches or distortion. You should also be able to press the button quickly to re-trigger a drum without cutting off the previous sample.

4. Playing drums in a loop

In this step, you will play looping sequences of drum sounds based on pre-stored patterns. The patterns are stored in arrays; which pattern to play and how fast to play it will ultimately be selectable by sensors. *Note: you no longer need the buttons to trigger drum sounds as they did in step 3; that was only for testing.*

4a. Create a simple metronome

You have been given a function named startNextEvent(). You will use this function to trigger the next event in the pattern. For this step, add code to startNextEvent() so that it always plays the same drum sound every time it is called (*Hint: startPlayingDrum(*)).

Next, add code to render() which counts the number of audio samples that have gone by (*Hint: you will need a global variable to save the number of samples; refer to the Week 7 exercises*). When it reaches the length of time specified in the global variable

gEventIntervalMilliseconds (already given to you), call startNextEvent() and reset the counter. (*Hint: how do you convert from the interval in milliseconds to the number of samples needed?*)

When you have finished this step, you should hear a drum sound playing at a regular interval, like a metronome.

4b. Start and stop

Make one of the buttons start and stop the metronome. Read the button inside <code>gpioloop()</code> as before, and add code to set the global variable <code>gIsPlaying</code> to 1 or 0. Then, within your <code>render()</code> function, check the value of <code>gIsPlaying</code> to decide whether to trigger new events. Note: when you stop the loop, the currently playing samples should finish playing, so don't use <code>gIsPlaying</code> to cut off all the audio! Just check it to decide whether or not to start further drum sounds.

At the end of this step, you should be able to start and stop your metronome by pressing the button.

4c. Change tempo with the potentiometer

Wire up the potentiometer to one of the analog inputs on the cape (see appendix for circuit diagram). Inside render(), you should also add code to read the potentiometer value (using matrixIn). Remember that matrixIn is an *interleaved* array which holds analog input values for every sample, and that there are two audio samples for every analog input sample (i.e. the sample rate is 22.05kHz compared to 44.1kHz for audio).

When you get the analog input, you need to map it to the tempo of the loop by changing the value of geventIntervalMilliseconds. (Remember, smaller interval = faster tempo.) Make it so the full range of potentiometer values maps to an interval range of 50-1000ms. (Hint: see week 5a exercises with the variable-frequency sin generator for how to map values from one range to another. You may also find the function map () useful.)

When you finish this step, you should have a metronome whose tempo you can change by turning the potentiometer.

4d. Make the LED blink on each beat

In this step, you should make the LED toggle on or off at each beat. See the appendix for how to wire the LED. You will also need to add code to the beginning and end of <code>gpioLoop()</code> to initialise and unexport the GPIO pin, respectively.

The trick is that you should not set the LED within the audio thread, as this is slow. Rather, write to the global variable <code>gEventJustTriggered</code> in your audio code each time you start a new event. Then within <code>gpioLoop()</code>, read the value of this variable. If it is set, toggle the LED and reset the variable. (Hint 1: this is exactly the same procedure you use to read the buttons, but in reverse: the audio thread does the writing and the sensor thread does the reading. Hint 2: when a trigger is received, you will need some way to make the LED stay on for a short interval, then turn off.)

When you finish this step, the LED should turn on and off with each successive beat.

4e. Play a drum pattern

You are given a two-dimensional array <code>gPatterns</code> which holds the sequence of drums to play. The first dimension of the array is which pattern to use; the second dimension is the index of the events within a pattern. For example, <code>gPatterns[0]</code> will hold the first drum pattern; <code>gPatterns[0][0]</code> would be the first event within the pattern, followed by <code>gPatterns[0][1]</code>, etc. The length of each pattern is stored in the array <code>gPatternLengths</code>.

In this step, you should change the code inside startNextEvent(). Instead of always playing the same drum sound, read the next event in the pattern to decide which drum(s) to play. You should do the following:

- You have been given two global variables: gCurrentPattern and gCurrentIndexInPattern. These hold which pattern to play and where within the pattern is currently being played. Each time startNextEvent() is called, look up the current event in gPatterns using these two indices. Figure out which drums this event contains and play them. You have been given a function int eventContainsDrum(int event, int drum). This function returns 1 if the given event contains the given drum index (since an event may contain more than 1 drum). Hint: use a for() loop to check for each drum; if eventContainsDrum() returns 1, then play that sound.
- Increment the index within the current pattern. If you get to the end of the pattern (*Hint: check gPatternLengths*), reset the index to 0. Notice that your index within the pattern works very much like a circular buffer for audio samples.

At the end of this step, you should hear a complete drum pattern with multiple drum sounds, playing in a loop. The tempo of the loop will be controllable with the potentiometer. You're nearly there!

5. Select patterns with the accelerometer

You have been given a 3-axis accelerometer. This device creates 3 analog signals whose values are proportional to the acceleration in that axis. The X and Y axes are parallel to the breadboard. The Z axis is up/down assuming the breadboard is lying flat on a desk.

See the appendix for how to wire up the accelerometer. You will use the matrixIn variable inside render() to read the values from each axis.

Important Note 1: the accelerometer is designed to measure acceleration *in either direction*, but the voltage it produces is always positive. Therefore, zero acceleration (i.e. sitting still or moving at constant velocity) will be somewhere roughly halfway between 0V and 3.3V. But the exact value will depend on the particular device and the resistors used, so you can't assume it is always 1.65V. Therefore, you may have to measure it experimentally and include these values in your code (or read values at startup, during the first few samples of render(), and use these as a reference).

Important Note 2: gravity is an acceleration! When the accelerometer is plugged into the breadboard and resting on the desk, you should measure **0g** (no acceleration) in the X and Y axes, and **1g** in the Z axis. Turn the board on its side (90°), and now you will measure +/-**1g**

in either the X or Y axis, depending on which way you have turned it (and **0g** in the Z axis). Turn the board upside-down, and you will measure **-1g** in the Z axis. *Hint: the full range of output voltage on the accelerometer corresponds to -1.5g to 1.5g in each axis*.

5a. Detect board orientation

Based on the acceleration in each axis, you should be able to determine which way the board is facing. By default you will read around 1g in the Z axis and 0g in the others (again, remember, 0g does not mean 0V!). You need to design a system that recognises any of 5 orientations (note: depending on how your accelerometer is plugged into the board, the signs and axes may be different, but you will always have these 5 orientations):

- Resting flat (X = 0, Y = 0, Z = positive)
- Turned vertically on left side (X = negative, Y = 0, Z = 0)
- Turned vertically on right side (X = positive, Y = 0, Z = 0)
- Turned vertically on front side (X = 0, Y = negative, Z = 0)
- Turned vertically on back side (X = 0, Y = positive, Z = 0)

Write code within render() to read each axis and make a decision about what orientation the board is in. You don't necessarily need to check the accelerometer every single sample: reading it 100 times per second or so would be sufficient. (*Hint: use a block of if() / else if() statements, but remember that the values in each axis may vary by a bit. You'll need some degree of tolerance so if, for example, X and Y are not exactly 0g, you still detect the right orientation. Hysteresis will also help make the changes cleaner.*)

Initially, use rt_printf() statements so you can tell if your detection is working correctly. (rt_printf() is like regular printf() but performs better in this real-time context. But if you print every single sample it will surely overload the system, so use sparingly!)

5b. Change pattern depending on orientation

Based on the orientation information in the previous step, change the value of gCurrentPattern so that a different pattern plays in each orientation of the board. Remember that the patterns may be of different lengths! Each time you change gCurrentPattern, use modulo arithmetic to make sure gCurrentPatternIndex stays within the length of the new pattern (*Hint: check gPatternLengths*).

At the end of this step, your drum machine should play 5 different patterns depending on which way the board is turned.

5c. Play samples backwards when the board is upside down

There is one further orientation we have not explored: the board upside down will produce negative Z-axis acceleration and 0 in the X and Y axes. Add code to render() to detect this orientation. Don't change the current pattern in this case. Instead, set the global variable gplaysBackwards (already defined for you). Then in your audio code, when this variable is set, you should make every drum sample play backwards instead of forwards. Hint: make the read pointers count downward instead of upward. Now how do you check if you've reached the end of a drum sample?

Now you should have a complete working drum machine! Tempo is adjustable by potentiometer, start/stop by the button, and selecting patterns by the orientation of the board. See below for some more features you can add if you're interested.

Bonus Step. Tap to add a fill

In the final step, we will temporarily play a different drum pattern (a fill) whenever we firmly tap the board. Drum fills are often used at the end of a section of several bars; they are usually played once rather than as a repeating pattern.

You have been given a variable <code>gShouldPlayFill</code>. You should set this in <code>render()</code> whenever you recognise a tap on the accelerometer. In the audio code (also in <code>render()</code>), you should check the value of this variable. If it is set, you should start playing a new pattern. When you get to the end of this new pattern, you'll go back to what you were playing before, so you should save the value of <code>gCurrentPattern</code> inside the global variable <code>gPreviousPattern</code>. Then, set the value of <code>gCurrentPattern</code> to the special value <code>FILL_PATTERN</code> and reset <code>gCurrentPatternIndex</code> to 0. This will cause the fill to play next. Hint: don't forget to reset <code>gShouldPlayFill</code> inside render().

In startNextEvent(), when you get to the end of the current pattern, check whether the pattern was a fill (*Hint: if(gCurrentPattern == FILL_PATTERN*)). If so, set gCurrentPattern back to the value you stored in gPreviousPattern, which will cause the drum machine to go back to the pattern it was playing before.

Tapping the accelerometer will produce a temporary spike in acceleration. If you're tapping the surface of the breadboard, the spike should be primarily in the Z axis, but tapping in other directions is possible. For this step, you will need to design code to check for a spike in acceleration, and set gShouldPlayFill to 1 whenever you detect one. *Hint: try implementing a high-pass filter on the accelerometer data. This will pass the spikes while blocking the constant acceleration due to gravity. You can implement a filter on the accelerometer data exactly as you did on the audio data in Assignment 1: save the previous inputs and outputs and multiply by the correct filter coefficients. Remember that the sampling rate of the accelerometer, like all analog inputs on BeagleRT, is half the audio rate (22.05kHz).*

Other Bonus Ideas:

- Change the patterns or the drum sounds
- Map one axis of the accelerometer to the tempo of the loop, rather than the pattern, so tilting the board changes the speed.
- Tap in different directions to create different fills.

Your submission should consist of the following:

- All of your source code. **Don't forget to comment your code!** Uncommented or illegible code will receive a reduced mark. Include your name in the comments at the top of each source file.
- A 2 to 4-page report (PDF format) describing your design process, theory of implementation (especially for processing accelerometer data), and major features of your code. You do

not have to explain every step of the process (your code will be the primary deliverable) but please explain the major implementation decisions you made.

- Quick (2-3 min.) demo for instructors to verify your drum machine works
- Please submit an archive containing your code and your report. (In other words, your archive will contain within it the PDF file and the .cpp and .h files.) Submit your results via the EECS Intranet.
- **Important: cite your sources!** Any code or designs found to come from another source without attribution will be treated as a case of plagiarism, and may be referred to the university for further action.

Appendix: Circuits

Note: pin numbers in the schematics may be different in your implementation


LED

Attaching an LED requires a resistor (range between 220Ω and 470Ω , depending on the brightness you want). Put the LED and resistor in series, making sure the short lead of the LED goes to ground. 2 wires to BBB required: one to the GPIO output pin, one to ground. Note: your GPIO pin numbers could be different than the ones listed here; remember to refer to the PDF documents on QMplus to tell you which pin corresponds to which GPIO number.




Button

The button requires a pull-up resistor ($10k\Omega$ suggested; brown-black-orange). The resistor goes between +3.3V and one terminal of the button. The other terminal of the button attaches to ground. **Never use 5V on the BeagleBone Black!** 3 wires to BBB required: one to +3.3V, one to the GPIO input pin, one to ground.

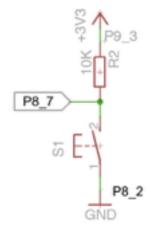

Potentiometer

The potentiometer is attached with 3 wires. One end of the potentiometer goes to +3.3V (which can be found on pin 3 of P9), the other end goes to ground. The **middle** terminal of the potentiometer goes to the analog input on the BeagleRT cape.

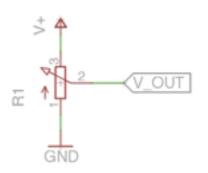

Accelerometer

The accelerometer is powered by +3.3V and connects to three analog inputs on the cape. Five wires are required: 3 analog inputs, +3.3V and ground. In addition, you will need a wire between the +V input and the SLP pin to enable the accelerometer.

