
# Sharing the Processor: A Survey of Approaches to Supporting Concurrency

#### **Today**

- Topic How do we make the processor do things at the right times?
  - For more details see Chapter 5 of D.E.
     Simon, An Embedded Software
     Primer, Addison-Wesley 1999
- There are various methods; the best fit depends on...
  - system requirements response time
  - software complexity number of threads of execution
  - resources RAM, interrupts, energy available

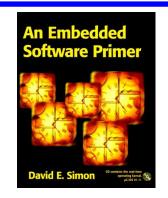



### **RTOS Cult De-Programming**

How do we schedule the tasks on the CPU?


- An infinite loop in main
- Real-time operating system
- Is there anything else available?

Real-Time Operating System



```
while (1) {
...
};
```

#### **Definitions**

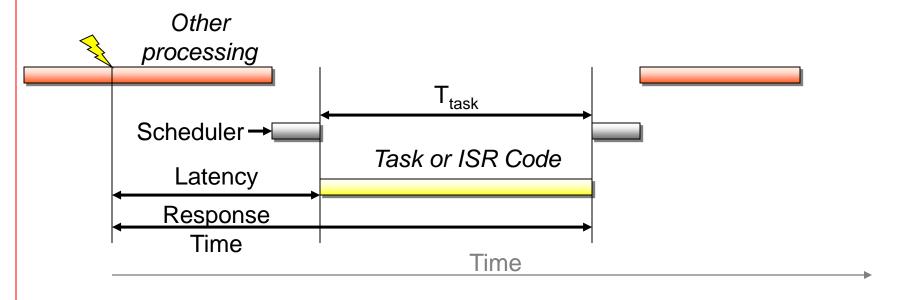

- $-T_{Release}(i) = Time at which task i becomes ready to run$
- T<sub>response</sub>(i) = Delay between request for service and completion of service for task i
- $-T_{task}(i)$  = Time needed to perform computations for task i
- $-T_{ISR}(i)$  = Time needed to perform interrupt service routine i

#### Round-Robin/Super-Loop

- Extremely simple
  - No interrupts
  - No shared data problems
- Poll each device (if (device\_A\_ready()))
- Service it with task code when needed

```
void main(void) {
  while (TRUE) {
    if (device A ready()) {
      service device A();
    if (device B ready()) {
      service device B();
    if (device C ready()) {
      service device C();
```

#### Sample Application - Network Videophone

#### Video

- 30 frames/s
- 360 x 240 images
- Compress/Decompress withMPEG-2

#### Audio

- 8 kHz sampling
- Compress withGSM 06.10
- Processor
  - 3000 MIPS
- Tasks have deadlines

Service	Direction	Function	WCET	Deadline
Video	Send	SampleFrame	ampleFrame 1 ms	
		CompressFrame	27 ms	33.3 ms
		SendFrame	0.1 ms	33.3 ms
	Receive	ReceiveFrame	0.1 ms	33.3 ms
		DecompressFrame	2.7 ms	33.3 ms
		DisplayFrame	1 ms	33.3 ms
Audio	Send	ReadMicBuffer	0.001 ms	20 ms
		CompressAudio	0.160 ms	20 ms
		SendAudio	0.001 ms	20 ms
	Receive	ReceiveAudio	0.001 ms	20 ms
		DecompressAudio	0.160 ms	20 ms
		LoadAudioBuffer	0.001 ms	20 ms

#### Scheduling NV with Round-Robin

- Round robin works for either video or audio, but not both
- Need to split up video
   CompressFrame()

# CompressFrame: 27 ms RMB CA SA All audio tasks: Deadline is 20 ms

from beginning of first task

```
void main() {
  while(TRUE) {
    if (TimeToSample) {
     SampleFrame();
     CompressFrame();
     SendFrame();
    if (FrameWaiting) {
     ReceiveFrame();
     DecompressFrame();
     DisplayFrame();
```

#### Limitations of Round-Robin

- Architecture supports multi-rate systems very poorly
  - Voice Recorder: sample microphone at 20 kHz, sample switches at 15 Hz, update display at 4 Hz. How do we do this?
- Polling frequency limited by time to execute main loop
  - Can get more performance by testing more often (A/Z/B/Z/C/Z/...)
  - This makes program more complex and increases response time for other tasks
- Potentially Long Response Time
  - In worst case, need to wait for all devices to be serviced

$$- \max(T_{response}(j)) = \sum_{\forall t} T_{task}(t)$$

- Fragile Architecture
  - Adding a new device will affect timing of all other devices
  - Changing rates is tedious and inhumane

#### **Event-Triggered using Interrupts**

- Very basic architecture, useful for simple low-power devices, very little code or time overhead
- Leverages built-in task dispatching of interrupt system
  - Can trigger ISRs with input changes, timer expiration, UART data reception, analog input level crossing comparator threshold
- Function types
  - Main function configures system and then goes to sleep
    - If interrupted, it goes right back to sleep
  - Only interrupts are used for normal program operation
- Example: bike computer
  - Int1: wheel rotation
  - Int2: mode key
  - Int3: clock
  - Output: Liquid Crystal Display



#### Bike Computer Functions

#### Reset

```
Configure timer, inputs and outputs

cur_time = 0; rotations = 0; tenth_miles = 0;

while (1) { sleep; }
```

## ISR 1: Wheel rotation

```
rotations++;
if (rotations>
    R_PER_MILE/10) {
    tenth_miles++;
    rotations = 0;
}
speed =
    circumference/
    (cur_time - prev_time);
compute avg_speed;
prev_time = cur_time;
return from interrupt
```

# ISR 2: Mode Key

```
mode++;
mode = mode %
   NUM_MODES;
return from interrupt;
```

#### ISR 3:

Time of Day Timer

```
cur time ++;
lcd refresh--;
if (lcd_refresh==0) {
convert tenth miles
  and display
convert speed
  and display
 if (mode == 0)
  convert cur time
   and display
 else
  convert avg speed
   and display
 lcd refresh =
   LCD_REF_PERIOD
```

#### Limitations of Event-Triggered using Interrupts

- All computing must be triggered by an event of some type
  - Periodic events are triggered by a timer
- Limited number of timers on MCUs, so may need to introduce a scheduler of some sort which
  - determines the next periodic event to execute,
  - computes the delay until it needs to run
  - initializes a timer to expire at that time
  - goes to sleep (or idle loop)
- Everything (after initialization) is an ISR
  - All code is in ISRs, making them long
  - Response time depends on longest ISR. Could be too slow, unless interrupts are re-enabled in ISR
  - Priorities are directly tied to MCU's interrupt priority scheme

#### Foreground/Background

- Also called Round-Robin with Interrupts
- Interrupt routines
  - Handle most urgent work
  - Set flags to request processing by main loop
- More than one priority level
  - Interrupts multiple interrupt priorities possible
  - main code

```
BOOL DeviceARequest, DeviceBRequest,
DeviceCRequest;
void interrupt HandleDeviceA() {
  /* do A's urgent work */
  DeviceARequest = TRUE;
void main(void) {
  while (TRUE) {
    if (DeviceARequest) {
      FinishDeviceA();
    if (DeviceBRequest) {
      FinishDeviceB();
      (DeviceCRequest) {
      FinishDeviceC();
```

### Limitations of Foreground/Background

- All task code has same priority
  - What if device A must be handled quickly, but FinishDeviceC (slow) is running?

$$- \max(T_{response}(j)) = \sum_{\forall t} T_{task}(t) + \sum_{\forall i} T_{ISR}(i)$$

- Difficult to improve A's response time
  - Only by moving more code into ISR
- Shared data can be corrupted easily if interrupts occur during critical sections
  - Flags (DeviceARequest, etc.), data buffers
  - Must use special program constructs
    - Disable interrupts during critical sections
    - Semaphore, critical region, monitor
  - New problems arise Deadlock, starvation

#### Run-To-Completion Scheduler

- Use a *scheduler* function to run task functions at the right rates
  - Table stores information per task
    - Period: How many ticks between each task release
    - Release Time: how long until task is ready to run
    - ReadyToRun: task is ready to run immediately
  - "round-robin" scheduler runs forever, examining schedule table which indicates tasks which are ready to run (have been "released")
  - A periodic timer interrupt triggers an ISR, which updates the schedule table
    - Decrements "time until next release"
    - If this time reaches 0, set that task's Run flag and reload its time with the period
- Follows a "run-to-completion" model
  - A task's execution is *not interleaved* with any other task
  - Only ISRs can interrupt task
  - After ISR completes, the previously-running task resumes
- Priority is determined by position in table. Hard to change dynamically

#### RTC Scheduler Application Programmer's Interface

- API enables control of tasks at more efficient level
  - Add Task(task, time period, priority)
    - task: address of task (function name without parentheses)
    - time period: period at which task will be run (in ticks)
    - priority: lower number is higher priority. Also is task number.
    - automatically enables task
  - Remove Task(task)
    - removes task from scheduler.
  - Run Task(task number)
    - Signals the scheduler that task should run when possible and enables it
  - Run RTC Scheduler()
    - Run the scheduler!
    - Never returns
    - There must be at least one task scheduled to run before calling this function.
  - Enable\_Task(task\_number) and Disable\_Task(task\_number)
    - Set or clear enabled flag, controlling whether task can run or not
  - Reschedule\_Task(task\_number, new\_period)
    - Changes the period at which the task runs. Also resets timer to that value.

#### Limitations of Run-To-Completion Scheduler

- Tasks run to completion problem with long tasks
  - Maximum response time for a task is the duration of the longest task
  - Long tasks complicate programming
    - No elegant way to start an operation (e.g. flash programming) and yield processor for 10 ms
    - Can improvise
      - Trigger another task
      - Use a state machine within this task
- Prioritization implies unfair processor allocation starvation possible

#### **Function-Queue Scheduling**

- Interrupt routine enqueues a function to be called by main
- Queue provides scheduling flexibility
  - Functions can be enqueued with any order desired
  - Use priority of device to determine position in queue

```
void interrupt HandleDeviceA() {
  /* do urgent work for A */
  Enqueue (Queue, FinishDeviceA);
void FinishDeviceA(void) {
  /* do remainder of A's work */
void main(void) {
  while (TRUE)
    while (NotEmpty(Queue)) {
      f = Dequeue(Queue);
      f();
```

#### Limitations of Function-Queue Scheduling

- What if a long lower-priority function (FinishDeviceC) is executing and we need to run FinishDeviceA?
  - Must wait until FinishDeviceC completes

$$- \max(T_{response}(j)) = \max(T_{task}(t)) \forall t + \sum_{\forall i} T_{ISR}(i)$$

- Cooperative multitasking, no pre-emption
- What if the lowest-priority functions never get to run?
  - Heavily loaded system

#### Real-Time Operating System (RTOS, Kernel, ...)

- As with previous methods
  - ISRs handle most urgent operations
  - Other code finishes remaining work
- Differences:
  - The RTOS can *preempt* (suspend) a task to run something else.
  - Signaling between ISRs and task code (service functions) handled by RTOS.
  - We don't write a loop to choose the next task to run. RTOS chooses based upon priority.


#### Why These Differences Matter

- Signaling handled by RTOS
  - Shared variables not needed, so programming is easier
- RTOS chooses next task to run
  - Programming is easier
- RTOS can preempt tasks, and therefore schedule freely
  - System can control task code response time (in addition to interrupt routine response time)
  - Worst-case wait for highest-priority task doesn't depend on duration of other tasks.
  - System's response (time delay) becomes more stable
    - A task's response time depends only on higher-priority tasks (*usually* more later)

#### More RTOS Issues

- Many RTOS's on the market
  - Already built and debugged
  - Debug tools typically included
  - Full documentation (and source code) available
- Main disadvantage: RTOS costs resources (e.g. uC/OSII compiled for 80186. YMMV)
  - Compute Cycles: 4% of CPU
  - Money: ???
  - Code memory: 8.3 KBytes
  - Data memory: 5.7 KBytes

#### Comparison of Priority Levels Available

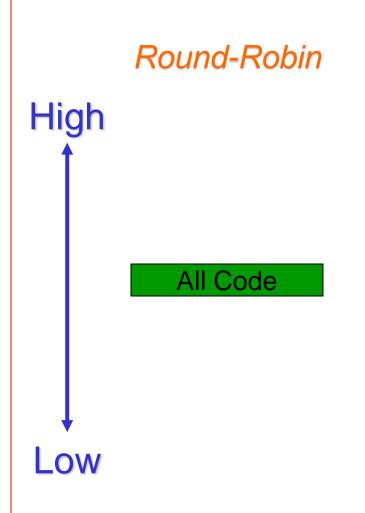

Foreground / Background

Function-Queue, RTC and RTOS

Device A ISR

Device B ISR

Device ... ISR

Device Z ISR

All Task Code

Device A ISR

Device B ISR

Device ... ISR

Device Z ISR

Task 1 Code

Task 2 Code

Task 3 Code

Task 4 Code

Task 5 Code

Task 6 Code

## Software Architecture Characteristics

	Priorities Available	Worst Case T <sub>Response</sub> for Highest Priority Task Code	Stability of T <sub>Response</sub> when Code Changes	Simplicity
Round- robin	None	$\Sigma$ $T_{Task}$	Poor	Very simple
Foreground/ Background	Prioritized interrupt routines, then task code at same priority	$\begin{array}{c} \Sigma \ T_{Task} + \\ \Sigma \ T_{Interrupt} \end{array}$	Good for interrupts, poor for task code	Must deal with shared data (interrupts/tasks)
RTC and Function- queue scheduling	Prioritized interrupt routines, then prioritized task code	$\max(T_{Task}) + \sum T_{Interrupt}$	Relatively good	Must deal with shared data and must write/get scheduler code
Real-time operating system	Prioritized interrupt routines, then prioritized task code	$\begin{array}{c} \Sigma \ T_{Interrupt} + \\ T_{OS} \end{array}$	Very good	Most complex (much is handled by RTOS)