
NOTES:

- 1. Extension on valve box shall be set so as to reserve 1/2 of the adjustment length for future use.
- 2. Valve key extension required on valves with operator nut over 3' deep.
- 3. Install 3" brass identification disk in concrete, per detail below.
- 4. Terminate insulated, solid 12 gauge copper tracer wire at 12" above box cover.
- 5. Valve Box to be centered in concrete slab in green space only.
- 6. See also City of Clearwater's Technical Specification Section IV.

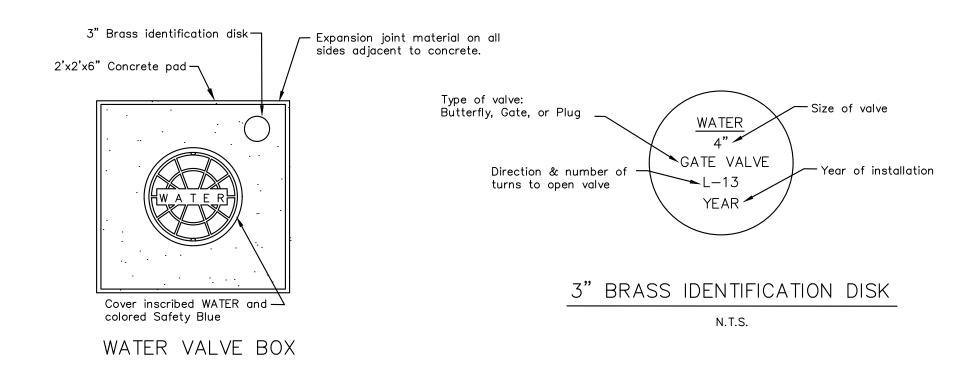

		1
DATE	REVISION DESCRIPTION	APP

CONCRETE PAD PLAN VIEW

N.T.S.

CITY OF CLEARWATER
ENGINEERING DEPARTMENT
POTABLE WATER
DETAILS

POTABLE WATER VALVE BOX CONCRETE PAD PLAN VIEW GREEN SPACE ONLY

INDEX NO.	PAGE NO.	۱
402	2 of 3	
LATEST 1	0/21/2019	