
NOTES:


DATE

REVISION

- 1. Extension on valve box shall be set so as to reserve 1/2 of the adjustment length for future use.
- 2. Install 3" brass identification disk in concrete, per detail below.
- 3. Terminate insulated, solid 12 gauge copper tracer wire 12" above box cover.
- 4. Valve Box to be centered in concrete slab in green space only.
- 5. See also City of Clearwater's Technical Specification Section IV.

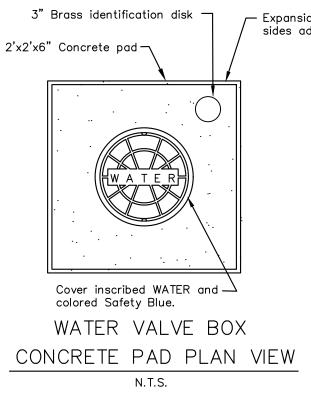

Expansion joint material on all sides adjacent to concrete.

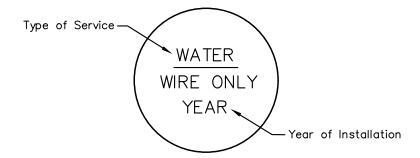

3" BRASS IDENTIFICATION DISK N.T.S.

		CITY OF CLEARWATER			
		POTABLE WATER			
DESCRIPTION	APP	DETAILS			
	_	DETAILO			

POTABLE WATER TRACING WIRE STATION CONCRETE PAD PLAN VIEW GREEN SPACE ONLY

1	INDEX NO.		PAGE NO.			
	402	3	OF	3		
Л	LATEST 1	0/2	1/2	019		