



We use just 1 ignition driver for the demonstration  $\mbox{Driver voltage} \ = \ \mbox{12V}$ 

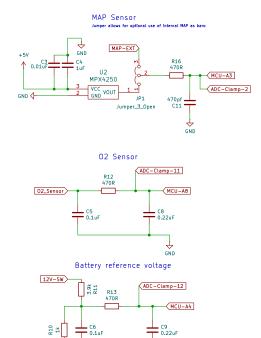


Flex Sensor Input


MCU-D2

ADC-Clamp-7

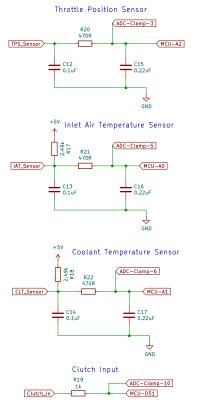


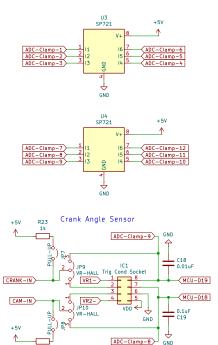


PWM Idle and Boost outputs Spare High Current outputs

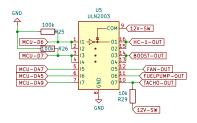


HC-05 Bluetooth Connector



## High Current Spare Outputs

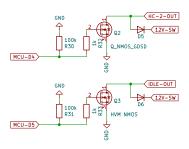

Stepper Idle

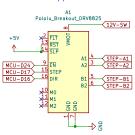

## Power Regulator

