## Models to Measurements: Observing Dynamic Systems WITH SOLUTIONS

Brian Bingham

Version 0.3 21 August 2014

# Models to Measurements: Observing Dynamic Systems WITH SOLUTIONS

#### Attribution

The LaTeX typesetting and overall document format for this work is based on the book *Physical Modeling in MATLAB®* by Allen B. Downey, available at http://greenteapress.com/matlab/and distributed under the terms of the Creative Commons Attribution-NonCommercial 3.0 Unported License.

#### Copyright 2012 Brian Bingham

Permission is granted to copy, distribute, and/or modify this document under the terms of the Creative Commons Attribution-NonCommercial 3.0 Unported License, which is available at http://creativecommons.org/licenses/by-nc/3.0/.

The LATEX source code for this document is available upon request.

## **Preface**

This book is an extention of the course notes developed for the undergraduate course ME 402: Dynamic System Laboratory at the University of Hawaii at Manoa.

The concept of tranlating my course-specific notes into a (slightly) more general textbook is the result of working with Professor Allen Downey at Olin College. Professor Downey is a prophet of free books and has authored many which he distributes at Green Tea Press (http://greenteapress.com/).

If you have suggestions and corrections, please send them to bsb@hawaii.edu.

Brian Bingham Honolulu, HI

iv Preface

## Contributors

The following are some of the people who have contributed to this book:

- Kevin Shin pointed out three typos in Chapters 5 and 6, 2/14/2013.
- Jonathan Chinen corrected quite a few typos, 1/15/2013.
- Tyson Quisano pointed out that the initial velocity condition  $(\dot{y}(0) = 0)$  should be explicit in Exercise 7.7, 10/3/2012.
- David Lebowitz suggested a revision of Table 1.1, 8/28/2012.
- $\bullet$  Allen Downey suggested dividing the fish into 8 pieces rather than 7 and corrected a typo, 8/28/2013.

vi Contributors

## Contents

P	refac	e	iii
$\mathbf{C}$	ontri	butors	$\mathbf{v}$
1	Dig	ital Measurement	1
	1.1	Telling Tall Tales	1
	1.2	Bits and Bytes	1
	1.3	The Digital Ruler	3
	1.4	Digital Measurements in an Analog World	4
	1.5	Summary	5
	1.6	Exercises	6
	1.7	Glossary	7
2	Dyr	namic Models: Part 1	9
	2.1	All Models Are Wrong!	9
	2.2	First-Order Model	10
	2.3	Step Response	11
	2.4	Free Response	15
	2.5	Superposition—Step Response with Non-Zero Initial Condition	16
	2.6	Thermometer Example	17
	2.7	Glossary	20
3 Data		a Acquisition	21
	3.1	Data Acquisition Systems	21
	3.2	Sensors	21
	3.3	Signal Conditioning	23
	3 /	Analog to Digital Conversion	24

$\mathbf{vi}$	ii	CONTEN	$\mathbf{TS}$			
	3.5	Glossary	31			
4	Mo	del-Experiment Comparison	33			
	4.1	Quantitative Comparison	33			
	4.2	Quantitative Comparison	35			
	4.3	Glossary	38			
5	Cas	Case Study: Beam Response and Stain Gage				
	5.1	Static Model: Cantilevered Beam	39			
	5.2	Sensor: Strain Gage	40			
	5.3	Signal Conditioning: Wheatstone Bridge	41			
	5.4	Strain Gage Data Acquisition	42			
	5.5	Exercises	43			
	5.6	Glossary	44			
6	Static Linear Model					
	6.1	Static Calibration	46			
	6.2	Least-Squares Regression	46			
7	Dynamic Models: Part 2					
	7.1	Second-Order Model	49			
	7.2	Free Response	51			
	7.3	Example: Cantilevered Beam	56			
	7.4	Measuring Second-Order Response	60			
	7.5	Glossary	65			
8	Cas	se Study: Strain and Acceleration of Cantilevered Beam	67			
	8.1	Amplifying the Strain Signal	67			
	8.2	Accelerometer	68			

### Chapter 1

## Digital Measurement

#### 1.1 Telling Tall Tales

The first thing that comes to mind when we mention measurement is often the lowly ruler. Because of its familiarity, the ruler is a nice place to start our conversation about the basic characteristics of measurement.

Imagine you have just caught a large fish from your local pond/lake/stream/ocean. Because you practice catch-and-release (of course) you'll want to measure the length of your catch to avoid an common accusation of telling tall tales. First you'll need to find an appropriately sized ruler to make the measurement. The size of the ruler will dictate the range of the measurement. Were you fishing for Brook Trout or a Blue Marlin? Hopefully you brought along a ruler with a range that exceeds the maximum predicted length of your catch, otherwise you'll have to resort to extrapolation!

Once we lay our ruler alongside our catch we'll need to estimate the actual length based on the graduation marks on the ruler. The distance between these marks is the resolution of our measurement, which is the smallest step size available. The finest marks on a typical yardstick might be one-half inch, so our resulting measurement would have a resolution of 0.5 in. If we have a large set of calipers, the resolution of our measurement would be more like 0.001 in.

Finally, when we are back on land and telling our tale we will inevitably be challenged on the accuracy of our measurement which can attempt to quantify using the error (E)

$$E = \text{measured value} - \text{true value}. \tag{1.1}$$

This is a difficult calculation to do without knowing the "true" length of our fish, but we'll return to that topic later.

#### 1.2 Bits and Bytes

In a moment we'll discuss how we might make this measurement using a digital device, but, as an aside, we'll need to introduce the basics of binary numbers. The base-2, or binary, number system represents numbers using two symbols: 0 and 1. This number system is the foundation for all digital electronics, including computers.

	e e e e e e e e e e e e e e e e e e e			
MSB			LSB	Base-10
$2^3$	$2^2$	$2^1$	$2^0$	
0	0	0	0	0
0	0	0	1	1
0	0	1	0	2
0	0	1	1	3
0	1	0	0	4
0	1	0	1	5

Table 1.1: Four-bit binary number examples

Table 1.2: Solution

MSB			LSB	Base-10
$2^3$	$2^2$	$2^1$	$2^0$	
1	1	1	1	1

One way to describe the binary system is to compare it to the base-10, or decimal, number system that most of us are more familiar with. Each binary digit is called a bit and can be 0 or 1. If we want to be able to count higher than 1, we need to combine multiple bits to represent an integer.

Table 1.1 illustrates how a 4-bit binary number can be used to represent an integer number. For this example we have placed the most significant bit (MSB) on the left side and the least significant bit (LSB) on the right so that the number is read similar to how we write decimal numbers (the 10's place goes to the right of the 1's place). To convert from the binary representation (the four columns on the left) to the base-10 representation we can take each binary digit (bit) and multiply by the second row. For example, for the sixth row in the Table 1.1 we see

$$0*(2^3) + 0*(2^2) + 1*(2^1) + 1*(2^0) = 2 + 1 = 3.$$

Exercise 1.1 What is the largest decimal integer (base-10) that can be represented by a 4-bit binary number? (See Table 1.1) Write the integer in both binary (base-2) and decimal (base-10) forms.

**Solution** See Table 1.2. The maximum number we can represent is 15. The minimum number is 0.

$$(1) * 2^3 + (1) * 2^2 + (1) * 2^1 + (1) * 2^0 = 15$$

The number of bits determines the number of integers that can be represented. For a 1-bit number can represent  $\{0,1\}$ , a 2-bit number can represent  $\{0,1,2,3\}$ , a 3-bit number can represent  $\{0,1,2,3,4,5,6,7\}$ , etc. Finally, an M-bit number can represent  $2^M$  in integers.

#### 1.3 The Digital Ruler

Now we can return to our fishing expedition. This time, instead of a regular (analog) ruler, we have a digital meter stick. This magical instrument is one meter long (so the full scale range (FSR) is 1.0 m) and it reports the length of the fish as a 3-bit number. Figure 1.1 illustrates our measurement.

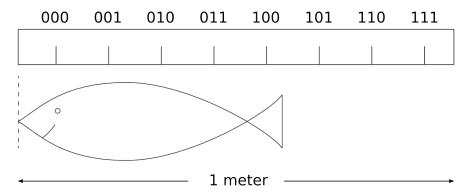


Figure 1.1: Measuring our catch with a digital ruler.

Remember, that our digital ruler can only report a 3-bit number. From the illustration we might anticipate that the ruler would report the binary number 100 since that is closest to the actual length of our fish. However, since most of our friends are engineers, they will expect our fishing story to have engineering units. How do we convert this binary number to an actual length?

Since we know the range of our measurement (1.0 m) and the total number of bits (3) we can convert to a length (L) using a ratio

$$L = FSR\left(\frac{X+0.5}{2^M}\right) = (1.0m)\left(\frac{4.5}{8}\right) = 0.56 \,\mathrm{m}$$
 (1.2)

where X is the decimal equivalent of our binary measurement; the integer 4 is the decimal equivalent of the binary value 100.

From the illustration it should be clear that the resolution of this measurement is fairly coarse. In particular, the resolution (Q) can be calculated using the full scale range and the number of bits in our instrument using the relationship

$$Q = \frac{FSR}{2^M} = \frac{1.0 \,\mathrm{m}}{2^3} = 0.125 \,\mathrm{m}. \tag{1.3}$$

So, in reality we might report our measurement as  $0.56\,\mathrm{m}$  with a resolution of  $0.125\,\mathrm{m}$ . In other words, we are saying that the length of our fish is somewhere in the range of  $0.56\pm\mathrm{Q}/2\,\mathrm{m}$ . So any and all fish withbetween  $0.50\,\mathrm{m}$  and  $0.625\,\mathrm{m}$  long would generate the same report from our digital ruler: 100. Figure 1.2 illustrates the digital ruler with the analog length equivalents and the resolution of our analog-to-digital conversion.

Exercise 1.2 If we had a digital ruler with twice the number of bits (6-bits instead of 3-bits) what would be the resolution of our measurement be (with engineering units)?

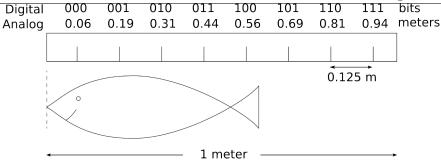


Figure 1.2: Measuring our analog catch with a digital ruler.

#### Solution

$$Q = \frac{FSR}{2^6} = \frac{1.0}{64} = 0.0156 \,\mathrm{m}$$

The answer must have a number and units (m).

#### 1.4 Digital Measurements in an Analog World

Moving on from our tall tale we are now prepared to discuss making measurements using a digital device, for instance a computer or micro-controller. With the ubiquity of computational devices many observations we make today are done with these devices and at the foundation is the concept of an analog-to-digital converter (ADC) or (A/D). The details of how an ADC does its work is beyond the scope of this discussion. What is important is to understand the conceptual idea of converting an analog signal, which can have an infinite number of values within a range, to a digital signal, which is represented by a finite number of levels. The number of levels that this digital signal can take on is specified by the number of bit, just as our 3-bit digital meter stick from Figure 1.1 could only report 8 individual values.

To begin our discussion of digital measurements let's consider a simplified case where an analog voltage comes in from the outside world (from a sensor) and the ADC converts the voltage to a binary number. As an example let's consider an ADC with the following properties:

- FSR = 0-10 V
- 8-bit resolution

The job of the ADC is to convert the incoming voltage and convert the value to a binary number that most closely represents the value as illustrated in Figure 1.3 An important consideration of this ADC example is the resolution of the measurement, also known as the quantization error, which can be calculated using the same expression as before:

$$Q = \frac{FSR}{2^M} = \frac{10.0 \,\text{V}}{2^8} = 39.1 \,\text{mV}. \tag{1.4}$$

Because the ADC has 8-bits of resolution, it will report a binary number that is one of 256 possible levels. Each level is separated by 39.1 mV so that the total range is 10.0 V. If the actual input voltage is 3.14159 V the ADC will report the closest binary level that correspond to this measurement which

1.5 Summary 5

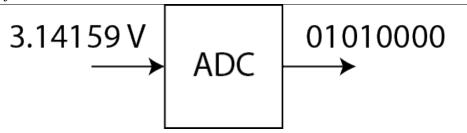


Figure 1.3: Analog-to-digital conversion: analog voltage input and binary number output.

is 01010000 (80 in decimal form). So the ADC output, converted back to voltage, would be  $3.125\,\mathrm{V}$   $\pm$  0.0196 V, where 0.0196 V is Q/2.

Now if it wasn't bad enough that our 8-bit ADC has such coarse resolution, we also have to contend with the fact that the input voltage might be much smaller than the incoming range. Consider what would happen if the actual input voltage only range between 0–0.1 V, instead of the 0–10.0 V range of the ADC. In this case the ADC would only have four possible outputs corresponding to 0, 0.0391, 0.0782 and 0.1173 V. So, in effect we would only be using 2-bits of our 8-bit ADC!

**Exercise 1.3** Consider an analog-to-digital converter with the following properties:

- $FSR = \pm 1.0 V$
- 12-bit resolution

What is the resolution (in Volts) of the ADC?

**Exercise 1.4** Using the A/D converter described above, consider the case where the input to the ADC was exactly 3.14 V. What binary number would be output by the ADC?

#### Solution

$$Q = \frac{2.0}{2^{12}} = 0.0005 \,\mathrm{V}$$

The second part is a bit of a trick question. Because the input is larger than the FSR, then the output would be the maximum value of the ADC - which is  $2^{12}$  or 4,096.

#### 1.5 Summary

The point of all this is the following:

- Digital representations of analog measurements have only finite resolution.
- The input signal must be well matched to the ADC range to effectively use the full resolution of the ADC.

So far we've just considered the simple idea of converting static analog measurement to a digital representation. In the next chapter we'll consider what happens when we consider another dimension—time—in our understanding of measurement systems. We'll also look at how to couple the ADC component with the rest of our system to make quality observations.

### 1.6 Exercises

Exercise 1.5 Visit your favorite on-line vendor and search for a computer (PC or Mac) sound card. Report the following specifications:

- Make and Model
- Price
- Audio input resolution (in bits)
- Audio input range (in Volts)
- Maximum sample rate (in Hz)

# $\frac{\text{Glossary}}{1.7 \quad \text{Glossary}}$

Notation	Description	Symbol	Page List
accuracy	The agreement between the measured value and the actual (true) value.		1
analog-to-digital converter	A device for the transforms an analog signal, with infinite resolution, to a binary number, with finite resolution. symbol		4
binary numbers	Integer numbers represented using the base-2 number system.		1
bit	A single binary digit. A bit can be either 0 or 1.		2
error	A quantification of the inaccuracy in a measurement or set of measurements. Often used as a synonym for accuracy.		1
range	The span of measurements for a particular instrument. Also known as the <i>full-scale range</i> (FSR)		1
resolution	The smallest increment of the measured value that can be discerned using a given instrument.		1

8 Glossary

## Chapter 2

## Dynamic Models: Part 1

The best material model of a cat is another, or preferably the same cat.

— Arturo Rosenblueth and Norbert Wiener,

The Role of Models in Science, 1945.

#### 2.1 All Models Are Wrong!

For our purposes a *model* is equivalent to a first-order model, an equation. We can use to understand and design a *system*, a physical system which we wish to analyze. Over the last few hundred years people with last names like Newton, Maxwell, Euler, Lagrange and Bernoulli have come with a variety of simple equations that describe physical processes. The key point, that is often overlooked, is that this description is only approximate; the mathematical model and the physical system never share the same behavior.

So why do engineers spend so much time and energy learning mathematical equations and how to solve them if these models never completely capture the behavior of a physical system? It turns out that under specific conditions, these models allow us to *predict* the behavior of systems that we might want to build.

As an example, consider the Hoover Dam, a 726 ft tall structure constructed with over 3 million cubic yards of cement. In designing this structure we would hope that engineers spent a large amount of time on structural models to attempt to predict if their designs would last through floods, earthquakes and any situation that might arrive. Without any models they would be have to fall back on the build-and-test process of engineering, building a prototype dam and sitting back to see if it worked; obviously not a very safe or cost effect way to build a dam. On the other hand, we have to imagine that the engineers included some conservative factors of safety to build the structure somewhat larger and stronger than their models predicted. They did this because they understood that the model was only an approximation of the dam; the model was wrong, but still useful.

So, even though models are wrong (they are always simplified approximations), they are useful for the following reasons:

- under certain specific conditions mathematical models can predict (approximately) the behavior of physical systems
- analysis of the model behavior can be an efficient way to test the behavior of system designs before we go to the trouble (cost and time) to build the physical system
- we can analyze the behavior of models in situations that would be hard or impossible to create in the physical system
- the model analysis enables us to understand the system and build intuition about how a system behaves

#### 2.2 First-Order Model

Our first-order model—a first-order, linear, ordinary differential equation—is

$$\frac{dy(t)}{dt} + \frac{1}{\tau}y(t) = f(t), \tag{2.1}$$

where f(t) is the input (forcing function), y(t) is the output (response function) and  $\tau$  is the time constant. That's it; there is really nothing more to say.

But of course we do have much more to say. We should start by emphasizing that this model is just as wrong as the rest of them, but it can be very useful. There are two reasons that this model is useful:

- 1. The time-response of this model is sufficiently similar to that of many physical systems to allow us to use this fictitious model (equation) to predict how an actual system might behave.
- 2. We know (or we will know shortly) how to solve this equation to calculate the output of the model in response to a variety of inputs.

#### 2.2.1 An Example

One example of a physical system that can be approximated by our first-order model is an automobile. Let's consider how the speed of an automobile (the output) responds to changes in the gas petal (the input) as it moves in a constant direction. The sketch if Figure 2.1 illustrates this simplification of a complex physical system. Based on this sketch we can do things like draw a free-

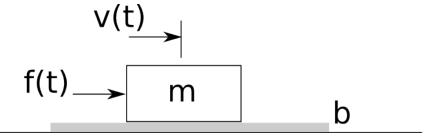


Figure 2.1: Sketch of a simplified automobile model. The point mass (m) moves to the right at a velocity (v(t)). The input is a force (f(t)) and the drag force (b(v(t))) resists the motion.

2.3 Step Response

body-diagram and apply Newtonian principles to arrive at an equation of motion. We might also make an ambitious simplifying assumption that the drag force that resists the motion of the mass is linearly related to the velocity, i.e.,  $f_{\text{drag}} = b(v(t))$ . Then we could come up with an equation of motion

$$m(\dot{v}(t)) + b(v(t)) = f(t) \tag{2.2}$$

where m is the mass of the car, v(t) is the speed,  $\dot{v}(t)$  is the acceleration, b is the coefficient of linear drag and f(t) is the input force. This equation of motion is our mathematical model This equation has the same form (a first-order, linear, ordinary differential equation) as our first-order model (2.1).

This is meant to be an example of a model that is obviously wrong. A physical automobile is a complex system with many, many degrees of freedom. Our simplified model (2.2) is meant to do just one thing, allow us to predict how, in general, the speed of a car responds to changes in the throttle input.

#### 2.3 Step Response

One useful aspect of our first-order model (2.1) is that the solution to this differential equation is well known for a variety of input functions. A particularly interesting input function is the step input ( $\mu(t)$ ) defined as

$$\mu(t) = \begin{cases} 0 & \text{for } t < 0 \\ 1 & \text{for } t \ge 0 \end{cases}$$
 (2.3)

This function  $(\mu(t))$  is also known as the *unit* step function because the amplitude of the step is 1.0. Figure 2.2 illustrates how the value of  $\mu(t)$  is zero before t=0 and then instantaneously changes to unity.

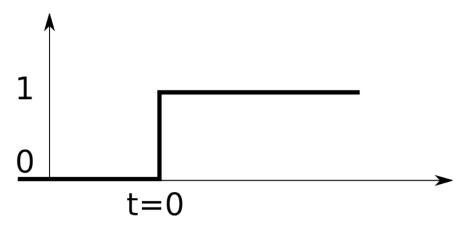


Figure 2.2: Illustration of a step function  $\mu(t)$ .

Now consider our generic first-order model (2.1) with a step input  $(f(t) = A\mu(t))$  and an initial condition of zero (y(0) = 0),

$$\frac{dy(t)}{dt} + \frac{1}{\tau}y(t) = A\mu(t). \tag{2.4}$$

(You should notice that the input function (f(t)) is a step input with an amplitude of A.) The step response is the solution to this ordinary differential equation which is

$$y(t) = A\tau \left(1 - e^{-t/\tau}\right) \tag{2.5}$$

for t > 0. Notice that there are two key parameters of our model step response: the time constant  $(\tau)$  and the amplitude of the step input (A).



Figure 2.3: Graph of the step response (2.5) with  $\tau = 2$  s and A = 50. The red dot markers indicate the value of the solution at  $t = [\tau, 2\tau, 3\tau, 4\tau, 5\tau]$ .

Listing 2.1: Script for first-order response: first\_order\_response.m

```
% Example of time-response of first-order system % First Order Model: dy/dt = 1/tau*y = f(t) tau = 2; % time constant [s] % A vector of time values for evaluating the response t = 0:0.1:20;
```

2.3 Step Response

This solution (2.5 is graphed in Figure 2.3 using the MATLAB script in Listing 2.1. This time response to a step input (or step response for short) has a characteristic shape as it rises and approaches the steady-state response exponentially. One important aspect of the response is that it approaches a new constant value, the steady-state response. A simple way to find the steady state value is to set  $\dot{y}(t) = 0$  in (2.1). Since we are looking for the "steady-state" value we can anticipate that all rates of change (derivatives) will be zero. Now the steady-state value ( $y_{ss}$ ) is

$$y_{\rm ss} = \tau A. \tag{2.6}$$

Another important characteristic of this model is that the response (y(t)) moves exponentially from the initial value to the steady state value. This response is characterized by the the first-order model  $(\tau)$ . If we evaluate time response (2.5) at  $t = \tau$  we find that

$$y(t = \tau) = A\tau(0.632) = 0.632(y_{ss})$$

which means that after one time constant has passed the response is 63.2% of the way from the initial value to the steady state value. Take a look at Figure 2.3 to make sure that we did the math correctly!

#### 2.3.1 Car Example—Step Response

Now that we've discussed the time response of our first-order model let's see how this applies to our automobile model. We can rearrange the mathematical model (2.2) so that it looks more like our generic model (2.1) which results in the expression

$$\dot{v}(t) + \frac{1}{m/b}(v(t)) = \frac{F}{m}\mu(t)$$
 (2.7)

which highlights that the time constant is  $\tau = m/b$  and that the steady state speed is  $v_{\rm ss} = F/b$ . Take a moment to think about this. It means that the larger the mass of our car, the slower the acceleration (because the time constant is larger). You might also notice that the mass has no effect on the steady state speed; our model says that a heavy "car" will reach the same final speed as a light car, it will just get there slower. Finally we might notice that the more drag in our model, the slower our "car" will go for the same input. Listing 2.2 illustrates how we might use MATLAB to graph the solution for specific numerical values.

Listing 2.2: Script for first-order response of our car example: firstorder\_car\_ex.m

```
% Illustration of First-Order LTI Step Response
% Clear all the variables in the workspace
clear;
% System Parameters
m = 800:
                \% mass \lceil kg \rceil
b = 225;
               \% linear drag [Ns/m]
Fstep = 15000; % amplitude of step force input [N]
% Describe a vector of times for the simulation
            \% Time step \lceil s \rceil
dt = 0.1;
Tend = 15; \% End of time horizon for simulation \lceil s \rceil
tt = 0: dt: Tend;
% Analytical Solution
tau = m/b;
% Note that MATLAB can deal with the tt vector in this equation
\% and output a vector of velcocities.
Veqn = Fstep/b*(1-exp(-tt/tau));
% Plot the results
figure (1)
clf()
plot (tt, Veqn/0.447, 'b.')
xlabel('Time_[sec]') % Always label the axes and include units!
ylabel('Velocity_[mph]')
title ('First-Order_Step_Response')
grid on
```

- **Exercise 2.1** The step function in (2.3) could be more precisely called the "unit step function" because it has an amplitude of 1. Write an equation (similar to (2.3)) and sketch a graph (similar to Figure 2.2) for the more general step function input  $f(t) = A(\mu(t t_0))$ .
- **Exercise 2.2** We justified (2.6) by starting with the model (2.1). Another way to calculate the steady state response is to evaluate the solution (2.5) as  $t \to \infty$ . Show that using this method yields the same result.
- Exercise 2.3 We showed that the response of a first-order model to a step function input has an exponential increase characterized by the time constant. Furthermore we showed that after a duration of one time constant beyond the rise in the step input the output will be 63.2% of the way to its steady state value. Figure 2.3 illustrates the value of the response at  $t = [\tau, 2\tau, 3\tau, 4\tau, 5\tau]$ . Evaluate 2.5 for these values of time and report the results in a two column table where the first column is the ratio  $t/\tau$  and the second column is the ratio  $y(t)/y_{ss}$ .
- Exercise 2.4 Consider the step response to our car model (2.7) with the following parameters:  $mass = 800 \, kg$ , drag coefficient =  $225 \, \text{Ns/m}$ , step input amplitude =  $15,000 \, \text{N}$ . Using MATLAB, create a graph similar to Figure 2.3 to illustrate the step response of our "car". Annotate the graph

2.4 Free Response

to show the time constant and the steady state speed. Also, make sure to use appropriate units for each axis.

Exercise 2.5 Consider the step response to our car model (2.7) with the parameters given in Exercise 2.4

- What is the minimum step input amplitude  $(F_{\min})$  that would cause our "car" to go from 0-60 mph?
- Based on this minimum step input amplitude, how long does it take for the "car" to go from 0-60 mph? (Hint: the answer to this question can be a number or a sentence!)
- If we double  $F_{\min}$ 
  - How long does it take for the "car" to go from 0-60 mph?
  - What is the new top speed (in mph)?
  - How long does it take for the "car" to achieve this new top speed?

**Solution** Here is a solution.

- The steady-state value is  $V_{ss} = F/b$  and 60 mph is approximately 27 m/s. Since b = 225 Ns/m,  $F_{min} = 6075 \text{ N}$ .
- Interestingly the car never truly gets all the way to the final steady-state value! After five time constants ( $t = 5\tau = 25s$ ) the car is 99% of the way to 60 mph
- If we double this input force...
  - The car takes about 4s to get to 60mph (27m/s).
  - The new top speed is double of the original top speed—120 mph. This is because the system is linear!
  - Again, it never really gets there. It gets 99% of the way there after five time constants:  $\tau = m/b = 3.5 \,\mathrm{s}$  so  $5\tau = 17.8 \,\mathrm{s}$ .

#### 2.4 Free Response

Another useful time response of our first-order model is the response with no input (f(t) = 0) and an initial condition  $(y(0) = y_o)$ . The solution to (2.1) under these conditions is

$$y(t) = y_o e^{-t/\tau} (2.8)$$

for t > 0. Figure 2.4 illustrates this free response. Just as before the time constant is the key factor that determines the characteristic of the response. Again, at  $t = \tau$  the output has fallen by 63.2%.

**Exercise 2.6** Using our automobile model (2.2), write an expression for the free response of this model with appropriate physical parameters. Create a graph of the free response with the initial condition v(0) = 60 mph. For the x-axis of the graph use the units mph and for the y-axis of the graph use the units seconds.

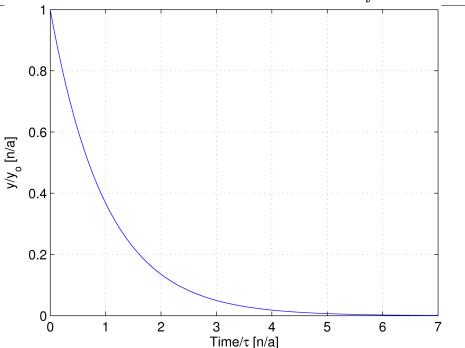


Figure 2.4: Graph of the free response (2.8). Notice that the x and y axes have been normalized so that the output is the ratio of the response and the initial condition and the time is the ratio of time and the time constant.

## 2.5 Superposition—Step Response with Non-Zero Initial Condition

One the characteristics that make linear system such as our first-order model useful is the principle of superposition which allows determine the solution to a linear model by adding together multiple solutions. As an example, suppose there are two input functions,  $f_1(t)$  and  $f_2(t)$ , and that the corresponding solutions are  $y_1(t)$  and  $y_2(t)$ . If we want to know the response of the system to both inputs,  $f(t) = f_1(t) + f_2(t)$ , we can simply add the two solutions,  $y(t) = y_1(t) + y_2(t)$ .

This principle simplifies the task of finding the response to our first-order model when there are both initial conditions and a forcing function. Armed with superposition principle we can determine the step response (the solution to (2.1) with the input  $f(t) = A\mu(t)$ ) of our first-order model when there is a non-zero initial condition ( $y(0) = y_o$ ) by simply adding our two previous solutions, the step response with zero initial condition and the free response with no forcing function:

$$y(t) = y_o e^{-t/\tau} + A\tau \left(1 - e^{-t/\tau}\right).$$
 (2.9)

Another handy aspect of superposition is the scaling property. This means that if we scale (multiply) the input by a factor (a) then the output is simply the response to the original input scaled (multiplied) by the same factor. As an example, consider our first-order car model (2.2) where the input is a force (f(t)). If we know that a force of 1,000 N results in a steady state speed of 25 mph then superposition tells us that a force of 2,000 N will result in a final speed of 50 mph.

**Exercise 2.7** Consider our first-order car model discussed above where a 1,000 N input yields a steady state speed of 25 mph. Furthermore, we know that the time constant of this system is 2 s. Again we double the input to from 1,000 N to 2,000 N. What is the time constant of the response with the doubled input?

Hint: This might be considered a 'trick' question.

#### 2.6 Thermometer Example

Our first-order model can be used to describe the response of a temperature sensor to changes in the ambient environment. This is analogous to our "car" model in that the temperature sensor has thermal inertia (analogous to the mass of our "car") and thermal resistance (analogous to the drag of our "car").

#### 2.6.1 Mathematical Model

Suppose we have a bulb thermometer that is at equilibrium the instant before it is plunged into boiling water. The measured temperature will not instantly move to  $100\,^{\circ}$ C, but instead the temperature of the device (T(t)) will move toward the new equilibrium over time. The speed of that response is determined by the inertia and resistance of the system.

Figure 2.5 illustrates how we might analyze this system. Newton's law of cooling says that "the rate of heat loss of a body is proportional to the difference in temperatures between the body and the surroundings", or, stated mathematically,

$$\dot{Q} = hA(T_f(t) - T(t)) \tag{2.10}$$

where  $\dot{Q}$  is the rate of heat transfer, h is the heat transfer coefficient, A is the surface area of the thermometer,  $T_f(t)$  is temperature of the surroundings and T(t) is the temperature of the thermometer. Furthermore the thermal energy in the thermometer mass is Q = C(T(t)) where C is the total heat capacity (the product of the mass (m) and the specific heat capacity of the material  $(c_p)$ ). Putting this together we can come up with a first-order model for a thermometer

$$\dot{T}(t) = \frac{hA}{C}(T_f(t) - T(t)).$$
 (2.11)

Exercise 2.8 Using (2.11) rearrange the terms so that the expression has the same form as our canonical first-order model (2.1). What is the input to our model? What is the output of our model? What is the time constant of this model? What is the steady-state temperature predicted by this model?

Solution

$$\dot{T}(t) + \frac{hA}{C}(T(t)) = \frac{hA}{C}(T_f(t))$$

where  $\tau = \frac{C}{hA}$ .

• The input is the temperature of the surrouding fluid— $T_f(t)$ .

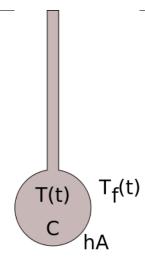


Figure 2.5: Illustration of a simple model of the response of a thermometer.

- The output is the temperature of the sensor—T(t).
- The time constant is  $\tau = \frac{C}{hA}$
- The steady state temperature is  $T_{ss} = T_f$ .

Exercise 2.9 Formulate a mathematical model of the dynamic temperature response of the LM35 termperature sensor. You can assume the following physical parameters:

- Specific Heat:  $c_p = 0.7 \,\mathrm{J/gK}$
- Mass:  $m = 1 \,\mathrm{g}$
- Heat Transfer Coefficient (in water):  $h = 1000 \,\mathrm{W/m^2 K}$
- Surface Area:  $A = 2.0 \,\mathrm{cm}^2$

Record the following:

- A first order differential equation expressed with the values given above. This is the model for our temperature sensor.
- The solution to this differential equations (a function) for a step change in ambient temperature of 100°C.
- A prediction of the time constant of the system with appropriate units.

Solution Mathematical model is

$$\dot{T}(t) + \frac{hA}{C}(T(t)) = \frac{hA}{C}(T_f(t))$$

$$\dot{T}(t) + 0.286(T(t)) = 0.286(T_f(t))$$

Step response is

$$T(t) = A\tau \left(1 - e^{-t/\tau}\right)$$
 
$$T(t) = 0.286 \left(\frac{1}{0.286}\right) \left(1 - e^{-t(0.286)}\right)$$
 
$$T(t) = \left(1 - e^{-t/3.5}\right)$$

Time constant is

$$\tau = \frac{1}{0.286} \, \mathrm{s} = 3.5 \, \mathrm{s}$$

20 Glossary

## $\frac{20}{2.7 \quad \text{Glossary}}$

Notation	Description	Symbol	$egin{array}{c} { m Page} \\ { m List} \end{array}$
first-order model	A first-order, linear, time-invariant ordinary differential equation.		10
first-order model	An equation or set of equations that behave in a similar way to a physical system under certain conditions.		9
first-order model	For a first-order model with a step input, the time duration from the initiation of the step to the time when the model output is $63.2\%$ of the way to the steady-state value.	au	13
steady-state response	The output of a mathematical model or physical system when in equilibrium. The steady-state response is often contrasted with the transient response.		13
step input	A mathematical function that is zero for all time less than $t = 0$ and unity for all time greater than or equal to $t = 1$ .	$\mu(t)$	11
step response	The output of a mathematical function, as a function of time, when a step input is given as the input or forcing function.		12
superposition	The property of linear mathematical models that states that the total response of the sys- tem caused by two (or more) inputs is the sum of the responses to each input considered in- dependently		16

### Chapter 3

## **Data Acquisition**

#### 3.1 Data Acquisition Systems

Figure 3.1 illustrates a typical data acquisition system which consists of the following components:

- Sensor(s): Device for converting a physical quantity into an analog signal, e.g., accelerometer, thermocouple or strain gage.
- Signal Conditioning: Electronics for adapting sensor output to comply with the input of a DAC, e.g., filtering, Wheatstone bridge or amplification.
- Digital-to-Analog Converter (DAC): See Section 1.4.
- Destinations: Digital display (e.g., 2D graph) or archive (e.g., log file).



Figure 3.1: Simple data acquisition system diagram.

In this chapter we'll work through each of the subsystems in Figure 3.1 to discuss how they operate together to create a system for making digital measurements.

#### 3.2 Sensors

A transducer is a device that converts one type of energy into another type of energy. A sensor is a transducer, but not all transducers are sensors. (The opposite of a sensor is an actuator). Here are some examples:

- A microphone is a transducer that converts acoustic energy (sound pressure) to electrical energy (voltage). A microphone is a sensor.
- A speaker is a transducer that converts electrical energy to acoustic energy. A speaker is an actuator.
- An accelerometer is a transducer that converts mechanical energy (vibration) to electrical energy (voltage). An accelerometer is a sensor.

22 Data Acquisition

• An electric motor is a transducer that converts electrical energy to mechanical energy (rotation). An electric motor is an actuator.

- A thermocouple is a transducer that converts thermal energy (temperature) to electrical energy (voltage). A thermocouple is a sensor.
- A heating coil is a transducer that converts electrical energy to thermal energy. A heating coil is an actuator.

Exercise 3.1 Following the pattern in the list above, list two more transducers that are sensors and two more transducers that are actuators.

There are many, many types of sensors. For just about everything we can imagine wanting to measure there is a device that will convert the physical parameter to an electrical signal that we can use for data aquisition. For our purposes we will focus on sensors that measure mechanical quantities (motion, strain, temperature, etc.) by producing an electrical output. The next step is converting that electrical output into a form that our D/A can accept.

#### 3.2.1 Sensitivity

The sensitivity of a sensor is the parameter of the sensor that describes the transduction. In simple cases the sensitivity of a sensor is given as a ratio between the output (typically voltage) and the physical input. For example, the ADXL 335 accelerometer has a typical sensitivity of  $300 \, \mathrm{mV/g}$  which means that for an input acceleration of  $1.0 \, \mathrm{g}$  the sensor output will be  $300 \, \mathrm{mV}$ .

**Exercise 3.2** Suppose we are going to use an ADXL 335 accelerometer to measure the acceleration of a radio-controlled car. We know that the car has a maximum forward acceleration of  $2.5 \, \text{m/s}^2$ . What is the maximum output voltage we could expect from the accelerometer?

Exercise 3.3 A Type K thermocouple is a common sensor for measuring temperature, and the typical sensitivity for such a device is  $41 \,\mu\text{V/}$ °C. What output voltage could we expect if we were using this device to measure the temperature of boiling water (at sea-level)?

A complication that can arise is when the sensitivity of a sensor is not a constant. This can happen if there is a non-linear relationship between the physical parameter and the output. In this case we may have to use a mathematical relation (i.e., a formula, hopefully supplied by the sensor datasheet) to convert the output signal (voltage) to the physical measurement. Another situation is when the output depends on the supplied voltage, which is called a ratiometric sensitivity. In fact, I oversimplified the ADXL 335 sensitivity. This sensor requires a supply voltage, sometimes referred to as the excitation voltage, to power the sensor. The typical supply voltage is  $3.0\,\mathrm{V}$ , but the value can range between  $1.8-3.6\,\mathrm{V}$ . The sensitivity is directly proportional to this supply voltage, so with a supply of  $1.8\,\mathrm{V}$  we can expect a sensitivity of  $180\,\mathrm{mV/g}$ .

Another common example of a ratiometric sensitivity is a load cell. As its name implies, a load cell is a sensor that reports a load (tension or compression) as a voltage. A common type of load cell is S-Beam load cell that uses a configuration of strain gages to measure the strain in a mechanical beam. The beam is calibrated so that the relationship between the strain and the applied force is known. The sensitivity of this type of sensor is specified in a confusing manner. For example, a typical device will come in a range of load capacities, say 25-10,000 lb. For this family of devices

the sensitivity might be quoted as  $3\,\mathrm{mV/v}$ . What on earth does this mean you ask? Well, it means that at the maximum load, the output voltage is  $3\,\mathrm{mV}$  multiplied by the excitation voltage. They typical excitation voltage of this particular device is  $10\,\mathrm{V}$ . So, if we have a load cell rated at  $100\,\mathrm{lb}$  and we apply the recommended excitation of  $10\,\mathrm{V}$ , the sensitivity is  $0.3\,\mathrm{mV/lb}$ . In other words, we can find the sensitivity (S  $\mathrm{mV/lb}$ ) as

$$S^{[\text{mV/lb}]} = \frac{(O^{[\text{mV/V}]})(E^{[\text{V}]})}{L_{max}[\text{lb}]}$$
(3.1)

where  $O^{[mV/V]}$  is the ratiometric output of the load cell, E[V] is the excitation voltage and  $L_{max}[lb]$  is the maximum load capacity for the device.

Exercise 3.4 Suppose we want to use two AA alkaline batteries to power our ADXL 335 accelerometer. What sensitivity could we expect with this arrangement?

Exercise 3.5 Consider that we are using a thin-beam load cell (Omega LCL Series) with a maximum load capacity of 1 lb. The rated output of the load cell is  $2 \, mV/V$  and the recommended excitation is 5 V.

- What is the sensitivity of the load cell in mV/lb?
- What is the maximum voltage we could expect when the load cell is at its maximum capacity load?
- What is the voltage we could expect if we apply a 0.25 lb load?

**Solution** The sensitivity is calculated using (3.1).

$$S \left[ \text{mV/lb} \right] = \frac{\left( 2.0 \left[ \text{mV/V} \right] \right) \left( 5.0 \left[ \text{V} \right] \right)}{1.0 \left[ \text{lb} \right]} = 10.0 \,\text{mV/lb}$$

The maximum voltage is the product of the maximum load and the sensitivity.

$$V_{max} = 10 \,\text{mV/lb}(1 \,\text{lb}) = 10 \,\text{mV}$$

Again, this is the product of the senitivity and the load.

$$V_{max} = 10 \,\text{mV/lb}(0.25 \,\text{lb}) = 2.5 \,\text{mV}$$

#### 3.3 Signal Conditioning

Sensors often have an output that is inconvenient to use with digital-to-analog converters. As we alluded to in Chapter 1, digital-to-analog converters typically take a voltage as input and it is important that we use the full range of the voltage that the D/A will accept (e.g.,  $0-10\,V$ ).

Consider the case of a strain gage, illustrated in Figure 3.2. The specifics will be discussed in more detail later, but for now it will suffice to say that a strain gage is a sensor that converts a strain (a change in length) to a change in electrical resistance. This is great, but how do we plug that into our D/A which wants a voltage between 0–10 V? It turns out that Sir Charles Wheatstone found a solution to this problem in an elegant circuit that is now called the Wheatstone bridge. This

24 Data Acquisition

circuit converts the change in resistance to a very small voltage, say  $0-10\,\mathrm{mV}$ . Now we have another problem, our D/A wants a much larger voltage that the  $10\,\mathrm{mV}$  coming from the Wheatstone bridge. Perhaps we could add an amplifier that will multiply the output of the bridge by a gain of 1,000 so that we now have a voltage that is suitable for the D/A.

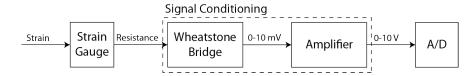


Figure 3.2: Signal conditioning example. In the case of the strain gage, a Wheatstone bridge and amplifier are used to condition the signal before it is passed to the analog-to-digital converter.

For our purposes two general types of signal conditioning will play an important role in designing our measurement systems, amplification and anti-aliasing. For now we'll discuss amplification and we'll save the topic of anti-aliasing for Section 3.4.5.

#### 3.3.1 Amplifiers

The role of an amplifier in our signal conditioning system is to scale the electrical output of a sensor (typically voltage) to match the input range of the analog-to-digital converter. As we discussed in Section 1.4, in order to take full advantage of the resolution of our A/D, the signal range must be approximately equivalent to the input range of our A/D. In theory (always a dangerous first two words), the function of an amplifier is to provide a multiplicative gain in the signal path, i.e.,

$$V_{out} = K\left(V_{in}\right)$$

where  $V_{in}$  is the input to the amplifier,  $V_{out}$  is the amplifier output and K is the amplifier gain.

Exercise 3.6 Building on Exercise 3.2 consider that we want to interface our ADXL 335 into an A/D that has a range of 0–10 V and 12-bits of resolution.

- If we did not use any amplification, what would be the effective resolution (in bits) of our A/D? (Hint: See Section 1.4.)
- What amplifier gain would you suggest so that we could use the full resolution of the A/D?

#### 3.4 Analog-to-Digital Conversion

We started our discussion of A/D devices in Section 1.4. Here we'll add some detail to our description of these devices. Again, we'll focus on what these devices do and leave the specifics of how they do this (successive-approximation, sigma-delta, etc.) to another book.

#### 3.4.1 Range and Resolution

Recall that the function of an ADC is to convert an voltage input (analog) to a binary number (digital). The full scale voltage range  $(E_{\rm FSR})$  is the span of voltage inputs that the A/D will

accept. This range comes in two flavors: bilateral or unilateral. A bilateral input range is typically symmetric about 0 V while a unilateral input can only accept positive voltage values. For example,

Bilateral Input Range: ±10 V
Unilateral Input Range: 0-10 V

In either case the full scale range is simply  $E_{\rm FSR} = V_{\rm max} - V_{\rm min}$  where the maximum input voltage is  $V_{\rm max}$  and the minimum input voltage is  $V_{\rm min}$ .

**Exercise 3.7** For the bilateral and unilateral examples above what is  $E_{\rm FSR}$  for each case?

Any voltage within the input range is converted to a binary value. The length of this binary number is specified by the number of bits (M) inherent to the A/D, e.g., 12-bits. The length of the binary representation determines the finite number of voltage levels that can be represented (see Section 1.4), so the ratio of the full scale voltage range to the number of levels that we can use in that range determines the resolution Q (in Volts) of the A/D,

$$Q = \frac{E_{\text{FSR}}}{2^M}.\tag{3.2}$$

You might notice that the resolution of an A/D is often referred to as either the number of bits used in the conversion (M) or the resolution in volts (Q). This is somewhat sloppy nomenclature, but common.

A related concept is quantization error ("ensuremath – "pm Q/2") which is another way of describing the finite resolution of converting a continuous analog value to a discrete digital value. As we discussed in Section 1.4, the A/D will associate the incoming voltage level (which can assume an infinite number of possible values) with the binary representation (which can only assume one of  $2^M$  possible values) that is nearest that actual value. Based on this nearest-neighbor concept the error between the actual incoming analog voltage and the reported digital value will be  $\pm Q/2$ , the quantization error.

Exercise 3.8 An alternative to (3.2) is to express the resolution as

$$Q = \frac{E_{\text{FSR}}}{2^M - 1}.$$

- Can you explain why this might be more correct? Try drawing a picture of a 1-bit or 2-bit scenario to understand why we might actually only have  $2^M 1$  levels in our A/D.
- Given that typical A/D hardware has more than 10-bits, and as much as 24-bits, of resolution, is the difference between these alternatives significant? Why or why not?

**Solution** There are many answers to this. The point is that the student think about what is going on here.

- In general, for an M-bit A/D there are  $2^M$  possible outputs. However, the distance between each level is  $E_{FSR}/(2^M-1)$  which is more correctly associated with the resolution of the A/D
- For any reasonably large number of bits there the is a negligible difference between these expressions. For example,  $2^{24} = 16,777,216$  and  $2^{24} 1 = 16,777,215$ . The point is that either expression is sufficient.

26 Data Acquisition

#### 3.4.2 Differential Versus Single-Ended

When connecting a voltage input to an A/D there are two important options: differential or single-ended input. Single-ended input consists of a common ground (GND) that is shared between all the inputs to the A/D. The A/D output is based on the voltage measured between the signal input (+) and ground. In contrast differential input consists of two voltage inputs, high (+) and low (-), which may or may not be referenced to a common GND potential. The A/D output is then based on the voltage difference (hence differential) between the signal high and signal low potentials. Here are some advantages of each approach:

- Single-ended inputs are simpler to implement
- Single-ended inputs use the full number of channels in the A/D device. For example, a device advertised to have "16 inputs" will actually have 16 single-ended inputs, but only 8 differential inputs.
- Single-ended inputs are lower in cost
- Differential inputs are less susceptible to noise (electromagnetic or radio-frequency interference). This is particularly important for sensors that produce very small signals, e.g., strain gages, thermocouples, load cells, etc.
- Differential inputs can be applied in cases (such as Wheatstone bridge outputs) where there is no true connection to a common ground.

#### 3.4.3 Sampling

So far we have been concerned with the resolution of a digital measurement in terms of the finite levels, typically of voltage, that an ADC can use to represent the analog input—the y-axis in Figure 3.3. In this section we'll discuss the ramifications of the fact that the ADC operates at a finite sampling period (dt), the output of the ADC changes only at discrete times. Therefore, an ADC has finite resolution in both amplitude (i.e., voltage) and time, illustrated by the fact that the individual samples in Figure 3.3 are discrete points in the x and y axes.

The typical function of an A/D is to regularly sample the input voltage level and record these samples as digital numbers. The speed at which this happens is specified by the sampling rate, or equivalently the sampling frequency  $(f_s)$  where  $f_s = dt$  Hz. (Beware, the terms "sample rate" or "sampling rate" are often used to refer to both sampling period and sampling frequency.) The sampling is illustrated in Figure 3.3 by the black markers; the time between each sample (dt = 0.1 s) is the sampling period.

Exercise 3.9 Consider the same analog input as illustrated in Figure 3.3 and Figure 3.4, a continuous sine wave input with a period of 1.0 s and an amplitude of 1.0 V. The signal is input to a A/D with the following characteristics:

- 4-bit voltage resolution
- $E_{\rm FSR} = \pm 1.0 \, {\rm V}$
- $dt = 0.5 \,\mathrm{s}$

Sketch a 2D graph (Voltage versus Time) that illustrates the analog signal and the digital samples.

Sketch the same 2D graph if dt = 0.33 s.

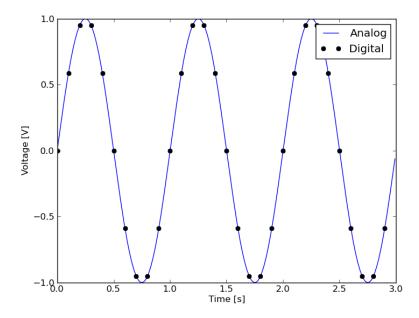


Figure 3.3: Illustration of a sampled signal. The analog signal  $(y(t) = \sin \omega t)$  is represented by a continuous curve with an infinite set of values in both time (x-axis) and amplitude (y-axis). The A/D converts this signal discrete samples at a finite set of time and amplitude values.

#### 3.4.4 How Fast to Sample?

The sampling rate (see the warning above!) for A/D devices can vary by orders of magnitudes. Consider the contrast between two processes that we might want to measure: the rise of global temperature or the incoming voice signal from an iPhone user. These processes evolve on very different time-scales. To measure global temperature rise it might be sufficient to take an average measurement once per year, but a typical sampling frequency for audio input is 44,000 samplesper-second (Hz).

Exercise 3.10 Suppose we wanted to sample the global temperature at a sampling frequency of 44kHz using a 16-bit A/D for a year. Estimate the size of the hard drive (in bytes) that would be necessary to store this much data. (Hint: There are 8-bits per byte.)

The sampling frequency (or period) can often be specified in software when using a ADC. So what setting should we choose? The simple answer is that we typically sample as fast as we can!

The longer (and hopefully more interesting) answer is that we can set a minimum necessary sampling frequency based on the characteristics of the input signal. Let's start with our audio (iPhone) example. The key thing you need to know is that the typical range of human hearing is from 20–20,000 Hz. So we'll need to sample fast enough that our digital representation (the output of the ADC) can represent this complete frequency range. It turns out that if we collect samples at twice the maximum frequency of interest, then we will be able to represent the analog signal with

28 Data Acquisition

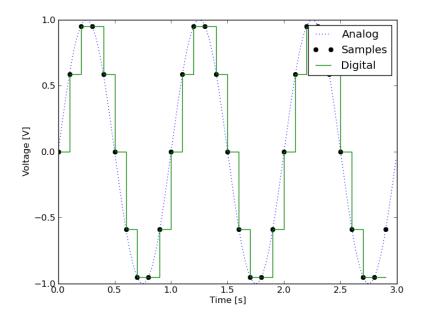


Figure 3.4: A second illustration of the sampled signal from Figure 3.3. The "Digital" graph shows how the digital output of the A/D changes over time. The reported value from the A/D only changes after each sampling event.

our digital representation, i.e.,

$$f_s > 2 (f_{\text{max}})$$

where  $f_{\rm max}$  is the Nyquist frequency, the maximum frequency of interest in the analog signal we are trying to measure. The Nyquist frequency dictates the theoretical minimum required sampling frequency, but in practice we can often sample much faster than this minimum; a typical rule-of-thumb is to set  $f_s = 10(f_{\rm max})$ 

Exercise 3.11 What would be the minimum sampling frequency for the analog signal illustrated in Figure 3.3? What would be the cooresponding Nyquist frequency?

**Solution** The signal in the figure has a single frequency of 1 Hz; this is the Nyquist frequency. To create a digital representation of this signal we'd need to sample at a minimum rate of 2 Hz.

#### 3.4.5 Anti-Aliasing

What happens when we violate this sampling rule-of-thumb? Let's work through an illustrative example similar to the illustration from Figure 3.3. Considering our simple sine wave input that changes amplitude with a frequency of 1.0 Hz. If we use our rule-of-thumb and set the sampling frequency to  $f_s = 10 \,\text{Hz}$  we will end up with a digital representation, illustrated in Figure 3.5, that looks pretty much like the original analog signal. If we sample "fast enough" the digital output will be a close approximation to the analog input.

Now let's see how things change if we cut it close and use the minimum frequency  $(f_s = 2 \text{ Hz})$ , i.e.,

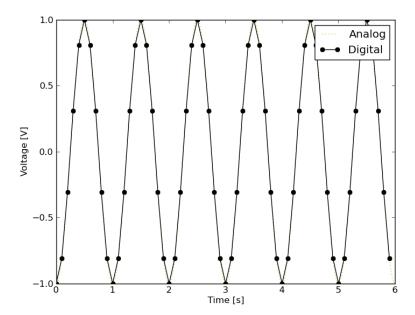


Figure 3.5: A second illustration of the sampled signal from Figure 3.3. The "Digital" graph shows how the digital output of the A/D changes over time. The reported value from the A/D only changes after each sampling event.

set the sampling frequency equal to twice the Nyquist frequency. Figure 3.6 illustrates that the sampled signal still roughly resembles the original sine wave, but things are starting to look a bit fishy.

Finally, the sampling frequency becomes less than twice the Nyquist frequency the digital output is significantly different than the analog input. Figure 3.7 illustrates that the digital output appears to be a sawtooth pattern with a much slower frequency of oscillation than the analog input, the term for this phenomenon is aliasing.

To generalize from our specific example, aliasing is when the analog input has significant frequency content above the half the sampling frequency. These portions of the signal are folded back into the digital representation as lower frequency components that can corrupt the digital representation. This can be a particular problem when there is high frequency noise. In this case aliasing can cause high frequency noise to corrupt your lower frequency data.

To address this issue an anti-aliasing filter is often included in the signal conditioning portion of the data acquisition system. This analog low-pass filter attenuates the higher frequency portions of the analog input, those portions of the input above the Nyquist frequency, to prevent these high frequency portions of the input from corrupting the measurement.

Exercise 3.12 Anti-aliasing filters must be implemented on the analog signal. However, digital filters can be used on the digital measurement (after the A/D conversion). Why is it not possible to have a digital anti-aliasing filter?

30 Data Acquisition

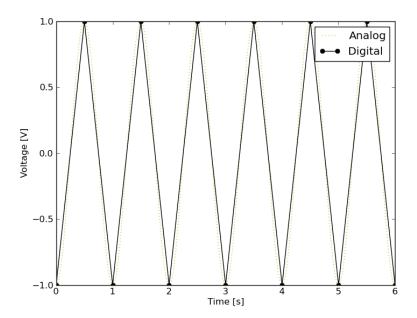


Figure 3.6: Sampling at the minimum frequency, twice the Nyquist frequency:  $f_s=2\,\mathrm{Hz},\,dt=0.5\,\mathrm{s}.$ 

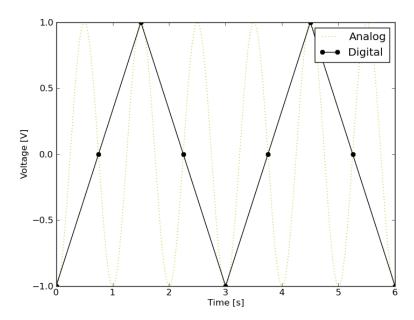


Figure 3.7: Sampling below twice the Nyquist frequency:  $f_s=1.33\,\mathrm{Hz},\,dt=0.75\,\mathrm{s}.$ 

3.5 Glossary 31

## $\frac{3.5~\mathrm{Glossary}}{3.5~\mathrm{Glossary}}$

Notation	Description	Symbol	Page List
aliasing	The result of having energy in the input to an A/D with frequency content higher than the Nyquist frequency. These higher frequencies are aliased into the digital representation to cause errors.		29
data acquisition system	Assembly of sensors, signal conditioning, digital-to-analog converter and a display or storage device for collecting physical measurements as digital records.	DAS or DAQ	21
differential input	the input configuration of an A/D where the output measures the difference between two voltages (+ and -) that are independent of electrical ground.		26
excitation voltage	The constant voltage supplied to power a sensor, typically a strain gage or Wheatstone bridge.		22
full scale voltage range	The specified input voltage range to an ADC. The range can be bipolar (both positive and negative, e.g., $E_{\rm FSR}=\pm 1.0{\rm V}$ ) or unipolar (only positive, e.g., $E_{\rm FSR}=01.0{\rm V}$ .) symbol		24
Nyquist frequency	For the output of an A/D the Nyquist frequency is the highest frequency of the signal that can be observed in the digital version of the signal. Because the Nyquist frequency is half of the sampling frequency, it is important to sample sufficiently fast to capture all the dynamics in the input.		28
quantization error	the difference between the actual analog in- put to a analog-to-digital converter and the reported digital (or quantized) value.	$\pm Q/2$	25
ratiometric	Refers to the situation where the output (voltage) is a ratio of the supply or excitation voltage.		22

32			Glossary
Notation	Description	Symbol	Page List
sampling frequency	For an A/D, the frequency of sampling events which is the reciprocal of the sampling period, typically in units of Hz.	$f_s$	26
sampling period	For an A/D, the duration in time between sampling events in units of time, e.g, seconds.	dt	26
single-ended input	the input configuration of an A/D where the output measures the voltage of a single voltage (+) relative to a common electrical ground (GND).		26
transducer	A device for converting on type of energy to another type of energy. Examples include both sensors and actuators.		21

### Chapter 4

## Model-Experiment Comparison

In this chapter we'll discuss some general methods for comparing model predictions with experimental observations. We are interested in being able to answer the questions, *How good is the model?*, or more specifically, *How good is the model at predicted the behavior of the physical system?* We'll also present examples that show how these general concepts can be applied to particular models and experiments such as static and first-order models of physical systems like bending beams and temperature sensors.

We can make both qualitative comparisons and quantitative comparisons between model predictions and experimental data. A qualitative comparison is based on subjective criteria such as does the time-response of our model "look like" the observed experimental data. Qualitative evaluation is important, but it can only get us so far. As engineers we'll want to quantify our evaluation to put the comparison in subjective, numerical terms (hopefully with units!).

#### 4.1 Quantitative Comparison



Figure 4.1: Graph of our empirical measurements of pulling something through some fluid and measuring the drag force. The individual data points are shown as circles.

Let's consider an example. Imagine we are measuring the drag force on something (a boat, surf-board, fish, diver, hang glider, etc.) as it moves through a fluid (air, water, mercury, etc.). We pull our thing through our fluid at a few different speeds and measure the force. If we plot our data

it might look something like Figure 4.1. Now that we have data, we might consider what type of (mathematical) model would be a good representation (or fit) to the model. One thing we might try is to consider a *linear model*, i.e., we are proposing that there is linear relationship between speed and drag force. To be more specific, we are proposing that the function  $F_{\text{drag}} = m(V)$  could be a "good" representation of our observation. Based on our data and our proposed model we

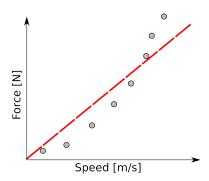


Figure 4.2: Graph of our empirical measurements with a notional linear model. The data (circles) and the linear model (red dashed line) are shown together.

could then come up with a value for the m term in our model. Figure 4.2 illustrates what this might look like. Qualitatively this model "looks pretty good", but...

Alternatively, we might consider a different model. Perhaps we could try a quadratic model of the form  $F_{\text{drag}} = c(V^2)$ . Again, there is just one parameter in our model (c) that we'll need to choose so that the model and the data are similar. If we can find a reasonable quadratic coefficient we might get something that looks like Figure 4.3. Based on this graph we could conclude, qualitatively, that the quadratic model is a "better fit" than the linear model. We could also conclude that the error between the quadratic model and the data is "small", but we can't really get beyond these qualitative explanations.

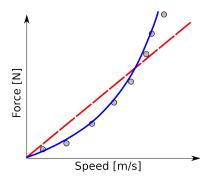


Figure 4.3: Graph of our empirical measurements with a notional linear and quadratic models. The data (circles), linear model (red dashed line) and quadratic model (solid blue line) are shown together.

Table 4.1: Fishy Data

Run	$L_i$ [m]
1	0.76
2	1.18
3	1.17
4	0.96
5	1.48

#### 4.2 Quantitative Comparison

Quantitative comparisons are based on metrics (also known as a *figure of merit*). The metric is the numerical quantity (or quantities) that we are using to evaluate our comparison. The type of model and experiment involved in the comparison of often dictates the types of metrics available. In this section we'll present a few metrics that are useful for comparing the mathematical models and experiments typical in dynamic, mechanical systems.

#### 4.2.1 Simple Statistics

We'll start with some simple (and hopefully familiar) statistical metrics. Let's reconsider our example form Chapter 1, but this time we'll pretend we have a model. Our "model" in this case is just a single prediction for the length of the fish we caught:  $\hat{L} = 1.0 \, \text{m}$ . (I'm not sure how we made this prediction, but we did.)

Once we reel in our actual fish (our experiment) we use our digital ruler to make a series of measurements that we can summarize in Table 4.2. Remember, we are trying to compare our model  $(\hat{L})$  with our data  $(L_i)$ . What could we say qualitatively? We might say that is "looks pretty good", but that is very subjective. One of our measurements is almost 50% higher than our model prediction. Is that "pretty good", "fair", "poor" or "terrible"?

Luckily, we don't really have to make that decision. Instead we can quantify the comparison. One easy statistical quantity we can use is the sample mean  $(\bar{L})$  which can be expressed as

$$\bar{L} = \frac{1}{N} \sum_{i=1}^{N} L_i \tag{4.1}$$

where N is the number of samples (5 in this case) and  $L_i$  is each of the N samples (the data). We might use the MATLAB mean() command to calculate  $\bar{L} = 1.11 \,\mathrm{m}$ . Now we have a simple quantitative comparison, and we can say something like, "The predicted value of L was 1.0 m and the sample mean of the measured length was 1.11 m based on 5 samples, indicating an 11% difference between the model and the experiment." As an engineer, this is a much more satisfying result that the comment that the "data looks pretty close"—true?

Another simple statistic we can use to quantify our results is the sample standard deviation of L

rable 1.2. Sammary of our fishly results	
Result	Value
Predicted Length $(L)$	1.0 m
Mean Measured Length $(\bar{L})$	1.11 m
Percent Difference: Model/Experiment	11%
Standard Deviation of Length Measurement $(\sigma_L)$	$0.24\mathrm{m}$

Table 4.2: Summary of our fishy results

 $(\sigma_L)$  which can be expressed as

$$\sigma_L = \sqrt{\frac{1}{N-1} \sum_{i=1}^{N} (L_i - \bar{L})^2}.$$
 (4.2)

The standard deviation specifies how much variability in our data, indicating how much we can trust individual measurements. We might use the MATLAB std() function to calculate the standard deviation of our measurements as  $\sigma_L = 0.24 \,\mathrm{m}$ , indicating that the expected variability in our measurements is roughly 24% of the modeled value.

It is important to note a few things about our first example of quantitative comparisons:

- Our comparisons take the form of specific metrics
- Our metrics have both numbers and engineering units
- We can avoid having to make subjective judgments such as "good" or "better".

#### 4.2.2 Model Coefficients

The previous simple statistics work well for scalar measurements where the underlying model is static (a single value). However, in this book we are more interested in dynamic models and systems that change with time. One way we can quantify these comparisons is by contrasting the predicted model coefficients with model coefficients based on our experiments.

Let's consider an example based on our first-order model step response from Section 2.3. Let's assume we've come up with the mathematical model

$$\frac{dy(t)}{dt} + \frac{1}{\tau}y(t) = f(t), \tag{4.3}$$

and we've predicted the time-constant is  $\tau = 10.0 \,\mathrm{s}$  and the steady-state value is  $Y_{ss} = 100 \,\mathrm{V}$ . Based on our model we can predict the step response as

$$y(t) = Y_{ss} \left( 1 - e^{-t/10.0} \right). \tag{4.4}$$

Now we go into the lab and do a set of three experiments to magically measure the step response of our system. If we graph our predicted response (4.4) alongside our experimental observations we might get a plot similar to Figure 4.4. We can immediately make the following important qualitative comparisons:

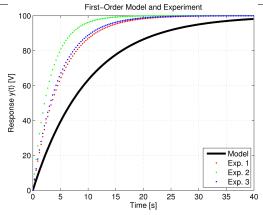


Figure 4.4: Illustration of our model prediction and experimental measurements.

Table 4.	3:	Summary	of our	model	predictions	and	exp	erimenta	l results
	$\overline{}$								

Result	Value
Predicted Time Constant	$10.0\mathrm{s}$
Experimental Time Constant: Run 1	$4.2\mathrm{s}$
Experimental Time Constant: Run 2	$4.5\mathrm{s}$
Experimental Time Constant: Run 3	$2.8\mathrm{s}$
Experimental Time Constant: Mean	$3.8\mathrm{s}$
Difference, Model vs. Exp. Time Constant	$6.2\mathrm{s}$
Percent Error	62%

- The model predicted steady-state response appears to agree with the empirical steady-state response.
- The model predicted time constant appears to be larger than the experimentally measured time constant.

But, how do we quantify these comparisons?

One way to quantify the agreement between the model and the experimental results is to calculate a time constant based on the assumption that our physical experiment behaves like a first-order mathematical model. (Be careful here, a physical system does not have a time constant; only mathematical models have time constants!) For each experimental trial we can estimate a time constant for the system. Then we can compare the mean experimental time constant to the predicted time constant from the model and summarize the results in a table.

One thing to be specific about is how we calculate the *percent error* in Table 4.3;

$$\% \operatorname{Error} = \frac{|\operatorname{Experimental} - \operatorname{Theoretical}|}{\operatorname{Theoretical}}.$$

38 Glossary

## $\frac{38}{4.3 \quad \text{Glossary}}$

Notation	Description	Symbol	Page List
metric Comparing model predictions and experimental data based on objective, numerical properties.			35
qualitative comparison	Comparing model predictions and experimental data based on subjective, non-numerical properties.		33
quantitative comparison	Comparing model predictions and experimental data based on objective, numerical properties.		33
sample mean	Comparing model predictions and experimental data based on objective, numerical properties.		35
sample standard deviation	Comparing model predictions and experimental data based on objective, numerical properties.		35

### Chapter 5

# Case Study: Beam Response and Stain Gage

In this chapter we will work through and example data acquisition design problem. Our goal is present a complete system, with as much detail as possible, capable of measuring the response (static and dynamic) of a cantilevered beam subject to a load.

#### 5.1 Static Model: Cantilevered Beam

Figure 5.1 shows the solution to the classical beam equation for a cantilevered beam with a load placed at the tip. This simple case illustrates how we can predict the moment (M(x)) and deflection (y(x)) in the structure as a function of the applied load.

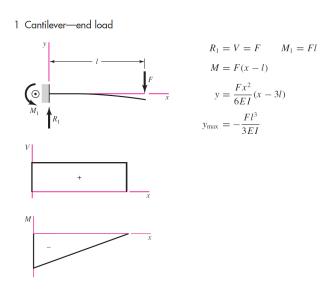


Figure 5.1: Shear, moment and deflection of a cantilevered beam. Courtesy of *Shigley's Mechanical Engineering Design*, 8th Edition, Budynas and Nisbett.

#### 5.1.1 Determining Strain and Displacement

Two quantities of the response of the beam that we'd like to be able to predict is the strain  $(\epsilon)$ , due to bending, at a particular location along the length (x) as a function of the applied load (F) and the displacement at the free end of the beam  $(y_{max})$  as a function of the applied load. We can start with the (hopefully) familiar expression for bending stress in a beam due to an applied moment,

$$\sigma_x = \frac{M(h/2)}{I},$$

where h is the height of the beam cross-section and I is the second moment of area of the beam cross-section. We can use the linear relationship for elastic stress and strain ( $\sigma_x = E\epsilon$ ) to find an expression for the strain at any location x along the beam:

$$\epsilon = \frac{F(x-l)(h/2)}{EI}. (5.1)$$

We can then solve for the tip force and the tip displacement as a function of the measured strain:

$$F = \left(\frac{EI}{(x-l)(h/2)}\right)\epsilon\tag{5.2}$$

and

$$y_{max} = \left(\frac{l^3}{3(x-l)(h/2)}\right)\epsilon. \tag{5.3}$$

These two equations are models of the response of a cantilevered beam. The first model (5.2) predicts the force at the free end of the beam (F) as a function of the strain. The second model (5.3) predicts the displacement at the free end of the beam as a function of the strain.

#### 5.2 Sensor: Strain Gage

In our example we are going to use a stain gage to measure the deformation (strain) at one location in our bending beam. Based on this estimate of deformation we can infer the strain and stress in the structure as well as the motion of the beam. The sensor we will use is a strain gage or more specifically, a bonded resistance strain gage. This sensor, illustrated in Figure 5.2 is a very common measurement tool for mechanical systems. The type of strain gage we are considering is bonded to a surface so that when that element is deformed, the strain gage is deformed by the same amount. This deformation causes the resistance of the foil grid (see Figure 5.2) to change according to the relationship

$$GF = \frac{\delta R/R}{\delta L/L} = \frac{\delta R/R}{\epsilon}$$
 (5.4)

where R is the nominal resistance of the strain gage (e.g., 120 Ohms),  $\delta R$  is the change in resistance, L is the length of the gage,  $\delta L$  is the change in length and  $\epsilon$  is the strain at the location of the gage. For metallic foil strain gages, GF is typically close to 2. Since the stain in engineering devices is usually less than 1%, which suggests that the change in resistance in a strain gage is very small, typically less than 1%.

#### 5.3 Signal Conditioning: Wheatstone Bridge

The strain gage is one of many sensors where the transduction is a conversion to a small change in resistance. Directly measuring such a small resistance within a data acquisition system is challenging. It would be preferable if the input to our analog to digital converter was a voltage indicating the value of the physical quantity we are attempting to measure. Enter the Wheatstone bridge. This simple circuit is sketched in Figure 5.3. This particular implementation illustrates a "quarter-bridge" circuit, where the sensor is represented by the resistor value  $R_x$ .

To get started, consider if the bridge is perfectly "balanced" which requires all the resistance values  $(R_1, R_2, R_3 \text{ and } R_x)$  to be equivalent. The excitation voltage  $(V_S)$  is applied as shown (e.g.,  $V_S = 10 \text{ V}$ ). (The excitation voltage could also be called the supply voltage.) The output of the bridge circuit is  $V_o$ . Given this scenario, with the bridge in a balanced state, what is the output voltage? Hopefully it makes conceptual sense that this voltage would be zero. Since the all the resistors are of the same value the voltage drop across each resistor would be equivalent.

When the value of one leg of the bridge changes, say when a strain induces a change in resistance of  $R_x$ , then the bridge us unbalanced and the output voltage is non-zero. We won't do the circuit analysis here (there are plenty of examples online if you are interested), and instead we'll just present the result:

$$V_o = V_s \left( \frac{\delta R_x / R_x}{4 + 2(\delta R_x / R_x)} \right) \approx \frac{\delta R_x / R_x}{4}.$$
 (5.5)

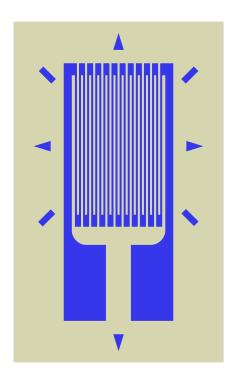


Figure 5.2: Schematic of a typical metallic foil strain gage. (This image is by "MADe", is licensed under the CC BY-SA license and is available from http://en.wikipedia.org/wiki/File:Strain\_gauge.svg)

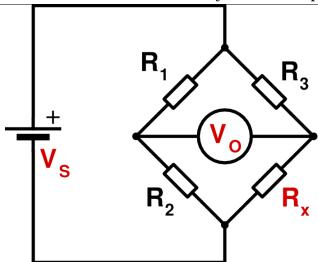


Figure 5.3: Wheatstone bridge circuit. Excitation voltage is  $V_s$ , the strain gage (variable resistance) is  $R_x$  and the output voltage is  $V_o$ . (This image an adaptation of the image by "Zedh", is licensed under the CC BY-SA license and is available from http://en.wikipedia.org/wiki/File: Wheatstonebridge.svg)

This expression quantifies how a change in resistance of one leg of a quarter-bridge circuit is converted into a corresponding output voltage. Notice the sensitivity of the bridge circuit is a function of of the excitation voltage  $(V_s)$ . So, the larger the excitation the larger the output voltage, for an equivalent change in resistance. (Of course the larger the supply voltage the larger the current flowing through the bridge which results in unnecessary heating which then causes other problems.)

There are other implementations of the Wheatstone bridge such as half-bridge and full-bridge configurations; we'll stick with the quarter-bridge for now.

#### 5.4 Strain Gage Data Acquisition

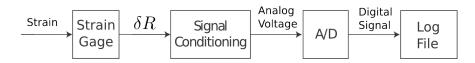


Figure 5.4: A data acquisition including a strain gage and Wheatstone bridge. See Figure 3.1 for the general DAQ layout.

By putting these components together we can build a complete data acquisition system for measuring strain as illustrated in Figure 5.4. To describe the mathematical relationship between physical strain and the analog voltage measured by the A/D we combine (5.4) and (5.5) to generate the expression

$$V_o \approx V_s \left(\frac{(GF)\epsilon}{4}\right).$$
 (5.6)

5.5 Exercises 43

#### 5.5 Exercises

**Exercise 5.1** Using (5.1) and (5.6) derive a mathematical model (an equation) that predicts the voltage output of the Wheatstone bridge  $(V_o)$  as a function of the applied load at the free end of the beam.

Solution

$$V_o \approx V_s \left(\frac{\text{GF}}{4}\right) \left(\frac{F(x-l)(h/2)}{EI}\right)$$

44 Glossary

## $\frac{44}{5.6} \quad \text{Glossary}$

Notation	Description	Symbol	$egin{array}{c} { m Page} \\ { m List} \end{array}$
excitation voltage	Also known as the supply voltage. This is the constant, known voltage applied to a Wheatstone bridge.		41
strain gage	In general, a strain gage is a sensor (a transducer) that transforms strain into a measureable quantity. For our purposes a strain gage refers to a metallic foil strain gage bonded to the surface of a structure. This type of strain gage changes resistance in response to an applied deformation in a known way		40

## Chapter 6

## Static Linear Model

One very common model for the static response of a system is the familiar equation of a line

$$y = m * x + b \tag{6.1}$$

where x is the input, y is the output, m is the slope and b is the y-intercept. To put this in context of the dynamic linear models (e.g., first and second order) this model is referred to as a zero-order differential equation

$$y(t) = m * x(t) + b. \tag{6.2}$$

One example of a physical system that can be approximated using this type of model is a mass-spring-damper idealization as shown in Figure 6.1. We can consider either the dynamic response (which we'll model later as a second-order model) or the static response. The static response (x(t)) to an input force (F(t)) of such a system can be approximated by Hooke's law

$$x(t) = 1/K * F(t) \tag{6.3}$$

where K is the spring constant for the spring, x(t) is the static displacement and F(t) is the constant applied force. Keep in mind that this is only reasonable for the *static* scenario; if F(t) is not constant this will be a very poor model to predict the response x(t).

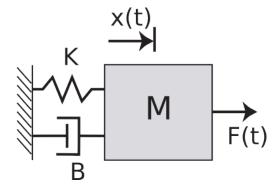


Figure 6.1: Sketch of a mass-spring-damper system.

46 Static Linear Model

#### 6.1 Static Calibration

In order to use a model such as (6.3) we need to know the unknown parameters in the model, for example the spring constant K. Static calibration is the process of experimentally determining this value. If we know that the system is perfectly linear (which systems never are) and that our measurements are perfect (which they never are) this process is very simple. All we have to do is...

- Apply a known static load F
- Measure the resulting static displacement x
- Substitute these values into (6.3) and solve for K

This works surprisingly well if we are confident of our model (linearity) and our measurements. However, to be a little more cautious we might want to repeat this process a few times at various known static loads and then combine all that data to determine a best-fit value for K based on more than one measurement. This process is known as *fitting a model to the data*.

#### 6.2 Least-Squares Regression

Regression analysis can be used to fit model to experimental data. For regression analysis the static model is a polynomial of order m such as

$$\hat{y} = a_0 + a_1 * x + a_2 * x^2 + \dots + a_m * x^m$$
(6.4)

where  $\hat{y}$  is the response predicted by the model. Consider the linear case (m = 1) illustrated in Figure 6.2 where the model takes the form

$$\hat{x} = a_0 + 1/K * F \tag{6.5}$$

and the experimental measurements are  $x_i$  for each input  $F_i$ .

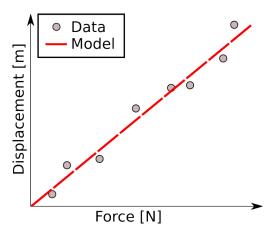


Figure 6.2: Illustration of a set of experimental measurements (data) and the best-fit linear model.

In this case there are eight data points so i = 1, 2, ..., 8. The most common method to determine a the parameters of the model that best-fit the data is to minimize square-error between the prediction

and the measurement at each test input. In other words, the method of least-squares finds values for  $a_0$  and K to minimize the quantity

$$L = \sum_{i=1}^{N} (x_i - \hat{x}_i)^2.$$
 (6.6)

Exactly how to accomplish this is beyond the scope of this book, but there are many tools (MAT-LAB, MS-Excel, etc.) that will solve this problem and provide you with a quantification of the goodness-of-fit. The first of these parameters is the coefficient of determination,  $R^2$ , which defines, "how much of the variance in the data is described by the linear fit". The  $R^2$  parameter is between 0–1, with values greater than 0.9 indicated a good degree of fit (or agreement) between the data and the model. Another way to quantify the comparison between the model and the data is to compute the standard error of the fit as

$$s = \sqrt{\frac{\sum_{i=1}^{N} (x_i - \hat{x}_i)^2}{\nu}}$$
 (6.7)

where  $\nu$  is the degrees of freedom of the fit and  $\nu = N - (m+1)$ . For our linear example (m=1) with eight data points (N=8),  $\nu = 8 - (2) = 6$ .

48 Static Linear Model

### Chapter 7

## Dynamic Models: Part 2

So far we have examined two mathematical models to predict and quantify the response of mechanical systems: a static (zero-order) model and a first-order dynamic model. It may not be terribly surprising that our next topic is a second-order model. A second-order model is a generic mathematical description of a system that is capable of oscillations. (You might recall that neither a static response nor a first-order response oscillates.) This simple model can be used to help understand the behavior of a variety of engineering systems such as

- pendulums, where the position oscillates
- passive circuits, where the voltage/current oscillates
- acoustic systems, where the sound pressure level (volume) oscillates.

The key elements of a second-order model are *inertia*, *stiffness* and *damping* where the interpretation of these elements depends on the domain (mechanical, electrical, acoustic, etc.) under examination. We will focus on mechanical systems where the inertia is in the form of mass, the stiffness is a restoring force (such as a spring or gravity) and damping is losses due to frictional forces.

#### 7.1 Second-Order Model

We will use second-order model as shorthand for a linear, ordinary, time-invariant second-order differential equation of the form

$$\ddot{y}(t) + 2\zeta\omega_n\dot{y}(t) + \omega_n^2 y(t) = f(t)$$
(7.1)

where

- $\ddot{y}(t)$  is the second derivative of y(t) with respect to time,
- $\dot{y}(t)$  is the first derivative of y(t) with respect to time,
- y(t) is the solution to (7.1),
- $\zeta$  is the damping ratio,
- $\omega_n$  is the undamped natural frequency and
- f(t) is the input, or forcing function.

Just as with our first-order and static (zero-order) models, this model is an abstraction; it never has exactly the same behavior of a physical system, but it has been proven to be a useful approximation for the behavior of a variety of phenomena. To understand the model we'll first present the solution to (7.1) for a few types of input (forcing functions) and then work through some examples of cases where the model is a helpful abstraction of physical systems.

The intent of the following discussion is meant to be a summary and/or review of what you have seen in other courses (Differential Equations, System Dynamics, Feedback Controls, etc.). The discussion should be sufficient for our purposes of modeling and measurement, but it is by no means an exhaustive treatment of analysis of second-order models or harmonic oscillator models.

Also, for now we are only interested in **underdamped** and **undamped** versions of the model (7.1) where  $0 \le \zeta < 1.0$ . Another way to say this is that we are only interested in second-order models that have oscillations in their response.

#### 7.1.1 Example: Mass-Spring-Damper

One type of physical system that has similar behavior to our second-order model is the mass-spring-damper system illustrated in Figure 7.1. (Actually, this system is still a bit of an abstraction; we rarely encounter applications that require a point mass attached to a mass-less spring. The abstraction is meant to represent any physical system where there is inertia (mass, kinetic energy), a restoring force (spring, potential energy) and motion resistance (damper, energy dissipation).)

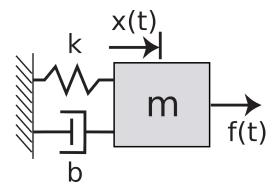


Figure 7.1: Sketch of a mass-spring-damper system.

If you draw a free-body-diagram of this system, you should be able to derive the second-order equation of motion

$$m\ddot{x}(t) + b\dot{x}(t) + kx(t) = f(t) \tag{7.2}$$

where m is the mass, b is the linear damping coefficient, k is the linear spring constant, x(t) is the displacement of the mass and f(t) is the input force.

**Exercise 7.1** Using (7.1) and (7.2), derive expressions for the system parameters ( $\omega_n$  and  $\zeta$ ) in terms of the physical parameters (m, b, and k). (Hint: Use physical units to check your answers.)

**Solution** You should verify that the following expressions are correct:

$$\omega_n = \sqrt{k/m}$$
 rad/s

$$\zeta = rac{b}{2\sqrt{mk}}$$
 n/a

#### 7.2 Free Response

The free response for our model is the solution to the second-order model (7.1) with initial conditions, but no forcing function (also known as the homogeneous equation)

$$\ddot{y}(t) + 2\zeta\omega_n\dot{y}(t) + \omega_n^2 y(t) = 0 \tag{7.3}$$

where the initial conditions at t = 0 are

- $y(0) = y_o$  and
- $\dot{y}(0) = \dot{y}_{o}$ .

Hopefully you've been convinced that this type of differential equation is straightforward to solve (in theory), and we can present (without derivation) that the solution to this equation is the function

$$y(t) = C\left(e^{-\zeta\omega_n t}\right) \left(\cos(\omega_d t - \phi)\right). \tag{7.4}$$

where

$$\omega_d = \omega_n \sqrt{1 - \zeta^2}, \tag{7.5}$$

$$\omega_d = \omega_n \sqrt{1 - \zeta^2}, \tag{7.5}$$

$$C = \sqrt{y_o^2 + \left(\frac{\dot{y}_o + \zeta \omega_n y_o}{\omega_d}\right)^2} \quad \text{and} \tag{7.6}$$

$$\tan(\phi) = \frac{\dot{y}_o + \zeta \omega_n y_o}{\omega_d y_o}. \tag{7.7}$$

The free response (7.4) is the key part of all this. There are many systems that behave in this general way with a decaying oscillatory response. To illustrate this we can annotate the equation to highlight the three parts of the solution:

$$y(t) = \underbrace{C}_{\text{constant}} \underbrace{\left(e^{-\zeta\omega_n t}\right)}_{\text{exponential decay}} \underbrace{\left(\cos(\omega_d t - \phi)\right)}_{\text{oscillation}}.$$
 (7.8)

One important detail is that there are two slightly different "natural frequencies" to keep track of The undamped natural frequency  $(\omega_n)$  is the parameter we saw in the system model and which is included in the exponential decay component of (7.8). The damped natural frequency ( $\omega_d$ ) is the frequency of oscillation, the angular frequency inside the cos term of (7.8). The relation between the two values is given in (7.5). For small values of  $\zeta$ , so called "lightly damped systems", there is little difference between the two values.

Another way to "see" this solution is to graph the time response. The short MATLAB script in Listing 7.1 generates Figure 7.2. This figure illustrates the key characteristics of a second order free response:

1. the system oscillates at a constant frequency (the  $\cos(\omega_d t)$  term) and

2. the amplitude of the oscillations decays exponentially over time (the  $e^{-\zeta \omega_n t}$  term).

Listing 7.1: Script for plotting the free response of a second-order model. (File-name=second\_order\_free.m, http://web.eng.hawaii.edu/~bsb/me402/book/code/second\_order\_free.m)

```
\% Illustration of Second-Order LTI Free Response
% Model Parameters
wn = 1*2*pi; % undamped nat'l freq. [rad/s]
zeta = 0.1; % damping ratio \lceil n/a \rceil cd
% Initial condition \\
y0 = 1; \% y(t=0)
% Describe a vector of times for the solution
dt = 0.001; % Time step /s/
Tend = 10; % End of time horizon for simulation [s]
tt = 0: dt: Tend;
% Solution to DE
wd = wn*sqrt(1-zeta^2);
Yeqn = y0*exp(-zeta*wn*tt).*cos(wd*tt);
% Plot the Results
figure(1); clf()
plot (tt, Yeqn, 'b-')
xlabel('Time_[sec]')
ylabel('y(t) = [n/a]')
title ('Free_Response_of_Second-Order_Model')
```

Exercise 7.2 There is a mistake in Listing 7.1 which attempted to display the solution for the case where there is only a "displacement" initial condition: i.e.,  $y(0) = y_o$  and  $\dot{y}(0) = 0$ . The mistake is that the solution in the code uses the values  $C = y_o$  and  $\phi = 0$  which are not correct (but they are close).

- Derive expressions for the constants C and  $\phi$  based on the initial conditions  $y(0) = y_o$  and  $\dot{y}(0) = 0$ .
- Copy the script in Listing 7.1 and create the graph shown in Figure 7.2.
- Correct the script in Listing 7.1 and plot a second curve, on the same axes, with the corrected solution for  $y_0 = 1$ .
  - Include your MATLAB script with your solution.
  - Include your graph as a properly formatted figure.

The error is simply in the calculation of C and  $\phi$ ; the structure of the script in Listing 7.1 should work just fine.

#### Solution

$$C = \sqrt{\frac{y_o}{1 - \zeta^2}}$$

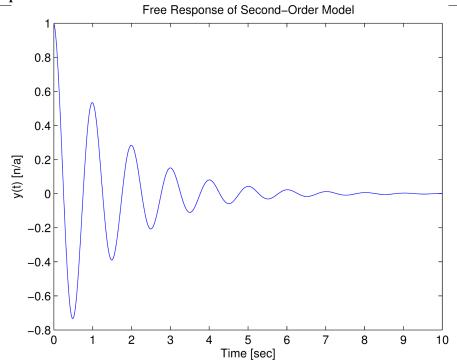


Figure 7.2: Graph of the free response (2.5) with  $\omega_n = 1 \,\mathrm{Hz}$ ,  $\zeta = 0.1$  (10%) and y(t=0) = 1.

$$\tan \phi = \frac{\zeta}{\sqrt{1 - \zeta^2}}$$

or

$$\phi = \arctan\left(\frac{\zeta}{\sqrt{1-\zeta^2}}\right)$$

See Figure 7.3. This figure is generated using Listing ??

Listing 7.2: Script for plotting the corrected free response of a second-order model.

```
% Illustration of Second-Order LTI Free Response

% Model Parameters
wn = 1*2*pi; % undamped nat'l freq. [rad/s]
zeta = 0.1; % damping ratio [n/a]cd

% Initial condition
y0 = 1; % y(t=0)
v0 = 0;

% Describe a vector of times for the solution
dt = 0.001; % Time step [s]
Tend = 10; % End of time horizon for simulation [s]
tt = 0:dt:Tend;

% Mistaken Solution to DE
```

```
wd = wn * sqrt(1-zeta^2);
Yeqn = y0*exp(-zeta*wn*tt).*cos(wd*tt);
% Solution to DE
wd = wn * sqrt(1 - zeta^2);
C = sqrt(y0^2 + ((v0 + zeta * wn * y0) / (wd))^2)
phi = atan((v0+zeta*wn*y0)/(wd*y0))
Yeqn2 = C*exp(-zeta*wn*tt).*cos(wd*tt-phi);
% Plot the Results
figure(1); clf()
\%plot(tt, Yeqn, 'b-')
%hold on
plot(tt, Yeqn2, 'r-')
xlabel('Time\_[sec]')
ylabel('y(t) = \lceil n/a \rceil')
legend('Mistaken', 'Corrected')
title ('Free_Response_of_Second-Order_Model')
```

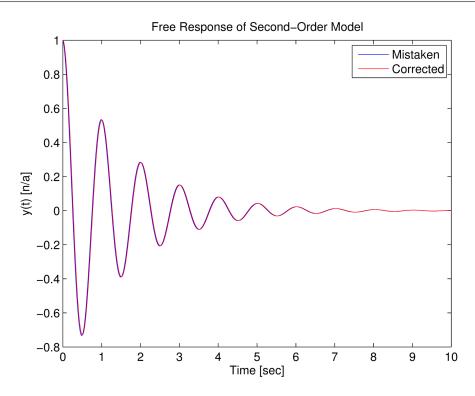


Figure 7.3: Graphs of the original mistaken free response and the corrected free response.

Exercise 7.3 Consider the effect of the damping ratio ( $\zeta$ ) on the shape of free response. Using Listing 7.1 as a starting point, use MATLAB to create a single graph for the free response with the initial conditions y(0) = 1 and  $\dot{y}(0) = 0$ . On a single set of axes, plot the response for systems with the following values for the damping ratio:  $\zeta = \{0.0, 0.01, 0.1, 0.5, 0.9\}$ . Use a legend to declare which curve is associated with each value of  $\zeta$ . Submit this single graph as an appropriately formatted figure with a short description of what you observe about the effect of changing  $\zeta$ .

Solution See Figure 7.4 generated using Listing 7.3.

Listing 7.3: Script for plotting the free response of a second-order model with varios values of zeta.

```
\% Illustration of Second-Order LTI Free Response
% Model Parameters
wn = 1*2*pi; % undamped nat'l freq. \lceil rad/s \rceil
zeta = 0.1; % damping \ ratio \ [n/a]cd
% Initial condition
y0 = 1; \% y(t=0)
% Describe a vector of times for the solution
dt = 0.001; % Time step [s]
Tend = 10; % End of time horizon for simulation [s]
tt = 0: dt: Tend;
zetas = [0.0, 0.01, 0.1, 0.5, 0.9];
% Plot the Results
ltypes = \{ 'r-', 'g-', 'b-', 'r--', 'g--', 'b--' \};
figure (1); clf()
lstr = \{\}
for ii = 1: length(zetas)
    zeta = zetas(ii)
    % Solution to DE
    wd = wn * sqrt(1 - zeta^2);
    Yeqn = y0*exp(-zeta*wn*tt).*cos(wd*tt);
    plot(tt, Yeqn, ltypes\{ii\})
    hold on
    lstr\{ii\} = sprintf('\%4.2f', zeta);
end
legend(lstr)
xlabel('Time\_[sec]')
ylabel('y(t) = \lceil n/a \rceil')
title ('Free_Response_of_Second-Order_Model')
```

**Exercise 7.4** Consider the model's free response to velocity-only initial conditions—y(0) = 0 and  $\dot{y}(0) = v_o$ .

- Derive expressions for the constants C and  $\phi$  based on these initial conditions.
- Substitute your expressions into the response (7.4) and write a simplified equation for the response. (Hint:  $\cos\left(u-\frac{\pi}{2}\right)=\sin(u)$ .)
- Using MATLAB, create a figure the graphs the response (y(t)) to this initial condition.

Exercise 7.5 Given a damping ratio of  $\zeta = 0.01$  (1% damping), write and expression for the damped natural frequency as a function of the undamped natural frequency. Repeat the exercise for a 10% damping.

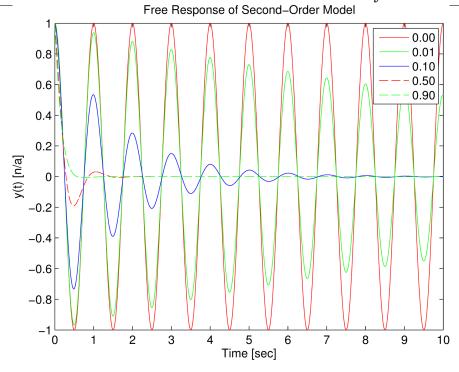


Figure 7.4:

#### 7.3 Example: Cantilevered Beam

Another physical system that has a response that can be approximated by our second-order model is a cantilevered beam. Imagine a yardstick fixed on one end. When the free end is subject to a displacement (the initial condition) and then released, the tip will oscillate. A cantilevered beam, unlike our lumped mass system in Figure 7.1, is a continuous system, but for now we'll approximate it by examining the first natural frequency.

#### 7.3.1 First-Mode of Cantilevered Beam

The first natural frequency of a uniform cantilevered beam, Figure 7.5, can be estimated by using classical beam theory. The resulting expression for the first natural frequency, in rad/s, is

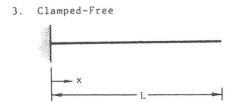


Figure 7.5: Image of a cantilevered beam model. From "Formulas for Natural Frequency and Mode Shape" by R. D. Blevins.

$$\omega_n = \frac{(1.875)^2}{L^2} \sqrt{\left(\frac{EI}{\rho}\right)} \tag{7.9}$$

where  $\rho$  is the mass per unit length of the beam (the product of the density and the cross-section area), E is the modulus of elasticity of the beam material, I is the second moment of area of the beam and L is the length of the beam.

#### 7.3.2 First-Mode of Cantilevered Beam with Added Mass

Similarly, it is possible to predict the natural frequency of a uniform cantilevered beam with a point-mass at the free end of the beam as illustrated in Figure 7.6. The first natural frequency for

#### 2. Mass, Cantilever

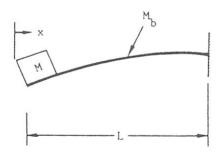


Figure 7.6: Image of a cantilevered beam with point mass model from "Formulas for Natural Frequency and Mode Shape" by R. D. Blevins.

this model is

$$\omega_n = \sqrt{\frac{3EI}{L^3(M + 0.24M_b)}} \tag{7.10}$$

where M is the point mass at the free end of the beam and  $M_b$  is the total mass of the beam.

Notice that both predicted natural frequencies (7.9) and (7.10) have the general from of  $\omega_n = \sqrt{K/M}$  where K is the "stiffness" of the system and M is the "mass" of the system.

**Exercise 7.6** Given a uniform cantilevered beam with the following properties:

- Length = 0.5 m
- Width = 2.54 cm
- $Thickness = 1.59 \, mm$
- Modulus of Elasticity  $(E) = 68.9 \, \text{GPa}$
- $Density = 2.70 \, g/cm^3$

Predict the undamped natural frequency. Express the answer in both of the following units: rad/s and Hz.

**Solution** Use (7.9) with the values from the Exercise. The mass-per-unit-length is the product of the density and the cross-sectional area:

$$\rho = D * (t * W)$$

where D is the density, t is the beam thickness and W is the beam width. We also need to calculate the second moment of area...

$$I = 1/12(W * t^3)$$

If we plug in these values we get...

$$\omega_n = 32.6 \,\mathrm{rad/s}$$

To express in Hz

$$f_n = rac{\omega_n \, {
m rad/s}}{2\pi \, {
m rad/cycle}} = 5.2 \, {
m cycles/s} = 5.2 \, {
m Hz}$$

Listing 7.4: Script for predicting the natural frequency of a cantilevered beam.

**Exercise 7.7** Given the uniform cantilevered beam described in the previous example, and a damping ratio of  $\zeta = 0.02$  (2% damping)...

- Write an expression for a mathematical model of the form in (7.1) to describe the system. (You should just need to substitute in numerical values for the system parameters  $\zeta$  and  $\omega_n$ .)
- Using MATLAB, produce a graph that predicts the response of the tip of the cantilevered beam to an initial displacement of 1.0 cm and zero initial velocity: y(0) = 1.0 cm and  $\dot{y}(0) = 0 \text{ cm/s}$ .

#### Solution

$$\ddot{y}(t) + 2(0.02)(32.6)\dot{y}(t) + (32.6)^2 = f(t)$$

To generate the graph we can use the same script from Exercise 7.2 and substitute in the new values for  $\zeta$  and  $\omega_n$ .

Listing 7.5: Script for plotting the corrected free response of a second-order model using the given beam parameters.

```
% Describe a vector of times for the solution
dt = 0.001; % Time step [s]
Tend = 5; % End of time horizon for simulation [s]
tt = 0: dt: Tend;
\% Solution to DE
wd = wn * sqrt(1 - zeta^2);
C = sqrt(y0^2 + ((v0 + zeta * wn * y0) / (wd))^2)
phi = atan((v0+zeta*wn*y0)/(wd*y0))
Yeqn2 = C*exp(-zeta*wn*tt).*cos(wd*tt-phi);
% Plot the Results
figure (1); clf()
\%plot(tt, Yeqn, 'b-')
%hold on
plot(tt, Yeqn2, 'r-')
xlabel('Time\_[sec]')
ylabel('y(t) = [cm]')
/(2*pi), zeta))
```

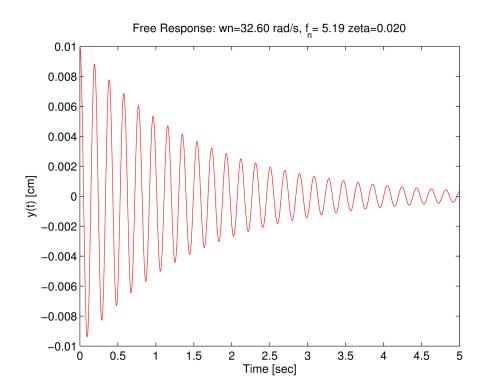


Figure 7.7: Graphs of the second-order free response for the predicted natural frequency from the given beam parameters.

#### 7.4 Measuring Second-Order Response

For physical systems that exhibit oscillatory response we can "fit" a second-order response to the system measurements to estimate the system parameters ( $\omega_n$  and  $\zeta$ ) based on the measured response. In other words, consider that you measure the time response of a system (e.g., a cantilevered beam, a RLC circuit, etc.) and you observe that the behavior looks something like Figure 7.8. How can you estimate the natural frequency and damping ratio associated with such a response?

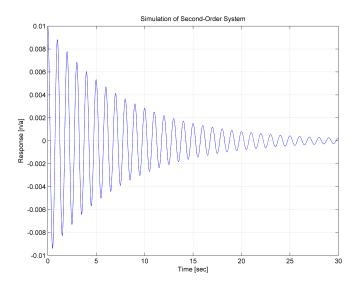


Figure 7.8: Illustration of the free-response of a second-order system. The response shows the analytical solution for y(t).

#### 7.4.1 Measuring Frequency

It may be obvious, but if for no other reason than to get the units (Hz and  $^{\text{rad}}$ /s) it is worth spending a little time discussing how to measure the frequency of oscillation from a measured response. Since our measurements are of the **time** response, we will need to start by estimating the period of oscillation, the time it takes for one cycle of oscillation. We could do this by measuring the time between two adjacent peaks in the response, but a better way is to measure the elapsed time ( $\Delta t$ ) between two peaks (or troughs, or zero-crossings) of the response and the number of cycles (n) as illustrated in Figure 7.9. Then we can estimate the average period of oscillation as

$$T = \frac{t_n - t_o}{n} = \frac{\Delta t}{n} = \frac{10.0 \,\text{s}}{10 \,\text{cycles}} = 1.0 \,\text{s/cycle}.$$
 (7.11)

The corresponding frequency of oscillation  $(f_d \text{ (in Hz)})$  is the reciprocal of the period

$$f_d = \frac{1}{T} = \frac{1}{1.0 \,\text{s/cycle}} = 1.0 \,\text{cycles/s} = 1.0 \,\text{Hz}.$$
 (7.12)

The last step is to convert the units of this frequency from Hz to rad/s with the expression

$$\omega_d = f_d(2\pi) = 1.0 \,\text{cycles/s}(2\pi \,\text{rad/cycle}) = 6.28 \,\text{rad/s}.$$
 (7.13)

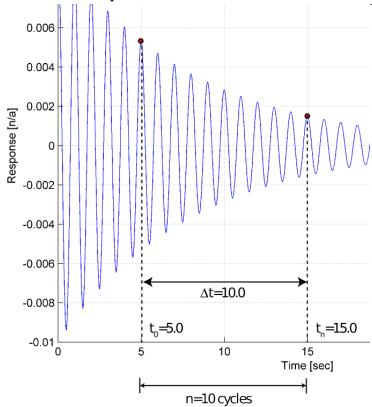


Figure 7.9: Illustration of measuring the period of oscillation.

It is important to notice that what we have estimated here is the **damped** natural frequency  $(\omega_d)$ , not the undamped natural frequency  $(\omega_n)$ . Again, the relationship between these two quantities is

$$\omega_n = \frac{\omega_d}{\sqrt{1 - \zeta^2}}. (7.14)$$

To estimate  $\omega_n$  we'll need to know (to estimate) the damping ratio  $(\zeta)$ .

#### 7.4.2 Measuring the Damping Ratio Via Logarithmic Decrement Method

The logarithmic decrement method is a technique to empirically identify the damping ratio ( $\zeta$ ) of a second-order underdamped model. The method is based on the characteristic time response of the model. The time response can be either the response to a step input or the free-response to a non-zero initial condition. The free-response to an initial condition is given in your textbook as

$$y_h(t) = Ce^{-\zeta\omega_n t} \sin(\omega_d t + \phi)$$
(7.15)

where  $\omega_n$  is the undamped natural frequency of the system and  $\omega_d = \omega_n \sqrt{1-\zeta^2}$  is the damped natural frequency. The two constants C and  $\phi$  are determined from the initial conditions.

To estimate the damping ratio can be estimated in the following way. First plot the response y(t) as a function of time. Choose two peaks of the oscillatory response  $y_0$  and  $y_n$  where  $y_0$  is the larger

value that happens earlier in time. Calculate the logarithmic decrement  $(\delta)$  as

$$\delta = \frac{1}{n} \ln \left( \frac{y_0}{y_n} \right)$$

where n is the number of cycles between  $y_0$  and  $y_n$ . Finally calculate the damping ratio as

$$\zeta = \frac{1}{\sqrt{1 + \left(\frac{2\pi}{\delta}\right)^2}}.$$

#### Example

Figure 7.8 illustrates the free response of a second-order model to an initial condition of y(0) = 0.01 and  $\dot{y}(0) = 0$ . The undamped natural frequency is  $2\pi \, ^{\rm rad}/_{\rm s}$ .

To calculate the logarithmic decrement we need to select two peaks from the response as shown in Figure 7.10<sup>1</sup>. These selected values, along with the equations above, result in  $\delta = 0.124$  and  $\zeta = 0.0198$ . This estimate is quite close to the value of 0.02 which was used to generate the example.

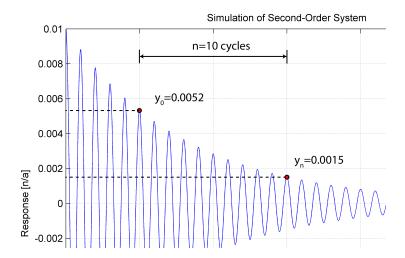


Figure 7.10: The added annotation illustrates the selection of "peaks" in the response to initiate the logarithmic decrement process.

#### Why It Works

The logarithmic decrement method is based on fitting a curve to the data. In this case the curve (the model) is the exponential amplitude of the second-order response

$$y_{env}(t) = Ce^{-\zeta\omega_n t}. (7.16)$$

This function is superimposed on the response in Figure 7.11.

<sup>&</sup>lt;sup>1</sup>The MATLAB function ginput() is handy for selecting the values from a figure window.

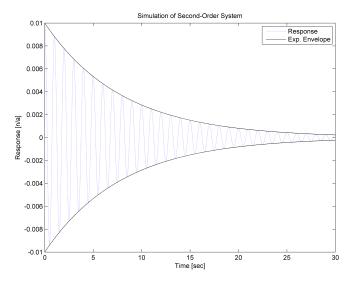


Figure 7.11: Second-order free response with the exponential envelope function included (7.16)

If we take the natural logarithm of this function we get a linear relationship between  $Y_{ln} = \ln(y_{env})$  and t:

$$Y_{ln} = \ln(y_{env}) = (-\zeta \omega_n)t.$$

This linear relationship is illustrated in Figure 7.12 where  $Y_{ln}$  is plotted versus time. The slope of the line is  $m = -\zeta \omega_n$ .

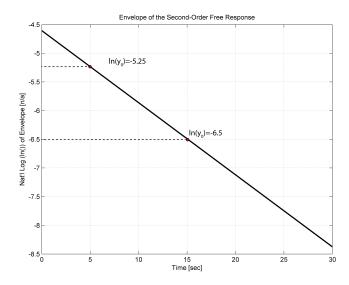


Figure 7.12: Plot of the exponential envelope shown in Figure 7.11, but here the natural logarithm  $(\ln())$  of the amplitude is plotted, i.e.,  $Y_{ln}$ .

Because we are using the second-order response model, we now just need to find the slope of the line in Figure 7.12 and solve for the damping ratio. The slope of the line can be expressed as

$$m = \frac{\ln(y_0) - \ln(y_n)}{t_0 - t_n} = -\zeta \omega_n \tag{7.17}$$

(7.18)

$$m = \frac{\ln(y_0) - \ln(y_n)}{t_n - t_0} = \zeta \omega_n. \tag{7.19}$$

(7.20)

We can use (7.18) or (7.20 directly, but we have to deal with the fact that we don't know  $\omega_n$ . It is important to note that the frequency of oscillation is the damped natural frequency ( $\omega_d$ ) which is related to the undamped natural frequency by the relationship

$$\omega_d = \omega_n \sqrt{1 - \zeta^2}. (7.21)$$

The logarithmic decrement method uses the peaks of the oscillating response to get around this trouble. We know that the change in time is an integer number of periods of oscillation at the damped natural frequency

$$t_n - t_0 = \frac{n}{\omega_d/2\pi}. (7.22)$$

Now we can substitute (7.22) and (7.21) into (7.20) to get

$$\frac{\ln\left(\frac{y_0}{y_n}\right)}{n(2\pi)}\omega_d = \zeta\omega_n$$

and

$$\frac{\ln\left(\frac{y_0}{y_n}\right)}{n(2\pi)}\omega_n\sqrt{1-\zeta^2} = \zeta\omega_n.$$

Next, let

$$\delta = \frac{1}{n} \ln \left( \frac{y_0}{y_n} \right)$$

and we solve for  $\zeta$ 

$$\zeta^2 = \frac{\left(\frac{\delta}{2\pi}\right)^2}{1 + \left(\frac{\delta}{2\pi}\right)^2}$$

$$\zeta = \frac{1}{\sqrt{1 + \left(\frac{2\pi}{\delta}\right)^2}}.$$

It is interesting to consider that the logarithmic decrement method is doing this linear-fit with just two data points. It would be interesting to do this linear fit with multiple data points using a least-squares approach to identify the damping ratio. One advantage (along with a more precise result) is that you would be able to quantify the "goodness-of-fit" for the data using the correlation coefficient  $(R^2)$ .

Glossary 65

## $\begin{array}{c} {\rm Glossary} \\ {\overline{\rm 7.5 \quad Glossary}} \end{array}$

Notation	Description	Symbol	Page List
damped natural frequency	The actual frequency of oscillation (in rad/s of the response of a second-order model with damping (loss) included: $\omega_d = \omega_n \sqrt{1-\zeta^2}$	$\omega_d$	51
damping ratio	"The damping ratio is a dimensionless measure describing how oscillations in a system decay after a disturbance"—from Wikipedia!	ζ	49
second-order model	A linear, ordinary, time-invariant, second-order differential equation. For our purposes we assume the model is underdamped or undamped.		49
undamped natural frequency	The theoretical frequency of oscillation (in $^{\rm rad}/_{\rm s}$ ) of the response of a second-order model if there was no damping (loss) in the system.	$\omega_n$	49, 51

Glossary Glossary

### Chapter 8

# Case Study: Strain and Acceleration of Cantilevered Beam

In Chapter 5 we examined the data acquisition system for measuring the static response of a cantilevered beam using a single strain gage. In this chapter we'll consider adding an accelerometer to the tip of the beam to simultaneously measure the strain (at the root) and the acceleration (at the free-end) of the beam. The DAQ system is illustrated in Figure 8.1.

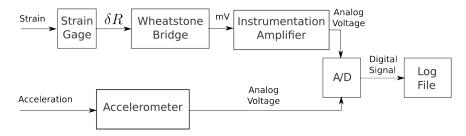


Figure 8.1: A data acquisition including strain gage and accelerometer.

#### 8.1 Amplifying the Strain Signal

Hopefully in Chapter 5 you discovered that the output of a strain gage (with a Wheatstone bridge) is a small voltage—typically just a few millivolts. This is a bit of a problem because a typical A/D operates with much larger input range: e.g.,  $\pm 1.0 \,\mathrm{V}$  or  $\pm 10.0 \,\mathrm{V}$ . As we discussed in Chapter 3, the resolution of an A/D is finite, so using an A/D with a range much larger than the anticipate analog voltage input will have poor performance.

To improve the situation we can add an amplifier—the instrumentation amplifier shown in Figure 8.1. The gain of the amplifier (K) is constant multiplier so that the output voltage  $(V_o)$  is the product of the input voltage  $(V_i)$  and the gain, i.e.,

$$V_o = K(V_i).$$

Exercise 8.1 Ideally we would choose the gain of our amplifier such that the maximum anticipated

voltage will be equivalent to the full-scale range setting of our A/D. Consider the following strain gage scenario:

- Strain gage factor: GF = 2.0
- Wheatstone bridge excitation voltage:  $V_s = 9.0 \,\mathrm{V}$
- Maximum anticipated strain:  $\epsilon = 0.001 \, \mathrm{m/m}$
- A/D range:  $E_{FSR} = \pm 1.0 \,\mathrm{V}$

What would be an appropriate gain setting for an amplifier that we would use in the DAQ system shown in Figure 8.1?

**Solution** First we need to predict the maximum voltage that we might anticipate from the Wheat-stone bridge. Using (5.6

$$V_o \approx V_s \left( \frac{(GF)\epsilon}{4} \right).$$

and the parameters in the exercise we can anticipate the the maximum voltage output  $V_o = 4.5 \,\mathrm{mV}$ . We would like to amplify this so that the output of the amplifier is equivalent to the full scale range (1 V). A gain of 222.2 would give us exactly 1 V of maximum output.

#### 8.2 Accelerometer

Unsurprisingly an accelerometer is a device for measuring acceleration. Below are exercises to explore the application of a particular accelerometer to measuring the free response of a cantilevered beam.

Exercise 8.2 Look-up the datasheet for the Analog Devices ADXL 335 accelerometer. (The datasheet can be found online and is also available on the course website.)

- Read the section "Theory of Operation". Write a few (1-2) sentences to summarize how the device measures acceleration.
- Assuming a supply voltage of 3 V...
  - What is the maximum measurable acceleration: in g's and in m/s<sup>2</sup>?
  - What is the sensitivity of the accelerometer (with appropriate units)?
  - (Hint: these quantities are listed in the "Specifications" section.)

#### Solution

Exercise 8.3 Given the cantilevered beam properties described in Exercise 7.6 and the free response of the model given in (7.5),

- What is the maximum acceleration at the free-end of the beam you might anticipate for the free response of the system with the following initial conditions: y(0) = 10 cm and  $\dot{y}(0) = 0$ ? (Hint: you will need to differentiate the expression (7.4) and you can assume  $\zeta = 0$  and  $\phi = 0$ . Check your units!)
- Given this maximum acceleration and the sensitivity of the ADXL 335 from the previous exercise, what is the maximum voltage you should expect as output from an ADXL 335 mounted at the free-end of the beam?

8.2 Accelerometer 69

**Solution** We need to differentiate twice the expression from (7.4) with  $\zeta = 0$  and  $\phi = 0$ .

$$y(t) = C(\cos(\omega_n t))$$

Using (7.6) to evaluate the constant C with these conditions we find that  $C = y_0$ , so...

$$y(t) = y_o(\cos(\omega_n t)) \tag{8.1}$$

$$\dot{y}(t) = y_o * \omega_n \left( -\sin(\omega_n t) \right) \tag{8.2}$$

$$\ddot{y}(t) = y_o * \omega_n^2 \left( -\cos(\omega_n t) \right) \tag{8.3}$$

$$\ddot{y}(t) = 10 \,\mathrm{cm}(32.6 \,\mathrm{rad/s})^2 \,(-\cos(\omega_n t))$$
 (8.4)

$$\ddot{y}(t) = 10 \,\mathrm{cm}(32.6 \,\mathrm{rad/s})^2 \,(-\cos(\omega_n t))$$
 (8.5)

$$\ddot{y}(t) = 106 \,\mathrm{m/s^2} \left(-\cos(\omega_n t)\right) \tag{8.6}$$

$$\ddot{y}(t) = 10.8 \,\mathrm{g} \left(-\cos(\omega_n t)\right) \tag{8.7}$$

So the amplitude of the acceleration is 10.8 g. The sensitivity of the ADXL 335 is  $300\,\mathrm{mVg}$  which indicates that the maximum output from the accelerometer is  $10.8*300=3240\,\mathrm{mV}=3.24\,\mathrm{V}$ . However, the maximum acceleration the device can sense is  $\pm 3\,\mathrm{g}$ , so we should probably start with an initial displacement of less than  $10\,\mathrm{cm}!$