


TRONXY 3D PRINTER


X1

ASSEMBLY GUIDE

V.02

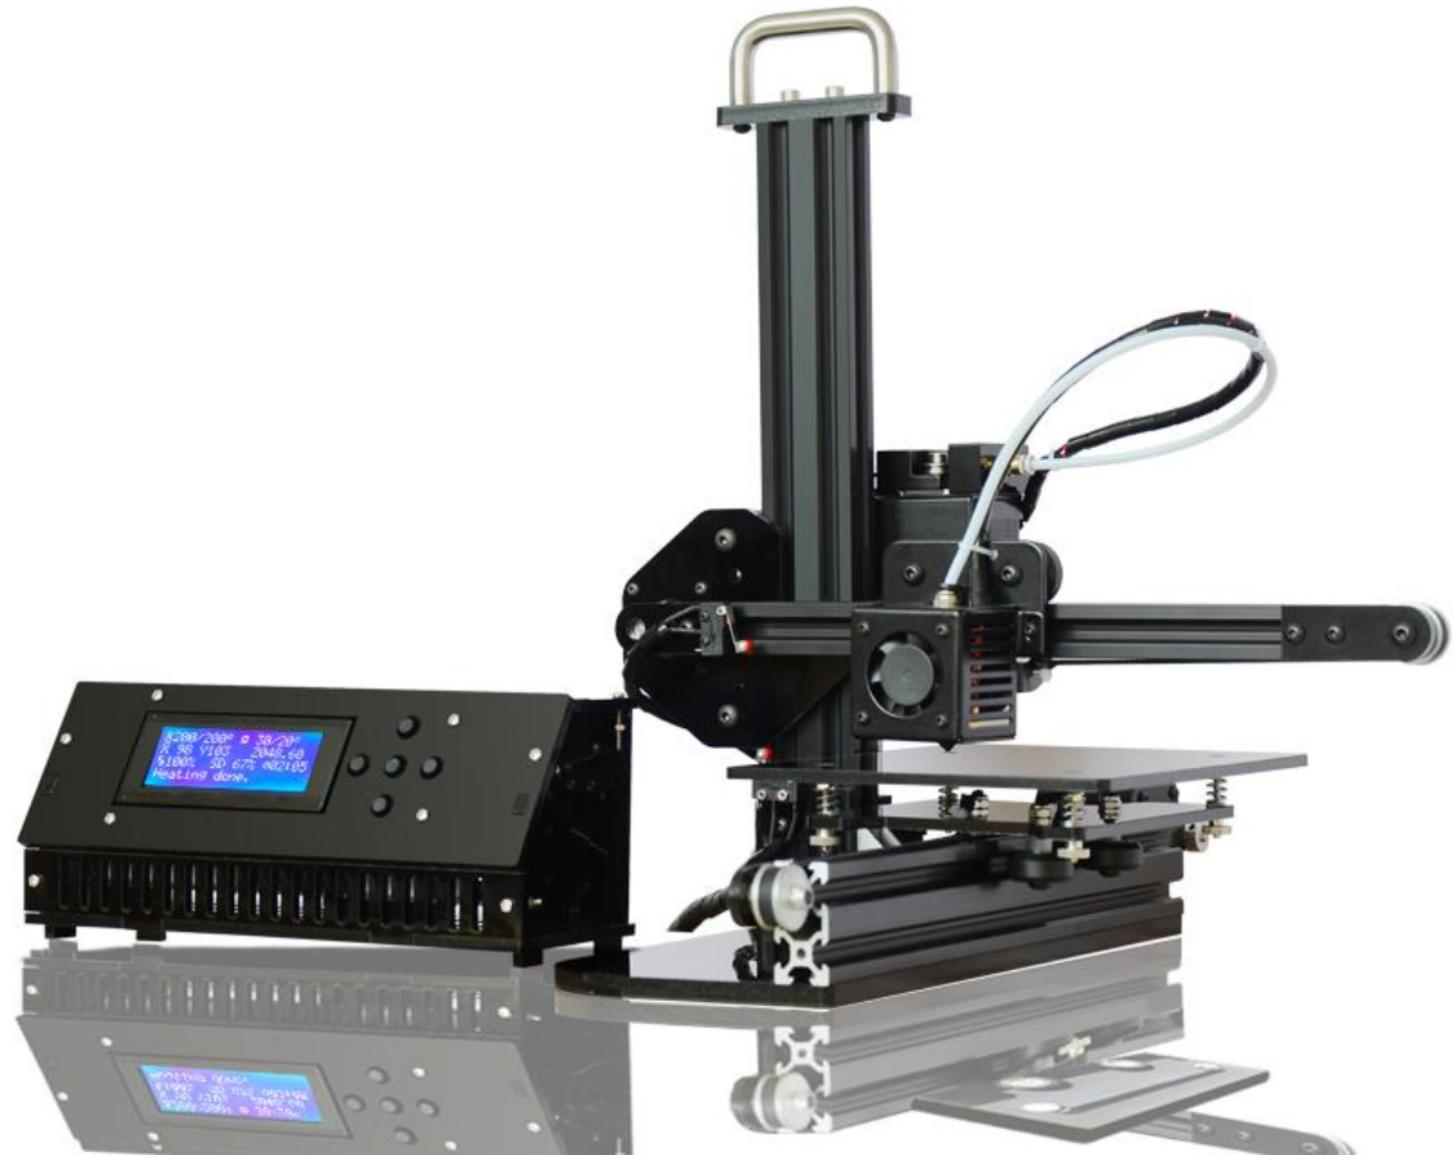

Step 1 Assemble Base Frame



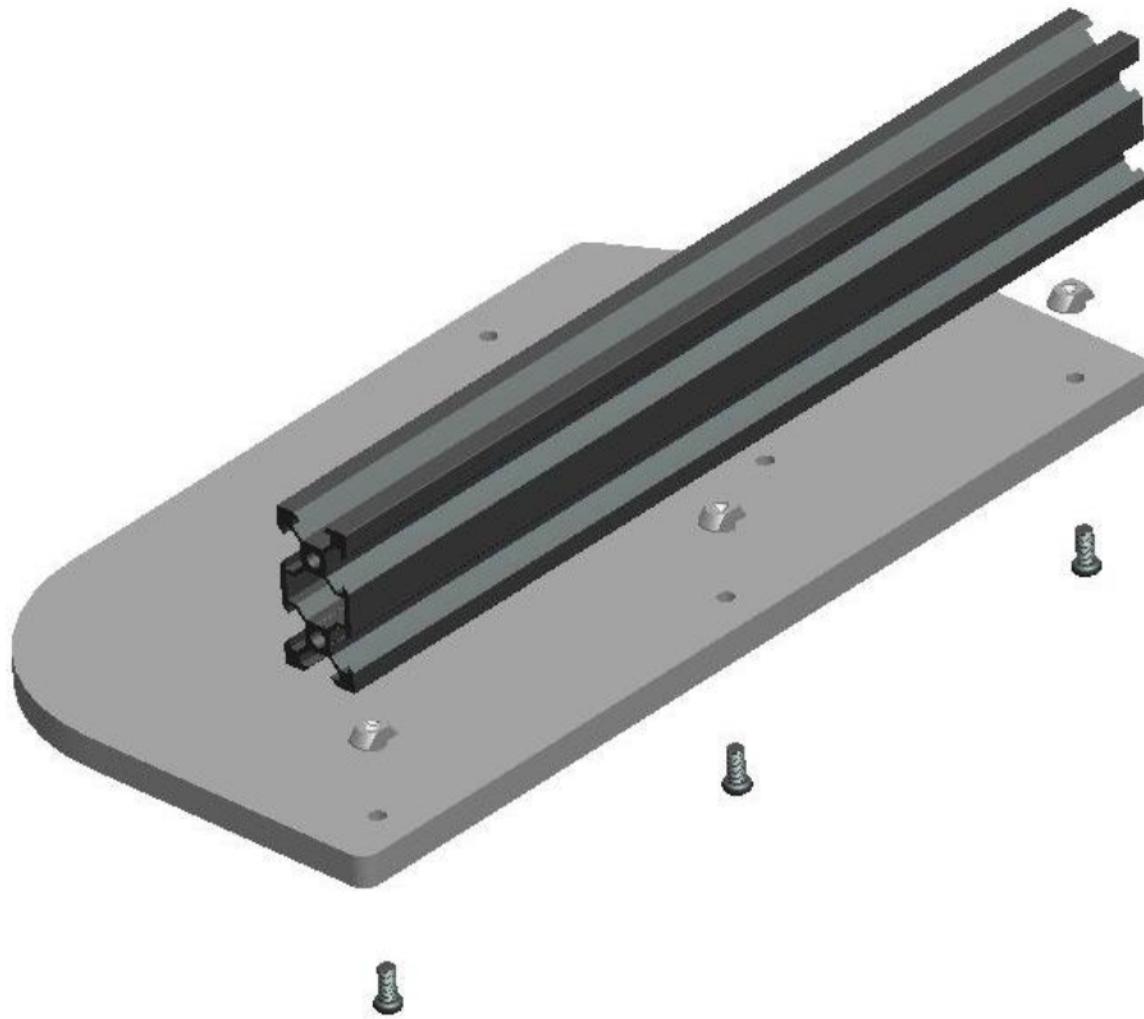


Parts:

2040 Aluminium profile 250mm – 1pcs
Base Plate – 1pcs
M4-8mm screw – 3pcs
M4 T-Nut – 3pcs

- Put the aluminium profile on the base plate, secure them with 3pcs M4-10mm screws & T-Nut

Step 2 Assemble Base Frame

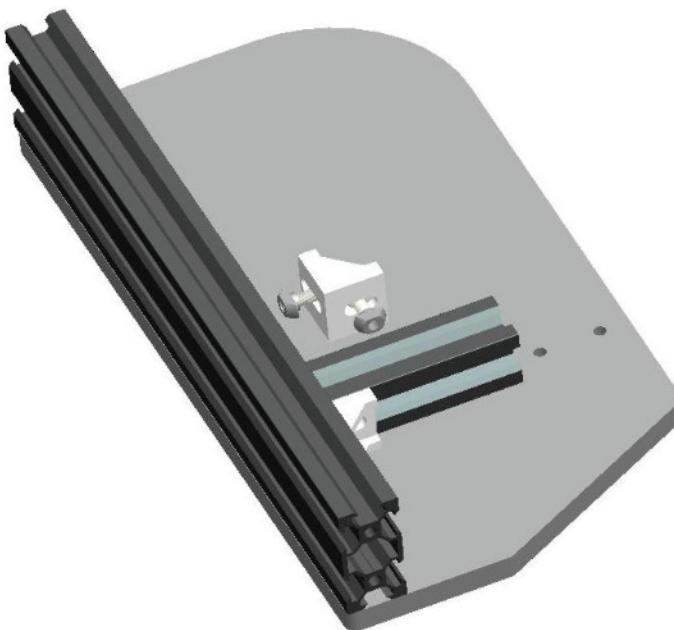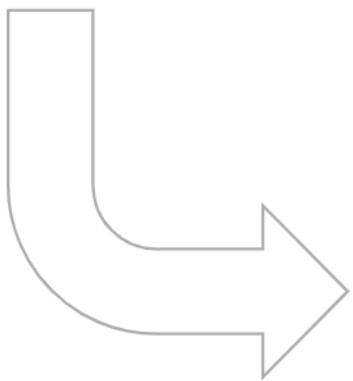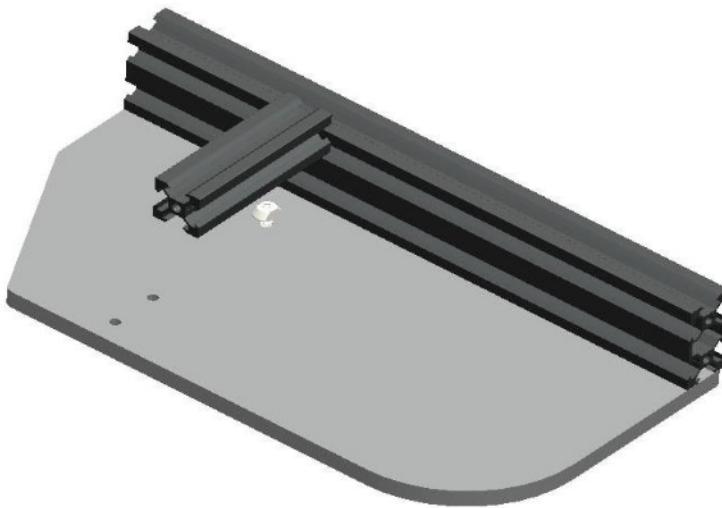


Parts:

2020 Aluminium profile 70mm – 1pcs
Corner bracket – 2pcs
M4-8mm screw – 5pcs
M4 T-Nut – 5pcs

- Put the '2020 aluminium profile 70mm' on the base plate, secure them with 1pcs M4-8mm screws & T-Nut
- Fix the aluminium profiles using 2pcs corner bracket, secure them with M4-8mm screws and M4 T-Nuts.

Step 3 Install Z Slide rail

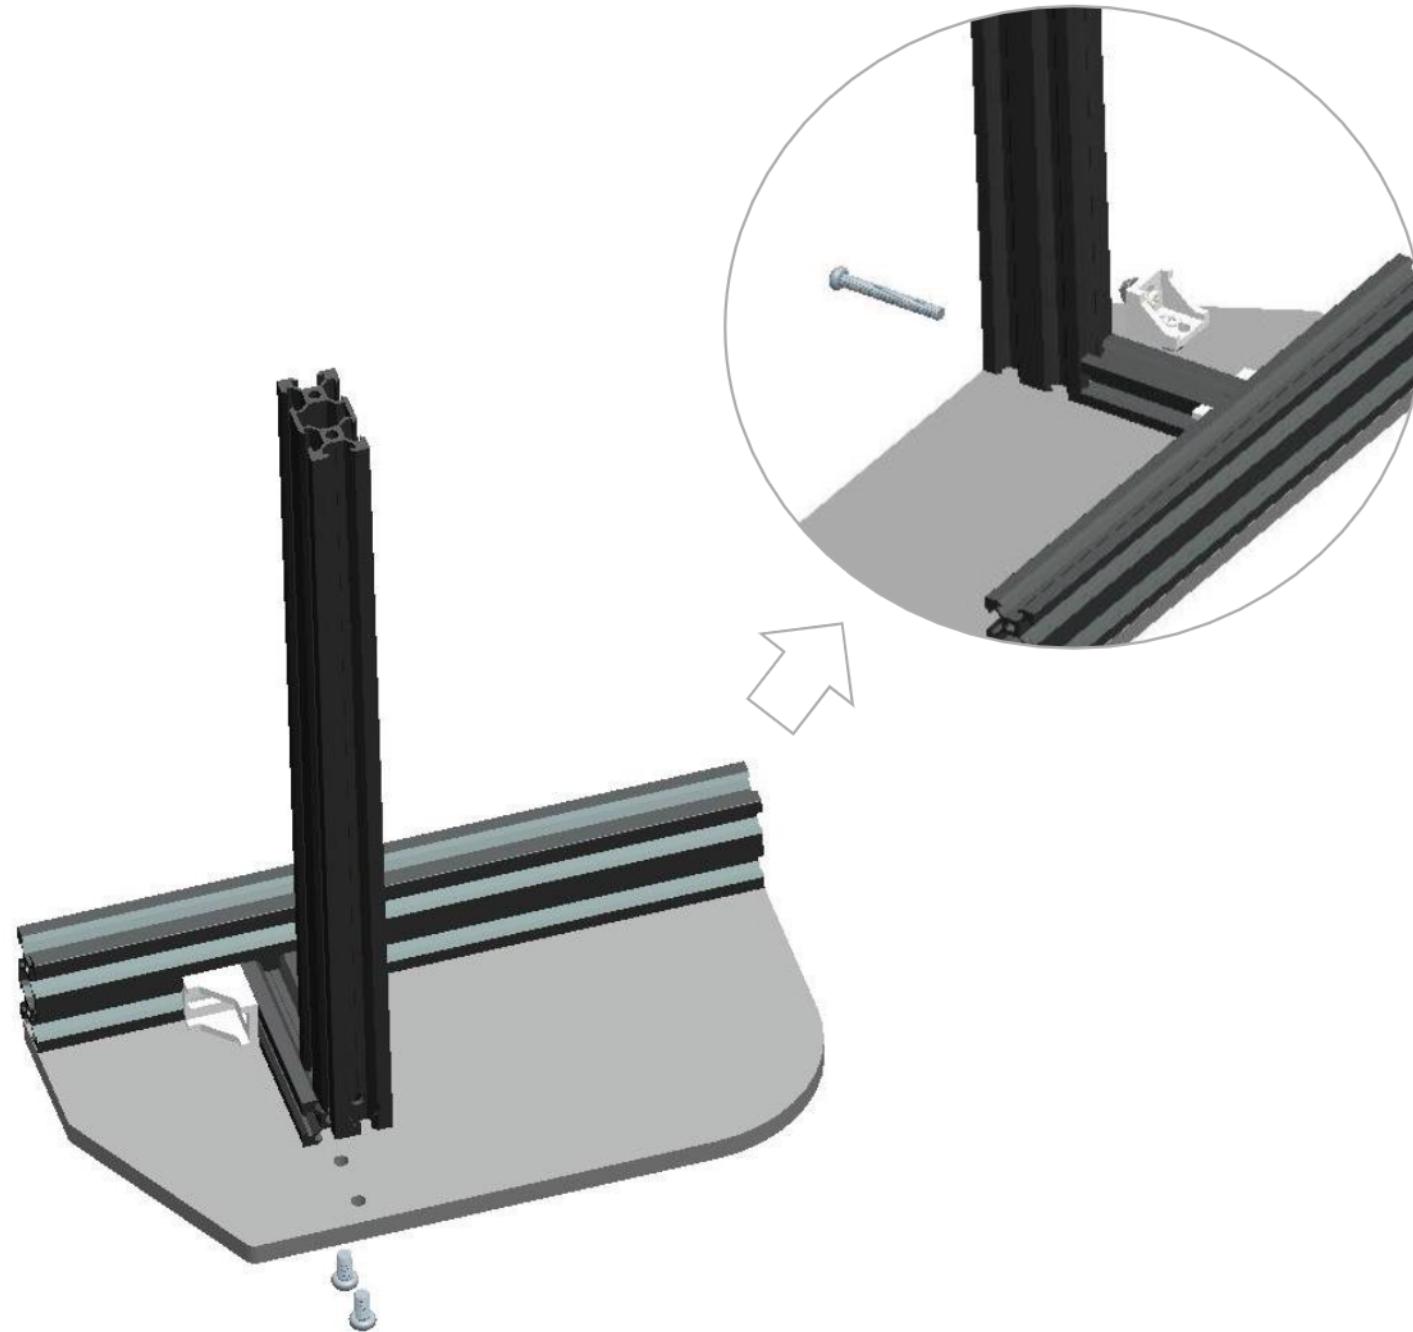


Parts:

2040 Aluminium profile 310mm – 1pcs
Corner bracket – 1pcs
M5-10mm screw -2pcs
M5-40mm screw – 1pcs
M4-8mm screw – 2pcs
M4 T-Nut – 2pcs

- Place '2040 aluminium profile 310mm' on the base plate , secure them with 2pcs M5-10mm screws.
- Fix the 2pcs aluminium profile with 1pcs corner bracket, secure them with 2pcs M4-8mm screws and M4 T-Nut.
- Use 1pcs M5-40mm screw to make them more stable

Step 4 Fix the Z slide rail

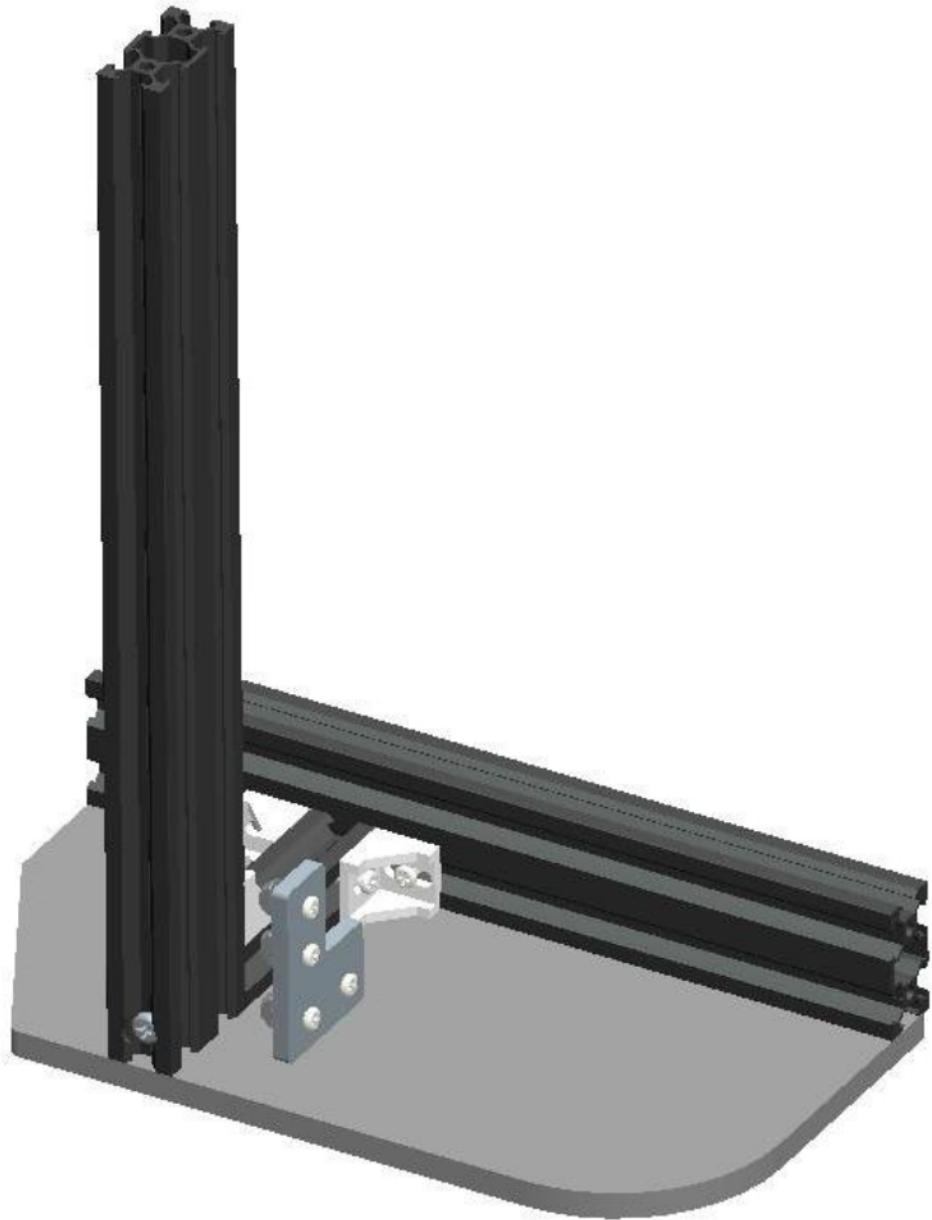

Parts:

L-shape Acrylic block – 1pcs

M4-8mm screw – 4pcs


M4 T-Nut – 4pcs

- Place 1pcs L-shape acrylic block on the aluminium profile, secure them with 4pcs M4-8mm screws & T-Nut


Step 5 Assemble Y axis Motor

Parts:

42 stepper motor – 1pcs
GT2-16 Pulley (with grub screw in it)– 1pcs
Limit switch – 1pcs
Y motor mount (Acrylic) – 1pcs
M3-8mm screws – 4pcs
M4-8mm screw – 3pcs
M4 T-Nut - 3pcs
M2-10mm screw – 2pcs
M2 Nut – 2pcs

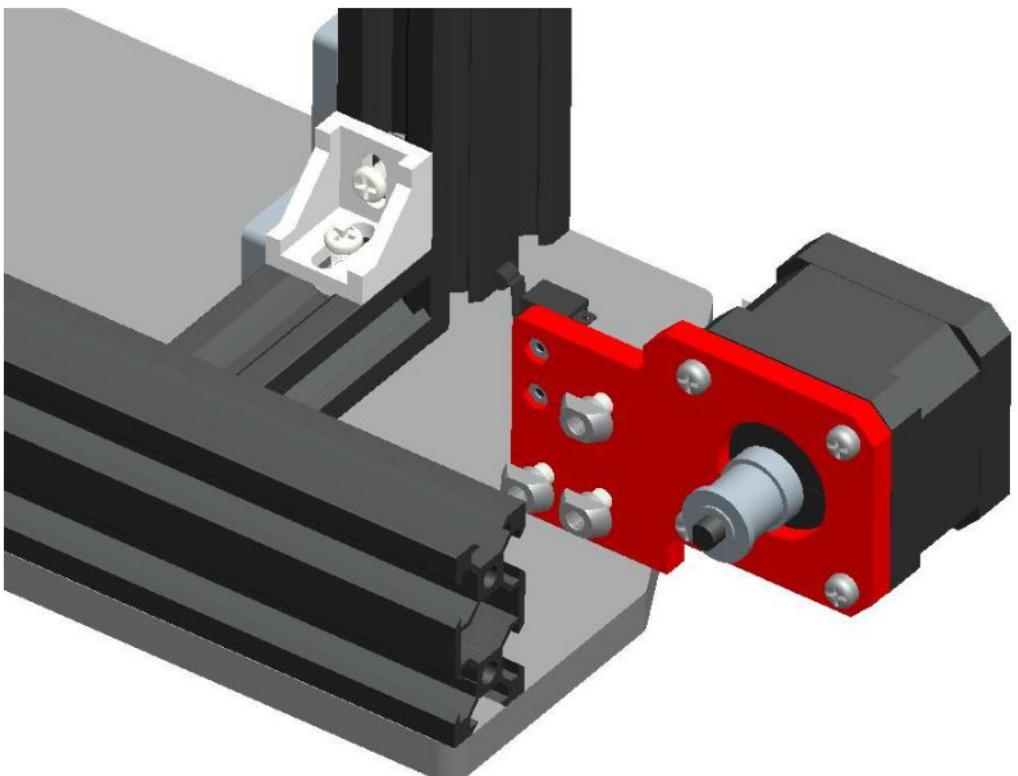

- Insert the GT2-16 pulley to the motor shaft, tighten the grub screw in the pulley. Next assemble the 42 stepper motor and the Y motor mount(Acrylic) with 4pcs M3-8mm screws .
- Secure the limit switch to motor mount using 2pcs M2-10mm screws and nuts.
- secure the motor mount to the back of the Y slide rail using 3pcs M4-8mm screws and T-nuts.

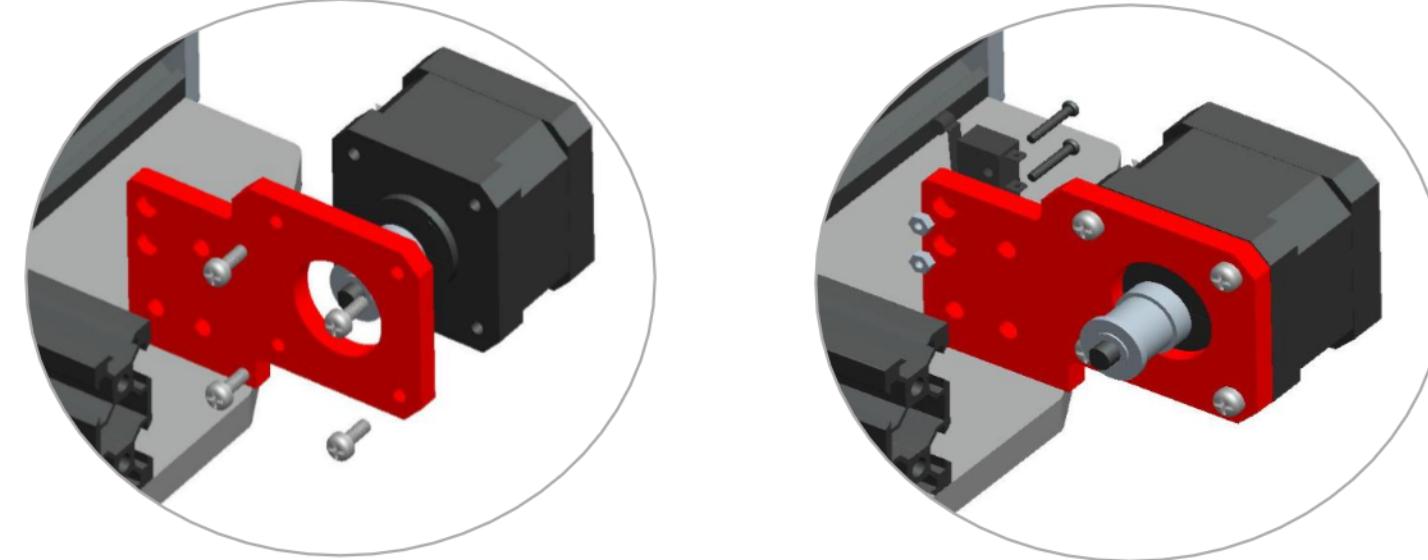

Step 6 Assemble Bed Frame

Parts:

Bed frame (acrylic) – 1pcs

Wheel – 3pcs


Plastic pillar – 3pcs

M5-30mm- 3pcs

M5 nut – 3pcs

GT2 Timing belt – 1pcs

Zip-ties – 1pcs

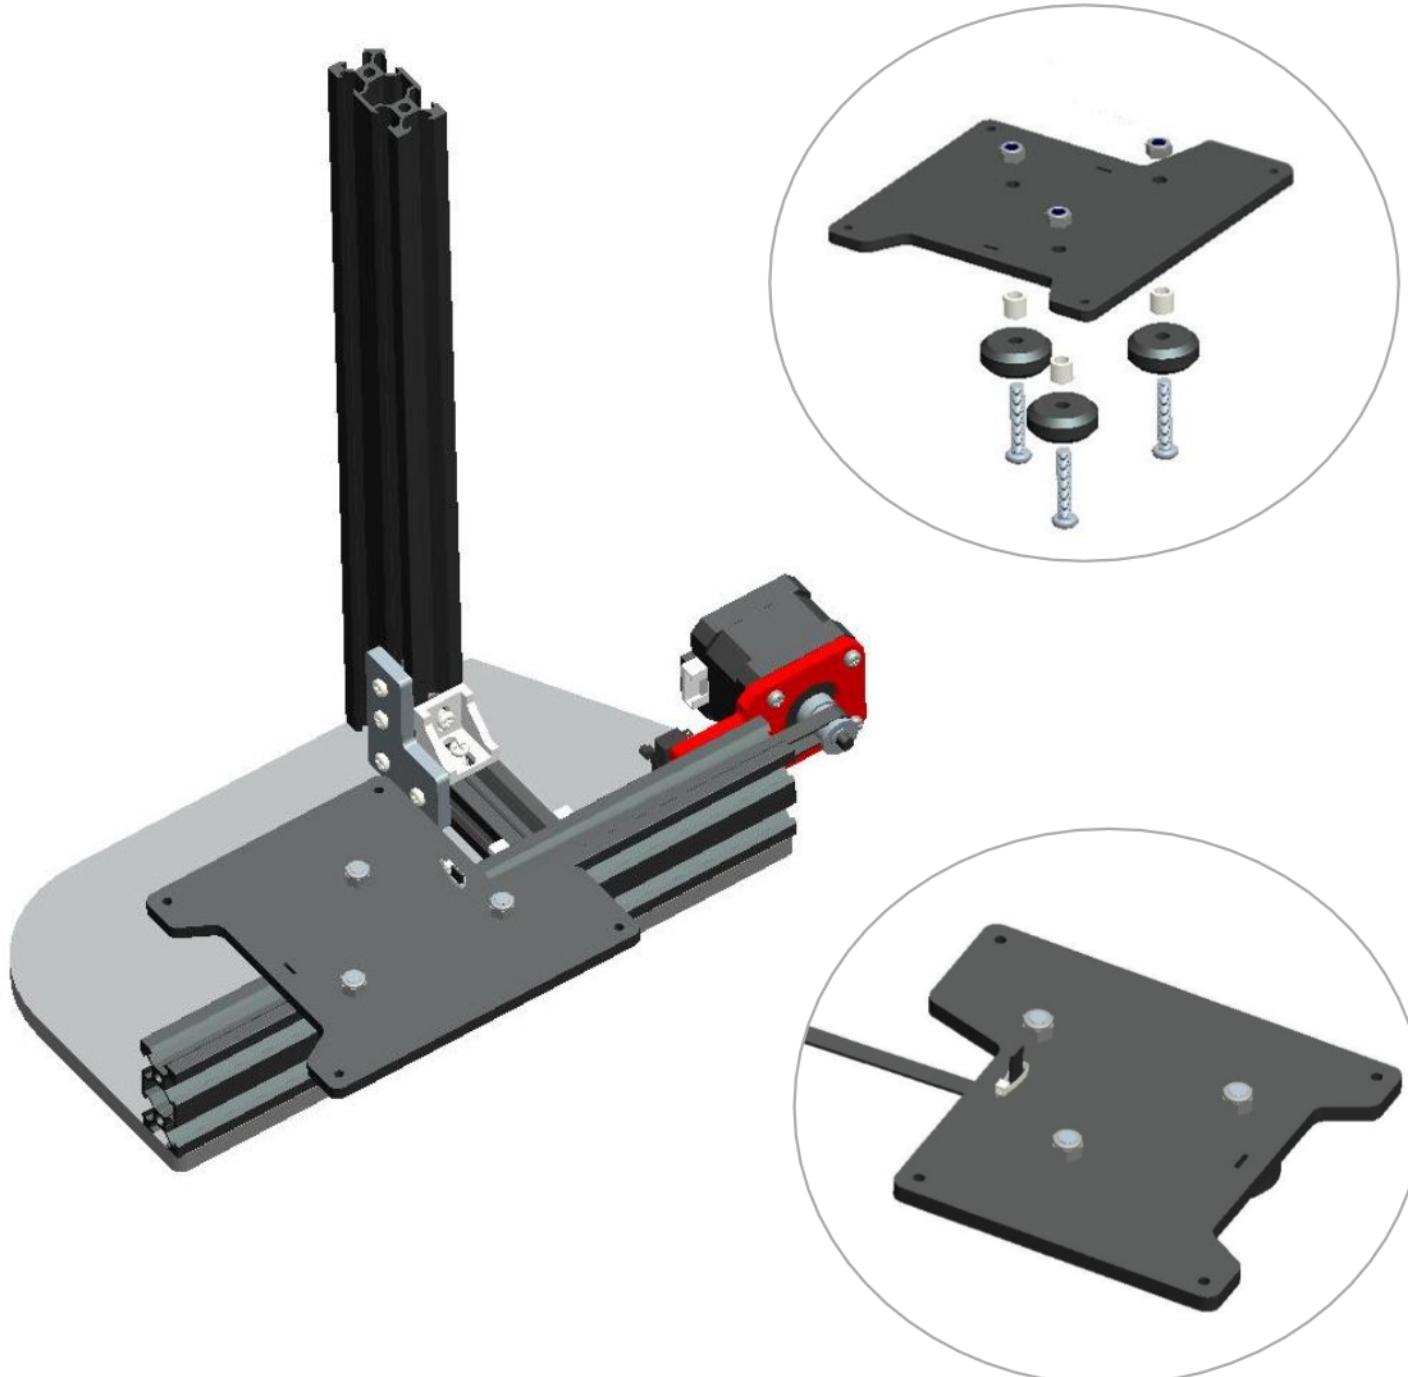


- Secure the wheels in place using M5-30mm screws and nuts ,using plastic pillar between wheel and bed frame.
- Tighten one end of the timing belt to the bed frame using a zip-ties.
- Next slide the base frame to the 2040 aluminium profile .

Step 7 Assemble Y-axis Belt Pulley

Parts:

Y Pulley mount (acrylic) – 1pcs
Belt pulley – 1pcs
M5-25mm screw – 1pcs
M5 Nut – 2pcs
M6 washer – 2pcs
M5 washer – 2pcs
M4-8mm screw – 3pcs
M4 T-Nut - 3pcs

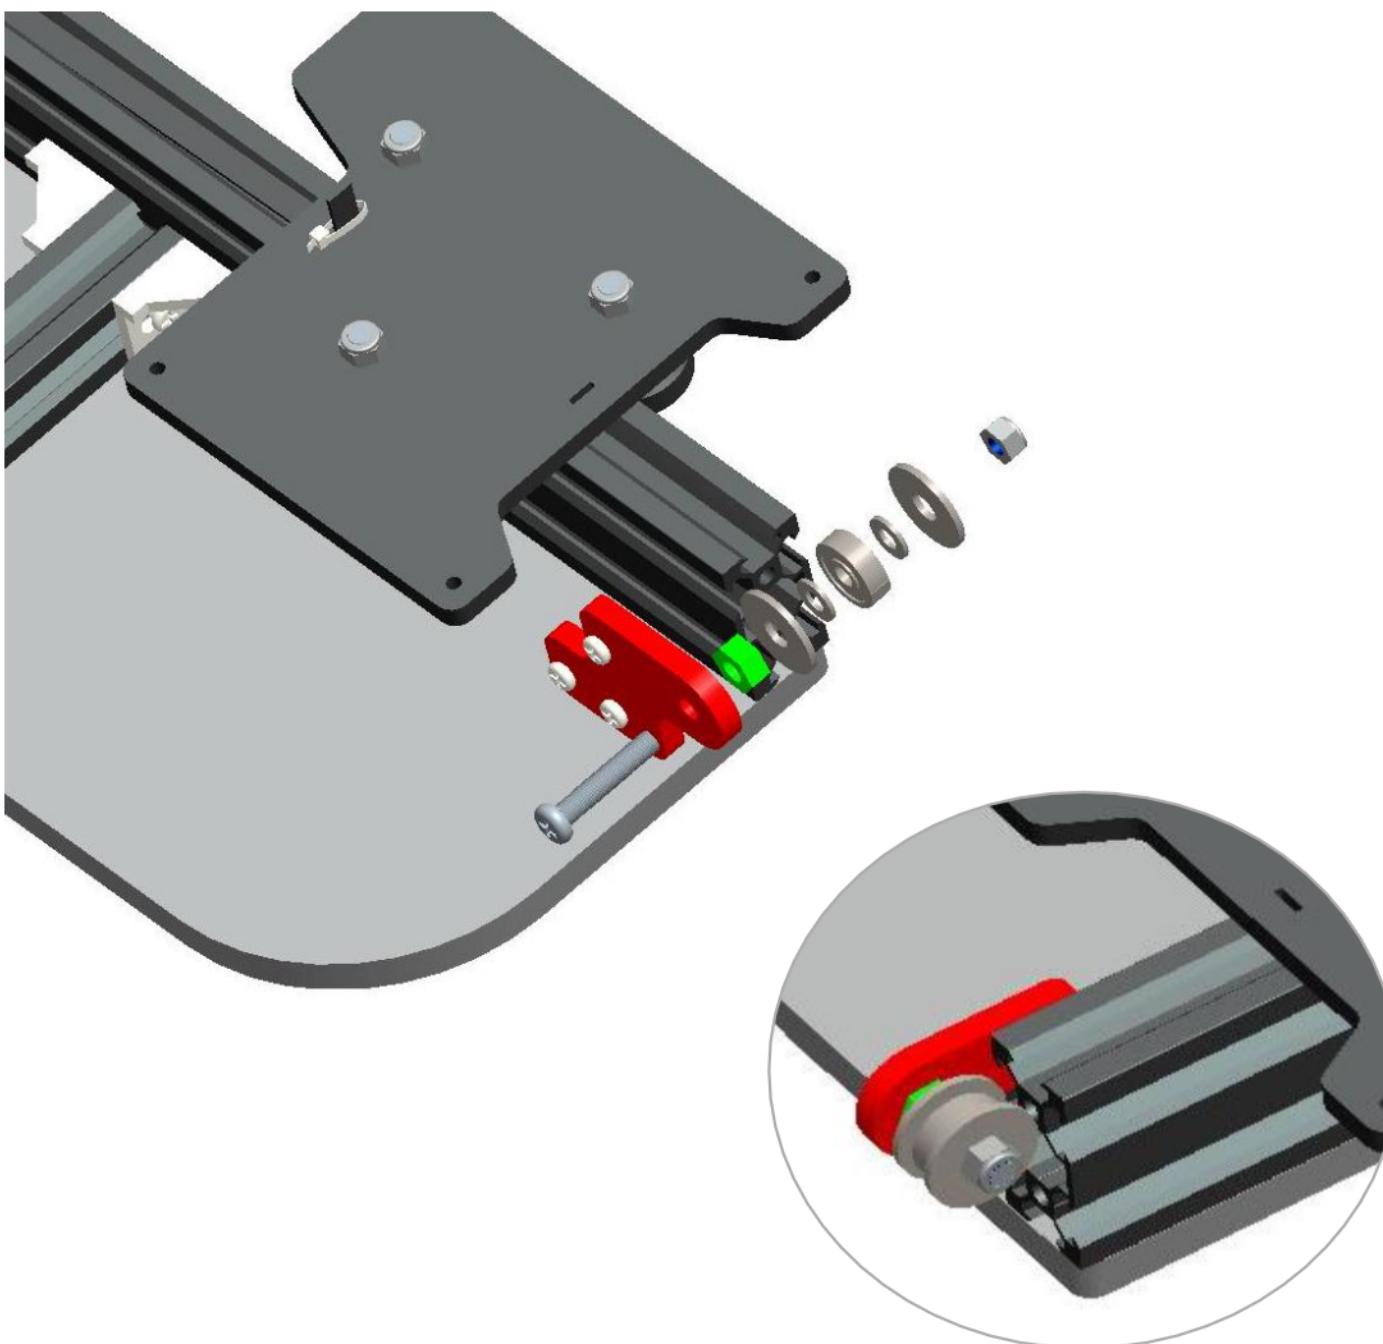


- Take 1pcs M5-25mm screw and insert the Pulley mount, secure it with M5 nut , then insert the washers and belt pulley , secure them using M5 nut.
 - Secure the Y belt pulley assembly to the front of the Y slide rail using 3pcs M4-8mm screws and nuts.
- ⚠** Tighten screws gently to avoid damaging the acrylic.

Step 8 Install Y axis Timing Belt

Parts:

Zip-ties – 1pcs

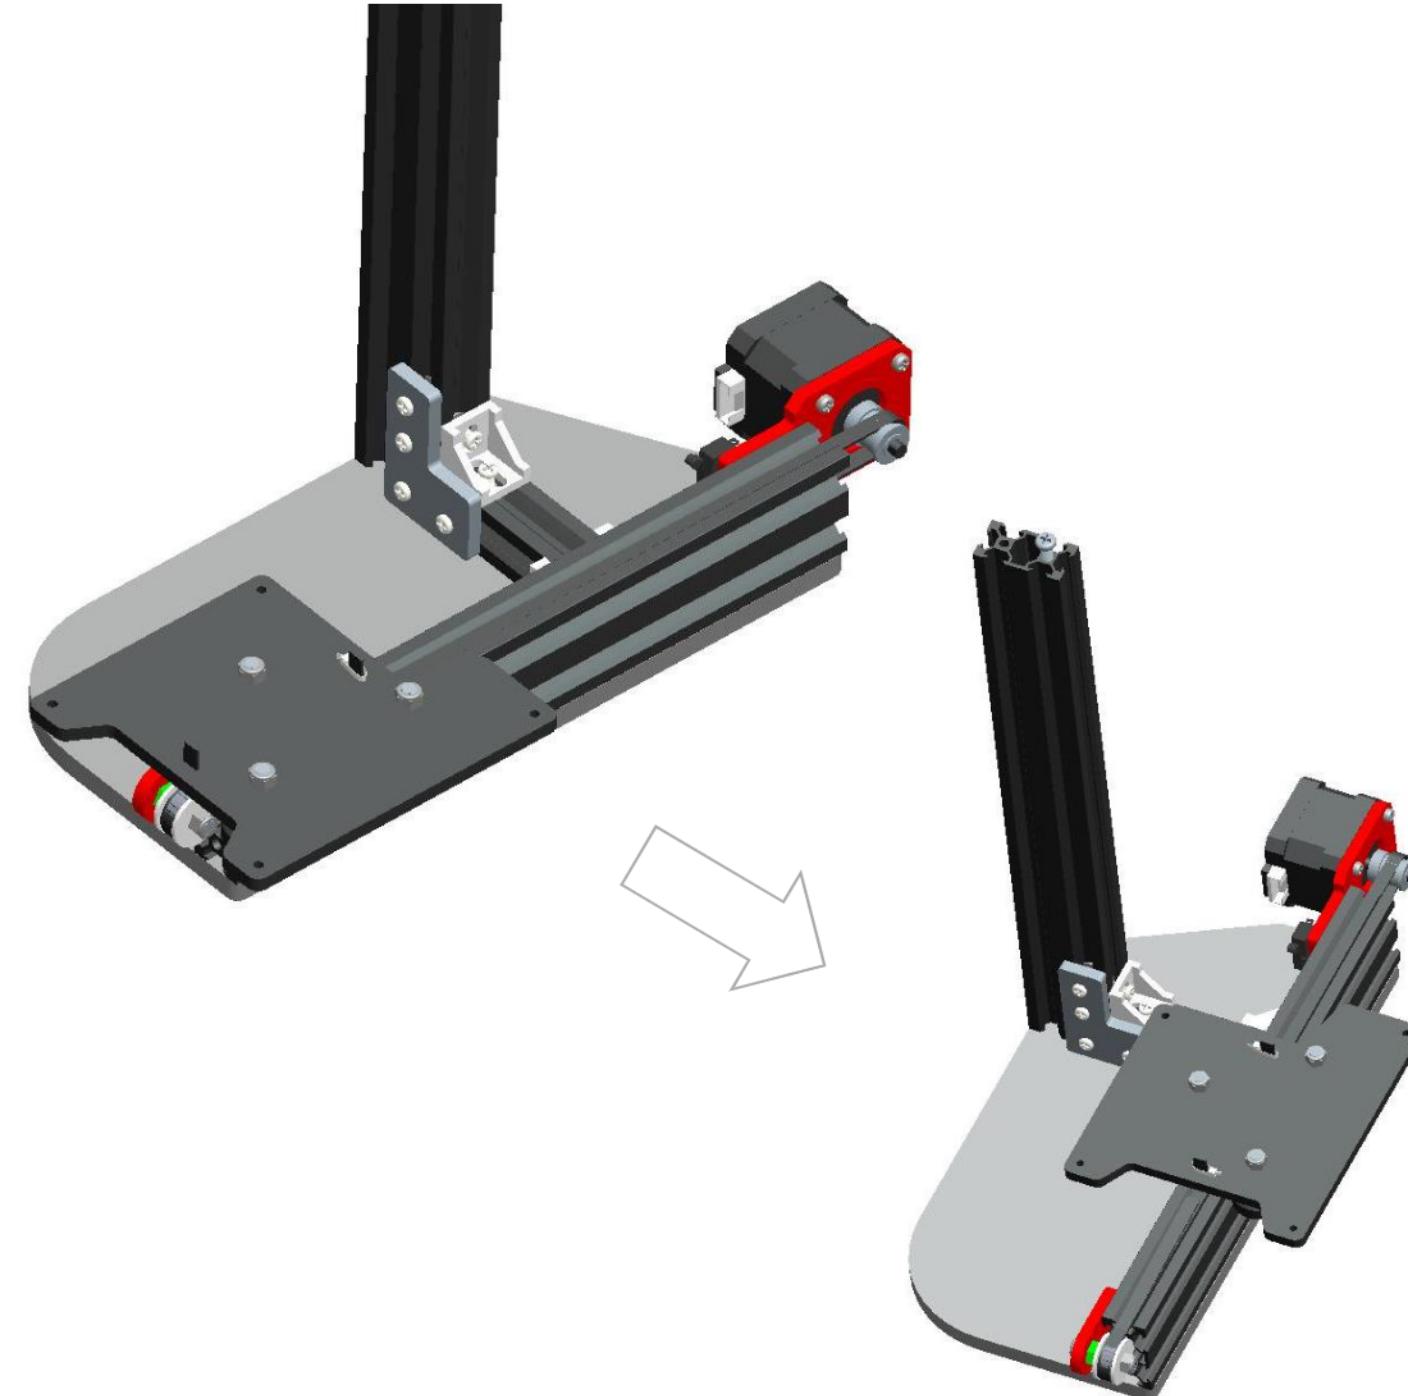

- Run the other end of timing belt along the aluminium profile, through the Y-GT2-16 Pulley and Belt pulley . Then tighten it to the bed frame using zip-ties as shown in the picture .

Step 9 Assemble Z Carriage

Parts:

2020 Aluminium profile 285mm – 1pcs

X-motor mount (acrylic) – 1pcs

Extruded bracket – 1pcs

Brass nut – 1pcs

Plastic pillar – 6pcs

Wheel – 3pcs

M5-40mm screw – 3pcs




M5 Locknut – 3pcs

M3-8mm screw – 3pcs

M4-8mm screw – 2pcs

M4 T-Nut - 2pcs

- Insert 3pcs M5-40mm screws to X-motor mount , and then scure it to the aluminium profile using 2pcs M4-8mm screws and T-nuts.
- Put the wheels into M5-40mm screws, using plastic pillars between wheel and acrylic, secure the Extruded bracket using M5 nuts.
- Place the brass nut on the extruded bracket, scure it using 3pcs M3-8mm screws .

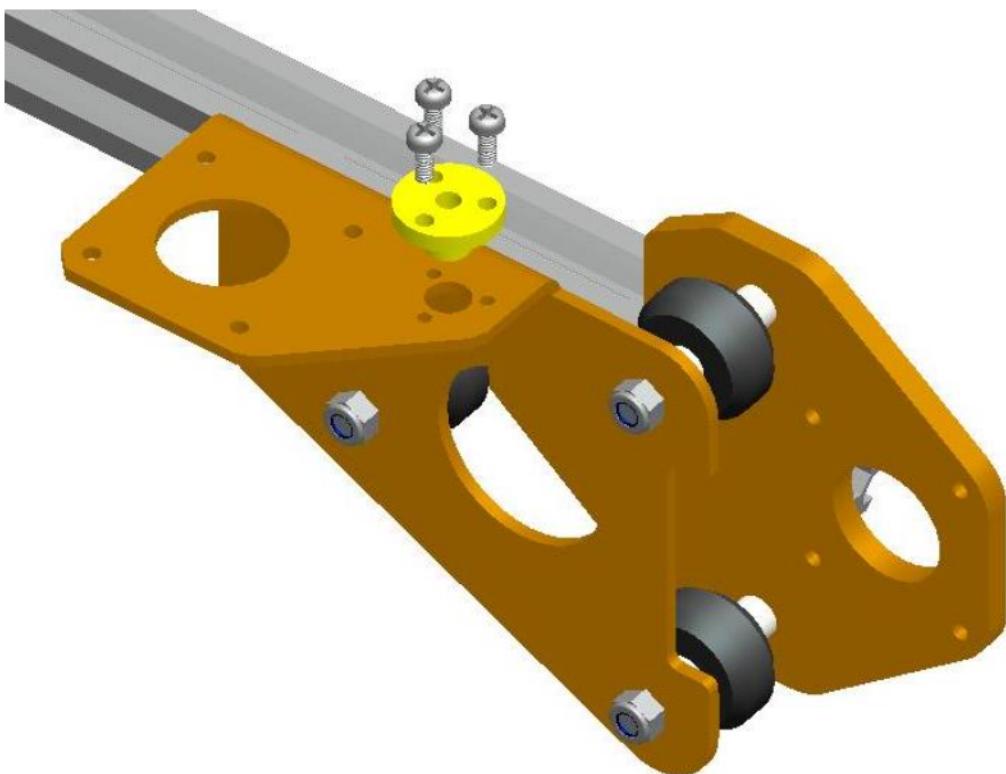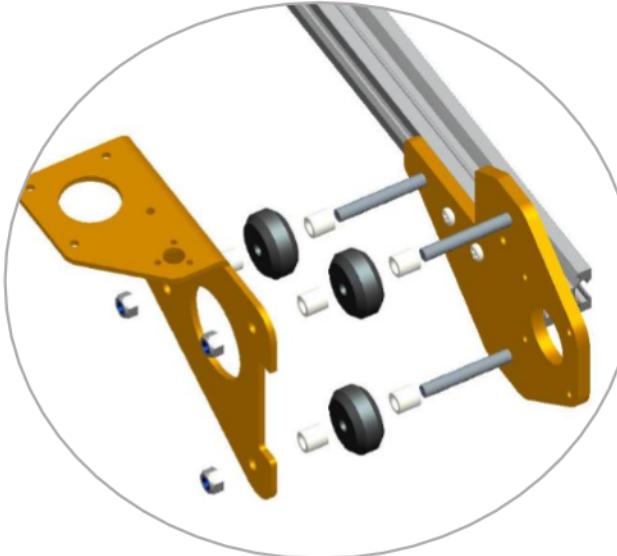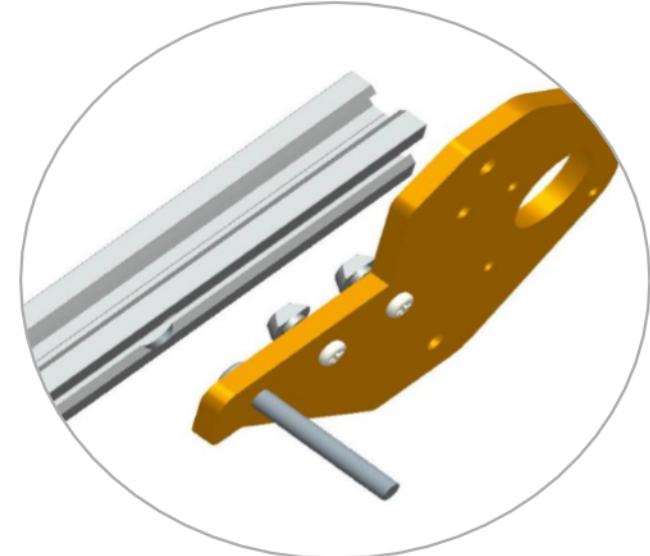


Step 10 Install Z carriage

Parts:

42 stepper motor – 1pcs


GT2-16 Pulley (with grub screw in it)– 1pcs

M3-8mm screws – 4pcs

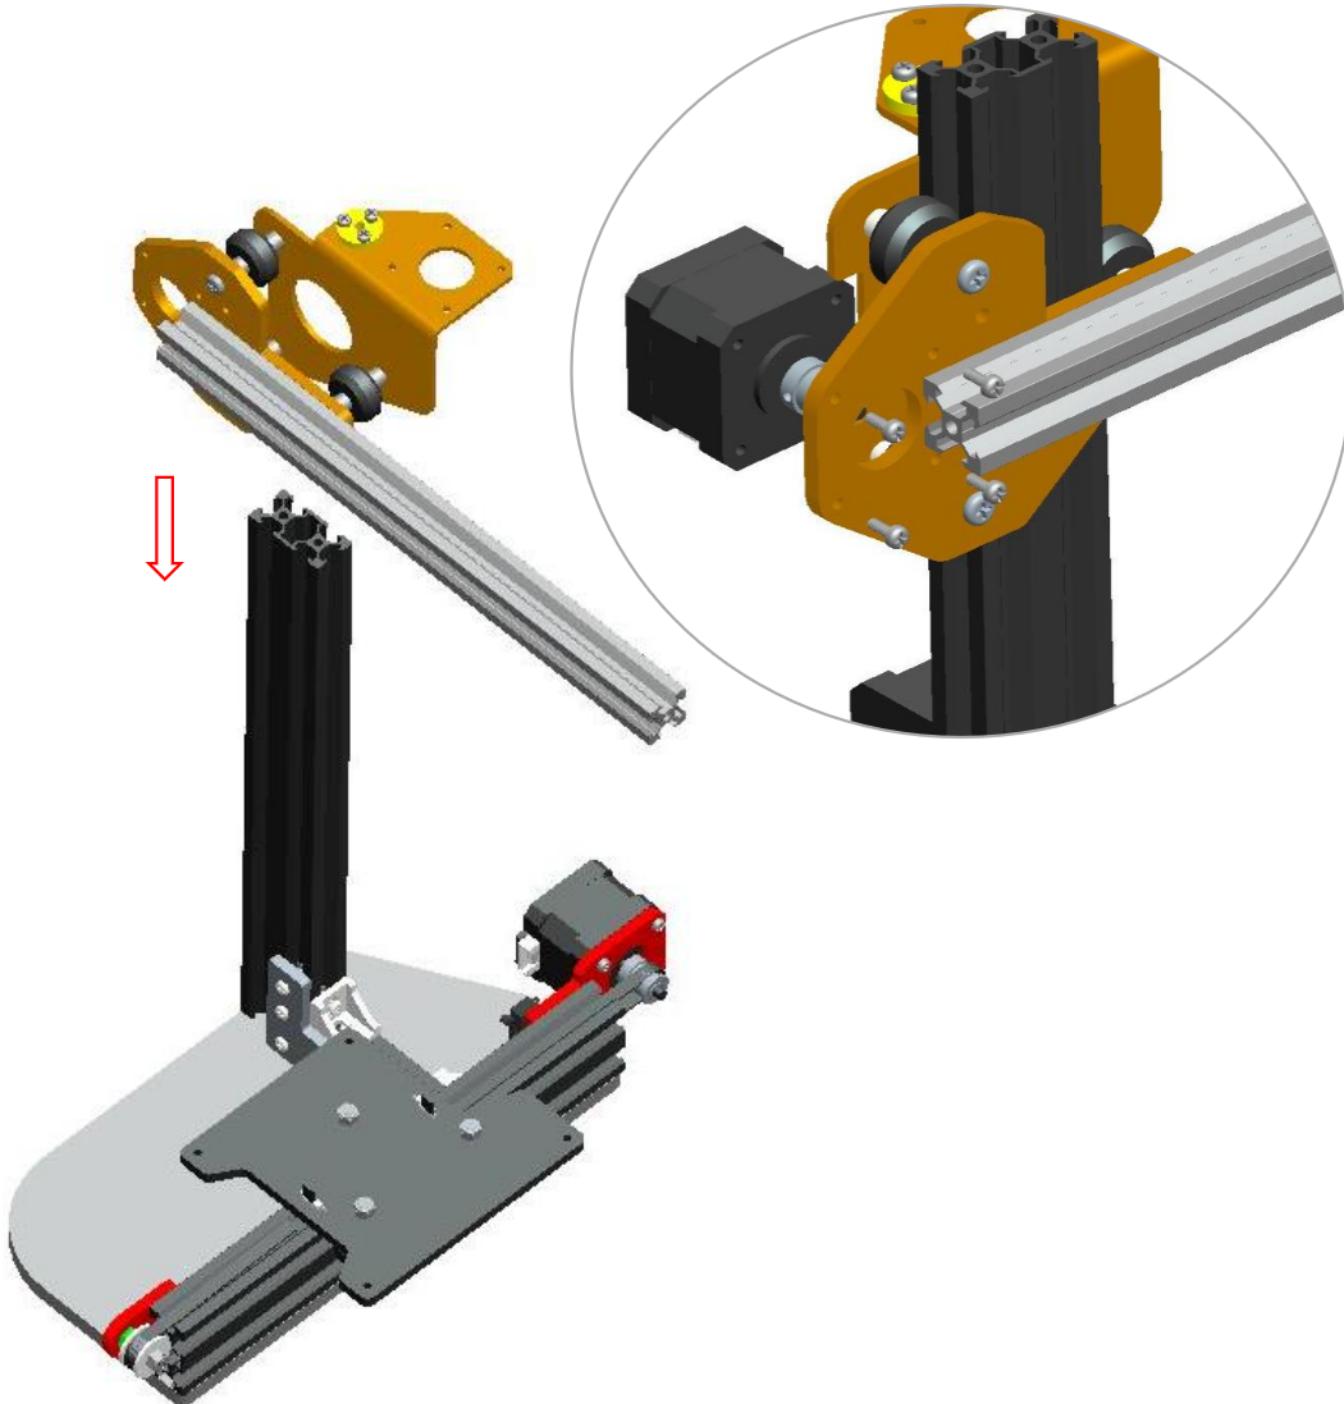

- Carefully insert the X-axis assembly to the Z slide rail
- Insert the GT2-16 pulley to the motor shaft, tighten the grub screw in the pulley, then place the X stepper motor to the motor mount, secure them with 4pcs M3-8mm screws .

Step 11 Insert Extruder Assembly

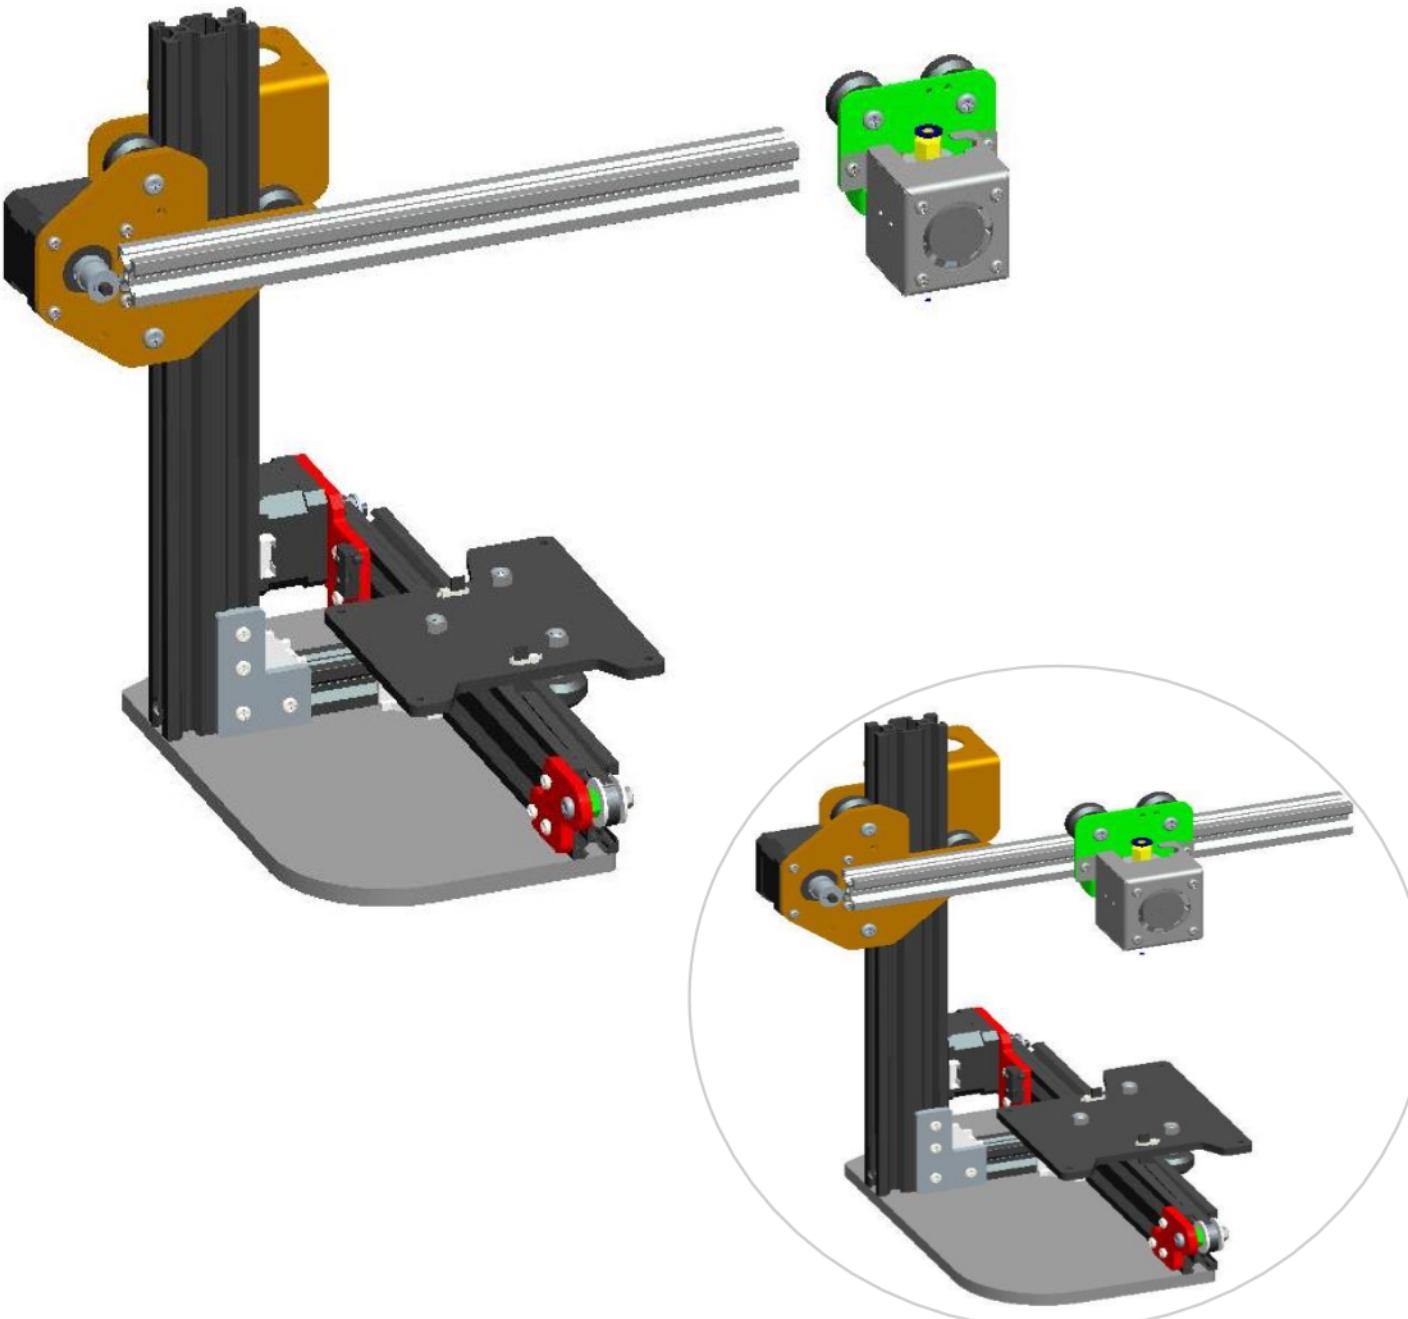

Parts:

Extruder assembly – 1pcs

- Carefully insert the extruder assembly to the X slide rail.

Step 12 Assemble X axis Endstop & Pulley

Parts:

Belt pulley – 1pcs

Limit switch – 1pcs

X Pulley mount (acrylic) – 1pcs

X endstop mount (acrylic) – 1pcs

M5-25mm screw – 1pcs

M5 Nut – 1pcs

M5 Locknut – 1pcs

M6 washer – 2pcs




M5 washer – 2pcs

M4-8mm screw – 4pcs

M4 T-Nut - 4pcs

M2-10mm screw – 2pcs

M2 Nut – 2pcs

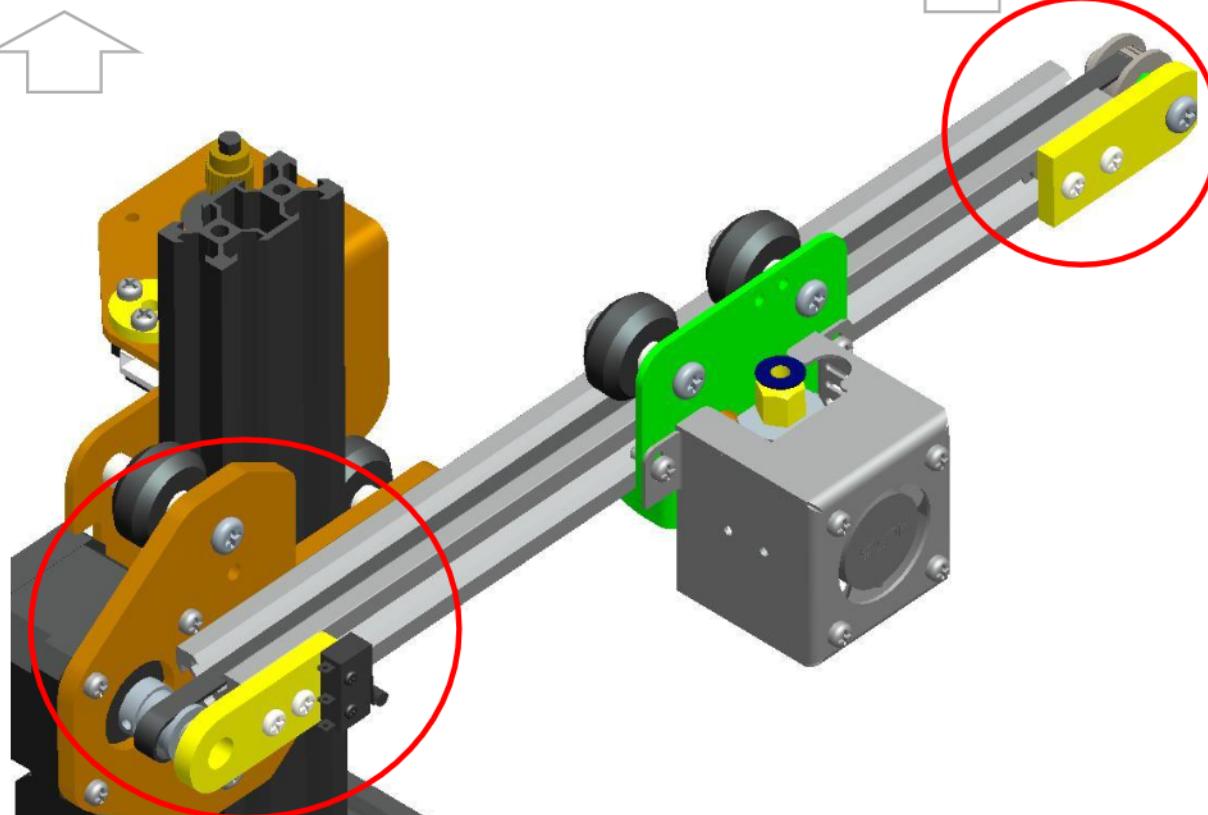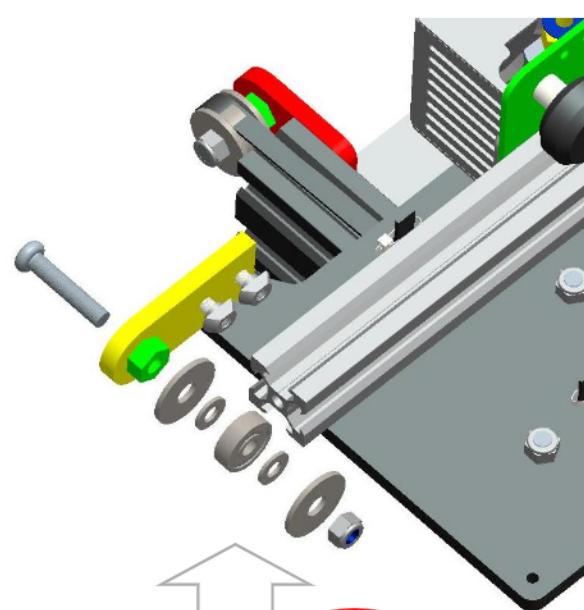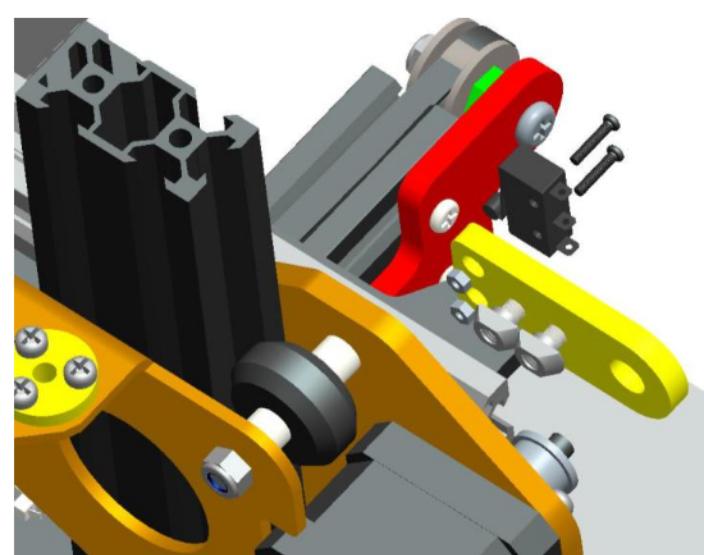


- Secure the limit switch to X endstop mount using 2pcs M2-10mm screws and nuts. Then place the X endstop mount to the left end of the X slide rail using 2pcs M4-8mm screw and T-nuts.
- Take 1pcs M5-25mm screw and insert the Pulley mount, secure it with M5 nut , then insert the washers and belt pulley , secure them using M5 locknut.
- Secure the X belt pulley assembly on the right of the X slide rail using 2pcs M4-8mm screws and nuts.

Step 13 Install X axis Timing Belt

Parts:

GT2 Timing belt – 1pcs

Zip-ties – 2pcs


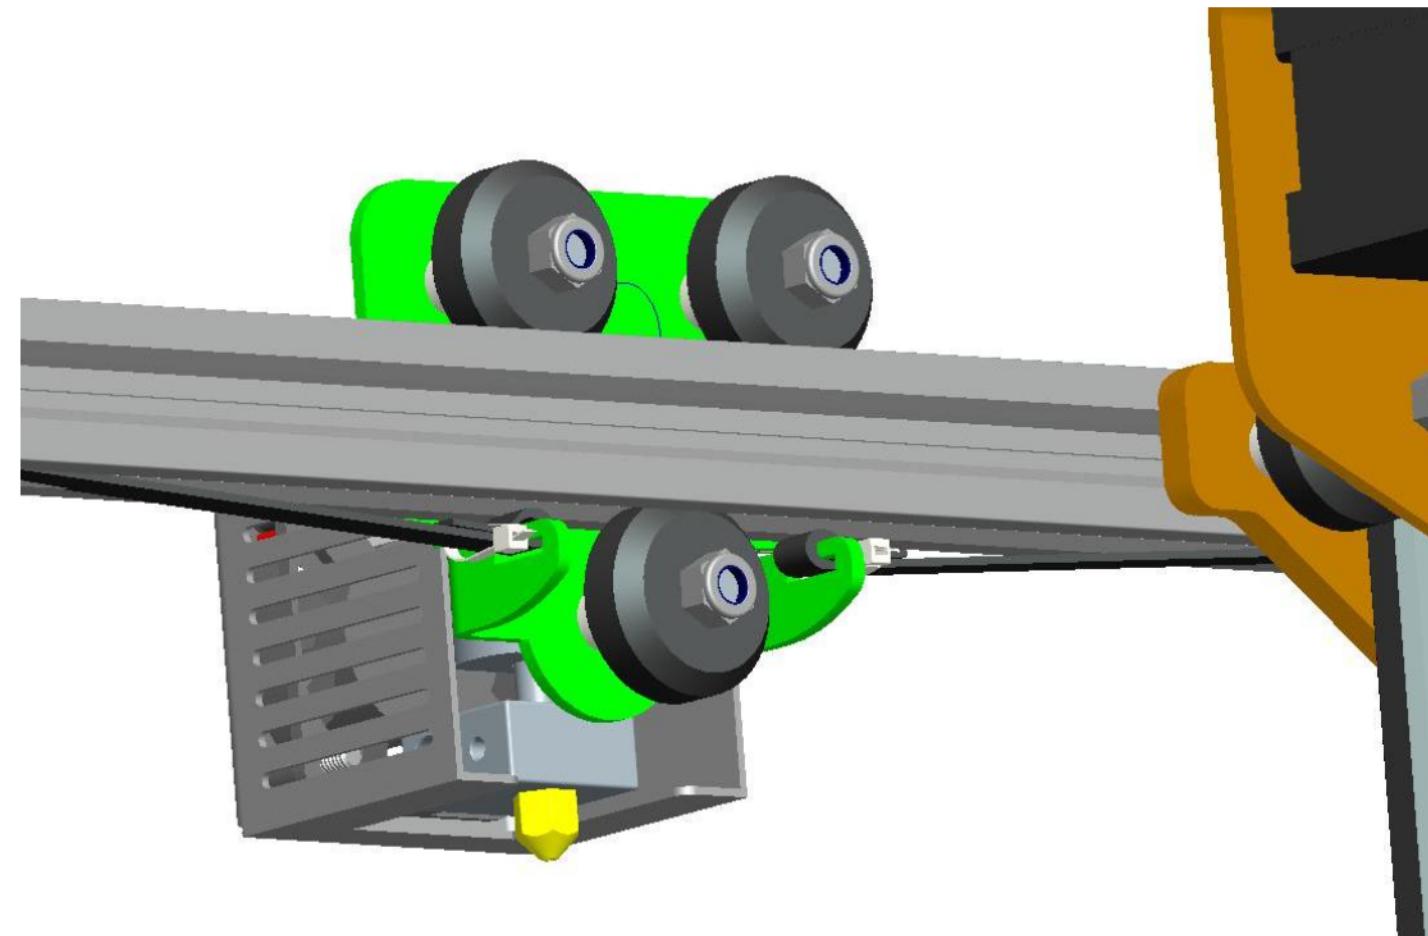


- Tighten one end of the timing belt to the belt hole using a zip-ties which back of the extruder
- Run the other end of timing belt along the aluminium profile, through the X-GT2-16 Pulley and Belt pulley . Then tighten it to another belt hole using a zip-ties, as shown in the picture .

Step 14 Assemble Z motor


Parts:

42 Stepper motor – 1pcs
Z-motor seat – 1pcs
Coupling (with grub screw in it) – 1pcs
Threaded rod 260mm – 1pcs
M3-8mm screw – 4pcs
M4-12mm screw – 2pcs
M4 T-Nut – 2pcs

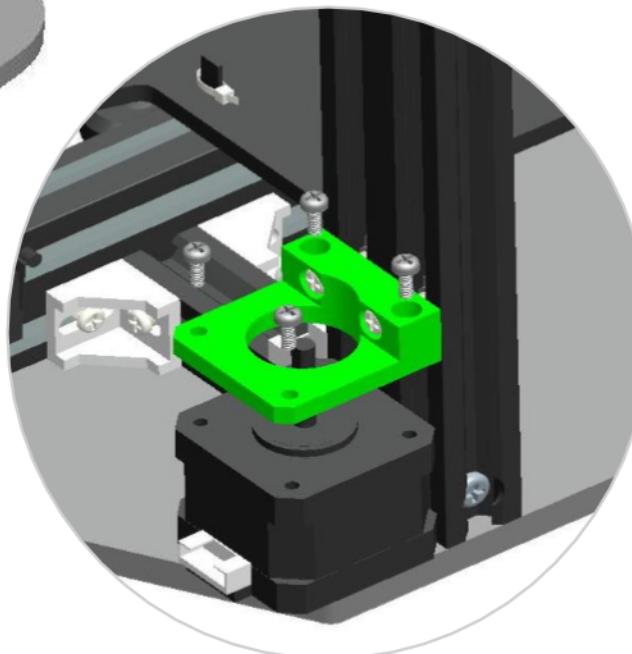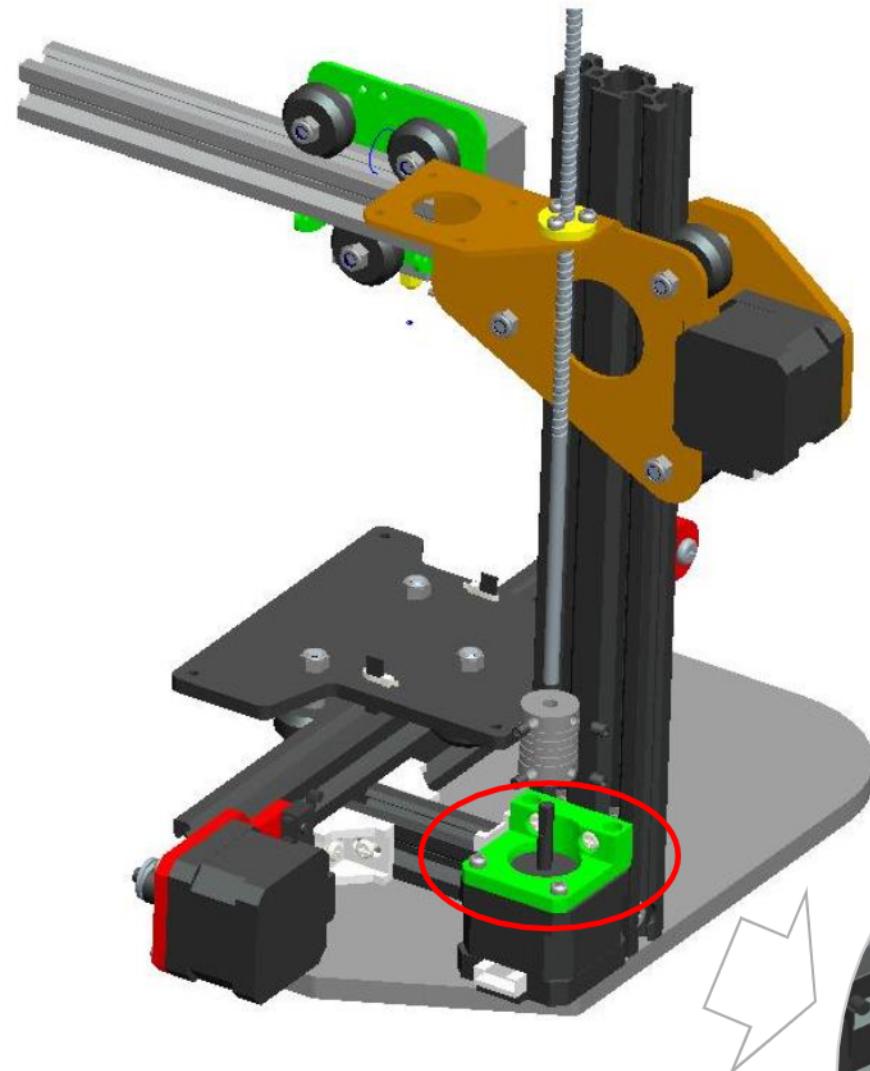

- Place 1pcs 42 stepper motor back of the Z slide rail , put the motor seat on the motor and then secure them with 4pcs M3-8mm screws.
- Install them to the Z slide rail using 2pcs M4-12mm screws and T-Nuts.
- Take 1pcs threaded rod through the brass nut ,then insert to the coupling and tighten up.

Step 15 Install Filament Feeder

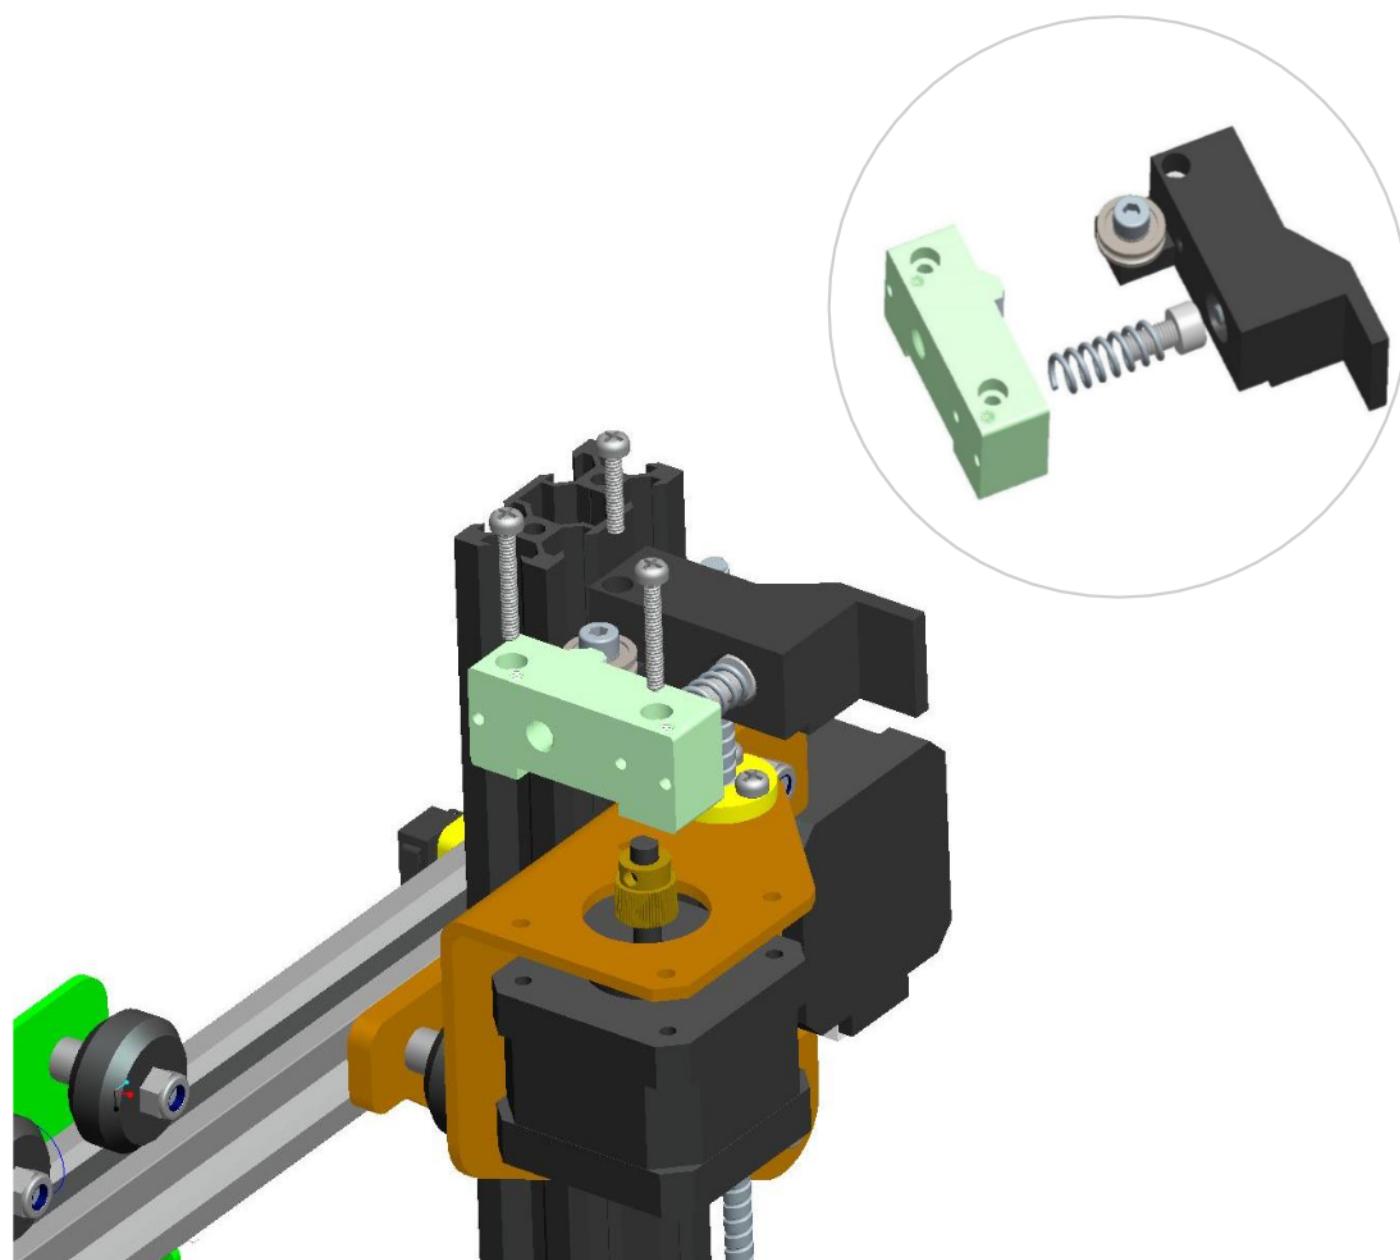

Parts:

42 Stepper motor – 1pcs
Feeding gear (with grub screw in it) – 1pcs
Extrusion clip - 1pcs
Extrusion seat – 1pcs
M3-22mm – 2pcs
M3-16mm – 1pcs
M5-10mm Hex screw – 1pcs
Spring – 1pcs

- Insert the feeding gear to the motor shaft and them tighten up .
- Place the Extrusion seat and motor to the bracket as shown in the picture, secure them using 2pcs M3-22mm screws.
- Put one M5-10mm hex screw and spring between extrusion clip and extrusion seat , next secure the extrusion clip with motor using M3-16mm screw.

Step 16 Install handle


Parts:

Handle – 1pcs


Handle seat (Acrylic) – 1pcs

M5-10mm screw – 2pcs


M4-12mm screw – 2pcs

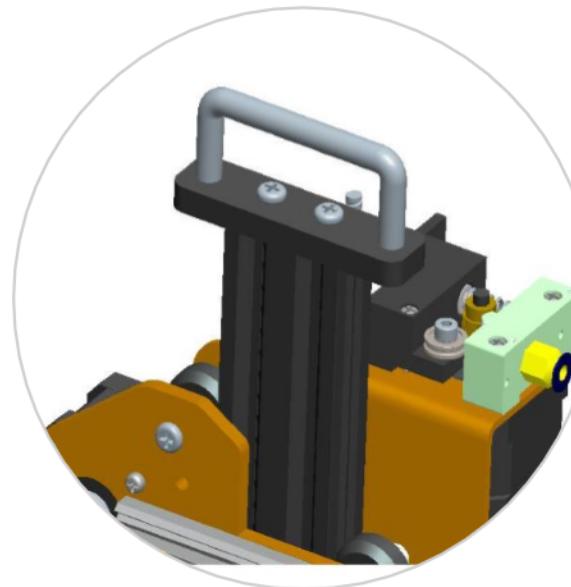

- Put the handle seat on the top of Z slide rail, secure them with 2pcs M5-10mm screws .
- Secure the handle to the seat using 2pcs M4-12mm screws .

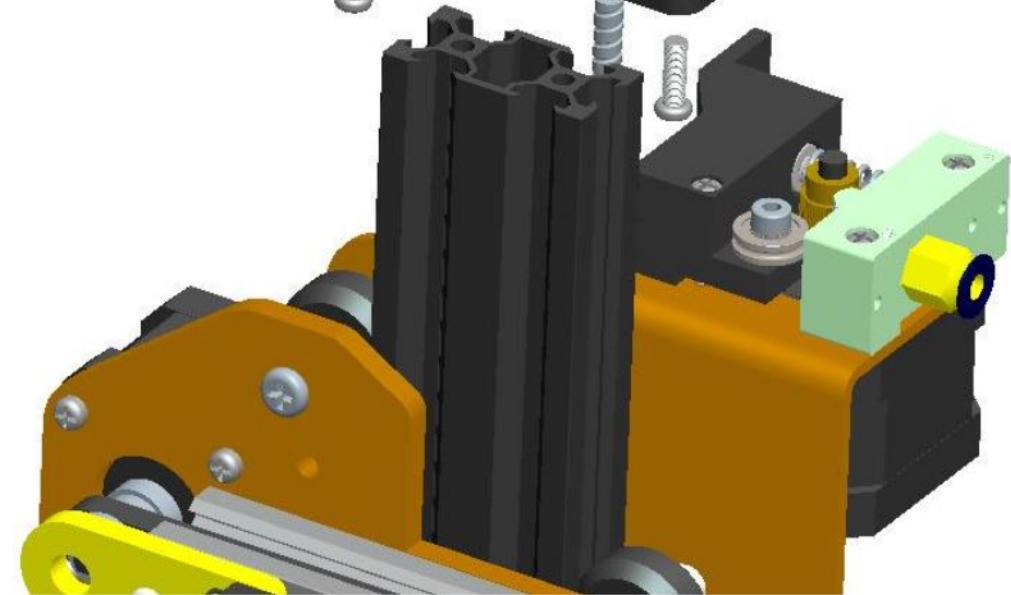

Step 17 Install Z endstop

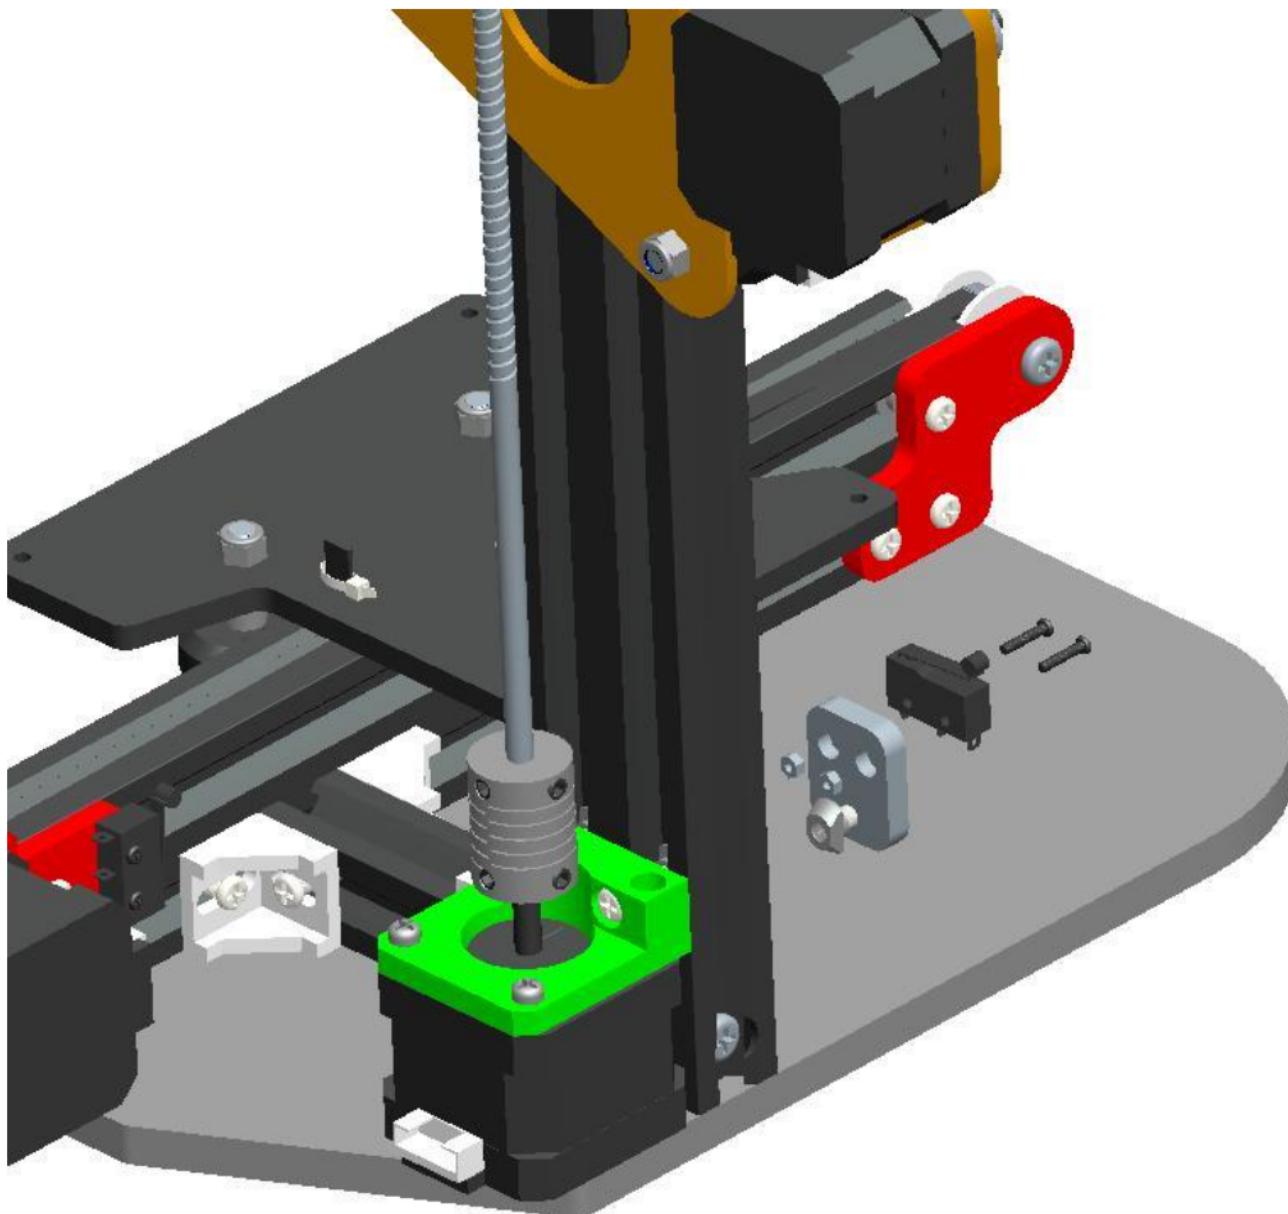


Parts:

Limit switch – 1pcs
Z endstop mount – 1pcs
M4-8mm screw – 1pcs
M4 T-Nut – 1pcs
M2-10mm screw – 2pcs
M2 Nut – 2pcs

- Secure the limit switch to Z endstop mount using 2pcs M2-10mm screws and nuts.
- Place the Z endstop mount to the left Z slide rail, using one M4-8mm screw and T-nut.

Step 18 Assemble Print bed

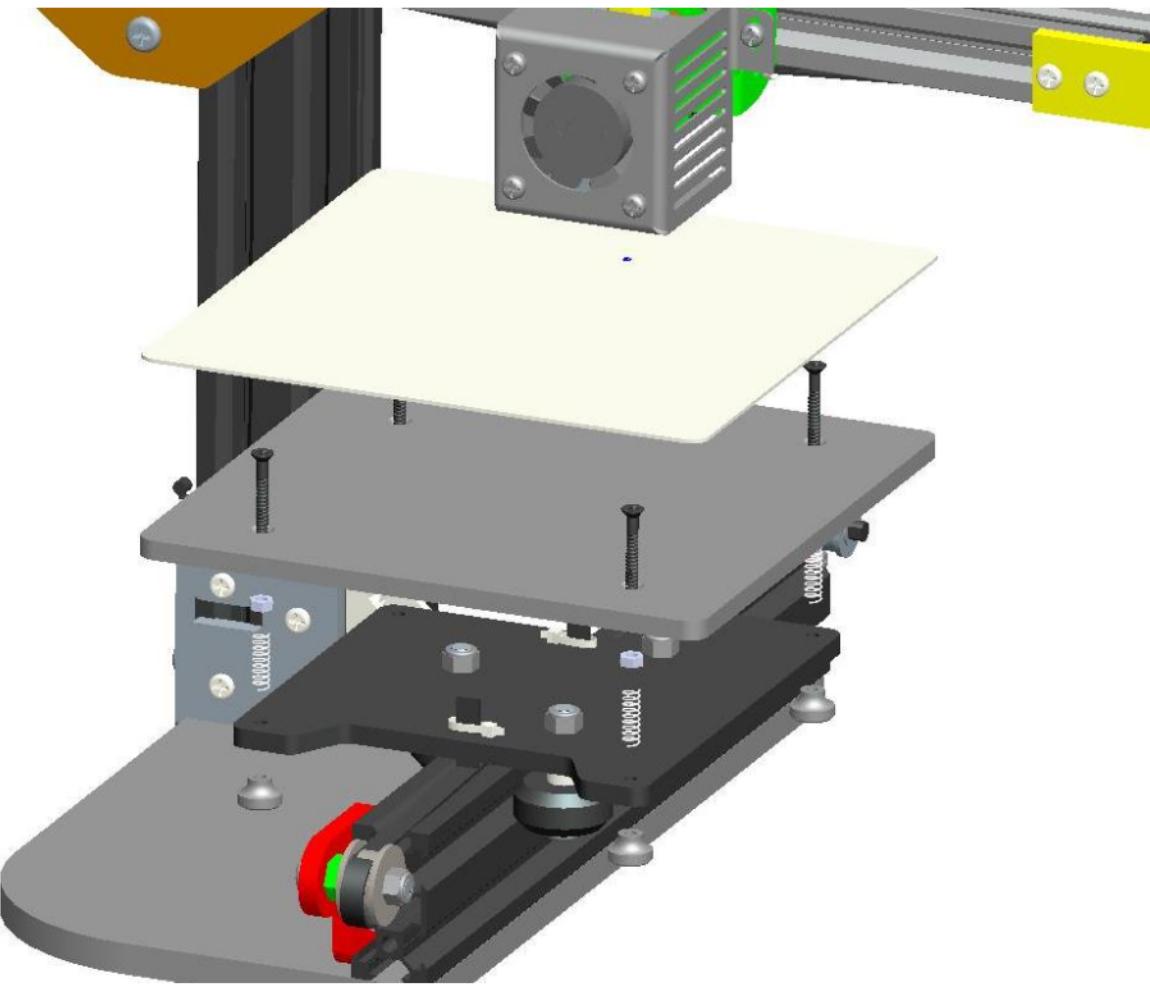


Parts:

Bed plate – 1pcs
M3-30mm screw – 4pcs
Thumb nut – 4pcs
Spring – 4pcs

- Place the Bed plate on the bed frame use 4pcs springs between them, and then through 4pcs M3-30mm screws, then top 4pcs thumb nuts under the bed frame.

Step 19 Install Teflon hose

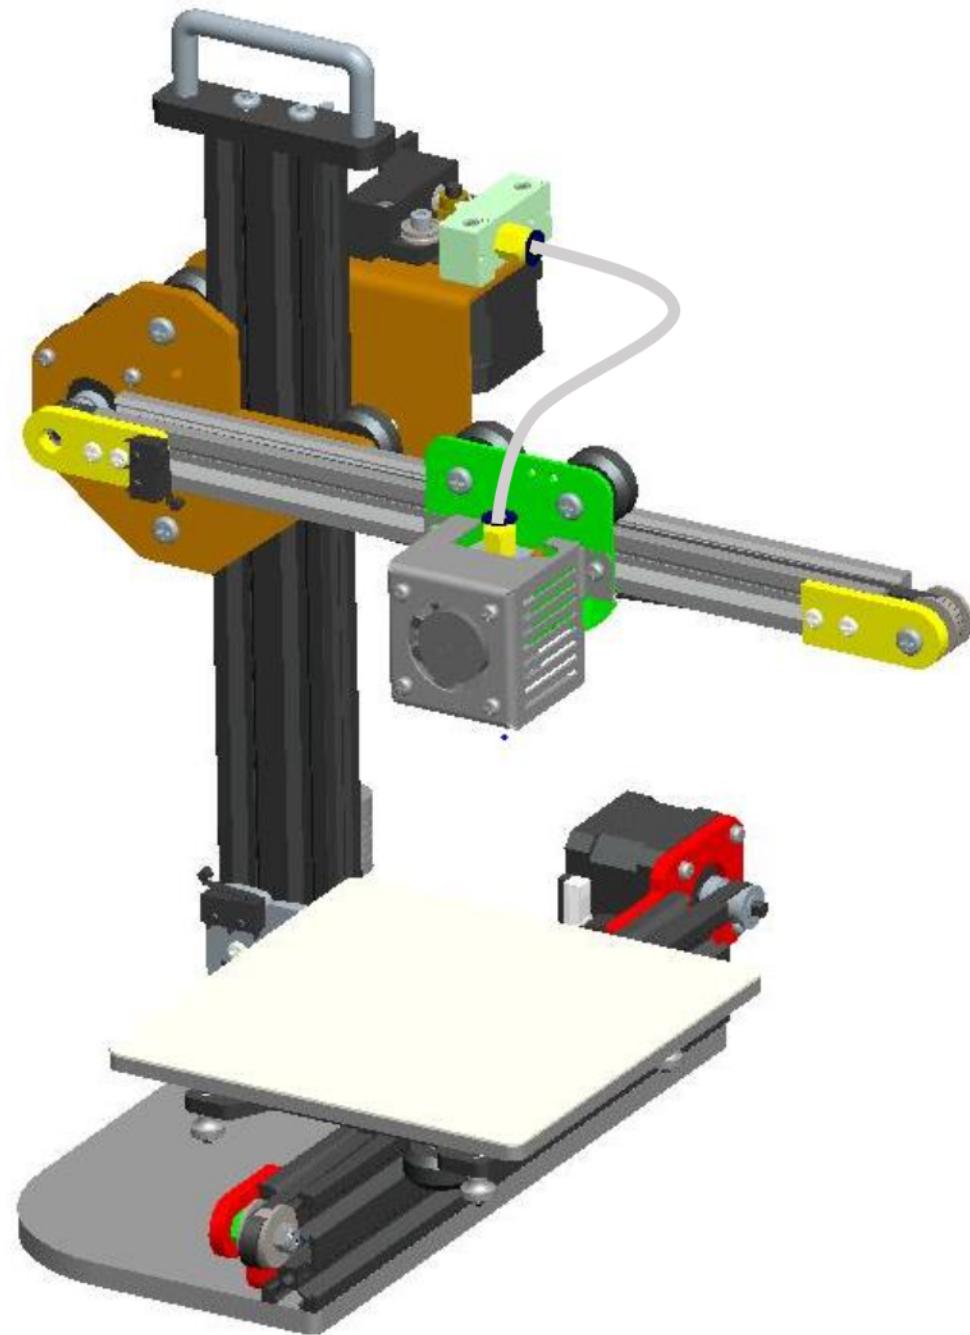


Parts:

Teflon hose – 1pcs
Connector – 1pcs


- Install a connector to the filament feeder , and then insert a teflon hose between feeder and extruder .

Step 20-1 Assemble Electronic Box

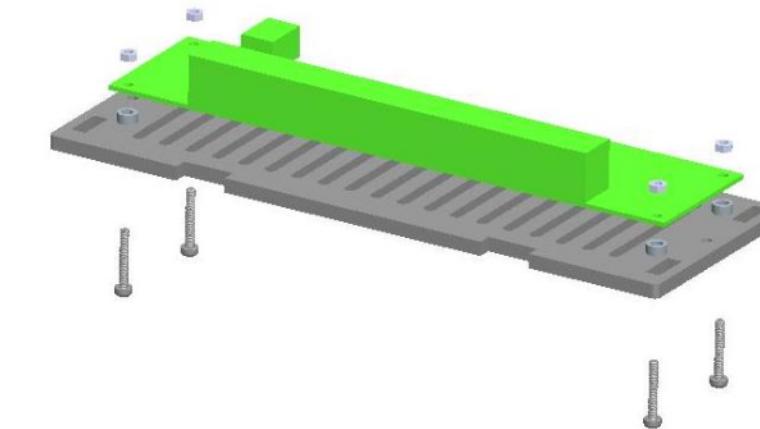


Parts:

Electronic box bottom plate (acrylic) – 1pcs
Electronic box side plate – 2pcs
Mainboard – 1pcs
M3-20mm screws – 6pcs
M3 nuts – 6pcs
Plastic pillar – 4pcs

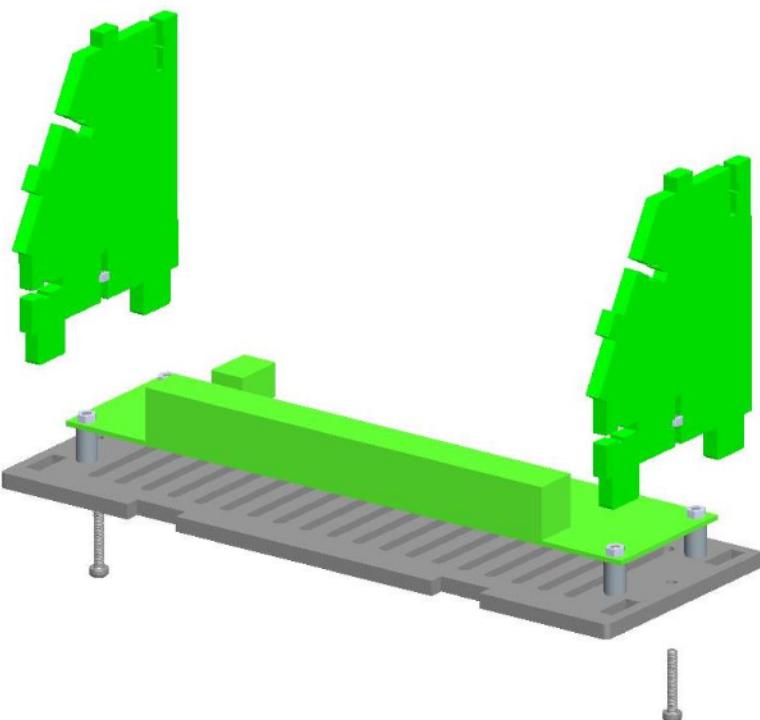

- Place the mainboard on the bottom plate using M3-20mm and nuts , insert the plastic pillar between them.
- Assemble the side plates to the bottom plate as picture , secure them using M3-20mm screw&nut

Step 20-2 Assemble Electronic Box


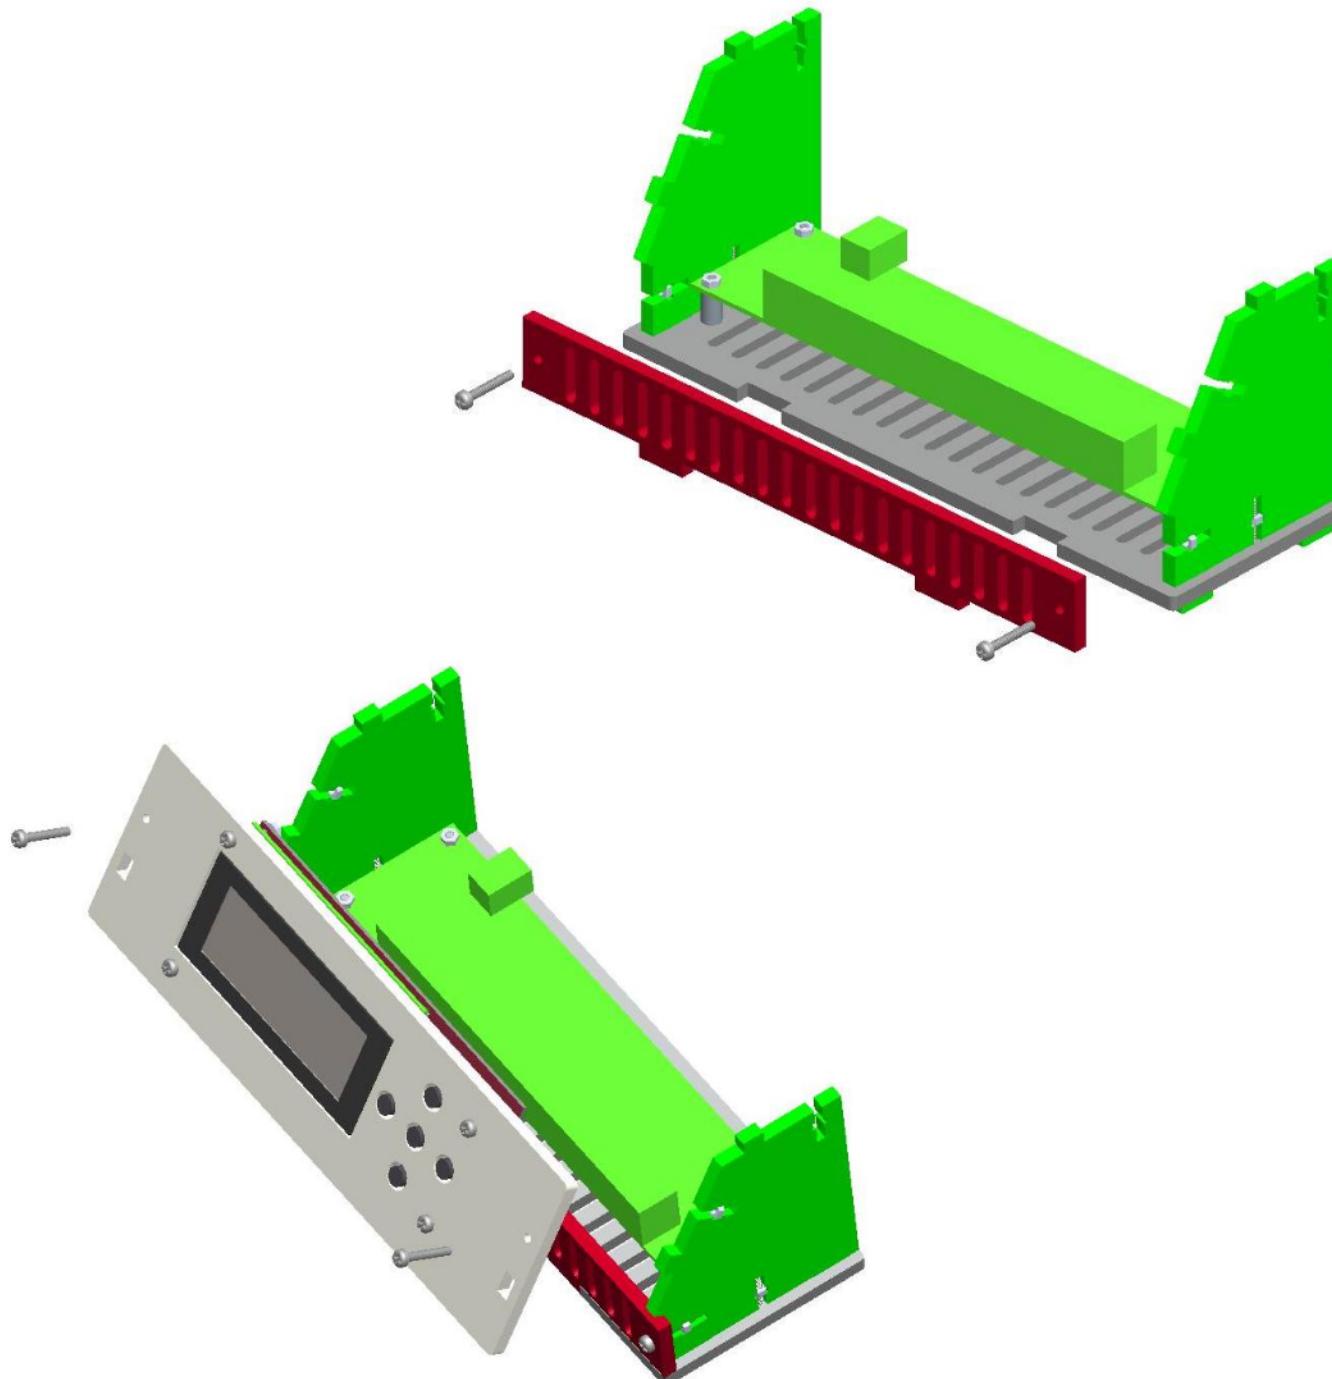


Parts:

Electronic box front plate – 1pcs
LCD display assembly – 1pcs
M3-20mm screws – 4pcs
M3 nuts – 4pcs

- Assemble the front plate using M3-20mm screws and M3 nuts.
- Place the LCD display assembly to the box , using 2pcs M3-20mm screws and nuts.

Step 20-3 Assemble Electronic Box

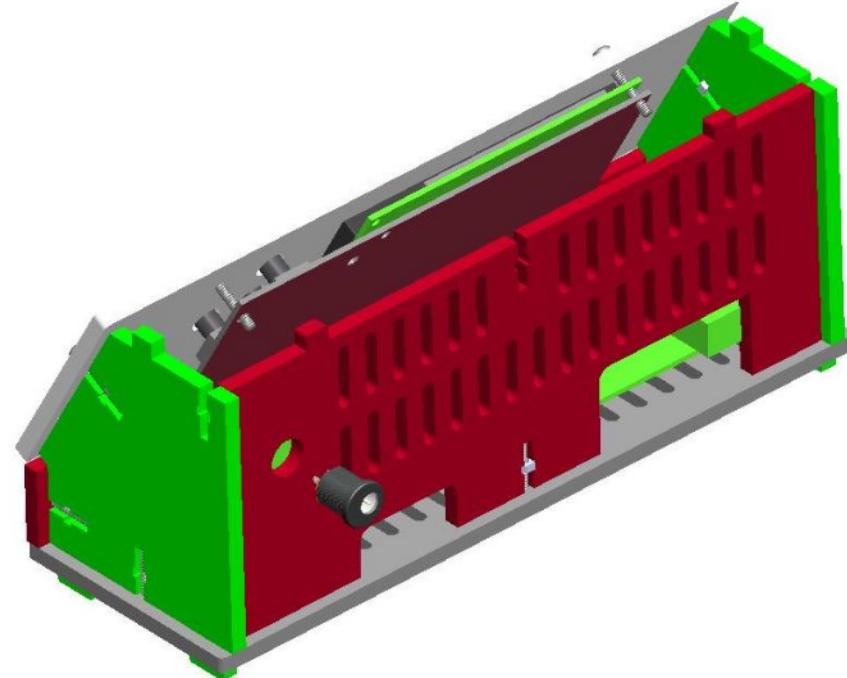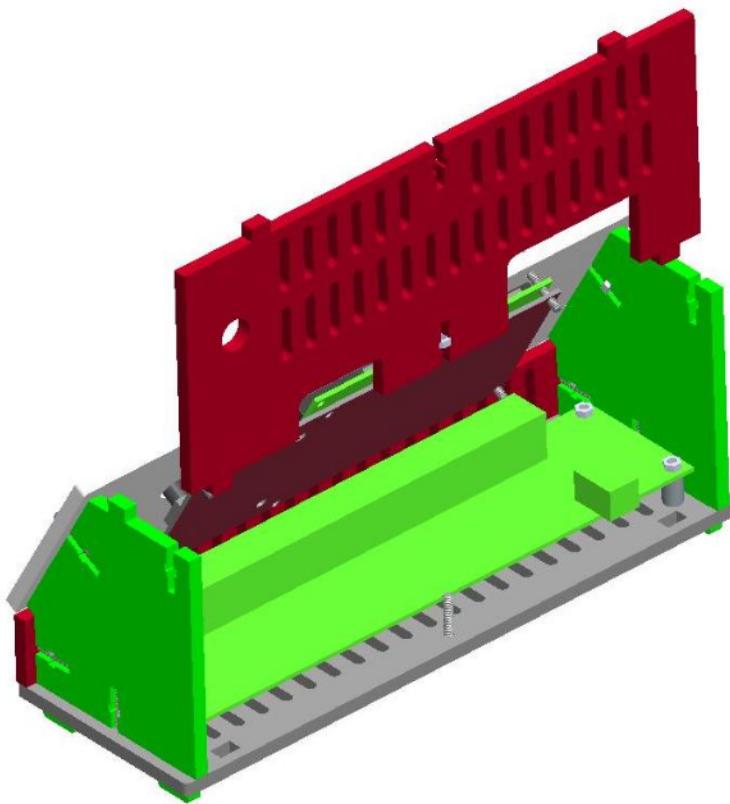


Parts:

Electronic box Back plate (left) – 1pcs
DC power jack – 1pcs
M3-20mm screws – 1pcs
M3 nuts – 1pcs

- Assemble the back plate to the bottom plate as picture , secure them using M3-20mm screw&nut.
- Insert the DC power jack to the back plate.

Step 20-4 Assemble Electronic Box

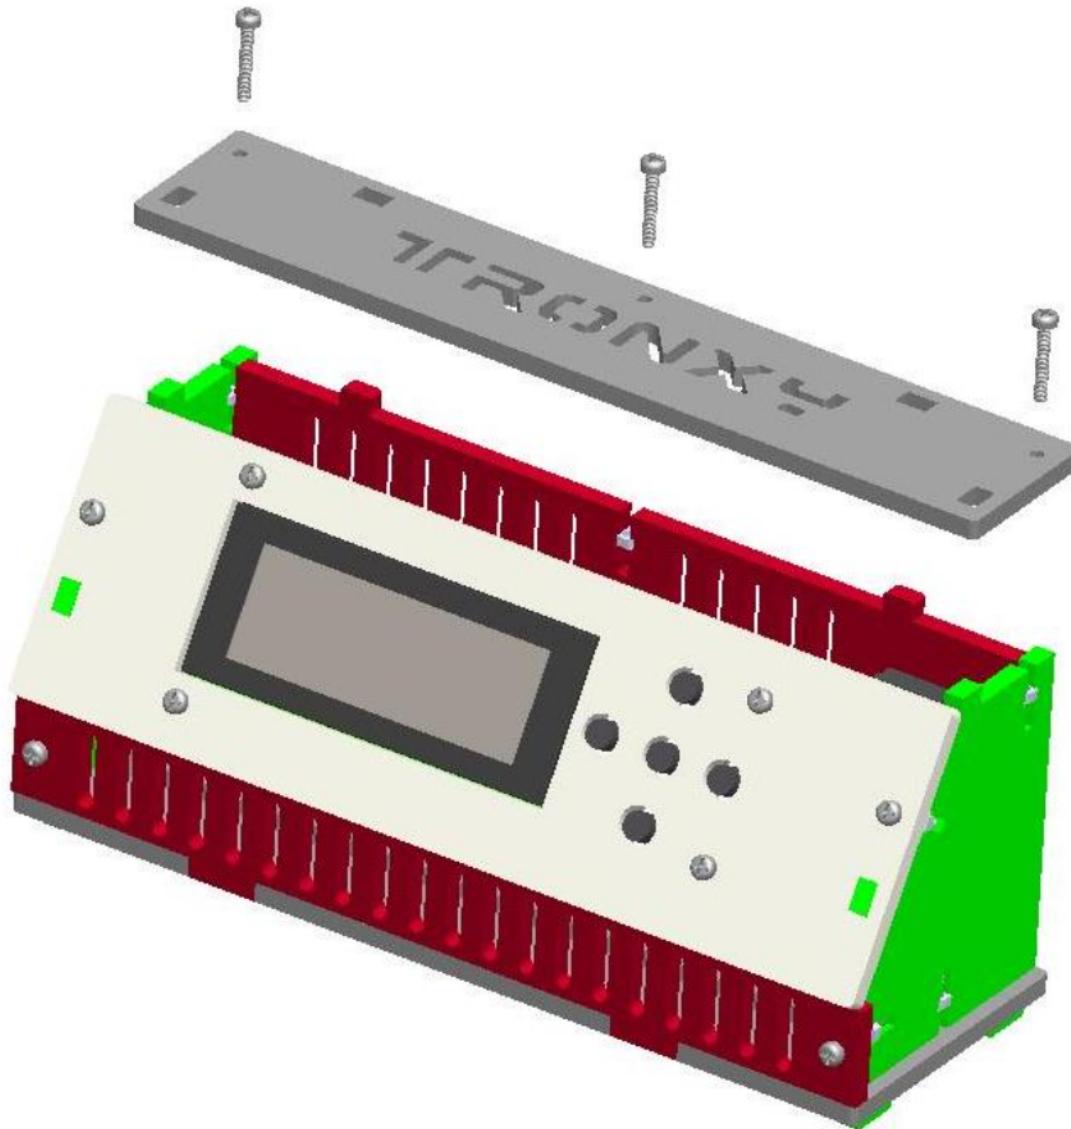

Parts:


Electronic box top plate – 1pcs

M3-20mm screws – 3pcs

M3 nuts – 3pcs

- Cover the top plate using M3-20mm screws and M3 nuts.

Step 23 Control Board Wiring Diagram

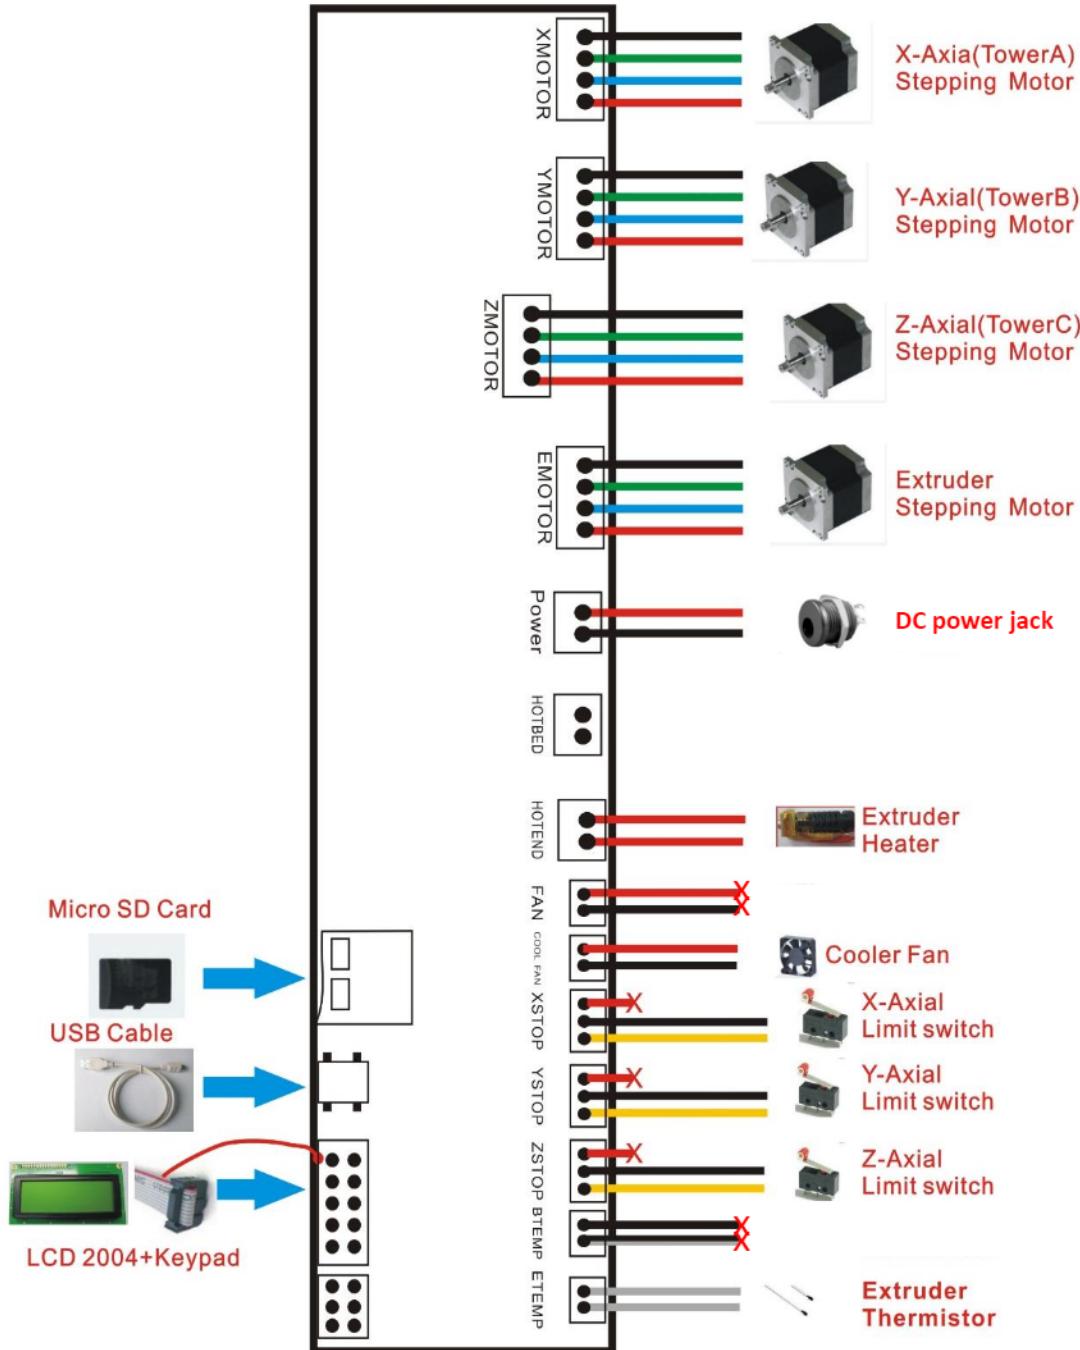

Parts:

Mainboard – 1pcs

- The method of connecting wire is as picture
- ⚠ There is only 1pcs cooler fan , please connect to 'CFAN' on board
- ⚠ There do not have heatbed and the thermistor , so there's no connection on 'Hotbed' and 'BTEMP'.