INSTALLATION GUIDE


Frameless Glass Railing Installation

Step-by-step instructions to install spigots and 12 mm glass panels on a deck or a concrete surface.

- 12 mm glass
- Spigots and connectors
- Wood or concrete



1 STEP 1 Mark the centerline	2 STEP 2 Mark spigots and glass	3 STEP 3 Install the spigots	4 STEP 4 Set the glass	5 STEP 5 Finishing touches

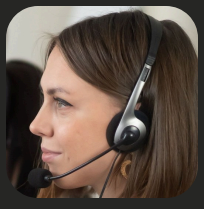

We're with you at every step

Questions while you install? Call, text or email us. Our team is here to help.

(855) 452-7715 info@glassrailingstore.com glassrailingstore.com

BEFORE YOU START

Safety first, then a plan.

Read this guide once from start to finish before you begin. Keep your layout plan with the glass panel sizes close at hand.

Safety precautions

- Wear personal protective equipment: safety glasses, gloves and sturdy footwear.
- Handle glass panels with care, and never lift them alone.
- Clear the installation area of obstacles and debris to prevent tripping.
- Use properly maintained tools and follow the manufacturer's guidelines.
- When drilling, avoid damaging the structure underneath.

In this guide

- • Tools and materials — Page 3
- 1 Mark the centerline — Page 4
- 2 Mark the spigots and glass — Page 4
- 3 Install the spigots — Page 5
- 4 Set the glass panels — Page 6
- 5 Finishing touches — Page 7
- • Wood or concrete — Page 8
- • Care and warranty — Page 9


▶ WATCH BEFORE YOU INSTALL

See every step on video

Scan the code or visit our installation guide page for the videos.

- How to Install Frameless Glass Railing (Full DIY Guide) 5:19
- How to Install a Glass Gate Panel 3:33
- How to Measure for Glass Railing 1:55

glassrailingstore.com/pages/glass-railing-installation-guide

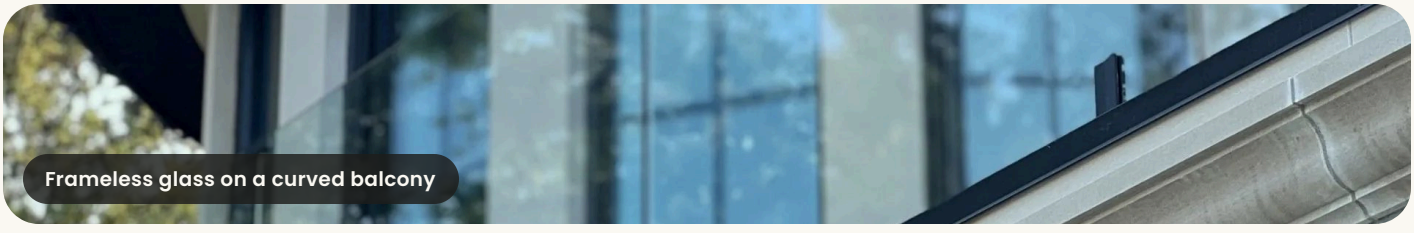

Frameless glass on a curved balcony

BEFORE YOU START

Tools and materials

Have everything ready before you start, so you can install each spigot in one go.

Power drill
Choose the right drill for your surface.

Drill bits
1/4″ drill bit.

Level
To set and adjust the spigots and glass.

Measuring tape
Any measuring tape will do.

Pencil
To mark the centerline, spigots and glass.

Allen key
To level the spigots and tighten the screws.

Screws
Wood: 5/16″ × 3″ lag bolts.
Concrete: 1/4″ screw anchors.

Glass
12 mm glass panels.

Hardware
Spigots and connectors.



Brushed Stainless



Matte Black

THE HARDWARE

6″ Engineered Spigot

Made for 12 mm glass panels, in Brushed Stainless or Matte Black. Each spigot is fastened with 4 screws.

Screws and mounting bolts are sold separately: choose the screws for your surface, wood or concrete.

Screws for wood and concrete →


STEP 1 OF 5

1 Mark the centerline

Mark the railing centerline across the entire span, 3″ from the outer edge of the deck, concrete or structure. For multiple sections, mark the centerline of each span accurately so everything lines up.

1 Mark the centerline | 2 Mark spigots and glass | 3 Install the spigots | 4 Set the glass | 5 Finishing touches

PLAN VIEW

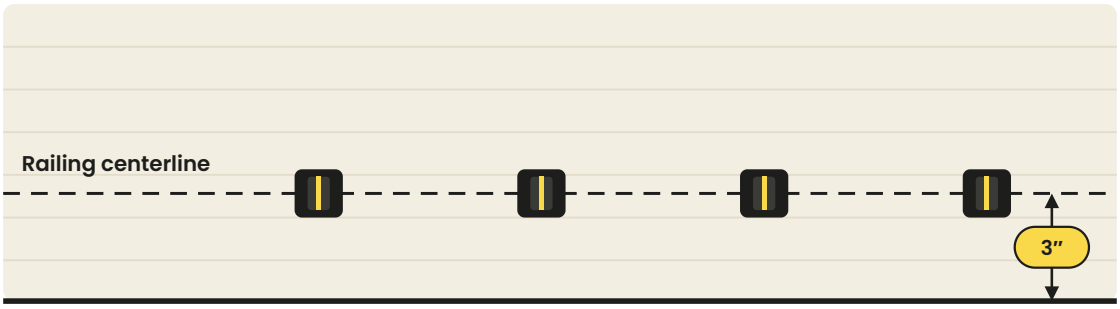

Outer edge of the deck, concrete or structure


Plan view · keep the centerline 3″ from the outer edge along the whole span


STEP 2 OF 5

2 Mark the spigots and glass

Use your plan to find the position of each glass panel. Along the centerline, mark where each panel starts and ends, with a gap of about 1″ between panels (¾″ to 2″ is fine). Center each spigot at 25% of the panel width from each side.

X = 25% OF THE PANEL WIDTH

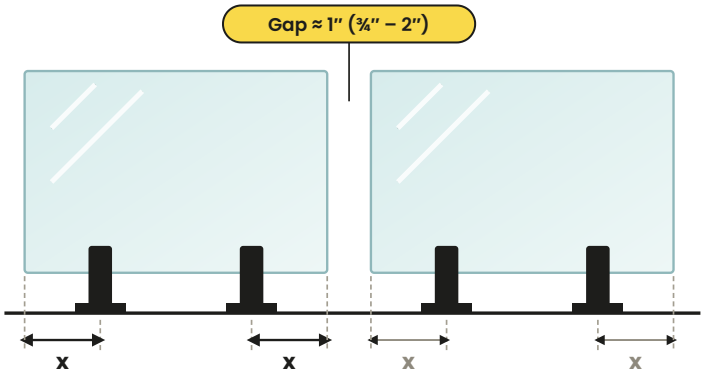

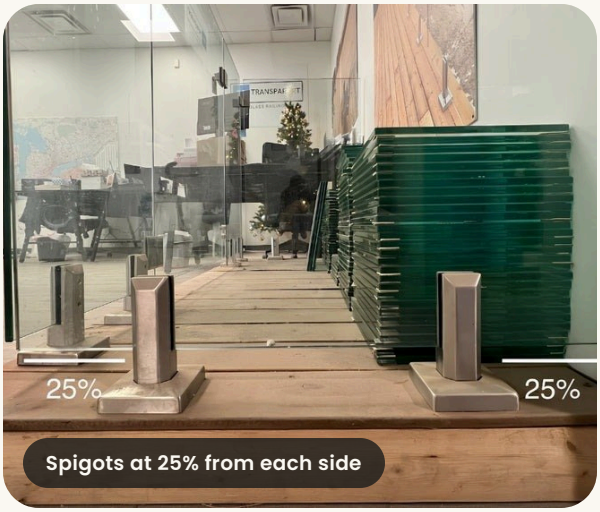

STEP 3 OF 5


3 Install the spigots


Fasten each spigot on its mark, then level it before you move on to the next one.

1 Mark the centerline | 2 Mark spigots and glass | 3 Install the spigots | 4 Set the glass | 5 Finishing touches


How to install each spigot

1. Place the spigot on top of the adjustment plate. Align it with the railing centerline and its reference mark.
2. Pre-drill the holes for the lag head screws with the right drill bit size.
3. Secure the spigot with the 4 lag head screws in the pre-drilled holes.
4. Level the spigot with the 4 Allen key adjustment screws, then tighten the 4 lag head screws firmly.
5. Check with your level that the spigot is level. It saves adjustments later.

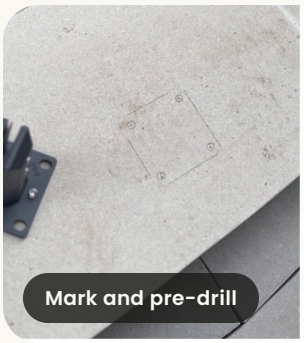

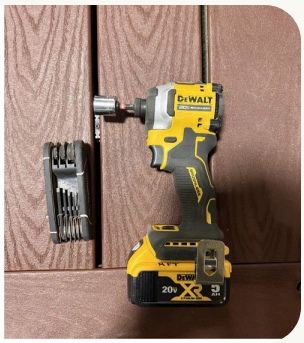

Mark and pre-drill

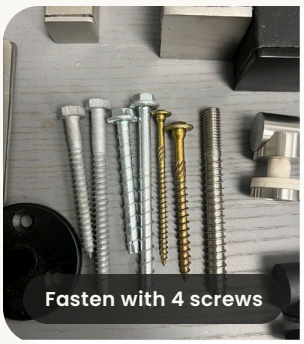



Fasten with 4 screws





Level the spigot

OUTDOORS

Use hot-dipped galvanized or zinc-plated bolts for outdoor installations.

WOOD OR CONCRETE?

Bolt sizes and the structure each spigot needs are on **page 8**.

STEP 4 OF 5

4 Set the glass panels

Two people, one panel at a time. The glass sits on the plastic inside the spigot, never on the metal.

1 Mark the centerline | 2 Mark spigots and glass | 3 Install the spigots | 4 Set the glass | 5 Finishing touches



Slide the panel into the spigots



How to set each panel

1. Place the glass panel into the spigot. Make sure the glass only touches the plastic inside, not the metal.
2. Secure the panel by tightening the Allen key screws in the spigot.

GOOD TO KNOW

The glass does not need to touch the bottom of the groove in the spigot. It can stay raised if you need room to adjust.


AVOID

Glass touching the metal of the spigot or another glass panel. Never lift a panel alone.


STEP 5 OF 5

5 Finishing touches

Level every panel, tighten everything by hand, then set the connectors.

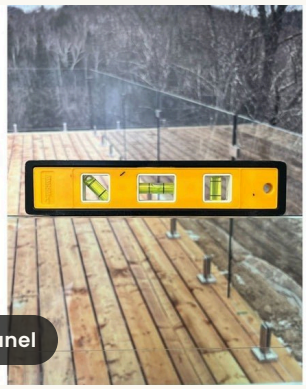

Level every panel

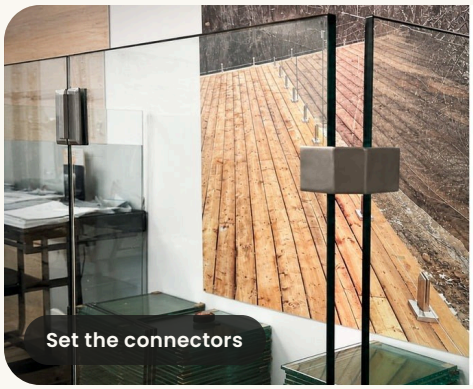




Set the connectors

Level and tighten

1. One of the most important steps: make sure all your glass panels are level. Raise a panel slightly in its spigot, then re-tighten the screws on the side of the spigot.
2. Make sure every panel is secure: tighten the screws on the side of the spigot as much as you can by hand.

Connectors

1. Place the connector at the top of the glass or lower, as you prefer.
2. Loosen the Allen key screws, then slide the clamp down into place.
3. Set the clamp at the height you want, then tighten the inner face of the clamps by hand.

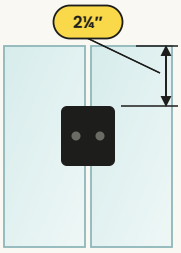

RECOMMENDED


2¼" from the top of the glass to the top of the clamp.

FASTENING


Wood or concrete

How each spigot is fastened to the structure. The drawings are schematic and not to scale. Always follow your local building code.

WOOD DECK · SECTION

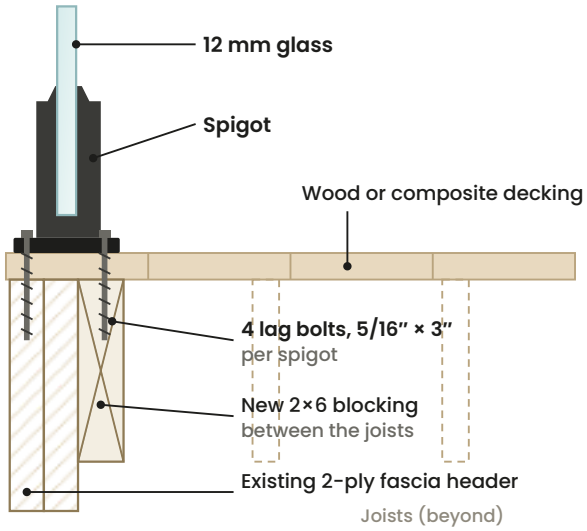

CONCRETE · SECTION

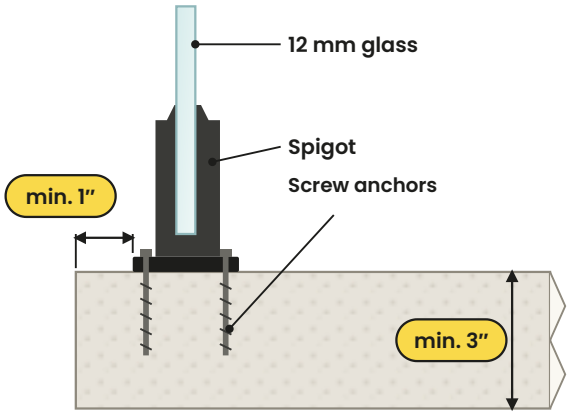

Concrete slab
Spigot base at least 1″ from the edge, slab at least 3″ thick

Wood or composite deck WOOD

Fasten each spigot with 4 lag bolts, 5/16″ × 3″, through the decking into solid blocking.

Option A: new 2×6 blocking between the joists, against an existing 2-ply fascia header.
Option B: new 2-ply 2×6 blocking between the joists, against an existing 1-ply fascia header or joist.

Concrete CONCRETE

Fasten each spigot with 1/4″ × 2-5/8″ screw anchors (Hilti KH-EZ or an approved equal).

Edge: keep the spigot base at least 1″ from the edge of the concrete.
Slab: the concrete slab must be at least 3″ thick.

OUTDOORS


Use hot-dipped galvanized or zinc-plated bolts for outdoor installations.

CONNECTIONS

No other connections than the spigots shown are needed between the railing and the structure.

ON GRADE?

Installing on a footing at ground level? **Contact us** for the footing detail. Engineering: **our engineering page**.

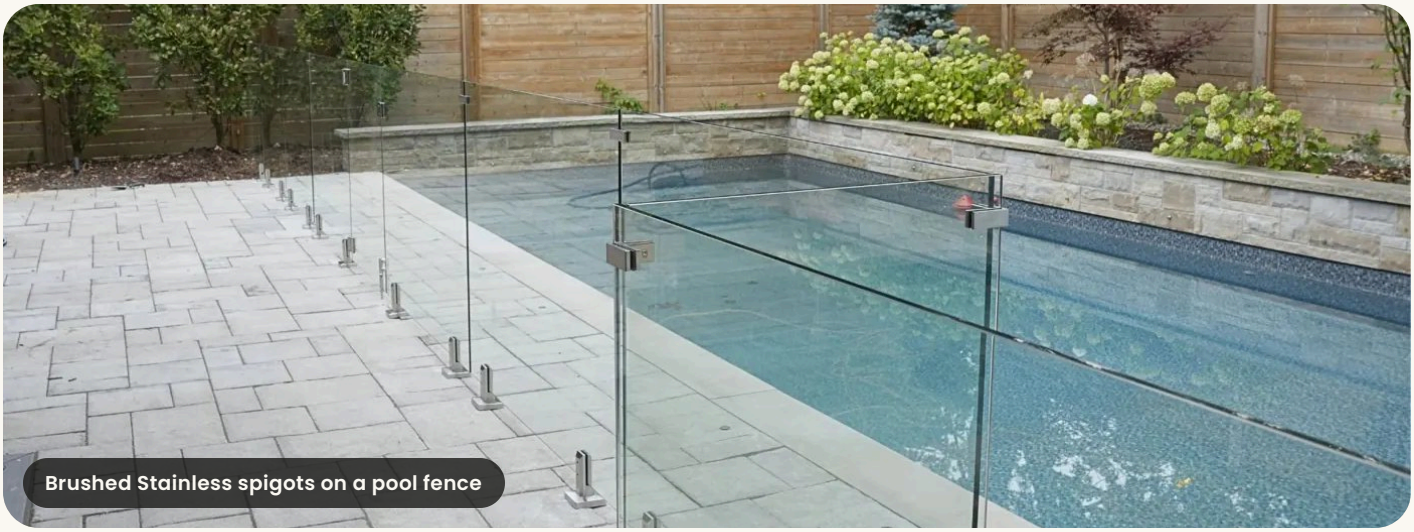

Brushed Stainless spigots on a pool fence

ALL DONE

Congratulations!

Your frameless glass railing installation is complete. We'd love to see your finished project: snap a few photos and send them to us. Thank you for choosing The Glass Railing Store.

Maintenance and care

Clean the glass whenever it is dirty, or once a year with a power washer. That is usually all it needs.

Tip: a glass treatment such as Rain-X helps the glass stay clean longer.

Warranty

Our warranty covers both the hardware and the glass. The hardware comes with a 10-year no-rust promise, and the glass is guaranteed free from manufacturing defects, inspected and safely delivered.

Warranty and No Rust Promise

Questions during your installation?

Call, text or email us. Our team is here to help, from the first spigot to the last panel.

(855) 452-7715 | info@glassrailingstore.com | glassrailingstore.com

Installation videos