

Table of Contents

"FPrint Win 3.1.5" Help.....	12
How to install?.....	13
Settings.....	15
Language support.....	20
File format.....	21
Devices by countries.....	25
Albania.....	25
33 – clear the display.....	25
35 – show text on bottom row of the display.....	25
38 – open non-fiscal receipt.....	25
39 – close non-fiscal receipt.....	25
42 – print non-fiscal text.....	26
47 – show text on top row of the display.....	26
48 – open fiscal receipt.....	27
49 – free sale.....	28
51 – subtotal.....	30
53 – payment.....	31
54 – print fiscal text.....	32
56 – close fiscal receipt.....	32
60 – cancel fiscal receipt.....	32
63 – show and read date/time.....	33
69 – daily closure.....	33
70 – cash in/out.....	33
79 – annual/monthly report.....	33
84 – print barcode.....	35
94 – fiscal report by date.....	35
100 – show text on both rows of the display.....	36
105 – operator's report.....	36
106 – open drawer.....	36
107 – programming items.....	37
109 – duplicate receipt.....	38
111 – PLU reports.....	38
122 – test mode.....	38
350 – custom command.....	39
MP55-B, MP55-L, MP55-LD, DP-50, DP-50D, DP-500.....	40
S - sale of an item.....	40
M – open new invoice.....	42
J – set date and time.....	42
V – immediate void.....	42
F - allows keyboard input.....	42
H - forbids keyboard input.....	42
T - end of receipt or payment.....	43
C - discount/surcharge in percents.....	43
P - print text.....	43
I - official debiting / crediting.....	44
Y - opening non-fiscal receipt and print text.....	44
Z – fiscal closure.....	44
D - receipt duplicate.....	44
Armenia.....	45

DP15.....	45
S - sale of an item.....	45
E - sale of an item by department.....	46
T - end of receipt or payment.....	47
C - discount/surcharge in percents.....	47
P - print text.....	47
I - official debiting / crediting.....	49
Y - opening non-fiscal receipt.....	49
Z – fiscal closure.....	49
D - receipt duplicate.....	50
X – cancel current fiscal receipt.....	50
L – sending text to the printer's display.....	50
48 – open fiscal receipt.....	51
58 – sale of programmed item.....	51
105 – operators report.....	51
107 – program and delete items.....	52
111 – items report.....	52
MP-55.....	54
S - sale of an item.....	54
T - end of receipt or payment.....	55
C - discount/surcharge in percents.....	55
P - print text.....	55
I - official debiting / crediting.....	56
Y - opening non-fiscal receipt.....	56
Bangladesh.....	57
FP550.....	57
38 – open non fiscal (official) receipt.....	57
48 – open fiscal / exchange receipt.....	57
49 – sale of an item, exchange item.....	58
51 – subtotal.....	59
69 – daily reports.....	59
70 – official cash in/out.....	59
84 – print barcode.....	60
T - end of receipt or payment.....	60
C - discount/surcharge in percents.....	61
P - print text.....	61
D - receipt duplicate.....	61
O – open drawer.....	61
L – sending text to the printer's display.....	62
Bulgaria.....	63
46 – storno receipt opening.....	63
48 – fiscal receipt opening.....	66
S – sale.....	68
E – sale by department.....	69
T – payment and receipt closure.....	70
C – discount/surcharge.....	73
P – print text.....	74
I – official debiting / crediting.....	76
Y – opening non-fiscal receipt.....	76
Z – daily closure, reports.....	78
D – receipt duplicate.....	79
O – open drawer.....	80
X – cancel fiscal receipt.....	80
L – show text on the display.....	81
A – barcode print.....	82

N – reading document number and USN.....	83
58 – sale of programmed item.....	84
105 – operators report.....	85
107 – item programming.....	86
111 – items report.....	88
119 – electronic journal reports.....	89
350 – custom command.....	91
999 – closing Fprint while in resident mode.....	91
Ethiopia.....	92
FP 60.....	92
"38" – open non-fiscal receipt.....	92
"42" – print non-fiscal text.....	92
"39" – close non-fiscal receipt.....	92
"48" – open fiscal receipt.....	92
"55" – open refund receipt.....	93
"49" – sell items.....	93
"51" – subtotal.....	94
"53" – payment.....	94
"54" – print fiscal text.....	94
"56" – close fiscal receipt.....	95
"60" – cancel current fiscal receipt.....	95
"109" – duplicate receipt.....	95
"33" – clear the display.....	96
"47" – show text on top row of the display.....	96
"35" – show text on bottom row of the display.....	96
"63" – show date and time.....	96
"100" – show text on both rows of the display.....	96
"69" – execute reports / fiscal closures.....	97
"70" – internal debiting and crediting (cash in/out).....	97
"84" – print barcode.....	97
"106" – open the drawer.....	97
"79" – annual / monthly short report.....	98
"94" – annual / monthly detailed report.....	98
Federation of Bosnia and Herzegovina.....	99
33 – display clear.....	99
35 – show text on display lower line.....	99
38 – open non-fiscal receipt.....	99
39 – close non-fiscal receipt.....	100
42 – print non-fiscal text.....	100
43 – storno/refund receipt opening.....	101
47 – display text on the upper line.....	101
48 – fiscal receipt and reclamation.....	102
51 – subtotal.....	103
52 – sales and voids.....	104
53 – payment.....	105
54 – print fiscal text.....	106
55 – invoice data.....	106
56 – close fiscal receipt.....	107
63 – show date and time on the display.....	107
69 – daily closure.....	108
70 – official debiting / crediting.....	108
73 – fiscal memory report by report number.....	109
79 – fiscal memory report by date.....	109
84 – barcode print.....	110
92 – print separator line.....	110

105 – operators report.....	111
106 – open drawer.....	111
107 – item programming.....	112
109 – duplicate documents.....	114
111 – items report.....	115
119 – electronic journal reports.....	115
300 – item loading from file.....	116
301 – cancel fiscal receipt.....	116
303 – reading global document number.....	117
305 – custom command – add new item/change price of an existing item and then sell it.....	117
350 – custom command (old version).....	118
351 – custom command.....	119
999 – closing Fprint while in resident mode.....	119
Old devices:.....	120
FP550, TM-T260F, FP700, FP60, FMP 350.....	120
"38" – open non-fiscal receipt.....	120
"42" – print non-fiscal text.....	120
"39" – close non-fiscal receipt.....	120
"48" – open fiscal receipt.....	121
"52" – sell items and show on the display.....	122
"51" – subtotal.....	122
"53" – payment.....	123
"55" – enter client information (invoice).....	123
"56" – close fiscal receipt.....	123
"107" – programming and deleting items, changing price for programmed items.....	124
"33" – clear the display.....	125
"47" – show text on top row of the display.....	125
"35" – show text on bottom row of the display.....	125
"63" – show date and time.....	125
"100" – show text on both rows of the display.....	125
"32" – get last error code and message /only supported in FP60, FP700/.....	126
"60" – winter/summer time change.....	126
"69" – daily fiscal closure.....	126
"70" – internal input and output of cash.....	127
"106" – open the drawer.....	127
"73" – fiscal memory report by memory block number.....	127
"79" – fiscal memory report by date.....	127
"105" – report operators.....	127
"111" – report items.....	128
"109" – duplicate documents within period or number of document.....	128
"300" – loading items from file.....	129
"301" – void receipt.....	129
"305" – custom command – add new item/change price of an existing item and then sell it.....	130
"350" – execute custom command.....	130
"999" – close FPrint.....	130
MP 55, DP50 Plus, DP55, DP55 S /cyrillic/.....	131
"38" – open non-fiscal receipt.....	131
"42" – print non-fiscal text.....	131
"39" – close non-fiscal receipt.....	131
"48" – open fiscal receipt.....	132
"52" – sell items and show on the display.....	133
"51" – subtotal.....	133
"53" – payment.....	134
"55" – enter client information (invoice).....	134
"56" – close fiscal receipt.....	134
"107" – programming and deleting items, changing price for programmed items.....	135

"33" – clear the display.....	136
"47" – show text on top row of the display.....	136
"35" – show text on bottom row of the display.....	136
"63" – show date and time.....	136
"100" – show text on both rows of the display.....	136
"69" – daily fiscal closure.....	137
"70" – internal input and output of cash.....	137
"106" – open the drawer.....	137
"79" – fiscal memory report by date.....	137
"105" – report operators.....	137
"111" – report items.....	138
"109" – duplicate documents within period.....	138
"300" – loading items from file.....	139
"301" – void receipt.....	139
"305" – custom command – add new item/change price of an existing item and then sell it.....	140
"350" – execute custom command.....	140
"999" – close FPrint.....	140
Georgia.....	141
DP-05, DP-25.....	141
"48" – open fiscal receipt.....	141
"49" – sell items.....	141
"51" – subtotal.....	142
"53" – payment.....	142
"56" – close fiscal receipt.....	143
"58" – sell items by PLU code.....	143
"60" – cancel current fiscal receipt.....	143
"38" – open non-fiscal receipt.....	144
"39" – close non-fiscal receipt.....	144
"42" – print non-fiscal text.....	144
"44" – paper feed.....	144
"61" – set date and time.....	144
"62" – read date and time.....	144
"69" – daily closure and X report.....	144
"70" – internal debiting and crediting (cash in/out).....	145
"71" – print diagnostic information.....	145
"76" – status of the fiscal receipt.....	145
"94" – print fiscal memory report by date.....	146
"95" – print fiscal memory report by block.....	146
"105" – report operators.....	146
"106" – drawer opening (only for DP-25).....	146
"107" – programming and deleting items, changing price for programmed items.....	147
"111" – report items.....	148
"350" – execute custom command.....	148
Kazakhstan.....	149
FP-300, FP-550, FP-1000.....	149
S - sale.....	149
T - end of receipt or payment.....	150
C - discount/surcharge in percents.....	150
P - print text.....	150
I - official debiting / crediting.....	151
Y - opening non-fiscal receipt.....	151
Z – fiscal closure.....	151
D - receipt duplicate.....	151
O – open drawer.....	152
L – sending text to the printer's display.....	152

Kenya.....	153
DP-50.....	153
S - sale.....	153
T - end of receipt or payment.....	153
C - discount/surcharge in percents.....	154
P - print text.....	154
I - official debiting / crediting.....	154
Y - opening non-fiscal receipt.....	154
Z – fiscal closure.....	154
O – open drawer.....	155
FP-300, FP-550.....	156
S - sale.....	156
T - end of receipt or payment.....	157
C - discount/surcharge in percents.....	157
P - print text.....	157
I - official debiting / crediting.....	158
Y - opening non-fiscal receipt.....	158
Z – fiscal closure.....	158
D - receipt duplicate.....	158
O – open drawer.....	158
Latvia.....	159
DP50, DP50D, DP500.....	159
S - sale.....	159
T - end of receipt or payment.....	159
C - discount/surcharge in percents.....	160
P - print text.....	160
I - official debiting / crediting.....	160
Y - opening non-fiscal receipt.....	160
Z – fiscal closure.....	160
O – open drawer.....	161
DP-55 Plus, MP-55 Plus, DP-500 Plus.....	162
S - sale.....	162
T - end of receipt or payment.....	163
C - discount/surcharge in percents.....	163
P - print text.....	163
I - official debiting / crediting.....	164
Y - opening non-fiscal receipt.....	164
Z – fiscal closure.....	164
D - receipt duplicate.....	165
O – open drawer.....	165
L – sending text to the printer's display.....	165
Lithuania.....	166
MP-56.....	166
S - sale.....	166
T - end of receipt or payment.....	166
C - discount/surcharge in percents.....	167
P - print text.....	167
I - official debiting / crediting.....	167
Y - opening non-fiscal receipt.....	167
Z – fiscal closure.....	167
O – open drawer.....	168
Moldova.....	169
MX devices DP25, DP150, WP50, FP700.....	169
33 – display clear.....	169

35 – show text on display lower line.....	169
38 – open non-fiscal receipt.....	169
39 – close non-fiscal receipt.....	170
42 – print non-fiscal text.....	170
47 – display text on the upper line.....	171
48 – fiscal receipt and reclamation.....	171
51 – subtotal.....	172
53 – payment.....	173
54 – print fiscal text.....	174
56 – close fiscal receipt.....	174
63 – show date and time on the display.....	174
69 – daily closure.....	175
70 – official debiting / crediting.....	175
84 – barcode print.....	176
92 – print separator line.....	176
105 – operators report.....	177
106 – open drawer.....	177
107 – item programming.....	178
111 – items report.....	180
119 – electronic journal reports.....	180
350 – custom command.....	181
DP 500 SV.....	182
I – currency input and output.....	182
S – buying and selling currency, void.....	182
C – surcharge on sales and purchases of currency.....	183
P – print IDNP text.....	183
T – closing transactions, duplicate transactions.....	183
J – set date and time.....	183
Z – fiscal closure and X report.....	183
DP 25, DP 150, WP 500.....	184
"38" – open non-fiscal receipt.....	184
"42" – print non-fiscal text.....	184
"39" – close non-fiscal receipt.....	184
"48" – open fiscal receipt.....	185
"49" – free sale.....	185
"51" – subtotal.....	186
"53" – payment.....	186
"54" – print fiscal text.....	187
"56" – close fiscal receipt.....	187
"58" – programmed items sale.....	187
"33" – clear the display.....	188
"35" – show text on bottom row of the display.....	188
"47" – show text on top row of the display.....	188
"60" – cancel fiscal receipt.....	188
"61" – set date and time.....	188
"62" – read date and time.....	188
"69" – daily fiscal closure.....	189
"70" – internal input and output of cash.....	189
"71" – print diagnostic information.....	189
"76" – fiscal transaction status.....	189
"94" – fiscal memory report by date.....	190
"95" – fiscal memory report by Z report number.....	190
"100" – read error code and message.....	190
"105" – report operators.....	190
"106" – open the drawer.....	191
"107" – programming / reading / deleting and changing quantity for programmed items.....	191

"109" – duplicate last fiscal receipt.....	192
"111" – report items.....	192
"350" – execute custom command.....	192
FP-700.....	194
S - sale.....	194
E - sale of an item by department.....	195
A – print barcode.....	195
T - end of receipt or payment.....	196
C - discount/surcharge in percents.....	196
P - print text.....	196
I - official debiting / crediting.....	198
Y - opening non-fiscal receipt.....	198
Z – fiscal closure.....	198
D - receipt duplicate.....	198
X – cancel current fiscal receipt.....	198
48 – open fiscal receipt.....	200
58 – sale of programmed item.....	200
105 – operators report.....	200
107 – program and delete items.....	201
111 – items report.....	202
119 – electronic journal reading.....	202
350 – execute custom command.....	202
FP-550, DP-55, MP-55, DP-500.....	203
S - sale.....	203
E - sale of an item by department.....	204
T - end of receipt or payment.....	205
C - discount/surcharge in percents.....	205
P - print text.....	205
I - official debiting / crediting.....	207
Y - opening non-fiscal receipt.....	207
Z – fiscal closure.....	207
D - receipt duplicate.....	207
Montenegro.....	208
FP550, FP1000.....	208
"38" – open non-fiscal receipt.....	208
"42" – print non-fiscal text.....	208
"39" – close non-fiscal receipt.....	208
"48" – open fiscal receipt.....	208
"52" – sell items.....	209
"51" – subtotal.....	209
"53" – payment.....	210
"54" – print fiscal text.....	210
"56" – close fiscal receipt.....	210
"57" – cancel current fiscal receipt.....	210
"107" – programming and deleting items, adding quantity to programmed items.....	211
"109" – duplicate receipt.....	211
"33" – clear the display.....	212
"47" – show text on top row of the display.....	212
"35" – show text on bottom row of the display.....	212
"63" – show date and time.....	212
"100" – show text on both rows of the display.....	212
"69" – execute reports.....	212
"70" – internal debiting and crediting (cash in/out).....	213
"106" – open the drawer.....	213
"79" – annual / monthly short report.....	213
"94" – annual / monthly detailed report.....	213

Republica Srpska.....	214
FP-550.....	214
R - sale of an item.....	214
G – save an item into the printer.....	214
K – delete items from the printer.....	214
T - end of receipt or payment.....	215
I - official debiting / crediting.....	215
Y - opening non-fiscal receipt.....	215
P - print text.....	216
Z – fiscal closure.....	216
Romania.....	217
DP-50, DP-50D, MP-55, MP-55B, MP-55L, MP-500T.....	217
S - sale.....	217
T - end of receipt or payment.....	217
C - discount/surcharge in percents.....	218
P - print text.....	218
I - official debiting / crediting.....	218
Y - opening non-fiscal receipt.....	218
Z – fiscal closure.....	218
V – print barcode.....	220
F - allows keyboard input:.....	220
H - forbids keyboard input:.....	220
N – get fiscal receipt number.....	220
O – open drawer.....	220
DP-05, DP-25, DP-25BT, MP-55 Plus, DP-55 Plus, DP-500 Plus.....	221
S - sale.....	221
E - sale by department.....	221
T - end of receipt or payment.....	223
C - discount/surcharge in percents.....	223
P - print text.....	223
I - official debiting / crediting.....	225
Y - opening non-fiscal receipt.....	225
Z – fiscal closure.....	225
F - allows keyboard input:.....	226
H - forbids keyboard input:.....	226
N – get fiscal receipt number.....	226
O – open drawer.....	226
L – sending text to the printer's display.....	226
Serbia.....	228
FP600.....	228
"38" – open non-fiscal receipt.....	228
"42" – print non-fiscal text.....	228
"39" – close non-fiscal receipt.....	228
"48" – open fiscal receipt.....	229
"52" – sell items and show on the display.....	229
"51" – subtotal.....	230
"53" – payment.....	230
"56" – close fiscal receipt.....	230
"107" – programming and deleting items, changing price for programmed items.....	231
"33" – clear the display.....	232
"47" – show text on top row of the display.....	232
"35" – show text on bottom row of the display.....	232
"63" – show date and time.....	232
"100" – show text on both rows of the display.....	232
"60" – winter/summer time change.....	233

"69" – daily fiscal closure.....	233
"70" – internal input and output of cash.....	233
"106" – open the drawer.....	233
"73" – fiscal memory report by memory block number.....	234
"79" – fiscal memory report by date.....	234
"105" – report operators.....	234
"111" – report items.....	234
"84" – print barcode.....	235
"300" – loading items from file.....	235
"305" – custom command – add new item/change price of an existing item and then sell it.....	236
"350" – execute custom command.....	236
DP05, DP25, DP35, DP45.....	237
"48" – open fiscal receipt.....	237
"52" – sell programmed items.....	238
"51" – subtotal.....	238
"53" – payment.....	238
"56" – close fiscal receipt.....	239
"107" – programming and deleting items, changing price for programmed items.....	240
"33" – clear the display.....	242
"47" – show text on top row of the display.....	242
"35" – show text on bottom row of the display.....	242
"69" – daily fiscal closure.....	242
"70" – internal input and output of cash.....	243
"79" – fiscal memory report by date.....	243
"105" – report operators.....	243
"111" – report items.....	243
"300" – loading items from file.....	244
"305" – custom command – add new item/change price of an existing item and then sell it.....	244
"350" – execute custom command.....	245
Calculation algorithm for VAT and NET sums in fiscal devices.....	246
Working with FPrint WIN - running FPrintWIN from other applications.....	250
1. Using command line parameters.....	250
2. Changing devices when using resident mode.....	251
Regarding thread-safety.....	252
Fiscal devices setup.....	253
MP5000.....	253
MP-50.....	254
MP-55, MP55M, MP55L, MP55B.....	256
DP-50, DP-50D, DP 500.....	259
MP-500,MP-500T,MP-500TR.....	261
Samsung ER250F.....	263
Examples and commands list.....	265
Bulgarian DP 05/25/35/150, WP-50, DP 25 X, WP 500 X.....	265
Bulgarian FP 650/700/800/2000, FMP 10, FP 700 X, FMP 350 X, FMP 55 X.....	267
FP60, FP550, FP300, FP1000 - Kazakhstan.....	269
FP 550 <i>Repubblica Srpska</i>	271

FP 550 Bangladesh.....	273
FP 550, FP2000 Albania.....	275
DP 500 plus, DP55 plus, MP55 plus – Romania.....	277
DP 500 plus, DP55 plus, MP55 plus – Latvia.....	277
DP 500 plus, DP55 plus, MP55 plus - Moldova.....	278
Contact information and technical support.....	279

"FPrint Win 3.1.5" Help

{ document version 3.1.5.42; current program version 3.1.5.42 }

"FPrintWIN 3.1.5" is a program designed to manage sales from a text file via the electronic cash registers (ECR) and the fiscal printers (FP) manufactured by DATECS.


The program works in Windows XP/Vista/7/10 environment.

How to install?

Open the installation archive and extract the files in a directory of your choice. When file extraction finishes the installation of the program automatically starts up:




Press the "OK" button to pass on to the license agreement:

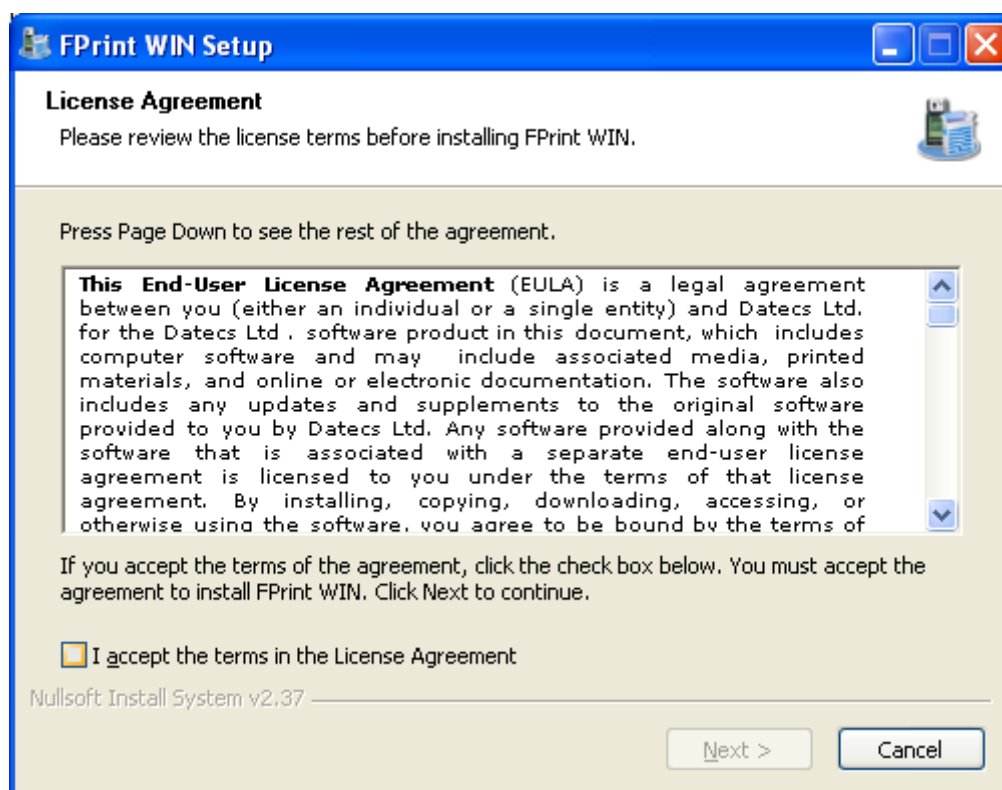


Please, read the license agreement carefully and if you agree with the conditions stated in it, choose " I accept the terms in the license agreement" and then click "Next".

In the window that comes next you can easily click the "Install" button or decide on another place for the installation.

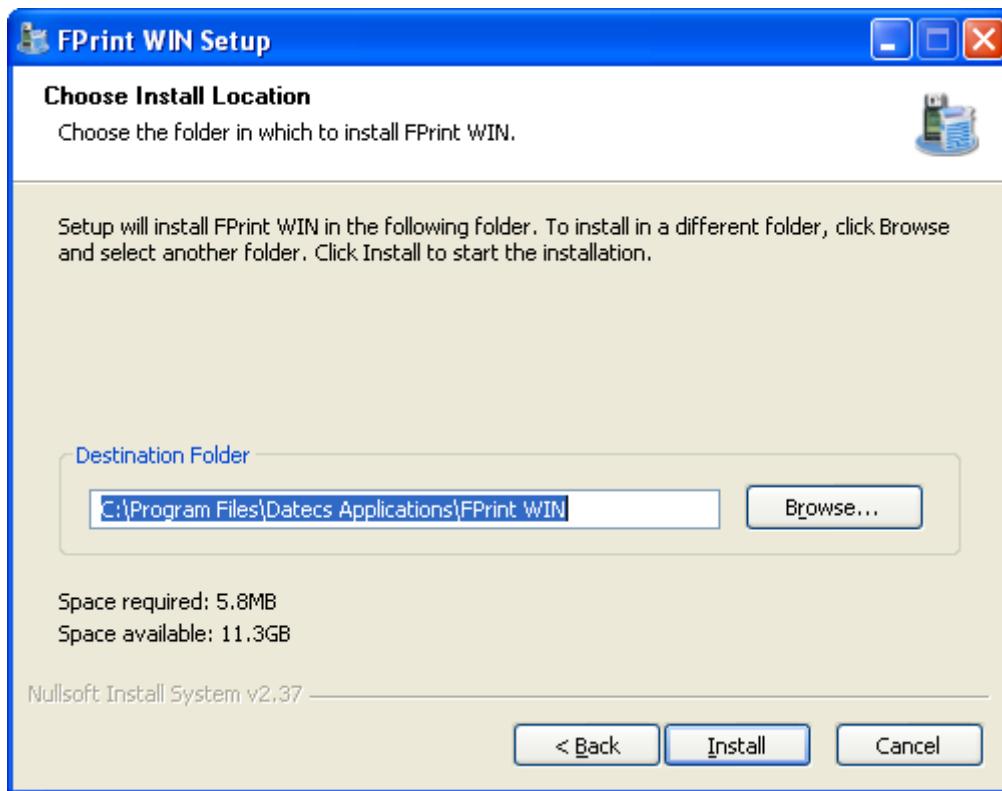

"FPrintWin" has been successfully installed - click "Finish".

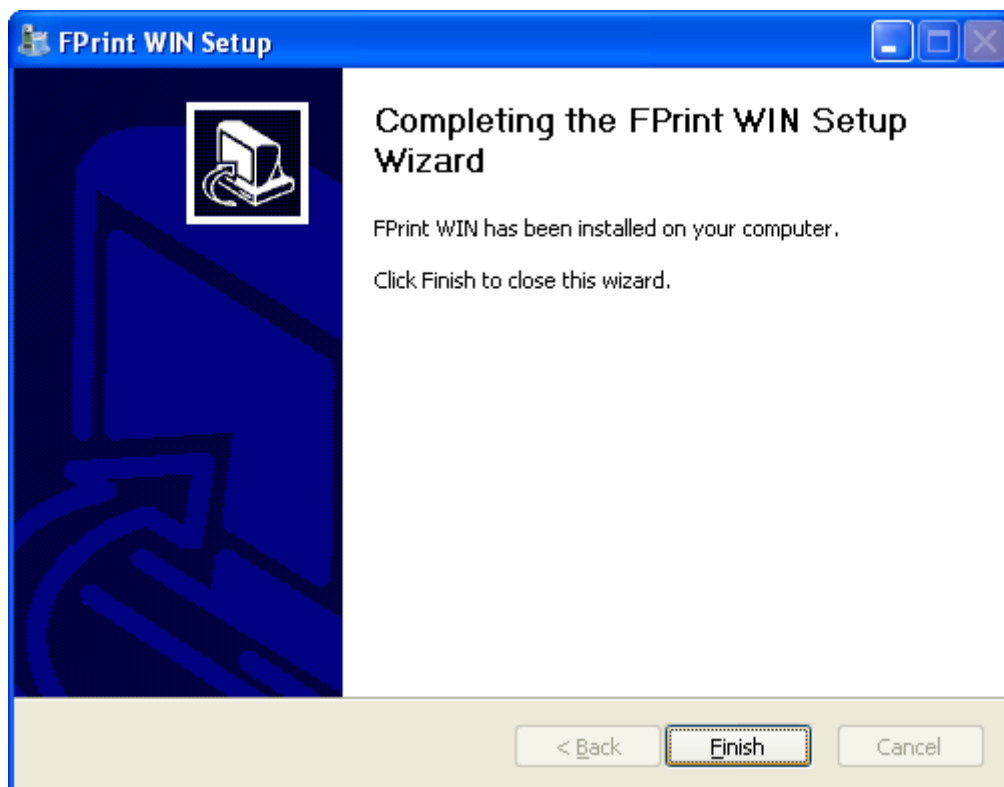

IMPORTANT!!!

The installation and the program setting must be done only by the system administrator.

Settings

Run the „Fprint settings manager” program from the programs menu “Datecs applications” to start the settings process if you use Fprint for the first time. After setup, you can start “FprintWIN 3.15”.

The program is no longer shown as an icon in the tray, but its visible in the task manager if working.

If using resident mode, the program will start automatically with windows. To close it in resident mode, use command 999 or close it with the task manager.

If using command line parameters to start Fprint, it will execute and the close on its own.

You can find example files in the installation folder + “\Sample files”.

1. Country: Select your country;
2. Devices: Select the type of your device;
3. Communication type:
 - RS232
 - COM port: Select the COM port to which the device is being connected;
 - Baud rate: The communication speed must be the same as the one set in the ECR or FP;

Settings

Country: Moldova

Device: FP 700MX

Communication type: ☒ RS232 ☐ IPv4

COM port: Com 3

Baud rate: 9600

Logical number: 2

Serial number from device: 525728

Get serial number

Key:

Choose Language : English

Type of answer:

☐ Classical - (Ok;Er;Sd;No)

☐ Error number

Default executable file:

Answer file:

☒ Resident mode

Executable file directory: D:\SOFT_SVN\PROJECTS\FPrint\ ...

Executable file name: s.inp

Executable file options : Delete file

Answer file directory: D:\SOFT_SVN\PROJECTS\FPrint\ ...

Answer file name: ans.txt

Answer file options: DateTime name - date_time_ansv

Check for input interval (mSec): 500

Log folder: C:\FPrint_logs\

☐ Answer in the same file

☐ DOS text

☐ Dont show error windows

☐ Dont delete executable file, if device is unresponsive

☒ Check connection to device after settings save

☒ UTF8 text

Operator password: 0000

Panic operation (only for certain devices, see documentation): Off

3.1.5.41

Save Exit Help

- Ipv4
- IP address: the IP address of the device (xxx.xxx.xxx.xxx);
- Port: the IP port of the device;

Settings

Country: Moldova

Device: FP 700MX

Communication type: ☐ RS232 ☒ IPv4

IP address: 192.168.13.25

Port: 4999

Serial number from device: 525728

Get serial number

Key:

Choose Language : English

Type of answer

☐ Classical - (Ok;Er;Sd;No)

☐ Error number

Default executable file:

Answer file:

☒ Resident mode

Executable file directory: D:\SOFT_SVN\PROJECTS\FPrint\

Executable file name: s.inp

Executable file options : Delete file

Answer file directory: D:\SOFT_SVN\PROJECTS\FPrint\

Answer file name: ans.txt

Answer file options: DateTime name - date_time_ansv

Check for input interval (mSec): 500

Log folder: C:\FPrint_logs\

☐ Answer in the same file

Operator password: 0000

☐ DOS text

☐ Dont show error windows

☐ Dont delete executable file, if device is unresponsive

☒ Check connection to device after settings save

☒ UTF8 text

Panic operation (only for certain devices, see documentation): Off

3.1.5.41

Save Exit Help

4. Logical number: You must enter the logical number of your device, if it has one;
5. Serial number: If it the device is a cash register, set the device in Sales Mode- put the key in "REG" position and log in as the respective operator. In newer ECRs, pick "Connect to PC" option from the main menu.
6. Press the "Get serial number" button and the fiscal device with the respective settings will enter and save its serial number for you.
7. Key: Enter the registration key for this serial number;
8. Choose language setting for the program's interface – English or Bulgarian available;(NOTE – this settings can be changed by any user, not only by the administrator);
9. "Answer in the same file" - If the box is not checked, you can save the answer of your order in another file chosen by you;
10. You can select default files for reading and saving by browsing with the button (not in

resident mode).

11. In case the program working with "FPrint WIN" has not set as a parameter the name of the order text file, "FPrint WIN" uses the default file and saves the answer in the file that has been selected for the "Answer file:" field. If the field contains no file path, "FPrint WIN" will search for the file in its own folder (the folder where "FPrint WIN" was installed);
12. The result of every text file command that is carried out can be saved in a service field (see "File Format")) in two different ways, depending in what you have marked for "Type of answer"(see "Types of Errors");
13. If your program generates DOS Cyrillic, you must check the "DOS text" box. The checkbox is not obligatory if you work with a fully Windows-based program.(Only for Bulgarian Edition);
14. The checkbox "Don't show error windows" redirects the error messages to the log file instead of being shown as a message box on the screen. Notice that if you use this the log file gets bigger over time(albeit being just text) and if you generate a lot of errors you must remember to check/delete it.
15. The "Don't delete executable file if device is unresponsive" option is designed for resident mode and the "delete file" executable option. If selected, the file is not deleted in case the device is switched off or not responding for some reason.
16. "Check connection to device on settings exit" forces connection checking each time you close the settings form via Save or Cancel.

The screenshot shows the FPrint WIN settings dialog box with the following fields and annotations:

- Executable file directory:** C:\Dates (annotated with a red 1)
- Executable file name:** dates.in (annotated with a red 2)
- Executable file options:** Move to directory (annotated with a red 3)
- Executable file options:** C:\Dates\out (annotated with a red 4)
- Answer file directory:** C:\Dates (annotated with a red 5)
- Answer file name:** dates.out (annotated with a red 6)
- Answer file options:** DateTime name - date_time_ansv (annotated with a red 7)

17. New in version 3.00 is the option for resident mode. This mode allows you to execute sells by copying a text file with a name of your choice or default name('sell_execute.txt') into a directory of your choice.
 - (1) Select directory and copy the file with sales here in order to execute it;
 - (2) Select name for the file with sales, which Fprint will try to execute (if no name is selected then Fprint tries to execute with default name – sell_execute.txt). You can also use wildcard symbols (e.g. "*.inp" will execute all files in the folder with .inp extension);
 - (3) Select whether to delete the executable file after print('Delete file option') or rename and move it to another directory('Move to directory' option);
 - (4) If you've selected 'Move to directory' from option 3, here you can select directory where the printed file will be moved;
 - (5) Select directory for the answer file;
 - (6) Select name for the answer file (if no name is selected then default name is

sell_answer.txt);

- (7) Select whether you will have only one answer file ('Constant name' option) or after each finished bill Fprint will generate different answer file ('Date time name' option);

If field “Answer file name” is blank and “constant name” in answer options is selected, then the answer will be saved in the answer folder, but the name will be the same as the execute filename.

- 18.Operator password – used in fiscal printers and ECRs with SM cards. Set this password to correspond to the password of operator 1 in the device. By default FPs password is 0000, for ECRs it's 1.
- 19.Panic operation. Allows unfinished receipts to be closed either automatically or after confirmation from the user. **WARNING!!!** This option is currently supported for bulgarian devices only.
- 20.Check for input interval – interval in milliseconds, after which the program checks for input file in the input folder when resident mode is selected.
- 21.UTF8 text – if the input file is in UTF8 format, check this option (currently works only for bulgarian devices).

To save all the settings for the current device, click "Save". You may choose to repeat the process for your backup fiscal device.

For your facilitation you can use the “Wizard” ,which will guide you through the above process step by step.

In case Fprint raises errors due to various reasons (wrong settings, bugs, etc.), a log file is created (Fprint_log.txt).

Language support

Currently Fprint supports Bulgarian, English , Romanian and Kazakh languages (you can even add your own language) for the settings form language.

On start, Fprint reads the language texts from a file (which is different for each language). You can change the caption of each label in the program by editing that particular file.

The supported language list is stored in the “Language_list.txt” file in the program's folder and it looks like this:

Bulgarian;BGR.txt

English;ENU.txt

Romanian;RO.txt

Kazakh;KZ.txt

Bosnian;BH.txt

Each row in this file has 2 columns, separated by the ; symbol. First column is the full language name (i.e. “English”) and the second column is the file name (i.e. “ENU.txt”).

If you want to edit a label in the program, just open the file for your language (the files are in the main folder of the program), find the text and replace it.

If you want to add a new language:

- open the file “ Language_list.txt” and append a row like this (i.e. I will add Spanish):
Spanish;SP.txt
- close Fprint and reopen it, select Spanish language and restart again
- you should have a “SP.txt” in the folder now, edit its contents the way you want
- run Fprint with your new language

File format

The input file contains ASCII text commands. Each line consists of only one command. The commands' format is:

[command], [logical number], [service field];[parameters];

[command]: this field contains one of the following letters: S, T, P, C, I, H, F, Y, D, Z, B;
{ Version 3.09 and above supports number commands for some printers }

[logical number]: this is the number saved in table 2, field 1 of the ECR; for FP the field is irrelevant, allowed value is 0~99;

[service field]: consists of 3 sub-fields, each divided by a comma. Every sub-field contains respectively 6, 1 and 2 underlines.

(NOTE: for fiscal printers FP550-Kz,FP300-Kz,FP1000-Kz, the first sub-field is 10 underlines)

_____ , _ , _____

In this field FPRINT records the result of the respective command execution. In the first 6-lined field, what is recorded is the ECR or FP serial number. The second 1-line field saves an index from 0 to 9 (**NOTE:** Albanian DP50D, DP500 and MP55LD might save numbers 0 - 99), whose value increases with each successful command. The last 2-lined field indicates whether and how a command has been carried out in the following format:

___ - unprocessed record ;

Depending on what type of answer you have chosen when setting the program (see Settings)), the result is either saved in a DOS "FprintWin" compatible format (classical answer) or what is recorded is the error number, if such occurs.

Classical answer :

Er - the command has not been carried out due to an error in field [parameters] or invalid command sequence during work with FP (for example: S, T - payment without closing the receipt, S or S, C, C, or S, Z);

Ok - the command is successful;

Sd - the command has not been carried out; possible reasons: paper is out; the printer was

turned off during print; there is a problem with the fiscal memory or the printing device; the FP clock is not set;

No - the respective ECR or FP does not execute this command (not considered as an error);

Error number :

Code	Meaning
0	Command successful
1	Communication error. Make sure the device is working properly and check if it is connected to the computer
2	Command execution error; Check if the device is setup properly (tax numbers, date and time, header and footer may not be set correctly) or if there is an opened receipt
3	The program cannot open COM port
4	There is no such device
5	Incorrect command parameters
6	Non-existent file (check your execute and answer file paths)
7	Wrong file structure
8	Please enter the registration key
9	Please enter all the parameters correctly
10	Unspecified error (contact the developer)
11	Out of paper
12	Fiscal command not allowed
14	Fiscal memory is full
15	Electronic journal is full
16	Tax terminal is not responding

The numbers 0,1,2,5,10,11,12 through 16 are recorded in the file service field, and the rest can be displayed as program messages.

When starting Fprint with parameters (see section [Working with FPrint WIN - running FPrintWIN from other applications](#)) and you pass the 5th parameter (dont show pop-up windows) with value „1“, the following errors will be logged in the error log file:

- 1 - Communication error! Make sure the device is working properly and check if it is connected to the computer; - the log file row will be like this:
 - „04.8.2009 11:52:48:**Communication error! Make sure the device is connected and switched on.**“
- 3 - The program cannot open COM port No; - the log file row will be like this:
 - „04.8.2009 11:52:48:**The program can not open port: COM №**“

- 6 - Non-existent file; - the log file row will be like this:
 - „04.8.2009 11:52:48:***File does not exist.***“
- 7 - Wrong file structure; - the log file row will be like this:
 - „04.8.2009 11:52:48:***Something is wrong with this file!***“
- 8 - Please, enter the registration key; - the log file row will be like this:
 - „04.8.2009 11:52:48:***Please enter your registration key!***“

Some commands can return data or additional error messages in the answer file. The format of the returned data is:

[command], [logical number], [service field];[data, error messages];[input parameters];

Devices by countries

Albania

33 – clear the display

Syntax	33,1,____,_,_;
Parameters description	-
Supported devices	FP550, FP2000, DP25, WP50

35 – show text on bottom row of the display

Syntax	35,1,____,_,_:[text];
Parameters description	[text] is random text (20 symbols max)
Supported devices	FP550, FP2000, DP25, WP50

38 – open non-fiscal receipt

Syntax	38,1,____,_,_;
Parameters description	-
Success conditions for execution	• no oneped receipts • paper
Supported devices	FP550, FP2000, DP25, WP50

39 – close non-fiscal receipt

Syntax	39,1,____,_,_;
Parameters description	-
Success conditions for execution	• oneped non-fiscal receipt • paper
Supported devices	FP550, FP2000, DP25, WP50

42 – print non-fiscal text

Syntax	42,1,_____,_,_:[text];
Parameters description	[text] is random text (see each device's manual for max size)
Success conditions for execution	• oneped non-fiscal receipt • paper
Supported devices	FP550, FP2000, DP25, WP50

47 – show text on top row of the display

Syntax	47,1,_____,_,_:[text];
Parameters description	[text] is random text (max 20 symbols)
Supported devices	FP550, FP2000, DP25, WP50

48 – open fiscal receipt

Syntax 1	48,1,_____,_,_:[operator];[password];		
Parameters description	Parameter	Values	Description
	operator	1-16	Operator number
	password	4~8 digits	Operator's password
Syntax 2	48,1,_____,_,_:[operator];[password];[InvoiceNum];		
Parameters description	This syntax opens invoice receipts.		
	Parameter	Values	Description
	InvoiceNum	max 100000000	Invoice number
Supported devices	FP550, FP2000		
Syntax 3	48,1,_____,_,_:[operator];[password];[POS id];[Open invoice];[InvoiceNum];		
Parameters description	Parameter	Values	Description
	operator	1-30	Operator number
	password	1~8 digits	Operator's password
	POS id	1~99999	Point of sale number
	Open invoice	0 or 1	Flag, 1 opens invoice
	InvoiceNum	max 9999999	Invoice number
Supported devices	DP25, WP50		
Answer syntax in file	If the command passed: 48,1,_____,_,_:[Slip number];input parameters; If the command failed: 48,1,_____,_,_:[Error message];input parameters;		
Success conditions for execution	- the device is initialized (serial and FM numbers set, SIM card registered if supported) - no prior opened receipt - paper - header and footer set - correct parameters - the clock is set - fiscal memory is not full		

49 – free sale

Syntax 1	49,1,_____,.,_.;[item];[price];[quantity];[tax group];[exchange];[flag];[amount];		
Parameters description	Parameter	Values	Description
	item	up to 24 symbols	The name of the item
	price	-999999.99 ~ 999999.99	Price for the item, the negative price is used for voiding sales
	quantity	0 ~ 99999.999	The quantity of the item
	tax group	2 ~ 9	Apart from the 8 tax groups there is a tax free group, accessible with the number 1
	exchange	0 or 1	A number that determines if the item is beeing returned
	flag	[flag] is a number that means: value '0' – surcharge in percent value '1' – discount in percent value '2' – surcharge in sum value '3' – discount in sum	
	amount	0 ~ 21474836	The sum of the discount/surcharge in percent or sum
Supported devices	FP550, FP2000		
Syntax 2	49,1,_____,.,_.;[item];[price];[quantity];[tax group];[;];[flag];[amount];[departament];[measure unit];		
Parameters description	Parameter	Values	Description
	item	up to 72 symbols	The name of the item
	price	-99999 ~ 99999	Price for the item, the negative price is used for voiding sales
	quantity	0 ~ 99999,999	The quantity of the item
	tax group	2 ~ 9	Apart from the 8 tax groups there is a tax free group, accessible with the number 1
	exchange	0 or 1	A number that determines if the item is beeing returned
	flag	[flag] is a number 0~4 that means: 0 – no correction 1 – surcharge in percent 2 – discount in percent 3 – surcharge in sum 4 – discount in sum	
	amount	0 ~ 21474836	The sum of the discount/surcharge in percent or sum

	departament	0~99	Specifies the department of the item sold
	measure unit	max 6 symbols	The measurement unit of the item sold
Supported devices	DP25, WP50		
Success conditions for execution	• opened fiscal receipt • paper • header and footer set • correct parameters • the clock is set • fiscal memory is not full		

51 – subtotal			
Syntax 1	51,1,____,_,_;;[Print];[Display];[Flag];[Amount];		
Parameters description	Parameter	Values	Description
	print	0 ~ 1	Flag for printing the subtotal on paper.
	display	0 ~ 1	Price for the item, the negative price is used for voiding sales
	flag	[flag] is a number 0~3 that means: 0 – surcharge in percent 1 – discount in percent 2 – surcharge in sum 3 – discount in sum	Determines the type of the correction.
	amount	0 ~ 999999.99	The sum of the discount/surcharge in percent or sum
Supported devices	FP550, FP2000		
Parameters description	Parameter	Values	Description
	print	0 ~ 1	Flag for printing the subtotal on paper.
	display	0 ~ 1	Price for the item, the negative price is used for voiding sales
	flag	[flag] is a number 0~3 that means: 0 – surcharge in percent 1 – discount in percent 2 – surcharge in sum 3 – discount in sum	Determines the type of the correction.
	amount	0 ~ 99999	The sum of the discount/surcharge in percent or sum
Supported devices	DP25, WP50		

53 – payment

Syntax 1	53,1,_____,_,_:[flag];[amount];		
Parameters description	Parameter	Values	Description
	flag	[flag] – parameter that determines the type of the payment: 0 - payment in cash 1 - payment via credit 2 - payment via cheque 3 - payment via debit card 4 - programmable payment 1 5 - programmable payment 2	Determines the type of the payment.
	amount	0 ~ 9999999.99	The sum of the payment
Supported devices	FP550, FP2000		
Parameters description	Parameter	Values	Description
	print	0 ~ 1	
	display	0 ~ 1	Price for the item, the negative price is used for voiding sales
	flag	[flag] is a number 0~3 that means: 0 – surcharge in percent 1 – discount in percent 2 – surcharge in sum 3 – discount in sum	Determines the type of the correction.
	amount	0 ~ 99999	The sum of the discount/surcharge in percent or sum
Supported devices	DP25, WP50		
Answer syntax in file	If the command passed: 53,1,_____,_,_:[Status];[Amount];input parameters; [Status] - Indicates an error; 'D'- The command passed, return when the paid sum is less than the sum of the receipt. The residual sum due for payment is returned to Amount; 'R'- The command passed, return when the paid sum is greater than the sum of the receipt. A message “CHANGE” will be printed out and the change will be returned to Amount; [Amount]- The sum tendered (0.00...9999999.99 or 0...999999999 depending dec point position); If the command failed: 53,1,_____,_,_:[Error message];input parameters;		
Additional info	The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt. If the [amount] parameter is empty, the ECRs will automatically pay the whole sum of the receipt, with payment type set by the [flag].		

54 – print fiscal text

Syntax 1	54,1,____,_,_:[text];		
Parameters description	Parameter	Values	Description
	text	Up to 30 symbols	Text to be printed.
Supported devices	FP550, FP2000		
Syntax 2	54,1,____,_,_:[text];[bold];[italic];[double Height];[underline];[alignment];		
	Parameter	Values	Description
	text	Up to 72 symbols	Text to be printed.
	bold	0 ~ 1	Flag for font style.
	italic	0 ~ 1	
	double Height	0 ~ 1	
	underline	0 ~ 1	
	alignment	0~2	0=left alignment, 1=center, 2=right
Supported devices	DP25, WP50		

56 – close fiscal receipt

Syntax 1	56,1,____,_,_;		
Description	Closes an opened fiscal receipt, with payment done beforehand.		
Supported devices	FP550, FP2000, DP25, WP50		
Answer syntax in file	If the command passed: 56,1,____,_,_:[Slip number]; If the command failed: 56,1,____,_,_:[Error message];		

60 – cancel fiscal receipt

Syntax 1	60,1,____,_,_;		
Description	Cancels an opened fiscal receipt. This command will work only if no payments have been made yet.		
Supported devices	FP550, FP2000, DP25, WP50		

63 – show and read date/time

Syntax 1	63,1,____,_,_;
Description	Reads and shows ECR date and time in format DD-MM-YY hh:mm:ss
Supported devices	FP550, FP2000, DP25, WP50
Answer syntax in file	If the command passed: 63,1,____,_,_:[Date time]; If the command failed: 63,1,____,_,_:[Error message];

69 – daily closure

Syntax 1	69,1,____,_,_:[flag];		
Parameters description	Parameter	Values	Description
	flag	0 – Z report 1 – X report	Determines the report type.
Supported devices	FP550, FP2000, DP25, WP50		

70 – cash in/out

Syntax 1	70,1,____,_,_:[flag];[amount];		
Parameters description	Parameter	Values	Description
	flag	0 – cashing in 1 – cashing out	Determines the report type.
	amount	0~99999999	Amount to be cashed in/out.
Supported devices	FP550, FP2000, DP25, WP50		

79 – annual/monthly report

Syntax 1	79,1,____,_,_:[Year];[Month];		
Parameters description	Parameter	Values	Description
	year	format 'YY'	If the month parameter is emty or 0, an annual report is executed.
	month	format 'MM'	
Supported devices	FP550, FP2000		

84 – print barcode

Syntax 1	84,1,____,_,_:[type];[value];		
Parameters description	Parameter	Values	Description
	type	[type] is a number that defines the barcode type: 1 : EAN8 2 : EAN13 3 : Code 128 defines	Defines the barcode type
	value	Depends on the barcode, up to 400 symbols	
Supported devices	FP550, FP2000		
Parameters description	Parameter	Values	Description
	type	[type] is a number that defines the barcode type: 1 : EAN8 2 : EAN13 3 : Code 128 defines 4 : QR code 5 : Interleave 2of5 6 : PDF417 truncated 7 : PDF417 normal	Defines the barcode type
	value	Depends on the barcode, up to 400 symbols	
Supported devices	DP25, WP50		

94 – fiscal report by date

Syntax 1	94,1,____,_,_:[Year];[Month]; - annual/monthly report		
Parameters description	Parameter	Values	Description
	year	format 'YY'	If the month parameter is empty or 0, an annual report is executed.
	month	format 'MM'	
Supported devices	FP550, FP2000		
Syntax 2	94,1,____,_,_:[Type];[StartDate];[EndDate];		
Parameters description	Parameter	Values	Description
	type	0 – short report 1 – detailed report	Type of the report
	StartDate,	format 'DD-MM-YY'	Date range of the report

	EndDate		
Supported devices	DP25, WP50		
100 – show text on both rows of the display			
Syntax 1	100,1,____,_,_;;[text];		
Parameters description	Parameter	Values	Description
	text	Max 40 symbols	Text to be displayed
Supported devices	FP550, FP2000		

105 – operator's report			
Syntax 1	105,1,____,_,_;;[first];[last];[clearType];		
Parameters description	Parameter	Values	Description
	first	1-30	First operator in the report
	last	1-30	Last operator in the report
	clearType	0~1	If 1 – clears the operator registers
Supported devices	FP550, FP2000		

106 – open drawer	
Syntax 1	106,1,____,_,_;;
Supported devices	FP550, FP2000
Syntax 2	100,1,____,_,_;;[miliSec];
Parameters description	[miliSec] is the impulse time in miliseconds.
Supported devices	DP25, WP50

107 – programming items

Syntax 1	107,1,_____,_,_;1;[PLU];[VAT];[Department];[Stock Grp];[Price type];[Price];[replace Qty];[Quantity];[Bacode 1];[Bacode 2];[Bacode 3];[Bacode 4];[Name];[unit];		
Parameters description	Programming items		
	Parameter	Values	Description
	PLU	1 ~ 3000	Item number
	VAT	1 ~ 9	Vat group
	Department	0 ~ 99	Department
	Stock Grp	1 ~ 99	Stock group
	Price type	0~2 '0' - fixed price '1' - free price '2' - max price	Price type
	Price	0 ~ 99999	Price
	replace Qty	0 ~ 1	If 1, replaced the stock quantity for the item with the value in [Quantity]
	Quantity	0 ~ 99999.999	Stock quantity
	Bacode 1~4		Barcode values
	Name	Up to 32 symbols	Name of the items
	unit	0-19	Measurement unit number
Syntax 2	107,1,_____,_,_;2;[Plu 1];[Plu 2];		
Parameters description	Delete items		
	Parameter	Values	Description
	Plu 1	1 ~ 3000 or 'A'	If the letter 'A' is present, deletes all items
Parameters description	Plu 2	1 ~ 3000	End range number to delete
Syntax 3	107,1,_____,_,_;3;[PLU];[+ - Qty];		
Parameters description	Add stock quantity		
	Parameter	Values	Description
	PLU	1 ~ 3000	Item number
Parameters description	+ - Qty	0 ~ +-99999.999	Quantity to add/subtract
Syntax 4	107,1,_____,_,_;4;[PLU];		
Parameters description	Reading item data		
	Parameter	Values	Description
	PLU	1 ~ 3000	Item number
Parameters description	Output data in the answer file: 107,1,_____,_,_;[plu];[VAT];[department];[stock];[price type];[price];[Turnover];[Sold qty]; [Stock qty];[barcode 1];[barcode 2];[barcode 3];[barcode 4];[Name];[unit];		
Supported devices	DP25, WP50		

109 – duplicate receipt

Syntax 1	109,1,____,_,_;;[Count];		
Parameters description	Parameter	Values	Description
	count	Number of copies to be printed.	This command must be executed only after the last printed receipt is closed.
Supported devices	FP550, FP2000		

111 – PLU reports

Syntax 1	111,1,____,_,_;;[type];[first Plu];[last Plu];		
Parameters description	Parameter	Values	Description
	type	'0' - PLU turnovers; '1' - PLU turnovers with clearing; '2' - PLU parameters; '3' - PLU stock;	Type of the report
	first Plu	1 ~ 3000	Starting range
	last Plu	1 ~ 3000	Ending range
Supported devices	DP25, WP50		

122 – test mode

Syntax 1	122,1,____,_,_;;[Mode];		
Parameters description	Parameter	Values	Description
	mode	0~1	Switches the testing mode on and off. When you execute this command, Z report with registry clear will be automatically executed.
Supported devices	FP550, FP2000		

350 – custom command

Syntax 1	350,1,_____,_,_:[command];[Data]		
Parameters description	Parameter	Values	Description
	command	30 ~ 253	Command code, based on the firmware documentation
	Data	Special symbols for tabulation and line feed are to be presented as: [TAB] or [\t] [LF] or [\lf] or [\n]	Data for the command, see firmware doc
Supported devices	DP25, WP50		

(ECRs with and without active keyboard)

S - sale of an item

S,1,_____,_,_;;[item];[price];[quantity];[stand];[item group];[tax group];[PLU sale];0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number 0 ~ 99999.999);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 99);
- [tax group] is the tax group of the item (1 ~ 8);
- [PLU sale] – if this parameter is 1, a sale by PLU number is executed; the PLU number must be written instead of item name (the [item] parameter); When sale by PLU is made, the parameters [price];[stand];[item group];[tax group]; are not mandatory (if not present or 0), the programmed values for the item are used);

The ECR can work with or without decimal separator (programming option 2, table 4, row 17 – if its value is **0** then it works without decimal separator, if its value is **1** then it works with decimal separator).

When working in mode WITH decimal separator – In order to sell with real numbers, you must pass the [price] as integer, with extra 2 digits at the end, defining the fraction of the number. For example, if you want to sell one item with price 1.34, you pass 134 in the [price] parameter:

S,1,_____,_,_;;Item;**134**;1.000;1;1;1;0;0; - ECR will sell with price = 1.34

When working in mode WITHOUT decimal separator - you must pass only integer values to the [price] parameter. You can sell only with **integer values**, DO NOT ADD 2 DIGITS LIKE IN THE PREVIOUS MODE (with decimal separator).

If you send the previous example when working in this mode, you will sell the item with price, equal to 134:

S,1,_____,_,_;;Item;**134**;1.000;1;1;1;0;0; - ECR will sell with price = 134

NOTE for DP 50, DP 500, MP55LD:

Deep void of a sale – voids the sale plus the discount or surcharge made on that item. This can be done by repeating the S command, but placing the “-” sign in front of the **[quantity]**.

Example: S,1,_____,__,__;Test;10;1.000;1;1;1;0;0; *this is the sell*
 C,1,_____,__,__;0;10;;;; *this is 10% surcharge on the sell*
 S,1,_____,__,__;Test;10;-1.000;1;1;1;0;0; *this is the full void*
 Total sum to be payed = 0

Refund of an item (void or cancellation) – voids the last sell and you can make additional discount/surcharge on the refund sum. This can be done by repeating the S command, but placing the “-” sign in front of the **[price]** (or in front of both price AND quantity).

Example: S,1,_____,__,__;Test;10;1.000;1;1;1;0;0; *this is the item sale*
 C,1,_____,__,__;0;10;;;; *this is 10% surcharge on the sale*
 S,1,_____,__,__;Test;-10;1.000;1;1;1;0;0; *this is the reversal*
 C,1,_____,__,__;1;10;;;; *this is 10% discount on the refund*
 Total sum to be payed = 2 (cause there was a discount on the refund)

M – open new invoice

M,1,_____,_,_;;[invoice number];

*[invoice number] is the invoice number (0 to 9 digits, max number 999999999)

The command will **not** be carried out if there is an open receipt.

J – set date and time

J,1,_____,_,_;;[Day];[Month];[Year];[Hour];[Minute];

The parameters for dates are in short time format (e.g. 2009 is 09);

Example: J,1,_____,_,_;;22;10;09;14;44;

V – immediate void

V,1,_____,_,_;;

After the execution the previous operation will be annulled:

- sold item with/without surcharge/discount,
- refunded item,
- surcharge/discount over a refunded item,
- surcharge/discount over the subtotal.

The command could be sent repeatedly, annulling all of the sales in the receipt.

Before the execution the receipt must be opened but the payment operations should not be started.

F - allows keyboard input:

F,1,_____,_,_;;

H - forbids keyboard input:

H,1,_____,_,_;;

T - end of receipt or payment

*** *automatic receipt end:***

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

*** *payment:***

T,1,_____,_,_:[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
- [amount] - the amount of the surcharge/discount (99%);

If prior to this command a payment ("T" cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 30 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_:[type];[sum];

- [type] is a number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt and print text

Y,1,_____,_,_:[line 1]; [line 2];[line 3]; line 4]; line 5];

An official receipt is opened and only the first line is printed. In the official receipt what can be carried out is only the Y command (printing of text) and the T command (closing the official receipt).

Z – fiscal closure

Z,1,_____,_,_:[type];

* [type] specifies the report type:

- 0 : X report;
- 1 : Z report;

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

S - sale of an item

S,1,_____,_,____;[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number - 99999.999 ~ 99999.999; negative value is for “storno”);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 99);
- [tax group] is the tax group of the item (1 ~ 4);

FP will not carry out this command if:

- * the maximum number of sales (120) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

Additional remark for this command:

If the first row in a file is the S command, but with negative [quantity] parameter, the command opens “Storno” receipt and sells that and every subsequent S item with negative value.

E - sale of an item by department

E,1,_____,_,__,[item];[price];[quantity];[stand];[item group];[department];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number - 99999.999 ~ 99999.999; negative value is for “storno”);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 99);
- [department] is the department (a number 1 ~ 99);

FP will not carry out this command if:

- * the maximum number of sales (120) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

Additional remark for this command:

If the first row in a file is the E command, but with negative [quantity] parameter, the command opens “Storno” receipt and sells that and every subsequent E item with negative value.

T - end of receipt or payment

*** *automatic receipt end:***

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

*** *payment:***

T,1,_____,_,_;[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6 are for voucher and coupon payments. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_:[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_:[type];[year];[month];

[type] specifies the report type:

- 0 : X report;
- 1 : Z report;
- 2 : prints short monthly/yearly report;
- 3 : prints extended monthly/yearly report;

[year] – if [type] is 2 or 3, this is the year of the report (format “YY”);

[month] - if [type] is 2 or 3, this is the month of the report (format “MM”);

If [month] is empty a year report will print. The reports 2 and 3 are only available if the printer is fiscalized and at least one Z report is made.

If no parameters are passed, an X report is executed.

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

X – cancel current fiscal receipt

X,1,_____,_,_;

The whole fiscal receipt will be canceled and closed as non-fiscal. This command will work only if no payments have been made yet.

L – sending text to the printer's display

L,[logical number],_____,_,_:[Command];[View type];[Text];

The [Command] parameter can have the following values:

- 0 – clears both rows of the display
- 1 – clears the top row of the display
- 2 – clears the bottom row of the display
- 3 – prints [Text] to the top row of the display
- 4 – prints [Text] to the bottom row of the display
- 5 – prints [Text] to both rows of the display
- 6 – prints date and time to the bottom row of the display

The [View type] parameter can have the following values:

- 0 – the [Text] is printed on the display at once
- 1 – the [Text] is floating(from right to left) on the display

The [Text] parameter contains the text that is to be shown on the display (the display can show 20 characters on each row at once, larger text is printed in series or its floating) – maximum 200 symbols.

48 – open fiscal receipt

48,1,_____,_,_;;[operator];[password];[workplace];

- [operator] is the operator number (1-30);
- [password] is the operator's password(1 to 8 numbers);
- [workplace] is the work place for the operator(1-99999);

Used to open fiscal receipt with selected operator (S command opens always with operator 1).

58 – sale of programmed item

58,1,_____,_,_;;[code];[department];[quantity];[percent];[sum];;;

- [code] is the number of the item to be sold;
- [department] is the department number (if 0 the programmed Tax group is used instead);
- [quantity] is the quantity to be sold (-99999.999 ~ 99999.999);
- [percent] discount/surcharge in % (+- 99%);
- [sum] discount/surcharge by sum;

Additional remark for this command:

If the first row in a file is the 58 command, but with negative [quantity] parameter, the command opens “Storno” receipt and sells that and every subsequent 58 item with negative value.

105 – operators report

105,1,_____,_,_;

Prints report for the sales by operator.

107 – program and delete items

107,1,_____,_,_:[operation];....parameters...

*[operation] is a value of 1 to 4:

Value 1 – program items. Syntax:

107,1,_____,_,_;1;[Tax group];[code];[price];[name];[stock group];[+ - quantity];
[replace];

- [Tax group] is the tax group (1-8 corresponds to A,B,C...);
- [code] is the item number(1~999999999);
- [price] is the price for the item (999999.99);
- [name] is the name of the item (max 22);
- [stock group] is the stock group number of the item(1~9);
- [+ - quantity] is the available quantity for the item. If [replace] = 1, then this quantity replaces the current in the printer, otherwise its added/subtracted to/from the quantity in the printer;
- [replace] is 0 or 1 – see above;

Value 2 – delete items. Syntax:

107,1,_____,_,_;2;[all];[code 1];[code 2];

- [all] is 0 or 1 – if 1 then all items are deleted;
- [code 1] is the number of the item to be deleted;
- [code 2] – if code 1 and 2 are numbers greater than 0, then all items in range (code1 to code 2) are deleted;

Value 3 – add/subtract quantity. Syntax:

107,1,_____,_,_;3;[code];[+ - quantity];

- [code] is the item number;
- [+ - quantity] is the quantity to be added/subtracted to the current in the printer;

Value 4 – read item data. Syntax:

107,1,_____,_,_;4;[code];

- [code] is the number of the item;

The answer file contains the data for the item in this format:

107,1,_____,_,_;(code);(tax grp);(stock grp);(price);(total by sells);(sold quantity);
(available quantity);(name);

111 – items report

111,1,_____,_,_:[code];[start number];[end number];[stock group];

- [code] is 0 or 1 – if 0 prints only items with sales made, if 1 – prints all items;
- [start number], [end number] defines the range of item numbers;
- [stock group] – prints only items in this stock group;

S - sale of an item

S,1,_____,_,____;[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 19 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number - 99999.999 ~ 99999.999; negative value is for “storno”);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 99);
- [tax group] is the tax group of the item (1 ~ 4);

FP will not carry out this command if:

- * the maximum number of sales (99) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_;[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
- [amount] - the amount of the surcharge/discount (99%);

If prior to this command a payment ("T" cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 30 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_:[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Bangladesh

FP550

See the list of executable commands for devices (some of the common commands are also supported for this printer). Also refer to the example file in the “Sample files” folder in the installation.

38 – open non fiscal (official) receipt

```
38,1,____,_,_:[operator];[password];
```

- [operator] is the operator number (1-16)
- [password] is the password (6 digits) for the operator

Only the P command (printing of text), command 84 (print barcode) and the T command (closing the official receipt) can be executed in a non-fiscal receipts.

48 – open fiscal / exchange receipt

```
48,1,____,_,_:[operator];[password];[exchange];
```

- [operator] is the operator number (1-16)
- [password] is the password (6 digits) for the operator
- [exchange] is a digit (0 or 1) – “0” opens standart fiscal receipt, “1” opens exchange receipt

After you open exchange receipt, first you should input all the items that are returned by the customer (see command 49 - “exchange” parameter must be “1”), then the item(s) that are replacing the returned item(s)(see command 49 - “exchange” parameter must be “0”).

49 – sale of an item, exchange item

49,1,____,_,_:[item];[price];[quantity];[tax group];[exchange];[flag];[amount];

- [item] is the name of the item (up to 24 symbols for FP);
- [price] is the price of a single item (-999999.99 ~ 99999.99 for FP; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number 0 ~ 99999.999);
- [tax group] is the tax group of the item (1 ~ 4); apart from the 4 tax groups there is a 5th (accessible with the number 5) that is a tax free group.
- [exchange] is a number that determines the item type in an exchange receipt:
 - value “1” – means that the item is being returned by a customer and is to be replaced
 - value “0” – means that this is the newly selected item that replaces the returned one
 - In a non-exchange receipt the value for this parameter should be “0”.
- [flag] is a number that means:
 - value '0' – surcharge in percent (max 99.00%)
 - value '1' – discount in percent (max 99.00%)
 - value '2' – surcharge in value (max 8 digits)
 - value '3' – discount in value (max 8 digits)
- [amount] is the sum of the discount/surcharge in percent or value (depending on the [flag parameter])

IMPORTANT: If you decide to use discount/surcharge here, make sure you don't use the “C” command as well (since it also makes discount/surcharge, but only with %).

FP will not carry out this command if:

- * the maximum number of sales (99) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

51 – subtotal

51,1,_____,_,_:[Print];[Display];[Flag];[Amount];

- [Print] – parameter that determines if the sum of the subtotal will be printed out:
 - value '0' – do not print
 - value '1' – print
- [Display] – parameter that determines if the sum of the subtotal will appear on the display:
 - value '0' – dont show on display
 - value '1' – show on display
- [Flag] – parameter that determines the type of the subtotal:
 - value '0' means surcharge in percent (max 99%)
 - value '1' means discount in percent (max 99%)
 - value '2' means surcharge in value (max 8 digits)
 - value '3' means discount in value (max 8 digits)
- [Amount] – the sum of the discount/surcharge (whether the amount is in percent or value depends on the [flag] parameter)

69 – daily reports

69,1,_____,_,_:[operator];[password];[type];

- [operator] is the operator number (1-16)
- [password] is the password (6 digits) for the operator
- [type] is a digit for report type (0 – executes “Z” report /clears the registry/; 1 – “X” report)

70 – official cash in/out

70,1,_____,_,_:[type];[sum];[operator];[password];

- [type] is a number with a 0 value (cash in) or 1 (cash out);
- [sum] is the sum to be cashed in/cashed out;
- [operator] is the operator number (1-16)
- [password] is the password (6 digits) for the operator

84 – print barcode

84,1,_____,_,_:[type];[value];

➤ [type] is a number that defines the barcode type:

1 – EAN8

2 – EAN13

3 – Code 128

➤ [value] is the barcode value to be printed. Depending on the barcode type it has variable size (EAN8 is only 7 digits, EAN13 is 12 digits and Code128 is between 9 and 18 symbols)

Printing barcode can be done only in opened receipts (nonfiscal, fiscal or exchange)

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6 are for voucher and coupon payments. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

➤ [type] - one number with a value

0 - % surcharge

1 - % discount

2 – surcharge by sum

3 – discount by sum

➤ [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

O – open drawer

O,1,_____,_,_;

L – sending text to the printer's display

L,1,_____,_,__:[Command];[View type];[Text];

➤ [Command] parameter can have the following values:

- 0 – clears both rows of the display
- 1 – clears the top row of the display
- 2 – clears the bottom row of the display
- 3 – prints [Text] to the top row of the display
- 4 – prints [Text] to the bottom row of the display
- 5 – prints [Text] to both rows of the display
- 6 – prints date and time to the bottom row of the display

➤ [View type] parameter can have the following values:

- 0 – the [Text] is printed on the display at once
- 1 – the [Text] is floating (from right to left) on the display

The [Text] parameter contains the text that is to be shown on the display (the display can show 20 characters on each row at once, larger text is printed in series or its floating) – maximum 200 symbols.

Bulgaria

46 – storno receipt opening

Syntax	46,1,____,_,_:[operator];[password];[workplace];[USN to storno];[USN];[storno type];[receipt number];[receipt date];[FM number];[invoice];[invoice number];[reason];		
Parameters	Parameter	Values	Description
	operator	1-30 for ECR 1-16 for Fiscal printers	Operator number
	password	1 ~ 8 digits	Password of the operator
	workplace	1 ~ 99999	Workplace number
	USN to storno	USN is unique sale number Format: [Device serial number]- [four digits and/or letters for operator]-[sale number] (seven digits with leading 0's)	UNP of the receipt to be refunded
	UNP	e.g.: (DT000600-OP01-0001000) .	UNP of the current receipt. Only for fiscal printers, ECRs don't need it so its 0.
	storno type	0 - operator error 1 - refund 2 - tax base reduction	Storno operation type
	receipt number	1 ~ 99999999	Global document number of the sale that is to be refunded
	receipt date	DDMMYYhhmmss	Date time of the sale that is storno'd
	FM number	8 digits	Fiscal memory number of the device that issued the sale. Any device with fiscal memory.
	invoice	0 ~ 1	If 1, the storno is for an invoice document
	Invoice number	1 ~ 99999999	Invoice number, if the storno is for invoices
	Reason	Up to 30 symbols for FPs Up to 42 symbols for ECRs	Reason for the storno.

			For fiscal printers FP650/700/800/2000 and FMP 10 it can be passed always. For the other devices it is considered only when the storno is invoice.
Conditions for successful execution	• no opened receipt • the clock is set • EIK number set • has paper • header and footer are set		
Supported devices	FP 650	WP 50	
	FP 800	DP 05/05B/15/25/35/150	
	FP 2000	FP 700	
	FMP 10		
	New X fiscal devices		
	DP 25 X	WP 500 X	
	FMP 350 X	WP 50 X	
	FP 700 X	DP 150 X	
	FMP 55 X	DP 05C X	
	DP 25 MX	DP 150 MX	
	WP 50 MX	FP 700 MX	
	FP 700 XE	FP 700 XR	
	Additional information	Regulation 18 (2018-2019) – remarks for USN : Because of the support of old software, USN is not mandatory for opening receipts in test mode (when you deploy it in retail though, it is). The USN number for printers FP 650/700/800/2000 and FMP 10 is automatically increased by 1 for each opening and is not mandatory, but it is mandatory that this number is initialized once after the printer’s first initialization with value 0000001. The only check that the devices perform for USN number is the date, and only when the type of storno type is “operator error” - you can do storno for a receipt (issued in a given month) only by the 7 th day on the next/current month. e.g.: Receipt issued on 24 of February can be storno’d with operator error by March 7 th . Receipt issued on March 1 st can be storno’d by March 7 th . Because the operation returns money to the customer, it is necessary to have cash supply in the device	
46,1,_____,_,__:[receipt count];[storno count];[input parameters]; - when no errors occurred			
[receipt count] – all issued receipts (fiscal and non-fiscal) since the last Z report; [storno count] – all issued storno receipts since the last Z report;			
X devices return global document number only: 46,1,_____,_,__:[global number];[input parameters];			

	On error: 46,1,_____,_,_;;[Error code and message from device];[input parameters]; - on errors from device
--	---

48 – fiscal receipt opening

Syntax	48,1,____,_,_:[operator];[password];[workplace];[invoice];[USN];			
Parameters description	Parameter	Values		Description
	operator	1 ~ 30	DP 05/25/35/150 , WP 50 , all „X” devices	Operator number
		1 ~ 16	FP 650/700/800/2000, FMP 10	
	password	1 ~ 8 digits	DP 05/25/35/150 , WP 50, all „X” devices	Password for the operator
		4 ~ 8 digits	FP 650/700/800/2000, FMP 10	
	workplace	1 ~ 99999		Workplace number
	invoice	0 ~ 1		Value 1 opens invoices
	USN	Format: fiscal device serial number “-“ four digits and/or letters for operator “-“ current sale counter (seven digits with leading zeros) e.g. DT000600-OP01-0001000).		Unique sale number
Conditions for successful execution	• there is no opened receipt • the clock is set • EIK number is set • loaded paper • header and footer set • an invoice numbers range is set before opening invoices			
Supported devices	FP 650		WP 50	
	FP 800		DP 05/05B/15/25/35/150	
	FP 2000		FP 700	
	FMP 10			
	New X fiscal devices			
	DP 25 X		WP 500 X	
	FMP 350 X		WP 50 X	
	FP 700 X		DP 150 X	
	FMP 55 X		DP 05C X	
	DP 25 MX		DP 150 MX	
	WP 50 MX		FP 700 MX	
	FP 700 XE		FP 700 XR	
Additional information	The command opens fiscal receipt at a workplace with a given operator. When using commands „S“ or „P“ without this command, they automatically open receipt with operator 1 and workplace 1.			

	Regulation 18 (2018-2019) – remarks for USN : Because of the support of old software, USN is not mandatory for opening receipts in test mode (when you deploy it in retail though, it is). The USN number for printers FP 650/700/800/2000 and FMP 10 is automatically increased by 1 for each opening and is not mandatory, but it is mandatory that this number is initialized once after the printer’s first initialization with value 0000001.
Answer format	48,1,_____,_,_;;[receipt count];[fiscal count];[input parameters]; [receipt count] – all issued receipts (fiscal and non-fiscal) since the last Z report; [fiscal count] – all issued fiscal receipts since the last Z report; X devices return global document number only: 48,1,_____,_,_;;[global number];[input parameters];

S – sale

Syntax	S,1,_____,_,_:[item];[price];[quantity];empty;empty;[tax group];[invoice]; [department];[measure];		
Parameters description	Parameter	Values	Description
	item	- up to 22 symbols for cash registers - up to 30 symbols for printers - up to 72 symbols for “X” devices	Name of the item
	price	+ - 999999.99	Item price. The negative price is used for voiding sales.
	quantity	0 ~ 99999.999	Item sold quantity
	tax group	1 ~ 8	VAT group for the sale
	invoice	0 ~ 1	Value 1 opens invoice.
	department	0 ~ 99 (0 = no department)	Department number. Only for type “X” devices
	measure	0 ~ 8 symbols for FP 650/800/2000 0 ~ 6 symbols for “X” devices	<u>Only for printers 650/800/2000 and “X” devices.</u> Measure unit for the quantity
Conditions for successful execution	- the clock is set - loaded paper - EIK tax number set - header and footer set - an invoice numbers range is set before opening invoices - the sum on the VAT groups used is not negative - the sum on discounts is not negative		
Supported devices	FP 650	WP 50	
	FP 800	DP 05/05B/15/25/35/150	
	FP 2000	FP 700	
	FMP 10		
	New “X” fiscal devices		
	DP 25 X	WP 500 X	
	FMP 350 X	WP 50 X	
	FP 700 X	DP 150 X	
	FMP 55 X	DP 05C X	
	DP 25 MX	DP 150 MX	
	WP 50 MX	FP 700 MX	
	FP 700 XE	FP 700 XR	

E – sale by department

Syntax	E,1,____,_,_:[item];[price];[quantity];[];[]:[department];[invoice];0;		
Parameters description	Parameter	Values	Description
	item	- up to 22 symbols for cash registers - up to 42 symbols for printers	Name of the item
	price	+ - 999999.99	Item price. The negative price is used for voiding sales.
	quantity	0 ~ 99999.999	Item sold quantity
	department	1 ~ 1200 for printers 1 ~ 9 for cash registers	Item department
	invoice	0 ~ 1	Value 1 opens invoice. Not supported in DV cash registers.
Conditions for successful execution	- the clock is set - loaded paper - EIK tax number set - header and footer set - an invoice numbers range is set before opening invoices - the sum on the VAT groups used is not negative - the sum on discounts is not negative		
Supported devices	FP 650	WP 50	
	FP 800	DP 05/05B/15/25/35/150	
	FP 2000	FP 700	
	FMP 10		

T – payment and receipt closure

Syntax 1	T,1,_____,_,_;		
Description	The receipt sum is automatically calculated and paid in cash and the fiscal receipt is closed. If everything is paid, only closure of the receipt is made. Non fiscal receipts are closed with this syntax always.		
Supported devices	All		
Syntax 2	T,1,_____,_,_:[code];[sum];;;;;;;;;;;[change type];		
Parameters description	Syntax for payment with selected type and sum and receipt closure.		
	Parameter	Values	Description
	code	0 – in cash 1 – with credit card 2 – with check 3 – with debit card 4 – subtotal 5 ~ 8 for printers: - additional programmable payments - for cash registers: 5 – with vaucher 6 – with coupon 9 is supported for “X” devices – foreign currency pay The next codes are for FP 650/800/2000 20 – coupon 21 – external coupon 22 – wrappage 23 – internal service 24 – damages 25 – bank transfers 26 – with cheque	Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.
	sum	0 ~ 99999999.99	The sum to be paid
	change type	0 ~ 1 for “X” devices and payment 9	When using payment 9, if this parameter is 1, then the change is also in foreign currency
Supported devices	All		
Syntax 3	T,1,_____,_,_:[code];[sum];[type];[EIK/EGN];[seller];[receiver];[client];[ZDDS number];[address 1];[address 2];		
Parameters description	Syntax for payment and invoice end. Parameters [code] and [sum] are described above.		
	Parameter	Values	Description
	type	0 – EIK 1 – EGN 2 – personal num	Defines tax number type

		• 3 – service num	
	EIK/EGN	up to 14 symbols for EIK, 10 symbols for EGN	Bulstat/EIK tax number
	seller	max 36 symbols	Seller name
	receiver	max 36 symbols	Receiver name
	client	max 36 symbols	Client name
	ZDDS num	10 to 14 symbols	ZDDS VAT number
	address 1/2	max 36 symbols	Addresses
Supported devices	DP 05/05B/15/25/35/150		WP 50
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Syntax 4	T,1,_____,_,_,[code];[sum];[type];[EIK/EGN];[seller];[receiver];[client];[ZDDS number];[address 1];[address 2];[APname];		
Parameters description 4	Syntax for payment and invoice end. Parameters [code] and [sum] are described above.		
	Parameter	Values	Description
	type	0 – EIK 1 – EGN 2 – personal num 3 – service num	Defines tax number type
	EIK/EGN	up to 14 symbols for EIK, 10 symbols for EGN	Bulstat/EIK tax number
	seller	max 33 symbols	Seller name
	receiver	max 33 symbols	Receiver name
	client	max 33 symbols	Client name
	ZDDS num	10 to 14 symbols	ZDDS VAT number
	address 1/2	max 28 symbols for addr 1 max 32 symbols for addr 2	Addresses
	AP name	max 33 symbols	Accountable person name
Supported devices 4	FP 650		FP 800
	FP 2000		FP 700
	FMP 10		
Conditions for successful execution	- the clock is set - loaded paper - opened receipt		
Answer format	If an invoice is closed, after execution, the invoice number and the input data of the issued invoice is stored in the answer file.		

	T,1,_____,_,_:[invoice number];[input – code, sum, EIK...address2];
--	---

C – discount/surcharge

Syntax	C,1,_____,_,_:[type];[value];		
Parameters description	Parameter	Values	Description
	type	0 – surcharge in percent 1 – discount in percent 2 – surcharge by sum 3 – discount by sum	Defines the type of the discount/surcharge.
	value	Percent up to 99% or sum, no bigger than that of the sale	Value of the discount/surcharge
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Conditions for successful execution	- loaded paper - a sale has been made - last command is not “C”		
Additional information	If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.		

P – print text

Syntax 1	P,1,_____,_,_;;[row 1];[row 2];[row 3];[row 4];[row 5];				
Parameters description for syntax 1	Prints up to 5 lines of text. Max symbols count per device: <table><tr><td>DP 05/05B/25/35/150, WP50</td><td>36 symbols</td></tr></table>			DP 05/05B/25/35/150, WP50	36 symbols
DP 05/05B/25/35/150, WP50	36 symbols				
Supported devices for syntax 1	WP-50	DP 05/05B/25/35/150			
Syntax 2	P,1,_____,_,_;;[row 1];[row 2];[row 3];[row 4];[row 5];[height];[font style];				
Parameters description for syntax 2	Parameter	Values	Description		
	row 1-5	Up to 32 symbols	Text to print		
	height	'0' – 32 symbols, higher letters '1' - 32 symbols, normal letters '2' - 24 symbols (3 mm height) '3' - 16 symbols (2 mm height)	Text height/size		
	font style	'B' - bold 'H' – double height 'I' - italic	Font style		
Supported devices for syntax 2	FP 650	FP 800			
	FP 2000	FP 700			
	FMP 10				
Syntax 3	P,1,_____,_,_;;[row 1];[row 2];[row 3];[row 4];[row 5];;;[bold];[italic];[double H];[underline];[alignment];				
Parameters description for syntax 3	Parameter	Values	Description		
	row 1-5	Symbols per device:			
		FP700 X, FMP 350 X	64		
		DP 05C X, DP 25 X, DP 150 X, WP 50 X, WP 500 X	42		
		FMP 55 X	32		
	bold, italic, double height, underline	0 ~ 1	Enables font styles		
alignment	0 ~ 2	0 – left aligned 1 – centered 2 – right aligned			
Supported devices for syntax 3	DP 25 X	WP 500 X			
	FMP 350 X	WP 50 X			
	FP 700 X	DP 150 X			
	FMP 55 X	DP 05C X			

	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR
Conditions for successful execution	• the clock is set • EIK is set • loaded paper • header and footer are set	

I – official debiting / crediting

Syntax	I,1,_____,_,_:[type];[value];		
Parameters description	Parameter	Values	Description
	type	0 – debiting 1 – crediting 2 – debit in foreign currency 3 – credit in foreign currency	Values 2 and 3 are for “X” devices only.
	value	0 ~ 9999999.99	Value for debit/credit
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Conditions for successful execution	- the clock is set - loaded paper		

Y – opening non-fiscal receipt

Syntax	Y,1,_____,_,_;		
Description	Non-fiscal receipt is opened. In it, only commands P, T and A are allowed.		
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX

	FP 700 XE	FP 700 XR	
Conditions for successful execution	• the clock is set • loaded paper • no opened receipt		

Z – daily closure, reports

Syntax	Z,1,_____,_,_;;[type];[year];[month];		
Parameters description	Parameter	Values	Description
	type	0 – X report; 1 – Z report; 2 – short yearly/monthly report 3 – extended yearly/monthly report	Defines the report type.
	year	2 digits for year, format “YY”	Year of the report type 2 or 3
	month	2 digits for month, format “MM”	Month of the report type 2 or 3
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Conditions for successful execution	- the clock is set - loaded pape - opened receipt		
Answer format	If successfull, the command returns the Z report number, the sums and storno sums by vat group.		
Additional information	If [month] is empty a year report will print. The reports 2 and 3 are only available if the printer is fiscalized and at least one Z report is made. If no parameters are passed, an X report is executed.		

D – receipt duplicate

Syntax	D,1,_____,_,_;	
Description	Prints duplicate of the last fiscal receipt.	
Supported devices	FP 650	WP 50
	FP 800	DP 05/05B/15/25/35/150
	FP 2000	FP 700
	FMP 10	
	New X fiscal devices	
	DP 25 X	WP 500 X
	FMP 350 X	WP 50 X
	FP 700 X	DP 150 X
	FMP 55 X	DP 05C X
	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR
Conditions for successful execution	- the clock is set - loaded paper - opened fiscal receipt <u>the device is set to print duplicates</u>	

O – open drawer

Syntax	O,1,_____,_,_;	
Description	Sends signal to the drawer to open.	
Supported devices	FP 650	WP 50
	FP 800	DP 05/05B/15/25/35/150
	FP 2000	FP 700
	FMP 10	
	New X fiscal devices	
	DP 25 X	WP 500 X
	FMP 350 X	WP 50 X
	FP 700 X	DP 150 X
	FMP 55 X	DP 05C X
	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR

X – cancel fiscal receipt

Syntax	X,1,_____,_,_;	
Description	Cancels current fiscal receipt. Only doable when no payment has started.	
Supported devices	FP 650	WP 50
	FP 800	DP 05/05B/15/25/35/150
	FP 2000	FP 700
	FMP 10	
	New X fiscal devices	
	DP 25 X	WP 500 X
	FMP 350 X	WP 50 X
	FP 700 X	DP 150 X
	FMP 55 X	DP 05C X
	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR

L – show text on the display

Syntax	L,1,_____,_,_:[command];[displaying type];[text];		
Parameters description	Parameter	Values	Description
	command	0 – clears both display rows 1 – clears top row 2 – clears bottom row 3 – shows [text] on top row 4 – shows [text] on bottom row 5 – shows [text] both rows 6 – shows date and time on bottom row	Defines text operations
	displaying type	0 – [text] is shown statically 1 – [text] 'swims' from right to left	Defines how text is shown
	text	20 ~ 200 symbols	The “swimming” text is up to 200 chars, static is up to 20
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Conditions for successful execution	connected display		
Additional information	The “X” devices do not support type 5.		

A – barcode print

Syntax 1	A,1,_____,_,_:[type];[value];		
Parameters description 1	Parameter	Values	Description
	type	1 – EAN8 2 – EAN13 3 – Code 128	Defines barcode type
	value	7 ~ 30 symbols	Length depends on the type (EAN8 = 7 digits, EAN13 = 12 digits, Code128 = 9 to 18 symbols, ITF = 2 to 5 digits).
Supported devices 1	DP 05/05B/25/35/150	WP 50	
Additional information	Checksum is automatically calculated.		
Syntax 2	A,1,_____,_,_:[type];[value];[alignment];		
Parameters description 2	Parameter	Values	Description
	type	1 – EAN8 2 – EAN13 3 – Code 128 4 – ITF 5 – ITF – automatic calculation of control sum 6 – Data matrix 7 – QR code 8 – PDF417	Defines barcode type
	value	3 ~ 279 symbols	Barcode values
	alignment	0 ~ 2	Alignment for 2D barcodes (types 6,7,8) only. 0 - left 1 - center 2 - right
Supported devices 2	FP 650	FP 800	
	FP 2000	FP 700	
	FMP 10		
Syntax 3	A,1,_____,_,_:[type];[value];[size];		
Parameters description 3	Parameter	Values	Description
	type	1 – EAN8 2 – EAN13 3 – Code 128 4 – QR code 5 – Interleave 2 of 5 6 – PDF417 truncated 7 – PDF417 normal	Defines barcode type
	value	3 ~ 400 symbols	Barcode values
	size	3-10	Size of 2D barcodes (types 4,6,7) Default 4.

Supported devices 3	DP 25 X	WP 500 X
	FMP 350 X	WP 50 X
	FP 700 X	DP 150 X
	FMP 55 X	DP 05C X
	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR
Conditions for successful execution	- loaded paper - opened fiscal or non-fiscal receipt (for printers) - opened non-fiscal receipt (for cash registers)	

N – reading document number and USN

Syntax	N,1,_____,_,_;		
Answer format	N,1,_____,_,_;[global number],[last USN],[last storno USN];		
	Parameters	Values	Description
	global number	1 – 999999	Global number of the last printed document
	last USN		Last USN number
	last storno USN		Last storno USN number
Supported devices	FP 650	WP 50	
	FP 800	DP 05/05B/15/25/35/150	
	FP 2000	FP 700	
	FMP 10		
	New X fiscal devices		
	DP 25 X	WP 500 X	
	FMP 350 X	WP 50 X	
	FP 700 X	DP 150 X	
	FMP 55 X	DP 05C X	
	DP 25 MX	DP 150 MX	
	WP 50 MX	FP 700 MX	
	FP 700 XE	FP 700 XR	

58 – sale of programmed item

Syntax	58,1,_____,_,__:[code];[department];[quantity];[percent];[sum];[display];[invoice]; [price] ; [measure] ;		
Parameters description	Parameter	Values	Description
	code	1 ~ 100000	Programmed item code
	department	0 ~ 99 for WP500KL,FP705KL,FMP350KL 0 ~ 60 for the rest	Department number, when 0 the programmed VAT group is used
	quantity	0.001 ~ 99999.999	Sold quantity
	percent	+ - 99%	Discount/surcharge in percents
	sum	* - 9999999.99	Discount/surcharge in sum
	display	0 or 1	Value 1 shows the sale on the display
	invoice	0 or 1	An invoice is opened
	price	0 ~ 9999999.99	Free sale price, only for WP500KL, FP705KL, FMP350KL
	measure	0 ~ 8	Only for “X” devices. Measure unit index for quantity
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Conditions for successful execution	- programmed item - the clock is set - loaded paper		

105 – operators report

Syntax	105,1,_____,_,_;	
Description	Prints operators report with sales by operator	
Supported devices	FP 650	WP 50
	FP 800	DP 05/05B/15/25/35/150
	FP 2000	FP 700
	FMP 10	
	New X fiscal devices	
	DP 25 X	WP 500 X
	FMP 350 X	WP 50 X
	FP 700 X	DP 150 X
	FMP 55 X	DP 05C X
	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR
Conditions for successful execution	- loaded paper - no opened receipt	

107 – item programming

Syntax 1	107,1,_____,_,_ ;1;[VAT];[code];[price];[name];[item group];[+ - quantity];[replace]; [department];[price type];[bar code];[bar code 2];[bar code 3];[bar code 4];[measure];		
Parameters description	Item programming		
	Parameter	Values	Description
	VAT	1 ~ 8	VAT
	code	1 ~ 100000	Item code
	price	0 ~ 999999.99	Item price
	name	max 36 symbols	Item name
	item group	1 ~ 99	Item group
	+ - quantity	0 ~ 99999.999	Stock quantity. ECRs DP-05/25/35/150 and WP-50 do not support stock quantity.
	replace	0 or 1	If 1 the quantity in the device is replaced with [quantity], otherwise its added/subtracted.
	The next parameters are for X devices and ECRs		
	department	0 ~ 99 for X devices 0 ~ 9 for ECRs DP-05/25/35/150,WP-50	Department code. If 0 then the VAT group is used
	price type	0 – programmed price is used 1 – programmed or free price 2 – price equal or less than the programmed	Defines which price is used for sales
	bar code	up to 13 digits	Barcode for the item
	The next parameters are for X devices only		
	bar code 2	up to 13 digits	Additional barcodes
	bar code 3		
	bar code 4		
	measure	1 ~ 20	Measure unit code
Syntax 2	107,1,_____,_,_ ;2;[all];[code 1];[code 2];		
Parameters description	Delete items		
	Parameter	Values	Description
	all	0 or 1	When value is 1 all items are deleted
	code 1	1 ~ 100000	Single item to delete, if code 2 is > 0 its the start of the range code1 ~ code2 for deletion.
	code 2	1 ~ 100000	Ending code for delete range
Syntax 3	107,1,_____,_,_ ;3;[code];[+ - quantity];		
Parameters description	Add/subtract stock quantity		
	Parameter	Values	Description
	code	1 ~ 100000	Item code
	quantity	0 ~ +-999999.999	Quantity to be added/subtracted

Syntax 4	107,1,_____,_,_;4;[code];	
Parameters description	Reading item data	
	Parameter	Values
	code	1 ~ 999999999
	Description	
	Item code to read	
	Output params are saved in the answer file: 107,1,_____,_,_;(code);(VAT);(item group);(price);(sum by sales);(sold quantity);(stock quantity);(name);(department);(type price);	
	For ECRs DP-05/25/35/150,WP-50	
	107,1,_____,_,_;(code);(VAT);(item group);(price);(sum by sales);(sold quantity);(stock quantity);(name);(department);(type price);(barcode);	
Supported devices for all syntaxes	For fiscal printers 650/800/2000	
	107,1,_____,_,_;(code);(VAT);(item group);(price);(sum by sales);(sold quantity);(stock quantity);(name);	
	For X devices	
	107,1,_____,_,_;(code);(VAT);(item group);(price);(sum by sales);(sold quantity);(stock quantity);(name);(department);(type price);(bar code);(bar code 2);(bar code 3);(bar code 4);(measure);	
	FP 650	WP 50
	FP 800	DP 05/05B/15/25/35/150
	FP 2000	FP 700
	FMP 10	
Supported devices for all syntaxes	New X fiscal devices	
	DP 25 X	WP 500 X
	FMP 350 X	WP 50 X
	FP 700 X	DP 150 X
	FMP 55 X	DP 05C X
	DP 25 MX	DP 150 MX
	WP 50 MX	FP 700 MX
	FP 700 XE	FP 700 XR
Conditions for successful execution	- the clock is set - loaded paper - opened receipt	
Additional information	Items can be deleted or reprogrammed when no sales are made or after Z report. Stock quantities can be changed always.	

111 – items report

Syntax 1	111,1,_____,__,_:[code];[start num];[end num];[item group];		
Parameters description	Parameter	Values	Description
	code	0 – only items with sales 1 – all programmed	Defines which items are included in the report
	start num	1 ~ 100000	Starting range
	end num	1 ~ 100000	Ending range
	item group	1 ~ 99	If not empty, defines item group for the report.
Supported devices	FP 650	WP 50	
	FP 800	DP 05/05B/15/25/35/150	
	FP 2000	FP 700	
	FMP 10		
Syntax 2	111,1,_____,__,_:[code];[start num];[end num];		
Parameters description	Parameter	Values	Description
	code	0 – item turnover; 1 – item turnover with clearing 2 – item parameters 3 – stock quantities	Defines which items are included in the report
	start num	1 ~ 100000	Starting range
	end num	1 ~ 100000	Ending range
Supported devices	DP 25 X	WP 500 X	
	FMP 350 X	WP 50 X	
	FP 700 X	DP 150 X	
	FMP 55 X	DP 05C X	
	DP 25 MX	DP 150 MX	
	WP 50 MX	FP 700 MX	
	FP 700 XE	FP 700 XR	
Conditions for successful execution	- loaded paper - no opened receipt		

119 – electronic journal reports

Syntax 1	119,1,_____,_,_:[Start date (time)];[End date (time)];[document type];[Print];[Filename];		
Parameters description 1	Saves or prints EJ report		
	Parameter	Values	Description
	Start date (time)	6 ~ 12 digits, format DDMMYY[hhmmss]	Report range. If time is omitted, starting time is 00:00:01, ending is 23:59:59
	document type	ECRs 0 – All documents 1 – Fiscal documents 2 – Z reports 3 – Cash input 4 – Cash output 4 – X report 5 – Non-fiscal documents 6 – Invoices 7 – Storno documents 8 – Storno invoice 9 – Canceled receipts Fiscal printers 0 – All documents 1 – Fiscal documents 2 – Storno documents 3 – Canceled receipts 4 – Non-fiscal documents 5 – Cash input 6 – Cash output 7 – Non-fiscal documents, rotated by 90 degrees on print 8 – Service operations 9 – Reports (date and time only) 10 – X report 11 – Z report	Defines documents to read
	Print	0 or 1	Value 1 prints the report
	Filename	~ 255 symbols	Path and file name to save the report to. If empty nothing is saved
Supported devices 1	FP 650	WP 50	
	FP 800	DP 05/05B/15/25/35/150	
	FP 2000	FP 700	
	FMP 10		
Parameters description 2	Saves or prints EJ report		
	Parameter	Values	Description
	Start date (time)	6 ~ 12 digits, format DDMMYY[hhmmss]	Report range. If time is omitted, starting time is 00:00:01, ending is 23:59:59
	document type	0 – All documents 1 – Fiscal documents 2 – Z report 3 – Invoices 4 – Non-fiscal documents	Defines documents to read

		5 – Cash input/output 6 – Storno documents 7 – Storno invoice 8 – Canceled receipts 9 – X report 10 – all fiscal and storno documents	
	Print	0 or 1	Value 1 prints the report
	Filename	~ 255 symbols	Path and file name to save the report to. If empty nothing is saved
Supported devices 2	DP 25 X	WP 500 X	
	FMP 350 X	WP 50 X	
	FP 700 X	DP 150 X	
	FMP 55 X	DP 05C X	
	DP 25 MX	DP 150 MX	
	WP 50 MX	FP 700 MX	
	FP 700 XE	FP 700 XR	
Conditions for successful execution	• fiscal device with at least one Z report • loaded paper • no opened receipt		

350 – custom command

Syntax	350,1,_____,_,_;;[Command];[Data]		
Description	Parameter	Values	Description
	Command	digit (30 ~ 253)	Command number based on the firmware documentation
	Data	Symbols for TAB (0x10) and linefeed(0x9) are represented with [TAB] and [LF]	Command input data based on the firmware documentation
Supported devices	FP 650		WP 50
	FP 800		DP 05/05B/15/25/35/150
	FP 2000		FP 700
	FMP 10		
	New X fiscal devices		
	DP 25 X		WP 500 X
	FMP 350 X		WP 50 X
	FP 700 X		DP 150 X
	FMP 55 X		DP 05C X
	DP 25 MX		DP 150 MX
	WP 50 MX		FP 700 MX
	FP 700 XE		FP 700 XR
Additional information	Devices may have different syntax for a given command number		

999 – closing Fprint while in resident mode

Syntax	999,1,_____,_,_;
Description	In resident mode, the program runs non-stop, this is the script for exiting it.

Ethiopia

FP 60

"38" – open non-fiscal receipt

38,1,_____,_,_;

The command won't be executed if there is already opened receipt. In non-fiscal receipts you can only print non-fiscal text.

"42" – print non-fiscal text

42,1,_____,_,_:[text];

➤ [text] is random text (max 30 symbols)

You can print non-fiscal text only in opened non-fiscal receipt.

"39" – close non-fiscal receipt

39,1,_____,_,_;

The command won't be executed if there is no opened receipt.

"48" – open fiscal receipt

48,1,_____,_,_:[operator];[password];[TIN];

- [operator] is the operator number (1-16)
- [password] is the password (6 digits) for the operator
- [TIN] is the tax identification number of the buyer, non mandatory parameter, 10 digits

The command won't be executed if there is already an opened receipt/invoice.

"55" – open refund receipt

55,1,_____,_,_:[operator];[password];[TIN];

- [operator] is the operator number (1-16)
- [password] is the password (6 digits) for the operator
- [TIN] is the tax identification number of the buyer, non mandatory parameter, 10 digits

The command won't be executed if there is already an opened receipt/invoice.

"49" – sell items

49,1,_____,_,_:[Item_name1][Item_name2];[price];[quantity];[tax group];[unit name];[flag];
[amount];

- [Item_name1] is the first(top) line of the item name (up to 26 symbols);
- [Item_name2] is the second(bottom) line of the item name (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 99999.99 for FP; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number 0 ~ 99999.999);
- [tax group] is the tax group of the item (1 ~ 4);
- [unit name] max 8 symbols for measurement unit of the quantity
- [flag] is a number that means:
 - value '0' – surcharge in percent (max 99.00%)
 - value '1' – discount in percent (max 99.00%)
 - value '2' – surcharge in sum (max 8 digits)
 - value '3' – discount in sum (max 8 digits)
- [amount] is the sum of the discount/surcharge in percent or sum (depending on the [flag parameter])

The printer will not carry out this command if:

- the maximum number of sales (99) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the sum of discounts and surcharges within the receipt is negative;

"51" – subtotal

51,1,_____,_,_;;[Print];[Display];[Flag];[Amount];

- [Print] – parameter that determines if the sum of the subtotal will be printed out:
 - value '0' – do not print
 - value '1' – print
- [Display] – parameter that determines if the sum of the subtotal will appear on the display:
 - value '0' – don't show on display
 - value '1' – show on display
- [Flag] – parameter that determines the type of the subtotal:
 - value '0' means surcharge in percent (max 99%)
 - value '1' means discount in percent (max 99%)
 - value '2' means surcharge in sum (max 8 digits)
 - value '3' means discount in sum (max 8 digits)
- [Amount] – the sum of the discount/surcharge (whether the amount is in percent or value depends on the [flag] parameter)

"53" – payment

53,1,_____,_,_;;[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash
 - value '1' means payment via credit
 - value '2' means payment via cheque
 - value '3' means payment via debit card
 - value '4' - programmable payment 1
 - value '5' - programmable payment 2
 - value '6' - programmable payment 3
 - value '7' - programmable payment 4
- [amount] – the sum of the payment

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

"54" – print fiscal text

54,1,_____,_,_;;[text];

- [text] is random text (max 30 symbols)

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if payment is done.

"60" – cancel current fiscal receipt

60,1,_____,_,_;

The whole fiscal receipt will be canceled and closed as non-fiscal. This command will work only if no payments have been made yet.

"109" – duplicate receipt

109,1,_____,_,_:[Count];

➤ [Count] is the number of copies to be printed;

This command must be executed only after the last printed receipt is closed.

"33" – clear the display

33,1,_____,_,_;

"47" – show text on top row of the display

47,1,_____,_,_;[text];

➤ [text] is random text (20 symbols max)

"35" – show text on bottom row of the display

35,1,_____,_,_;[text];

➤ [text] is random text (20 symbols max)

"63" – show date and time

63,1,_____,_,_;

"100" – show text on both rows of the display

100,1,_____,_,_;[text];

➤ [text] is random text (40 symbols max)

"69" – execute reports / fiscal closures

69,1,_____,_,_:[flag];[path to directory];

- [flag] determines the report type:
 - value '0' means Z report with fiscal closure
Depending on how the printer is fiscalized (print or download the electronic journal), the journal is either printed or saved. If its fiscalized to save the journal, the directory to save is defined by the parameter [path to directory] and the name of the file is the SHA signature.
 - value '1' means X report without fiscal closure
- [path to directory] – the directory(eg. C:\), where the journal is to be saved. The command will return error if it can't write to the specified directory (due to no access or permissions).

"70" – internal debiting and crediting (cash in/out)

70,1,_____,_,_:[flag];[amount];

- [flag] – determines the type of operation:
 - value '0' means cashing in / debit
 - value '1' means cashing out / credit
- [amount] – the sum of the debit/credit

"84" – print barcode

84,1,_____,_,_:[type];[value];

- [type] is a number that defines the barcode type:
 - 1 : EAN8
 - 2 : EAN13
 - 3 : Code 128
- [value] is the barcode value to be printed. Depending on the barcode type it has variable size (EAN8 is only 7 digits, EAN13 is 12 digits and Code128 is between 9 and 18 symbols)

Printing barcode can be done only in opened receipts (nonfiscal, fiscal)

"106" – open the drawer

106,1,_____,_,_;

"79" – annual / monthly short report

79,1,_____,_,__:[Year];[Month];

- [Year] – defines the year (format 'YY');
- [Month] – defines the month (format 'MM');

If the month parameter is empty or 0, an annual report is executed.

"94" – annual / monthly detailed report

94,1,_____,_,__:[Year];[Month];

- [Year] – defines the year (format 'YY');
- [Month] – defines the month (format 'MM');

If the month parameter is empty or 0, an annual report is executed.

Federation of Bosnia and Herzegovina

NOTE: Parameters in < > brackets are mandatory, while those in [] brackets are non-mandatory! The brackets by themselves are **not** passed along with the data value.

33 – display clear		
Syntax	33,1,____,_,_;	
Description	Clears the customer display if connected.	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX

35 – show text on display lower line		
Syntax	35,1,____,_,_;<text>;	
Description	[text] is text up to 20 symbols. The command shows the text on the lower line of the display if connected.	
Supported devices	DP 25 X	
	FP 60 X	
	FP 700 X	

38 – open non-fiscal receipt		
Syntax	38,1,____,_,_;	
Description	Opens a non-fiscal receipt. In this receipt only commands for display, print text and barcode are accepted.	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX

39 – close non-fiscal receipt

Syntax	39,1,_____,_,_;	
Description	Closes an opened non-fiscal receipt.	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX

42 – print non-fiscal text

Syntax	42,1,_____,_,_;<text>[bold];[italic];[height];[underline];[alignment];		
Description	The command prints text in a non-fiscal receipt.		
	Parameter	Values	Description
	text	up to 62 symbols	Text to print
	bold, italic, underline	0 ~ 1	Enables font styles
	height	0 ~ 2	0 – normal height 1 – double height 2 – half height
	alignment	0 ~ 2	0 – left aligned 1 – centered 2 – right aligned
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

43 – storno/refund receipt opening

Syntax	43,1,____,_,_;<operator>;<password>;<workplace>;<document number>;<IOSA>;		
Parameters	Parameter	Values	Description
	operator	1-30	Operator number
	password	1 ~ 8 digits	Password of the operator
	workplace	1 ~ 99999	Workplace number
	document number		
	IOSA	16 digits	IOSA number
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

47 – display text on the upper line

Syntax	47,1,____,_,_;<text>;		
Description	[text] is text up to 20 symbols. The command shows the text on the upper line of the display if connected.		
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

48 – fiscal receipt and reclamation

Syntax	48,1,_____,_,_;<IOSA>;<Operator>;<Password>;<workplace>;[receiptNumber];		
Parameters description	Parameter	Values	Description
	IOSA	16 digits	IOSA number
	operator	1 ~ 30	Operator number
	password	1 ~ 8 digits	Password for the operator
	workplace	1 ~ 99999	Workplace number
	receipt number	1 ~ 9999999	If present, the program will open reclamation receipt. The parameter is the document number of the original receipt to be refunded.
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Answer format	Global document number /slip number/ 48,1,_____,_,_:[global number],[current fiscal number – BF],[current reclamation number – RF];[input parameters]; global number – the global number of all issued documents current fiscal number – the fiscal number of the current receipts current reclamation number – the reclamation number of the current receipt		

51 – subtotal

Syntax	51,1,_____,_,_;;[Display];		
Parameters description	The command returns current values for the fiscal receipt and displays the current sum on the display.		
	Parameter	Values	Description
	Display	0 or 1	On 1, displays the subtotal on the external connected display.
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Answer format	51,1,_____,_,_;;[SlipNumber];[Subtotal];[TaxA];[TaxE];[TaxJ];[TaxK];[TaxM];[input]; SlipNumber – current slip number; Subtotal – sum of the receipt; TaxX – turnover by vat groups;		

52 – sales and voids

Syntax 1	52,1,_____,_,_:[+PLU];[quantity];[percent];[price];		
Parameters description	Parameter	Values	Description
	PLU	+1 ~ 100000 for ECRs +1 ~ 3000 for FPrinters	Programmed item code. Negative sign before the code is used for void operations.
	quantity	0.001 ~ 99999.999	Sold quantity
	percent	+ - 100%	Discount/surcharge in percents
	price	+ - 9999999.99	Price for the item if programmed with free or max price type
Syntax 2	52,1,_____,_,_:[void type];		
Parameters description	The command voids first or last sale in a receipt.		
	Parameter	Values	Description
	void type	string 'VF' or 'VL'	Defines which row to be voided VL – voids last sale in the receipt VF – voids first sale in the receipt
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

53 – payment

Syntax 1	53,1,_____,_,_;		
Description	The receipt sum is automatically calculated and payed in cash and the fiscal receipt is closed. If everything is payed, only closure of the receipt is made. Non fiscal receipts are closed with this syntax always.		
Syntax 2	53,1,_____,_,_:[code];[sum];		
Parameters description	Syntax for payment with selected type and sum and receipt closure. If the sum parameter is empty, the whole sum is automatically calculated and passed for the given payment code.		
	Parameter	Values	Description
	code	0 – in cash 1 – with debit card 2 – with credit card 3 – virman	Type of the payment
	sum	0 ~ 99999999.99	The sum to be paid
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Answer format	53,1,_____,_,_:[status]/[amount];[input parameters...e.g. code and sum]; Status – Indicates an error; 'D'- The command passed, return when the paid sum is less than the sum of the receipt. The residual sum due for payment is returned to Amount; 'R'- The command passed, return when the paid sum is greater than the sum of the receipt. A message “CHANGE” will be printed out and the change will be returned to Amount; Amount - The sum that is due or is change (0.00...99999999.99)		

54 – print fiscal text

Syntax	54,1,_____,_,_;;[text];[bold];[italic];[double H];[underline];[alignment];		
Parameters description	Parameter	Values	Description
	text	up to 62 symbols	Text to print
	bold, italic, double height, underline	0 ~ 1	Enables font styles
	alignment	0 ~ 2	0 – left aligned 1 – centered 2 – right aligned
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Additional information	Command can be executed only in opened fiscal or storno receipt.		

55 – invoice data

Syntax	55,1,_____,_,_;<IBK>;[Line 1];[Line 2];[Line 3];[Line 4];[Line 5];[Line 6];[Line 7];[Line 8];[Line 9];[Line 10];[Line 11];[Line 12];[Line 13];[Line 14];[Line 15];[Line 16];		
Parameters description	Parameter	Values	Description
	IBK	13 symbols	Client identification code
	Line 1~16	up to 64 symbols	Lines of text
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

56 – close fiscal receipt

Syntax	56,1,_____,_,_;	
Description	Closes a fiscal receipt if all the payment is done.	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX
Answer format	56,1,_____,_,_:[global number],[current fiscal number – BF],[current reclamation number – RF];[input parameters]; global number – the global number counter after closing current fiscal number – the fiscal number counter after closing current reclamation number – the reclamation number counter after closing	

63 – show date and time on the display

Syntax	63,1,_____,_,_;	
Description	Shows date time on the external display if connected.	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX

69 – daily closure

Syntax	69,1,_____,_,_:[type];		
Parameters description	Parameter	Values	Description
	type	• 0 – Z report; • 2 – X report; • 3 – department report; • 4 – item groups report;	Defines the report type.
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Answer format	69,1,_____,_,_:[ReportNum]/[Total_1...5]/[StornoSum_1...5];[input param]; ReportNum – number of Z report; Total_1 ~ 5 – Total sum accumulated by TAX groups from sales StornoSum_1 ~ 5 - Total sum accumulated by TAX groups from storno operations		

70 – official debiting / crediting

Syntax	70,1,_____,_,_:[+ -][value];		
Parameters description	Parameter	Values	Description
	value	+ - 9999999.99	Value for the debit/credit (the sign + or – defines if its input or output)
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Answer format	70,1,_____,_,_:[Sum];[inSum];[outSum]; Sum – cash in the safe; inSum – total sum of cash in operations ; outSum – total sum of cash out operations;		
Additional info	If you execute the command without params – 70,1,_____,_,_ - it will return the current cash sums in the device in the answer file.		

73 – fiscal memory report by report number

Syntax	73,1,_____,_,_:[Start Z];[End Z];		
Parameters description	Parameter	Values	Description
	Start/End Z	1~9999	Z numbers range for the report.
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

79 – fiscal memory report by date

Syntax	79,1,_____,_,_;<Start date>;<End date>;[Start_hour];[End_hour];		
Parameters description	Parameter	Values	Description
	Start/End date	DDMMYY	Date range for the report
	Start/End hour	hh:mm:ss	Time, default start is 00:00:01, default end is 23:59:59. End date and time cannot be greater than the current date/time(the now).
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

84 – barcode print

Syntax	84,1,_____,_,_:[type];[value];[QR barcode size];		
Parameters description	Parameter	Values	Description
	type	1 – EAN8 2 – EAN13 3 – Code 128 4 – QR code 5 – Interleave 2 of 5 6 – PDF417 truncated 7 – PDF417 normal	Defines barcode type
	value	3 ~ 400 symbols	Barcode values
	QR barcode size	3...10	Barcode size for QR code and PDF barcodes (types 4,6,7)
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

92 – print separator line

Syntax	92,1,_____,_,_:[Line type];		
Parameters description	Parameter	Values	Description
	Line type	1 ~ 3	Type of the line: '1' - separating line with '-'; '2' - separating line with the symbols '-' and '='; '3' - separating line with the symbol '=';
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

105 – operators report

Syntax	105,1,_____,_,_;;[first];[last];[clear];		
Description	Prints operators report with sales by operator. If no params are present, a report for all operators is printed.		
	Parameter	Values	Description
	first	1 ~ 30	First operator
	last	1 ~ 30	Last operataor
Supported devices	clear	0 – without clearing 1 – with registers clearing	Type of report
	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

106 – open drawer

Syntax	106,1,_____,_,_;;[mSec];		
Description	Sends signal to the drawer to open. Msec is impulse time in milliseconds, default 80.		
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

107 – item programming

Syntax 1	107,1,_____,_,_; 1 or 2 :[VAT];[code];[price];[name];[price type];[item group];[+- quantity];[add Qty];[department];[barcode];[barcode 2];[barcode 3];[barcode 4];		
Parameters description	Item programming		
	Parameter	Values	Description
	1 or 2	1 or 2	Type 1 and 2 were used in older devices for duplicate names, but now duplicated names are always allowed, so it doesnt matter if you pass 1 or 2 here.
	VAT	1 ~ 5	VAT
	code	1 ~ 100000 for ECR, ~3000 for FP	Item code
	price	0 ~ 999999.99	Item price
	name	max 72 symbols, depends on the device	Item name
	price type	0 – programmed price is used 1 – programmed or free price 2 – price equal or less than the programmed	Defines which price is used for sales
	item group	1 ~ 99	Item group
	+ - quantity	0,001 ~ 99999,999	Stock quantity
	add Qty	0 or 1	If 1 the quantity is added to the current one, otherwise its replaced.
	department	0 ~ 99	Department code
		.	
	barcode	up to 13 digits	Barcode for the item
	barcode 2	up to 13 digits	Additional barcodes
	barcode 3		
	barcode 4		
Syntax 2	107,1,_____,_,_; 3 :[ALL]; 107,1,_____,_,_; 3 :[plu 1];[plu 2];		
Parameters description	Delete items		
	Parameter	Values	Description
	all	String “ALL”	When string “ALL” is passed, all items are deleted and the other paramters are not needed.
	plu 1	1 ~ 100000 for ECR, ~3000 for FP	Single item to delete, if plu 2 is > 0 its the start of the range plu1 ~ plu2 for deletion.
plu 2	Ending plu for delete range		
Syntax 3	107,1,_____,_,_; 4 :[plu];[price];		
Parameters description	Change price of an item		
	Parameter	Values	Description
	plu	1 ~ 100000 for ECR,	Item code /PLU/

		~3000 for FP	
	price	0 ~ 999999.99	New price for the item
Syntax 4	107,1,_____,_,_; 5 :[plu];[+ - quantity];		
Parameters description	Add/subtract stock quantity		
	Parameter	Values	Description
	code plu	1 ~ 100000 for ECR, ~3000 for FP	Item code
	quantity	0 ~ +-999999.999	Quantity to be added/subtracted
Syntax 5	107,1,_____,_,_; 6 :[plu];		
Parameters description	Reading item data		
	Parameter	Values	Description
	plu	1 ~ 100000 for ECR, ~3000 for FP	Item code to read
	Output params are saved in the answer file: 107,1,_____,_,_;(plu);(VAT);(department);(item group);(price type);(price);(turnover); (sold quantity);(stock quantity);(barcode 1);(barcode 2);(barcode 3);(barcode 4);(name);		
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

109 – duplicate documents

Syntax 1	109,1,_____,_,_:[type];[start DT];[end DT];0;		
Parameters description	Prints duplicates of documents, selected by date and time.		
	Parameter	Values	Description
	Type	A – all documents F – fiscal receipts R – reclamation receipts Z – Z reports X – X reports P – periodic reports	One of the symbols A,F,R,Z,X,P
	start DT	DDMMYY[hhmmss]	Start of the period (default time is 00:00:00)
	end DT		End of the period (default time is 23:59:59)
Syntax 2	109,1,_____,_,_:[type];[start N];[end N];1;		
Parameters description	Prints duplicates of documents, selected by document number.		
	Parameter	Values	Description
	Type	A – all documents F – fiscal receipts R – reclamation receipts Z – Z reports X – X reports P – periodic reports	One of the symbols A,F,R,Z,X,P
	start N	1...9999999	Start document number
	end N		End document number
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

111 – items report

Syntax	111,1,_____,_,_:[code];[start num];[end num];		
Parameters description	Parameter	Values	Description
	code	'0' - PLU turnovers; '1' - PLU turnovers with clearing; '2' - PLU parameters; '3' - PLU stock;	Defines report type
	start num	1 ~ 100000 for ECR, ~3000 for FP	Starting range
	end num	1 ~ 100000 for ECR, ~3000 for FP	Ending range
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

119 – electronic journal reports

Syntax	119,1,_____,_,_:[Start date time];[End date time];[document type];[Print];[Filename];		
Parameters description	Saves or prints EJ report		
	Parameter	Values	Description
	Start date / End date	8 ~ 12 digits, format DD-MM-YY [hh:mm:ss]	Report range. If time is omitted, starting time is 00:00:01, ending is 23:59:59
	document type	0 – Fiscal documents 1 – Storno documents 2 – X reports 3 – Z reports 4 – periodical reports 5 – all fiscal documents 6 – non-fiscal receipts 7 – copy of fiscal receipts 8 – all receipts	Defines documents to read
	Print	0 or 1	Value 1 prints the report
	Filename	~ 255 symbols	Path and file name to save the report to. If empty nothing is saved
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

300 – item loading from file

Syntax 1	300,1,_____,_,_;;[DeleteAll];;[TextOnDisplay];<File name>;		
Parameters description	Item programming		
	Parameter	Values	Description
	DeleteAll	0 ~ 1	If 1, items in the printer's memory are cleared
	TextOnDisplay	1 ~ 40 symbols	Item code
	File name	0 ~ 999999.99	Item price
File structure	Item data structure in the file: [Tax group];[PLU];[Price];[Name];[+Quantity];[price type];[group];[department];[barcode 1];[barcode 2];[barcode 3];[barcode 4]; - do not add this line, its only a comment. 1;1;0,01;Test item 01;11;0;1;0;456724516;0;0;0; 1;2;0,02;Test item 02;12;0;1;0;456724536;0;0;0; 2;3;0,03;Test item 03;13;0;1;0;456724526;0;0;0; 2;4;0,04;Test item 04;114;0;1;0;456724546;0;0;0; 2;5;0,05;Test item 05;15;0;1;0;456724566;0;0;0;		
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

301 – cancel fiscal receipt

Syntax	301,1,_____,_,_;; (for backward compatibility, does the same as number 60)		
Description	Cancels current fiscal receipt.		
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

303 – reading global document number

Syntax	303,1,_____,_,_;	
Answer format	303,1,_____,_,_:[global number];	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX

305 – custom command – add new item/change price of an existing item and then sell it

Syntax	305,1,_____,_,_;<PLU>:[quantity];[percent];[price];<Tax group>:[Item name];	
Parameters description	Item programming	
	Parameter	Values
	PLU	1 ~ 100000 for ECR, ~3000 for FP
	quantity	0,001 ~ 99999,999
	percent	± 0,01% ~ ± 100,00%
	price	0 ~ 999999.99
	Tax group	1 ~ 5
Parameters description	Item name	up to 72 symbols, depends on the device
	Description	
	Item code	
	The quantity to be sold	
	Correction %	
	VAT group	
Answer format	305,1,_____,_,_:[global document number];	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX
Additional info	The command will add new item if none with the specific PLU is found or will change the price of an already existing item. After that it will sell the item.	
	If there is already programmed item with that PLU, and the price of that item differs from <Price>, then the <Price> will be set as new price for the item, but IF the price type of the item is not 0 (fixed price).	

350 – custom command (old version)

Syntax	350,1,_____,_,_;<Input/OutputString>;	
Description	You can execute any of the printer's commands (as described in the firmware documentation) by assembling the command number and parameters into a string that you pass in <Input/OutputString>. The result of the execution (data, statuses) will be saved in the answer file.	
Supported devices	DP 25 X	FP 700 MX
	FP 60 X	DP 25 MX
	FP 700 X	DP 150 MX
		WP 50 MX

351 – custom command

Syntax	351,1,_____,_,_;;[Command];[Data]		
Description	Executes custom command from the firmware, see firmware documentation for commands syntaxes. The result of the execution will be saved in the answer file.		
	Parameter	Values	Description
	Command	digit (30 ~ 253)	Command number based on the firmware documentation
	Data	Symbols for TAB (0x10) and linefeed(0x9) are represented with [TAB] [t] and [LF] [f]	Command input data based on the firmware documentation
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	
Answer format	351,1,_____,_,_;;[Output result from command];[Command];[Data]		

999 – closing Fprint while in resident mode

Syntax	999,1,_____,_,_;		
Description	In resident mode, the program runs non-stop, this is the script for exiting it.		
Supported devices	DP 25 X	FP 700 MX	
	FP 60 X	DP 25 MX	
	FP 700 X	DP 150 MX	
		WP 50 MX	

Old devices:

FP550, TM-T260F, FP700, FP60, FMP 350

NOTE: Parameters in < > brackets are mandatory, while those in [] brackets are non-mandatory! The brackets by themselves are **not** passed along with the data value.

"38" – open non-fiscal receipt

38,1,_____,_,_;

The command won't be executed if:

- there is already opened receipt(fiscal or non-fiscal);
- the clock is not set;
- the fiscal memory is not formatted;

In non-fiscal receipts you can only print non-fiscal text.

"42" – print non-fiscal text

42,1,_____,_,_:[text];

- [text] is random text (max 30 symbols)

You can print non-fiscal text only in an opened non-fiscal receipt.

"39" – close non-fiscal receipt

39,1,_____,_,_;

The command won't be executed if there is no opened receipt.

"48" – open fiscal receipt

48,1,_____,_,_;<IOSA>;<Operator>;<Password>;<TillNumber>;[ReceiptNumber];

- <IOSA> – IOSA number (max 16 digits);
- <Operator> – operator number (1-32);
- <Password> – the operator's password (4 to 8 digits);
- <TillNumber> - till number (max 5 digits);
- [ReceiptNumber] – max 6 digits. If present and greater than zero, a “Reclamation” receipt is opened and this is the number of the receipt from which the warez are returned;

The answer file contains the following information:

48,1,_____,_,_;Total_Receipts,Fiscal_Receipts,Reclamation_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and reclamation) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Reclamation_Receipts - total number of issued reclamation receipts;

The command won't be executed if:

- there is already opened receipt;
- the max number of receipts per day is already issued;
- the fiscal memory is full;
- the fiscal memory is corrupted;
- one of the mandatory parameters is missing or wrong;
- the operator's password is wrong;
- the clock is not set;
- the display is not connected;

"52" – sell items and show on the display

The command has 2 variations:

I. 52,1,_____,_,_ ;[+ -]<PLU>[quantity];[percent];

- [+ -] <PLU> is the PLU number of the item (max 8 digits). If you pass the PLU number with a minus sign in front of it, the command will cancel the previous sale of that item (the prices of the sold/canceling items must be the same, the quantity can differ, but cannot go below the sold quantity);
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- [percent] is the discount/surcharge in percents (-99.00% ~ 99.00% for FP 550, -100% ~ +100% for TM-T260) ;

II. 52,1,_____,_,_ ;<VF|VL>;

- <VF or VL> - **void** the first sold item in the receipt (VF) or the last item in the receipt (VL);

The printer will not carry out this command if:

- the maximum number of sales (510 for FP550,TM260; 1024 for FP60, FP700) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the sum of discounts and surcharges within the receipt is negative;
- the display is disconnected

"51" – subtotal

51,1,_____,_,_ ;

The command shows the sum of the current sells in the receipt on the display.

"53" – payment

53,1,_____,_,_;;[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash;
 - value '1' means payment via card;
 - value '2' means payment via cheque;
 - value '3' means payment type „Virman”;
- [amount] – the sum of the payment

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

The command cannot be executed if :

- there is no opened receipt
- the accumulated sum is negative
- the sum for a tax group is negative
- the display is disconnected

"55" – enter client information (invoice)

55,1,_____,_,_;<IBK>;<Line 1>;<Line 2>;<Line 3>;[Line 4];[Line 5];[Line 6];

- <IBK> – exactly 13 symbols – client identification code;
- <Line 1>,<Line 2>,<Line 3> - up to 36 symbols of text each, the first three lines are mandatory;
- [Line 4];[Line 5];[Line 6]; - up to 36 symbols of text each, non mandatory parameters;

The command prints client information (up to 6 lines of text and IBK code). The IBK code and the lines of text after **full payment** is done, therefor the command won't be executed if full payment is not done.

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if full payment is done.

The answer file contains the following information:

56,1,_____,_,_;;Total_Receipts,Fiscal_Receipts,Reclamation_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and reclamation) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Reclamation_Receipts - total number of issued reclamation receipts;

"107" – programming and deleting items, changing price for programmed items

107,1,_____,_,_;<operation type>[set of parameters, depending on the <operation type>];

Depending on the <operation> parameter, the command has 3 different structures:

- Programming new items - <operation type> = 1 or 2
<operation type> = 1 – duplicate programming is not allowed
<operation type> = 2 – duplicate programming is allowed

107,1,_____,_,_;<1|2>[Tax group];[PLU];[Price];[Name];

- [Tax group] – a number, defining tax groups:
 - 1 : tax group “A”;
 - 2 : tax group “E”;
 - 3 : tax group “J”;
 - 4 : tax group “K”;
 - 5 : tax group “M”;
- [PLU] – PLU number of the item (max 65023 for FP550/TM260 and max 154600 for FP700);
- [Price] – default price for the item (0.01 – 999999.99);
- [Name] – name of the item (max 32 symbols for FP550/TM260 and max 36 for FP700);

Can be executed only after fiscal closure.

- Deleting items - <operation type> = 3

107,1,_____,_,_;<3>[ALL];

107,1,_____,_,_;<3>[PLU];

- [ALL] – if the string “ALL” is passed, the command clears all items;
- [PLU] – deletes the selected PLU number;

Can be executed only after fiscal closure.

- Change price - <operation type> = 4

107,1,_____,_,_;<4>[PLU];[New price];

- [PLU] – the item number;
- [New price] – the new price for the item;

Errors from this command are recorded in the answer file, but the execution of the next command in the file (when using EXECUTE_FILE function) is not stopped.

"33" – clear the display

33,1,_____,_,_;

Clears the display. If there is an opened fiscal receipt and SW4 is OFF, only the bottom row is cleared.

"47" – show text on top row of the display

47,1,_____,_,_:[text];

➤ [text] is random text (20 symbols max)

If there is an opened fiscal receipt and SW4 is OFF, the command is rejected.

"35" – show text on bottom row of the display

35,1,_____,_,_:[text];

➤ [text] is random text (20 symbols max)

"63" – show date and time

63,1,_____,_,_;

Shows the current date and time on the bottom row of the display(DD.MM.YYYY. HH:MM:SS)

"100" – show text on both rows of the display

100,1,_____,_,_:[text];

➤ [text] is random text (40 symbols max)

"32" – get last error code and message /only supported in FP60, FP700/

32,1,_____,_,_;

The command returns the command code where the error occurred, the error code, date and description of the error in the format:

32,1,_____,_,_;<Command>,<Error code>,<Date and time (DD-MM-YYYY hh:mm:ss)>,<Description>;

"60" – winter/summer time change

60,1,_____,_,_:[Flag];

- [Flag] – one digit value (0 or 1):
 - value '0' means winter time change (minus one hour);
 - value '1' means summer time change (plus one hour);

The command can be executed only 2 times per year!!!

"69" – daily fiscal closure

69,1,_____,_,_:[Type];[N][A];

- [Type] determines the report type:
 - value '0' means Z report with registry clear
 - value '2' means X report without registry clear
- [N][A] – the symbols “N” and “A”. Description:
 - if symbol “A” is present - the accumulated sold quantities of the items are cleared. The items themselves are not cleared;
 - if symbol “N” is present – prohibits the deletion of operator's data when Z report (registry clear) is executed;

"70" – internal input and output of cash

70,1,_____,_,_;[+ -][amount];

- [+ -][amount] – the sum (max 999999.99) of the input/output (the sign + or – defines if its input or output);

"106" – open the drawer

106,1,_____,_,_;

"73" – fiscal memory report by memory block number

73,1,_____,_,_;<Start_number>;<End_number>;<Options>;

- <Start_number> – digit, defines the starting record number for the report ;
- <End_number> – digit, defines the ending record number for the report;
- <Options> – digit, defining the option for the report contents:
 - 0 – prints only the number and datetime for each Z report;
 - 1 – prints total number of issued receipts for each Z report;
 - 2 – prints the total sum for each tax group for each Z report;

"79" – fiscal memory report by date

79,1,_____,_,_;<Start_date>;<End_date>;[Start_hour];[End_hour];

- <Start_date> – defines the starting date for the report (format DDMMYY);
- <End_date> – defines the ending date for the report (format DDMMYY);
- [Start_hour] – defines starting hour (if blank the start time is 00:00:00);
- [End_hour] – defines ending hour (if blank the end time is 23:59:59);

"105" – report operators

105,1,_____,_,_;

Prints information about the sells by operator.

"111" – report items

111,1,_____,_,_;<Options>;

- <Options> – digit, defines the information to be printed:
 - 0 – only information about sold items during the day is printed (PLU, Name, Sold quantity) ;
 - 1 – all programmed items are printed (PLU, Name, Price);

"109" – duplicate documents within period or number of document

The command has two variations, depending on the <Cmd> parameter.

I. Date range - <Cmd> parameter = 0:

109,1,_____,_,_;<Type>;<Start datetime>;<End datetime>;<Cmd>;

- <Type> - one or more of the following symbols can be passed:
 - **A** - prints duplicate for all documents;
 - **F** - prints duplicate for fiscal receipts;
 - **R** - prints duplicate for reclamation receipts;
 - **Z** - prints duplicate for Z reports;
 - **X** - prints duplicate for X reports;
 - **P** - prints duplicate for periodic reports;

e.g. "FZ" means print duplicated fiscal receipts and Z reports.
- <Start datetime> - start of the period (format DDMMYY[hhmmss]; if [hhmmss] is skipped, default time is 00:00:00);
- <End datetime> - end of the period (format DDMMYY[hhmmss]; if [hhmmss] is skipped, default time is 23:59:59);

II. Document number - <Cmd> = 1:

109,1,_____,_,_;<Type>;<Start number>;[End number];<Cmd>;

- <Type> - one of the following symbols can be passed:
 - **F** - prints duplicate for fiscal receipts;
 - **R** - prints duplicate for reclamation receipts;
- <Start number> - start number for range of documents to duplicate. If [End number] is skipped, this is the number of a single document to be printed;
- <End number> - end number for the range;

"300" – loading items from file

300,1,_____,_,_:[DeleteAll];[AllowDuplicate];[TextOnDisplay];<File name>;

- [DeleteAll] – digit, defines if all items are cleared before load:
 - 0 – items in the printer's memory are not cleared; (default value if not specified)
 - 1 – items in the printer's memory are cleared;
- [AllowDuplicate] – digit, defines if item names can be duplicated;
 - 0 – item names cannot be the same; (default value if not specified)
 - 1 – item names can duplicate;
- [TextOnDisplay] – text (max 40 symbols), shown on the display while the loading is running;
- <File name> - string, specifying the location of the file from which the items are loaded;
 - Item data structure in the file : (sample file is included in the installation);
[Tax group];[PLU];[Price];[Name]; (this row is just description, do not include it in the file)
1;1;0.01;Test item 01;
1;2;0.02;Test item 02;
3;3;0.03;Test item 03;
3;4;0.04;Test item 04;
5;5;0.05;Test item 05;

"301" – void receipt

301,1,_____,_,_;

Emergency receipt closure. If executed while fiscal receipt is opened, the command voids all sells(if any), executes payment with sum = 0.00 and closes the receipt. Nonfiscal receipts are simply closed.

The command won't be executed if there is payment already done (with sum > 0) and the payed sum is less that the whole sum of the receipt.

"305" – custom command – add new item/change price of an existing item and then sell it

The command will add new item if none with the specific PLU is found or changes the price of already existing item. After that it will sell the item.

305,1,_____,_,_;<PLU>[quantity];[percent];[Price];<Tax group>[Item name];

- <PLU> is the PLU number of the item (max 8 digits)
 - If there is already programmed item with that PLU, and the price of that item differs from <Price>, then the <Price> will be set as new price for the item;
 - If no item with PLU is found, it will be programmed with <PLU>, <Price>, <Tax group> and <Item name>;
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- [percent] is the discount/surcharge in percents (-99.00% ~ 99.00%) ;
- <Tax group> is the tax group for the item

The printer will not carry out this command if:

- the maximum number of sales (99) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the sum of discounts and surcharges within the receipt is negative;
- the display is disconnected;
- you try to change the price of already sold item within the same receipt;

"350" – execute custom command

350,1,_____,_,_;<Input/OutputString>;

You can execute any of the printer's commands (as described in the firmware documentation) by assembling the command number and parameters into a string that you pass in <Input/OutputString>.

The result of the execution (data, statuses) will be saved in the answer file (see sample file "Sell_with_command_350(customCMD).txt")

"999" – close FPrint

999,1,_____,_,_;

The command closes Fprint.exe when in resident mode setting.

NOTE: Parameters in < > brackets are mandatory, while those in [] brackets are non-mandatory! The brackets by themselves are **not** passed along with the data value.

"38" – open non-fiscal receipt

38,1,_____,_,_;

The command won't be executed if:

- there is already opened receipt(fiscal or non-fiscal);
- the clock is not set;
- the fiscal memory is not formatted;

In non-fiscal receipts you can only print non-fiscal text.

"42" – print non-fiscal text

42,1,_____,_,_:[text];

- [text] is random text (max 24 symbols)

You can print non-fiscal text only in an opened non-fiscal receipt.

"39" – close non-fiscal receipt

39,1,_____,_,_;

The command won't be executed if there is no opened receipt.

"48" – open fiscal receipt

48,1,_____,_,_;<IOSA>;<Operator>;<Password>;<TillNumber>;[ReceiptNumber];

- <IOSA> – IOSA number (max 16 digits);
- <Operator> – operator number (1-32);
- <Password> – the operator's password (4 to 8 digits);
- <TillNumber> - till number (max 5 digits);
- [ReceiptNumber] – max 6 digits. If present and greater than zero, a “Reclamation” receipt is opened and this is the number of the receipt from which the warez are returned;

The answer file contains the following information:

48,1,_____,_,_;Total_Receipts,Fiscal_Receipts,Reclamation_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and reclamation) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Reclamation_Receipts - total number of issued reclamation receipts;

The command won't be executed if:

- there is already opened receipt;
- the max number of receipts per day is already issued;
- the fiscal memory is full;
- the fiscal memory is corrupted;
- one of the mandatory parameters is missing or wrong;
- the operator's password is wrong;
- the clock is not set;
- the display is not connected;

"52" – sell items and show on the display

The command has 2 variations:

I. 52,1,_____,_,_ ;[+ -]<PLU>[quantity];[percent];

- [+ -] <PLU> is the PLU number of the item (max 8 digits). If you pass the PLU number with a minus sign in front of it, the command will cancel the previous sale of that item (the prices of the sold/canceling items must be the same, the quantity can differ, but cannot go below the sold quantity);
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- [percent] is the discount/surcharge in percents (-99.99% ~ 99.99%) ;

II. 52,1,_____,_,_ ;<VL>;

- <VL> - **void** the last item in the receipt (VL);

The printer will not carry out this command if:

- the maximum number of sales (182) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the sum of discounts and surcharges within the receipt is negative;
- the display is disconnected;

"51" – subtotal

51,1,_____,_,_ ;

The command shows the sum of the current sells in the receipt on the display.

"53" – payment

53,1,_____,_,_;;[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash;
 - value '1' means payment via card;
 - value '2' means payment via cheque;
 - value '3' means payment type „Virman”;
- [amount] – the sum of the payment

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

The command cannot be executed if :

- there is no opened receipt
- the accumulated sum is negative
- the sum for a tax group is negative
- the display is disconnected

"55" – enter client information (invoice)

55,1,_____,_,_;<IBK>;<Line 1>;<Line 2>;<Line 3>;[Line 4];[Line 5];[Line 6];

- <IBK> – exactly 13 symbols – client identification code;
- <Line 1>,<Line 2>,<Line 3> - up to 36 symbols of text each, the first three lines are mandatory;
- [Line 4];[Line 5];[Line 6]; - up to 36 symbols of text each, non mandatory parameters;

The command prints client information (up to 6 lines of text and IBK code). The IBK code and the lines of text after **full payment** is done, therefor the command won't be executed if full payment is not done.

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if full payment is done.

The answer file contains the following information:

56,1,_____,_,_;;Total_Receipts,Fiscal_Receipts,Reclamation_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and reclamation) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Reclamation_Receipts - total number of issued reclamation receipts;

"107" – programming and deleting items, changing price for programmed items

107,1,_____,_,_;<operation type>;[set of parameters, depending on the <operation type>;];

Depending on the <operation> parameter, the command has 3 different structures:

- Programming new items - <operation type> = 1 or 2
<operation type> = 1 – PLU reprogramming is not allowed
<operation type> = 2 – PLU reprogramming is allowed

107,1,_____,_,_;<1|2>;[Tax group];[PLU];[Price];[Name];

- [Tax group] – a number, defining tax groups:
 - 1 : tax group “A”;
 - 2 : tax group “E”;
 - 3 : tax group “J”;
 - 4 : tax group “K”;
 - 5 : tax group “M”;
- [PLU] – PLU number of the item 1 – 65023;
- [Price] – default price for the item (0.01 – 999999.99);
- [Name] – name of the item, max 22 symbols;

Can be executed only after fiscal closure.

- Deleting items - <operation type> = 3

107,1,_____,_,_;<3>;[ALL];
107,1,_____,_,_;<3>;[PLU];
107,1,_____,_,_;<3>;[FROM_PLU];[TO_PLU];

- [ALL] – if the string “ALL” is passed, the command clears all items;
- [PLU] – deletes the selected PLU number;
- if [FROM_PLU] and [TO_PLU] have values > 0 and [TO_PLU]>[FROM_PLU], then items in that range will be deleted;

Can be executed only in service mode and after fiscal closure.

- Change price - <operation type> = 4

107,1,_____,_,_;<4>;[PLU];[New price];

- [PLU] – the item number;
- [New price] – the new price for the item;

Errors from this command are recorded in the answer file, but the execution of the next command in the file (when using EXECUTE_FILE function) is not stopped.

"33" – clear the display

33,1,_____,_,_;

Clears the display. If there is an opened fiscal receipt and SW4 is OFF, only the bottom row is cleared.

"47" – show text on top row of the display

47,1,_____,_,_;[text];

➤ [text] is random text (20 symbols max)

If there is an opened fiscal receipt and SW4 is OFF, the command is rejected.

"35" – show text on bottom row of the display

35,1,_____,_,_;[text];

➤ [text] is random text (20 symbols max)

"63" – show date and time

63,1,_____,_,_;

Shows the current date and time on the bottom row of the display(DD.MM.YYYY. HH:MM:SS)

"100" – show text on both rows of the display

100,1,_____,_,_;[text];

➤ [text] is random text (40 symbols max)

"69" – daily fiscal closure

69,1,_____,_,_;[Type];

- [Type] determines the report type:
 - value '0' means Z report with registry clear
 - value '2' means X report without registry clear (default if parameter not present)

"70" – internal input and output of cash

70,1,_____,_,_;[+ -][amount];

- [+ -][amount] – the sum (max 999999.99) of the input/output (the sign + or – defines if its input or output);

"106" – open the drawer

106,1,_____,_,_;

"79" – fiscal memory report by date

79,1,_____,_,_;<Start_date>;<End_date>;[Start_hour];[End_hour];

- <Start_date> – defines the starting date for the report (format DDMMYY);
- <End_date> – defines the ending date for the report (format DDMMYY);
- [Start_hour] – defines starting hour (if blank the start time is 00:00:00);
- [End_hour] – defines ending hour (if blank the end time is 23:59:59);

"105" – report operators

105,1,_____,_,_;

Prints informations about the sells by operator.

"111" – report items

111,1,_____,_,_;<Options>;

- <Options> – digit, defines the information to be printed:
 - 0 – only informations about sold items during the day is printed (PLU, Name, Sold quantity) ;
 - 1 – all programmed items are printed (PLU, Name, Price);

"109" – duplicate documents within period

109,1,_____,_,_;<Type>;<Start datetime>;<End datetime>;

- <Type> - one or more of the following symbols can be passed:
 - **A** - prints duplicate for all documents;
 - **N** - prints duplicate for nonfiscal receipts;
 - **F** - prints duplicate for fiscal receipts;
 - **R** - prints duplicate for reclamation receipts;
 - **Z** - prints duplicate for Z reports;
 - **X** - prints duplicate for X reports;
 - **P** - prints duplicate for periodic reports;

e.g. "NFZ" means print duplicated fiscal and nonfiscal receipts and Z reports.
- <Start datetime> - start of the period (format DDMMYY[hhmmss]; if [hhmmss] is skipped, default time is 00:00:00);
- <End datetime> - end of the period (format DDMMYY[hhmmss]; if [hhmmss] is skipped, default time is 23:59:59);

If the period contains more that 100 documents, only the first 100 are printed.

"300" – loading items from file

300,1,_____,_,_:[DeleteAll];[AllowReprogram];[TextOnDisplay];<File name>;

- [DeleteAll] – digit, defines if all items are cleared before load:
 - 0 – items in the printer's memory are not cleared; (default value if not specified)
 - 1 – items in the printer's memory are cleared;
- [AllowReprogram] – digit, defines if an item with the PLU can be reprogrammed (if no sales have been made with it);
 - 0 – item with specified PLU will not be reprogrammed; (default value if not specified)
 - 1 – item with specified PLU will be reprogrammed if no sales are made with it;
- [TextOnDisplay] – text (max 40 symbols), shown on the display while the loading is running;
- <File name> - string, specifying the location of the file from which the items are loaded;
 - Item data structure in the file : (sample file is included in the installation);

[Tax group];[PLU];[Price];[Name]; (this row is just description, do not include it in the file)

1;1;0.01;Test item 01;

1;2;0.02;Test item 02;

3;3;0.03;Test item 03;

3;4;0.04;Test item 04;

5;5;0.05;Test item 05;

"301" – void receipt

301,1,_____,_,_;

Emergency receipt closure. If executed while fiscal receipt is opened, the command voids all sells(if any), executes payment with sum = 0.00 and closes the receipt. Nonfiscal receipts are simply closed.

The command won't be executed if there is payment already done (with sum > 0) and the payed sum is less that the whole sum of the receipt.

"305" – custom command – add new item/change price of an existing item and then sell it

The command will add new item if none with the specific PLU is found or changes the price of already existing item. After that it will sell the item.

305,1,_____,_,_;<PLU>[quantity];[percent];[Price];[Tax group>];[Item name];

- <PLU> is the PLU number of the item (max 8 digits)
 - If there is already programmed item with that PLU, and the price of that item differs from <Price>, then the <Price> will be set as new price for the item;
 - If no item with PLU is found, it will be programmed with <PLU>, <Price>, <Tax group> and <Item name>;
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- [percent] is the discount/surcharge in percents (-99.00% ~ 99.00%) ;

The printer will not carry out this command if:

- the maximum number of sales (99) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the sum of discounts and surcharges within the receipt is negative;
- the display is disconnected;
- you try to change the price of already sold item within the same receipt;

"350" – execute custom command

350,1,_____,_,_;<Input/OutputString>;

You can execute any of the printer's commands (as described in the firmware documentation) by assembling the command number and parameters into a string that you pass in <Input/OutputString>.

The result of the execution (data, statuses) will be saved in the answer file (see sample file "Sell_with_command_350(customCMD).txt")

"999" – close FPrint

999,1,_____,_,_;

The command closes Fprint.exe when in resident mode setting.

Georgia

DP-05, DP-25

"48" – open fiscal receipt

48,1,_____,_,_;<operator>;<password>;[TillNumber];[ReceiptType];

- <operator> is the operator number (1-16);
- <password> is the password (6 digits) for the operator;
- [TillNumber] is point of sale number (1-999);
- [ReceiptType] can be:
 - 0 – open sales receipt;
 - 1 – open return receipt;

The command won't be executed if there is an opened receipt.

"49" – sell items

49,1,_____,_,_;<item>;<price>;<quantity>;<tax group>;[discount/surcharge type];
[discount/surcharge value];[department];

- <item> is the name of the item (up to 32 symbols);
- <price> is the price of a single item (-999999.99 ~ 99999.99 for FP; the negative price is used for voiding sales);
- <quantity> is the quantity sold (a number 0 ~ 99999.999);
- <tax group> is a number for the tax group of the item (1,2,3 for vat A,B and C);
- [discount/surcharge type] is:
 - 0 – no discount/surcharge (default value)
 - 1 – surcharge by percentage
 - 2 – discount by percentage
 - 3 – surcharge by sum
 - 4 – discount by sum
- [discount/surcharge value] is the value of the discount/surcharge; (default value is 0);
- [department] is the department number (1-16, default value 1);

"51" – subtotal

51,1,____,_,_:[Print];[discount/surcharge type];[discount/surcharge value];

- [Print] – parameter that determines if the sum of the subtotal will be printed out:
 - value '0' – do not print
 - value '1' – print
- [discount/surcharge type] is:
 - 0 – no discount/surcharge (default value)
 - 1 – surcharge by percentage
 - 2 – discount by percentage
 - 3 – surcharge by percentage
 - 4 – discount by percentage
- [discount/surcharge value] is the value of the discount/surcharge; (default value is 0);

The command can be executed outside of opened receipt without parameters or with all parameters = 0, which clears the display.

"53" – payment

53,1,____,_,_:[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash
 - value '1' means payment via card
 - value '2' means payment via credit
 - value '3' means payment via tare
- [amount] – the sum of the payment (0.00...9999999.99);

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

"56" – close fiscal receipt

56,1,____,_,_;

The command closes a fiscal receipt, but only if payment is done. It also returns the following information in the answer:

56,1,____,_,_:[SlipNumberOfType];[SlipNumber];[DocNumber];

- [SlipNumberOfType] – the slip number of the current type of receipt. Receipt types are:
 - cash paid normal fiscal receipt
 - cashfree paid normal fiscal receipt
 - cash paid return fiscal receipt
 - cashfree paid return fiscal receipt
- [SlipNumber] is the global fiscal document number;
- [DocNumber] is the global (non-fiscal and fiscal) document number;

"58" – sell items by PLU code

58,1,____,_,_;<PLU>;[quantity];[price];[discount/surcharge type]; [discount/surcharge value];

- <PLU> is the programmed item code (1-100000);
- [quantity] is the quantity sold (a number 0 ~ 99999.999);default = 1;
- [price] is the price of a single item;default = the item programmed price;
- [discount/surcharge type] is:
 - 0 – no discount/surcharge (default value)
 - 1 – surcharge by percentage
 - 2 – discount by percentage
 - 3 – surcharge by sum
 - 4 – discount by sum
- [discount/surcharge value] is the value of the discount/surcharge; (default value is 0);

"60" – cancel current fiscal receipt

60,1,____,_,_;

The whole fiscal receipt will be canceled and closed as non-fiscal. This command will work only if no payments have been made yet.

"38" – open non-fiscal receipt

38,1,____,_,_;

"39" – close non-fiscal receipt

38,1,____,_,_;

"42" – print non-fiscal text

44,1,____,_,_:[Text (max 30 symbols)];

"44" – paper feed

44,1,____,_,_: [Lines];

Lines is the count of lines to feed (0-99).

"61" – set date and time

61,1,____,_,_:<Datetime>;

Datetime is in format DD-MM-YY hh:mm:ss

"62" – read date and time

62,1,____,_,_;

Datetime is returned in the answer file in format DD-MM-YY hh:mm:ss

"69" – daily closure and X report

69,1,____,_,_:<flag>;

➤ <flag> is a symbol “X” or “Z” and determines the report type:

- value 'Z' means Z report with registry clear
- value 'X' means X report without registry clear

"70" – internal debiting and crediting (cash in/out)

70,1,____,_,_;<+ - amount>;

- <+ - amount> – negative sum is cashed out of the ECR, positive is cash in.

If this parameter is 0, the command returns current values without print in the answer file in format:

70,1,____,_,_;CashSum;CashIn;CashOut;DocNumber;

- CashSum – cash sum in safe;
- CashIn - total sum of cash-in operations;
- CashOut - total sum of cash-out operations;
- DocNumber is the global (non-fiscal and fiscal) document number;

"71" – print diagnostic information

71,1,____,_,_;

The command initiates diagnostics print, no data is returned.

"76" – status of the fiscal receipt

76,1,____,_,_;

The command returns the following data in the answer file:

76,1,____,_,_;Type;Items;Amount;Paid;SlipNumber;DocNumber;

- Type - has the following values:
 - 0 – no open receipts;
 - 1 – sales receipt is opened;
 - 2 – return receipt is opened;
 - 3 – sales receipt is opened and payment is finished, close receipt with command 56;
 - 4 – return receipt is opened and payment is finished, close receipt with command 56;
 - 5 – sales or return receipt opened and voided, close with command 56/39;
 - 6 – non-fiscal receipt is opened, close with command 39;
- Items - number of sales registered on the current or the last fiscal receipt;
- Amount - the sum from the current or the last fiscal receipt;
- Paid - the sum paid for the current or the last receipt;
- SlipNumber is the global fiscal document number;
- DocNumber is the global (non-fiscal and fiscal) document number;

"94" – print fiscal memory report by date

94,1,____,_,_;<Report type>[Start date];[End date];

- <Report type> - number: 0 – short report; 1 – detailed report;
- [Start date] – format DD-MM-YY;
- [End date] – format DD-MM-YY;

If the [Start date] parameter is empty, starting date is the fiscalization date. If the [End date] is empty, the current datetime is used.

"95" – print fiscal memory report by block

95,1,____,_,_;<Report type>[Start number];[End number];

- <Report type> - number: 0 – short report; 1 – detailed report;
- [Start number] – First Z report (1...3800);
- [End number] – Last Z report (1...3800);

"105" – report operators

105,1,____,_,_:[FirstOp];[LastOp];[Clear]

- [FirstOp] - First operator (1...30), if skipped its 1 by default;
- [LastOp] - Last operator (1...30), if skipped its 30 by default;
- [Clear] – 0 or 1; Value 0 is report without operator register clearing, 1 is with clearing.

Prints informations about the sells by operators.

"106" – drawer opening (only for DP-25)

106,1,____,_,_;

"107" – programming and deleting items, changing price for programmed items

107,1,_____,_,_;<operation type>[set of parameters, depending on <operation type>];

Depending on the <operation> parameter, the command has 4 different structures:

- Programming new items - <operation type> = 1
<operation type> = 1 – duplicate programming is not allowed

107,1,_____,_,_;<1>;<PLU>;<VAT>;[Department];[Group];[Price type]<Price>;[Quantity];
[Barcode1];[Barcode2];[Barcode3];[Barcode4];<Name>;

- <PLU> – PLU number of the item (1..100000);
- <VAT> – a number, defining tax groups:
 - 1 : tax group “A”;
 - 2 : tax group “B”;
 - 3 : tax group “C”;
- [Department] is department code (1..16); default if not present is 1;
- [Group] is stock group (1..99); default if not present is 1;
- [Price type] of the item ('0' - fixed price, '1' - free price, '2' - max price); default if not present is 0;
- [Price] – default price for the item (0.00...9999999.99);
- [Quantity] is the stock quantity (0.001...99999.999); default if not present is 1.000;
- [Barcode1..4] – up to 13 digits for barcode strings;
- <Name> – name of the item (max 32 symbols);

Can be executed only after fiscal closure.

- Deleting items - <operation type> = 2

107,1,_____,_,_;<2>;[ALL];
107,1,_____,_,_;<2>;[PLU1];[PLU2];

- [ALL] – if the string “ALL” is passed, the command clears all items;
- [PLU1] – deletes the selected PLU number if PLU2 is empty, otherwise the range PLU1~PLU2 is deleted;

Can be executed only after fiscal closure.

- Change stock quantity- <operation type> = 3

107,1,_____,_,_;<3>;[PLU];[Quantity];

- [PLU] – the item number;
- [Quantity] – the quantity is added to the current item quantity;

- Read item data - <operation type> = 4

107,1,_____,_,_;<4>;[PLU];

The answer file contains data read for the selected <PLU> in format:

107,1,_____,_,_;;PLU;Vat;Department;Group;PriceType;Price;Turnover;Sold
quantity;Available quantity;Barcode1;Barcode2;Barcode3;Barcode4;Name;

"111" – report items

111,1,_____,_,_;<Report type>[First PLU];[Last PLU];

➤ <Report type> – is of the following values:

- 0 – show PLU turnovers;
- 1 – show PLU turnovers with clearing;
- 2 – show PLU parameters;
- 3 – show PLU stock quantity;

"350" – execute custom command

350,1,_____,_,_;<Command>[Input data];

- <Command> – the command number by firmware specifications (see the printer's firmware documentation);
- [Input data] – the command's data by firmware specification;

The symbols LF (0x10) and TAB (0x9) can be represented by the strings [TAB] and [LF].

Example receipt:

350,1,_____,_,_;48;1[TAB]1[TAB]1[TAB]0[TAB];

350,1,_____,_,_;49;Ticket[TAB]1[TAB]0.01[TAB]1.000[TAB]0[TAB]0[TAB]1[TAB];

350,1,_____,_,_;53;[TAB][TAB];

350,1,_____,_,_;56;

Kazakhstan

FP-300, FP-550, FP-1000

S - sale

S,1,_____,_,_:[item];[price];[quantity];[];[]:[tax group];[open invoice];0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [] not used, 0 or empty;
- [tax group] is the tax group of the item (1 ~ 8);
- [open invoice] is 0 or 1 – opens invoice receipt;

FP will not carry out this command if:

- * the maximum number of sales within a single receipt (380) is reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6,7,8 are for additional payments.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_:[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

O – open drawer

O,1,_____,_,_;

L – sending text to the printer's display

L,[logical number],_____,_,_:[Command];[View type];[Text];

The [Command] parameter can have the following values:

- 0 – clears both rows of the display
- 1 – clears the top row of the display
- 2 – clears the bottom row of the display
- 3 – prints [Text] to the top row of the display
- 4 – prints [Text] to the bottom row of the display
- 5 – prints [Text] to both rows of the display
- 6 – prints date and time to the bottom row of the display

The [View type] parameter can have the following values:

- 0 – the [Text] is printed on the display at once
- 1 – the [Text] is floating(from right to left) on the display

The [Text] parameter contains the text that is to be shown on the display (the display can show 20 characters on each row at once, larger text is printed in series or its floating) – maximum 200 symbols.

Kenya

DP-50

S - sale

S,1,_____,_,_:[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 20 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 9);
- [tax group] is the tax group of the item (1 ~ 4);

FP will not carry out this command if:

- * the maximum number of sales (99) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4 numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
- [amount] - the amount of the surcharge/discount (99% max);

If prior to this command a payment ("T" cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 20 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;

The command executes Z report (daily fiscal closure).

O – open drawer

O,1,_____,_,_;

S - sale

S,1,_____,_,____;[item];[price];[quantity];[];[];[tax group];[open invoice];0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [] not used, 0 or empty;
- [tax group] is the tax group of the item (1 ~ 8);
- [open invoice] is 0 or 1 – opens invoice receipt;

FP will not carry out this command if:

- * the maximum number of sales within a single receipt (380) is reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6,7,8 are for additional payments.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

O – open drawer

O,1,_____,_,_;

Latvia

DP50, DP50D, DP500

S - sale

S,1,_____,_,__:[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 20 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 9);
- [tax group] is the tax group of the item (1 ~ 4);

FP will not carry out this command if:

- * the maximum number of sales (99) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,__;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,__[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4 numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
- [amount] - the amount of the surcharge/discount (99% max);

If prior to this command a payment ("T" cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 20 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;

The command executes Z report (daily fiscal closure).

O – open drawer

O,1,_____,_,_;

S - sale

S,1,_____,_,____;[item];[price];[quantity];[];[];[tax group];[open invoice];0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [] not used, 0 or empty;
- [tax group] is the tax group of the item (1 ~ 8);
- [open invoice] is 0 or 1 – opens invoice receipt;

FP will not carry out this command if:

- * the maximum number of sales within a single receipt (380) is reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6,7,8 are for additional payments.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,.,__:[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,.,__;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,.,__;

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

O – open drawer

O,1,_____,_,_;

L – sending text to the printer's display

L,[logical number],_____,_,_;[Command];[View type];[Text];

The [Command] parameter can have the following values:

- 0 – clears both rows of the display
- 1 – clears the top row of the display
- 2 – clears the bottom row of the display
- 3 – prints [Text] to the top row of the display
- 4 – prints [Text] to the bottom row of the display
- 5 – prints [Text] to both rows of the display
- 6 – prints date and time to the bottom row of the display

The [View type] parameter can have the following values:

- 0 – the [Text] is printed on the display at once
- 1 – the [Text] is floating(from right to left) on the display

The [Text] parameter contains the text that is to be shown on the display (the display can show 20 characters on each row at once, larger text is printed in series or its floating) – maximum 200 symbols.

Lithuania

MP-56

S - sale

S,1,_____,_,_:[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 20 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 9);
- [tax group] is the tax group of the item (1 ~ 4);

FP will not carry out this command if:

- * the maximum number of sales (99) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4 numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
- [amount] - the amount of the surcharge/discount (99% max);

If prior to this command a payment ("T" cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 20 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;

The command executes Z report (daily fiscal closure).

O – open drawer

O,1,_____,_,_;

Moldova

MX devices DP25, DP150, WP50, FP700

33 – display clear

Syntax	33,1,____,_,_;	
Description	Clears the customer display if connected.	
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

35 – show text on display lower line

Syntax	35,1,____,_,_;<text>;	
Description	[text] is text up to 20 symbols. The command shows the text on the lower line of the display if connected.	
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

38 – open non-fiscal receipt

Syntax	38,1,____,_,_;	
Description	Opens a non-fiscal receipt. In this receipt only commands for display, print text and barcode are accepted.	
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

39 – close non-fiscal receipt

Syntax	39,1,____,_,_;	
Description	Closes an opened non-fiscal receipt.	
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

42 – print non-fiscal text

Syntax	42,1,____,_,_;<text>[bold];[italic];[height];[underline];[alignment];[condensed];	
Description	The command prints text in a non-fiscal receipt.	
	Parameter	Values
	text	up to 42 symbols
	bold, italic, underline	0 ~ 1
	height	0 ~ 2
	alignment	0 ~ 2
	condensed	0 ~ 1
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

47 – display text on the upper line

Syntax	47,1,____,_,_;<text>;	
Description	[text] is text up to 20 symbols. The command shows the text on the upper line of the display if connected.	
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

48 – fiscal receipt and reclamation

Syntax	48,1,____,_,_;<Operator>;<Password>;<workplace>;[IDNS];		
Parameters description	Parameter	Values	Description
	operator	1 ~ 30	Operator number
	password	1 ~ 8 digits	Password for the operator
	workplace	1 ~ 99999	Workplace number
	IDNS	1 ~ 16 symbols	If present, the program will open invoice receipt.
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

51 – subtotal

Syntax	51,1,_____,_,_; [Print];[Display];[Flag];[Amount];		
Parameters description	The command returns current values for the fiscal receipt and displays the current sum on the display.		
	Parameter	Values	Description
	Print	0 or 1	Value 1 prints the subtotal on the paper
	Display	0 or 1	Value 1 displays the stubtotal on the external connected display.
	Flag	0 ~ 4,7	• 0 – no discount/surcharge • 1 – surcharge in percent (max 99%); • 2 – discount in percent (max 99%); • 3 – surcharge in sum (max 8 digits); • 4 – discount in sum (max 8 digits); • 7 – special discount STL by sum;
	Amount	0.01 ~ 21474836	Value for discount/surcharge
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

53 – payment		
Syntax 1	53,1,_____,_,_;	
Description	The receipt sum is automatically calculated and payed in cash and the fiscal receipt is closed. If everything is payed, only closure of the receipt is made.	
Syntax 2	53,1,_____,_,_:[code];[sum];	
Parameters description	Syntax for payment with selected type and sum and receipt closure. If the sum parameter is empty, the whole sum is automatically calculated and passed for the given payment code.	
	Parameter	Values
	code	• 0 – in cash • 1 – with card • 2 – with vaucher • 3 – cec • 4 – tichet • 5 – tme • 6 – abonament • 7 -/- • 8 – alt tip • 9 – eur
	sum	0 ~ 99999999.99
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX
Answer format	53,1,_____,_,_:[status]/[amount];[input parameters...e.g. code and sum]; Status – Indicates an error; • 'D'- The command passed, return when the paid sum is less than the sum of the receipt. The residual sum due for payment is returned to Amount; • 'R'- The command passed, return when the paid sum is greater than the sum of the receipt. A message “CHANGE” will be printed out and the change will be returned to Amount; Amount - The sum that is due or is change (0.00...99999999.99)	

54 – print fiscal text

Syntax	54,1,_____,_,_;;[text];[bold];[italic];[double H];[underline];[alignment];		
Parameters description	Parameter	Values	Description
	text	up to 62 symbols	Text to print
	bold, italic, double height, underline	0 ~ 1	Enables font styles
	alignment	0 ~ 2	0 – left aligned 1 – centered 2 – right aligned
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

56 – close fiscal receipt

Syntax	56,1,_____,_,_;;		
Description	Closes a fiscal receipt if all the payment is done.		
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	
Answer format	56,1,_____,_,_;;[global receipt number],[current fiscal number],[current Z report];[input parameters];		

63 – show date and time on the display

Syntax	63,1,_____,_,_;;		
Description	Shows date time on the external display if connected.		
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

69 – daily closure

Syntax	69,1,_____,_,_:[type];		
Parameters description	Parameter	Values	Description
	type	0 – Z report; 2 – X report;	Defines the report type.
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	
Answer format	69,1,_____,_,_:[ReportNum]/[Total_1...5]		

70 – official debiting / crediting

Syntax	70,1,_____,_,__:[+ -][value];		
Parameters description	Parameter	Values	Description
	value	+ - 9999999.99	Value for the debit/credit (the sign + or – defines if its input or output)
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	
Answer format	70,1,_____,_,__:[Sum];[inSum];[outSum]; Sum – cash in the safe; inSum – total sum of cash in operations ; outSum – total sum of cash out operations;		
Additional info	If you execute the command without params – 70,1,_____,_,__; - it will return the current cash sums in the device in the answer file.		

84 – barcode print

Syntax	84,1,_____,_,_:[type];[value];[QR barcode size];		
Parameters description	Parameter	Values	Description
	type	1 – EAN8 2 – EAN13 3 – Code 128 4 – QR code 5 – Interleave 2 of 5	Defines barcode type
	value	3 ~ 400 symbols	Barcode values
	QR barcode size	3...10	Barcode size for QR code
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

92 – print separator line

Syntax	92,1,_____,_,_:[Line type];		
Parameters description	Parameter	Values	Description
	Line type	1 ~ 3	Type of the line: '1' - separating line with '-'; '2' - separating line with the symbols '-' and ' '; '3' - separating line with the symbol '=';
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

105 – operators report

Syntax	105,1,_____,_,_;;[first];[last];[clear];		
Description	Prints operators report with sales by operator. If no params are present, a report for all operators is printed.		
	Parameter	Values	Description
	first	1 ~ 30	First operator
	last	1 ~ 30	Last operataor
Supported devices	clear	0 – without clearing 1 – with registers clearing	Type of report
	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

106 – open drawer

Syntax	106,1,_____,_,_;;[mSec];		
Description	Sends signal to the drawer to open. Msec is impulse time in milliseconds, default 80.		
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

107 – item programming

Syntax 1	107,1,_____,_,_; 1 :[PLU];[VAT];[department];[group];[price];[name];[price type];[item group];[+ quantity];[add Qty];[barcode];[barcode 2];[barcode 3];[barcode 4];		
Parameters description	Item programming		
	Parameter	Values	Description
	PLU	1 ~ 100000(ecr)/200000(fp)	Item number
	VAT	1 ~ 5	VAT
	department	0 ~ 99	Department
	group	1 ~ 99	Item group
	price	0 ~ 9999999.99	Item price
	name	max 72 symbols, depends on the device	Item name
	price type	0 – programmed price is used 1 – programmed or free price 2 – price equal or less than the programmed 3 – additional data required	Defines which price is used for sales
	item group	1 ~ 99	Item group
	+ quantity	0,001 ~ 99999,999	Stock quantity
	add Qty	0 or 1	If 1 the quantity is added to the current one, otherwise its replaced.
	department	0 ~ 99	Department code
		•	
	barcode	up to 13 digits	Barcode for the item
	barcode 2	up to 13 digits	Additional barcodes
	barcode 3		
	barcode 4		
Syntax 2	107,1,_____,_,_; 2 :[ALL]; 107,1,_____,_,_; 2 :[plu 1];[plu 2];		
Parameters description	Delete items		
	Parameter	Values	Description
	all	String “ALL”	When string “ALL” is passed, all items are deleted and the other paramters are not needed.
	plu 1	1 ~ 100000(ecr)/200000(fp)	Single item to delete, if plu 2 is > 0 its the start of the range plu1 ~ plu2 for deletion.
plu 2	Ending plu for delete range		
Syntax 4	107,1,_____,_,_; 3 :[plu];[+ - quantity];		
Parameters description	Add/subtract stock quantity		
	Parameter	Values	Description
	code plu	1 ~ 100000(ecr)/200000(fp)	Item code

	quantity	0 ~ +-999999.999	Quantity to be added/subtracted
Syntax 5	107,1,_____,_,__; 4 :[plu];		
Parameters description	Reading item data		
	Parameter	Values	Description
	plu	1 ~ 100000(ecr)/200000(fp)	Item code to read
	Output params are saved in the answer file: 107,1,_____,_,__;(plu);(VAT);(department);(item group);(price type);(price);(turnover);(sold quantity);(stock quantity);(barcode 1);(barcode 2);(barcode 3);(barcode 4);(name);		
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

111 – items report

Syntax	111,1,_____,_,_;;[code];[start num];[end num];		
Parameters description	Parameter	Values	Description
	code	'0' - PLU turnovers detailed; '1' - PLU turnovers summary; '2' - PLU turnovers with clearing detailed; '3' - PLU turnovers with clearing summary; '4' - PLU parameters;	Defines report type
	start num	1 ~ 100000(ecr)/200000(fp)	Starting range
	end num		Ending range
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

119 – electronic journal reports

Syntax	119,1,_____,_,_;;[Start date time];[End date time];[document type];[Print];[Filename];		
Parameters description	Saves or prints EJ report		
	Parameter	Values	Description
	Start date / End date	8 ~ 12 digits, format DD-MM-YY [hh:mm:ss]	Report range. If time is omitted, starting time is 00:00:01, ending is 23:59:59
	document type	0 – all 1 – fiscal documents 2 – Z reports 4 – non-fiscal receipts	Defines documents to read
	Print	0 or 1	Value 1 prints the report
	Filename	~ 255 symbols	Path and file name to save the report to. If empty nothing is saved
Supported devices	DP 25 MX	FP 700 MX	
	DP 150 MX	WP 50 MX	

350 – custom command

Syntax	350,1,_____,_,_;<Input/OutputString>;	
Description	You can execute any of the printer's commands (as described in the firmware documentation) by assembling the command number and parameters into a string that you pass in <Input/OutputString>. The result of the execution (data, statuses) will be saved in the answer file.	
Supported devices	DP 25 MX	FP 700 MX
	DP 150 MX	WP 50 MX

I – currency input and output

The command has two stages of use and syntax:

1. Opening input/output transaction:

Syntax: **I,1,_____,_,_;;0;[transaction type];**

*[transaction type] can be values 1 or 2:

1 – open transaction for currency input

2 – open transaction for currency output

2. Select currency and sum for the input/output:

Syntax: **I,1,_____,_,_;;[currency code];[sum];**

*[currency code] can be 0 – 16, where 0 is the national currency;

*[sum] is the sum to be added/subtracted. If national currency is used, sum is a real number (max 9 999 999.99), otherwise sum is integer (max 999 999 999);

To do input/output of currency in the ECR, you must first open transaction (stage 1), then do the actual operation (stage 2) and finally, close the transaction with command T.

S – buying and selling currency, void

The command has 3 types of usage and syntax:

1. Opening sale or purchase transaction:

Syntax: **S,1,_____,_,_;;0;0;[transaction type];0;0;0;0;**

*[transaction type] can be values 1 or 2:

1 – open transaction for currency purchase

2 – open transaction for currency sale

2. Select currency and sum for the sale/purchase:

Syntax: **S,1,_____,_,_;;0;[quantity];[currency code];0;0;0;0;**

*[currency code] can be values 1 – 16;

*[quantity] of the currency to be sold/purchased - integer (max 999 999 999);

To do sale or purchase of currency in the ECR, you must first open transaction (step 1), then do the actual operation (step 2) and finally, close the transaction with command T.

3. Command S is also used to void sales/purchases:

Syntax: **S,1,_____,_,_;;-1;0;0;0;0;0;0;**

C – surcharge on sales and purchases of currency

Syntax: **C,1,____,_,_;**[surcharge type];[value];

*[surcharge type] can be value 0 or 1:

0 – the surcharge is in percentages;

1 – the surcharge is in sums;

*[value] is the value of the surcharge. If its a percentage type, value is a real number, if its in sums – its an integer;

P – print IDNP text

Syntax: **P,1,____,_,_;**[random text/digits here – max 20 symbols];

Can be executed only when no transaction is opened.

T – closing transactions, duplicate transactions

The command has two variants:

1. Close transactions:

Syntax: **T,1,____,_,_;**

2. Duplicate transactions:

Syntax: **T,1,____,_,_;1;**

J – set date and time

Syntax: **J,1,____,_,_;**[Day(DD)];[Month(MM)];[Year(YY)];[Hour(HH)];
[Minute(MM)];

The parameter for year is in short time format (e.g. 2012 is 12).

Example: J,1,____,_,_;01;05;12;04;44;

Z – fiscal closure and X report

Syntax: **Z,1,____,_,_;**[report type here, can be 0 (X report) or 1 (Z report)];

Example: Z,1,____,_,_;1;

NOTE: Parameters in < > brackets are mandatory, while those in [] brackets are non-mandatory! The brackets by themselves are **not** passed along with the data value.

"38" – open non-fiscal receipt

38,1,_____,_,_;

The command won't be executed if:

- there is already opened receipt(fiscal or non-fiscal);
- the clock is not set;

In non-fiscal receipts you can only print non-fiscal text.

If the command succeeds, the answer file contains the current slip number.

If the command fails, error message is saved in the answer.

"42" – print non-fiscal text

42,1,_____,_,_[text];

- [text] is random text (max 40 symbols)

You can print non-fiscal text only in an opened non-fiscal receipt.

"39" – close non-fiscal receipt

39,1,_____,_,_;

The command won't be executed if there is no opened receipt.

If the command succeeds, the answer file contains the current slip number.

If the command fails, error message is saved in the answer.

"48" – open fiscal receipt

48,1,_____,_,_;<Operator>;<Password>;<TillNumber>;

- <Operator> – operator number (1-30);
- <Password> – the operator's password (1 to 8 digits);
- <TillNumber> - point of number (1..99999);

The answer file contains the following information if the command succeeds (error message if not):

48,1,_____,_,_;Slip number/Error message;

- Slip number – the current slip number;

The command won't be executed if:

- there is already opened receipt;
- the fiscal memory is full;
- the fiscal memory is corrupted;
- one of the mandatory parameters is missing or wrong;
- the operator's password is wrong;

"49" – free sale

49,1,_____,_,_;<Item name>;<Tax group>;<Price>;<Quantity>;
[Discount/Surcharge type];[Discount/Surcharge value];[Department];

- <Item name> is up to 32 symbols;
- <Price> is the price of a single item (-9999999.99 ~ 9999999.99; the negative price is used for voiding sales);
- <quantity> is the quantity sold (a number 0.001 ~ 99999.999);
- <tax group> is a number for the tax group of the item (1,2,3,4,5,6,7 for vat A,B ...G);
- [discount/surcharge type] is:
 - 0 – no discount/surcharge (default value)
 - 1 – surcharge by percentage
 - 2 – discount by percentage
 - 3 – surcharge by sum
 - 4 – discount by sum
 - 6 – special discount STL by sum
- [discount/surcharge value] is the value of the discount/surcharge; (default value is 0);
- [department] is the department number (0-99, default value 0);

The command won't be executed if:

- fiscal receipt is not opened;
- the fiscal memory is full;
- the fiscal memory is corrupted;
- one of the mandatory parameters is missing or wrong;

"51" – subtotal

51,1,_____,_,_;;[Print];[Display];[Flag];[Amount];

- [Print] – parameter that determines if the sum of the subtotal will be printed out:
 - value '0' – do not print
 - value '1' – print
- [Display] – parameter that determines if the sum of the subtotal will appear on the display:
 - value '0' – don't show on display
 - value '1' – show on display
- [Flag] – parameter that determines the type of the subtotal:
 - 0 – no discount/surcharge
 - 1 – surcharge in percent (max 99%);
 - 2 – discount in percent (max 99%);
 - 3 – surcharge in sum (max 8 digits);
 - 4 – discount in sum (max 8 digits);
 - 7 – special discount STL by sum;
- [Amount] – the sum of the discount/surcharge (whether the amount is in percent or value depends on the [flag] parameter)

"53" – payment

53,1,_____,_,_;;[flag];[amount];[change type];

- [flag] – parameter that determines the type of the payment:
 - 0 – payment in cash;
 - 1 – payment via card;
 - 2 – payment via debit card;
 - 3 – custom payment type;
 - 4 – custom payment type;
 - 5 – custom payment type;
 - 6 – payment in foreign currency;
- [amount] – the sum of the payment
- [change type] – defines the change (only available if payment is in foreign currency):
 - 0 – change in current currency;
 - 1 – change in foreign currency;

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

The command cannot be executed if :

- there is no opened fiscal receipt
- the accumulated sum is negative
- the sum for a tax group is negative

"54" – print fiscal text

54,1,_____,_,_:[text];

- [text] is random text (max 40 symbols)

You can print fiscal text only in an opened fiscal receipt.

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if full payment is done.

The answer file contains the following information:

56,1,_____,_,_;Total_Receipts,Fiscal_Receipts,Reclamation_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and reclamation) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Reclamation_Receipts - total number of issued reclamation receipts;

The command won't be executed if:

- fiscal receipt is not opened;
- full payment on the receipt is not done;
- the fiscal memory is corrupted;

"58" – programmed items sale

58,1,_____,_,_:[+ -]<PLU>:[quantity];[price];[flag];[amount];

- [+ -] <PLU> is the PLU number of the item (max 8 digits). If you pass the PLU number with a minus sign in front of it, the command will cancel the previous sale of that item (the prices of the sold/canceling items must be the same, the quantity can differ, but cannot go below the sold quantity);
- [quantity] is the quantity to be sold (a number 0.001 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- [price] is the price (0.01 – 9999999.99);
- [Flag] – parameter that determines the type of the subtotal:
 - 0 – no discount/surcharge
 - 1 – surcharge by percent (max 99%);
 - 2 – discount by percent (max 99%);
 - 3 – surcharge by sum (max 8 digits);
 - 4 – discount by sum (max 8 digits);
- [Amount] – the sum of the discount/surcharge (whether the amount is in percent or value depends on the [flag] parameter)

"33" – clear the display

33,1,_____,_,_;

"35" – show text on bottom row of the display

35,1,_____,_,_:[text];

➤ [text] is random text (20 symbols max)

"47" – show text on top row of the display

47,1,_____,_,_:[text];

➤ [text] is random text (20 symbols max)

"60" – cancel fiscal receipt

60,1,_____,_,_;

"61" – set date and time

61,1,_____,_,_;<Date time>;

<Date time> is in format “DD-MM-YY hh:mm:ss”.

"62" – read date and time

62,1,_____,_,_;

The command returns the date&time in the answer in format “DD-MM-YY hh:mm:ss”.

"69" – daily fiscal closure

69,1,_____,_,_:[Type];

➤ [Type] determines the report type:

- 0 – X report;
- 1 – Z report;

The command returns the following information in the answer file after successful execution:

69,1,_____,_,_:[Report number];[Total VAT A];[Total VAT B];[Total VAT C];[Total VAT D];[Total VAT E];[Total VAT F];[Total VAT G];

"70" – internal input and output of cash

70,1,_____,_,_:[+ -][amount];

➤ [+ -][amount] – the sum (max 999999.99) of the input/output (the sign + or – defines if its input or output);

When executed without errors, the command returns the following in the answer file:

70,1,_____,_,_:[Cash sum in safe];[Total – cash in operations];[Total – cash out operations];

"71" – print diagnostic information

71,1,_____,_,_;

"76" – fiscal transaction status

76,1,_____,_,_;

The command returns the following data in the answer file:

76,1,_____,_,_:Opened;Number;Items;Amount;Payed;

➤ Opened - has the following values:

- 0 – receipt is closed;
- 1 – receipt is opened;

➤ Number – number of current or last receipt (1...9999999);

➤ Items – number of sales registered on the last fiscal receipt (0...9999999);

➤ Amount – the sum for the current receipt;

➤ Payed – the sum paid for the current receipt;

"94" – fiscal memory report by date

94,1,_____,_,_;<Type>;<Start_date>;<End_date>;

- <Type> – type of the report:
 - 0 – short report;
 - 1 – detailed report;
- <Start_date> – defines the starting date for the report (format DD-MM-YY);
- <End_date> – defines the ending date for the report (format DD-MM-YY);

"95" – fiscal memory report by Z report number

95,1,_____,_,_;<Type>;<Start_number>;<End_number>;

- <Type> – type of the report:
 - 0 – short report;
 - 1 – detailed report;
- <Start_number> – defines the starting Z report;
- <End_number> – defines the ending Z report;

"100" – read error code and message

100,1,_____,_,_;<code>;

- <code> is the error code, returned by the ECR
The command returns the message for the command code in the answer as:
100,1,_____,_,_;<code>;<error message>;

"105" – report operators

105,1,_____,_,_;<First>;<Last>;<Clear>;

- <First> is the first operator in the report;
- <Last> is the last operator in the report;
- <Clear> is '0' (does not clear operator registers) or '1' (clears operator registers);

"106" – open the drawer

106,1,_____,_,_;

"107" – programming / reading / deleting and changing quantity for programmed items

107,1,_____,_,_;<operation type>[set of parameters, depending on the <operation type>];

Depending on the <operation> parameter, the command has 4 different structures:

➤ Programming new items - <operation type> = 1

107,1,_____,_,_;<1>;<PLU>;<Tax group>;[Department];[Group];[Price type];<Price>;
[Quantity];[Bar1];[Bar2];[Bar3];[Bar4];[Name];

- [PLU] – PLU number of the item (1...100000);
- [Tax group] – a number, defining tax groups:
 - 1 : tax group "A";
 - 2 : tax group "B";
 - 3 : tax group "C";
 - 4 : tax group "D";
 - 5 : tax group "E";
 - 6 : tax group "F";
 - 7 : tax group "G";
- [Department] – (0...99), default 0;
- [Group] – (1..99), default 1;
- [Price type] – 0(fixed price), 1(free price), 2(max price), default 0;
- [Price] – default price for the item (0.01 – 9999999.99);
- [Quantity] – stock quantity (0.001 – 99999.999); default 1;
- [Bar1..4] – bar codes, max 13 digits;
- [Name] – name of the item (max 32 symbols);

Can be executed only after fiscal closure.

➤ Deleting items - <operation type> = 2

107,1,_____,_,_;<2>;[ALL];
107,1,_____,_,_;<2>;[PLU];

- [ALL] – if the string "ALL" is passed, the command clears all items;
- [PLU] – deletes the selected PLU number;

Can be executed only after fiscal closure.

- Change available quantity - <operation type> = 3

107,1,_____,_,_;<3>[PLU];[Add quantity];

- [PLU] – the item number;
- [Add quantity] – additional quantity for the item;

- Read item data - <operation type> = 4

107,1,_____,_,_;<4>[PLU];

The answer file contains data read for the selected <PLU> in format:

107,1,_____,_,_;PLU;VAT;Department;Group;Price type;Price;Turnover;
Sold quantity;Available quantity;Barcode1;Barcode2;Barcode3;Barcode4;Name;

"109" – duplicate last fiscal receipt

109,1,_____,_,_;

"111" – report items

111,1,_____,_,_;<Options>;

- <Options> – digit, defines the information to be printed:
 - 0 – only informations about sold items during the day is printed (PLU, Name, Sold quantity) ;
 - 1 – all programmed items are printed (PLU, Name, Price);

"350" – execute custom command

350,1,_____,_,_;<Command>;[Input data];

- <Command> – the command number by firmware specifications (see the printer's firmware documentation);
- [Input data] – the command's data by firmware specification;

The symbols LF (0x10) and TAB (0x9) can be represented by the strings [TAB] and [LF].

Example receipt:

350,1,_____,_,_;48;1[TAB]1[TAB]1[TAB][TAB];

350,1,_____,_,_;49;Ticket[TAB]2[TAB]0.01[TAB]1.000[TAB]0[TAB]0[TAB]0[TAB];

350,1,_____,_,_;53;[TAB][TAB];

350,1,_____,_,_;56;

S - sale

S,1,_____,_,____;[item];[price];[quantity];[];[];[tax group];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-9999999.99 ~ 9999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number 0 ~ 999999.999);
- [] not used, 0 or empty;
- [tax group] is the tax group of the item (1 ~ 8);

FP will not carry out this command if:

- * the max count of sales per receipt is reached (512);
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

E - sale of an item by department

E,1,_____,_,__:[item];[price];[quantity];[];[];[];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [] not used;
- [department] is the department (a number 1 ~ 99);

FP will not carry out this command if:

- * the maximum number of sales (512) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

A – print barcode

A,1,_____,_,__:[type];[value];

- [type] is a number that defines the barcode type:
 - 1 – EAN8
 - 2 – EAN13
 - 3 – Code 128
 - 4 – ITF
 - 5 – ITF (Automatic control sum printing and generation)
- [value] is the barcode value to be printed. Depending on the barcode type it has variable size (EAN8 is only 7 digits, EAN13 is 12 digits and Code128 is between 9 and 18 symbols, ITF is between 2 and 5 digits)

Printing barcode can be done only in opened receipts (nonfiscal, fiscal).

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6,7,8 are for additional payments.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 44 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;[type];[year];[month];

Z,1,_____,_,_;[type];[Start_date];[End_date];

- [type] specifies the report type:
 - 0 : X report;
 - 1 : Z report;
 - 2 : prints short monthly/yearly report;
 - 3 : prints extended monthly/yearly report;
- [year]/[Start_date] – if [type] is 2 or 3, this is the year of the report (format “YY”), or starting date (DDMMYY);
- [month]/[End_date] - if [type] is 2 or 3, this is the month of the report (format “MM”) or ending date (DDMMYY);

If [month] is empty a year report will print. The reports 2 and 3 are only available if the printer is fiscalized and at least one Z report is made.

If no parameters are passed, an X report is executed.

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

X – cancel current fiscal receipt

X,1,_____,_,_;

The whole fiscal receipt will be canceled and closed as non-fiscal. This command will work only if no payments have been made yet.

48 – open fiscal receipt

48,1,_____,_,_;;[operator];[password];[workplace];

- [operator] is the operator number (1-30);
- [password] is the operator's password(1 to 8 numbers);
- [workplace] is the work place for the operator(1-99999);

Used to open fiscal receipt with selected operator (S command opens always with operator 1).

58 – sale of programmed item

58,1,_____,_,_;;[code];[department];[quantity];[percent];[sum];

- [code] is the number of the item to be sold. Negative number is used for void;
- [department] is the department number (if 0 the programmed Tax group is used instead);
- [quantity] is the quantity to be sold (0.001 ~ 99999.999);
- [percent] discount/surcharge in % (+- 99%);
- [sum] discount/surcharge by sum;

105 – operators report

105,1,_____,_,_;

Prints report for the sales by operator.

107 – program and delete items

107,1,_____,_,_:[operation];....parameters...

*[operation] is a value of 1 to 4:

Value 1 – program items. Syntax:

107,1,_____,_,_;1;[Tax group];[code];[price];[name];[stock group];[+ - quantity];
[replace];

- [Tax group] is the tax group (1-8 corresponds to A,B,C...);
- [code] is the item number (max 13000 for FP-300/1000, 9999 for FP-35/550, 5000 for FP-60);
- [price] is the price for the item (999999.99);
- [name] is the name of the item (max 36 symbols);
- [stock group] is the stock group number of the item(1~99);
- [+ - quantity] is the available quantity for the item. If [replace] = 1, then this quantity replaces the current in the printer, otherwise its added/subtracted to/from the quantity in the printer;
- [replace] is 0 or 1 – see above;

Value 2 – delete items. Syntax:

107,1,_____,_,_;2;[all];[code 1];[code 2];

- [all] is 0 or 1 – if 1 then all items are deleted;
- [code 1] is the number of the item to be deleted;
- [code 2] – if code 1 and 2 are numbers greater than 0, then all items in range (code1 to code 2) are deleted;

Value 3 – add/subtract quantity. Syntax:

107,1,_____,_,_;3;[code];[+ - quantity];

- [code] is the item number;
- [+ - quantity] is the quantity to be added/subtracted to the current in the printer;

Value 4 – read item data. Syntax:

107,1,_____,_,_;4;[code];

- [code] is the number of the item;

The answer file contains the data for the item in this format:

107,1,_____,_,_;(code);(tax grp);(stock grp);(price);(total by sells);(sold quantity);
(available quantity);(name);

111 – items report

111,1,_____,_,_:[code];[start number];[end number];[stock group];

- [code] is 0 or 1 – if 0 prints only items with sales made, if 1 – prints all items;
- [start number], [end number] defines the range of item numbers;
- [stock group] – prints only items in this stock group;

119 – electronic journal reading

119,1,_____,_,_:[Start];[End];[Type];[Print];[File name];

- [Start] – starting date for the read (format DDMMYY[h:mm:ss]);
- [End] – ending date for the read (format above);
- [Type] – type of documents to read:
 - “A” - all documents
 - “F” - fiscal documents only
 - “N” - non-fiscal documents only
 - “S” - service documents only
 - “X” - X reports only
 - “Z” - Z reports only
- [Print] – 0 or 1 (prints the report on paper);
- [File name] – saves the read in a given file name, not saved if this parameter is empty;

350 – execute custom command

350,1,_____,_,_:[Command number];[Command data];

- [Command number] – as described in the firmware documentation for a given printer. For example, command 49 is free sale;
- [Command data] – the data packet for the given command as described in the firmware documentation;

The symbols for tabulation (0x10) and line feed (0x9) are presented in the data string as [TAB] and [LF]. The result, returned from the printer is saved in the answer file.

Example sale:

350,1,_____,_,_;48;1,0000,1;
350,1,_____,_,_;49;Test[LF][TAB]Б1*1;
350,1,_____,_,_;53;[LF][TAB];
350,1,_____,_,_;56;;

FP-550, DP-55, MP-55, DP-500

S - sale

S,1,_____,_,_;[item];[price];[quantity];[];[];[tax group];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-9999999.99 ~ 9999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (a number 0 ~ 999999.999);
- [] not used, 0 or empty;
- [tax group] is the tax group of the item (1 ~ 8);

FP will not carry out this command if:

- * the max count of sales per receipt is reached (512);
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

E - sale of an item by department

E,1,_____,_,__,[item];[price];[quantity];[];[];[];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [] not used;
- [department] is the department (a number 1 ~ 99);

FP will not carry out this command if:

- * the maximum number of sales (512) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6,7,8 are for additional payments.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_:[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 44 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;[type];[year];[month];

- [type] specifies the report type:
 - 0 : X report;
 - 1 : Z report;
 - 2 : prints short monthly/yearly report;
 - 3 : prints extended monthly/yearly report;
- [year] – if [type] is 2 or 3, this is the year of the report (format “YY”);
- [month] - if [type] is 2 or 3, this is the month of the report (format “MM”);

If [month] is empty a year report will print. The reports 2 and 3 are only available if the printer is fiscalized and at least one Z report is made.

If no parameters are passed, an X report is executed.

D - receipt duplicate

D,1,_____,_,_;

Prints a duplicate of the last fiscal receipt.

Montenegro

FP550, FP1000

"38" – open non-fiscal receipt

38,1,_____,_,_;

The command won't be executed if there is already opened receipt. In non-fiscal receipts you can only print non-fiscal text.

"42" – print non-fiscal text

42,1,_____,_,_:[text];

➤ [text] is random text (max 30 symbols)

You can print non-fiscal text only in opened non-fiscal receipt.

"39" – close non-fiscal receipt

39,1,_____,_,_;

The command won't be executed if there is no opened receipt.

"48" – open fiscal receipt

48,1,_____,_,_:[operator];[password];

➤ [operator] is the operator number (1-16)

➤ [password] is the password (6 digits) for the operator

The command won't be executed if there is already opened receipt/invoice.

"52" – sell items

52,1,_____,_,_:[+ - PLU];[price];[quantity];[flag];[amount];

- [+ - PLU] is the PLU number of the item 1 – 65023. If you pass the PLU number with a minus sign in front of it, the command will cancel the previous sale of that item (the prices of the sold/canceling items must be the same, the quantity can differ, but cannot go below the sold quantity);
- [price] is the price of a single item. If you sell with price = 0, then the item's programmed price is used
- [quantity] is the quantity sold (a number 0.900 ~ 99999.999);
- [flag] is a number that means:
 - value '0' – surcharge in percent (max 99.00%)
 - value '1' – discount in percent (max 99.00%)
 - value '2' – surcharge in sum (max 8 digits)
 - value '3' – discount in sum (max 8 digits)
- [amount] is the sum of the discount/surcharge in percent or sum (depending on the [flag] parameter)

The printer will not carry out this command if:

- the maximum number of sales (99) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the sum of discounts and surcharges within the receipt is negative;
- the display is disconnected

"51" – subtotal

51,1,_____,_,_:[Print];[Display];[Flag];[Amount];

- [Print] – parameter that determines if the sum of the subtotal will be printed out:
 - value '0' – do not print
 - value '1' – print
- [Display] – parameter that determines if the sum of the subtotal will appear on the display:
 - value '0' – don't show on display
 - value '1' – show on display
- [Flag] – parameter that determines the type of the subtotal:
 - value '0' means surcharge in percent (max 99%)
 - value '1' means discount in percent (max 99%)
- [Amount] – the percent of the discount/surcharge

"53" – payment

53,1,_____,_,_:[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash
 - value '1' means payment via credit
 - value '2' means payment via cheque
 - value '3' means payment via debit card
 - FP1000 also supports values 4 (“virman”) and 5 through 9 for additional types of payment;
- [amount] – the sum of the payment

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

The command cannot be executed if :

- there is no opened receipt
- the accumulated sum is negative
- the sum for a tax group is negative
- the display is disconnected

"54" – print fiscal text

54,1,_____,_,_:[text];

- [text] is random text (max 30 symbols)

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if payment is done.

"57" – cancel current fiscal receipt

57,1,_____,_,_;

The whole fiscal receipt will be canceled and closed as non-fiscal. This command will work only if no payments have been made yet.

"107" – programming and deleting items, adding quantity to programmed items

107,1,_____,_,_:[operation type];[different number of optional parameters, depending on the type of operation];

Depending on the [operation] parameter, the command has 3 different structures:

- [operation type] = 1 – programming new items;

107,1,_____,_,_;1;[Tax group];[PLU];[Price];[Amount];[Name];

- [Tax group] – a number (1 – 8), corresponding to A – H tax groups
- [PLU] – PLU number of the item 1 – 65023
- [Price] – default price for the item
- [Amount] – available quantity for the item
- [Name] – name of the item, 24 symbols (FP550), 36 symbols (FP1000)

Can be executed only after fiscal closure.

- [operation type] = 2 – deleting items;

107,1,_____,_,_;2;[PLU1];[PLU2];

- [PLU1] – PLU of the item to be deleted. If [PLU2] is not zero, this is the starting number of the range from [PLU1] to [PLU2]
If [PLU2] is zero, only the item defined by this parameter is deleted
- [PLU2] – ending range for the deletion. If this parameter is 0, only the item defined by [PLU1] is deleted

Can be executed only after fiscal closure.

- [operation type] = 3 – adding additional available quantity of an item;

107,1,_____,_,_;3;[PLU];[Amount];

- [PLU] – the item number
- [Amount] – the quantity to be added for the item

"109" – duplicate receipt

109,1,_____,_,_;

This command must be executed only after the last printed receipt is closed.

"33" – clear the display

33,1,_____,_,_;

"47" – show text on top row of the display

47,1,_____,_,_;[text];

- [text] is random text (20 symbols max)

"35" – show text on bottom row of the display

35,1,_____,_,_;[text];

- [text] is random text (20 symbols max)

"63" – show date and time

63,1,_____,_,_;

"100" – show text on both rows of the display

100,1,_____,_,_;[text];

- [text] is random text (40 symbols max)

"69" – execute reports

69,1,_____,_,_;[flag];

- [flag] determines the report type:
 - value '0' means Z report with registry clear
 - value '1' means X report without registry clear

"70" – internal debiting and crediting (cash in/out)

70,1,_____,_,_:[flag];[amount];

- [flag] – determines the type of operation:
 - value '0' means cashing in / debit
 - value '1' means cashing out / credit
- [amount] – the sum of the debit/credit

"106" – open the drawer

106,1,_____,_,_;

"79" – annual / monthly short report

79,1,_____,_,_:[Year];[Month];

- [Year] – defines the year (format 'YY');
- [Month] – defines the month (format 'MM');

If the month parameter is empty or 0, an annual report is executed.

"94" – annual / monthly detailed report

94,1,_____,_,_:[Year];[Month];

- [Year] – defines the year (format 'YY');
- [Month] – defines the month (format 'MM');

If the month parameter is empty or 0, an annual report is executed.

Republica Srpska

FP-550

R - sale of an item

R,1,____,_,_;;[PLU];[Quantity];[Storno];

- [PLU] is the item number in the printer (negative sign for voiding);
- [quantity] is the quantity sold (a number 0 ~ 99999.999);
- [Storno] is a number (0 or 1) – if its „0“ a normal receipt is opened, if its „1“ a storno receipt is opened;

G – save an item into the printer

G,1,____,_,_;;[PLU];[Name];[VAT group];[SPrice];

- [PLU] is the item number
- [Name] is the item name, maximum 32 chars.
- [VAT group] – 4 VAT groups available – 0,1,2,3 (corresponds to A,E,J,K)
- [SPrice] – single price for the item

K – delete items from the printer

K,1,____,_,_;;[PLU];[All];

- [PLU] is the item number to be deleted (empty if you are deleting all items)
- [All] – the letter „A“ at this position deletes all items

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4,5 numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5 closes storno receipt.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed.

I - official debiting / crediting

I,1,_____,_,_:[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

P - print text

P,1,_____,_,_:[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

Z – fiscal closure

Z,1,_____,_,_:[type];

➤ [type] specifies the report type:

- 0 : X report;
- 1 : Z report;

If no parameters are passed, an X report is executed.

Romania

DP-50, DP-50D, MP-55, MP-55B, MP-55L, MP-500T

S - sale

S,1,_____,_,_:[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 20 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 9);
- [tax group] is the tax group of the item (1 ~ 4);

FP will not carry out this command if:

- * the maximum number of sales (99) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is payed, only closure of the receipt is made.

** payment:*

T,1,_____,_,_:[code];[sum];;;;

* [code] is the payment code - 0,1,2,3,4 numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment. Subtotal is calculated with 4.

* [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
- [amount] - the amount of the surcharge/discount (99% max);

If prior to this command a payment ("T" cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 20 symbols. Automatically opens fiscal receipt if it is the first command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_;[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_;

The command executes Z report (daily fiscal closure).

V – print barcode

V,1,_____,_,_:[type];[value];

- [type] is a number that defines the barcode type;
- [value] is the barcode value to be printed;

F - allows keyboard input:

F,1,_____,_,_;

H - forbids keyboard input:

H,1,_____,_,_;

N – get fiscal receipt number

N,1,_____,_,_;

The answer file will contain return values in the following format:

N,1,_____,_,_: [Keyboard state (locked/unlocked)]; [Operator code]; [Last fiscal receipt number];

O – open drawer

O,1,_____,_,_;

S - sale

S,1,_____,_,____;[item];[price];[quantity];[stand];[item group];[tax group];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [stand] is the stand number (a number 1 ~ 9);
- [item group] is the number of the item group (a number 1 ~ 9);
- [tax group] is the tax group of the item (1 ~ 8);

ECR will not carry out this command if:

- * the maximum number of sales (380) within a single receipt is already reached;
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

E - sale by department

E,1,_____,_,____;[item];[price];[quantity];[];[];[department];0;0;

- [item] is the name of the item (up to 30 symbols);
- [price] is the price of a single item (-999999.99 ~ 999999.99; the negative price is used for voiding sales);
- [quantity] is the quantity sold (0.001 ~ 99999.999);
- [] not used, 0 or empty;
- [department] is the department (a number 1 ~ 99);

ECR will not carry out this command if:

- * the maximum number of sales within a single receipt is reached (380);
- * the sum by any of the tax groups is negative;
- * the sum of discounts and surcharges within the receipt is negative;

In each of the cases the result of executing the command will be "Er".

If a fiscal receipt is not already opened by command 48, the command opens fiscal receipt with operator 1 and password set in FPrint's settings.

T - end of receipt or payment

** automatic receipt end:*

T,1,_____,_,_;

Payment in cash is made for the whole sum, together with closure of the fiscal receipt. If everything is paid, only closure of the receipt is made.

** payment:*

T,1,_____,_,_;[code];[sum];;;;

- [code] is the payment code - 0,1,2,3,4, 5,6,7,8; numbers from 0 to 3 correspond to payment in cash, with credit card, check, debit card payment; codes 5,6,7,8 are for additional payments.

Subtotal is calculated with 4.

- [sum] is the sum to be paid;

Payment is made with the indicated sum and payment type, and if the paid sum is larger than the sum due for payment, the receipt is closed. Unless this happens, what can be executed are only this command and the print text command. When a discount/surcharge must be made on the sum accumulated to the moment (subtotal), the command is sent for with code 4.

C - discount/surcharge in percents

C,1,_____,_,_;[type];[amount];

- [type] - one number with a value
 - 0 - % surcharge
 - 1 - % discount
 - 2 – surcharge by sum
 - 3 – discount by sum
- [amount] - the amount of the surcharge/discount (99% or sum);

If prior to this command a payment (“T” cmd) is made with parameter 4, a discount/surcharge will be made on the subtotal. Otherwise, the discount/surcharge is made on the sum of the last sale.

P - print text

P,1,_____,_,_;[line 1];[line 2];[line 3];[line 4];[line 5];

Prints fiscal or non-fiscal text of up to 40 symbols. Automatically opens fiscal receipt if it is the first

command in a file and there is no opened receipt.

I - official debiting / crediting

I,1,_____,_,_:[type];[sum];

- [type] is 1 number with a 0 value (debit) or 1 (credit);
- [sum] is the sum of the debit/credit ;

Y - opening non-fiscal receipt

Y,1,_____,_,_;

An non-fiscal receipt is opened. In the receipt only P command (printing of text) the T command (closing the official receipt) are allowed.

Z – fiscal closure

Z,1,_____,_,_:[type];[Start date];[End date];

- [type] is number value - type of report :
 - 0 : executes X report;
 - 1 : executes Z report;
 - 2 : executes short report from-to date;
 - 3 : executes detailed report from-to date;
- [Start date] – if [type] is 2 or 3 – this defines the starting date (in format “DDMMYY”);
- [End date] – if [type] is 2 or 3 – this defines the ending date (in format “DDMMYY”);

Date range reports can be executed only on fiscalized printer and after at least one Z report.

F - allows keyboard input:

F,1,_____,_,_;

H - forbids keyboard input:

H,1,_____,_,_;

N – get fiscal receipt number

N,1,_____,_,_;

The answer file will contain return values in the following format:

N,1,_____,_,_:[Keyboard state (locked/unlocked)];[Operator code];[Last fiscal receipt number];

O – open drawer

O,1,_____,_,_;

L – sending text to the printer's display

L,[logical number],_____,_,_:[Command];[View type];[Text];

The [Command] parameter can have the following values:

- 0 – clears both rows of the display
- 1 – clears the top row of the display
- 2 – clears the bottom row of the display
- 3 – prints [Text] to the top row of the display
- 4 – prints [Text] to the bottom row of the display
- 5 – prints [Text] to both rows of the display
- 6 – prints date and time to the bottom row of the display

The [View type] parameter can have the following values:

- 0 – the [Text] is printed on the display at once
- 1 – the [Text] is floating(from right to left) on the display

The [Text] parameter contains the text that is to be shown on the display (the display can show 20 characters on each row at once, larger text is printed in series or its floating) – maximum 200 symbols.

Serbia

FP600

NOTE: Parameters in < > brackets are mandatory, while those in [] brackets are non-mandatory! The brackets by themselves are **not** passed along with the data value.

"38" – open non-fiscal receipt

38,1,_____,_,_;

The command won't be executed if:

- there is already opened receipt(fiscal or non-fiscal);
- the clock is not set;
- the fiscal memory is not formatted;

In non-fiscal receipts you can only print non-fiscal text.

"42" – print non-fiscal text

42,1,_____,_,_:[text];

- [text] is random text (max 30 symbols)

You can print non-fiscal text only in an opened non-fiscal receipt.

"39" – close non-fiscal receipt

39,1,_____,_,_;

The command won't be executed if there is no opened receipt.

"48" – open fiscal receipt

48,1,_____,_,_;<Operator>;<Password>;<TillNumber>

- <Operator> – operator number (1-32);
- <Password> – the operator's password (4 to 8 digits);
- <TillNumber> - till number (max 5 digits);

The answer file contains the following information:

48,1,_____,_,_;Total_Receipts,Fiscal_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and nonfiscal) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);

The command won't be executed if:

- there is already opened receipt;
- the max number of receipts per day is already issued;
- the fiscal memory is full;
- the fiscal memory is corrupted;
- the operator's password is wrong;
- the clock is not set;
- the display is not connected;

"52" – sell items and show on the display

52,1,_____,_,_:[+ -]<PLU>;[quantity];[Price];

- [+ -] <PLU> is the PLU number of the item (max 8 digits). If you pass the PLU number with a minus sign in front of it, the command will cancel the previous sale of that item (the prices of the sold/canceling items must be the same, the quantity can differ, but cannot go below the sold quantity);
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- if [Price] is higher than zero, than the item is sold with free [Price] instead of the programmed price;

The printer will not carry out this command if:

- the maximum number of sales (512) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the display is disconnected
- a payment has already started

"51" – subtotal

51,1,_____,_,_;

The command shows the sum of the current sells in the receipt on the display.

"53" – payment

53,1,_____,_,_:[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash;
 - value '1' means payment via cheque;
 - value '2' means payment via debit card;
- [amount] – the sum of the payment

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

The command cannot be executed if :

- there is no opened receipt
- the accumulated sum is negative
- the sum for a tax group is negative
- the display is disconnected

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if full payment is done.

The answer file contains the following information:

56,1,_____,_,_;Total_Receipts,Fiscal_Receipts;Total sum;

- Total_Receipts – total number of issued receipts (fiscal and reclamation) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Total sum of the finished receipt;

"107" – programming and deleting items, changing price for programmed items

107,1,_____,_,_;<operation type>[set of parameters, depending on the <operation type>];

Depending on the <operation> parameter, the command has 3 different structures:

➤ Programming new items - <operation type> = 1

107,1,_____,_,_;<1>[Tax group];[PLU];[Price];[Name];

- [Tax group] – a number, defining tax groups:
 - 1 : tax group “А”;
 - 2 : tax group “Г”;
 - 3 : tax group “Д”;
 - 4 : tax group “Б”;
 - 5 : tax group “Е”;
 - 6 : tax group “Ж”;
 - 7 : tax group “И”;
 - 8 : tax group “Ј”;
 - 9 : tax group “К”;
- [PLU] – PLU number of the item 1 – 81000;
- [Price] – default price for the item (0.01 – 999999.99);
- [Name] – name of the item, max 32 symbols;

Can be executed only after fiscal closure.

➤ Deleting items - <operation type> = 2

107,1,_____,_,_;<2>[ALL];

107,1,_____,_,_;<2>[PLU];

107,1,_____,_,_;<2>[PLU1];[PLU2];

- [ALL] – if the string “ALL” is passed, the command clears all items;
- [PLU] – deletes the selected PLU number;
- you can also delete in range of PLUs – from [PLU1] to [PLU2], where PLU2 > PLU1;

Can be executed only after fiscal closure.

➤ Change price - <operation type> = 3

107,1,_____,_,_;<3>[PLU];[New price];

- [PLU] – the item number;
- [New price] – the new price for the item;

"33" – clear the display

33,1,_____,_,_;

Clears the display. If there is an opened fiscal receipt and SW4 is OFF, only the bottom row is cleared.

"47" – show text on top row of the display

47,1,_____,_,_;[text];

➤ [text] is random text (20 symbols max)

If there is an opened fiscal receipt and SW4 is OFF, the command is rejected.

"35" – show text on bottom row of the display

35,1,_____,_,_;[text];

➤ [text] is random text (20 symbols max)

"63" – show date and time

63,1,_____,_,_;

Shows the current date and time on the bottom row of the display(DD.MM.YYYY. HH:MM:SS)

"100" – show text on both rows of the display

100,1,_____,_,_;[text];

➤ [text] is random text (40 symbols max)

"60" – winter/summer time change

60,1,_____,_,_:[Flag];

- [Flag] – one digit value (0 or 1):
 - value '0' means winter time change (minus one hour);
 - value '1' means summer time change (plus one hour);

The command can be executed only 2 times per year!!!

"69" – daily fiscal closure

69,1,_____,_,_:[Type];[N][A];

- [Type] determines the report type:
 - value '0' means Z report with registry clear
 - value '1' means X report without registry clear
 - value '2' means X report without registry clear and additional information(e.g. cash input/output sums)
- [N][A] – the symbols “N” and “A”. Description:
 - if symbol “A” is present - the accumulated sold quantities of the items are cleared. The items themselves are not cleared;
 - if symbol “N” is present – prohibits the deletion of operator's data when Z report (registry clear) is executed;

"70" – internal input and output of cash

70,1,_____,_,_:[+ -][amount];

- [+ -][amount] – the sum (max 999999.99) of the input/output (the sign + or – defines if its input or output);

"106" – open the drawer

106,1,_____,_,_;

"73" – fiscal memory report by memory block number

73,1,_____,_,_;<Start_number>;<End_number>;<Options>;

- <Start_number> – digit, defines the starting record number for the report ;
- <End_number> – digit, defines the ending record number for the report;
- <Options> – digit, defining the option for the report contents:
 - 0 – prints short report;
 - 1 – prints full report without the forbidden VAT groups;
 - 2 – prints full report including forbidden VAT groups;

"79" – fiscal memory report by date

79,1,_____,_,_;<Start_date>;<End_date>;

- <Start_date> – defines the starting date for the report (format DDMMYY);
- <End_date> – defines the ending date for the report (format DDMMYY);

"105" – report operators

105,1,_____,_,_;

Prints informations about the sells by operator.

"111" – report items

111,1,_____,_,_;<Options>;

- <Options> – digit, defines the information to be printed:
 - 0 – only informations about sold items during the day is printed (PLU, Name, Sold quantity) ;
 - 1 – all programmed items are printed (PLU, Name, Price);

"84" – print barcode

84,1,_____,_,_;<Barcode type>;<Data>;

- <Barcode type> can have the following values:
 - 1 – EAN8, 7 digits. The printer calculates the control sum;
 - 2 – EAN13, 2 digits. The printer calculates the control sum;
 - 3 – Code128, can be between 22 and 42 symbols (with ASCII codes from 32 to 127). The printer calculates the control sum;
 - 4 – ITF, only digits;
 - 5 - ITF, only digits. The printer calculates the control sum;
- <Data> is the actual data for the barcode, depending on the type;

"300" – loading items from file

300,1,_____,_,_;;[DeleteAll];[TextOnDisplay];<File name>;

- [DeleteAll] – digit, defines if all items are cleared before load:
 - 0 – items in the printer's memory are not cleared; (default value if not specified)
 - 1 – items in the printer's memory are cleared;
- [TextOnDisplay] – text (max 40 symbols), shown on the display while the loading is running;
- <File name> - string, specifying the location of the file from which the items are loaded;
 - Item data structure in the file : (sample file is included in the installation);
[Tax group];[PLU];[Price];[Name]; (this row is just description, do not include it in the file)
 - 1;1;0.01;Test item 01;
 - 1;2;0.02;Test item 02;
 - 3;3;0.03;Test item 03;
 - 3;4;0.04;Test item 04;
 - 5;5;0.05;Test item 05;

"305" – custom command – add new item/change price of an existing item and then sell it

The command will add new item if none with the specific PLU is found or changes the price of already existing item. After that it will sell the item.

305,1,_____,_,_;<[PLU]>[quantity];[Price];<Tax group>[Item name];

- <PLU> is the PLU number of the item (max 8 digits)
 - If there is already programmed item with that PLU, and the price of that item differs from <Price>, then the <Price> will be set as new price for the item;
 - If no item with PLU is found, it will be programmed with <PLU>, <Price>, <Tax group> and <Item name>;
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- <Tax group> is the tax group for the item (1-9);

The printer will not carry out this command if:

- the maximum number of sales (512) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the display is disconnected;
- you try to change the price of already sold item within the same receipt;

"350" – execute custom command

350,1,_____,_,_;<[Input/OutputString]>;

You can execute any of the printer's commands (as described in the firmware documentation) by assembling the command number and parameters into a string that you pass in <[Input/OutputString]>.

The result of the execution (data, statuses) will be saved in the answer file (see sample file "Sale_Custom_CMD.txt").

DP05, DP25, DP35, DP45

NOTE: Parameters in < > brackets are mandatory, while those in [] brackets are non-mandatory! The brackets by themselves are **not** passed along with the data value.

"48" – open fiscal receipt

48,1,_____,_,_;<Operator>;<Password>;<TillNumber>

- <Operator> – operator number (1-32);
- <Password> – the operator's password (4 to 8 digits);
- <TillNumber> - till number (max 5 digits);

The answer file contains the following information:

48,1,_____,_,_;Total_Receipts,Fiscal_Receipts;

- Total_Receipts – total number of issued receipts (fiscal and nonfiscal) since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);

The command won't be executed if:

- there is already opened receipt;
- the fiscal memory is full;
- the fiscal memory is corrupted;
- the operator's password is wrong;

"52" – sell programmed items

52,1,_____,_,_:[+ -]<PLU>:[quantity];[Price];

- [+ -] <PLU> is the PLU number of the item (max 8 digits). If you pass the PLU number with a minus sign in front of it, the command will cancel the previous sale of that item (the prices of the sold/canceling items must be the same, the quantity can differ, but cannot go below the sold quantity);
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- if [Price] is higher than zero, than the item is sold with free [Price] instead of the programmed price. The new programmed price is automatically set to [Price];

The printer will not carry out this command if:

- the maximum number of sales (120) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- a payment has already started;

"51" – subtotal

51,1,_____,_,_;

The command shows the sum of the current sells in the receipt on the display.

"53" – payment

53,1,_____,_,_:[flag];[amount];

- [flag] – parameter that determines the type of the payment:
 - value '0' means payment in cash;
 - value '1' means payment via cheque;
 - value '2' means payment via debit card;
- [amount] – the sum of the payment

The parameters [flag] and [amount] are optional and if you skip them, the command will execute payment in cash with the whole sum of the current receipt.

The command cannot be executed if :

- there is no opened receipt
- the accumulated sum is negative
- the sum for a tax group is negative

"56" – close fiscal receipt

56,1,_____,_,_;

The command closes a fiscal receipt, but only if full payment is done.

The answer file contains the following information:

56,1,_____,_,_;Total_Receipts,Fiscal_Receipts;Total sum;

- Total_Receipts – total number of issued fiscal receipts since the last fiscal closure;
- Fiscal_Receipts – total number of issued fiscal receipts (this is the number of the last fiscal receipt);
- Total sum of the finished receipt;

"107" – programming and deleting items, changing price for programmed items

107,1,_____,_,_;<operation type>[set of parameters, depending on the <operation type>];

Depending on the <operation> parameter, the command has 4 different structures:

➤ Programming new items - <operation type> = **1** or **4**

– Operation type 1 - Short format

107,1,_____,_,_;<1>;<Tax group>;<PLU>;<Price>;<Name>;

- **[Tax group]** – a number, defining tax groups:
 - 1 : tax group “A”;
 - 2 : tax group “Г”;
 - 3 : tax group “Д”;
 - 4 : tax group “Б”;
 - 5 : tax group “Е”;
 - 6 : tax group “Ж”;
 - 7 : tax group “И”;
 - 8 : tax group “J”;
 - 9 : tax group “K”;
- **[PLU]** – PLU number of the item 1 – 81000;
- **[Price]** – default price for the item (0.01 – 999999.99);
- **[Name]** – name of the item, max 32 symbols;

– Operation type 4 – Long format

107,1,_____,_,_;<4>;<Tax group>;<PLU>;<Price>;<Name>;<PriceType>;
[Flags];<Barcode>;<LinkTo>;

- the first 4 parameters are the same as in the short format (see above, operation type 1);
- **<PriceType>** has three values:
 - 0 - item sale only with programmed price;
 - 1 - sale with programmed or free price;
 - 2 - sale with price less or equal to programmed price. If a sale with free price is made, the free price is automatically set as the new programmed price;
- **[Flags]** can be the symbols “N” or “B” or both. If “N” is present, name matching check is turned off. If “B” is present, barcode matching check is off;
- **<Barcode>** is up to 13 numbers for barcode;
- **<LinkTo>** is a number from 0 to 255, specifying the related item that will be sold alongside the current item. The linked items are sold only if the main item is sold from the ECR keypad manually.

Can be executed only after fiscal closure.

➤ Deleting items - <operation type> = 2

107,1,_____,_,_;<2>[ALL];
107,1,_____,_,_;<2>[PLU];
107,1,_____,_,_;<2>[PLU1];[PLU2];

- [ALL] – if the string “ALL” is passed, the command clears all items;
- [PLU] – deletes the selected PLU number;
- you can also delete in range of PLUs – from [PLU1] to [PLU2], where PLU2 > PLU1;

Can be executed only after fiscal closure.

➤ Change price - <operation type> = 3

107,1,_____,_,_;<3>[PLU];[New price];

- [PLU] – the item number;
- [New price] – the new price for the item;

"33" – clear the display

33,1,_____,_,_;

Clears the display. If there is an opened fiscal receipt and SW4 is OFF, only the bottom row is cleared.

"47" – show text on top row of the display

47,1,_____,_,_:[text];

- [text] is random text (20 symbols max)

If there is an opened fiscal receipt and SW4 is OFF, the command is rejected.

"35" – show text on bottom row of the display

35,1,_____,_,_:[text];

- [text] is random text (20 symbols max)

"69" – daily fiscal closure

69,1,_____,_,_: [Type];;

- [Type] determines the report type:
 - value '0' means Z report with registry clear
 - value '1' means X report without registry clear
 - value '2' means X report without registry clear and additional information(e.g. cash input/output sums)

"70" – internal input and output of cash

70,1,_____,_,_:[+ -][amount];

- [+ -][amount] – the sum (max 999999.99) of the input/output (the sign + or – defines if its input or output);

"79" – fiscal memory report by date

79,1,_____,_,_;<Start_date>;<End_date>;

- <Start_date> – defines the starting date for the report (format DDMMYY);
- <End_date> – defines the ending date for the report (format DDMMYY);

"105" – report operators

105,1,_____,_,_;

Prints information about the sells by operator.

"111" – report items

111,1,_____,_,_;<Options>;

- <Options> – digit, defines the information to be printed:
 - 0 – only information about sold items during the day is printed (PLU, Name, Sold quantity) ;
 - 1 – all programmed items are printed (PLU, Name, Price);

"300" – loading items from file

300,1,_____,_,_;;[DeleteAll];[TextOnDisplay];<File name>;

- [DeleteAll] – digit, defines if all items are cleared before load:
 - 0 – items in the printer's memory are not cleared; (default value if not specified)
 - 1 – items in the printer's memory are cleared;
- [TextOnDisplay] – text (max 40 symbols), shown on the display while the loading is running;
- <File name> - string, specifying the location of the file from which the items are loaded;
- Item data structure in the file: (this first row is just description, do not include it in the file)

[Tax group];[PLU];[Price];[Name];[PriceType];[Flags];[Barcode];[LinkTo];

1;1;0.01;Test item 01;0;;0;1;

1;2;0.02;Test item 02;1;NB;1234567890;1;

3;3;0.03;Test item 03;1;;0;2;

3;4;0.04;Test item 04;0;;0;2;

5;5;0.05;Test item 05;0;;0;2;

Sample file is included in the installation, ..\Sample files\Serbia\ folder.

"305" – custom command – add new item/change price of an existing item and then sell it

The command will add new item (by using the short format for programming) if none with the specific PLU is found or changes the price of already existing item. After that it will sell the item.

305,1,_____,_,_;;<[PLU]>;[quantity];[Price];<Tax group>;[Item name];

- <PLU> is the PLU number of the item (max 8 digits)
 - If there is already programmed item with that PLU, and the price of that item differs from <Price>, then the <Price> will be set as new price for the item;
 - If no item with PLU is found, it will be programmed with <PLU>, <Price>, <Tax group> and <Item name>;
- [quantity] is the quantity to be sold (a number 1.000 ~ 99999.999). If you skip this parameter, the default quantity is used (1.000);
- <Tax group> is the tax group for the item (1-9);

The printer will not carry out this command if:

- the maximum number of sales (512) within a single receipt is already reached;
- the sum by any of the tax groups is negative;
- the display is disconnected;
- you try to change the price of already sold item within the same receipt;

"350" – execute custom command

350,1,_____,_,_;<[Input/OutputString]>;

You can execute any of the printer's commands (as described in the firmware documentation) by assembling the command number and parameters into a string that you pass in <[Input/OutputString]>.

The result of the execution (data, statuses) will be saved in the answer file (see sample file "Sale_Custom_CMD.txt" in \Sample files\Serbia).

Calculation algorithm for VAT and NET sums in fiscal devices

In many practical cases the document which will be produced by the fiscal printer has to be visualized or printed in advance. To achieve this we have presented an algorithm with the help of which you can do this successfully without meeting problems regarding the rounding up of the sums. Different countries have varying legislative requirements as far as rounding up in the fiscal printers is concerned. **In Bulgaria, rounding up is accepted to the second digit after the decimal point for sums and to the third for quantities. One item can stand in only one tax group.**

Let us assume a case of a sale to a customer with a visualization of the tax invoice. In most general terms, in addition to the data on the customer we must also visualize the information for each line of the sale as it will be produced by the printer with all the sums fully coinciding. If the number of the items sold is N the approach to this task will be:

1. Start of the cycle appearing as: „**for** $i = 1$ **to** N “;
2. We obtain the real singular price(without VAT applied to it) for sale i ;
3. Calculation of VAT price with the help of the equation:

$$(VatPrice_i) = (RealSinglePrice_i) * (1 + (\frac{VAT_i}{100}))$$

4. **We round up** the obtained **VatPrice**. The result is exactly what the printer is going to produce;
5. We take the quantity of the sale for the given item and multiply the result in point '3' by the quantity:

$$RowSum_i = RealQ_i * VatPrice_i$$

6. **We round up** the result in point 5 and obtain the price for this line from SALES_DATA, as it will be produced by the printer. This sum, **RowSum** will be added to the sums of the different tax groups in the printer.
7. If we need to calculate a discount or surcharge (% or sum) over the **RowSum**, its done on this step and again the sum is **rounded up**.
8. In Bulgaria the individual sums from the various tax groups are summed up separately, so you must be able to maintain one variable for each of the tax groups in order to restore/correctly presume the tax information produced by the printer. The result from point 7 will be added as per the equation:

$$(SumVATGroup_i) = (SumVATGroup_i) + RowSum_i$$

9. At this step a **SubTotal** can be issued, along with discount or surcharge (% or sum). This percentage or sum will be applied to each **SumVATGroup** and the new sums will be calculated according to the following algorithm:

- ***When we use percentage for the discount/surcharge over SUBTOTAL:***

1. For discounts

$$NewSumVATGroup_i = \left(\frac{100 - discount}{100} \right) * (SumVATGroup_i)$$

Round up to 2 decimal places

2. For surcharges

$$NewSumVATGroup_i = \left(\frac{100 + discount}{100} \right) * (SumVATGroup_i)$$

Round up to 2 decimal places

- ***When we use sums for discount/surcharge over SUBTOTAL:***

1. Calculate the ratio for discount by sum:

$$r = 1 - \frac{(DiscountSum)}{(TotalVatSum)}$$

or for surcharge by sum:

$$r = 1 + \frac{(DiscountSum)}{(TotalVatSum)}$$

where $TotalVatSum = \sum SumVATGroup_i$

2. ***Round up*** r to the 5th decimal point

3. For each VAT group, multiply $NewSumVATGroup_i = r * SumVATGroup_i$

4. ***Round up*** the new VAT sums to 2 decimal points

5. In order to clear the rounding error, sum the new VAT sums:

$$NewTotalVatSum = \sum NewSumVATGroup_i$$

The error of the rounding is $errorRound = TotalVatSum - NewTotalVatSum$

6. Add the ***errorRound*** to the biggest $NewSumVATGroup_i$ (if you have 2 or more groups with the same sums, add to the first in alphabetic order)

7. Now you have the new VAT group sums

10. After the sale is finalized, the total sum is calculated as follows:

$$TOTAL = \sum (SumVATGroup_i) \quad \text{or}$$

$$TOTAL = \sum (NewSumVATGroup_i) \quad (\text{if you had discounts/surcharges})$$

11. In order to obtain the distribution of the sums by tax groups exactly as the printer will produce them (2 variants, described for each group of devices):

- For devices **FP3550 DV/KL, FP300 DV/KL, FP550 DV/KL, FP60 DV/KL, FP1000 DV/KL, FP2000 DV/KL, FMP-10KL:**

1. Calculate the NET Value and for the given group with the equation. VatPercent is the tax group percentage (e.g. always 20% for VAT “B” in Bulgaria):

$$NET_i = \left(\frac{100}{(VATpercent_i + 100)} \right) * (SumVATGroup_i)$$

2. Then **round up** (2 decimal placed) the respective NET_i ;
3. Calculate the sum in the respective tax group for this receipt using the equation:

$$VAT_i = (SumVATGroup_i) - (NET_i)$$

- For all cash registers (**ECRs**) and **FP-705KL, FMP-350KL, FMP-450KL:**

1. Calculate the VAT for the given group with the equation:

$$VAT_i = SumVATGroup_i * \left(\frac{(VatPercent_i)}{(100 + VatPercent_i)} \right)$$

2. Then **round up** (2 decimal placed) the respective VAT_i ;
3. Calculate the NET sum for this receipt using the equation:

$$NET_i = (SumVATGroup_i) - (VAT_i)$$

Examples: Lets assume those are our items to sell in a receipt:

Item name	Price with VAT	Quantity	Discount
Oranges	1,55 , VAT B 20%	2,543	22,55%
Meat	5,67 , VAT B 20%	1,652	0,00%
Board	3,89 , VAT C 10%	2	10,00%
Bags	1,2 , VAT C 10%	3	15,00%
<i>Sale calculations:</i>			
RowSum 1	First calculate (price*quantity) 1,55 x 2,543 = 3,94165 rounded to 3,94 Then the discount 3,94 x (100-22,55)/100 = 3,06335 rounded to 3,06	3,06	
RowSum 2	5,67 x 1,652 = 9,37	9,37	
RowSum 3	3,89 x 2 = 7,78 discount 7,78 x (100-10,00)/100 = 7,002 = 7,00	7	
RowSum 4	1,2 x 3 = 3,6 discount 3,6 x (100 – 15)/100 = 3,06	3,06	
TOTAL			22,49
VAT “B” 20% - 2 sales	BRUTO_B = 3,06 + 9,37 = 12,43 VAT_B = 12,43 * (20/120) = 2,07 NET_B = 12,43 – 2,07 = 10,36		
VAT “C” 10% - 2 sales	BRUTO_C = 7 + 3,06 = 10,06 VAT_C = 10,06 * (10/110) = 0,91 NET_C = 10,06 – 0,92 = 9,15		

Working with FPrint WIN - running FPrintWIN from other applications

1. Using command line parameters

FPRINT [port] [speed] [file] (serial number) (dont show messages in windows)

There is additional parser for TCPIP communication:

FPRINT [IP] [Port] [file] (serial number) (dont show messages in windows)

[port] - set the number of the serial port to which is connected the respective ECR/FP (for example COM 1 or 1). If you don't set this parameter, the default port is the one you selected in the program settings for the device.

[speed] - this field must contain the communication speed set in the ECR/FP. If you do not set this parameter, the default speed is the one set in the program settings (baud rate) for the device.

[IP] – IP address of the printer (eg. 192.168.0.22). If you don't set this parameter, the default IP is the one you selected in the program settings for the device.

[Port] – the listening port of the printer. If you don't set this parameter, the default port is the one you selected in the program settings for the device.

[file] - the field contains the name of the input (executable) file. The default file is the one set in the program settings for the device.

Field **(serial number)** contains the serial number of the fiscal device. In case the computer needs to control more than one fiscal device, you must enter the fourth parameter. If it is entered, you must enter all previous parameters!

Field **(dont show messages in windows)** allows you to turn off error pop-up windows. The field is not obligatory and has values "0" or "1". If you set it with value "1" (and provide all 4 previous parameters), then the errors will not pop-up, but will be saved in the log file (Fprint_log.txt). See section [File format](#) for message texts description.

If you control more than one fiscal device, but enter from 1st to 3rd parameter the program will execute the file onto the last registered device.

To execute the order, you must start "FPrint WIN", while using it from your programs, with at least one parameter. Otherwise, if you start the program with no parameter, you get the opportunity to adjust the settings.

"FPrint WIN" is distributed along with a sample program("FPExample.exe"), as well as with sample files for each device. What you can see below is a typical example of executing

an order from the command line or under DOS (you can create a BAT file and execute it).

C:\PROGRA~1\DATECS~1\FPrint\FPrint.exe COM2 9600 C:
\PROGRA~1\DATECS~1\FPrint\MP55_E~1.INP

2. Changing devices when using resident mode

In resident mode, the program is constantly working and checking folders for files.

The current device, that is used to print is selected in two ways:

1. When settings are saved / changed. You register or select a given device by serial number from the serial combo-box, save and exit the manager. After that, restarting or starting Fprint uses that device.

2. Using a command in the script file to change the current device for that file only. This is done by adding this text on the **first** line of the script in the file:

- for serial port communication

400,1,_____,_,____;[Com port];[Port speed];[Serial number of the device];

- for TCP/IP communication (check if the device supports it)

400,1,_____,_,____;[IP address];[TCP Port];[Serial number of the device];

example:

400,1,_____,_,____;1;115200;233140;

400,1,_____,_,____;192.168.0.5;9100;233140;

- this will search the database of registered devices on your PC and if it finds the serial 233140, the settings for that device will be used when executing the file, but with your selected communication parameters above.

To exit resident mode, use command 999,1,_____,_,____; in a script to terminate the program or kill it from the task manager.

Regarding thread-safety

Fprint is not "Thread-safe"!

We do not manage the commands to the fiscal devices into a queue and if you send the commands to the fiscal device from multiple threads simultaneously – most probably some of the commands won't be executed correctly.

The fiscal device itself will reject some of them.

For example: If you want to sell simultaneously from multiple threads, but without managing your own queue – most probably the fiscal device will reject the second opening of the fiscal receipt.

The reason is the restriction by law. You have no right to open a second fiscal receipt if the first one is not closed properly.

FPrint works properly and sends commands to the fiscal device correctly – but you must to know about this peculiarity, related to the usage of the program from multiple threads simultaneously and to design your project according to that info.

Fiscal devices setup

MP5000



Allow "fiscal printer" mode:

In table 4, line 4 is recorded a key number which you can receive from DATECS. This is a single procedure! Thereafter the ECR can be used in "fiscal printer" mode;

Switching the cash register to "fiscal printer" mode:

From Reg mode (after pressing the[+%) button twice), press the [.] button; the display shows [--FP-- 0]. Now the ECR is in "fiscal printer" mode and is ready to work with FPRINT. To exit the "fiscal printer" mode, click [MODE];

MP-50



To change the ECRs' configuration, first they need to be cleared.

Clear ECR:

Entering the "Clear" mode is done from "OFF" status after pressing the numeric key "3" and setting the operator's password from number 13 to number 16. Press "TOTAL". Then press "TOTAL" or the "PLC" and "1" buttons, which generates a printout of the electronic journal and daily financial report.

When the electronic journal is already printed, the operator must confirm the clear. The display shows a message "C - 0" - the operator should press the respective key. To confirm the clear, press the "0" key. Pressing "C" cancels the operation.

Programming the fields:

To enter the "Programming" (PGM) mode, set the device in "OFF" status and press the numeric key "4". Set the operator's password from number 15 to number 16 and press "TOTAL".

The programming of the memory is selected by pressing the "1" key. All the parameters that can be programmed are arranged in tables. Each table consists of a fixed number of lines and each line consists of fields.

2. 1. 1. 2.

[table number].[Line number].[Field number].[Number of symbols]

In the programming mode you can set all the parameters that are necessary for the cash register to work properly. With the help of the functional keys (according to their definition) you can go to a field and, using the information keys, set the wanted value. Press "TOTAL"

to save the data input.

Q'TY - go to the next table. After a table of the highest number follows a table of the smallest number.

%+ - go to a line of a higher number;

%- - go to a line of a smaller number;

PRC - go to a field of a higher number;

VD - go to a field of a smaller number;

TOTAL - save the entered information (only when in "field definition" mode);

STL - alternative shift to "address/field definition" modes;

CRD - print out the entered information or the field entry.

The fields that must be programmed are:

Table 2:

Field 1 /ECR logical number/,

Field 8 /value 1 or 2/,

Field 9 /baudrate/

3 - 4800 bps;

4 - 9600 bps;

Mode R - "Sales":

Enter the mode from "OFF" status by pressing the "1" numeric key and with the operator's password (from number 13~16), and press "TOTAL".

MP-55, MP55M, MP55L, MP55B



To change the ECRs' configuration, first they need to be cleared.

Clear ECR:

Entering the "Clear" mode is possible when in "OFF" status, after pressing the numeric key "3" and setting the operator's password from number 27 to number 30 (30 for Serbian devices). Then press "TOTAL" twice, which generates a printout of the electronic journal and the daily financial report.

When the electronic journal is already printed, the operator must confirm the clear. The display shows a message "C - 0" - the operator should press the respective key. To confirm the clear, press the "0" key. Pressing "C" cancels the operation.

Programming the fields:

To enter the "Programming" (PGM) mode, set the device in "OFF" status and press the numeric key "4". Set the operator's password from number 29 to number 30 (30 for Serbian devices) and press "TOTAL".

The programming of the memory is selected by pressing the "1" key. All the parameters that can be programmed are arranged in tables. Each table consists of a fixed number of lines and each line consists of fields.

2. 1. 1. 2.

[Table number].[Line number].[Field number].[Number of symbols]

In the programming mode you can set all the parameters that are necessary for the cash register to work properly. With the help of the functional keys (according to their definition) you can go to a field and, using the information keys, set the wanted value. Press "TOTAL" to save the data input.

X - go to the next table. After a table of the highest number follows a table of the smallest number.

%+ - go to a line of a higher number;

%- - go to a line of a smaller number;

PRC - go to a field of a higher number;

VD - go to a field of a smaller number;

TOTAL - save the entered information (only when in "field definition" mode);

STL - alternative shift to "address/field definition" modes;

PY - print out the entered information or the field entry.

The fields that must be programmed are:

Table 2:

Field 1 /ECR logical number/,

Field 8 /3/(note : for MP55L, MP55LD{Albania} – this value must be „2“)

Field 9 /baudrate/

3 - 4800 bps; (for MP55L value 1 = 4800 bps)

4 - 9600 bps; (for MP55L value 4 = 38400 bps)

Table 4

Field 1, line 1 and line 2 /value 1/ - permits a surcharge/discount in percents.

Mode R - "Sales":

Enter the mode from "OFF" status by pressing the "1" numeric key and with the operator's 1 to 30 password and press "TOTAL".

DP-50, DP-50D, DP 500

To change the ECRs' configuration, first they need to be cleared.

Clear ECR:

Entering the "Clear" mode is possible when in "OFF" status, after pressing the numeric key "3" and setting the operator's password from number 27 to number 30 (30 for Serbian devices). Then press "TOTAL" twice, which generates a printout of the electronic journal and the daily financial report.

When the electronic journal is already printed, the operator must confirm the clear. The display shows a message "C - 0" - the operator should press the respective key. To confirm the clear, press the "0" key. Pressing "C" cancels the operation.

Programming the fields:

To enter the "Programming" (PGM) mode, set the device in "OFF" status and press the numeric key "4". Set the operator's password from number 29 to number 30 (30 for Serbian devices) and press "TOTAL".

The programming of the memory is selected by pressing the "1" key. All the parameters that can be programmed are arranged in tables. Each table consists of a fixed number of lines and each line consists of fields.

2. 1. 1. 2.

[Table number].[Line number].[Field number].[Number of symbols]

In the programming mode you can set all the parameters that are necessary for the cash register to work properly. With the help of the functional keys (according to their definition) you can go to a field and, using the information keys, set the wanted value. Press "TOTAL" to save the data input.

X - go to the next table. After a table of the highest number follows a table of the smallest number.

%+ - go to a line of a higher number;

%- - go to a line of a smaller number;

PRC - go to a field of a higher number;

VD - go to a field of a smaller number;

TOTAL - save the entered information (only when in "field definition" mode);

STL - alternative shift to "address/field definition" modes;

PY - print out the entered information or the field entry.

The fields that must be programmed are:

Table 2:

Field 1 /ECR logical number/,

Field 8 /3/ {for DP-50D,DP-500 Albania – the value is currently 2}

Field 9 /baudrate/

1 - 4800 bps;

2 - 9600 bps;

3 – 19 200 bps;

4 – 38 400 bps;

Table 4

Field 1, line 1 and line 2 /value 1/ - permits a surcharge/discount in percents.

Mode R - "Sales":

Enter the mode from "OFF" status by pressing the "1" numeric key and with the operator's 1 to 30 password and press "TOTAL".

MP-500,MP-500T,MP-500TR



Clear ECR:

To enter in "Clear" mode, switch the key to "Z" position, press the "PLU" key and "1" key. To generate a detailed report press "0", and to get a short report press "1". When the report is ready, the operator must confirm the clear. The indication on the display reads "Ñ - 0": "C" cancels the clear, "0" confirms the operation.

Programming the fields:

To enter the "Programming" (PGM) mode, set the key in "PGM" position, only for an ECR with cleared memory. Select programming of the memory by pressing "1" on the numeric keyboard.

Functional keys:

X - go to the next table. After a table of the highest number follows a table of the smallest number.

%+ - go to a line of a higher number;

%- - go to a line of a smaller number;

PRC - go to a field of a higher number;

VD - go to a field of a smaller number;

TOTAL - save the entered information;

SÂTL - alternative shift to "address/field definition" modes;

CÀRD - print out the entered information or the field entry.

The fields that must be programmed are:

Table 2:

Field 1 /ECR logical number/,

Field 8 /value 3/,

Field 9 /baudrate/

3 - 4800 bps;

4 - 9600 bps;

Table 4

Field 1, line 1 and line 2 /value 1/ - permits a surcharge/discount in percents.

Table 5

Field 7 and field 8 /value 0/

Mode R - "Sales":

To enter the mode, you must:

1. Set the key to "REG";
2. Enter the operator's password;
3. Press "TOTAL".

Samsung ER250F



Clear ECR:

To enter into "Clear" mode, switch the key to "Z" position and press "1". Press "0" to generate a detailed report, and "1" to generate a short report. When done, the operator must confirm the clear. The indication on the display will read "C - 0", where "C" cancels the clear and "0" confirms the operation.

Programming the fields:

To enter the "programming mode" (PGM), set the switch key to PGM position, only for a cleared ECR. Select programming of the memory with "1".

Functional keys:

X - go to the next table. After a table of the highest number follows a table of the smallest number.

%+ - go to a line of a higher number;

%- - go to a line of a smaller number;

VD- go to a field of higher number;

TAX- go to a field of a smaller number;

AMD/TEND - save the entered information;

CHECK - alternative shift to "address/field definition" modes;

CHARGE - print the entered information or the field entry.

The fields that must be programmed are:

Table 2:

Field 1/ECR logical number/,

Field 8 /value 6/,

Field 9 /baudrate/.

3 - 4800 bps;

Mode R - "Sales":

To enter the mode you must :

1. Set the key to "REG" position;
2. Enter the operator's password;
3. Press "TOTAL".

Examples and commands list

Bulgarian DP 05/25/35/150, WP-50, DP 25 X, WP 500 X	
Available commands	S, C, T, I, P, Y, Z, D, E, L, O, X, N, A, 46, 48, 58, 105, 107, 111, 119, 350
Examples	Reading last document number and USN
	N,1,_____,_,_;
	If the last printed doc is storno, the answer will be : N,1,422114,1,0;0000243,,DT422114-0001-0000012; If the last printed doc is fiscal, the answer will be : N,1,422114,1,0;0000244,DT422114-0001-0000014,;
	Storno receipt
	46,1,_____,_,_;1;1;1;DT422114-0001-0000010;;0;17;1101191431;02422114; S,1,_____,_,_;Printer;0.3;1.000;1;1;2;0;0; T,1,_____,_,_;
	Sale and auto-paymenmt
	48,1,_____,_,_;1;1;1;0;DT422114-0001-0000010; S,1,_____,_,_;Printer;0.02;1.000;1;1;2;0;0; T,1,_____,_,_; Warning: Change the USN number, according to your device
	Sale with discount and auto-paymenmt
	S,1,_____,_,_;Barcode;0.02;1.000;1;1;2;0;0; C,1,_____,_,_;1;50.00; T,1,_____,_,_;
	Sale with fiscal text
	S,1,_____,_,_;Potatoes;0.02;1.000;1;1;2;0;0; P,1,_____,_,_;white; T,1,_____,_,_;
	Programming an item
	107,1,_____,_,_;1;2;15;1.3;Test15;1;0;0;0;0;123456711;
	Sale with a programmed item
	58,1,_____,_,_;1;0;1.000;10.00;0;1;0; T,1,_____,_,_;
	Non-fiscal receipt
	Y,1,_____,_,_; P,1,_____,_,_;Some text; P,1,_____,_,_;; T,1,_____,_,_;
	Non-fiscal receipt with barcode

	Y,1,____,__,; ; P,1,____,__,;Barcode;; A,1,____,__,;3;123456789125; T,1,____,__,; ;
	Cash in/out
	I,1,____,__,;0;1.5; I,1,____,__,;1;1.5;
	Daily closure and X report
	Z,1,____,__,;0; Z,1,____,__,;1;
	Sale with custom command 350
	350,1,____,__,;48;1,1,DT422114-0001-0000010,1 350,1,____,__,;49;Test[LF][TAB]Б1*1 350,1,____,__,;53;[LF][TAB] 350,1,____,__,;56;
	For X devices: 350,1,____,__,;48;1[\\t]1[\\t]DT736093-0001-0000010[\\t]1[\\t][\\t] 350,1,____,__,;49;Test[\\t]1[\\t]1.1[\\t]1.222[\\t]0[\\t]0[\\t]0[\\t]kg.[\\t] 350,1,____,__,;53;[\\t][\\t]; 350,1,____,__,;56;
	Read date/time
	350,1,____,__,;62;
	Save date/time
	350,1,____,__,;61;25-01-19 10:12:11 For X devices: 350,1,____,__,;61;27-03-19 10:25:11[\\t]
	Read electronic journal
	119,1,____,__,;050119000001;140119115959;0;0;D:\\EJread.txt;

Bulgarian FP 650/700/800/2000, FMP 10, FP 700 X, FMP 350 X, FMP 55 X

Available commands	S, C, T, I, P, Y, Z, D, E, L, O, X, N, A, 46, 48, 58, 105, 107, 111, 119, 350
Examples	Reading last document number and USN
	N,1,_____,.,.; If the last printed doc is storno, the answer will be : N,1,422114,1,0;0000243,DT422114-0001-0000017,DT422114-0001-0000012; If the last printed doc is fiscal, the answer will be : N,1,422114,1,0;0000244,DT422114-0001-0000018,;
	Storno receipt
	46,1,_____,.,.;1;0000;1;DT422114-0001-0000010;DT422114-0001-0000011;0;17;110119143111;02422114; S,1,_____,.,.;Printer;0.3;1.000;1;1;2;0;0; T,1,_____,.,.;
	Open receipt with USN
	48,1,_____,.,.;1;0000;1;;DT422114-0001-0000010; S,1,_____,.,.;Printer;0.02;1.000;1;1;2;0;0; T,1,_____,.,.; Warning: Change the USN number, according to your device
	Sale with discount and auto-paymenmt
	S,1,_____,.,.;Printer;0.02;1.000;1;1;2;0;0; C,1,_____,.,.;1;50.00; T,1,_____,.,.;
	Sale with fiscal text
	S,1,_____,.,.;Printer;0.02;1.000;1;1;2;0;0; P,1,_____,.,.;white; T,1,_____,.,.;
	Programming an item
	107,1,_____,.,.;1;2;15;1.3;Test15;1;0;0;0;0;123456711;
	Sale with a programmed item
	58,1,_____,.,.;1;0;1.000;10.00;0;1;0; T,1,_____,.,.;
	Nonfiscal receipt
	Y,1,_____,.,.; P,1,_____,.,.; Some text; P,1,_____,.,.; ; T,1,_____,.,.;
	Nonfiscal receipt with barcode
	Y,1,_____,.,.; P,1,_____,.,.;Barcode;; A,1,_____,.,.;3;123456789125; T,1,_____,.,.;
	Cash in/out
	I,1,_____,.,.;0;1.5;

	I,1,____,__,__;1;1.5;
	Daily closure and X report
	Z,1,____,__,__;0;
	Z,1,____,__,__;1;
	Show text on the display
	L,1,____,__,__;1;0; clear up ;
	L,1,____,__,__;3;1;THIS TEXT IS SHOWN ON THE TOP ROW!!!;
	L,1,____,__,__;2;1; clear down;
	L,1,____,__,__;4;1;THIS TEXT IS SHOWN ON THE BOTTOM ROW!!!;
	L,1,____,__,__;0;1;clear all;
	L,1,____,__,__;5;0;THIS TEXT IS SHOWN ON THE BOTH ROWS!!!;
	L,1,____,__,__;6;0;date/time;
	Sale with custom command 350
	350,1,____,__,__;48;1,0000,1,DT422114-0001-0000010
	350,1,____,__,__;49;Test[LF][TAB]B1*1
	350,1,____,__,__;53;[LF][TAB]
	350,1,____,__,__;56;
	For X devices:
	350,1,____,__,__;48;1[t]1[t]DT736093-0001-0000010[t]1[t][t]
	350,1,____,__,__;49;Test[t]1[t]1.1[t]1.222[t]0[t]0[t]0[t]kg.[t]
	350,1,____,__,__;53;[t][t];
	350,1,____,__,__;56;
	Read date/time
	350,1,____,__,__;62;
	Save date/time
	350,1,____,__,__;61;25-01-19 10:12:11
	For X devices:
	350,1,____,__,__;61;27-03-19 10:25:11[t]
	Read electronic journal
	119,1,____,__,__;050119000001;140119115959;0;0;D:\EJread.txt;

FP60, FP550, FP300, FP1000 - Kazakhstan

Executable commands : S, C, T, I, P, Y, Z, D, L, O.

Example :

S,1,_____,_,_;Cabbage;0.05;1.000;1;1;1;0;0;
S,1,_____,_,_;Gherkins;0.05;1.000;1;1;2;0;0;
S,1,_____,_,_;Potatoes;0.02;1.000;1;1;2;0;0;
S,1,_____,_,_;Printer;0.05;3.000;1;1;5;0;0;
T,1,_____,_,_;4;;;;;
C,1,_____,_,_;1;10.00;;;;;
P,1,_____,_,_; ;;;;;
P,1,_____,_,_;Is this a fiscal printer;;;;;
P,1,_____,_,_;or a cash register?;;;;;
P,1,_____,_,_; ;;;;;
T,1,_____,_,_;
D,1,_____,_,_;
I,1,_____,_,_;0;1.5;;;;;
I,1,_____,_,_;1;1.5;;;;;
Y,1,_____,_,_;Official receipt;;;;;
P,1,_____,_,_;In the official receipt;;;;;
P,1,_____,_,_; only P (text print);;;;;
P,1,_____,_,_;and T (closing of official ;;;;;
P,1,_____,_,_;receipt) commands can be executed. ;;;;;
T,1,_____,_,_;
O,1,_____,_,_;

Z,1,_____,_,_; *(execute only if there is no open receipt)*

Showing text on the display:

L,1,_____,_,_;0;0;;

L,1,_____,_,_;3;0;Text - top row;

L,1,_____,_,_;4;0;Text - bottom row;

L,1,_____,_,_;1;0;;

L,1,_____,_,_;3;1;Floating text on the top row;

L,1,_____,_,_;2;0;;

L,1,_____,_,_;4;1;Floating text on the bottom row;

L,1,_____,_,_;1;0;;

L,1,_____,_,_;3;0;Large text, shown on the top row of the printer's display;

L,1,_____,_,_;2;0;;

L,1,_____,_,_;4;0;Large text, shown on the bottom row of the printer's display;

L,1,_____,_,_;0;0;;

L,1,_____,_,_;5;1;This is some large floating text that is currently displayed on the both rows;

L,1,_____,_,_;5;0;This is some large text that is currently displayed on the both rows;

L,1,_____,_,_;0;0;;

L,1,_____,_,_;3;0;Date and time;

L,1,_____,_,_;6;0;;

Executable commands : **R, T, I, P, Y, Z, G, K.**

Examples:

- loading items

G,1,_____,_,_;1;Test1Item1;1;0.91;

G,1,_____,_,_;2;Test1Item2;0;0.11;

- delete all items

K,1,_____,_,_;;A;

- delete item number 1

K,1,_____,_,_;1;;

- sale with no change(exact amount payed)

R,1,_____,_,_;1;1;0;

T,1,_____,_,_;

- sale with amount in cash

R,1,_____,_,_;1;1;0;

T,1,_____,_,_;0;200;;;;

- sale with mixed payment

R,1,_____,_,_;1;1;0;

T,1,_____,_,_;0;10;;;;

T,1,_____,_,_;1;10;;;;

T,1,_____,_,_;2;10;;;;

T,1,_____,_,_;3;10;;;;

- storno for item 1
R,1,_____,_,_;1;1;1;
T,1,_____,_,_;5;;;;;
- storno for item 1 with some sum payed
R,1,_____,_,_;1;1;1;
T,1,_____,_,_;5;1.00;;;;;
- service receipt with nonfiscal text
Y,1,_____,_,_;
P,1,_____,_,_; ;;;;;
P,1,_____,_,_;Print test2;test3;test4;test5;test6;
P,1,_____,_,_; some more text ;;;;;
T,1,_____,_,_;
- Z report
Z,1,_____,_,_;

FP 550 Bangladesh

Executable commands : **38,48,49,51,69,70,84, C, T, P, D, L,O.**

Example :

```
48,1,_____,__,_;;1;000000;0;
49,1,_____,__,_;;Gherkins;0.05;1.000;5;0;0;0;
49,1,_____,__,_;;Potatoes;0.02;1.000;1;0;0;10;
49,1,_____,__,_;;Printer;0.05;1.000;2;0;1;10;
49,1,_____,__,_;;Printer;-0.05;1.000;2;0;1;10;
84,1,_____,__,_;;3;00000178SR05;
51,1,_____,__,_;;1;1;1;10;
P,1,_____,__,_;;Is this a fiscal printer;;;;;
T,1,_____,__,_;;
D,1,_____,__,_;;
70,1,_____,__,_;;0;1.5;1;000000;
70,1,_____,__,_;;1;1.5;1;000000;
38,1,_____,__,_;;1;000000;
P,1,_____,__,_;;In the official receipt;;;;;
P,1,_____,__,_;; only P (text print);;;;;
P,1,_____,__,_;;and T (closing of official ;;;;
P,1,_____,__,_;;receipt) commands can be executed. ;;;;
T,1,_____,__,_;;
O,1,_____,__,_;;
69,1,_____,__,_;;1;000000;1;
```

Showing text on the display:

L,1,_____,__,_;;0;0;;
 L,1,_____,__,_;;3;0;Text - top row;
 L,1,_____,__,_;;4;0;Text - bottom row;
 L,1,_____,__,_;;1;0;;
 L,1,_____,__,_;;3;1;Floating text on the top row;
 L,1,_____,__,_;;2;0;;
 L,1,_____,__,_;;4;1;Floating text on the bottom row;
 L,1,_____,__,_;;1;0;;
 L,1,_____,__,_;;3;0;Large text, shown on the top row of the printer's display;
 L,1,_____,__,_;;2;0;;
 L,1,_____,__,_;;4;0;Large text, shown on the bottom row of the printer's display;
 L,1,_____,__,_;;0;0;;
 L,1,_____,__,_;;5;1;This is some large floating text that is currently displayed on the both rows;
 L,1,_____,__,_;;5;0;This is some large text that is currently displayed on the both rows;
 L,1,_____,__,_;;0;0;;
 L,1,_____,__,_;;3;0;Date and time;
 L,1,_____,__,_;;6;0;;

Exchange receipt with discounts on each item:

48,1,_____,__,_;;1;000000;1;
 49,1,_____,__,_;;Gherkins;0.05;1.000;5;1;1;10.00;
 49,1,_____,__,_;;Potatoes;0.02;1.000;2;0;1;10.00;
 49,1,_____,__,_;;Printer;0.05;1.000;2;0;1;10.00;
 T,1,_____,__,_;;

NEW – example for discounts/surcharges with value (not %) :

48,1,_____,__,_;;1;000000;0;
 49,1,_____,__,_;;Gherkins;0.05;1.000;5;0;0;0;
 49,1,_____,__,_;;Gherkins;0.05;1.000;5;0;2;1.00;
 49,1,_____,__,_;;Potatoes;0.02;1.000;1;0;3;0.01;
 49,1,_____,__,_;;Printer;0.05;1.000;1;0;2;1.00;
 T,1,_____,__,_;;

FP 550, FP2000 Albania

Executable commands: 38,42,39,48,49,51,53,54,56,60,33,47,35,63,100,69,70,84,106

Examples:

Sell:

48,1,_____,__,__;1;000000;
49,1,_____,__,__;Item_test;1.34;1.000;2;0;0;0;
54,1,_____,__,__;Some fiscal text;
51,1,_____,__,__;1;1;1;10;
53,1,_____,__,__;
56,1,_____,__,__;

Non-fiscal receipt:

38,1,_____,__,__;
42,1,_____,__,__;Some nonfiscal text;
39,1,_____,__,__;

Cashing in and out:

70,1,_____,__,__;0;10;
70,1,_____,__,__;1;10;

Sell with barcode:

48,1,_____,__,__;2;000000;
49,1,_____,__,__;Item_test2;1.34;1.000;9;0;1;20;
84,1,_____,__,__;3;SAA000178SR05;
49,1,_____,__,__;Item_test3;1.34;1.000;8;0;1;20;
49,1,_____,__,__;Item_test3;-1.34;1.000;8;0;1;20;
49,1,_____,__,__;Item_test4;1.34;1.000;9;1;1;20;
53,1,_____,__,__;
56,1,_____,__,__;

Display text:

33,1,_____,__,__;
47,1,_____,__,__;Text on TOP;
35,1,_____,__,__;Text on BOTTOM;
63,1,_____,__,__;
100,1,_____,__,__; Text on TOP and Text on BOTTOM;

Cancel fiscal receipt:

48,1,_____,_,_;1;000000;

49,1,_____,_,_;Item_test;1.34;1.000;2;0;0;0;

60,1,_____,_,_;

Open drawer:

106,1,_____,_,_;

Print X report:

69,1,_____,_,_;1;

DP 500 plus, DP55 plus, MP55 plus – Romania

DP 500 plus, DP55 plus, MP55 plus – Latvia

Executable commands : S, C, T, I, P, Y, Z, D, E, L,O,X

Example :

S,1,_____,_,_;Cabbage;0.05;1.000;1;1;2;0;0;
S,1,_____,_,_;Gherkins;0.05;1.000;1;1;2;0;0;
S,1,_____,_,_;Potatoes;0.02;1.000;1;1;2;0;0;
S,1,_____,_,_;Printer;0.05;3.000;1;1;2;0;0;
T,1,_____,_,_;4;;;;;
C,1,_____,_,_;1;10.00;;;;
P,1,_____,_,_; ;;;;
P,1,_____,_,_;Is this a fiscal printer;;;;;
P,1,_____,_,_;or a cash register?;;;;
P,1,_____,_,_; ;;;;
T,1,_____,_,_;
D,1,_____,_,_;
I,1,_____,_,_;0;1.5;;;;
I,1,_____,_,_;1;1.5;;;;
Y,1,_____,_,_;
P,1,_____,_,_;In the official receipt;;;;;
P,1,_____,_,_; only P (text print);;;;;
P,1,_____,_,_;and T (closing of official ;;;;
P,1,_____,_,_;receipt) commands can be executed. ;;;;
T,1,_____,_,_;

Reports:

Z,1,_____,_,_; or Z,1,_____,_,_;1; - Z report
Z,1,_____,_,_;0; - X report
Z,1,_____,_,_;2;010511;020511; - short report(see description for command Z);

DP 500 plus, DP55 plus, MP55 plus - Moldova

Executable commands : S, C, T, I, P, Y, Z, D, E, L,O,X

Example :

```
S,1,_____,_____;Cabbage;0.05;1.000;1;1;2;0;0;
S,1,_____,_____;Gherkins;0.05;1.000;1;1;2;0;0;
S,1,_____,_____;Potatoes;0.02;1.000;1;1;2;0;0;
S,1,_____,_____;Printer;0.05;3.000;1;1;2;0;0;
T,1,_____,_____;4;;;;;
C,1,_____,_____;1;10.00;;;
P,1,_____,_____; ;;;;
P,1,_____,_____;Is this a fiscal printer;;;;;
P,1,_____,_____;or a cash register?;;;;;
P,1,_____,_____; ;;;;
T,1,_____,_____;
D,1,_____,_____;
I,1,_____,_____;0;1.5;;;
I,1,_____,_____;1;1.5;;;
Y,1,_____,_____;
P,1,_____,_____;In the official receipt;;;;;
P,1,_____,_____; only P (text print);;;;;
P,1,_____,_____;and T (closing of official ;;;;
P,1,_____,_____;receipt) commands can be executed. ;;;;
T,1,_____,_____;
```

Reports:

```
Z,1,_____,_____; or Z,1,_____,_____;1; - Z report
Z,1,_____,_____;0; - X report
Z,1,_____,_____;2;010511;020511; - short report(see description for command Z);
```

Contact information and technical support

E-mail :

cvetanov@datecs.bg

Web : <http://www.datecs.bg>