
### Hand-Powered Water Filter

# Detail and Assembly

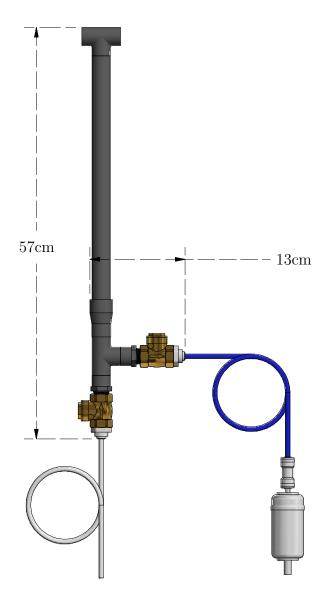

## **Model 5.02**

Patent Pending

Last Updated January 9, 2018


Christopher Bulkley - Logston

Kaylea Brase


#### Contents

1)	Ultra Filter Detail	2
2)	Check Valve Detail	
3)	Parts List	4
4)	Pump Assembly	7
5)	Plunger Assembly	2

### 1) Ultra Filter Detail

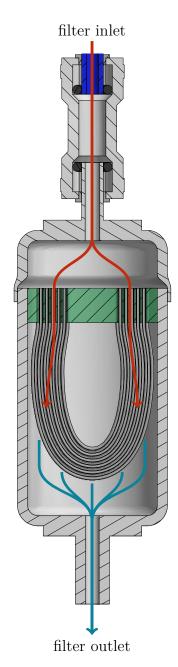

# 2) Check Valve Detail

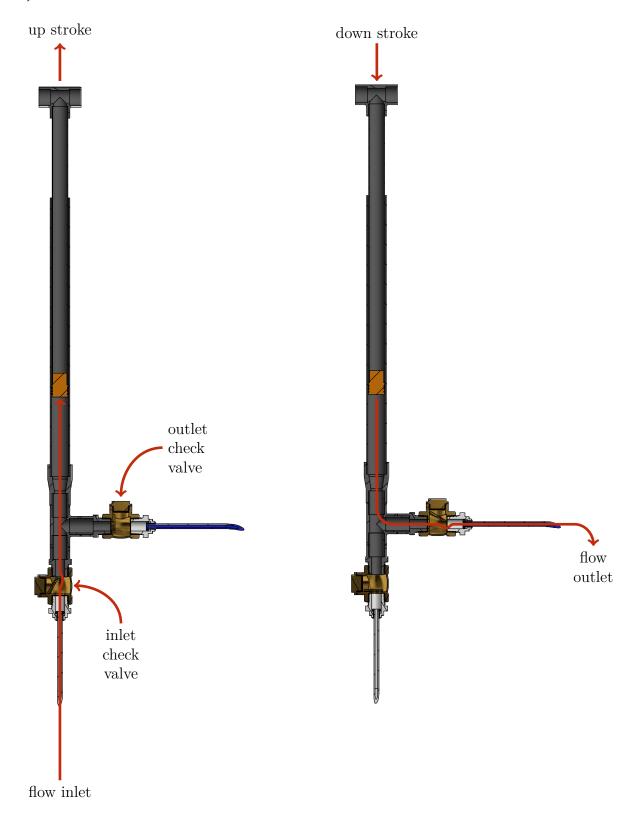

### 3) Parts List


No.	Description	Image	QTY	PPU	тот
A	PVC Tee, $20 \ mm$ plane female $\times$ $20 \ mm$ plane female $\times$ $20 \ mm$ plane female		2	₹8	₹16
В	PVC Pipe Piece, $20 \ mm \ diameter,$ $3 \ cm \ long$		3	₹1	₹3
C	PVC Adapter, $20~mm$ plane female $\times$ $^{1}/_{2}$ " threaded male		2	₹8	₹16
D	PVC Reducing Coupler, $20 \ mm$ plane female $\times$ $25 \ mm$ plane female		1	₹8	₹8
E	PVC Pipe Piece, 25 mm diameter, 35 cm long		1	₹10	₹10

No.	Description	Image	QTY	PPU	TOT
F	Brass Check Valve $^{1}/_{2}$ " threaded female $\times$ $^{1}/_{2}$ " threaded female		2	₹110	₹220
G	PVC Adapter $^{1/2}$ " threaded male $\times$ $^{1/4}$ " quick connect female		2	₹45	₹90
Н	PVC Pipe Piece $20 \ mm \ diameter,$ $35 \ cm \ long$		1	₹10	₹10
I	PLA Chamber Plug		1	₹20	₹20
J	Plug O-ring		3	₹5	₹15


No.	Description	Image	QTY	PPU	TOT
К	Quick Connect Tubing $^{1}/_{4}$ " diameter, $^{50}\ cm$ long		2	₹7	₹14
L	Quick Connect Coupler  1/4" quick connect female ×  1/4" quick connect female		1	₹30	₹30
М	Ultrafilter $^{1}/_{4}$ " quick connect male $\times$ $^{3}/_{8}$ " quick connect male		1	₹600	₹600
Device Total:					₹1052

#### 4) Pump Assembly


Step 01: Insert each of the  $20\ mm$  PVC pipe pieces into the PVC tee.

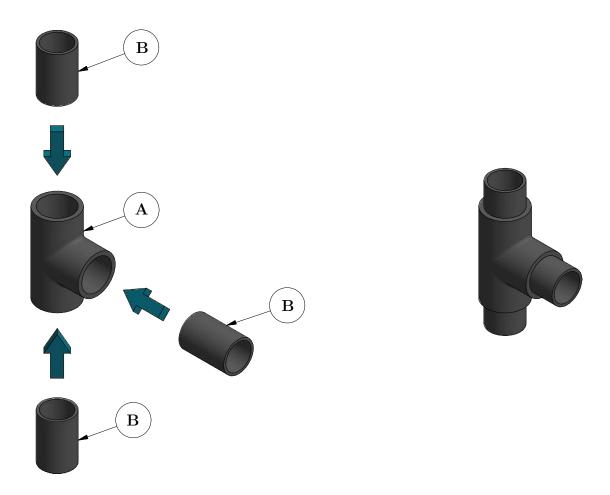

Step 02: Attach the two adapters and the reducing coupler to each of the free ends.

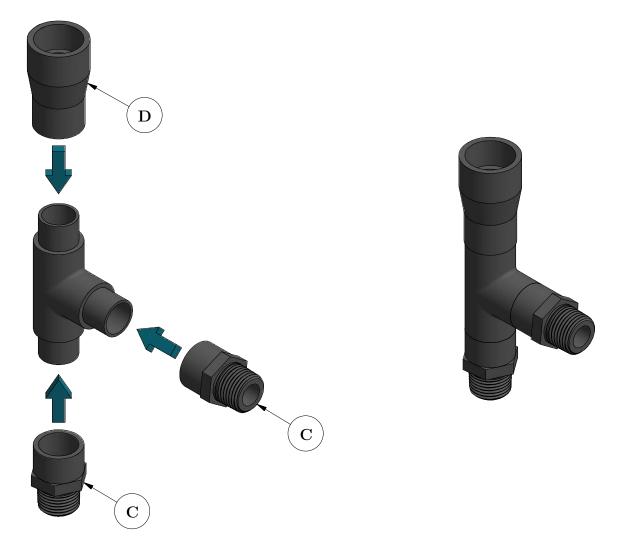


Step 03: Insert the thicker pipe piece into the reducing coupler.

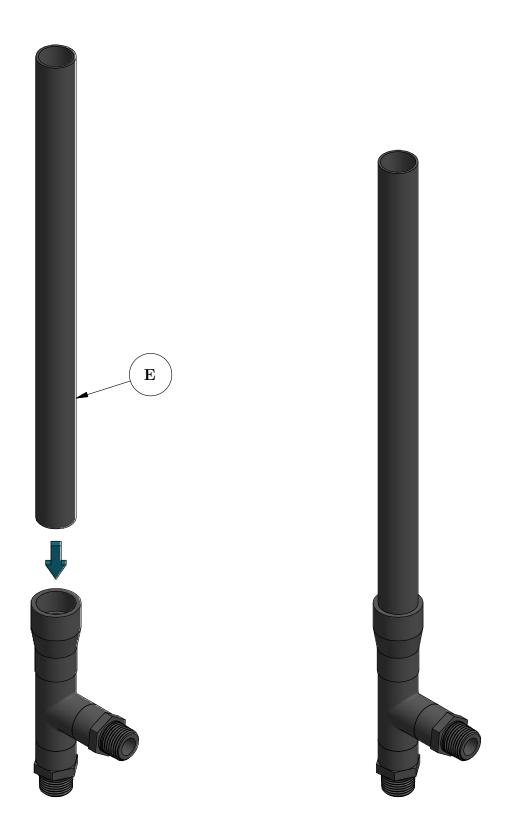

Step 04: Attach a check valve to each open adapter end.




Step 05: Insert a PVC threaded/quick connect adapter into each each valve.

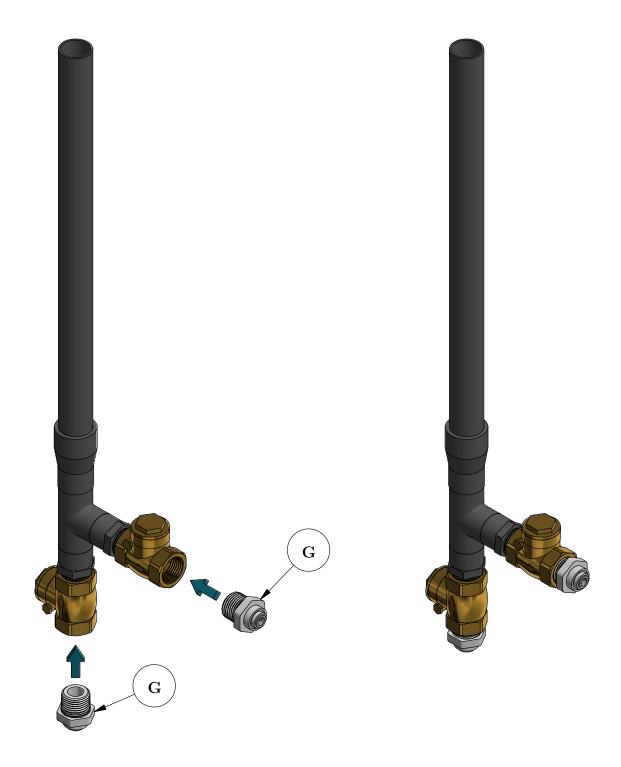


#### 5) Plunger Assembly


Step 06: Attach the smaller tee to the smaller pipe.

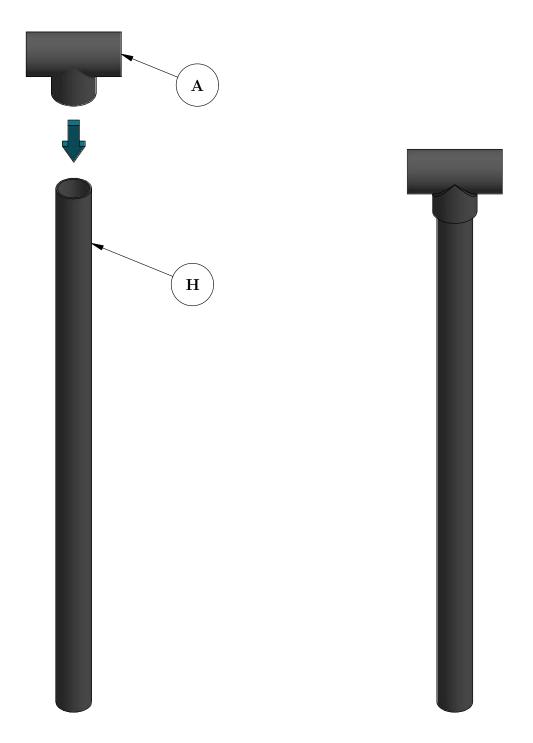


Step 07: Insert the chamber plug into the other end of the smaller pipe.

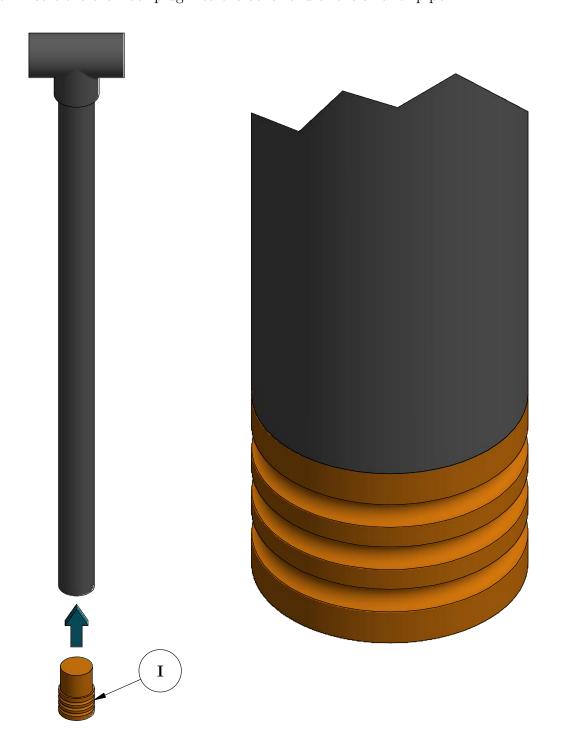


Step 08: Attach the three O-rings to the plug.

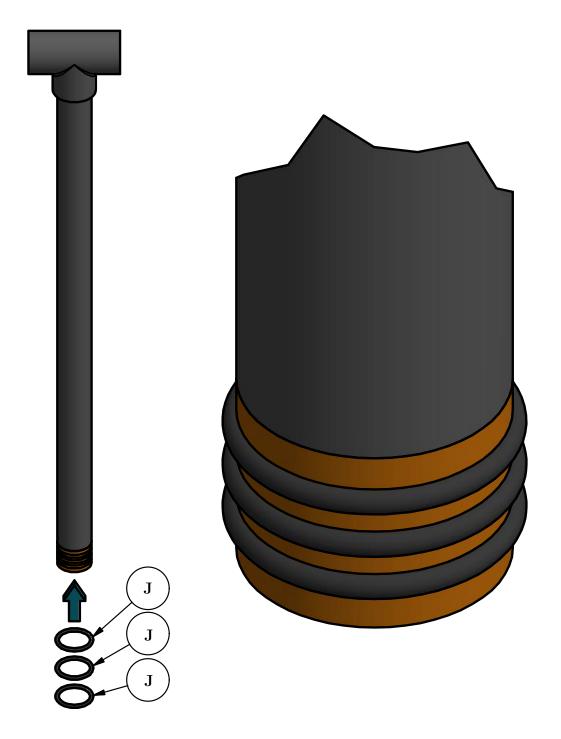

Step 09: Insert the plunger assembly into the pump assembly.

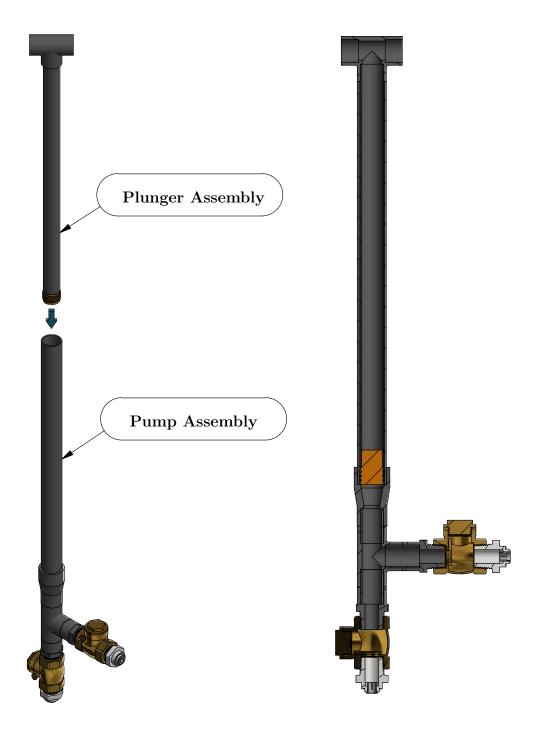

Step 10: Insert the RO tubing into the inlet and outlet adapters.

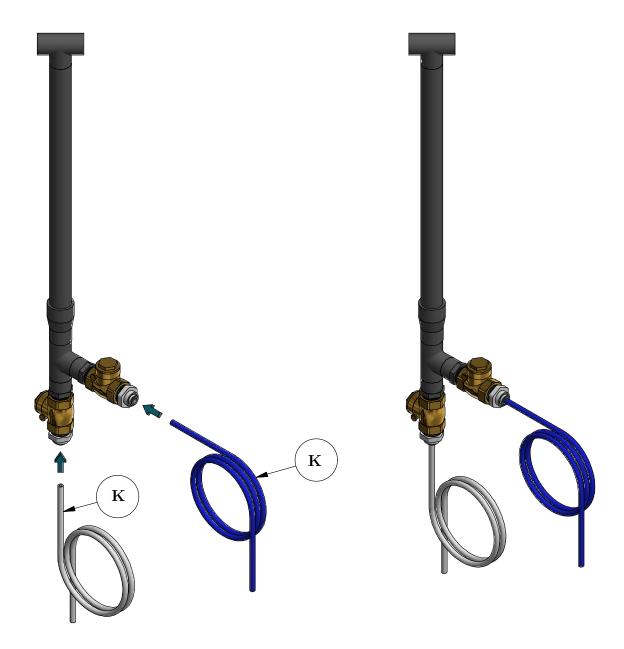

Step 11: Attach the RO coupling and ultra filter to the free end of the outlet tube.

