

BATTERY BACK-UP RAM

This description will cover Static RAM in any Location.

Refer to diagram for wiring details.

The operation of DATA retention is fairly easily achieved.

Referring to the diagram, locate the D.I.P. Switch. You will find there are 3 switches used for the Back-up feature.

S1 - is the main power supply when the Computer is ON.

S2 - no connection.

S3 - is the Back-up Battery Supply.

S4 - is the WRITE Line to the RAM Chip from the Computer.

Ensure that S1 is ON when the Computer is ON or You will not be able to Write to the RAM.

To Write to the RAM - turn on S4.

To Protect the RAM DATA while the Computer is on - turn off S4.

To Protect RAM DATA while the Computer is off -:
Before turning the Computer off, ENSURE that S3 is ON and S4 is OFF.

To ERASE DATA while the Computer is OFF - turn OFF S3.

To ERASE DATA while the Computer is ON -:
turn S1 and S3 OFF. Wait approx. 10secs before turning S1 back ON. S3 is optional.


NOTE - Before removing the Batteries OR Replacing them, ensure that S3 is in the OFF Position.

Use ALKALINE Batteries.

NOTE - DO NOT REMOVE the RAM Chip from it's Sockett UNLESS the Computer is TURNED OFF AND S3 is OFF AS WELL.

PIN 12 / U3 main computer Board. 6000H-67FFH
CHIP SELECT

2K Ram 6000H-67FFH
With Battery Backup.

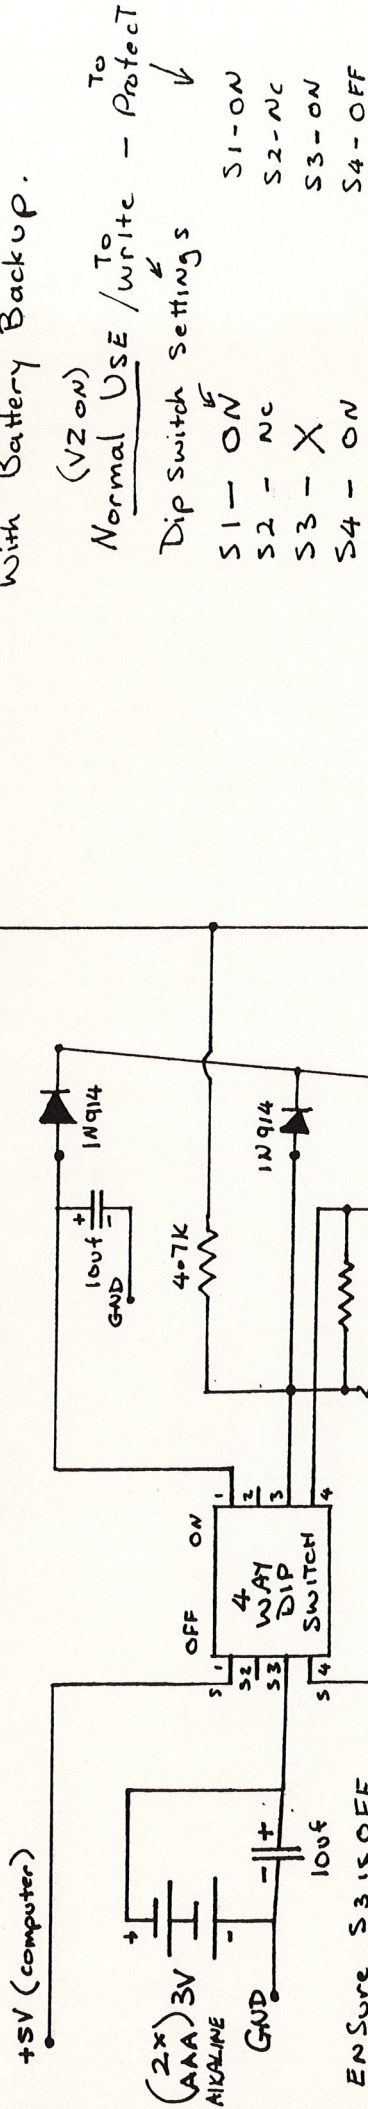

ENSURE S3 IS OFF
before Removing Batteries

chip
select

Battery Backup

S1 - ON
S2 - NC
S3 - ON

S4 - OFF - To protect
- ON - No protect

To protect

Before Turning V2 off.

S1 - ON
S2 - NC
S3 - ON
S4 - OFF

To WRITE while V2 on

S1 - ON
S2 - NC
S3 - X
S4 - ON

To ERASE All with V2 on

S1 - OFF
S2 - NC
S3 - OFF
S4 - X


To ERASE All with V2 off

S1 - X
S2 - NC
S3 - OFF
S4 - X

X - Don't Care

11 x 100K 1/4W

BATTERY BACK UP. ALTERNATE Decoding for 6000H to 67FFH Area.
 USE in Conjunction with Diag No #1

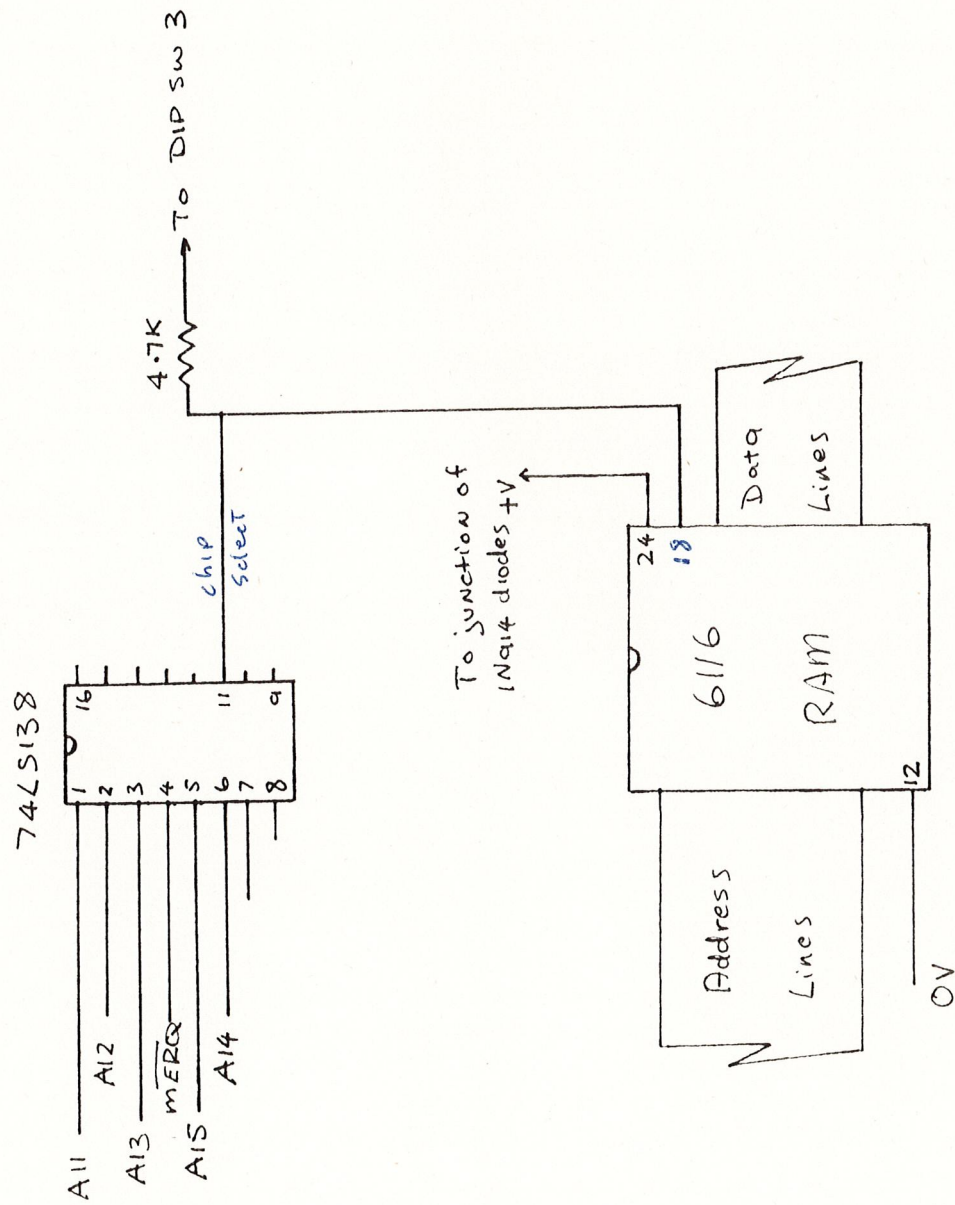

Diag
No #2