Grok Station
Getting started

A short tour of what your station does and where to find it.



What Grok Station is
A tour of the screens
Bots and wake words
Settings pages
Features at a glance
Troubleshooting basics
First run and sign-in
Talking to the station
Lights and home devices
On your phone
What's new in 0.13

rev1.4.3 · written against version 0.13.16 · November 5, 2026.

Every screenshot comes from a demo station with made-up bots, devices, network names and addresses.

START HERE

What Grok Station is

Grok Station is a voice station you keep at home. It runs on a Raspberry Pi with a screen and a USB speaker and microphone. Say “Hey Grok”, ask a question, and the answer is spoken and shown on the station’s own screen. Your other Grok bots can answer too, each with its own wake word, and the station can run kitchen timers, show cards like the weather or a recipe, and switch lights on and off. You set it all up from a phone or laptop on your home network.


What you need

- A Raspberry Pi 4 with 2 GB of memory or more (a Pi 5 is the one to get), a microSD card of 16 GB or more, and a power supply.
- A screen plugged into the Pi, from 800×480 up to 4K, used in landscape.
- Any USB speaker and microphone, or one USB speakerphone.
- An xAI API key.
- For bots other than Grok: a computer on your home network running the Grok Bot app that stays on all the time.

Put it on the Pi

1. In Raspberry Pi Imager, write **Raspberry Pi OS Lite (64-bit)** to the card, with a station name, Wi-Fi (or Ethernet) and SSH.
2. Boot the Pi, sign in, and run the one-line installer from the project README. It asks no questions.
3. Press Enter to restart when it finishes. The screen then shows the address to open and a short setup code.

> Prefer not to type commands on the Pi? The README also explains how to build a ready-to-boot card on a Linux computer. That card sets up Wi-Fi through the station’s own setup hotspot.

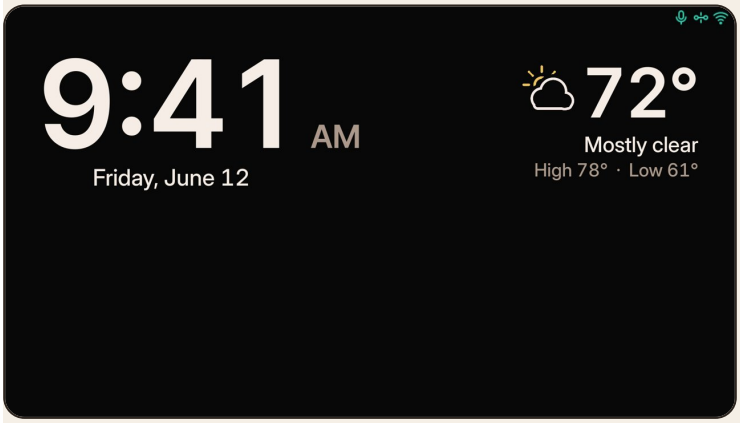


The station when nothing is happening: clock, date and weather. The small icons at top right show the microphone, whether Grok can be reached, and Wi-Fi.

SETUP

First run and sign-in

1. **Wi-Fi.** If the Pi isn't on a network yet, the screen shows a setup hotspot: a Wi-Fi name, a password and a page to open. Join it, open the page, and pick your home Wi-Fi. The hotspot then turns off.
2. **Open the admin page.** On a phone or laptop on the same network, open the address on the station screen (it ends in `.local`, or use the number address). Your browser warns about the certificate the first time; that's expected, so continue.
3. **Enter the setup code** from the station screen. It works once.
4. **Choose an admin password** of at least 10 characters. There is no username.
5. **Paste your xAI API key** and save. The page never shows the key again. Voice starts as soon as it's saved.
6. **Add your main bot first** on the Bots page (see page 6).

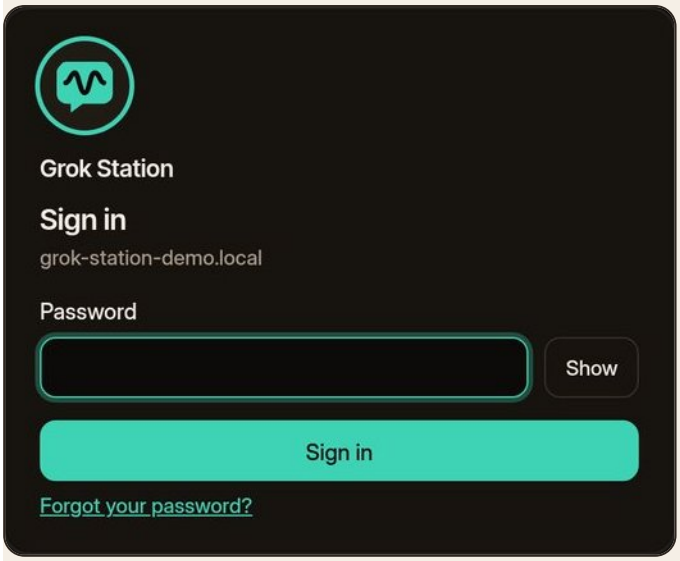

Signing in later: just the password.

Signing out

Sign out is the link at the bottom left of every page, next to "Signed in as admin" and the version number. It signs out the browser you're using. On a phone, open the **More** tab and press **Sign out**.


Changing the admin password signs out every browser.

ORIENTATION

A tour of the screens

The admin page

On a laptop, the menu on the left has three groups. **Home** is the status overview. Under **Station**: Bots, Privacy, Audio, Display, Time and location, Network and Integrations. Under **System**: xAI API, Updates and System. On a phone, the same pages sit behind four tabs at the bottom (Home, Bots, System, More).

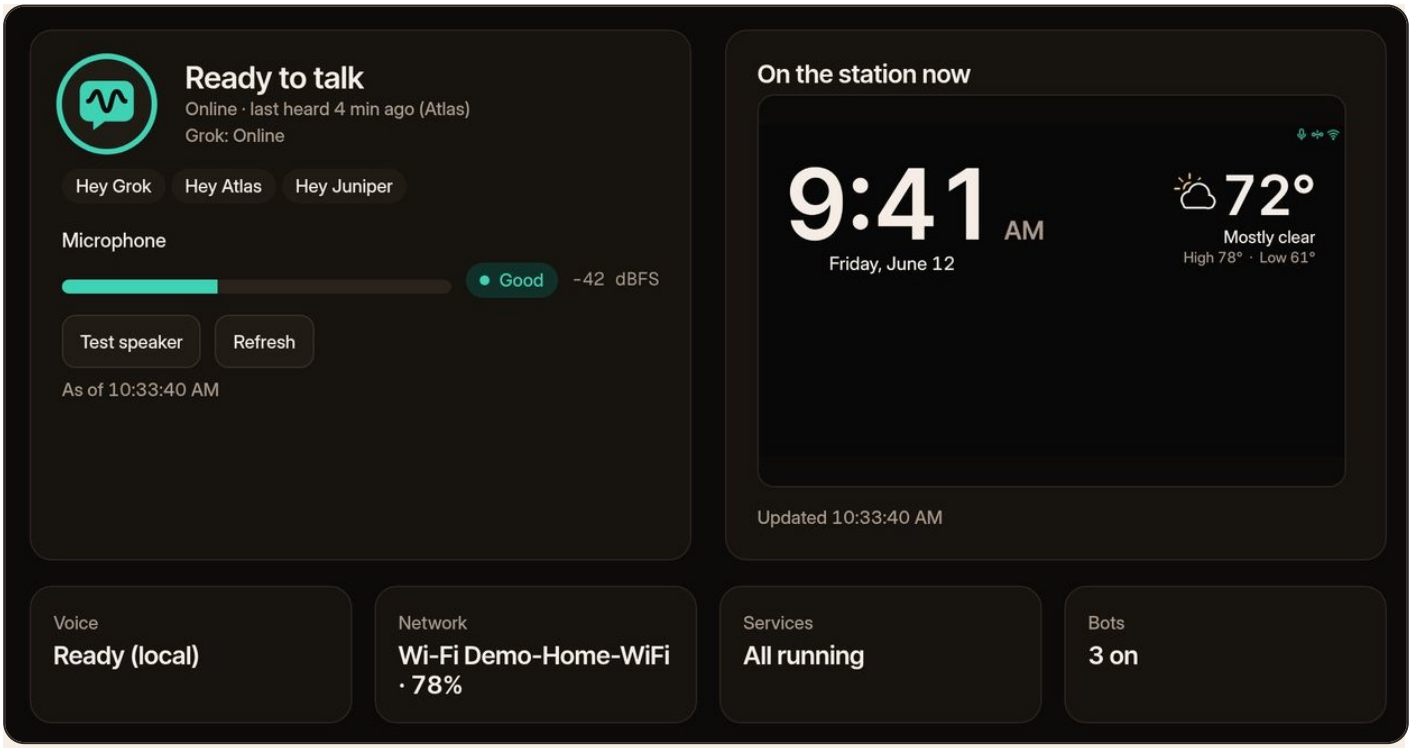

Home: whether the station is ready to talk, the Grok line (Online, No internet, Can't reach Grok, or Checking), the live microphone level, a live picture of the station screen, and tiles for voice, network, services and bots.

The station screen

- **Idle:** a big clock, the date and the weather. Running timers sit along the bottom.
- **Talking:** the bot's picture with a glowing ring, your question in quotes, and the answer. Long answers scroll as they are spoken.
- **Status icons (top right):** network, Grok (teal when reachable, amber when the internet or Grok can't be reached), microphone, and an update arrow only when a newer version is ready.
- **Night:** an optional dim night clock, and the screen can dim on a schedule or at sunset.

EVERYDAY USE

Talking to the station

Start with the wake word, then ask. After an answer the station keeps listening for a few seconds, so you can ask a follow-up without the wake word.

- Say **“Hey Grok, how far is the Moon?”** Grok is built in and always on.
- Say **“Hey Grok, ask Juniper for a fun fact.”** Hands one question to another bot.
- Say **“Hey Grok, connect me with Atlas.”** Switches the whole conversation to that bot.
- Say **“Hey Atlas, …”** A bot’s own wake word goes straight to that bot.
- Say **“Goodbye.”** Also “stop”, “never mind”, “cancel” or “that’s all”. Ends the conversation right away.



An answer with a weather card.




Another bot answering, with its own picture.

Timers

Up to eight named kitchen timers, from one second to 24 hours. They keep running after the conversation ends and ring on the station.

1. Say **“Set a pasta timer for 10 minutes.”**
2. Say **“What’s running?”** or Say **“Add two minutes to the pasta timer.”**
3. When it rings: Say **“Stop.”**

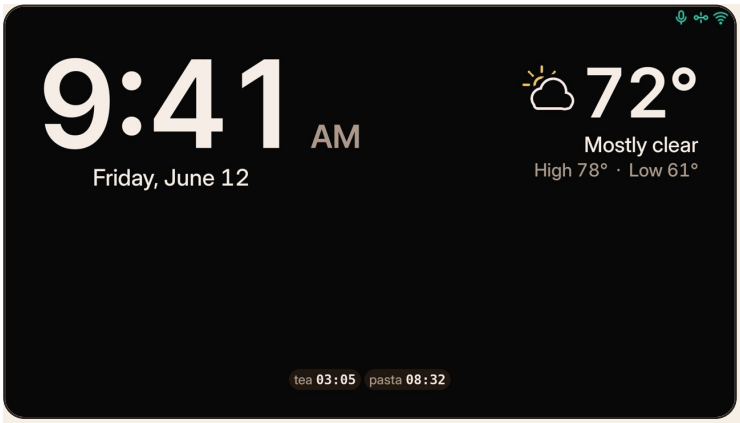

Two timers along the bottom of the idle screen.

Cards from your bots

Bots can put a card on the screen with an answer: a recipe, a sports score, your calendar, or a home card. During a recipe, say “next step”, “back”, “repeat”, “start over” or “done”. Bots can also look up your calendar, reminders or the weather to answer (read only).


BOTS

Add your bots

Grok is built in. Any other Grok bot you use can answer on the station too. Your **main bot** (gold star) is added first; it helps set up the rest.

Add a bot

1. Open **Bots** and press **Add bot**.
2. Give it a name and a short ID, and pick a voice.
3. Choose where its key lives, then copy the instructions the page shows and paste them to your bot.
4. Fill in what the bot sends back (webhook and key). The station tests the connection and the bot's ring turns teal when it's online.

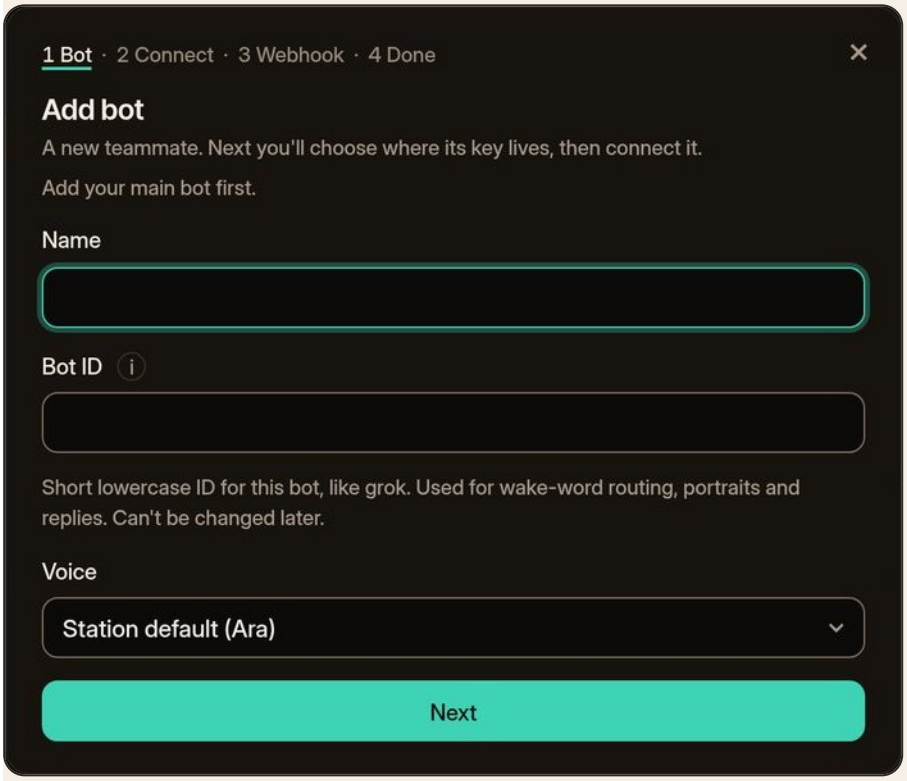

Add bot, step 1 of 4.

The Bots page

Each row shows the bot's picture (ring: teal online, red offline, gray checking), which home computer sends its replies, its wake word with an on/off switch, and **Configure**. Connected bots also have an **Updates** switch (see the next page). The ··· menu next to Add bot has Refresh avatars and Revoke all bots. **Update all** appears only when bots need an update.

BOTS · UPDATED IN 0.13.11

Set up the rest of your team

Say **"Hey Grok, update my team list"** (or "import my team" the first time) and your main bot sends the station the names of your other bots. Each one appears in its own row on **Bots**. A bot that isn't connected yet says **Not connected** and has a **Set up** button right in its row.

1. Press **Set up** on the bot's row. A panel opens under the row showing exactly what your main bot will pass on.
2. Read it, then press **Send setup**. Nothing is sent until you do. **Cancel** (or Esc) closes the panel.
3. After you send, the row says "Setup sent · waiting for" the bot to reply, with **Paste values**, **Resend** and **Remove**. If a send fails, the panel says "Couldn't send." with **Try again**.

Updates switch

Each connected bot has an **Updates** switch to the right of Configure, with a line under it saying what the bot posts to the station (for example "All updates", or "Off: nothing shows on the station"). Every bot starts off; turn one on to see its updates on the clock screen.

On a phone, each row stacks onto separate lines, and the values you can edit sit in a **Details** list.

Voice tip

The **Voice tip** button in the Bots header reminds you of the phrase to say after adding a bot. Press Esc, tap outside or move away to close it.



The Voice tip open.


BOTS

Wake words

"Hey Grok" is always on. Each bot can have its own wake word, like "Hey Atlas", trained on the station from your own voice. No other computer is needed.

1. Say **"Hey Grok, train my wake word for Atlas"** (or "set up my wake word for Atlas"), or press **Train wake word** on the bot's row.
2. A training tile opens on the station. It counts down 3-2-1, chimes, and records five clips of you saying the phrase.
3. To stop, stay quiet for 3 seconds. Nothing from an unfinished clip is kept.
4. If the word isn't reliable yet, say the same sentence again (or press **Train more**) to add five more clips.

In **Configure**, the Wake word tab turns the word on or off, trains more, changes the phrase, or removes it. Other tabs: **Voice and avatar**, **Connection** (which computer replies) and **More** (set as main bot, delete bot).

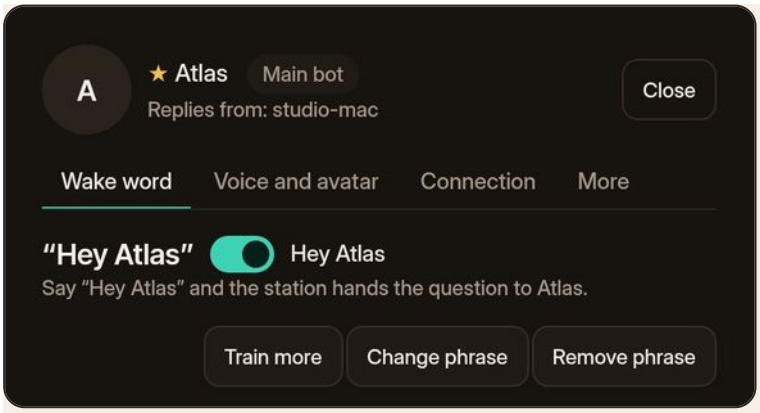


Configure for Atlas, Wake word tab.

A wake word that sounds too much like another one gets a warning with suggestions. An exact duplicate is refused.

Lights and home devices

The **Integrations** page connects the station to lights and switches on your home network. It all runs on the station, nothing goes to the cloud. Voice control is off until you turn on **Voice home control** (it asks for your admin password).

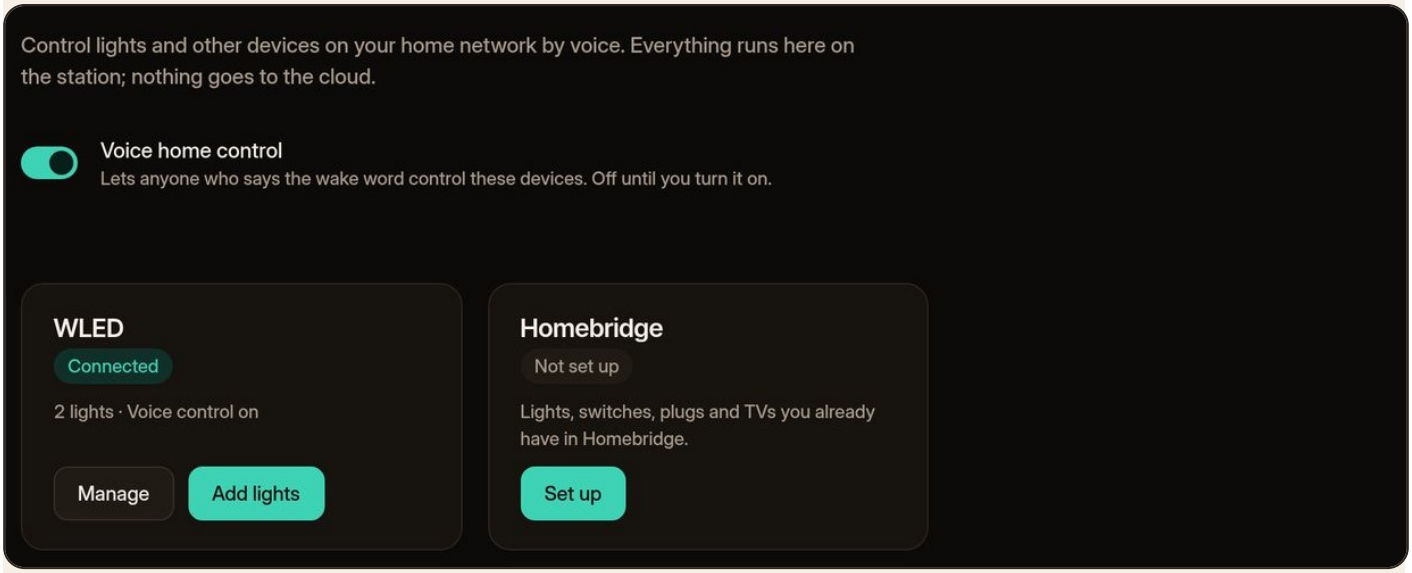


Integrations with two WLED lights saved and Voice home control on.

WLED lights


1. Under WLED, press **Set up** (later, **Add lights**).
2. Let the station find lights on your network, or type an address.
3. Name each light, then **Test** it.
4. Say “turn off the porch light”, “set the porch to 40 percent” or “set the porch to blue”. A short tone means done or failed.

Homebridge

1. Under Homebridge, press **Set up** and type your Homebridge address.
2. In Homebridge, make a login for Grok Station with Admin turned off. Enter it here and the station checks it.
3. Pick the lights, switches, outlets, fans and TVs to control (on and off only). Locks, cameras, garage doors and thermostats are never offered.
4. If a name sounds like a bot or another device, pick a new voice name.

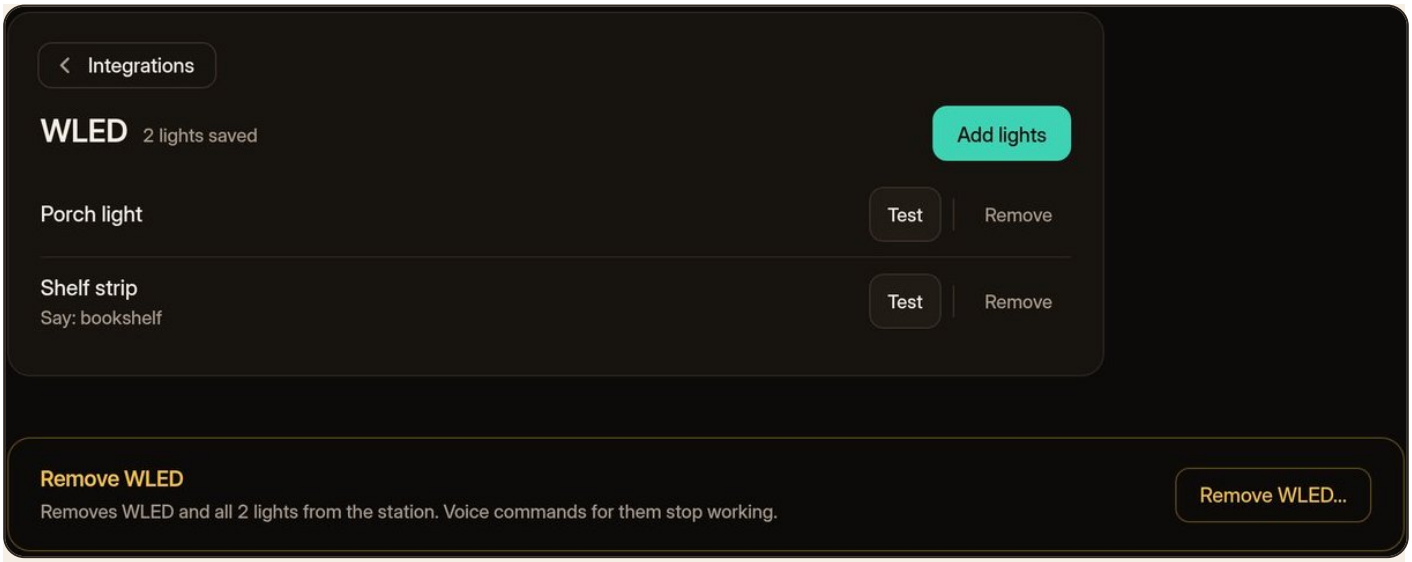

WLED: test or remove each light. The back button returns to Integrations.

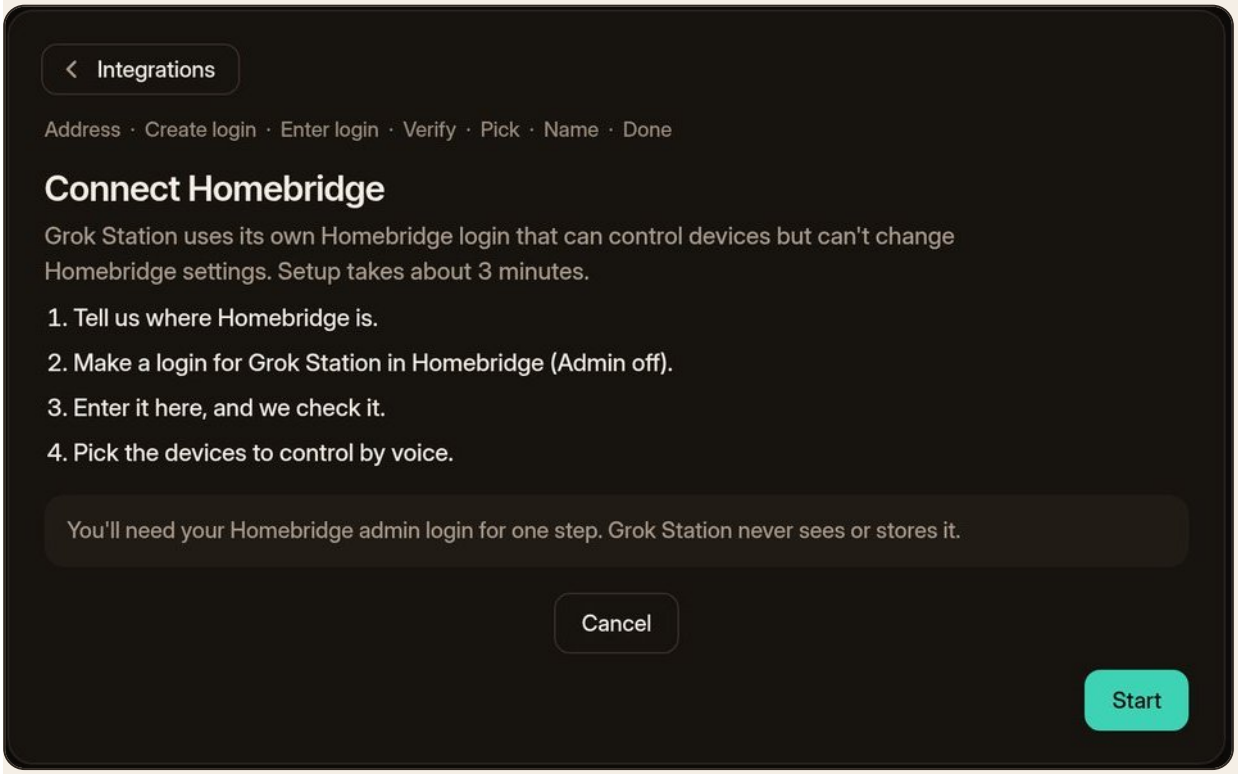


Connect Homebridge: about 3 minutes.

SETTINGS

Privacy, Audio and Display


Privacy

Passwords, keys, tokens, SSNs and card numbers are always blocked from replies. Turn on **Block personal info in replies** to also block household names, emails, phone numbers, addresses, IPs and host names. A blocked answer ends with a short message on the station.

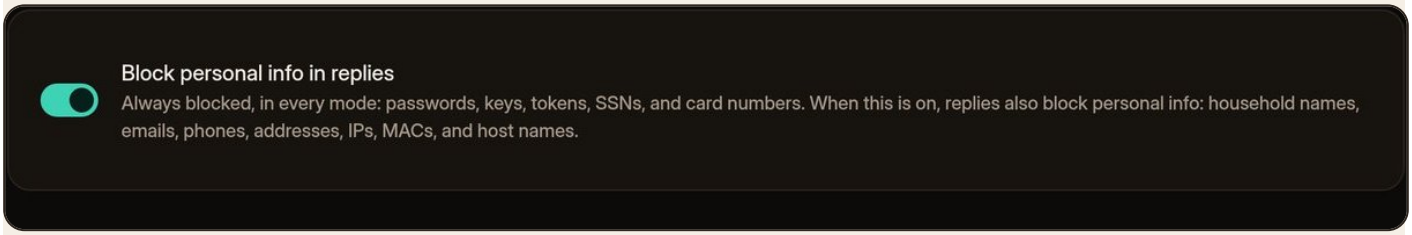

Audio


1. Pick the **microphone and speaker** and press **Play test sound**.
2. Adjust the mic boost if the station doesn't hear you well.
3. Choose the alarm, listen and end sounds, and the **waiting tone** that plays while a bot is thinking.
4. Leave the **microphone reset** switches on so a stuck speakerphone fixes itself.

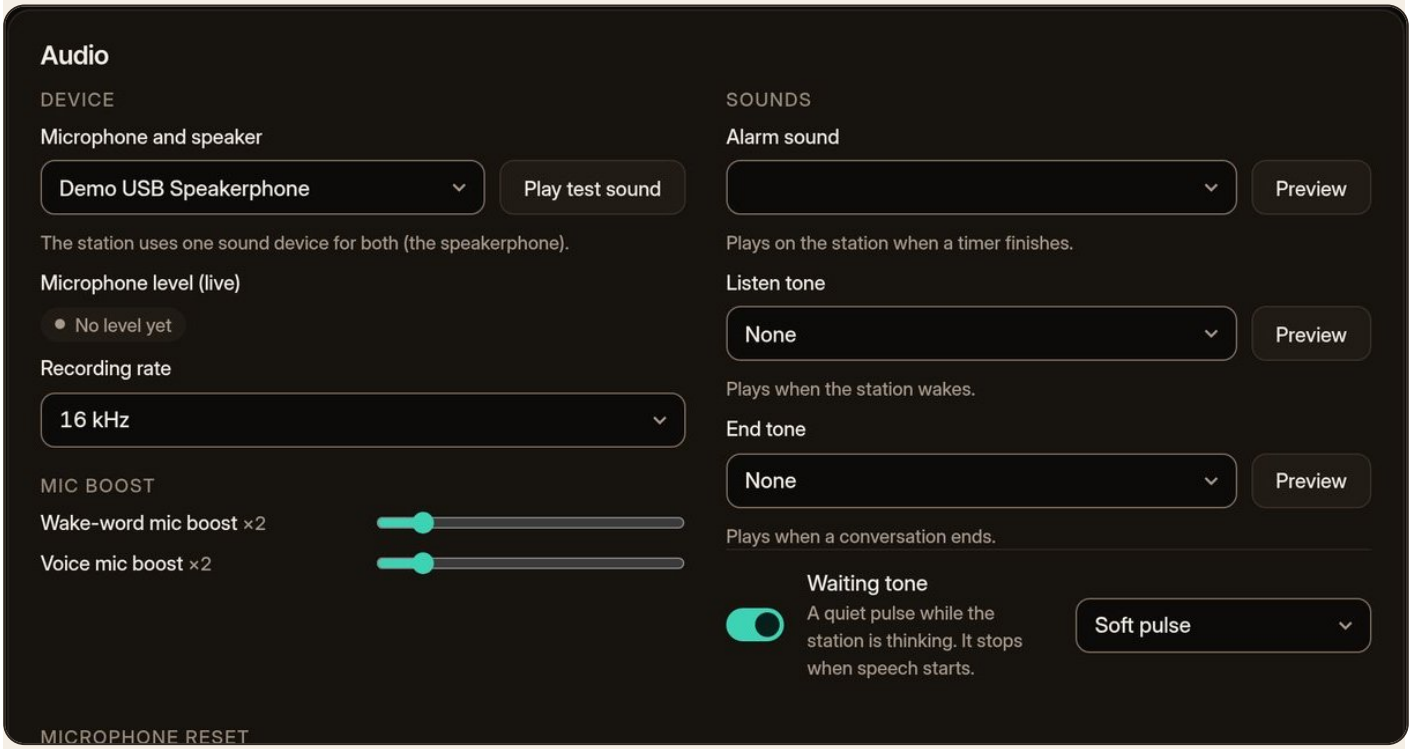

Display

1. Turn on the **night clock** and set its hours.
2. Set how long messages and score cards stay up.

3. Under **Brightness**, choose Schedule, Sunrise and sunset, or a light sensor, with day and night levels.
4. Check the live preview on the right.

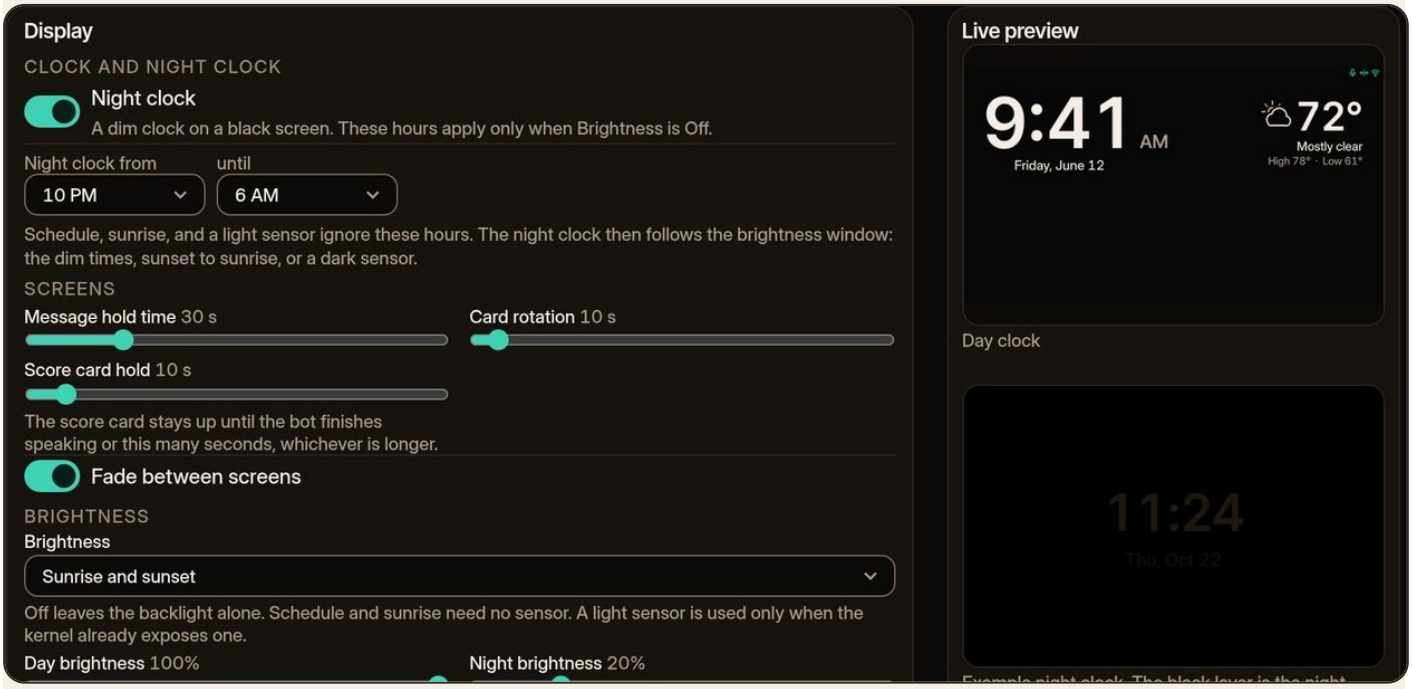


SETTINGS

Time, Network, xAI API and Updates


Time and location

The time zone and your town or ZIP drive the clock, the weather on the station, sunset dimming, and Grok's time and weather answers. Type a town or ZIP, press **Find**, then **Save**. Use **Change location** to edit it later.

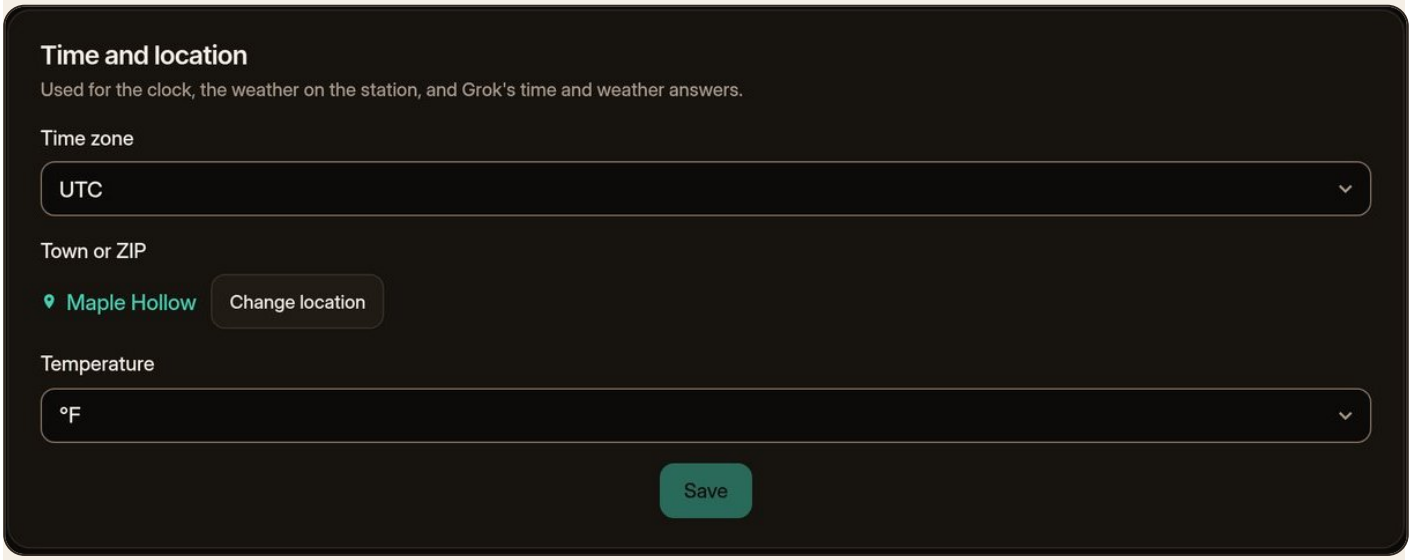

Network

Shows the connection and the station's address. **Scan** finds Wi-Fi networks to join, and you can rename the station (its `.local` address follows). If joining a new network fails, the station goes back to the old one.

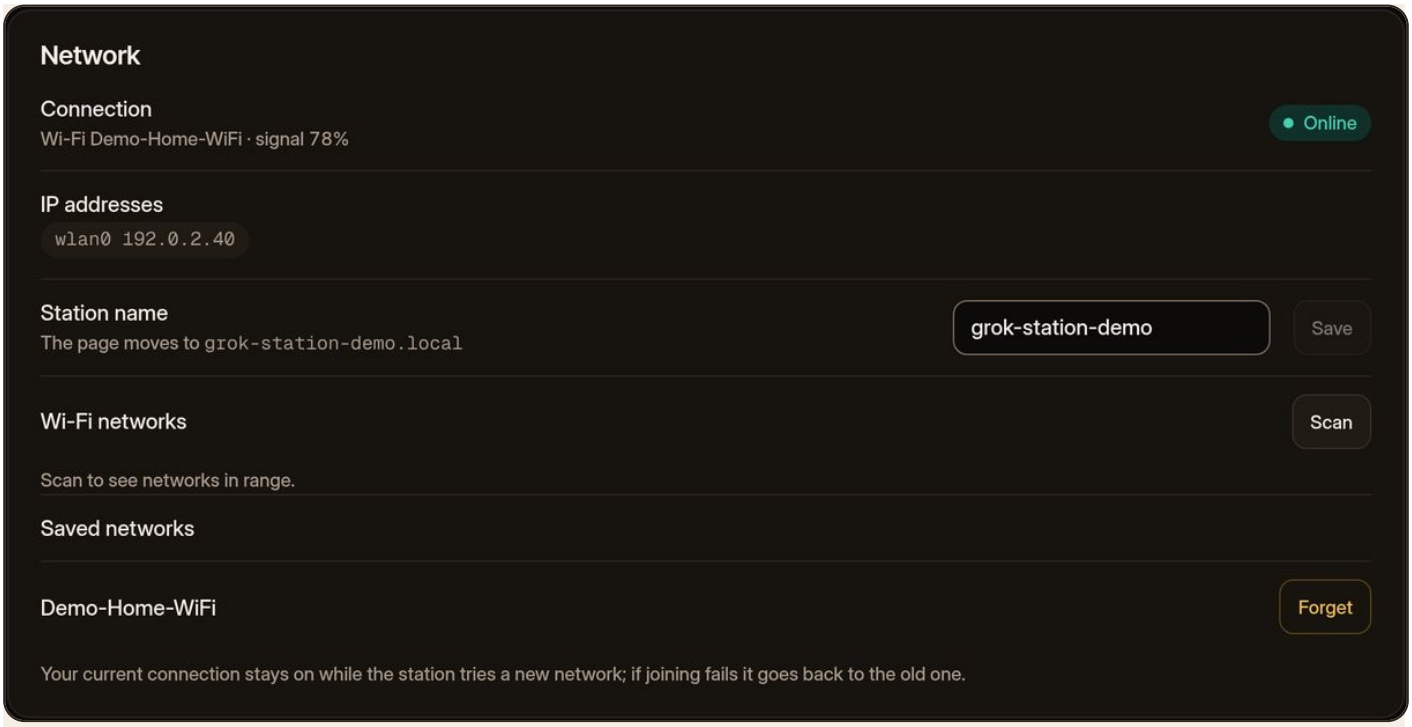


xAI API

Shows whether your key is set. **Replace key** swaps it; the key itself is never shown.

Updates

Check now looks for a newer version, and **Update** appears only when there is one. **Daily check** only checks, it never installs. **View update log** shows why an update failed. After a station update, press **Update** on each bot from the Bots page.

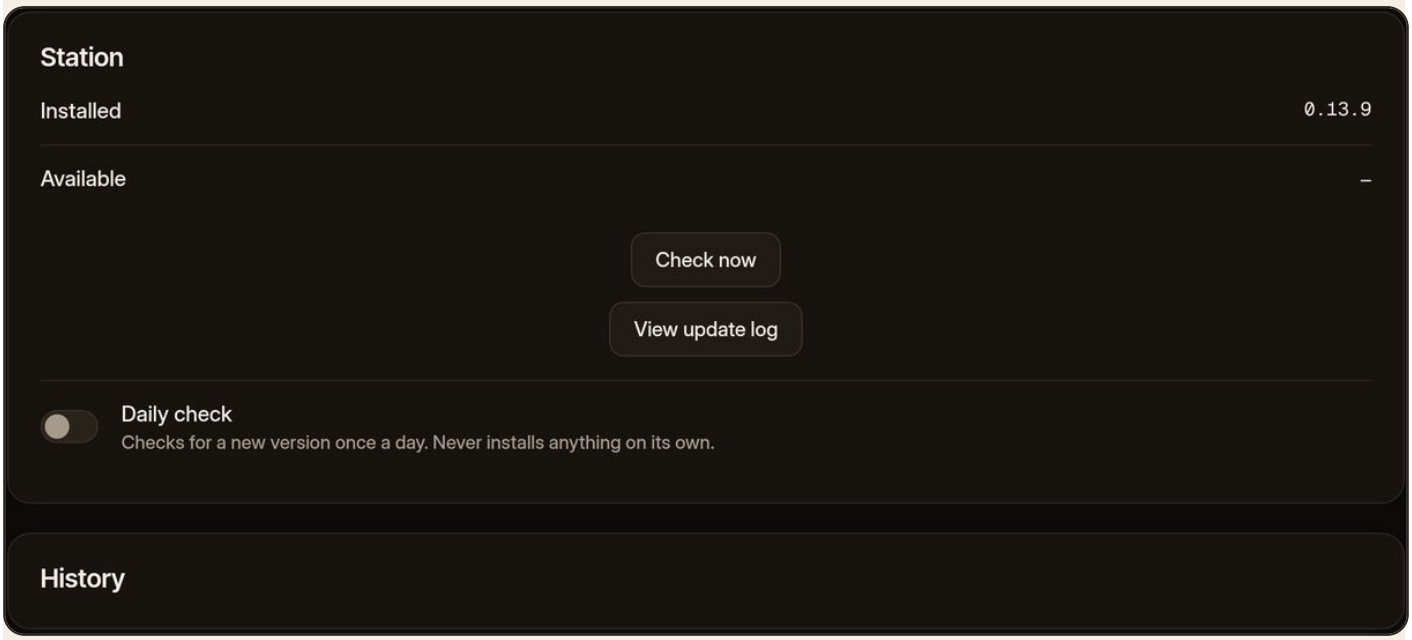


SETTINGS

System

The System page is grouped into sections you open and close: **Status**, **Password and security** and **Troubleshooting**, with **Reboot station** and **Run setup again** in a Danger zone at the bottom.



Status: temperature, uptime, memory, disk, services and network. A service whose state can't be read shows "unknown".

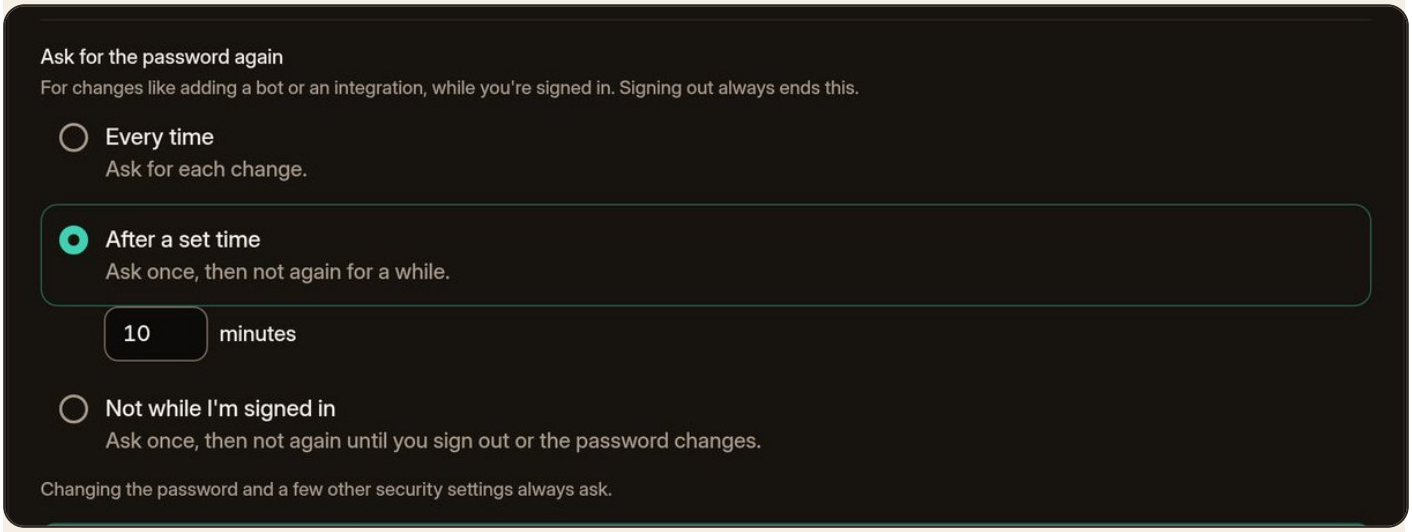

Password and security: choose when the password is asked again.

Ask for the password again

Some actions (like turning privacy off) ask for your password again. Choose how often:


- **Every time.**
- **After a set time**, 1 to 120 minutes (10 by default).
- **Not while I'm signed in.** You stay signed in until you sign out or the password changes, and only a password change or a factory reset asks again.

Troubleshooting has the station logs and **Restart voice**. The **security certificate** fingerprint lets you check the browser warning is really your station.


ANYWHERE

On your phone

The admin page works on a phone. The menu becomes four tabs at the bottom: **Home**, **Bots**, **System** and **More** (every other page, plus Sign out). Pop-ups like the Voice tip open as a sheet from the bottom with a Close button.

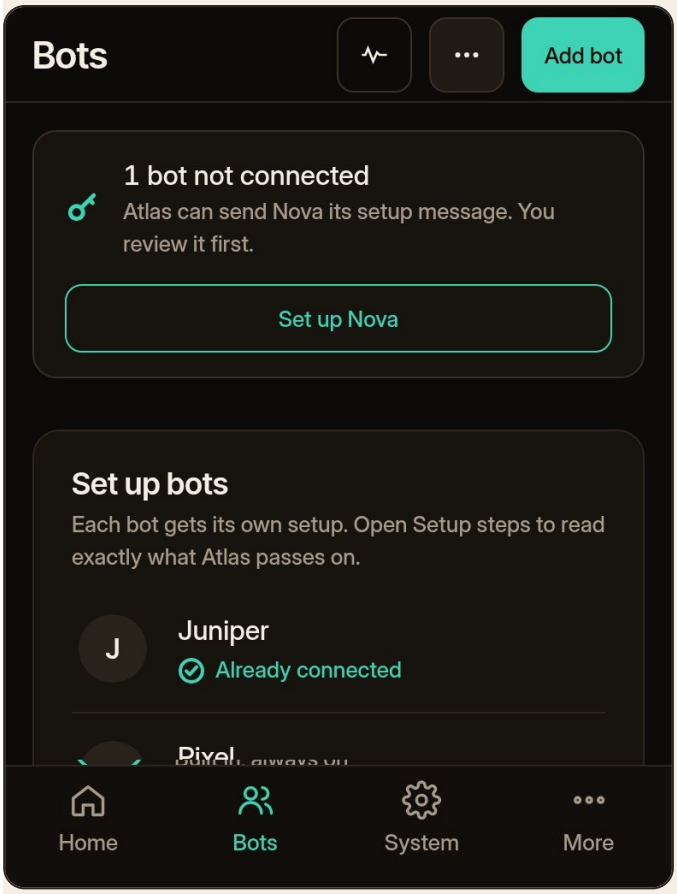

Bots on a phone.

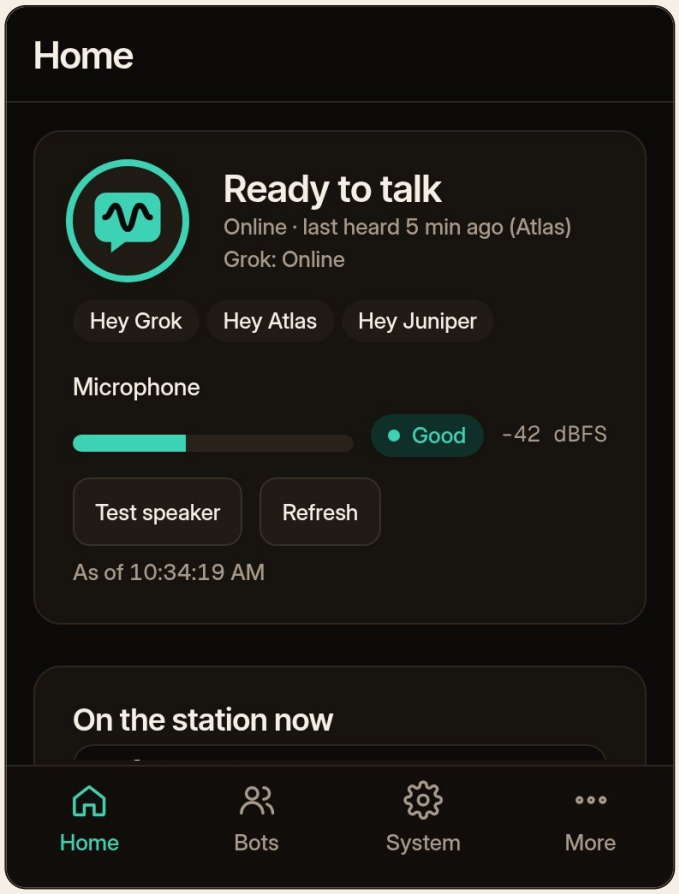

Home on a phone.

REFERENCE

Features at a glance

FEATURE	WHERE TO FIND IT	SINCE
Hey Grok, built-in voice assistant	Always on; Bots	—*
Follow-up questions without the wake word	Voice	—*
Ask another bot (“Hey Grok, ask …”)	Voice	**0.2.0**
Kitchen timers (up to eight)	Voice; station screen	**0.3.0**
Screen dimming (schedule, sunset, light sensor)	Display	**0.4.0**
Ready-to-boot card image	README	**0.5.0**
Import your team list from your main bot	Voice; Bots	**0.6.0**
Cards on the screen (recipe, sports, calendar, home)	Station screen	**0.7.0**
Key on your home computer (faster replies)	Bots › Add bot	**0.8.2**
Main bot (gold star)	Bots › Configure › More	**0.8.11**
View update log	Updates	**0.8.12**
Setup hotspot for Wi-Fi	Station screen	**0.9.2**
Wake words trained on the station	Bots › Train wake word	**0.10.0**
“Connect me with …” a bot	Voice	**0.10.3**
Bot picture and online ring	Bots	**0.12.7**
Waiting tone	Audio	**0.12.7**
“Goodbye” ends a conversation	Voice	**0.12.0**
Automatic microphone reset	Audio	**0.12.2**
Bot status and tiles in the bottom of the screen	Station screen	**0.12.16**
WLED lights and Voice home control	Integrations	**0.13.0**
Homebridge devices	Integrations	**0.13.1**
Bots can check calendar, reminders, weather	Voice	**0.13.1**
Grok status icon and Grok line	Station screen; Home	**0.13.2**
Train a wake word by voice	Voice; station tile	**0.13.5**
Ask for the password again (3 choices)	System › Password and security	**0.13.8**
Team setup from your main bot	Bots	**0.13.9**
Voice tip button	Bots header	**0.13.9**
Bot updates on the clock screen; pause by voice	Station screen; Voice	**0.13.10**
Set up each bot from its own row	Bots › Set up	**0.13.11**
Updates switch for each bot	Bots	**0.13.11**
“Set up my wake word for …”	Voice	**0.13.11**
Privacy filter for replies	Privacy	—*
Sign out	Bottom left; More on phones	—*

* Not dated in the release notes. To be filled in for the final version.

RELEASE NOTES

What's new in 0.13

VERSION	WHAT CHANGED FOR YOU
0.13.16 **Nov 5, 2026**	**Set up through your main bot.** Pressing **Set up** on a bot's row sends the setup request through your main bot; the panel and the waiting line name that main bot. Wording is clearer, and the waiting line wraps to two lines instead of cutting off. Failed and expired rows say "Send the request again, or enter the details yourself." A row keeps its setup state when the list refreshes.
0.13.15 **Nov 1, 2026**	**Fixed bot-row columns.** Every row lines up the same way, so a long wake word no longer pushes Configure sideways; Configure stays last on the right. The caption under the Updates switch is gone; the switch shows on or off by itself. **Sent setup rows.** After you send, the row says the request was sent and shows the webhook details filling in when the bot replies, with **Send request again** and **Enter details myself**.
0.13.14 **Nov 1, 2026**	**Updates switch.** The switch and the word "Updates" are one button, so a tap anywhere on either turns a bot's updates on or off. Rows keep the same height whether updates are on or off, and Configure stays in the same place. A row with updates off says "Updates off". While a change saves you'll see "Saving…", and if it can't save the switch goes back with "⚠ Couldn't save. Try again."
0.13.13 **Oct 31, 2026**	Bot update switches, automatic avatars and the voice list now save properly on the station; before, a change could quietly fail to stick. If deleting a wake word fails, the admin page now says so and tells you the word is still saved.
0.13.12 **Oct 30, 2026**	On a phone, **Paste values**, **Resend** and **Remove** now sit side by side on one line. Buttons show a clear outline again when you move to them with the keyboard.
0.13.11 **Oct 30, 2026**	**Set up each bot from its own row.** The separate Set up bots section and the "not connected" callout are gone, and so is Configure all. A bot that isn't connected has a **Set up** button; it opens a panel showing exactly what will be sent, and nothing is sent until you press **Send setup**. After you send, the row shows **Paste values**, **Resend** and **Remove**. **Updates switch.** Each connected bot has an Updates switch with a line saying what it posts. Every bot starts off. **Wake word by voice.** Say "Hey Grok, set up my wake word for <bot>" to start training. **On a phone,** rows stack and the values you can edit sit in a Details list. **After installing,** press Update on each bot.
0.13.10 **Oct 30, 2026**	**Bot updates on the clock screen.** Three tiles show at a time ("Updates · 1–3 of 4") and rotate every 20 seconds. Anything that needs you is pinned first. Updates are hidden at night and never read aloud. Every bot starts off; turn it on with the Updates switch on Bots (added in 0.13.11). **Pause by voice.** Say "Hey Grok, pause updates" or "resume updates". A pause ends on its own after 10 minutes. If the station can't be reached, you'll hear "I couldn't reach the station, so updates aren't paused." (or "…so updates are still paused.") **Recipe tile.** A step's timer is offered once per recipe, and a "yes" said while the offer is still being spoken is ignored. A plain timer you set during a step becomes the step timer ("Step 3 · 10 min"). The dish name shows exactly as written. If three timers ring together, each keeps its name, and "stop" stops them all. **After installing,** press Update on each bot.
0.13.9	Set up bots list for your team (replaced by per-row setup in 0.13.11). Voice tip button in the Bots header. Training tile has no buttons and stops after 3 seconds of quiet. System page grouped into sections with a Danger zone. A stuck microphone resets itself after about a minute. "Not while I'm signed in" keeps you signed in until you sign out. Back buttons on the WLED and Homebridge pages. Restarting the station from the admin page keeps you signed in. If a bot's picture can't load, a letter stand-in shows instead of a blank space.
0.13.8	"Train my wake word for …" starts training by itself with a 3-2-1 countdown and five clips. Update all moves into a callout; Refresh avatars and Revoke all bots move to the ⋯ menu. Three choices for asking the password again.

0.13.7	Homebridge address shows under Connected. Adding Homebridge devices is shorter, with a Voice names step only when a name clashes. Security updates.
0.13.6	Two safety fixes, nothing new on screen.
0.13.5	Train a bot's wake word from the station or the Bots page. Clearer warnings when a light's name sounds like another. Homebridge device groups collapse.
0.13.4	Fewer false microphone warnings. Homebridge with many accessories works.
0.13.3	A clear screen when Homebridge needs accessory control turned on.
0.13.2	New Grok status icon on the station and a Grok line on Home.
0.13.1	Homebridge devices by voice. One Voice home control switch for everything. Bots can look up calendar, reminders and weather.
0.13.0	New Integrations page with WLED lights. A bot's status moves into its picture's tooltip. Blocked answers end with a short message.

After each station update, press **Update** on each bot from the Bots page.

HELP

Troubleshooting basics

IF THIS HAPPENS	TRY THIS
The admin page won't open	Use the number address shown on the station instead of the `.local` one. If you're on a VPN or another network, the README explains how to reach it over SSH.
The browser warns about the certificate	Expected: the station makes its own. Compare the fingerprint under System › Password and security, then continue.
Forgot the admin password	Use **Forgot your password?** on the sign-in page.
The station doesn't answer "Hey Grok"	Check Home: "Ready to talk" and the microphone level. Check the Grok icon; amber means the internet or Grok can't be reached. Try Audio › Play test sound.
The mic icon shows a problem	Leave the microphone reset switches on in Audio, or use the Reset button there.
A bot doesn't reply	Its ring is red: hover its picture for the reason. Make sure the home computer that sends its replies is on.
A bot shows "Helper out of date"	Press **Update** on that bot's row.
The screen stays bright at night	Display › Brightness: choose Schedule, Sunrise and sunset, or a light sensor. Sunset needs a location on Time and location.
A light command does nothing	Turn on Voice home control on Integrations, then Test the light.
An update failed	Updates › View update log shows why. The station keeps running the old version.