


COOLANT TEMPERATURE SWITCH 17A-3-2


Coolant temperature sensor 0 0.0 0.0

SEALANTS


	Specified sealant	Quantity
Coolant temperature sensor threaded part	3M NUT Locking Part No. 4171 or equivalent	As required
Coolant temperature switch threaded part	3M ATD Part No. 8660 or equivalent	As required

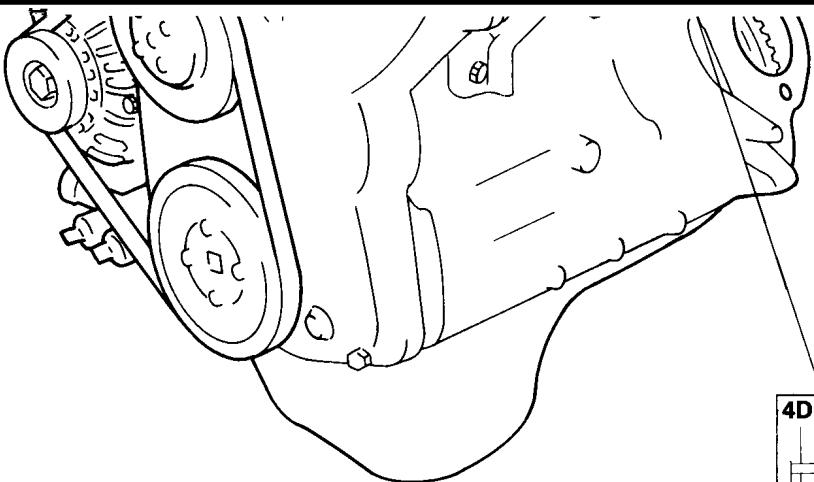

4D68 with turbocharger

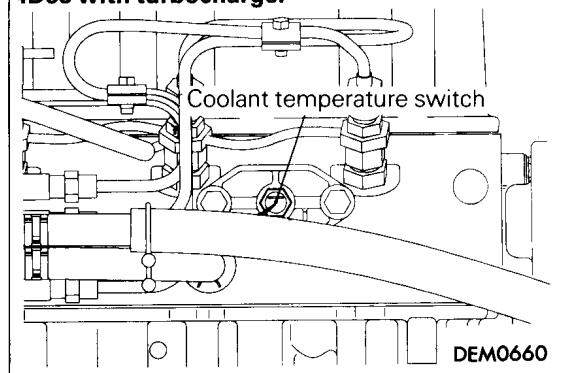

DEM0610

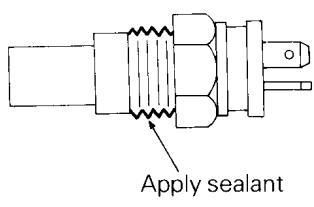

1EM0016

- (3) If the resistance deviates greatly from the standard value, replace the coolant temperature sensor.
- (4) Apply sealant to threaded portion.

Specified sealant:

3M NUT Locking No. 4171 or equivalent

- (5) Install the coolant temperature sensor and tighten it to specified torque.



DEM0001