

Screen position, proportion and layout


Screen placement connects the viewer, actual device and wall. Review sight lines, reflections and product information before fixing the elevation and setting-out references.

What you will accomplish

- Start with seating and sight lines
- Use actual device dimensions
- Set out the elevation from a common datum

Start with seating and sight lines


Map primary and side seats and approximate eye positions in actual postures. Use a section for the seat/screen relationship and a plan for off-axis positions. Review window and lighting reflections during relevant use. Compare alternatives with a mock-up or simulation, device guidance and user needs rather than prescribing one universal height or viewing distance.

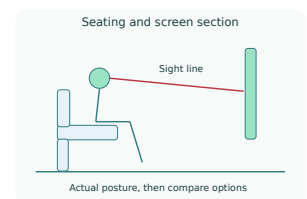

Position is justified through actual seats, sight lines and reflections.

Use actual device dimensions


The marketed inch size usually describes screen diagonal, not external width or fixing locations. Record the exact model's width, height, depth, mass, stand configuration, mounting pattern, connections and product requirements. Draw its actual installed envelope and cite the data revision/source. Any substitute model reopens envelope, support and service coordination.

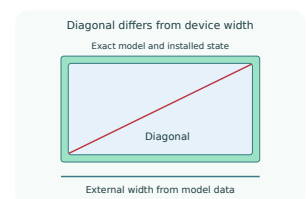

A diagonal label is not the external device width.

Set out the elevation from a common datum

Use finished floor as a vertical datum and define a horizontal centerline. Distinguish device center from wall center and bracket fixing points. Exercise only: a 700 mm high envelope centered at an assumed 1100 mm has a 350 mm half-height, so its bottom is $1100 - 350 = 750$ mm and top $1100 + 350 = 1450$ mm. These are envelope coordinates, not viewing-height advice or bracket drilling locations.

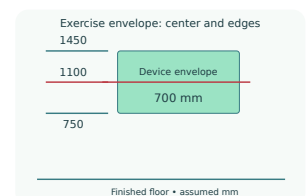

750/1450 mm locate the exercise envelope, not bracket holes.

Worked case and decision

The exercise elevation mistakenly labels the bottom at 1100 mm instead of the center, putting the top at 1800 mm for a 700 mm envelope. Correct the center/bottom/top to 1100/750/1450 mm, then review placement with users and actual product data.

Decision: correct the datum labels before placement approval.

Check understanding

A 700 mm envelope is centered at 1100 mm. Where is its bottom?

- 750 mm
- 400 mm
- 1100 mm

Correct: 750 mm. Subtract half the height: $1100 - 350 = 750$ mm.

Lesson questions

Does the screen center directly locate bracket holes?

No. Use the actual device/bracket mounting pattern and offsets.

Practice

Submit a seating plan, sight-line section, envelope elevation, device data card, exercise calculation and placement rationale.

Viewers and sight lines

Device and data source

Elevation and calculation

Review your work against the criteria. Saving it does not constitute technical project approval.

- Exact model identified
- Center/bottom distinguished
- 750/1450 mm stated as exercise values