

## Divide a wardrobe into buildable modules


Three bays can be built as a shared carcass or as three independent modules. The choice changes side-panel count, clear storage widths, assembly and transport, even when the front elevation looks similar.

### What you will accomplish

- Distinguish shared and independent carcasses
- Calculate clear width under stated assumptions
- Connect drawings to the parts list

### Distinguish shared and independent carcasses


A three-bay shared carcass may use two outer sides and two dividers. Three independent two-sided modules use six side panels. Compare transport, assembly, support and serviceability, not clear width alone. Show doubled sides at module interfaces in the section and parts list; a single elevation line must not hide their thickness.

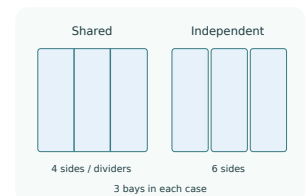

Three bays do not imply the same panel count in both systems.

### Calculate clear width under stated assumptions


Exercise assumptions: three independent modules, each 600 mm externally, with two 18 mm sides. Clear width is  $600 - 18 - 18 = 564$  mm. Their combined external width is 1800 mm before site gaps or fillers. The 564 mm is not automatically a shelf cutting size; shelf interfaces and the connection system determine that dimension.

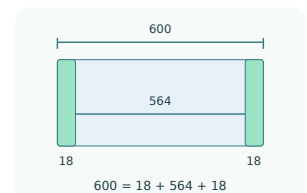

Exercise:  $600 = 18 + 564 + 18$  mm.

### Connect drawings to the parts list

Assign unit codes W01, W02 and W03 and part codes shared by the elevation, section and list. The elevation shows allocation; the section explains depth, back and assembly relationships; a detail explains the joint. Record quantity, orientation, exposed edges and dimensional reference for each part. Check transport and assembly before release, avoiding duplicate shared dividers or omitted doubled sides.

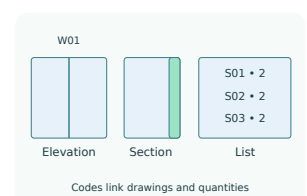

Use the same code in elevation, section and parts list.

## Worked case and decision

The drawing shows three independent modules with two sides each, but the list contains only four sides. Correct it to six sides for this design, or explicitly approve a system change and update all documents. Do not combine a shared-carass count with independent-module drawings.

Decision: the exercise uses six sides and 564 mm clear width per module.

## Check understanding

**What is the clear width of a 600 mm module with two 18 mm sides?**

- 564 mm
- 582 mm
- 600 mm

Correct: 564 mm.  $600 - 18 - 18 = 564$  mm under the assumptions; shelf size still needs its interface detail.

## Lesson questions

**Is an elevation alone enough for a parts list?**

No. Sections and details establish depth, back construction, interfaces and concealed parts.

## Practice

Draw the three-module elevation and section, calculate clear width and list coded side panels.

### Elevation and section

---

---

---

---

---

### Clear-width calculation

---

---

---

---

---

### Side codes and quantities

---

---

---

---

---

**Review your work against the criteria. Saving it does not constitute technical project approval.**

- Six sides for independent modules
- 564 mm under the assumptions
- Clear width distinct from shelf cut size