CALIBER MINING AND LOGISTICS LIMITED · PULSE-II · UTILISATION & EXCEPTIONS

# Fleet Utilisation Report

Operating manual

For site in-charges, MIS staff and reviewers · Matches the system as of 9 November 2026 · The picture uses sample data, not real records

## 1. What this report shows

Shows, for each door number, how many log books were saved in the chosen dates and the trips, KM, running hours and shift hours on them, with a utilisation percentage. It is built only from saved VLB and ELB log books. A site in-charge or MIS clerk uses it to see how much of the recorded shift time each vehicle or equipment actually ran.


> **One row.** One row is one door number at one site, of one asset type (vehicle or equipment), with all its saved log books in the chosen dates added together.

## 2. Open the report and choose what to see

In the left menu open **Reports** → **Utilisation & Exceptions** → **Fleet Utilisation Report**. Then set the selectors described below.

| Selector or button | What it does |
|---|---|
| **From** | First book date to include. It opens on today's date (India time). Dates before 1 November 2026 are not accepted. |
| **To** | Last book date to include. It cannot be earlier than From, and From to To can cover at most 366 days. If the dates are not valid the screen shows "Choose a valid date range of at most 366 days." and no report is shown. Keep in mind: Actions → Reset table also puts From and To back to today. |
| **Site** | Keeps only log books of that site. "All" means every site assigned to your login. Once a site is chosen, the Shift, Vehicle / equipment, Driver / operator and Work order lists show only that site's entries. |
| **Shift** | Keeps only log books saved against that shift. |
| **Vehicle / equipment** | Keeps only log books of that door number. |
| **Driver / operator** | Keeps only log books of that person. The list holds only people found on log books or scan cards in the chosen dates. |
| **Work order** | Keeps only log books saved against that work order. |

## 3. What is on the screen

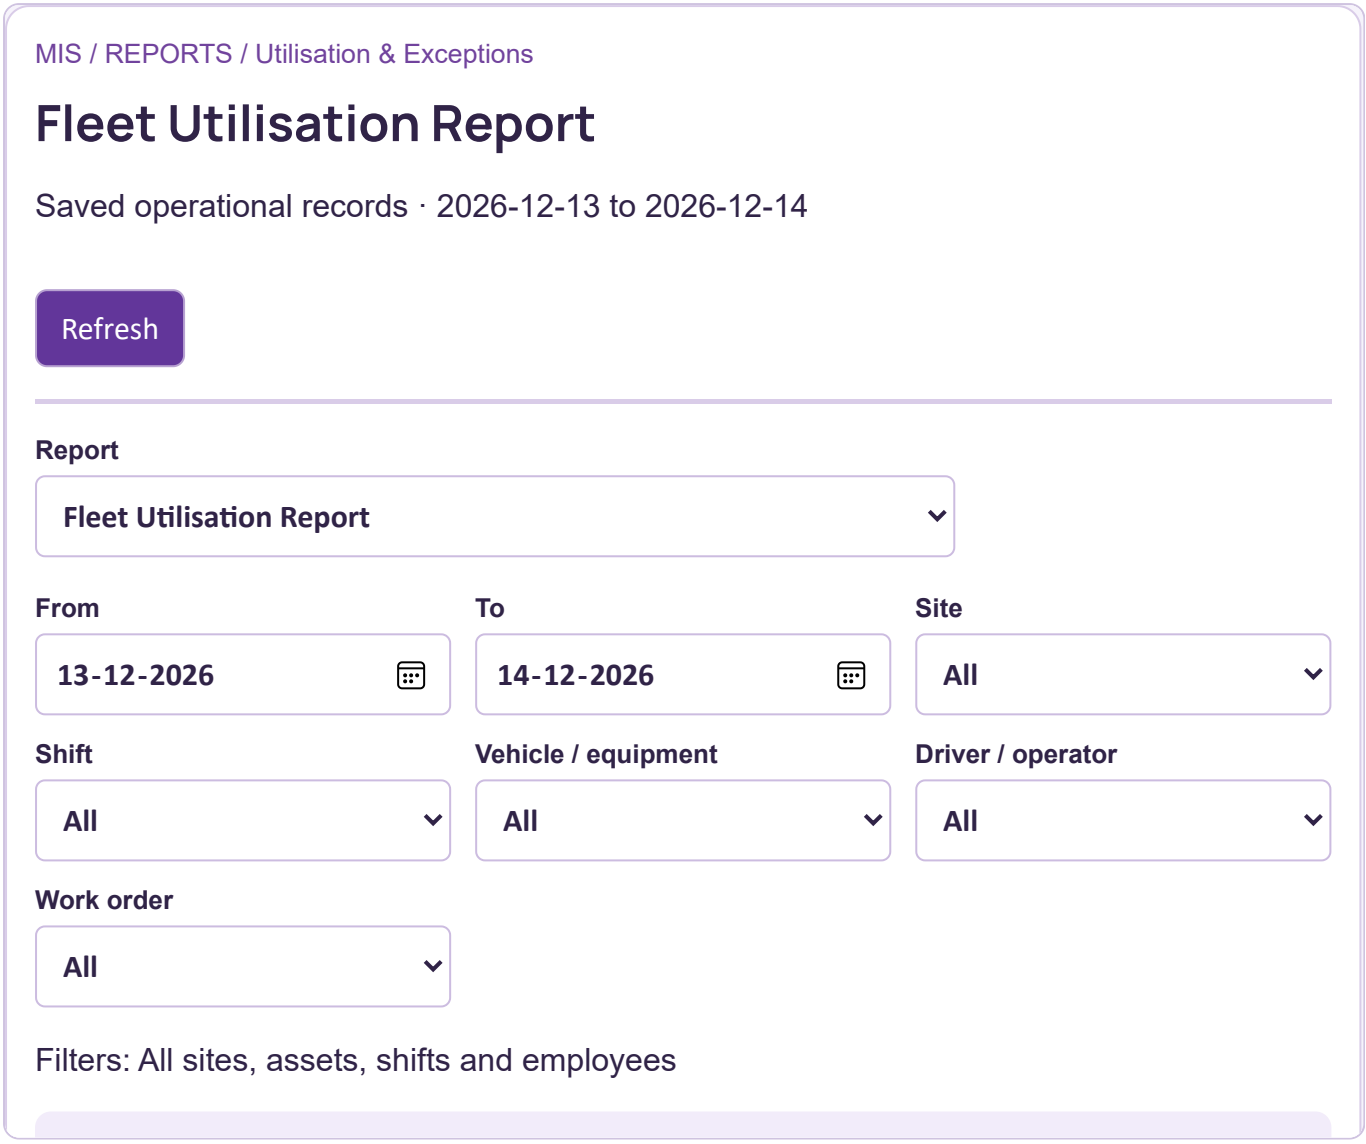


**Picture 1.** The report screen: selectors, totals and the table. *Sample data.*

| On the screen | What it shows |
|---|---|
| **Report** | Picker at the top of the screen. It lists all reports under their groups; choosing a name opens that report. |
| **Refresh** | Loads the saved records for the chosen dates again. Press it after new log books have been saved. Changing Site, Shift or the other selectors does not need Refresh. |
| **Filters:** | One line showing what is selected in Site, Shift, Vehicle / equipment, Driver / operator and Work order, written as "site: …", "shift: …", "asset: …", "employee: …" and "workOrder: …". With nothing selected it reads "All sites, assets, shifts and employees". Site and Work order appear by name; Shift, Vehicle / equipment and Driver / operator appear as the system's internal number. |
| **logbooks** | Number of saved VLB and ELB log books that match the dates and selectors. |
| **assets** | Number of different doors on those log books. |

| | |
|---|---|
| **trips** | Total trips on those log books. |
| **report rows** | Number of rows in the table below. |
| **Utilisation = recorded running hours ÷ scheduled hours of recorded logbooks. Duplicate entries can inflate totals; missing logbooks are not counted as zero.** | Notice shown above the table on this report. It states how Utilisation % is worked out and its two limits. |

## 4. The columns

| Column | Meaning |
|---|---|
| **Door NO** | Door number saved on the log books. Shows "Unassigned" if the log book has no door number. |
| **Site** | Site saved on the log books. A door with log books at two sites gets one row for each site. |
| **Asset type** | "vehicle" for VLB log books and "equipment" for ELB log books. |
| **Caliber ID** | Employee IDs of every driver or operator on these log books, each one once, separated by commas. "ID not recorded" appears where a log book has a name but no ID. |
| **Employee** | Names of the same people, in the same order as Caliber ID. "Name not recorded" appears where a log book has an ID but no name. |
| **Logbooks** | Number of saved log books added into this row. |
| **Assets** | Number of different assets in the row. It is normally 1. |
| **Trips** | Total trips on these log books. ELB log books have no trip rows, so equipment rows show 0. |
| **KM** | Total KM on the VLB log books: closing KMR minus opening KMR for each log book. Where an actual distance was saved for a replaced KMR meter, that distance is used. A log book without KMR adds nothing. Equipment rows show 0. |
| **Running HRS** | Total running hours: closing HMR minus opening HMR for each log book, added up. Shown as "—" if even one log book in the row has no HMR reading. |
| **Scheduled HRS** | Total of the shift hours saved on each log book. Shown as "—" if any log book has no shift hours. |
| **Utilisation %** | Running HRS ÷ Scheduled HRS × 100. Shown as "—" when Running HRS or Scheduled HRS is not available. |

## 5. Keep in mind

- Only saved VLB and ELB log books of sites assigned to your login are read. LMV log books, deleted log books and dates before 1 November 2026 are not included.

- A door with no saved log book in the chosen dates is not listed, and a shift with no log book is not counted as zero hours. The percentage describes only the shifts that were recorded.
- If the same door and shift has two log books, their hours and trips are added twice. Check Missing / Duplicate Logbooks for the same dates.
- Utilisation % goes above 100 when the recorded running hours are more than the shift hours. Check those log books in Meter Reading Exceptions.
- One log book without an HMR reading makes Running HRS and Utilisation % show "—" for the whole row.
- Trips on a VLB log book are counted from trip rows that have a loading time; a row with only an unloading time is not counted. On cards saved without times every trip row is counted.

## 6. Download, print and search

- Tables on this page have a **Generate** button: **Download as PDF**, **Download as Excel** or **Smart Print**. The file contains the whole table, not only the rows visible on screen.
- Type in **Search this report** to find a door number, driver or card inside a table.
- Press a column heading to sort by that column.
- If the page looks old after an update, press **Ctrl + F5** once.

## 7. Review checklist

| Step | Do this |
|---|---|
| **1** | Set From and To, then choose the Site. |
| **2** | Read the totals line and check that logbooks and assets are what you expect for the site and dates. |
| **3** | Click the Utilisation % heading to sort, and note rows showing "—", very low values, or values above 100. |
| **4** | For a row showing "—", open Meter Reading Exceptions for the same dates and find the log book marked "Missing HMR". |
| **5** | Compare Logbooks with the number of shifts the door could have worked in the dates. If it is higher, check Missing / Duplicate Logbooks. |

> **This manual shows how to read and verify the report.** What action to take on its findings is as instructed by management.

## 8. Common questions

| Question | Answer |
|---|---|
| **Why is Utilisation % shown as "—"?** | At least one log book in that row has no opening or closing HMR, or no shift hours, so the total cannot be worked out. |
| **Why is a door from my site not in the list?** | The report lists only doors that have a saved log book in the chosen dates and selectors. Check the dates and Site, then check Missing / Duplicate Logbooks. |
| **Why are there several names in the Employee column?** | Every driver or operator who has a log book on that door in the chosen dates is listed once. |

| | |
|---|---|
| **Can Utilisation % be more than 100?** | Yes. It happens when the HMR difference on the log books is more than the shift hours saved on them. |