
Signal Path for U-matic Transfer

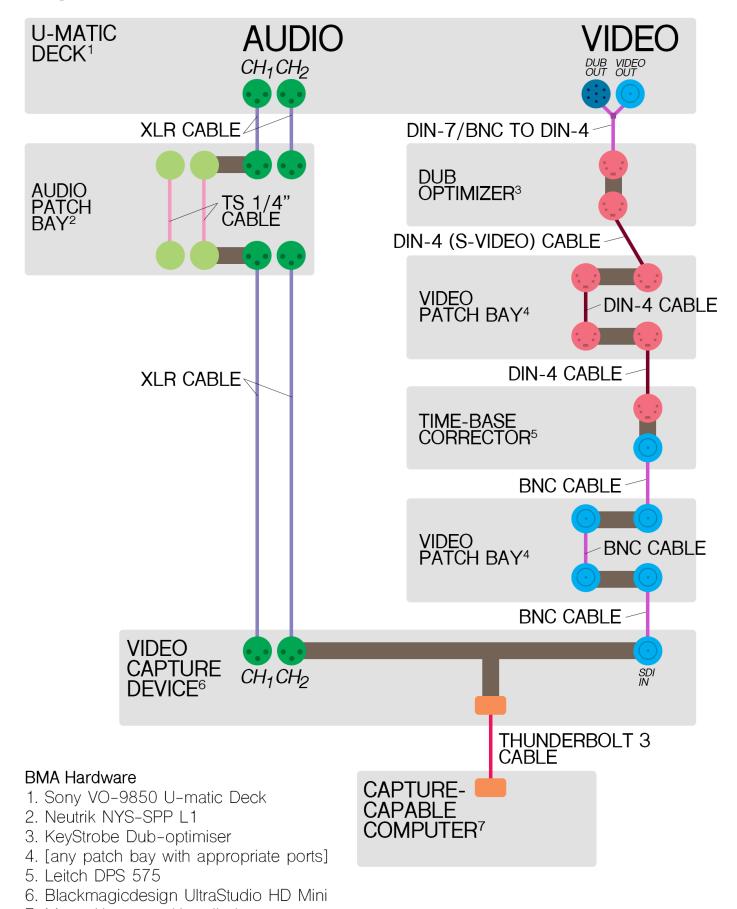

7. Mac with *vrecord* installed

Note: Patch bays are used at BMA to increase efficiency when moving between transfer workflows, but are not necessary for this setup.