IA-32 Intel® Architecture Software Developer's Manual

Volume 2B: Instruction Set Reference, N-Z

NOTE: The *IA-32 Intel Architecture Software Developer's Manual* consists of four volumes: *Basic Architecture*, Order Number 253665; *Instruction Set Reference A-M*, Order Number 253666; *Instruction Set Reference N-Z*, Order Number 253667; and the *System Programming Guide*, Order Number 253668. Refer to all four volumes when evaluating your design needs.

Order Number: 253667-016

June 2005

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER, AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. INTEL PRODUCTS ARE NOT INTENDED FOR USE IN MEDICAL, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS.

Intel may make changes to specifications and product descriptions at any time, without notice.

Developers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Improper use of reserved or undefined features or instructions may cause unpredictable behavior or failure in developer's software code when running on an Intel processor. Intel reserves these features or instructions for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from their unauthorized use

The Intel[®] IA-32 architecture processors (e.g., Pentium[®] 4 and Pentium III processors) may contain design defects or errors known as errata. Current characterized errata are available on request.

Hyper-Threading Technology requires a computer system with an Intel[®] Pentium[®] 4 processor supporting Hyper-Threading Technology and an HT Technology enabled chipset, BIOS and operating system. Performance will vary depending on the specific hardware and software you use. See http://www.intel.com/info/hyperthreading/ for more information including details on which processors support HT Technology.

Intel, Intel386, Intel486, Pentium, Intel Xeon, Intel NetBurst, Intel SpeedStep, OverDrive, MMX, Celeron, and Itanium are trademarks or registered trademarks of Intel Corporation and its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an ordering number and are referenced in this document, or other Intel literature, may be obtained from:

Intel Corporation P.O. Box 5937 Denver, CO 80217-9808

or call 1-800-548-4725 or visit Intel's website at http://www.intel.com

Copyright © 1997 - 2005 Intel Corporation

Instruction Set Reference, N-Z



CHAPTER 4 INSTRUCTION SET REFERENCE, N-Z

4.1 INSTRUCTIONS (N-Z)

Chapter 4 continues the alphabetical discussion of IA-32 instructions (N-Z). To access information on the remainder of the IA-32 instructions (A-M) see Chapter 4, *IA-32 Intel Architecture Software Developer's Manual, Volume 2A.*



NEG—Two's Complement Negation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F6/3	NEG r/m8	Valid	Valid	Two's complement negate r/m8.
REX + F6 /3	NEG r/m8*	Valid	N.E.	Two's complement negate r/m8.
F7 /3	NEG r/m16	Valid	Valid	Two's complement negate r/m16.
F7 /3	NEG r/m32	Valid	Valid	Two's complement negate r/m32.
REX.W + F7 /3	NEG <i>r/m64</i>	Valid	N.E.	Two's complement negate r/m64.

NOTES:

Description

Replaces the value of operand (the destination operand) with its two's complement. (This operation is equivalent to subtracting the operand from 0.) The destination operand is located in a general-purpose register or a memory location.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

Operation

```
IF DEST = 0

THEN CF \leftarrow 0;

ELSE CF \leftarrow 1;

FI;

DEST \leftarrow [-(DEST)]
```

Flags Affected

The CF flag set to 0 if the source operand is 0; otherwise it is set to 1. The OF, SF, ZF, AF, and PF flags are set according to the result.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

^t In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.

intel

INSTRUCTION SET REFERENCE, N-Z

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is made

while the current privilege level is 3.



NOP—No Operation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
90	NOP	Valid	Valid	No operation.

Description

Performs no operation. This instruction is a one-byte instruction that takes up space in the instruction stream but does not affect the machine context, except the EIP register.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

The NOP instruction is an alias mnemonic for the XCHG (E)AX, (E)AX instruction.

Flags Affected

None.

Exceptions (All Operating Modes)

None.



NOT—One's Complement Negation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F6 /2	NOT r/m8	Valid	Valid	Reverse each bit of r/m8.
REX + F6 /2	NOT r/m8*	Valid	N.E.	Reverse each bit of r/m8.
F7 /2	NOT <i>r/m16</i>	Valid	Valid	Reverse each bit of r/m16.
F7 /2	NOT <i>r/m3</i> 2	Valid	Valid	Reverse each bit of r/m32.
REX.W + F7 /2	NOT r/m64	Valid	N.E.	Reverse each bit of r/m64.

NOTES:

Description

Performs a bitwise NOT operation (each 1 is set to 0, and each 0 is set to 1) on the destination operand and stores the result in the destination operand location. The destination operand can be a register or a memory location.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

Operation

DEST ← NOT DEST;

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the destination operand points to a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

nade.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is made

while the current privilege level is 3.



OR—Logical Inclusive OR

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
· ·			•	•
0C ib	OR AL, i <i>mm</i> 8	Valid	Valid	AL OR imm8.
0D iw	OR AX, imm16	Valid	Valid	AX OR imm16.
0D id	OR EAX, imm32	Valid	Valid	EAX OR imm32.
REX.W + 0D id	OR RAX, i <i>mm32</i>	Valid	N.E.	RAX OR imm32 (sign- extended).
80 /1 <i>ib</i>	OR r/m8, imm8	Valid	Valid	r/m8 OR imm8.
REX + 80 /1 ib	OR r/m8*, imm8	Valid	N.E.	r/m8 OR imm8.
81 /1 <i>iw</i>	OR r/m16, imm16	Valid	Valid	r/m16 OR imm16.
81 /1 <i>id</i>	OR r/m32, imm32	Valid	Valid	r/m32 OR imm32.
REX.W + 81 /1 id	OR r/m64, imm32	Valid	N.E.	r/m64 OR imm32 (sign- extended).
83 /1 <i>ib</i>	OR r/m16, imm8	Valid	Valid	r/m16 OR imm8 (sign- extended).
83 /1 <i>ib</i>	OR <i>r/m32, imm8</i>	Valid	Valid	r/m32 OR imm8 (sign- extended).
REX.W + 83 /1 ib	OR r/m64, imm8	Valid	N.E.	r/m64 OR imm8 (sign- extended).
08 /r	OR <i>r/m8, r8</i>	Valid	Valid	r/m8 OR r8.
REX + 08 /r	OR r/m8*, r8*	Valid	N.E.	r/m8 OR r8.
09 /r	OR r/m16, r16	Valid	Valid	r/m16 OR r16.
09 /r	OR r/m32, r32	Valid	Valid	r/m32 OR r32.
REX.W + 09 /r	OR r/m64, r64	Valid	N.E.	r/m64 OR r64.
0A /r	OR r8, r/m8	Valid	Valid	r8 OR r/m8.
REX + 0A /r	OR r8*, r/m8*	Valid	N.E.	r8 OR r/m8.
0B /r	OR r16, r/m16	Valid	Valid	r16 OR r/m16.
0B /r	OR r32, r/m32	Valid	Valid	r32 OR r/m32.
REX.W + 0B /r	OR <i>r64, r/m64</i>	Valid	N.E.	r64 OR r/m64.

NOTES:

Description

Performs a bitwise inclusive OR operation between the destination (first) and source (second) operands and stores the result in the destination operand location. The source operand can be an immediate, a register, or a memory location; the destination operand can be a register or a memory location. (However, two memory operands cannot be used in one instruction.) Each bit of the result of the OR instruction is set to 0 if both corresponding bits of the first and second operands are 0; otherwise, each bit is set to 1.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

Operation

DEST ← DEST OR SRC:

Flags Affected

The OF and CF flags are cleared; the SF, ZF, and PF flags are set according to the result. The state of the AF flag is undefined.

Protected Mode Exceptions

#GP(0) If the destination operand points to a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.



Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



ORPD—Bitwise Logical OR of Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 56 /r	ORPD xmm1, xmm2/m128	Valid	Valid	Bitwise OR of xmm2/m128 and xmm1.

Description

Performs a bitwise logical OR of the two packed double-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[127:0] \leftarrow DEST[127:0] BitwiseOR SRC[127:0];

Intel C/C++ Compiler Intrinsic Equivalent

ORPD __m128d _mm_or_pd(__m128d a, __m128d b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



ORPS—Bitwise Logical OR of Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 56 /r	ORPS xmm1, xmm2/m128	Valid	Valid	Bitwise OR of xmm2/m128 and xmm1.

Description

Performs a bitwise logical OR of the four packed single-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[127:0] \leftarrow DEST[127:0] BitwiseOR SRC[127:0];

Intel C/C++ Compiler Intrinsic Equivalent

ORPS __m128 _mm_or_ps(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



OUT—Output to Port

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
E6 ib	OUT imm8, AL	Valid	Valid	Output byte in AL to I/O port address imm8.
E7 ib	OUT imm8, AX	Valid	Valid	Output word in AX to I/O port address imm8.
E7 ib	OUT imm8, EAX	Valid	Valid	Output doubleword in EAX to I/O port address <i>imm8</i> .
EE	OUT DX, AL	Valid	Valid	Output byte in AL to I/O port address in DX.
EF	OUT DX, AX	Valid	Valid	Output word in AX to I/O port address in DX.
EF	OUT DX, EAX	Valid	Valid	Output doubleword in EAX to I/O port address in DX.

NOTES:

Description

Copies the value from the second operand (source operand) to the I/O port specified with the destination operand (first operand). The source operand can be register AL, AX, or EAX, depending on the size of the port being accessed (8, 16, or 32 bits, respectively); the destination operand can be a byte-immediate or the DX register. Using a byte immediate allows I/O port addresses 0 to 255 to be accessed; using the DX register as a source operand allows I/O ports from 0 to 65,535 to be accessed.

The size of the I/O port being accessed is determined by the opcode for an 8-bit I/O port or by the operand-size attribute of the instruction for a 16- or 32-bit I/O port.

At the machine code level, I/O instructions are shorter when accessing 8-bit I/O ports. Here, the upper eight bits of the port address will be 0.

This instruction is only useful for accessing I/O ports located in the processor's I/O address space. See Chapter 13, *Input/Output*, in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*, for more information on accessing I/O ports in the I/O address space.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

^{*} See IA-32 Architecture Compatibility section below.



IA-32 Architecture Compatibility

After executing an OUT instruction, the Pentium processor insures that the EWBE# pin has been sampled active before it begins to execute the next instruction. (Note that the instruction can be prefetched if EWBE# is not active, but it will not be executed until the EWBE# pin is sampled active.) Only the Pentium processor family has the EWBE# pin; the other IA-32 processors do not.

Operation

```
IF ((PE = 1) and ((CPL > IOPL) or (VM = 1)))

THEN (* Protected mode with CPL > IOPL or virtual-8086 mode *)

IF (Any I/O Permission Bit for I/O port being accessed = 1)

THEN (* I/O operation is not allowed *)

#GP(0);

ELSE (* I/O operation is allowed *)

DEST ← SRC; (* Writes to selected I/O port *)

FI;

ELSE (Real Mode or Protected Mode with CPL ≤ IOPL *)

DEST ← SRC; (* Writes to selected I/O port *)

FI;
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0)

If the CPL is greater than (has less privilege) the I/O privilege level (IOPL) and any of the corresponding I/O permission bits in TSS for the I/O port being accessed is 1.

Real-Address Mode Exceptions

None.

Virtual-8086 Mode Exceptions

#GP(0)

If any of the I/O permission bits in the TSS for the I/O port being accessed is 1

Compatibility Mode Exceptions

Same as protected mode exceptions.

64-Bit Mode Exceptions

Same as protected mode exceptions.



OUTS/OUTSB/OUTSW/OUTSD—Output String to Port

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
6E	OUTS DX, m8	Valid	Valid	Output byte from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTS DX, m16	Valid	Valid	Output word from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTS DX, <i>m3</i> 2	Valid	Valid	Output doubleword from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6E	OUTSB	Valid	Valid	Output byte from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTSW	Valid	Valid	Output word from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.
6F	OUTSD	Valid	Valid	Output doubleword from memory location specified in DS:(E)SI or RSI to I/O port specified in DX**.

NOTES:

- * See IA-32 Architecture Compatibility section below.
- ** In 64-bit mode, only 64-bit (RSI) and 32-bit (ESI) address sizes are supported. In non-64-bit mode, only 32-bit (ESI) and 16-bit (SI) address sizes are supported.

Description

Copies data from the source operand (second operand) to the I/O port specified with the destination operand (first operand). The source operand is a memory location, the address of which is read from either the DS:SI, DS:ESI or the RSI registers (depending on the address-size attribute of the instruction, 16, 32 or 64, respectively). (The DS segment may be overridden with a segment override prefix.) The destination operand is an I/O port address (from 0 to 65,535) that is read from the DX register. The size of the I/O port being accessed (that is, the size of the source and destination operands) is determined by the opcode for an 8-bit I/O port or by the operand-size attribute of the instruction for a 16- or 32-bit I/O port.

At the assembly-code level, two forms of this instruction are allowed: the "explicit-operands" form and the "no-operands" form. The explicit-operands form (specified with the OUTS mnemonic) allows the source and destination operands to be specified explicitly. Here, the source operand should be a symbol that indicates the size of the I/O port and the source address, and the destination operand must be DX. This explicit-operands form is provided to allow documentation; however, note that the documentation provided by this form can be misleading. That is, the source operand symbol must specify the correct **type** (size) of the operand (byte, word, or doubleword), but it does not have to specify the correct **location**. The location is always specified by the DS:(E)SI or RSI registers, which must be loaded correctly before the OUTS instruction is executed.

INSTRUCTION SET REFERENCE, N-Z



The no-operands form provides "short forms" of the byte, word, and doubleword versions of the OUTS instructions. Here also DS:(E)SI is assumed to be the source operand and DX is assumed to be the destination operand. The size of the I/O port is specified with the choice of mnemonic: OUTSB (byte), OUTSW (word), or OUTSD (doubleword).

After the byte, word, or doubleword is transferred from the memory location to the I/O port, the SI/ESI/RSI register is incremented or decremented automatically according to the setting of the DF flag in the EFLAGS register. (If the DF flag is 0, the (E)SI register is incremented; if the DF flag is 1, the SI/ESI/RSI register is decremented.) The SI/ESI/RSI register is incremented or decremented by 1 for byte operations, by 2 for word operations, and by 4 for doubleword operations.

The OUTS, OUTSB, OUTSW, and OUTSD instructions can be preceded by the REP prefix for block input of ECX bytes, words, or doublewords. See "REP/REPE/REPZ/REPNE/REPNZ—Repeat String Operation Prefix" in this chapter for a description of the REP prefix. This instruction is only useful for accessing I/O ports located in the processor's I/O address space. See Chapter 13, Input/Output, in the IA-32 Intel Architecture Software Developer's Manual, Volume 1, for more information on accessing I/O ports in the I/O address space.

In 64-bit mode, the default operand size is 32 bits; operand size is not promoted by the use of REX.W. In 64-bit mode, the default address size is 64 bits, and 64-bit address is specified using RSI by default. 32-bit address using ESI is support using the prefix 67H, but 16-bit address is not supported in 64-bit mode.

IA-32 Architecture Compatibility

After executing an OUTS, OUTSB, OUTSW, or OUTSD instruction, the Pentium processor insures that the EWBE# pin has been sampled active before it begins to execute the next instruction. (Note that the instruction can be prefetched if EWBE# is not active, but it will not be executed until the EWBE# pin is sampled active.) Only the Pentium processor family has the EWBE# pin; the other IA-32 processors do not. For the Pentium 4, Intel Xeon, and P6 processor family, upon execution of an OUTS, OUTSB, OUTSW, or OUTSD instruction, the processor will not execute the next instruction until the data phase of the transaction is complete.



Operation

```
IF ((PE = 1) \text{ and } ((CPL > IOPL) \text{ or } (VM = 1)))
   THEN (* Protected mode with CPL > IOPL or virtual-8086 mode *)
        IF (Any I/O Permission Bit for I/O port being accessed = 1)
             THEN (* I/O operation is not allowed *)
                 #GP(0):
             ELSE ( * I/O operation is allowed *)
                 DEST ← SRC; (* Writes to I/O port *)
        FI;
   ELSE (Real Mode or Protected Mode or 64-Bit Mode with CPL ≤ IOPL *)
        DEST ← SRC: (* Writes to I/O port *)
FI;
Byte transfer:
   IF 64-bit mode
        Then
             IF 64-Bit Adress Size
                 THEN
                      IF DF = 0
                           THEN RSI ← RSI RSI + 1;
                           ELSE RSI \leftarrow RSI or -1;
                      FI:
                 ELSE (* 32-Bit Address Size *)
                      IF DF = 0
                           THEN ESI \leftarrow ESI + 1;
                           ELSE
                                    ESI \leftarrow ESI - 1:
                      FI;
             FI:
        ELSE
             IF DF = 0
                 THEN (E)SI \leftarrow (E)SI + 1;
                 ELSE (E)SI \leftarrow (E)SI - 1;
             FI:
   FI:
Word transfer:
   IF 64-bit mode
        Then
             IF 64-Bit Adress Size
                 THEN
                      IF DF = 0
                           THEN RSI \leftarrow RSI RSI + 2;
                           ELSE RSI \leftarrow RSI or -2:
                      FI:
                 ELSE (* 32-Bit Address Size *)
                      IF DF = 0
                           THEN ESI \leftarrow ESI + 2:
                           ELSE
                                    ESI \leftarrow ESI - 2;
```



```
FI;
             FI:
        ELSE
             IF DF = 0
                  THEN (E)SI \leftarrow (E)SI + 2;
                  ELSE (E)SI \leftarrow (E)SI -2;
             FI;
   FI:
Doubleword transfer:
   IF 64-bit mode
        Then
             IF 64-Bit Adress Size
                  THEN
                       IF DF = 0
                            THEN RSI \leftarrow RSI RSI + 4;
                            ELSE RSI \leftarrow RSI or -4;
                       FI:
                  ELSE (* 32-Bit Address Size *)
                       IF DF = 0
                            THEN ESI \leftarrow ESI + 4;
                            ELSE ESI \leftarrow ESI -4;
                       FI;
             FI:
        ELSE
             IF DF = 0
                  THEN
                            (E)SI \leftarrow (E)SI + 4;
                  ELSE (E)SI \leftarrow (E)SI -4;
             FI;
   FI:
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the CPL is greater than (has less privilege) the I/O privilege level (IOPL)

and any of the corresponding I/O permission bits in TSS for the I/O port

being accessed is 1.

If a memory operand effective address is outside the limit of the CS, DS,

ES, FS, or GS segment.

If the segment register contains a NULL segment selector.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If any of the I/O permission bits in the TSS for the I/O port being accessed

is 1.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the CPL is greater than (has less privilege) the I/O privilege level (IOPL)

and any of the corresponding I/O permission bits in TSS for the I/O port

being accessed is 1.

If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 63 /r	PACKSSWB mm1, mm2/m64	Valid	Valid	Converts 4 packed signed word integers from <i>mm1</i> and from <i>mm2/m64</i> into 8 packed signed byte integers in <i>mm1</i> using signed saturation.
66 0F 63 /r	PACKSSWB xmm1, xmm2/m128	Valid	Valid	Converts 8 packed signed word integers from xmm1 and from xxm2/m128 into 16 packed signed byte integers in xxm1 using signed saturation.
0F 6B /r	PACKSSDW mm1, mm2/m64	Valid	Valid	Converts 2 packed signed doubleword integers from <i>mm1</i> and from <i>mm2/m64</i> into 4 packed signed word integers in <i>mm1</i> using signed saturation.
66 0F 6B /r	PACKSSDW xmm1, xmm2/m128	Valid	Valid	Converts 4 packed signed doubleword integers from <i>xmm1</i> and from <i>xxm2/m128</i> into 8 packed signed word integers in <i>xxm1</i> using signed saturation.

Description

Converts packed signed word integers into packed signed byte integers (PACKSSWB) or converts packed signed doubleword integers into packed signed word integers (PACKSSDW), using saturation to handle overflow conditions. See Figure 4-1 for an example of the packing operation.

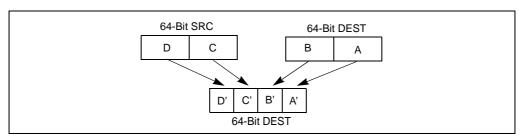


Figure 4-1. Operation of the PACKSSDW Instruction Using 64-bit Operands



The PACKSSWB instruction converts 4 or 8 signed word integers from the destination operand (first operand) and 4 or 8 signed word integers from the source operand (second operand) into 8 or 16 signed byte integers and stores the result in the destination operand. If a signed word integer value is beyond the range of a signed byte integer (that is, greater than 7FH for a positive integer or greater than 80H for a negative integer), the saturated signed byte integer value of 7FH or 80H, respectively, is stored in the destination.

The PACKSSDW instruction packs 2 or 4 signed doublewords from the destination operand (first operand) and 2 or 4 signed doublewords from the source operand (second operand) into 4 or 8 signed words in the destination operand (see Figure 4-1). If a signed doubleword integer value is beyond the range of a signed word (that is, greater than 7FFFH for a positive integer or greater than 8000H for a negative integer), the saturated signed word integer value of 7FFFH or 8000H, respectively, is stored into the destination.

The PACKSSWB and PACKSSDW instructions operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PACKSSWB instruction with 64-bit operands:
  DEST[7:0] ← SaturateSignedWordToSignedByte DEST[15:0];
  DEST[15:8] ← SaturateSignedWordToSignedByte DEST[31:16];
  DEST[23:16] ← SaturateSignedWordToSignedByte DEST[47:32];
  DEST[31:24] ← SaturateSignedWordToSignedByte DEST[63:48];
  DEST[39:32] ← SaturateSignedWordToSignedByte SRC[15:0];
  DEST[47:40] ← SaturateSignedWordToSignedByte SRC[31:16];
  DEST[55:48] ← SaturateSignedWordToSignedByte SRC[47:32];
  DEST[63:56] ← SaturateSignedWordToSignedByte SRC[63:48];
PACKSSDW instruction with 64-bit operands:
  DEST[15:0] ← SaturateSignedDoublewordToSignedWord DEST[31:0]:
  DEST[31:16] ← SaturateSignedDoublewordToSignedWord DEST[63:32];
  DEST[47:32] ← SaturateSignedDoublewordToSignedWord SRC[31:0];
  DEST[63:48] ← SaturateSignedDoublewordToSignedWord SRC[63:32]:
PACKSSWB instruction with 128-bit operands:
  DEST[7:0] \leftarrow SaturateSignedWordToSignedByte (DEST[15:0]);
  DEST[15:8] ← SaturateSignedWordToSignedByte (DEST[31:16]);
  DEST[23:16] ← SaturateSignedWordToSignedByte (DEST[47:32]);
  DEST[31:24] ← SaturateSignedWordToSignedByte (DEST[63:48]);
  DEST[39:32] ← SaturateSignedWordToSignedByte (DEST[79:64]);
  DEST[47:40] ← SaturateSignedWordToSignedByte (DEST[95:80]):
  DEST[55:48] ← SaturateSignedWordToSignedByte (DEST[111:96]);
  DEST[63:56] ← SaturateSignedWordToSignedByte (DEST[127:112]);
```



```
DEST[71:64] ← SaturateSignedWordToSignedByte (SRC[15:0]):
  DEST[79:72] ← SaturateSignedWordToSignedByte (SRC[31:16]);
  DEST[87:80] ← SaturateSignedWordToSignedByte (SRC[47:32]):
  DEST[95:88] ← SaturateSignedWordToSignedByte (SRC[63:48]):
  DEST[103:96] ← SaturateSignedWordToSignedByte (SRC[79:64]);
  DEST[111:104] ← SaturateSignedWordToSignedByte (SRC[95:80]);
  DEST[119:112] ← SaturateSignedWordToSignedByte (SRC[111:96]):
  DEST[127:120] ← SaturateSignedWordToSignedByte (SRC[127:112]);
PACKSSDW instruction with 128-bit operands:
  DEST[15:0] ← SaturateSignedDwordToSignedWord (DEST[31:0]);
  DEST[31:16] ← SaturateSignedDwordToSignedWord (DEST[63:32]):
  DEST[47:32] ← SaturateSignedDwordToSignedWord (DEST[95:64]);
  DEST[63:48] ← SaturateSignedDwordToSignedWord (DEST[127:96]):
  DEST[79:64] ← SaturateSignedDwordToSignedWord (SRC[31:0]);
  DEST[95:80] ← SaturateSignedDwordToSignedWord (SRC[63:32]);
  DEST[111:96] ← SaturateSignedDwordToSignedWord (SRC[95:64]);
  DEST[127:112] ← SaturateSignedDwordToSignedWord (SRC[127:96]):
```

Intel C/C++ Compiler Intrinsic Equivalents

PACKSSWB __m64 _mm_packs_pi16(__m64 m1, __m64 m2)
PACKSSDW __m64 _mm_packs_pi32 (__m64 m1, __m64 m2)

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



PACKUSWB—Pack with Unsigned Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 67 /r	PACKUSWB mm, mm/m64	Valid	Valid	Converts 4 signed word integers from <i>mm</i> and 4 signed word integers from <i>mm/m64</i> into 8 unsigned byte integers in <i>mm</i> using unsigned saturation.
66 0F 67 /r	PACKUSWB xmm1, xmm2/m128	Valid	Valid	Converts 8 signed word integers from <i>xmm1</i> and 8 signed word integers from <i>xmm2/m128</i> into 16 unsigned byte integers in <i>xmm1</i> using unsigned saturation.

Description

Converts 4 or 8 signed word integers from the destination operand (first operand) and 4 or 8 signed word integers from the source operand (second operand) into 8 or 16 unsigned byte integers and stores the result in the destination operand. (See Figure 4-1 for an example of the packing operation.) If a signed word integer value is beyond the range of an unsigned byte integer (that is, greater than FFH or less than 00H), the saturated unsigned byte integer value of FFH or 00H, respectively, is stored in the destination.

The PACKUSWB instruction operates on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

PACKUSWB instruction with 64-bit operands:

DEST[7:0] ← SaturateSignedWordToUnsignedByte DEST[15:0];

DEST[15:8] ← SaturateSignedWordToUnsignedByte DEST[31:16];

DEST[23:16] ← SaturateSignedWordToUnsignedByte DEST[47:32];

DEST[31:24] ← SaturateSignedWordToUnsignedByte DEST[63:48];

DEST[39:32] ← SaturateSignedWordToUnsignedByte SRC[15:0];

DEST[47:40] ← SaturateSignedWordToUnsignedByte SRC[31:16]:

DEST[55:48] ← SaturateSignedWordToUnsignedByte SRC[47:32];

DEST[63:56] ← SaturateSignedWordToUnsignedByte SRC[63:48];

PACKUSWB instruction with 128-bit operands:

DEST[7:0] ← SaturateSignedWordToUnsignedByte (DEST[15:0]);

DEST[15:8] ← SaturateSignedWordToUnsignedByte (DEST[31:16]);

DEST[23:16] ← SaturateSignedWordToUnsignedByte (DEST[47:32]);



```
\begin{array}{l} \mathsf{DEST}[31:24] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{DEST}[63:48]); \\ \mathsf{DEST}[39:32] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{DEST}[79:64]); \\ \mathsf{DEST}[47:40] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{DEST}[95:80]); \\ \mathsf{DEST}[55:48] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{DEST}[111:96]); \\ \mathsf{DEST}[63:56] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{DEST}[127:112]); \\ \mathsf{DEST}[71:64] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[15:0]); \\ \mathsf{DEST}[79:72] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[31:16]); \\ \mathsf{DEST}[87:80] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[47:32]); \\ \mathsf{DEST}[95:88] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[63:48]); \\ \mathsf{DEST}[103:96] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[79:64]); \\ \mathsf{DEST}[111:104] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[95:80]); \\ \mathsf{DEST}[119:112] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[111:96]); \\ \mathsf{DEST}[127:120] \leftarrow \mathsf{SaturateSignedWordToUnsignedByte} \;\; (\mathsf{SRC}[127:112]); \\ \mathsf{DEST}[127:120] \leftarrow \mathsf
```

Intel C/C++ Compiler Intrinsic Equivalent

PACKUSWB __m64 _mm_packs_pu16(__m64 m1, __m64 m2)

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F FC /r	PADDB mm, mm/m64	Valid	Valid	Add packed byte integers from <i>mm/m64</i> and <i>mm</i> .
66 0F FC /r	PADDB xmm1, xmm2/m128	Valid	Valid	Add packed byte integers from xmm2/m128 and xmm1.
0F FD / <i>r</i>	PADDW mm, mm/m64	Valid	Valid	Add packed word integers from mm/m64 and mm.
66 0F FD /r	PADDW xmm1, xmm2/m128	Valid	Valid	Add packed word integers from xmm2/m128 and xmm1.
0F FE /r	PADDD <i>mm</i> , <i>mm/m64</i>	Valid	Valid	Add packed doubleword integers from <i>mm/m64</i> and <i>mm</i> .
66 0F FE /r	PADDD xmm1, xmm2/m128	Valid	Valid	Add packed doubleword integers from xmm2/m128 and xmm1.

Description

Performs an SIMD add of the packed integers from the source operand (second operand) and the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD operation. Overflow is handled with wraparound, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PADDB instruction adds packed byte integers. When an individual result is too large to be represented in 8 bits (overflow), the result is wrapped around and the low 8 bits are written to the destination operand (that is, the carry is ignored).

The PADDW instruction adds packed word integers. When an individual result is too large to be represented in 16 bits (overflow), the result is wrapped around and the low 16 bits are written to the destination operand.

The PADDD instruction adds packed doubleword integers. When an individual result is too large to be represented in 32 bits (overflow), the result is wrapped around and the low 32 bits are written to the destination operand.

Note that the PADDB, PADDW, and PADDD instructions can operate on either unsigned or signed (two's complement notation) packed integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of values operated on.



In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PADDB instruction with 64-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] + SRC[7:0];
   (* Repeat add operation for 2nd through 7th byte *)
   DEST[63:56] \leftarrow DEST[63:56] + SRC[63:56];
PADDB instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] + SRC[7:0];
   (* Repeat add operation for 2nd through 14th byte *)
   DEST[127:120] \leftarrow DEST[111:120] + SRC[127:120];
PADDW instruction with 64-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] + SRC[15:0]:
   (* Repeat add operation for 2nd and 3th word *)
   DEST[63:48] \leftarrow DEST[63:48] + SRC[63:48];
PADDW instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] + SRC[15:0];
   (* Repeat add operation for 2nd through 7th word *)
   DEST[127:112] \leftarrow DEST[127:112] + SRC[127:112];
PADDD instruction with 64-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] + SRC[31:0];
   DEST[63:32] \leftarrow DEST[63:32] + SRC[63:32];
PADDD instruction with 128-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] + SRC[31:0];
   (* Repeat add operation for 2nd and 3th doubleword *)
   DEST[127:96] \leftarrow DEST[127:96] + SRC[127:96];
```

Intel C/C++ Compiler Intrinsic Equivalents

```
      PADDB
      _m64 _mm_add_pi8(__m64 m1, __m64 m2)

      PADDB
      _m128i_mm_add_epi8 (__m128ia,__m128ib )

      PADDW
      _m64 _mm_addw_pi16(__m64 m1, __m64 m2)

      PADDW
      _m128i _mm_add_epi16 ( __m128i a, __m128i b)

      PADDD
      _m64 _mm_add_epi32 ( __m64 m1, __m64 m2)

      PADDD
      _m128i _mm_add_epi32 ( __m128i a, __m128i b)
```

Flags Affected

None.



Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.



Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



PADDQ—Add Packed Quadword Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D4 /r	PADDQ mm1, mm2/m64	Valid	Valid	Add quadword integer mm2/m64 to mm1.
66 0F D4 /r	PADDQ xmm1, xmm2/m128	Valid	Valid	Add packed quadword integers xmm2/m128 to xmm1.

Description

Adds the first operand (destination operand) to the second operand (source operand) and stores the result in the destination operand. The source operand can be a quadword integer stored in an MMX technology register or a 64-bit memory location, or it can be two packed quadword integers stored in an XMM register or an 128-bit memory location. The destination operand can be a quadword integer stored in an MMX technology register or two packed quadword integers stored in an XMM register. When packed quadword operands are used, an SIMD add is performed. When a quadword result is too large to be represented in 64 bits (overflow), the result is wrapped around and the low 64 bits are written to the destination element (that is, the carry is ignored).

Note that the PADDQ instruction can operate on either unsigned or signed (two's complement notation) integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of the values operated on.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PADDQ instruction with 64-Bit operands:
DEST[63:0] ← DEST[63:0] + SRC[63:0];

PADDQ instruction with 128-Bit operands:
DEST[63:0] ← DEST[63:0] + SRC[63:0];
DEST[127:64] ← DEST[127:64] + SRC[127:64];
```

Intel C/C++ Compiler Intrinsic Equivalents

```
PADDQ __m64 _mm_add_si64 (__m64 a, __m64 b)
PADDQ __m128i _mm_add_epi64 (__m128i a, __m128i b)
```

Flags Affected

None.



Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.



Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PADDSB/PADDSW—Add Packed Signed Integers with Signed Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F EC /r	PADDSB mm, mm/m64	Valid	Valid	Add packed signed byte integers from <i>mm/m64</i> and mm and saturate the results.
66 0F EC /r	PADDSB xmm1, xmm2/m128	Valid	Valid	Add packed signed byte integers from xmm2/m128 and xmm1 saturate the results.
0F ED /r	PADDSW mm, mm/m64	Valid	Valid	Add packed signed word integers from <i>mm/m64</i> and mm and saturate the results.
66 0F ED /r	PADDSW xmm1, xmm2/m128	Valid	Valid	Add packed signed word integers from <i>xmm2/m128</i> and <i>xmm1</i> and saturate the results.

Description

Performs an SIMD add of the packed signed integers from the source operand (second operand) and the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the IA-32 Intel Architecture Software Developer's Manual, Volume 1 for an illustration of an SIMD operation. Overflow is handled with signed saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PADDSB instruction adds packed signed byte integers. When an individual byte result is beyond the range of a signed byte integer (that is, greater than 7FH or less than 80H), the saturated value of 7FH or 80H, respectively, is written to the destination operand.

The PADDSW instruction adds packed signed word integers. When an individual word result is beyond the range of a signed word integer (that is, greater than 7FFFH or less than 8000H), the saturated value of 7FFFH or 8000H, respectively, is written to the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
PADDSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToSignedByte(DEST[7:0] + SRC (7:0]);
   (* Repeat add operation for 2nd through 7th bytes *)
   DEST[63:56] \leftarrow SaturateToSignedByte(DEST[63:56] + SRC[63:56]);
PADDSB instruction with 128-bit operands:
   DEST[7:0] ←SaturateToSignedByte (DEST[7:0] + SRC[7:0]);
   (* Repeat add operation for 2nd through 14th bytes *)
   DEST[127:120] \leftarrow SaturateToSignedByte (DEST[111:120] + SRC[127:120]);
PADDSW instruction with 64-bit operands
   DEST[15:0] ← SaturateToSignedWord(DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd and 7th words *)
   DEST[63:48] ← SaturateToSignedWord(DEST[63:48] + SRC[63:48]);
PADDSW instruction with 128-bit operands
   DEST[15:0] ← SaturateToSignedWord (DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SaturateToSignedWord (DEST[127:112] + SRC[127:112]);
```

Intel C/C++ Compiler Intrinsic Equivalents

```
      PADDSB
      __m64 _mm_adds_pi8(__m64 m1, __m64 m2)

      PADDSB
      __m128i _mm_adds_epi8 ( __m128i a, __m128i b)

      PADDSW
      __m64 _mm_adds_pi16(__m64 m1, __m64 m2)

      PADDSW
      __m128i _mm_adds_epi16 ( __m128i a, __m128i b)
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.



#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0)(64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0)(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

> 128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

(64-bit operations only) If alignment checking is enabled and an unaligned #AC(0)

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0)If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.



#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PADDUSB/PADDUSW—Add Packed Unsigned Integers with Unsigned Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F DC /r	PADDUSB <i>mm</i> , <i>mm/m64</i>	Valid	Valid	Add packed unsigned byte integers from <i>mm/m64</i> and <i>mm</i> and saturate the results.
66 0F DC /r	PADDUSB xmm1, xmm2/m128	Valid	Valid	Add packed unsigned byte integers from xmm2/m128 and xmm1 saturate the results.
0F DD /r	PADDUSW mm, mm/m64	Valid	Valid	Add packed unsigned word integers from <i>mm/m64</i> and <i>mm</i> and saturate the results.
66 0F DD /r	PADDUSW xmm1, xmm2/m128	Valid	Valid	Add packed unsigned word integers from <i>xmm2/m128</i> to <i>xmm1</i> and saturate the results.

Description

Performs an SIMD add of the packed unsigned integers from the source operand (second operand) and the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD operation. Overflow is handled with unsigned saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PADDUSB instruction adds packed unsigned byte integers. When an individual byte result is beyond the range of an unsigned byte integer (that is, greater than FFH), the saturated value of FFH is written to the destination operand.

The PADDUSW instruction adds packed unsigned word integers. When an individual word result is beyond the range of an unsigned word integer (that is, greater than FFFFH), the saturated value of FFFFH is written to the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
PADDUSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToUnsignedByte(DEST[7:0] + SRC (7:0]):
   (* Repeat add operation for 2nd through 7th bytes *)
   DEST[63:56] ← SaturateToUnsignedByte(DEST[63:56] + SRC[63:56]
PADDUSB instruction with 128-bit operands:
   DEST[7:0] \leftarrow SaturateToUnsignedByte (DEST[7:0] + SRC[7:0]);
   (* Repeat add operation for 2nd through 14th bytes *)
   DEST[127:120] ← SaturateToUnSignedByte (DEST[127:120] + SRC[127:120]);
PADDUSW instruction with 64-bit operands:
   DEST[15:0] ← SaturateToUnsignedWord(DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd and 3rd words *)
   DEST[63:48] ← SaturateToUnsignedWord(DEST[63:48] + SRC[63:48] );
PADDUSW instruction with 128-bit operands:
   DEST[15:0] ← SaturateToUnsignedWord (DEST[15:0] + SRC[15:0]);
   (* Repeat add operation for 2nd through 7th words *)
   DEST[127:112] ← SaturateToUnSignedWord (DEST[127:112] + SRC[127:112]);
```

Intel C/C++ Compiler Intrinsic Equivalents

```
      PADDUSB
      __m64 _mm_adds_pu8(__m64 m1, __m64 m2)

      PADDUSW
      __m64 _mm_adds_pu16(__m64 m1, __m64 m2)

      PADDUSB
      __m128i _mm_adds_epu8 ( __m128i a, __m128i b)

      PADDUSW
      __m128i _mm_adds_epu16 ( __m128i a, __m128i b)
```

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.



#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.





64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PAND—Logical AND

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F DB /r	PAND mm, mm/m64	Valid	Valid	Bitwise AND <i>mm/m64</i> and <i>mm</i> .
66 0F DB /r	PAND xmm1, xmm2/m128	Valid	Valid	Bitwise AND of xmm2/m128 and xmm1.

Description

Performs a bitwise logical AND operation on the source operand (second operand) and the destination operand (first operand) and stores the result in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is set to 1 if the corresponding bits of the first and second operands are 1; otherwise, it is set to 0.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

 $DEST \leftarrow (DEST AND SRC);$

Intel C/C++ Compiler Intrinsic Equivalent

PAND __m64 _mm_and_si64 (__m64 m1, __m64 m2)
PAND __m128i _mm_and_si128 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.





#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PANDN—Logical AND NOT

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F DF /r	PANDN mm, mm/m64	Valid	Valid	Bitwise AND NOT of mm/m64 and mm.
66 0F DF /r	PANDN xmm1, xmm2/m128	Valid	Valid	Bitwise AND NOT of xmm2/m128 and xmm1.

Description

Performs a bitwise logical NOT of the destination operand (first operand), then performs a bitwise logical AND of the source operand (second operand) and the inverted destination operand. The result is stored in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is set to 1 if the corresponding bit in the first operand is 0 and the corresponding bit in the second operand is 1; otherwise, it is set to 0.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

 $DEST \leftarrow ((NOT DEST) AND SRC);$

Intel C/C++ Compiler Intrinsic Equivalent

PANDN __m64 _mm_andnot_si64 (__m64 m1, __m64 m2)
PANDN _m128i _mm_andnot_si128 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.



#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PAUSE—Spin Loop Hint

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 90	PAUSE	Valid	Valid	Gives hint to processor that improves performance of spin-wait loops.

Description

Improves the performance of spin-wait loops. When executing a "spin-wait loop," a Pentium 4 or Intel Xeon processor suffers a severe performance penalty when exiting the loop because it detects a possible memory order violation. The PAUSE instruction provides a hint to the processor that the code sequence is a spin-wait loop. The processor uses this hint to avoid the memory order violation in most situations, which greatly improves processor performance. For this reason, it is recommended that a PAUSE instruction be placed in all spin-wait loops.

An additional function of the PAUSE instruction is to reduce the power consumed by a Pentium 4 processor while executing a spin loop. The Pentium 4 processor can execute a spin-wait loop extremely quickly, causing the processor to consume a lot of power while it waits for the resource it is spinning on to become available. Inserting a pause instruction in a spin-wait loop greatly reduces the processor's power consumption.

This instruction was introduced in the Pentium 4 processors, but is backward compatible with all IA-32 processors. In earlier IA-32 processors, the PAUSE instruction operates like a NOP instruction. The Pentium 4 and Intel Xeon processors implement the PAUSE instruction as a pre-defined delay. The delay is finite and can be zero for some processors. This instruction does not change the architectural state of the processor (that is, it performs essentially a delaying no-op operation).

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

Execute Next Instruction(DELAY);

Numeric Exceptions

None.

Exceptions (All Operating Modes)

None.



PAVGB/PAVGW—Average Packed Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E0 /r	PAVGB mm1, mm2/m64	Valid	Valid	Average packed unsigned byte integers from mm2/m64 and mm1 with rounding.
66 0F E0, /r	PAVGB xmm1, xmm2/m128	Valid	Valid	Average packed unsigned byte integers from <i>xmm2/m128</i> and <i>xmm1</i> with rounding.
0F E3 /r	PAVGW mm1, mm2/m64	Valid	Valid	Average packed unsigned word integers from mm2/m64 and mm1 with rounding.
66 0F E3 /r	PAVGW xmm1, xmm2/m128	Valid	Valid	Average packed unsigned word integers from <i>xmm2/m128</i> and <i>xmm1</i> with rounding.

Description

Performs an SIMD average of the packed unsigned integers from the source operand (second operand) and the destination operand (first operand), and stores the results in the destination operand. For each corresponding pair of data elements in the first and second operands, the elements are added together, a 1 is added to the temporary sum, and that result is shifted right one bit position. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PAVGB instruction operates on packed unsigned bytes and the PAVGW instruction operates on packed unsigned words.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PAVGB instruction with 64-bit operands:
   SRC[7:0) \leftarrow (SRC[7:0) + DEST[7:0) + 1) >> 1; (* Temp sum before shifting is 9 bits *)
   (* Repeat operation performed for bytes 2 through 6 *)
   SRC[63:56) \leftarrow (SRC[63:56) + DEST[63:56) + 1) >> 1;
PAVGW instruction with 64-bit operands:
   SRC[15:0) \leftarrow (SRC[15:0) + DEST[15:0) + 1) >> 1; (* Temp sum before shifting is 17 bits *)
   (* Repeat operation performed for words 2 and 3 *)
   SRC[63:48) \leftarrow (SRC[63:48) + DEST[63:48) + 1) >> 1;
PAVGB instruction with 128-bit operands:
   SRC[7:0) \leftarrow (SRC[7:0) + DEST[7:0) + 1) >> 1; (* Temp sum before shifting is 9 bits *)
   (* Repeat operation performed for bytes 2 through 14 *)
   SRC[63:56) \leftarrow (SRC[63:56) + DEST[63:56) + 1) >> 1;
```

PAVGW instruction with 128-bit operands:



 $SRC[15:0) \leftarrow (SRC[15:0) + DEST[15:0) + 1) >> 1$; (* Temp sum before shifting is 17 bits *) (* Repeat operation performed for words 2 through 6 *) $SRC[127:48) \leftarrow (SRC[127:112) + DEST[127:112) + 1) >> 1$;

Intel C/C++ Compiler Intrinsic Equivalent

PAVGB __m64_mm_avg_pu8 (__m64 a, __m64 b)

PAVGW __m64_mm_avg_pu16 (__m64 a, __m64 b)

PAVGB __m128i _mm_avg_epu8 (__m128i a, __m128i b)

PAVGW __m128i _mm_avg_epu16 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.





#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PCMPEQB/PCMPEQW/PCMPEQD— Compare Packed Data for Equal

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 74 /r	PCMPEQB mm, mm/m64	Valid	Valid	Compare packed bytes in mm/m64 and mm for equality.
66 0F 74 /r	PCMPEQB xmm1, xmm2/m128	Valid	Valid	Compare packed bytes in xmm2/m128 and xmm1 for equality.
0F 75 /r	PCMPEQW mm, mm/m64	Valid	Valid	Compare packed words in mm/m64 and mm for equality.
66 0F 75 /r	PCMPEQW xmm1, xmm2/m128	Valid	Valid	Compare packed words in xmm2/m128 and xmm1 for equality.
0F 76 /r	PCMPEQD mm, mm/m64	Valid	Valid	Compare packed doublewords in <i>mm/m64</i> and <i>mm</i> for equality.
66 0F 76 /r	PCMPEQD xmm1, xmm2/m128	Valid	Valid	Compare packed doublewords in <i>xmm2/m128</i> and xmm1 for equality.

Description

Performs an SIMD compare for equality of the packed bytes, words, or doublewords in the destination operand (first operand) and the source operand (second operand). If a pair of data elements is equal, the corresponding data element in the destination operand is set to all 1s; otherwise, it is set to all 0s. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PCMPEQB instruction compares the corresponding bytes in the destination and source operands; the PCMPEQW instruction compares the corresponding words in the destination and source operands; and the PCMPEQD instruction compares the corresponding doublewords in the destination and source operands.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PCMPEQB instruction with 64-bit operands:

IF DEST[7:0] = SRC[7:0]

THEN DEST[7:0) ← FFH;

ELSE DEST[7:0] ← 0; FI;

(* Continue comparison of 2nd through 7th bytes in DEST and SRC *)

IF DEST[63:56] = SRC[63:56]

THEN DEST[63:56] ← FFH;

ELSE DEST[63:56] ← 0; FI;
```



```
PCMPEQB instruction with 128-bit operands:
   IF DEST[7:0] = SRC[7:0]
       THEN DEST[7:0) ← FFH;
       ELSE DEST[7:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 15th bytes in DEST and SRC *)
   IF DEST[63:56] = SRC[63:56]
       THEN DEST[63:56] \leftarrow FFH;
       ELSE DEST[63:56] \leftarrow 0; FI;
PCMPEQW instruction with 64-bit operands:
   IF DEST[15:0] = SRC[15:0]
       THEN DEST[15:0] ← FFFFH;
       ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd words in DEST and SRC *)
   IF DEST[63:48] = SRC[63:48]
       THEN DEST[63:48] ← FFFFH;
       ELSE DEST[63:48] \leftarrow 0; FI;
PCMPEQW instruction with 128-bit operands:
   IF DEST[15:0] = SRC[15:0]
       THEN DEST[15:0] ← FFFFH;
       ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 7th words in DEST and SRC *)
   IF DEST[63:48] = SRC[63:48]
       THEN DEST[63:48] ← FFFFH;
       ELSE DEST[63:48] \leftarrow 0; FI;
PCMPEQD instruction with 64-bit operands:
   IF DEST[31:0] = SRC[31:0]
       THEN DEST[31:0] ← FFFFFFFH;
       ELSE DEST[31:0] \leftarrow 0; FI;
   IF DEST[63:32] = SRC[63:32]
       THEN DEST[63:32] ← FFFFFFFH;
       ELSE DEST[63:32] \leftarrow 0; FI;
PCMPEQD instruction with 128-bit operands:
   IF DEST[31:0] = SRC[31:0]
       THEN DEST[31:0] ← FFFFFFFH;
       ELSE DEST[31:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd doublewords in DEST and SRC *)
   IF DEST[63:32] = SRC[63:32]
       THEN DEST[63:32] ← FFFFFFFH;
       ELSE DEST[63:32] \leftarrow 0; FI;
Intel C/C++ Compiler Intrinsic Equivalents
PCMPEQB
               m64 mm cmpeg pi8 ( m64 m1, m64 m2)
PCMPEQW
                __m64 _mm_cmpeq_pi16 (__m64 m1, __m64 m2)
PCMPEQD
               __m64 _mm_cmpeq_pi32 (__m64 m1, __m64 m2)
```



PCMPEQB __m128i _mm_cmpeq_epi8 (__m128i a, __m128i b)
PCMPEQW __m128i _mm_cmpeq_epi16 (__m128i a, __m128i b)
PCMPEQD __m128i _mm_cmpeq_epi32 (__m128i a, __m128i b)

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PCMPGTB/PCMPGTW/PCMPGTD—Compare Packed Signed Integers for Greater Than

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 64 /r	PCMPGTB mm, mm/m64	Valid	Valid	Compare packed signed byte integers in <i>mm</i> and <i>mm/m64</i> for greater than.
66 0F 64 /r	PCMPGTB xmm1, xmm2/m128	Valid	Valid	Compare packed signed byte integers in xmm1 and xmm2/m128 for greater than.
0F 65 /r	PCMPGTW mm, mm/m64	Valid	Valid	Compare packed signed word integers in <i>mm</i> and <i>mm/m64</i> for greater than.
66 0F 65 /r	PCMPGTW xmm1, xmm2/m128	Valid	Valid	Compare packed signed word integers in <i>xmm1</i> and <i>xmm2/m128</i> for greater than.
0F 66 /r	PCMPGTD mm, mm/m64	Valid	Valid	Compare packed signed doubleword integers in <i>mm</i> and <i>mm/m64</i> for greater than.
66 0F 66 /r	PCMPGTD xmm1, xmm2/m128	Valid	Valid	Compare packed signed doubleword integers in <i>xmm1</i> and <i>xmm2/m128</i> for greater than.

Description

Performs an SIMD signed compare for the greater value of the packed byte, word, or double-word integers in the destination operand (first operand) and the source operand (second operand). If a data element in the destination operand is greater than the corresponding date element in the source operand, the corresponding data element in the destination operand is set to all 1s; otherwise, it is set to all 0s. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PCMPGTB instruction compares the corresponding signed byte integers in the destination and source operands; the PCMPGTW instruction compares the corresponding signed word integers in the destination and source operands; and the PCMPGTD instruction compares the corresponding signed doubleword integers in the destination and source operands.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
PCMPGTB instruction with 64-bit operands:
   IF DEST[7:0] > SRC[7:0]
       THEN DEST[7:0) \leftarrow FFH;
       ELSE DEST[7:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 7th bytes in DEST and SRC *)
   IF DEST[63:56] > SRC[63:56]
       THEN DEST[63:56] ← FFH;
       ELSE DEST[63:56] \leftarrow 0; FI;
PCMPGTB instruction with 128-bit operands:
   IF DEST[7:0] > SRC[7:0]
       THEN DEST[7:0) \leftarrow FFH;
       ELSE DEST[7:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 15th bytes in DEST and SRC *)
   IF DEST[63:56] > SRC[63:56]
       THEN DEST[63:56] \leftarrow FFH;
       ELSE DEST[63:56] \leftarrow 0; FI;
PCMPGTW instruction with 64-bit operands:
   IF DEST[15:0] > SRC[15:0]
       THEN DEST[15:0] ← FFFFH;
       ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd words in DEST and SRC *)
   IF DEST[63:48] > SRC[63:48]
       THEN DEST[63:48] ← FFFFH;
       ELSE DEST[63:48] \leftarrow 0; FI;
PCMPGTW instruction with 128-bit operands:
   IF DEST[15:0] > SRC[15:0]
       THEN DEST[15:0] ← FFFFH;
       ELSE DEST[15:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd through 7th words in DEST and SRC *)
   IF DEST[63:48] > SRC[63:48]
       THEN DEST[63:48] ← FFFFH;
       ELSE DEST[63:48] \leftarrow 0; FI;
PCMPGTD instruction with 64-bit operands:
   IF DEST[31:0] > SRC[31:0]
       THEN DEST[31:0] ← FFFFFFFH;
       ELSE DEST[31:0] \leftarrow 0; FI;
   IF DEST[63:32] > SRC[63:32]
       THEN DEST[63:32] ← FFFFFFFH;
       ELSE DEST[63:32] \leftarrow 0; FI;
PCMPGTD instruction with 128-bit operands:
   IF DEST[31:0] > SRC[31:0]
       THEN DEST[31:0] \leftarrow FFFFFFFH;
       ELSE DEST[31:0] \leftarrow 0; FI;
   (* Continue comparison of 2nd and 3rd doublewords in DEST and SRC *)
```



IF DEST[63:32] > SRC[63:32] THEN DEST[63:32] \leftarrow FFFFFFFFH; ELSE DEST[63:32] \leftarrow 0: FI:

Intel C/C++ Compiler Intrinsic Equivalents

 PCMPGTB
 __m64 _mm_cmpgt_pi8 (__m64 m1, __m64 m2)

 PCMPGTW
 __m64 _mm_pcmpgt_pi16 (__m64 m1, __m64 m2)

 DCMPGTD
 __m64 _mm_pcmpgt_pi32 (__m64 m1, __m64 m2)

 PCMPGTB
 __m128i _mm_cmpgt_epi8 (__m128i a, __m128i b

 PCMPGTW
 __m128i _mm_cmpgt_epi16 (__m128i a, __m128i b

 DCMPGTD
 __m128i _mm_cmpgt_epi32 (__m128i a, __m128i b

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PEXTRW—Extract Word

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C5 /r ib	PEXTRW r32, mm, imm8	Valid	Valid	Extract the word specified by <i>imm8</i> from <i>mm</i> and move it to <i>r</i> 32, bits 15-0. Zero-extend the result.
REX.W + 0F C5 /r ib	PEXTRW r64, mm, imm8	Valid	N.E.	Extract the word specified by imm8 from mm and move it to r64, bits 15-0. Zero-extend the result.
66 0F C5 /r ib	PEXTRW r32, xmm, imm8	Valid	Valid	Extract the word specified by <i>imm8</i> from <i>xmm</i> and move it to <i>r</i> 32, bits 15-0. Zero-extend the result.
REX.W + 66 0F C5 /r ib	PEXTRW r64, xmm, imm8	Valid	N.E.	Extract the word specified by imm8 from xmm and move it to r64, bits 15-0. Zero-extend the result.

Description

Copies the word in the source operand (second operand) specified by the count operand (third operand) to the destination operand (first operand). The source operand can be an MMX technology register or an XMM register. The destination operand is the low word of a general-purpose register. The count operand is an 8-bit immediate. When specifying a word location in an MMX technology register, the 2 least-significant bits of the count operand specify the location; for an XMM register, the 3 least-significant bits specify the location. The high word of the destination operand is cleared (set to all 0s).

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). Use of REX.W permits the use of 64-bit general purpose registers.



Operation

```
IF (64-Bit Mode and REX.W used and 64-bit register selected)
THÈN
        FOR (PEXTRW instruction with 64-bit source operand)
           { SEL ← COUNT AND 3H:
             TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
             r64[15:0] \leftarrow TEMP[15:0];
             r64[63:16] \leftarrow ZERO_FILL; \};
        FOR (PEXTRW instruction with 128-bit source operand)
           { SEL \leftarrow COUNT AND 7H;
             TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
             r64[15:0] \leftarrow TEMP[15:0];
             r64[63:16] \leftarrow ZERO_FILL; 
ELSE
        FOR (PEXTRW instruction with 64-bit source operand)
          { SEL ← COUNT AND 3H;
             TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
             r32[15:0] \leftarrow TEMP[15:0];
             r32[31:16] \leftarrow ZERO FILL; }:
        FOR (PEXTRW instruction with 128-bit source operand)
          \{ SEL \leftarrow COUNT AND 7H; \}
             TEMP \leftarrow (SRC >> (SEL * 16)) AND FFFFH;
             r32[15:0] \leftarrow TEMP[15:0];
             r32[31:16] \leftarrow ZERO FILL; };
FI:
```

Intel C/C++ Compiler Intrinsic Equivalent

```
PEXTRW int_mm_extract_pi16 (__m64 a, int n)
```

PEXTRW int mm extract epi16 (m128i a. int imm)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment

limit.





#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



PINSRW—Insert Word

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C4 /r ib	PINSRW mm, r32/m16, imm8	Valid	Valid	Insert the low word from r32 or from m16 into mm at the word position specified by imm8
REX.W + 0F C4 /r ib	PINSRW mm, r64/m16, imm8	Valid	N.E.	Insert the low word from r64 or from m16 into mm at the word position specified by imm8
66 0F C4 /r ib	PINSRW xmm, r32/m16, imm8	Valid	Valid	Move the low word of <i>r32</i> or from <i>m16</i> into xmm at the word position specified by <i>imm8</i> .
REX.W + 66 0F C4 /r ib	PINSRW xmm, r64/m16, imm8	Valid	N.E.	Move the low word of <i>r64</i> or from <i>m16</i> into xmm at the word position specified by <i>imm8</i> .

Description

Copies a word from the source operand (second operand) and inserts it in the destination operand (first operand) at the location specified with the count operand (third operand). (The other words in the destination register are left untouched.) The source operand can be a general-purpose register or a 16-bit memory location. (When the source operand is a general-purpose register, the low word of the register is copied.) The destination operand can be an MMX technology register or an XMM register. The count operand is an 8-bit immediate. When specifying a word location in an MMX technology register, the 2 least-significant bits of the count operand specify the location; for an XMM register, the 3 least-significant bits specify the location.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). Use of REX.W permits the use of 64 bit general purpose registers.

Operation

```
PINSRW instruction with 64-bit source operand:
```

SEL ← COUNT AND 3H;

CASE (Determine word position) OF

 $\begin{array}{lll} \text{SEL} \leftarrow 0: & \text{MASK} \leftarrow 00000000000000FFFFH; \\ \text{SEL} \leftarrow 1: & \text{MASK} \leftarrow 00000000FFFF0000H; \\ \text{SEL} \leftarrow 2: & \text{MASK} \leftarrow 0000FFFF00000000H; \\ \text{SEL} \leftarrow 3: & \text{MASK} \leftarrow FFFF0000000000000H; \\ \end{array}$

DEST ← (DEST AND NOT MASK) OR (((SRC << (SEL * 16)) AND MASK);

PINSRW instruction with 128-bit source operand:

SEL ← COUNT AND 7H;



```
CASE (Determine word position) OF
     SEL \leftarrow 0:
            SEL ← 1:
             MASK ← 0000000000000000000000000000000H;
     SEL ← 2:
             MASK ← 000000000000000000FFFF00000000H;
     SEL ← 3:
             MASK \leftarrow 00000000000000000FFFF000000000000H;
     SEL ← 4:
             MASK ← 00000000000FFFF000000000000000H;
     SEL ← 5:
             MASK ← 0000000FFFF00000000000000000000H;
     SEL ← 6:
             SEL ← 7:
             DEST ← (DEST AND NOT MASK) OR (((SRC << (SEL * 16)) AND MASK);
```

Intel C/C++ Compiler Intrinsic Equivalent

```
PINSRW __m64 _mm_insert_pi16 (__m64 a, int d, int n)
```

PINSRW m128i mm insert epi16 (m128i a, int b, int imm)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) If any part of the operand lies outside of the effective address space from

0 to FFFFH.



#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



PMADDWD—Multiply and Add Packed Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F5 /r	PMADDWD <i>mm</i> , <i>mm/m64</i>	Valid	Valid	Multiply the packed words in <i>mm</i> by the packed words in <i>mm/m64</i> , add adjacent doubleword results, and store in <i>mm</i> .
66 0F F5 /r	PMADDWD xmm1, xmm2/m128	Valid	Valid	Multiply the packed word integers in xmm1 by the packed word integers in xmm2/m128, add adjacent doubleword results, and store in xmm1.

Description

Multiplies the individual signed words of the destination operand (first operand) by the corresponding signed words of the source operand (second operand), producing temporary signed, doubleword results. The adjacent doubleword results are then summed and stored in the destination operand. For example, the corresponding low-order words (15-0) and (31-16) in the source and destination operands are multiplied by one another and the doubleword results are added together and stored in the low doubleword of the destination register (31-0). The same operation is performed on the other pairs of adjacent words. (Figure 4-2 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

The PMADDWD instruction wraps around only in one situation: when the 2 pairs of words being operated on in a group are all 8000H. In this case, the result wraps around to 80000000H.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



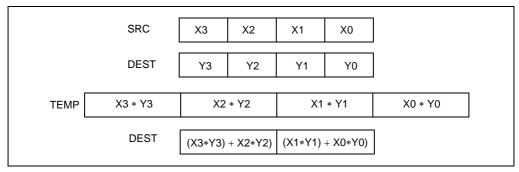


Figure 4-2. PMADDWD Execution Model Using 64-bit Operands

Operation

Intel C/C++ Compiler Intrinsic Equivalent

```
PMADDWD __m64 _mm_madd_pi16(__m64 m1, __m64 m2)
PMADDWD __m128i _mm_madd_epi16 ( __m128i a, __m128i b)
```

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.





#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMAXSW—Maximum of Packed Signed Word Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
OF EE /r	PMAXSW mm1, mm2/m64	Valid	Valid	Compare signed word integers in mm2/m64 and mm1 and return maximum values.
66 0F EE /r	PMAXSW xmm1, xmm2/m128	Valid	Valid	Compare signed word integers in xmm2/m128 and xmm1 and return maximum values.

Description

Performs an SIMD compare of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum value for each pair of word integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PMAXSW instruction for 64-bit operands:
   IF DEST[15:0] > SRC[15:0]) THEN
        DEST[15:0] \leftarrow DEST[15:0]:
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd and 3rd words in source and destination operands *)
   IF DEST[63:48] > SRC[63:48]) THEN
        DEST[63:48] \leftarrow DEST[63:48];
   ELSE
        DEST[63:48] \leftarrow SRC[63:48]; FI;
PMAXSW instruction for 128-bit operands:
   IF DEST[15:0] > SRC[15:0]) THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd through 7th words in source and destination operands *)
   IF DEST[127:112] > SRC[127:112]) THEN
        DEST[127:112] \leftarrow DEST[127:112];
   ELSE
        DEST[127:112] \leftarrow SRC[127:112]; FI;
```



PMAXSW __m64 _mm_max_pi16(__m64 a, __m64 b)

PMAXSW __m128i _mm_max_epi16 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMAXUB—Maximum of Packed Unsigned Byte Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F DE /r	PMAXUB mm1, mm2/m64	Valid	Valid	Compare unsigned byte integers in <i>mm2/m64</i> and <i>mm1</i> and returns maximum values.
66 0F DE /r	PMAXUB xmm1, xmm2/m128	Valid	Valid	Compare unsigned byte integers in <i>xmm2/m128</i> and <i>xmm1</i> and returns maximum values.

Description

Performs an SIMD compare of the packed unsigned byte integers in the destination operand (first operand) and the source operand (second operand), and returns the maximum value for each pair of byte integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PMAXUB instruction for 64-bit operands:
   IF DEST[7:0] > SRC[17:0]) THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 7th bytes in source and destination operands *)
   IF DEST[63:56] > SRC[63:56]) THEN
        DEST[63:56] \leftarrow DEST[63:56];
   ELSE
        DEST[63:56] \leftarrow SRC[63:56]; FI;
PMAXUB instruction for 128-bit operands:
   IF DEST[7:0] > SRC[17:0]) THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 15th bytes in source and destination operands *)
   IF DEST[127:120] > SRC[127:120]) THEN
        DEST[127:120] \leftarrow DEST[127:120];
   FLSE
        DEST[127:120] \leftarrow SRC[127:120]; FI;
```



PMAXUB __m64 _mm_max_pu8(__m64 a, __m64 b)

PMAXUB __m128i _mm_max_epu8 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMINSW—Minimum of Packed Signed Word Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F EA /r	PMINSW mm1, mm2/m64	Valid	Valid	Compare signed word integers in mm2/m64 and mm1 and return minimum values.
66 0F EA /r	PMINSW xmm1, xmm2/m128	Valid	Valid	Compare signed word integers in xmm2/m128 and xmm1 and return minimum values.

Description

Performs an SIMD compare of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum value for each pair of word integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PMINSW instruction for 64-bit operands:
   IF DEST[15:0] < SRC[15:0] THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd and 3rd words in source and destination operands *)
   IF DEST[63:48] < SRC[63:48] THEN
        DEST[63:48] \leftarrow DEST[63:48];
   ELSE
        DEST[63:48] \leftarrow SRC[63:48]; FI;
PMINSW instruction for 128-bit operands:
   IF DEST[15:0] < SRC[15:0] THEN
        DEST[15:0] \leftarrow DEST[15:0];
   ELSE
        DEST[15:0] \leftarrow SRC[15:0]; FI;
   (* Repeat operation for 2nd through 7th words in source and destination operands *)
   IF DEST[127:112] < SRC/m64[127:112] THEN
        DEST[127:112] \leftarrow DEST[127:112];
   FLSE
        DEST[127:112] \leftarrow SRC[127:112]; FI;
```



PMINSW __m64 _mm_min_pi16 (__m64 a, __m64 b)

PMINSW __m128i _mm_min_epi16 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMINUB—Minimum of Packed Unsigned Byte Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F DA /r	PMINUB <i>mm1</i> , <i>mm2/m64</i>	Valid	Valid	Compare unsigned byte integers in mm2/m64 and mm1 and returns minimum values.
66 0F DA /r	PMINUB xmm1, xmm2/m128	Valid	Valid	Compare unsigned byte integers in xmm2/m128 and xmm1 and returns minimum values.

Description

Performs an SIMD compare of the packed unsigned byte integers in the destination operand (first operand) and the source operand (second operand), and returns the minimum value for each pair of byte integers to the destination operand. The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PMINUB instruction for 64-bit operands:
   IF DEST[7:0] < SRC[17:0] THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 7th bytes in source and destination operands *)
   IF DEST[63:56] < SRC[63:56] THEN
        DEST[63:56] \leftarrow DEST[63:56];
   ELSE
        DEST[63:56] \leftarrow SRC[63:56]; FI;
PMINUB instruction for 128-bit operands:
   IF DEST[7:0] < SRC[17:0] THEN
        DEST[7:0] \leftarrow DEST[7:0];
   ELSE
        DEST[7:0] \leftarrow SRC[7:0]; FI;
   (* Repeat operation for 2nd through 15th bytes in source and destination operands *)
   IF DEST[127:120] < SRC[127:120] THEN
        DEST[127:120] \leftarrow DEST[127:120];
   FLSE
        DEST[127:120] \leftarrow SRC[127:120]; FI;
```



PMINUB __m64 _m_min_pu8 (__m64 a, __m64 b)

PMINUB __m128i _mm_min_epu8 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMOVMSKB—Move Byte Mask

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D7 /r	PMOVMSKB r32, mm	Valid	Valid	Move a byte mask of <i>mm</i> to <i>r32</i> .
REX.W + 0F D7 /r	PMOVMSKB r64, mm	Valid	N.E.	Move a byte mask of mm to the lower 32-bits of r64 and zero-fill the upper 32-bits.
66 0F D7 /r	PMOVMSKB r32, xmm	Valid	Valid	Move a byte mask of <i>xmm</i> to <i>r</i> 32.
REX.W + 66 0F D7 /r	PMOVMSKB r64, xmm	Valid	N.E.	Move a byte mask of xmm to the lower 32-bits of r64 and zero-fill the upper 32-bits.

Description

Creates a mask made up of the most significant bit of each byte of the source operand (second operand) and stores the result in the low byte or word of the destination operand (first operand). The source operand is an MMX technology register or an XMM register; the destination operand is a general-purpose register. When operating on 64-bit operands, the byte mask is 8 bits; when operating on 128-bit operands, the byte mask is 16-bits.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15, R8-15). Use of REX.W permits the use of 64 bit general purpose registers.

Operation

```
PMOVMSKB instruction with 64-bit source operand and r32:
   r32[0] \leftarrow SRC[7];
   r32[1] \leftarrow SRC[15];
   (* Repeat operation for bytes 2 through 6 *)
   r32[7] \leftarrow SRC[63];
   r32[31:8] \leftarrow ZERO_FILL;
PMOVMSKB instruction with 128-bit source operand and r32:
   r32[0] \leftarrow SRC[7];
   r32[1] \leftarrow SRC[15];
   (* Repeat operation for bytes 2 through 14 *)
   r32[15] \leftarrow SRC[127];
   r32[31:16] ← ZERO FILL;
PMOVMSKB instruction with 64-bit source operand and r64:
   r64[0] \leftarrow SRC[7]:
   r64[1] \leftarrow SRC[15];
   (* Repeat operation for bytes 2 through 6 *)
   r64[7] \leftarrow SRC[63];
```



```
r64[63:8] ← ZERO_FILL;

PMOVMSKB instruction with 128-bit source operand and r64: r64[0] ← SRC[7]; r64[1] ← SRC[15]; (* Repeat operation for bytes 2 through 14 *) r64[15] ← SRC[127]; r64[63:16] ← ZERO_FILL;
```

PMOVMSKB int_mm_movemask_pi8(__m64 a)
PMOVMSKB int_mm_movemask_epi8 (__m128i a)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Real-Address Mode Exceptions

Same exceptions as in Protected Mode.

Virtual-8086 Mode Exceptions

Same exceptions as in Protected Mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



PMULHUW—Multiply Packed Unsigned Integers and Store High Result

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E4 /r	PMULHUW mm1, mm2/m64	Valid	Valid	Multiply the packed unsigned word integers in <i>mm1</i> register and <i>mm2/m64</i> , and store the high 16 bits of the results in <i>mm1</i> .
66 0F E4 /r	PMULHUW xmm1, xmm2/m128	Valid	Valid	Multiply the packed unsigned word integers in <i>xmm1</i> and <i>xmm2/m128</i> , and store the high 16 bits of the results in <i>xmm1</i> .

Description

Performs an SIMD unsigned multiply of the packed unsigned word integers in the destination operand (first operand) and the source operand (second operand), and stores the high 16 bits of each 32-bit intermediate results in the destination operand. (Figure 4-3 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

n 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

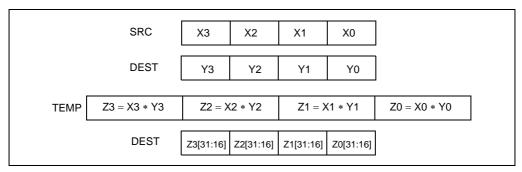


Figure 4-3. PMULHUW and PMULHW Instruction Operation Using 64-bit Operands

Operation

PMULHUW instruction with 64-bit operands:

 $\mathsf{TEMP0}[31:0] \leftarrow \ \mathsf{DEST}[15:0] * \mathsf{SRC}[15:0]; (* \ \mathsf{Unsigned \ multiplication} \ *)$

 $TEMP1[31:0] \leftarrow DEST[31:16] * SRC[31:16];$

 $\mathsf{TEMP2}[31:0] \leftarrow \ \mathsf{DEST}[47:32] * \mathsf{SRC}[47:32];$

 $\mathsf{TEMP3}[31:0] \leftarrow \ \mathsf{DEST}[63:48] * \mathsf{SRC}[63:48];$



```
DEST[15:0] \leftarrow TEMP0[31:16];
   DEST[31:16] \leftarrow TEMP1[31:16];
   DEST[47:32] \leftarrow TEMP2[31:16];
   DEST[63:48] \leftarrow TEMP3[31:16];
PMULHUW instruction with 128-bit operands:
   TEMP0[31:0] ← DEST[15:0] * SRC[15:0]; (* Unsigned multiplication *)
   TEMP1[31:0] \leftarrow DEST[31:16] * SRC[31:16];
   TEMP2[31:0] \leftarrow DEST[47:32] * SRC[47:32];
   TEMP3[31:0] \leftarrow DEST[63:48] * SRC[63:48];
   TEMP4[31:0] \leftarrow DEST[79:64] * SRC[79:64];
   TEMP5[31:0] \leftarrow DEST[95:80] * SRC[95:80];
   TEMP6[31:0] \leftarrow DEST[111:96] * SRC[111:96];
   TEMP7[31:0] \leftarrow DEST[127:112] * SRC[127:112];
   DEST[15:0] \leftarrow TEMP0[31:16];
   DEST[31:16] \leftarrow TEMP1[31:16];
   \mathsf{DEST}[47:32] \leftarrow \mathsf{TEMP2}[31:16];
   DEST[63:48] \leftarrow TEMP3[31:16];
   DEST[79:64] \leftarrow TEMP4[31:16];
   DEST[95:80] \leftarrow TEMP5[31:16];
   DEST[111:96] \leftarrow TEMP6[31:16];
   DEST[127:112] \leftarrow TEMP7[31:16];
```

PMULHUW __m64 _mm_mulhi_pu16(__m64 a, __m64 b)

PMULHUW __m128i _mm_mulhi_epu16 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.



INSTRUCTION SET REFERENCE, N-Z

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMULHW—Multiply Packed Signed Integers and Store High Result

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E5 /r	PMULHW mm, mm/m64	Valid	Valid	Multiply the packed signed word integers in <i>mm1</i> register and <i>mm2/m64</i> , and store the high 16 bits of the results in <i>mm1</i> .
66 0F E5 /r	PMULHW xmm1, xmm2/m128	Valid	Valid	Multiply the packed signed word integers in <i>xmm1</i> and <i>xmm2/m128</i> , and store the high 16 bits of the results in <i>xmm1</i> .

Description

Performs an SIMD signed multiply of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and stores the high 16 bits of each intermediate 32-bit result in the destination operand. (Figure 4-3 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

n 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PMULHW instruction with 64-bit operands:
   TEMP0[31:0] ← DEST[15:0] * SRC[15:0]; (* Signed multiplication *)
   TEMP1[31:0] \leftarrow DEST[31:16] * SRC[31:16];
   TEMP2[31:0] \leftarrow DEST[47:32] * SRC[47:32];
   TEMP3[31:0] \leftarrow DEST[63:48] * SRC[63:48];
   DEST[15:0] \leftarrow TEMP0[31:16];
   DEST[31:16] \leftarrow TEMP1[31:16];
   DEST[47:32] \leftarrow TEMP2[31:16];
   DEST[63:48] \leftarrow TEMP3[31:16];
PMULHW instruction with 128-bit operands:
   TEMPO[31:0] \leftarrow DEST[15:0] * SRC[15:0]; (* Signed multiplication *)
   TEMP1[31:0] \leftarrow DEST[31:16] * SRC[31:16];
   TEMP2[31:0] \leftarrow DEST[47:32] * SRC[47:32];
   TEMP3[31:0] \leftarrow DEST[63:48] * SRC[63:48];
   TEMP4[31:0] \leftarrow DEST[79:64] * SRC[79:64];
   TEMP5[31:0] \leftarrow DEST[95:80] * SRC[95:80];
   TEMP6[31:0] \leftarrow DEST[111:96] * SRC[111:96];
   TEMP7[31:0] \leftarrow DEST[127:112] * SRC[127:112];
   DEST[15:0] \leftarrow TEMP0[31:16];
   DEST[31:16] \leftarrow TEMP1[31:16];
```



```
\begin{array}{lll} \mathsf{DEST}[47:32] \leftarrow & \mathsf{TEMP2}[31:16]; \\ \mathsf{DEST}[63:48] \leftarrow & \mathsf{TEMP3}[31:16]; \\ \mathsf{DEST}[79:64] \leftarrow & \mathsf{TEMP4}[31:16]; \\ \mathsf{DEST}[95:80] \leftarrow & \mathsf{TEMP5}[31:16]; \\ \mathsf{DEST}[111:96] \leftarrow & \mathsf{TEMP6}[31:16]; \\ \mathsf{DEST}[127:112] \leftarrow & \mathsf{TEMP7}[31:16]; \\ \end{array}
```

```
PMULHW __m64 _mm_mulhi_pi16 (__m64 m1, __m64 m2)

PMULHW __m128i _mm_mulhi_epi16 ( __m128i a, __m128i b)
```

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

INSTRUCTION SET REFERENCE, N-Z



#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMULLW—Multiply	/ Packed Signed In	ntegers and Store	Low Result

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D5 /r	PMULLW mm, mm/m64	Valid	Valid	Multiply the packed signed word integers in <i>mm1</i> register and <i>mm2/m64</i> , and store the low 16 bits of the results in <i>mm1</i> .
66 0F D5 /r	PMULLW xmm1, xmm2/m128	Valid	Valid	Multiply the packed signed word integers in <i>xmm1</i> and <i>xmm2/m128</i> , and store the low 16 bits of the results in <i>xmm1</i> .

Description

Performs an SIMD signed multiply of the packed signed word integers in the destination operand (first operand) and the source operand (second operand), and stores the low 16 bits of each intermediate 32-bit result in the destination operand. (Figure 4-3 shows this operation when using 64-bit operands.) The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register.

n 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

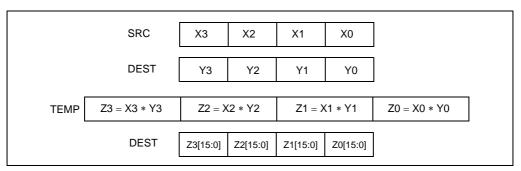


Figure 4-4. PMULLU Instruction Operation Using 64-bit Operands

Operation

PMULLW instruction with 64-bit operands:

```
\label{eq:tempo} \begin{split} \mathsf{TEMP0}[31:0] \leftarrow & \mathsf{DEST}[15:0] * \mathsf{SRC}[15:0]; \ (* \ \mathsf{Signed \ multiplication} \ *) \\ \mathsf{TEMP1}[31:0] \leftarrow & \mathsf{DEST}[31:16] * \mathsf{SRC}[31:16]; \\ \mathsf{TEMP2}[31:0] \leftarrow & \mathsf{DEST}[47:32] * \mathsf{SRC}[47:32]; \end{split}
```

 $TEMP3[31:0] \leftarrow DEST[63:48] * SRC[63:48];$

DEST[15:0] \leftarrow TEMP0[15:0];



```
DEST[31:16] \leftarrow TEMP1[15:0];
   DEST[47:32] \leftarrow TEMP2[15:0];
   DEST[63:48] \leftarrow TEMP3[15:0];
PMULLW instruction with 64-bit operands:
   TEMP0[31:0] ← DEST[15:0] * SRC[15:0]; (* Signed multiplication *)
   TEMP1[31:0] \leftarrow DEST[31:16] * SRC[31:16];
   TEMP2[31:0] \leftarrow DEST[47:32] * SRC[47:32];
   TEMP3[31:0] \leftarrow DEST[63:48] * SRC[63:48];
   TEMP4[31:0] \leftarrow DEST[79:64] * SRC[79:64];
   TEMP5[31:0] \leftarrow DEST[95:80] * SRC[95:80];
   TEMP6[31:0] \leftarrow DEST[111:96] * SRC[111:96]:
   TEMP7[31:0] \leftarrow DEST[127:112] * SRC[127:112];
   DEST[15:0] \leftarrow TEMP0[15:0];
   DEST[31:16] \leftarrow TEMP1[15:0];
   DEST[47:32] \leftarrow TEMP2[15:0];
   DEST[63:48] \leftarrow TEMP3[15:0];
   DEST[79:64] \leftarrow TEMP4[15:0];
   DEST[95:80] \leftarrow TEMP5[15:0];
   DEST[111:96] \leftarrow TEMP6[15:0];
   DEST[127:112] \leftarrow TEMP7[15:0];
```

```
PMULLW __m64 _mm_mullo_pi16(__m64 m1, __m64 m2)

PMULLW __m128i _mm_mullo_epi16 ( __m128i a, __m128i b)
```

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one



INSTRUCTION SET REFERENCE, N-Z

that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PMULUDQ—Multiply Packed Unsigned Doubleword Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F4 /r	PMULUDQ mm1, mm2/m64	Valid	Valid	Multiply unsigned doubleword integer in <i>mm1</i> by unsigned doubleword integer in <i>mm2/m64</i> , and store the quadword result in <i>mm1</i> .
66 OF F4 /r	PMULUDQ xmm1, xmm2/m128	Valid	Valid	Multiply packed unsigned doubleword integers in <i>xmm1</i> by packed unsigned doubleword integers in <i>xmm2/m128</i> , and store the quadword results in <i>xmm1</i> .

Description

Multiplies the first operand (destination operand) by the second operand (source operand) and stores the result in the destination operand. The source operand can be an unsigned doubleword integer stored in the low doubleword of an MMX technology register or a 64-bit memory location, or it can be two packed unsigned doubleword integers stored in the first (low) and third doublewords of an XMM register or an 128-bit memory location. The destination operand can be an unsigned doubleword integer stored in the low doubleword an MMX technology register or two packed doubleword integers stored in the first and third doublewords of an XMM register. The result is an unsigned quadword integer stored in the destination an MMX technology register or two packed unsigned quadword integers stored in an XMM register. When a quadword result is too large to be represented in 64 bits (overflow), the result is wrapped around and the low 64 bits are written to the destination element (that is, the carry is ignored).

For 64-bit memory operands, 64 bits are fetched from memory, but only the low doubleword is used in the computation; for 128-bit memory operands, 128 bits are fetched from memory, but only the first and third doublewords are used in the computation.

n 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PMULUDQ instruction with 64-Bit operands:

DEST[63:0] ← DEST[31:0] * SRC[31:0];

PMULUDQ instruction with 128-Bit operands:

DEST[63:0] ← DEST[31:0] * SRC[31:0];

DEST[127:64] ← DEST[95:64] * SRC[95:64];
```

Intel C/C++ Compiler Intrinsic Equivalent

```
PMULUDQ __m64 _mm_mul_su32 (__m64 a, __m64 b)
PMULUDQ __m128i _mm_mul_epu32 (__m128i a, __m128i b)
```



Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.



Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



POP—Pop a Value from the Stack

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
8F /0	POP r/m16	Valid	Valid	Pop top of stack into <i>m16</i> ; increment stack pointer.
8F /0	POP r/m32	N.E.	Valid	Pop top of stack into <i>m32</i> ; increment stack pointer.
8F /0	POP r/ <i>m64</i>	Valid	N.E.	Pop top of stack into <i>m64</i> ; increment stack pointer. Cannot encode 32-bit operand size.
58+ rw	POP <i>r16</i>	Valid	Valid	Pop top of stack into <i>r16</i> ; increment stack pointer.
58+ rd	POP <i>r</i> 32	N.E.	Valid	Pop top of stack into <i>r32</i> ; increment stack pointer.
58+ rd	POP <i>r64</i>	Valid	N.E.	Pop top of stack into <i>r64</i> ; increment stack pointer. Cannot encode 32-bit operand size.
1F	POP DS	Invalid	Valid	Pop top of stack into DS; increment stack pointer.
07	POP ES	Invalid	Valid	Pop top of stack into ES; increment stack pointer.
17	POP SS	Invalid	Valid	Pop top of stack into SS; increment stack pointer.
0F A1	POP FS	Valid	Valid	Pop top of stack into FS; increment stack pointer by 16 bits.
0F A1	POP FS	N.E.	Valid	Pop top of stack into FS; increment stack pointer by 32 bits.
0F A1	POP FS	Valid	N.E.	Pop top of stack into FS; increment stack pointer by 64 bits.
0F A9	POP GS	Valid	Valid	Pop top of stack into GS; increment stack pointer by 16 bits.
0F A9	POP GS	N.E.	Valid	Pop top of stack into GS; increment stack pointer by 32 bits.
0F A9	POP GS	Valid	N.E.	Pop top of stack into GS; increment stack pointer by 64 bits.

Description

Loads the value from the top of the stack to the location specified with the destination operand (or explicit opcode) and then increments the stack pointer. The destination operand can be a general-purpose register, memory location, or segment register.

The address-size attribute of the stack segment determines the stack pointer size (16, 32, 64 bits) and the operand-size attribute of the current code segment determines the amount the stack pointer is incremented (2, 4, 8 bytes).

For example, if the address- and operand-size attributes are 32, the 32-bit ESP register (stack pointer) is incremented by 4; if they are 16, the 16-bit SP register is incremented by 2. (The B flag in the stack segment's segment descriptor determines the stack's address-size attribute,

INSTRUCTION SET REFERENCE, N-Z



and the D flag in the current code segment's segment descriptor, along with prefixes, determines the operand-size attribute and also the address-size attribute of the destination operand.)

If the destination operand is one of the segment registers DS, ES, FS, GS, or SS, the value loaded into the register must be a valid segment selector. In protected mode, popping a segment selector into a segment register automatically causes the descriptor information associated with that segment selector to be loaded into the hidden (shadow) part of the segment register and causes the selector and the descriptor information to be validated (see the "Operation" section below).

A NULL value (0000-0003) may be popped into the DS, ES, FS, or GS register without causing a general protection fault. However, any subsequent attempt to reference a segment whose corresponding segment register is loaded with a NULL value causes a general protection exception (#GP). In this situation, no memory reference occurs and the saved value of the segment register is NULL.

The POP instruction cannot pop a value into the CS register. To load the CS register from the stack, use the RET instruction.

If the ESP register is used as a base register for addressing a destination operand in memory, the POP instruction computes the effective address of the operand after it increments the ESP register. For the case of a 16-bit stack where ESP wraps to 0H as a result of the POP instruction, the resulting location of the memory write is processor-family-specific.

The POP ESP instruction increments the stack pointer (ESP) before data at the old top of stack is written into the destination.

A POP SS instruction inhibits all interrupts, including the NMI interrupt, until after execution of the next instruction. This action allows sequential execution of POP SS and MOV ESP, EBP instructions without the danger of having an invalid stack during an interrupt¹. However, use of the LSS instruction is the preferred method of loading the SS and ESP registers.

In 64-bit mode, using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). When in 64-bit mode, POPs using 32-bit operands are not encodable and POPs to DS, ES, SS are not valid. See the summary chart at the beginning of this section for encoding data and limits.

In the following sequence, interrupts may be recognized before POP ESP executes:

POP SS

POP SS

POP ESP

If a code instruction breakpoint (for debug) is placed on an instruction located immediately after a POP SS instruction, the breakpoint may not be triggered. However, in a sequence of instructions that POP the SS register, only the first instruction in the sequence is guaranteed to delay an interrupt.



Operation

```
IF StackAddrSize = 32
   THEN
       IF OperandSize = 32
            THEN
                DEST ← SS:ESP; (* Copy a doubleword *)
                ESP \leftarrow ESP + 4;
            ELSE (* OperandSize = 16*)
                DEST ← SS:ESP: (* Copy a word *)
                ESP \leftarrow ESP + 2;
       FI:
   ELSE IF StackAddrSize = 64
       THEN
            IF OperandSize = 64
                THEN
                     DEST ← SS:RSP; (* Copy quadword *)
                     RSP \leftarrow RSP + 8:
                ELSE (* OperandSize = 16*)
                     DEST ← SS:RSP; (* Copy a word *)
                     RSP \leftarrow RSP + 2:
            FI;
       FI:
   ELSE StackAddrSize = 16
       THEN
            IF OperandSize = 16
                THEN
                     DEST ← SS:SP; (* Copy a word *)
                     SP \leftarrow SP + 2:
                ELSE (* OperandSize = 32 *)
                     DEST ← SS:SP; (* Copy a doubleword *)
                     SP \leftarrow SP + 4:
            FI;
```

FI;

Loading a segment register while in protected mode results in special actions, as described in the following listing. These checks are performed on the segment selector and the segment descriptor it points to.

```
64-BIT_MODE

IF FS, or GS is loaded with non-NULL selector;
THEN

IF segment selector index is outside descriptor table limits

OR segment is not a data or readable code segment

OR ((segment is a data or nonconforming code segment)

AND (both RPL and CPL > DPL))

THEN #GP(selector);
```



```
IF segment not marked present
               THEN #NP(selector);
       ELSE
           SegmentRegister ← segment selector;
           SegmentRegister ← segment descriptor;
       FI:
FI;
IF FS, or GS is loaded with a NULL selector;
       THEN
           SegmentRegister ← segment selector:
           SegmentRegister ← segment descriptor;
FI;
PREOTECTED MODE OR COMPATIBILITY MODE:
IF SS is loaded:
   THEN
       IF segment selector is NULL
           THEN #GP(0):
       FI:
       IF segment selector index is outside descriptor table limits
           or segment selector's RPL ≠ CPL
           or segment is not a writable data segment
           or DPL ≠ CPL
               THEN #GP(selector);
       FI:
       IF segment not marked present
           THEN #SS(selector);
           ELSE
               SS ← segment selector;
               SS ← segment descriptor;
       FI:
FI;
IF DS, ES, FS, or GS is loaded with non-NULL selector;
   THEN
       IF segment selector index is outside descriptor table limits
           or segment is not a data or readable code segment
           or ((segment is a data or nonconforming code segment)
           and (both RPL and CPL > DPL))
               THEN #GP(selector);
       FI;
       IF segment not marked present
           THEN #NP(selector);
           ELSE
                SegmentRegister ← segment selector;
                SegmentRegister ← segment descriptor;
```



FI;

FI;

IF DS, ES, FS, or GS is loaded with a NULL selector

THEN

SegmentRegister ← segment selector; SegmentRegister ← segment descriptor;

FI;

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If attempt is made to load SS register with NULL segment selector.

If the destination operand is in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#GP(selector) If segment selector index is outside descriptor table limits.

If the SS register is being loaded and the segment selector's RPL and the

segment descriptor's DPL are not equal to the CPL.

If the SS register is being loaded and the segment pointed to is a

non-writable data segment.

If the DS, ES, FS, or GS register is being loaded and the segment pointed

to is not a data or readable code segment.

If the DS, ES, FS, or GS register is being loaded and the segment pointed

to is a data or nonconforming code segment, but both the RPL and the CPL

are greater than the DPL.

#SS(0) If the current top of stack is not within the stack segment.

If a memory operand effective address is outside the SS segment limit.

#SS(selector) If the SS register is being loaded and the segment pointed to is marked not

present.

#NP If the DS, ES, FS, or GS register is being loaded and the segment pointed

to is marked not present.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current privilege level

is 3 and alignment checking is enabled.



Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment checking is

enabled.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#SS(U) If the stack address is in a non-canonical form.

#GP(selector) If the descriptor is outside the descriptor table limit.

If the FS or GS register is being loaded and the segment pointed to is not

a data or readable code segment.

If the FS or GS register is being loaded and the segment pointed to is a data

or nonconforming code segment, but both the RPL and the CPL are greater

than the DPL.

#AC(0) If an unaligned memory reference is made while alignment checking is

enabled.

#PF(fault-code) If a page fault occurs.

#NP If the FS or GS register is being loaded and the segment pointed to is

marked not present.



POPA/POPAD—Pop All General-Purpose Registers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
61	POPA	Invalid	Valid	Pop DI, SI, BP, BX, DX, CX, and AX.
61	POPAD	Invalid	Valid	Pop EDI, ESI, EBP, EBX, EDX, ECX, and EAX.

Description

Pops doublewords (POPAD) or words (POPA) from the stack into the general-purpose registers. The registers are loaded in the following order: EDI, ESI, EBP, EBX, EDX, ECX, and EAX (if the operand-size attribute is 32) and DI, SI, BP, BX, DX, CX, and AX (if the operand-size attribute is 16). (These instructions reverse the operation of the PUSHA/PUSHAD instructions.) The value on the stack for the ESP or SP register is ignored. Instead, the ESP or SP register is incremented after each register is loaded.

The POPA (pop all) and POPAD (pop all double) mnemonics reference the same opcode. The POPA instruction is intended for use when the operand-size attribute is 16 and the POPAD instruction for when the operand-size attribute is 32. Some assemblers may force the operand size to 16 when POPA is used and to 32 when POPAD is used (using the operand-size override prefix [66H] if necessary). Others may treat these mnemonics as synonyms (POPA/POPAD) and use the current setting of the operand-size attribute to determine the size of values to be popped from the stack, regardless of the mnemonic used. (The D flag in the current code segment's segment descriptor determines the operand-size attribute.)

This instruction executes as described in non-64-bit modes. It is not valid in 64-bit mode.

Operation

```
IF 64-Bit Mode
   THEN
         #UD;
   IF OperandSize = 32 (* Instruction = POPAD *)
   THEN
         EDI \leftarrow Pop();
         ESI \leftarrow Pop();
         EBP \leftarrow Pop();
         Increment ESP by 4; (* Skip next 4 bytes of stack *)
         EBX \leftarrow Pop():
         EDX \leftarrow Pop();
         ECX \leftarrow Pop():
         EAX \leftarrow Pop();
   ELSE (* OperandSize = 16, instruction = POPA *)
         DI \leftarrow Pop():
         SI \leftarrow Pop():
```



```
\begin{split} \mathsf{BP} \leftarrow \mathsf{Pop}(); \\ \mathsf{Increment} \ \mathsf{ESP} \ \mathsf{by} \ 2; \ (* \ \mathsf{Skip} \ \mathsf{next} \ 2 \ \mathsf{bytes} \ \mathsf{of} \ \mathsf{stack} \ *) \\ \mathsf{BX} \leftarrow \mathsf{Pop}(); \\ \mathsf{DX} \leftarrow \mathsf{Pop}(); \\ \mathsf{CX} \leftarrow \mathsf{Pop}(); \\ \mathsf{AX} \leftarrow \mathsf{Pop}(); \\ \mathsf{FI}; \\ \mathsf{FI}: \end{split}
```

Flags Affected

None.

Protected Mode Exceptions

#SS(0) If the starting or ending stack address is not within the stack segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current privilege level

is 3 and alignment checking is enabled.

Real-Address Mode Exceptions

#SS If the starting or ending stack address is not within the stack segment.

Virtual-8086 Mode Exceptions

#SS(0) If the starting or ending stack address is not within the stack segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment checking is

enabled.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#UD If in 64-bit mode.



POPF/POPFD/POPFQ—Pop Stack into EFLAGS Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9D	POPF	Valid	Valid	Pop top of stack into lower 16 bits of EFLAGS.
9D	POPFD	N.E.	Valid	Pop top of stack into EFLAGS.
REX.W + 9D	POPFQ	Valid	N.E.	Pop top of stack and zero-extend into RFLAGS.

Description

Pops a doubleword (POPFD) from the top of the stack (if the current operand-size attribute is 32) and stores the value in the EFLAGS register, or pops a word from the top of the stack (if the operand-size attribute is 16) and stores it in the lower 16 bits of the EFLAGS register (that is, the FLAGS register). These instructions reverse the operation of the PUSHF/PUSHFD instructions

The POPF (pop flags) and POPFD (pop flags double) mnemonics reference the same opcode. The POPF instruction is intended for use when the operand-size attribute is 16; the POPFD instruction is intended for use when the operand-size attribute is 32. Some assemblers may force the operand size to 16 for POPF and to 32 for POPFD. Others may treat the mnemonics as synonyms (POPF/POPFD) and use the setting of the operand-size attribute to determine the size of values to pop from the stack.

The effect of POPF/POPFD on the EFLAGS register changes, depending on the mode of operation. When the processor is operating in protected mode at privilege level 0 (or in real-address mode, the equivalent to privilege level 0), all non-reserved flags in the EFLAGS register except VIP, VIF, and VM may be modified. VIP, VIF and VM remain unaffected.

When operating in protected mode with a privilege level greater than 0, but less than or equal to IOPL, all flags can be modified except the IOPL field and VIP, VIF, and VM. Here, the IOPL flags are unaffected, the VIP and VIF flags are cleared, and the VM flag is unaffected. The interrupt flag (IF) is altered only when executing at a level at least as privileged as the IOPL. If a POPF/POPFD instruction is executed with insufficient privilege, an exception does not occur but privileged bits do not change.

When operating in virtual-8086 mode, the IOPL must be equal to 3 to use POPF/POPFD instructions; VM, RF, IOPL, VIP, and VIF are unaffected. If the IOPL is less than 3, POPF/POPFD causes a general-protection exception (#GP).

In 64-bit mode, use REX.W to pop the top of stack to RFLAGS. The mnemonic assigned is POPFQ (note that the 32-bit operand is not encodable). POPFQ pops 64 bits from the stack, loads the lower 32 bits into RFLAGS, and zero extends the upper bits of RFLAGS.

See the section titled "EFLAGS Register" in Chapter 3 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*, for information about the EFLAGS registers.



Operation

```
IF VM = 0 (* Not in Virtual-8086 Mode *)
   THEN IF CPL = 0
       THEN
            IF OperandSize = 32;
                 THEN
                      EFLAGS \leftarrow Pop(); (* 32-bit pop *)
                      (* All non-reserved flags except VIP, VIF, and VM can be modified;
                      VIP and VIF are cleared; VM and all reserved bits are unaffected *)
                 ELSE IF (Operandsize = 64)
                      RFLAGS = Pop(); (* 64-bit pop *)
                      (* All non-reserved flags except VIP, VIF, and VM can be modified; VIP
                      and VIF are cleared; VM and all reserved bits are unaffected *)
                 ELSE (* OperandSize = 16 *)
                      EFLAGS[15:0] \leftarrow Pop(); (* 16-bit pop *)
                      (* All non-reserved flags can be modified *)
        ELSE (* CPL > 0 *)
            IF OperandSize = 32
                 THEN
                     IF CPL > IOPL
                          THEN
                               EFLAGS ← Pop(); (* 32-bit pop *)
(* All non-reserved bits except IF, IOPL, VIP, and VIF can be
                               modified; IF, IOPL, and VM, and all reserved bits are unaffected;
                               VIP and VIF are cleared *)
                               EFLAGS \leftarrow Pop(); (* 32-bit pop *)
                               (* All non-reserved bits except IOPL, VIP, and VIF can be
                               modified; IOPL, VM, and all reserved bits are unaffected;
                               VIP and VIF are cleared *)
                 ELSE IF (Operandsize = 64)
                     ĪF CPL' > IOPL
                          THEN
                               RFLAGS \leftarrow Pop(); (* 64-bit pop *)
                               (* All non-reserved bits except IF, IOPL, VIP, and VIF can
                               be modified; IF, IOPL, VM, and all reserved bits are unaffected;
                               VIP and VIF are cleared *)
                          ELSE
                               RFLAGS \leftarrow Pop(); (* 64-bit pop *)
                               (* All non-reserved bits except IOPL, VIP, and VIF can be
                               modified; IOPL, VM, and all reserved bits are unaffected;
                               VIP and VIF are cleared *)
                      FI:
                 ELSE (* OperandSize = 16 *)
                      EFLAGS[15:0] ← Pop(); (* 16-bit pop *)
                      (* All non-reserved bits except IOPL can be modified; IOPL and all
                      reserved bits are unaffected *)
            FI:
   ELSE (* In Virtual-8086 Mode *)
        IF IOPL = 3
            THEN IF OperandSize = 32
```



Flags Affected

All flags except the reserved bits and the VM bit.

Protected Mode Exceptions

#SS(0) If the top of stack is not within the stack segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current privilege level

is 3 and alignment checking is enabled.

Real-Address Mode Exceptions

#SS If the top of stack is not within the stack segment.

Virtual-8086 Mode Exceptions

#GP(0) If the I/O privilege level is less than 3.

If an attempt is made to execute the POPF/POPFD instruction with an

operand-size override prefix.

#SS(0) If the top of stack is not within the stack segment.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment checking is

enabled.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#SS(U) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is



POR—Bitwise Logical OR

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F EB /r	POR mm, mm/m64	Valid	Valid	Bitwise OR of mm/m64 and mm.
66 0F EB /r	POR xmm1, xmm2/m128	Valid	Valid	Bitwise OR of xmm2/m128 and xmm1.

Description

Performs a bitwise logical OR operation on the source operand (second operand) and the destination operand (first operand) and stores the result in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is set to 1 if either or both of the corresponding bits of the first and second operands are 1; otherwise, it is set to 0.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST ← DEST OR SRC:

Intel C/C++ Compiler Intrinsic Equivalent

POR __m64 _mm_or_si64(__m64 m1, __m64 m2)
POR __m128i _mm_or_si128(__m128i m1, __m128i m2)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.





#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

128-bit operations will generate #UD only if CR4.OSFXSR[bit 9] = 0. Execution of 128-bit instructions on a non-SSE2 capable processor (one that is MMX technology capable) will result in the instruction operating

on the mm registers, not #UD.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



PREFETCHh—Prefetch Data Into Caches

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 18 /1	PREFETCHT0 m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using T0 hint.
0F 18 /2	PREFETCHT1 m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using T1 hint.
0F 18 /3	PREFETCHT2 m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using T2 hint.
0F 18 /0	PREFETCHNTA m8	Valid	Valid	Move data from <i>m8</i> closer to the processor using NTA hint.

Description

Fetches the line of data from memory that contains the byte specified with the source operand to a location in the cache hierarchy specified by a locality hint:

- T0 (temporal data)—prefetch data into all levels of the cache hierarchy.
 - Pentium III processor—1st- or 2nd-level cache.
 - Pentium 4 and Intel Xeon processors—2nd-level cache.
- T1 (temporal data with respect to first level cache)—prefetch data into level 2 cache and higher.
 - Pentium III processor—2nd-level cache.
 - Pentium 4 and Intel Xeon processors—2nd-level cache.
- T2 (temporal data with respect to second level cache)—prefetch data into level 2 cache and higher.
 - Pentium III processor—2nd-level cache.
 - Pentium 4 and Intel Xeon processors—2nd-level cache.
- NTA (non-temporal data with respect to all cache levels)—prefetch data into non-temporal cache structure and into a location close to the processor, minimizing cache pollution.
 - Pentium III processor—1st-level cache
 - Pentium 4 and Intel Xeon processors—2nd-level cache

The source operand is a byte memory location. (The locality hints are encoded into the machine level instruction using bits 3 through 5 of the ModR/M byte. Use of any ModR/M value other than the specified ones will lead to unpredictable behavior.)

If the line selected is already present in the cache hierarchy at a level closer to the processor, no data movement occurs. Prefetches from uncacheable or WC memory are ignored.

INSTRUCTION SET REFERENCE, N-Z



The PREFETCH*h* instruction is merely a hint and does not affect program behavior. If executed, this instruction moves data closer to the processor in anticipation of future use.

The implementation of prefetch locality hints is implementation-dependent, and can be overloaded or ignored by a processor implementation. The amount of data prefetched is also processor implementation-dependent. It will, however, be a minimum of 32 bytes.

It should be noted that processors are free to speculatively fetch and cache data from system memory regions that are assigned a memory-type that permits speculative reads (that is, the WB, WC, and WT memory types). A PREFETCHh instruction is considered a hint to this speculative behavior. Because this speculative fetching can occur at any time and is not tied to instruction execution, a PREFETCHh instruction is not ordered with respect to the fence instructions (MFENCE, SFENCE, and LFENCE) or locked memory references. A PREFETCHh instruction is also unordered with respect to CLFLUSH instructions, other PREFETCHh instructions, or any other general instruction. It is ordered with respect to serializing instructions such as CPUID, WRMSR, OUT, and MOV CR.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

FETCH (m8);

Intel C/C++ Compiler Intrinsic Equivalent

void_mm_prefetch(char *p, int i)

The argument "*p" gives the address of the byte (and corresponding cache line) to be prefetched. The value "i" gives a constant (_MM_HINT_T0, _MM_HINT_T1, _MM_HINT_T2, or _MM_HINT_NTA) that specifies the type of prefetch operation to be performed.

Numeric Exceptions

None.

Exceptions (All Operating Modes)

None.



PSADBW—Compute Sum of Absolute Differences

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F6 /r	PSADBW mm1, mm2/m64	Valid	Valid	Computes the absolute differences of the packed unsigned byte integers from <i>mm2</i> / <i>m64</i> and <i>mm1</i> ; differences are then summed to produce an unsigned word integer result.
66 0F F6 /r	PSADBW xmm1, xmm2/m128	Valid	Valid	Computes the absolute differences of the packed unsigned byte integers from xmm2/m128 and xmm1; the 8 low differences and 8 high differences are then summed separately to produce two unsigned word integer results.

Description

Computes the absolute value of the difference of 8 unsigned byte integers from the source operand (second operand) and from the destination operand (first operand). These 8 differences are then summed to produce an unsigned word integer result that is stored in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Figure 4-5 shows the operation of the PSADBW instruction when using 64-bit operands.

When operating on 64-bit operands, the word integer result is stored in the low word of the destination operand, and the remaining bytes in the destination operand are cleared to all 0s.

When operating on 128-bit operands, two packed results are computed. Here, the 8 low-order bytes of the source and destination operands are operated on to produce a word result that is stored in the low word of the destination operand, and the 8 high-order bytes are operated on to produce a word result that is stored in bits 64 through 79 of the destination operand. The remaining bytes of the destination operand are cleared.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



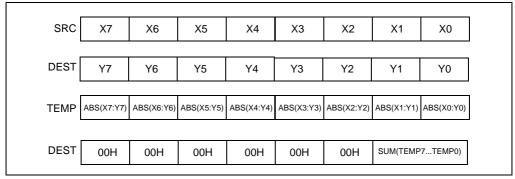


Figure 4-5. PSADBW Instruction Operation Using 64-bit Operands

```
Operation
PSADBW instructions when using 64-bit operands:
   TEMP0 \leftarrow ABS(DEST[7:0] - SRC[7:0]);
   (* Repeat operation for bytes 2 through 6 *)
   TEMP7 \leftarrow ABS(DEST[63:56] - SRC[63:56]);
   DEST[15:0] \leftarrow SUM(TEMP0:TEMP7);
   DEST[63:16] \leftarrow 000000000000H;
PSADBW instructions when using 128-bit operands:
   TEMP0 \leftarrow ABS(DEST[7:0] - SRC[7:0]);
   (* Repeat operation for bytes 2 through 14 *)
   TEMP15 \leftarrow ABS(DEST[127:120] - SRC[127:120]);
   DEST[15:0] \leftarrow SUM(TEMP0:TEMP7);
   DEST[63:6] \leftarrow 000000000000H;
   DEST[79:64] \leftarrow SUM(TEMP8:TEMP15):
   DEST[127:80] \leftarrow 000000000000H;
Intel C/C++ Compiler Intrinsic Equivalent
PSADBW
                __m64_mm_sad_pu8(__m64 a, __m64 b)
PSADBW
                __m128i _mm_sad_epu8(__m128i a, __m128i b)
Flags Affected
None.
```

Numeric Exceptions

None.



Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



PSHUFU—	-Snuttle P	'аскеа L	oublewo	ras

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 70 /r ib	PSHUFD xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle the doublewords in xmm2/m128 based on the encoding in imm8 and store the result in xmm1.

Description

Copies doublewords from source operand (second operand) and inserts them in the destination operand (first operand) at the locations selected with the order operand (third operand). Figure 4-6 shows the operation of the PSHUFD instruction and the encoding of the order operand. Each 2-bit field in the order operand selects the contents of one doubleword location in the destination operand. For example, bits 0 and 1 of the order operand select the contents of doubleword 0 of the destination operand. The encoding of bits 0 and 1 of the order operand (see the field encoding in Figure 4-6) determines which doubleword from the source operand will be copied to doubleword 0 of the destination operand.

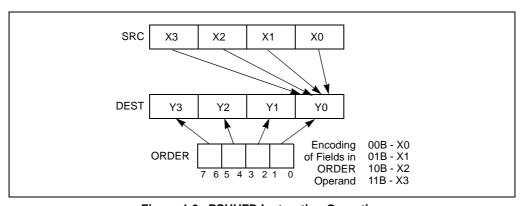


Figure 4-6. PSHUFD Instruction Operation

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The order operand is an 8-bit immediate. Note that this instruction permits a doubleword in the source operand to be copied to more than one doubleword location in the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

DEST[31:0] \leftarrow (SRC >> (ORDER[1:0] * 32))[31:0]; DEST[63:32] \leftarrow (SRC >> (ORDER[3:2] * 32))[31:0]; DEST[95:64] \leftarrow (SRC >> (ORDER[5:4] * 32))[31:0]; DEST[127:96] \leftarrow (SRC >> (ORDER[7:6] * 32))[31:0];

Intel C/C++ Compiler Intrinsic Equivalent

PSHUFD __m128i _mm_shuffle_epi32(__m128i a, int n)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1. #PF(fault-code) If a page fault occurs.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.



PSHUFHW—Shuffle Packed High Words

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 70 /r ib	PSHUFHW xmm1, xmm2/ m128, imm8	Valid	Valid	Shuffle the high words in xmm2/m128 based on the encoding in imm8 and store the result in xmm1.

Description

Copies words from the high quadword of the source operand (second operand) and inserts them in the high quadword of the destination operand (first operand) at word locations selected with the order operand (third operand). This operation is similar to the operation used by the PSHUFD instruction, which is illustrated in Figure 4-6. For the PSHUFHW instruction, each 2-bit field in the order operand selects the contents of one word location in the high quadword of the destination operand. The binary encodings of the order operand fields select words (0, 1, 2 or 3, 4) from the high quadword of the source operand to be copied to the destination operand. The low quadword of the source operand is copied to the low quadword of the destination operand.

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The order operand is an 8-bit immediate. Note that this instruction permits a word in the high quadword of the source operand to be copied to more than one word location in the high quadword of the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
DEST[63:0] \leftarrow SRC[63:0];

DEST[79:64] \leftarrow (SRC >> (ORDER[1:0] * 16))[79:64];

DEST[95:80] \leftarrow (SRC >> (ORDER[3:2] * 16))[79:64];

DEST[111:96] \leftarrow (SRC >> (ORDER[5:4] * 16))[79:64];

DEST[127:112] \leftarrow (SRC >> (ORDER[7:6] * 16))[79:64];
```

Intel C/C++ Compiler Intrinsic Equivalent

```
PSHUFHW __m128i _mm_shufflehi_epi16(__m128i a, int n)
```

Flags Affected

None.

Numeric Exceptions

None.



Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1. #PF(fault-code) If a page fault occurs.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.



PSHUFLW—Shuffle Packed Low Words

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 0F 70 /r ib	PSHUFLW xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle the low words in xmm2/m128 based on the encoding in imm8 and store the result in xmm1.

Description

Copies words from the low quadword of the source operand (second operand) and inserts them in the low quadword of the destination operand (first operand) at word locations selected with the order operand (third operand). This operation is similar to the operation used by the PSHUFD instruction, which is illustrated in Figure 4-6. For the PSHUFLW instruction, each 2-bit field in the order operand selects the contents of one word location in the low quadword of the destination operand. The binary encodings of the order operand fields select words (0, 1, 2, or 3) from the low quadword of the source operand to be copied to the destination operand. The high quadword of the source operand is copied to the high quadword of the destination operand.

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The order operand is an 8-bit immediate. Note that this instruction permits a word in the low quadword of the source operand to be copied to more than one word location in the low quadword of the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
\begin{split} \mathsf{DEST}[15:0] &\leftarrow (\mathsf{SRC} >> (\mathsf{ORDER}[1:0] * 16))[15:0]; \\ \mathsf{DEST}[31:16] &\leftarrow (\mathsf{SRC} >> (\mathsf{ORDER}[3:2] * 16))[15:0]; \\ \mathsf{DEST}[47:32] &\leftarrow (\mathsf{SRC} >> (\mathsf{ORDER}[5:4] * 16))[15:0]; \\ \mathsf{DEST}[63:48] &\leftarrow (\mathsf{SRC} >> (\mathsf{ORDER}[7:6] * 16))[15:0]; \\ \mathsf{DEST}[127:64] &\leftarrow \mathsf{SRC}[127:64]; \end{split}
```

Intel C/C++ Compiler Intrinsic Equivalent

PSHUFLW __m128i _mm_shufflelo_epi16(__m128i a, int n)

Flags Affected

None.

Numeric Exceptions

None.



Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



INSTRUCTION SET REFERENCE, N-Z

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#PF(fault-code) If a page fault occurs.



PSHUFW—Shuffle Packed Words

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 70 /r ib	PSHUFW mm1, mm2/m64, imm8	Valid	Valid	Shuffle the words in <i>mm2/m64</i> based on the encoding in <i>imm8</i> and store the result in <i>mm1</i> .

Description

Copies words from the source operand (second operand) and inserts them in the destination operand (first operand) at word locations selected with the order operand (third operand). This operation is similar to the operation used by the PSHUFD instruction, which is illustrated in Figure 4-6. For the PSHUFW instruction, each 2-bit field in the order operand selects the contents of one word location in the destination operand. The encodings of the order operand fields select words from the source operand to be copied to the destination operand.

The source operand can be an MMX technology register or a 64-bit memory location. The destination operand is an MMX technology register. The order operand is an 8-bit immediate. Note that this instruction permits a word in the source operand to be copied to more than one word location in the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
DEST[15:0] \leftarrow (SRC >> (ORDER[1:0] * 16))[15:0];
DEST[31:16] \leftarrow (SRC >> (ORDER[3:2] * 16))[15:0];
DEST[47:32] \leftarrow (SRC >> (ORDER[5:4] * 16))[15:0];
DEST[63:48] \leftarrow (SRC >> (ORDER[7:6] * 16))[15:0];
```

Intel C/C++ Compiler Intrinsic Equivalent

PSHUFW __m64 _mm_shuffle_pi16(__m64 a, int n)

Flags Affected

None.

Numeric Exceptions

None.



Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#MF If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#MF If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#MF If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



PSLLDQ—Shift Double Quadword Left Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 73 /7 ib	PSLLDQ xmm1, imm8	Valid	Valid	Shift xmm1 left by imm8 bytes while shifting in 0s.

Description

Shifts the destination operand (first operand) to the left by the number of bytes specified in the count operand (second operand). The empty low-order bytes are cleared (set to all 0s). If the value specified by the count operand is greater than 15, the destination operand is set to all 0s. The destination operand is an XMM register. The count operand is an 8-bit immediate.

Operation

```
TEMP \leftarrow COUNT;
IF (TEMP > 15) THEN TEMP \leftarrow 16; FI;
DEST \leftarrow DEST << (TEMP * 8);
```

Intel C/C++ Compiler Intrinsic Equivalent

PSLLDQ __m128i _mm_slli_si128 (__m128i a, int imm)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

INSTRUCTION SET REFERENCE, N-Z



Real-Address Mode Exceptions

Same exceptions as in Protected Mode.

Virtual-8086 Mode Exceptions

Same exceptions as in Protected Mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



PSLLW/PSLLD/PSLLQ—Shift Packed Data Left Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F1 /r	PSLLW mm, mm/m64	Valid	Valid	Shift words in <i>mm</i> left <i>mm/m64</i> while shifting in 0s.
66 0F F1 /r	PSLLW xmm1, xmm2/m128	Valid	Valid	Shift words in <i>xmm1</i> left by <i>xmm2/m128</i> while shifting in 0s.
0F 71 /6 ib	PSLLW xmm1, imm8	Valid	Valid	Shift words in <i>mm</i> left by <i>imm8</i> while shifting in 0s.
66 0F 71 /6 ib	PSLLW xmm1, imm8	Valid	Valid	Shift words in <i>xmm1</i> left by <i>imm8</i> while shifting in 0s.
0F F2 /r	PSLLD mm, mm/m64	Valid	Valid	Shift doublewords in <i>mm</i> left by <i>mm/m64</i> while shifting in 0s.
66 0F F2 /r	PSLLD xmm1, xmm2/m128	Valid	Valid	Shift doublewords in <i>xmm1</i> left by <i>xmm2/m128</i> while shifting in 0s.
0F 72 /6 ib	PSLLD mm, imm8	Valid	Valid	Shift doublewords in <i>mm</i> left by <i>imm8</i> while shifting in 0s.
66 0F 72 /6 ib	PSLLD xmm1, imm8	Valid	Valid	Shift doublewords in xmm1 left by imm8 while shifting in 0s.
0F F3 /r	PSLLQ mm, mm/m64	Valid	Valid	Shift quadword in <i>mm</i> left by <i>mm/m64</i> while shifting in 0s.
66 0F F3 /r	PSLLQ xmm1, xmm2/m128	Valid	Valid	Shift quadwords in <i>xmm1</i> left by <i>xmm2/m128</i> while shifting in 0s.
0F 73 /6 ib	PSLLQ mm, imm8	Valid	Valid	Shift quadword in <i>mm</i> left by <i>imm8</i> while shifting in 0s.
66 0F 73 /6 ib	PSLLQ xmm1, imm8	Valid	Valid	Shift quadwords in <i>xmm1</i> left by <i>imm8</i> while shifting in 0s.

Description

Shifts the bits in the individual data elements (words, doublewords, or quadword) in the destination operand (first operand) to the left by the number of bits specified in the count operand (second operand). As the bits in the data elements are shifted left, the empty low-order bits are cleared (set to 0). If the value specified by the count operand is greater than 15 (for words), 31 (for doublewords), or 63 (for a quadword), then the destination operand is set to all 0s. (Figure 4-7 gives an example of shifting words in a 64-bit operand.) The destination operand may be an MMX technology register or an XMM register; the count operand can be either an MMX technology register or an 64-bit memory location, an XMM register or a 128-bit memory location, or an 8-bit immediate.



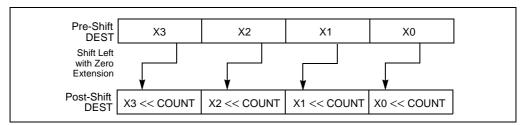


Figure 4-7. PSLLW, PSLLD, and PSLLQ Instruction Operation Using 64-bit Operand

The PSLLW instruction shifts each of the words in the destination operand to the left by the number of bits specified in the count operand; the PSLLD instruction shifts each of the doublewords in the destination operand; and the PSLLQ instruction shifts the quadword (or quadwords) in the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PSLLW instruction with 64-bit operand:
   IF (COUNT > 15)
   THEN
       DEST[64:0] \leftarrow 0000000000000000H;
   ELSE
       DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] << COUNT);
       (* Repeat shift operation for 2nd and 3rd words *)
       DEST[63:48] \leftarrow ZeroExtend(DEST[63:48] << COUNT);
   FI:
PSLLD instruction with 64-bit operand:
   IF (COUNT > 31)
   THEN
       DEST[64:0] \leftarrow 0000000000000000H;
   ELSE
       DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] << COUNT):
       DEST[63:32] \leftarrow ZeroExtend(DEST[63:32] << COUNT);
   FI:
PSLLQ instruction with 64-bit operand:
   IF (COUNT > 63)
   THEN
       DEST[64:0] \leftarrow 0000000000000000H;
   FLSE
       DEST ← ZeroExtend(DEST << COUNT);
   FI:
PSLLW instruction with 128-bit operand:
   IF (COUNT > 15)
```



```
THEN
      ELSE
      DEST[15:0] ← ZeroExtend(DEST[15:0] << COUNT);
      (* Repeat shift operation for 2nd through 7th words *)
      DEST[127:112] \leftarrow ZeroExtend(DEST[127:112] << COUNT);
  FI;
PSLLD instruction with 128-bit operand:
  IF (COUNT > 31)
  THEN
      ELSE
      DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] << COUNT);
      (* Repeat shift operation for 2nd and 3rd doublewords *)
      DEST[127:96] \leftarrow ZeroExtend(DEST[127:96] << COUNT);
  FI:
PSLLQ instruction with 128-bit operand:
  IF (COUNT > 63)
  THEN
      ELSE
      DEST[63:0] \leftarrow ZeroExtend(DEST[63:0] << COUNT);
      DEST[127:64] \leftarrow ZeroExtend(DEST[127:64] << COUNT):
  FI;
```

Intel C/C++ Compiler Intrinsic Equivalents

```
PSLLW
              m64 mm slli pi16 ( m64 m, int count)
PSLLW
              __m64 _mm_sll_pi16(__m64 m, __m64 count)
              __m128i _mm_slli_pi16(__m64 m, int count)
PSLLW
              __m128i _mm_slli_pi16(__m128i m, __m128i count)
PSLLW
PSLLD
              __m64 _mm_slli_pi32(__m64 m, int count)
              __m64 _mm_sll_pi32(__m64 m, __m64 count)
PSLLD
PSLLD
              m128i mm slli epi32( m128i m, int count)
PSLLD
              m128i mm sll epi32( m128i m, m128i count)
PSLLQ
              __m64 _mm_slli_si64(__m64 m, int count)
              __m64 _mm_sll_si64(__m64 m, __m64 count)
PSLLQ
              __m128i _mm_slli_si64(__m128i m, int count)
PSLLQ
PSLLQ
              m128i mm sll si64( m128i m, m128i count)
```

Flags Affected

None.



Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PSRAW/PSRAD—Shift Packed Data Right Arithmetic

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E1 /r	PSRAW mm, mm/m64	Valid	Valid	Shift words in <i>mm</i> right by <i>mm/m64</i> while shifting in sign bits.
66 0F E1 /r	PSRAW xmm1, xmm2/m128	Valid	Valid	Shift words in xmm1 right by xmm2/m128 while shifting in sign bits.
0F 71 /4 ib	PSRAW mm, imm8	Valid	Valid	Shift words in <i>mm</i> right by <i>imm8</i> while shifting in sign bits
66 0F 71 /4 ib	PSRAW xmm1, imm8	Valid	Valid	Shift words in xmm1 right by imm8 while shifting in sign bits
0F E2 /r	PSRAD mm, mm/m64	Valid	Valid	Shift doublewords in <i>mm</i> right by <i>mm/m64</i> while shifting in sign bits.
66 0F E2 /r	PSRAD xmm1, xmm2/m128	Valid	Valid	Shift doubleword in xmm1 right by xmm2 /m128 while shifting in sign bits.
0F 72 /4 ib	PSRAD mm, imm8	Valid	Valid	Shift doublewords in <i>mm</i> right by <i>imm8</i> while shifting in sign bits.
66 0F 72 /4 ib	PSRAD <i>xmm1</i> , imm8	Valid	Valid	Shift doublewords in <i>xmm1</i> right by <i>imm8</i> while shifting in sign bits.

Description

Shifts the bits in the individual data elements (words or doublewords) in the destination operand (first operand) to the right by the number of bits specified in the count operand (second operand). As the bits in the data elements are shifted right, the empty high-order bits are filled with the initial value of the sign bit of the data element. If the value specified by the count operand is greater than 15 (for words) or 31 (for doublewords), each destination data element is filled with the initial value of the sign bit of the element. (Figure 4-8 gives an example of shifting words in a 64-bit operand.)

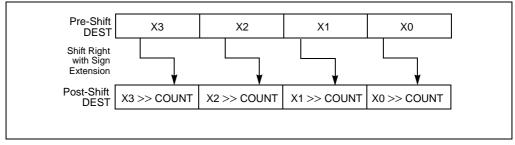


Figure 4-8. PSRAW and PSRAD Instruction Operation Using a 64-bit Operand



The destination operand may be an MMX technology register or an XMM register; the count operand can be either an MMX technology register or an 64-bit memory location, an XMM register or a 128-bit memory location, or an 8-bit immediate.

The PSRAW instruction shifts each of the words in the destination operand to the right by the number of bits specified in the count operand, and the PSRAD instruction shifts each of the doublewords in the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PSRAW instruction with 64-bit operand:
   IF (COUNT > 15)
       THEN COUNT \leftarrow 16:
   FI;
   DEST[15:0] \leftarrow SignExtend(DEST[15:0] >> COUNT);
   (* Repeat shift operation for 2nd and 3rd words *)
   DEST[63:48] \leftarrow SignExtend(DEST[63:48] >> COUNT);
PSRAD instruction with 64-bit operand:
   IF (COUNT > 31)
        THEN COUNT \leftarrow 32:
   FI:
   DEST[31:0] \leftarrow SignExtend(DEST[31:0] >> COUNT);
   DEST[63:32] \leftarrow SignExtend(DEST[63:32] >> COUNT);
PSRAW instruction with 128-bit operand:
   IF (COUNT > 15)
       THEN COUNT \leftarrow 16:
   FI:
   DEST[15:0] \leftarrow SignExtend(DEST[15:0] >> COUNT);
   (* Repeat shift operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SignExtend(DEST[127:112] >> COUNT);
PSRAD instruction with 128-bit operand:
   IF (COUNT > 31)
        THEN COUNT ← 32:
   FI;
   DEST[31:0] \leftarrow SignExtend(DEST[31:0] >> COUNT);
   (* Repeat shift operation for 2nd and 3rd doublewords *)
   DEST[127:96] \leftarrow SignExtend(DEST[127:96] >> COUNT):
```



Intel C/C++ Compiler Intrinsic Equivalents

PSRAW m64 mm srai pi16 (m64 m, int count) __m64 _mm_sraw_pi16 (__m64 m, __m64 count) **PSRAW** __m64 _mm_srai_pi32 (__m64 m, int count) **PSRAD PSRAD** __m64 _mm_sra_pi32 (__m64 m, __m64 count) __m128i _mm_srai_epi16(__m128i m, int count) **PSRAW** m128i mm sra epi16(m128i m, m128i count)) **PSRAW** __m128i _mm_srai_epi32 (__m128i m, int count) **PSRAD PSRAD** __m128i _mm_sra_epi32 (__m128i m, __m128i count)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.





#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PSRLDQ—Shift Double Quadword Right Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 73 /3 ib	PSRLDQ xmm1, imm8	Valid	Valid	Shift xmm1 right by imm8 while shifting in 0s.

Description

Shifts the destination operand (first operand) to the right by the number of bytes specified in the count operand (second operand). The empty high-order bytes are cleared (set to all 0s). If the value specified by the count operand is greater than 15, the destination operand is set to all 0s. The destination operand is an XMM register. The count operand is an 8-bit immediate.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
TEMP \leftarrow COUNT;
IF (TEMP > 15) THEN TEMP \leftarrow 16; FI;
DEST \leftarrow DEST >> (temp * 8);
```

Intel C/C++ Compiler Intrinsic Equivalents

PSRLDQ __m128i _mm_srli_si128 (__m128i a, int imm)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.





Real-Address Mode Exceptions

Same exceptions as in Protected Mode.

Virtual-8086 Mode Exceptions

Same exceptions as in Protected Mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.

Numeric Exceptions

None.



PSRLW/PSRLD/PSRLQ—Shift Packed Data Right Logical

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D1 /r	PSRLW mm, mm/m64	Valid	Valid	Shift words in <i>mm</i> right by amount specified in <i>mm/m64</i> while shifting in 0s.
66 0F D1 /r	PSRLW xmm1, xmm2/m128	Valid	Valid	Shift words in <i>xmm1</i> right by amount specified in <i>xmm2/m128</i> while shifting in 0s.
0F 71 /2 ib	PSRLW mm, imm8	Valid	Valid	Shift words in <i>mm</i> right by <i>imm8</i> while shifting in 0s.
66 0F 71 /2 ib	PSRLW xmm1, imm8	Valid	Valid	Shift words in xmm1 right by imm8 while shifting in 0s.
0F D2 /r	PSRLD mm, mm/m64	Valid	Valid	Shift doublewords in <i>mm</i> right by amount specified in <i>mm/m64</i> while shifting in 0s.
66 0F D2 /r	PSRLD xmm1, xmm2/m128	Valid	Valid	Shift doublewords in <i>xmm1</i> right by amount specified in <i>xmm2</i> / <i>m128</i> while shifting in 0s.
0F 72 /2 ib	PSRLD mm, imm8	Valid	Valid	Shift doublewords in <i>mm</i> right by <i>imm8</i> while shifting in 0s.
66 0F 72 /2 ib	PSRLD <i>xmm1</i> , imm8	Valid	Valid	Shift doublewords in <i>xmm1</i> right by <i>imm8</i> while shifting in 0s.
0F D3 /r	PSRLQ mm, mm/m64	Valid	Valid	Shift <i>mm</i> right by amount specified in <i>mm/m64</i> while shifting in 0s.
66 0F D3 /r	PSRLQ xmm1, xmm2/m128	Valid	Valid	Shift quadwords in <i>xmm1</i> right by amount specified in <i>xmm2/m128</i> while shifting in 0s.
0F 73 /2 ib	PSRLQ mm, imm8	Valid	Valid	Shift <i>mm</i> right by <i>imm8</i> while shifting in 0s.
66 0F 73 /2 ib	PSRLQ xmm1, imm8	Valid	Valid	Shift quadwords in <i>xmm1</i> right by <i>imm8</i> while shifting in 0s.

Description

Shifts the bits in the individual data elements (words, doublewords, or quadword) in the destination operand (first operand) to the right by the number of bits specified in the count operand (second operand). As the bits in the data elements are shifted right, the empty high-order bits are cleared (set to 0). If the value specified by the count operand is greater than 15 (for words), 31 (for doublewords), or 63 (for a quadword), then the destination operand is set to all 0s. (Figure 4-9 gives an example of shifting words in a 64-bit operand.) The destination operand may be an MMX technology register or an XMM register; the count operand can be either an MMX technology register or an 64-bit memory location, an XMM register or a 128-bit memory location, or an 8-bit immediate.



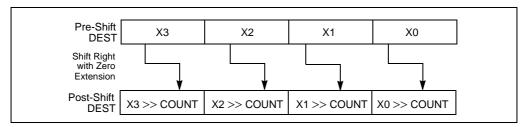


Figure 4-9. PSRLW, PSRLD, and PSRLQ Instruction Operation Using 64-bit Operand

The PSRLW instruction shifts each of the words in the destination operand to the right by the number of bits specified in the count operand; the PSRLD instruction shifts each of the doublewords in the destination operand; and the PSRLQ instruction shifts the quadword (or quadwords) in the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PSRLW instruction with 64-bit operand:
   IF (COUNT > 15)
   THEN
       DEST[64:0] \leftarrow 00000000000000000
   FLSE
       DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] >> COUNT):
       (* Repeat shift operation for 2nd and 3rd words *)
       DEST[63:48] \leftarrow ZeroExtend(DEST[63:48] >> COUNT);
   FI;
PSRLD instruction with 64-bit operand:
   IF (COUNT > 31)
   THEN
       DEST[64:0] ← 0000000000000000H
   FLSE
       DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] >> COUNT);
       DEST[63:32] \leftarrow ZeroExtend(DEST[63:32] >> COUNT);
   FI:
PSRLQ instruction with 64-bit operand:
   IF (COUNT > 63)
   THEN
       DEST[64:0] \leftarrow 00000000000000000
   FLSE
       DEST ← ZeroExtend(DEST >> COUNT);
   FI:
PSRLW instruction with 128-bit operand:
   IF (COUNT > 15)
```



```
THEN
      ELSE
      DEST[15:0] \leftarrow ZeroExtend(DEST[15:0] >> COUNT);
      (* Repeat shift operation for 2nd through 7th words *)
      DEST[127:112] \leftarrow ZeroExtend(DEST[127:112] >> COUNT);
  FI;
PSRLD instruction with 128-bit operand:
  IF (COUNT > 31)
  THEN
      ELSE
      DEST[31:0] \leftarrow ZeroExtend(DEST[31:0] >> COUNT);
      (* Repeat shift operation for 2nd and 3rd doublewords *)
      DEST[127:96] \leftarrow ZeroExtend(DEST[127:96] >> COUNT);
  FI:
PSRLQ instruction with 128-bit operand:
  IF (COUNT > 15)
  THEN
      ELSE
      DEST[63:0] \leftarrow ZeroExtend(DEST[63:0] >> COUNT);
      DEST[127:64] \leftarrow ZeroExtend(DEST[127:64] >> COUNT);
  FI;
PSRLW
             m64 mm srli pi16( m64 m, int count)
```

Intel C/C++ Compiler Intrinsic Equivalents

```
__m64 _mm_srl_pi16 (__m64 m, __m64 count)
PSRLW
PSRLW
              m128i mm srli epi16 ( m128i m, int count)
              __m128i _mm_srl_epi16 (__m128i m, __m128i count)
PSRLW
PSRLD
              __m64 _mm_srli_pi32 (__m64 m, int count)
              __m64 _mm_srl_pi32 (__m64 m, __m64 count)
PSRLD
              __m128i _mm_srli_epi32 (__m128i m, int count)
PSRLD
PSRLD
              m128i mm srl epi32 ( m128i m, m128i count)
PSRLQ
              __m64 _mm_srli_si64 (__m64 m, int count)
PSRLQ
              __m64 _mm_srl_si64 (__m64 m, __m64 count)
              __m128i _mm_srli_epi64 (__m128i m, int count)
PSRLQ
              __m128i _mm_srl_epi64 (__m128i m, __m128i count)
PSRLQ
```

Flags Affected

None.



Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PSUBB/PSUBW/PSUBD—Subtract Packed Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F F8 /r	PSUBB <i>mm</i> , <i>mm/m64</i>	Valid	Valid	Subtract packed byte integers in mm/m64 from packed byte integers in mm.
66 0F F8 /r	PSUBB xmm1, xmm2/m128	Valid	Valid	Subtract packed byte integers in xmm2/m128 from packed byte integers in xmm1.
0F F9 /r	PSUBW mm, mm/m64	Valid	Valid	Subtract packed word integers in mm/m64 from packed word integers in mm.
66 0F F9 /r	PSUBW xmm1, xmm2/m128	Valid	Valid	Subtract packed word integers in xmm2/m128 from packed word integers in xmm1.
0F FA /r	PSUBD mm, mm/m64	Valid	Valid	Subtract packed doubleword integers in mm/m64 from packed doubleword integers in mm.
66 0F FA /r	PSUBD xmm1, xmm2/m128	Valid	Valid	Subtract packed doubleword integers in xmm2/mem128 from packed doubleword integers in xmm1.

Description

Performs an SIMD subtract of the packed integers of the source operand (second operand) from the packed integers of the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD operation. Overflow is handled with wraparound, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PSUBB instruction subtracts packed byte integers. When an individual result is too large or too small to be represented in a byte, the result is wrapped around and the low 8 bits are written to the destination element.

The PSUBW instruction subtracts packed word integers. When an individual result is too large or too small to be represented in a word, the result is wrapped around and the low 16 bits are written to the destination element.

The PSUBD instruction subtracts packed doubleword integers. When an individual result is too large or too small to be represented in a doubleword, the result is wrapped around and the low 32 bits are written to the destination element.



Note that the PSUBB, PSUBW, and PSUBD instructions can operate on either unsigned or signed (two's complement notation) packed integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of values upon which it operates.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PSUBB instruction with 64-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] - SRC[7:0];
   (* Repeat subtract operation for 2nd through 7th byte *)
   DEST[63:56] \leftarrow DEST[63:56] - SRC[63:56];
PSUBB instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[7:0] - SRC[7:0];
   (* Repeat subtract operation for 2nd through 14th byte *)
   DEST[127:120] \leftarrow DEST[111:120] - SRC[127:120];
PSUBW instruction with 64-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] - SRC[15:0];
   (* Repeat subtract operation for 2nd and 3rd word *)
   DEST[63:48] \leftarrow DEST[63:48] - SRC[63:48];
PSUBW instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[15:0] - SRC[15:0];
   (* Repeat subtract operation for 2nd through 7th word *)
   DEST[127:112] \leftarrow DEST[127:112] - SRC[127:112];
PSUBD instruction with 64-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] - SRC[31:0];
   DEST[63:32] \leftarrow DEST[63:32] - SRC[63:32];
PSUBD instruction with 128-bit operands:
   DEST[31:0] \leftarrow DEST[31:0] - SRC[31:0];
   (* Repeat subtract operation for 2nd and 3rd doubleword *)
   DEST[127:96] \leftarrow DEST[127:96] - SRC[127:96];
```

Intel C/C++ Compiler Intrinsic Equivalents

```
      PSUBB
      _m64 _mm_sub_pi8(__m64 m1, __m64 m2)

      PSUBW
      _m64 _mm_sub_pi16(__m64 m1, __m64 m2)

      PSUBD
      _m64 _mm_sub_pi32(__m64 m1, __m64 m2)

      PSUBB
      _m128i _mm_sub_epi8 ( __m128i a, __m128i b)

      PSUBW
      _m128i _mm_sub_epi16 ( __m128i a, __m128i b)

      PSUBD
      _m128i _mm_sub_epi32 ( __m128i a, __m128i b)
```



Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same as for protected mode exceptions.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PSUBQ—Subtract Packed Quadword Integers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F FB /r	PSUBQ mm1, mm2/m64	Valid	Valid	Subtract quadword integer in <i>mm1</i> from <i>mm2</i> / <i>m64</i> .
66 0F FB /r	PSUBQ xmm1, xmm2/m128	Valid	Valid	Subtract packed quadword integers in <i>xmm1</i> from <i>xmm2 /m128</i> .

Description

Subtracts the second operand (source operand) from the first operand (destination operand) and stores the result in the destination operand. The source operand can be a quadword integer stored in an MMX technology register or a 64-bit memory location, or it can be two packed quadword integers stored in an XMM register or an 128-bit memory location. The destination operand can be a quadword integer stored in an MMX technology register or two packed quadword integers stored in an XMM register. When packed quadword operands are used, an SIMD subtract is performed. When a quadword result is too large to be represented in 64 bits (overflow), the result is wrapped around and the low 64 bits are written to the destination element (that is, the carry is ignored).

Note that the PSUBQ instruction can operate on either unsigned or signed (two's complement notation) integers; however, it does not set bits in the EFLAGS register to indicate overflow and/or a carry. To prevent undetected overflow conditions, software must control the ranges of the values upon which it operates.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

Intel C/C++ Compiler Intrinsic Equivalents

```
PSUBQ __m64 _mm_sub_si64(__m64 m1, __m64 m2)
PSUBQ __m128i _mm_sub_epi64(__m128i m1, __m128i m2)
```

Flags Affected

None.



Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PSUBSB/PSUBSW—Subtract Packed Signed Integers with Signed Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F E8 /r	PSUBSB mm, mm/m64	Valid	Valid	Subtract signed packed bytes in mm/m64 from signed packed bytes in mm and saturate results.
66 0F E8 /r	PSUBSB xmm1, xmm2/m128	Valid	Valid	Subtract packed signed byte integers in <i>xmm2/m128</i> from packed signed byte integers in <i>xmm1</i> and saturate results.
0F E9 /r	PSUBSW mm, mm/m64	Valid	Valid	Subtract signed packed words in mm/m64 from signed packed words in mm and saturate results.
66 0F E9 /r	PSUBSW xmm1, xmm2/m128	Valid	Valid	Subtract packed signed word integers in <i>xmm2/m128</i> from packed signed word integers in <i>xmm1</i> and saturate results.

Description

Performs an SIMD subtract of the packed signed integers of the source operand (second operand) from the packed signed integers of the destination operand (first operand), and stores the packed integer results in the destination operand. See Figure 9-4 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD operation. Overflow is handled with signed saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PSUBSB instruction subtracts packed signed byte integers. When an individual byte result is beyond the range of a signed byte integer (that is, greater than 7FH or less than 80H), the saturated value of 7FH or 80H, respectively, is written to the destination operand.

The PSUBSW instruction subtracts packed signed word integers. When an individual word result is beyond the range of a signed word integer (that is, greater than 7FFFH or less than 8000H), the saturated value of 7FFFH or 8000H, respectively, is written to the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
PSUBSB instruction with 64-bit operands:
   DEST[7:0] \leftarrow SaturateToSignedByte (DEST[7:0] - SRC (7:0]);
   (* Repeat subtract operation for 2nd through 7th bytes *)
   DEST[63:56] ← SaturateToSignedByte (DEST[63:56] – SRC[63:56]);
PSUBSB instruction with 128-bit operands:
   DEST[7:0] \leftarrow SaturateToSignedByte (DEST[7:0] - SRC[7:0]);
   (* Repeat subtract operation for 2nd through 14th bytes *)
   DEST[127:120] \leftarrow SaturateToSignedByte (DEST[111:120] - SRC[127:120]);
PSUBSW instruction with 64-bit operands
   DEST[15:0] ← SaturateToSignedWord (DEST[15:0] – SRC[15:0] );
   (* Repeat subtract operation for 2nd and 7th words *)
   DEST[63:48] \leftarrow SaturateToSignedWord (DEST[63:48] - SRC[63:48]);
PSUBSW instruction with 128-bit operands
   DEST[15:0] \leftarrow SaturateToSignedWord (DEST[15:0] - SRC[15:0]):
   (* Repeat subtract operation for 2nd through 7th words *)
   DEST[127:112] \leftarrow SaturateToSignedWord (DEST[127:112] – SRC[127:112]);
Intel C/C++ Compiler Intrinsic Equivalents
                __m64 _mm_subs_pi8(__m64 m1, __m64 m2)
PSUBSB
```

```
__m128i _mm_subs_epi8(__m128i m1, __m128i m2)
PSUBSB
             __m64 _mm_subs_pi16(__m64 m1, __m64 m2)
PSUBSW
```

__m128i _mm_subs_epi16(__m128i m1, __m128i m2) **PSUBSW**

Flags Affected

None.

Numeric Exceptions

None.



Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.





64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PSUBUSB/PSUBUSW—Subtract Packed Unsigned Integers with Unsigned Saturation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F D8 /r	PSUBUSB mm, mm/m64	Valid	Valid	Subtract unsigned packed bytes in mm/m64 from unsigned packed bytes in mm and saturate result.
66 0F D8 /r	PSUBUSB xmm1, xmm2/m128	Valid	Valid	Subtract packed unsigned byte integers in xmm2/m128 from packed unsigned byte integers in xmm1 and saturate result.
0F D9 /r	PSUBUSW mm, mm/m64	Valid	Valid	Subtract unsigned packed words in mm/m64 from unsigned packed words in mm and saturate result.
66 0F D9 /r	PSUBUSW xmm1, xmm2/m128	Valid	Valid	Subtract packed unsigned word integers in <i>xmm2/m128</i> from packed unsigned word integers in xmm1 and saturate result.

Description

Performs an SIMD subtract of the packed unsigned integers of the source operand (second operand) from the packed unsigned integers of the destination operand (first operand), and stores the packed unsigned integer results in the destination operand. See Figure 9-4 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD operation. Overflow is handled with unsigned saturation, as described in the following paragraphs.

These instructions can operate on either 64-bit or 128-bit operands. When operating on 64-bit operands, the destination operand must be an MMX technology register and the source operand can be either an MMX technology register or a 64-bit memory location. When operating on 128-bit operands, the destination operand must be an XMM register and the source operand can be either an XMM register or a 128-bit memory location.

The PSUBUSB instruction subtracts packed unsigned byte integers. When an individual byte result is less than zero, the saturated value of 00H is written to the destination operand.

The PSUBUSW instruction subtracts packed unsigned word integers. When an individual word result is less than zero, the saturated value of 0000H is written to the destination operand.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
PSUBUSB instruction with 64-bit operands:

DEST[7:0] ← SaturateToUnsignedByte (DEST[7:0] – SRC (7:0]);

(* Repeat add operation for 2nd through 7th bytes *)

DEST[63:56] ← SaturateToUnsignedByte (DEST[63:56] – SRC[63:56];

PSUBUSB instruction with 128-bit operands:

DEST[7:0] ← SaturateToUnsignedByte (DEST[7:0] – SRC[7:0]);

(* Repeat add operation for 2nd through 14th bytes *)

DEST[127:120] ← SaturateToUnSignedByte (DEST[127:120] – SRC[127:120]);

PSUBUSW instruction with 64-bit operands:

DEST[15:0] ← SaturateToUnsignedWord (DEST[15:0] – SRC[15:0]);

(* Repeat add operation for 2nd and 3rd words *)

DEST[63:48] ← SaturateToUnsignedWord (DEST[63:48] – SRC[63:48]);

PSUBUSW instruction with 128-bit operands:

DEST[15:0] ← SaturateToUnsignedWord (DEST[15:0] – SRC[15:0]);

(* Repeat add operation for 2nd through 7th words *)
```

DEST[127:112] ← SaturateToUnSignedWord (DEST[127:112] – SRC[127:112]);

Intel C/C++ Compiler Intrinsic Equivalents

```
PSUBUSB __m64 _mm_sub_pu8(__m64 m1, __m64 m2)

PSUBUSB __m128i _mm_sub_epu8(__m128i m1, __m128i m2)

PSUBUSW __m64 _mm_sub_pu16(__m64 m1, __m64 m2)

PSUBUSW __m128i _mm_sub_epu16(__m128i m1, __m128i m2)
```

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

INSTRUCTION SET REFERENCE, N-Z



#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.



INSTRUCTION SET REFERENCE, N-Z

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PUNPCKHBW/PUNPCKHWD/PUNPCKHQDQ—Unpack High Data

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 68 /r	PUNPCKHBW mm, mm/m64	Valid	Valid	Unpack and interleave high-order bytes from <i>mm</i> and <i>mm/m64</i> into <i>mm</i> .
66 0F 68 /r	PUNPCKHBW xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order bytes from <i>xmm1</i> and <i>xmm2/m128</i> into <i>xmm1</i> .
0F 69 /r	PUNPCKHWD <i>mm</i> , <i>mm/m64</i>	Valid	Valid	Unpack and interleave high-order words from <i>mm</i> and <i>mm/m64</i> into <i>mm</i> .
66 0F 69 /r	PUNPCKHWD xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order words from <i>xmm1</i> and <i>xmm2/m128</i> into <i>xmm1</i> .
0F 6A /r	PUNPCKHDQ mm, mm/m64	Valid	Valid	Unpack and interleave high-order doublewords from <i>mm</i> and <i>mm/m64</i> into <i>mm</i> .
66 0F 6A /r	PUNPCKHDQ xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order doublewords from <i>xmm1</i> and <i>xmm2/m128</i> into <i>xmm1</i> .
66 0F 6D /r	PUNPCKHQDQ xmm1, xmm2/m128	Valid	Valid	Unpack and interleave high-order quadwords from <i>xmm1</i> and <i>xmm2/m128</i> into <i>xmm1</i> .

Description

Unpacks and interleaves the high-order data elements (bytes, words, doublewords, or quadwords) of the destination operand (first operand) and source operand (second operand) into the destination operand. Figure 4-10 shows the unpack operation for bytes in 64-bit operands. The low-order data elements are ignored.

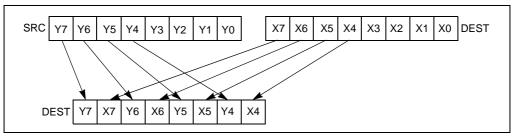


Figure 4-10. PUNPCKHBW Instruction Operation Using 64-bit Operands



The source operand can be an MMX technology register or a 64-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. When the source data comes from a 64-bit memory operand, the full 64-bit operand is accessed from memory, but the instruction uses only the high-order 32 bits. When the source data comes from a 128-bit memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to a 16-byte boundary and normal segment checking will still be enforced.

The PUNPCKHBW instruction interleaves the high-order bytes of the source and destination operands, the PUNPCKHWD instruction interleaves the high-order words of the source and destination operands, the PUNPCKHDQ instruction interleaves the high-order doubleword (or doublewords) of the source and destination operands, and the PUNPCKHQDQ instruction interleaves the high-order quadwords of the source and destination operands.

These instructions can be used to convert bytes to words, words to doublewords, doublewords to quadwords, and quadwords to double quadwords, respectively, by placing all 0s in the source operand. Here, if the source operand contains all 0s, the result (stored in the destination operand) contains zero extensions of the high-order data elements from the original value in the destination operand. For example, with the PUNPCKHBW instruction the high-order bytes are zero extended (that is, unpacked into unsigned word integers), and with the PUNPCKHWD instruction, the high-order words are zero extended (unpacked into unsigned doubleword integers).

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PUNPCKHBW instruction with 64-bit operands:
         DEST[7:0] \leftarrow DEST[39:32];
         DEST[15:8] \leftarrow SRC[39:32];
         DEST[23:16] \leftarrow DEST[47:40];
         DEST[31:24] \leftarrow SRC[47:40];
         DEST[39:32] \leftarrow DEST[55:48];
         DEST[47:40] \leftarrow SRC[55:48];
         DEST[55:48] \leftarrow DEST[63:56];
         DEST[63:56] \leftarrow SRC[63:56];
PUNPCKHW instruction with 64-bit operands:
         DEST[15:0] \leftarrow DEST[47:32];
         DEST[31:16] \leftarrow SRC[47:32];
         DEST[47:32] \leftarrow DEST[63:48];
         \mathsf{DEST}[63:48] \leftarrow \mathsf{SRC}[63:48];
PUNPCKHDQ instruction with 64-bit operands:
         DEST[31:0] \leftarrow DEST[63:32];
         DEST[63:32] \leftarrow SRC[63:32];
```



```
PUNPCKHBW instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[71:64];
   DEST[15:8] \leftarrow SRC[71:64];
   DEST[23:16] \leftarrow DEST[79:72];
   DEST[31:24] \leftarrow SRC[79:72];
   DEST[39:32] \leftarrow DEST[87:80];
   DEST[47:40] \leftarrow SRC[87:80]:
   DEST[55:48] \leftarrow DEST[95:88];
   DEST[63:56] \leftarrow SRC[95:88];
   DEST[71:64] \leftarrow DEST[103:96]:
   DEST[79:72] \leftarrow SRC[103:96];
   DEST[87:80] \leftarrow DEST[111:104];
   DEST[95:88] \leftarrow SRC[111:104];
   DEST[103:96] \leftarrow DEST[119:112];
   DEST[111:104] \leftarrow SRC[119:112];
   DEST[119:112] \leftarrow DEST[127:120];
   DEST[127:120] \leftarrow SRC[127:120];
PUNPCKHWD instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[79:64];
   DEST[31:16] \leftarrow SRC[79:64]:
   DEST[47:32] \leftarrow DEST[95:80];
   DEST[63:48] \leftarrow SRC[95:80];
   DEST[79:64] ← DEST[111:96];
   DEST[95:80] ← SRC[111:96]:
   DEST[111:96] \leftarrow DEST[127:112];
   DEST[127:112] \leftarrow SRC[127:112];
PUNPCKHDQ instruction with 128-bit operands:
   DEST[31:0] \leftarrow DEST[95:64];
   DEST[63:32] \leftarrow SRC[95:64];
   DEST[95:64] \leftarrow DEST[127:96];
   DEST[127:96] \leftarrow SRC[127:96];
PUNPCKHQDQ instruction:
   DEST[63:0] \leftarrow DEST[127:64];
   DEST[127:64] \leftarrow SRC[127:64];
```



Intel C/C++ Compiler Intrinsic Equivalents

PUNPCKHBW __m64 _mm_unpackhi_pi8(__m64 m1, __m64 m2)

PUNPCKHBW __m128i _mm_unpackhi_epi8(__m128i m1, __m128i m2)

PUNPCKHWD __m64 _mm_unpackhi_pi16(__m64 m1,__m64 m2)

PUNPCKHWD __m128i _mm_unpackhi_epi16(__m128i m1,__m128i m2)

PUNPCKHDQ __m64 _mm_unpackhi_pi32(__m64 m1, __m64 m2)

PUNPCKHDQ __m128i _mm_unpackhi_epi32(__m128i m1, __m128i m2)
PUNPCKHQDQ __m128i _mm_unpackhi_epi64 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) If any part of the operand lies outside of the effective address space from

0 to FFFFH.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

INSTRUCTION SET REFERENCE, N-Z



#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit version only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned



PUNPCKLBW/PUNPCKLWD/PUNPCKLQDQ—Unpack Low Data

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 60 /r	PUNPCKLBW mm, mm/m32	Valid	Valid	Interleave low-order bytes from <i>mm</i> and <i>mm/m3</i> 2 into <i>mm</i> .
66 0F 60 /r	PUNPCKLBW xmm1, xmm2/m128	Valid	Valid	Interleave low-order bytes from xmm1 and xmm2/m128 into xmm1.
0F 61 /r	PUNPCKLWD <i>mm,</i> <i>mm/m3</i> 2	Valid	Valid	Interleave low-order words from <i>mm</i> and <i>mm/m32</i> into <i>mm</i> .
66 0F 61 /r	PUNPCKLWD xmm1, xmm2/m128	Valid	Valid	Interleave low-order words from xmm1 and xmm2/m128 into xmm1.
0F 62 /r	PUNPCKLDQ <i>mm</i> , <i>mm/m3</i> 2	Valid	Valid	Interleave low-order doublewords from <i>mm</i> and <i>mm/m3</i> 2 into <i>mm</i> .
66 0F 62 /r	PUNPCKLDQ xmm1, xmm2/m128	Valid	Valid	Interleave low-order doublewords from xmm1 and xmm2/m128 into xmm1.
66 0F 6C /r	PUNPCKLQDQ xmm1, xmm2/m128	Valid	Valid	Interleave low-order quadword from xmm1 and xmm2/m128 into xmm1 register.

Description

Unpacks and interleaves the low-order data elements (bytes, words, doublewords, and quadwords) of the destination operand (first operand) and source operand (second operand) into the destination operand. (Figure 4-11 shows the unpack operation for bytes in 64-bit operands.). The high-order data elements are ignored.

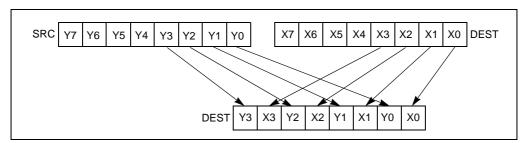


Figure 4-11. PUNPCKLBW Instruction Operation Using 64-bit Operands



The source operand can be an MMX technology register or a 32-bit memory location, or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. When the source data comes from a 128-bit memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to a 16-byte boundary and normal segment checking will still be enforced.

The PUNPCKLBW instruction interleaves the low-order bytes of the source and destination operands, the PUNPCKLWD instruction interleaves the low-order words of the source and destination operands, the PUNPCKLDQ instruction interleaves the low-order doubleword (or doublewords) of the source and destination operands, and the PUNPCKLQDQ instruction interleaves the low-order quadwords of the source and destination operands.

These instructions can be used to convert bytes to words, words to doublewords, doublewords to quadwords, and quadwords to double quadwords, respectively, by placing all 0s in the source operand. Here, if the source operand contains all 0s, the result (stored in the destination operand) contains zero extensions of the high-order data elements from the original value in the destination operand. For example, with the PUNPCKLBW instruction the high-order bytes are zero extended (that is, unpacked into unsigned word integers), and with the PUNPCKLWD instruction, the high-order words are zero extended (unpacked into unsigned doubleword integers).

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
PUNPCKLBW instruction with 64-bit operands:
   DEST[63:56] \leftarrow SRC[31:24];
   DEST[55:48] \leftarrow DEST[31:24];
   DEST[47:40] \leftarrow SRC[23:16];
   DEST[39:32] \leftarrow DEST[23:16];
   DEST[31:24] \leftarrow SRC[15:8];
   DEST[23:16] \leftarrow DEST[15:8];
   DEST[15:8] \leftarrow SRC[7:0];
   DEST[7:0] \leftarrow DEST[7:0];
PUNPCKLWD instruction with 64-bit operands:
   DEST[63:48] \leftarrow SRC[31:16]:
   DEST[47:32] \leftarrow DEST[31:16];
   DEST[31:16] \leftarrow SRC[15:0];
   DEST[15:0] \leftarrow DEST[15:0];
PUNPCKLDQ instruction with 64-bit operands:
   DEST[63:32] \leftarrow SRC[31:0];
   DEST[31:0] \leftarrow DEST[31:0];
PUNPCKLBW instruction with 128-bit operands:
   DEST[7:0] \leftarrow DEST[7:0];
   DEST[15:8] \leftarrow SRC[7:0];
   DEST[23:16] \leftarrow DEST[15:8];
   DEST[31:24] \leftarrow SRC[15:8];
   DEST[39:32] \leftarrow DEST[23:16];
```



```
DEST[47:40] \leftarrow SRC[23:16];
   DEST[55:48] \leftarrow DEST[31:24];
   DEST[63:56] \leftarrow SRC[31:24]:
   DEST[71:64] \leftarrow DEST[39:32];
   DEST[79:72] \leftarrow SRC[39:32];
   DEST[87:80] \leftarrow DEST[47:40];
   DEST[95:88] \leftarrow SRC[47:40];
   DEST[103:96] \leftarrow DEST[55:48];
   DEST[111:104] \leftarrow SRC[55:48];
   DEST[119:112] \leftarrow DEST[63:56];
   DEST[127:120] \leftarrow SRC[63:56];
PUNPCKLWD instruction with 128-bit operands:
   DEST[15:0] \leftarrow DEST[15:0]:
   DEST[31:16] \leftarrow SRC[15:0]:
   DEST[47:32] \leftarrow DEST[31:16];
   DEST[63:48] \leftarrow SRC[31:16];
   DEST[79:64] \leftarrow DEST[47:32];
   DEST[95:80] \leftarrow SRC[47:32];
   DEST[111:96] \leftarrow DEST[63:48];
   DEST[127:112] \leftarrow SRC[63:48];
PUNPCKLDQ instruction with 128-bit operands:
   DEST[31:0] \leftarrow DEST[31:0];
   DEST[63:32] \leftarrow SRC[31:0];
   DEST[95:64] \leftarrow DEST[63:32]:
   DEST[127:96] \leftarrow SRC[63:32];
PUNPCKLQDQ
   DEST[63:0] \leftarrow DEST[63:0]:
   DEST[127:64] \leftarrow SRC[63:0]:
```

Intel C/C++ Compiler Intrinsic Equivalents

```
      PUNPCKLBW
      _m64 _mm_unpacklo_pi8 (__m64 m1, __m64 m2)

      PUNPCKLBW
      _m128i _mm_unpacklo_epi8 (__m128i m1, __m128i m2)

      PUNPCKLWD
      _m64 _mm_unpacklo_pi16 (__m64 m1, __m64 m2)

      PUNPCKLWD
      _m128i _mm_unpacklo_epi16 (__m128i m1, __m128i m2)

      PUNPCKLDQ
      _m64 _mm_unpacklo_epi32 (__m64 m1, __m64 m2)

      PUNPCKLDQ
      _m128i _mm_unpacklo_epi32 (__m128i m1, __m128i m2)

      PUNPCKLQDQ
      _m128i _mm_unpacklo_epi64 (__m128i m1, __m128i m2)
```

Flags Affected

None.



Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) If any part of the operand lies outside of the effective address space from

0 to 0FFFFH.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit version only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



PUSH—Push Word or Doubleword Onto the Stack

		64-Bit	Compat/	
Opcode*	Instruction	Mode	Leg Mode	Description
FF /6	PUSH r/m16	Valid	Valid	Push <i>r/m16</i> .
FF /6	PUSH r/m32	N.E.	Valid	Push <i>r/m32</i> .
FF /6	PUSH r/m64	Valid	N.E.	Push <i>r/m64</i> . Default operand size 64-bits.
50+ <i>rw</i>	PUSH <i>r16</i>	Valid	Valid	Push <i>r16.</i>
50+ <i>rd</i>	PUSH <i>r</i> 32	N.E.	Valid	Push <i>r32.</i>
50+ <i>rd</i>	PUSH r64	Valid	N.E.	Push <i>r64</i> . Default operand size 64-bits.
6A	PUSH imm8	Valid	Valid	Push sign-extended imm8. Stack pointer is incremented by the size of stack pointer.
68	PUSH imm16	Valid	Valid	Push sign-extended imm16. Stack pointer is incremented by the size of stack pointer.
68	PUSH imm32	Valid	Valid	Push sign-extended imm32. Stack pointer is incremented by the size of stack pointer.
0E	PUSH CS	Invalid	Valid	Push CS.
16	PUSH SS	Invalid	Valid	Push SS.
1E	PUSH DS	Invalid	Valid	Push DS.
06	PUSH ES	Invalid	Valid	Push ES.
0F A0	PUSH FS	Valid	Valid	Push FS and decrement stack pointer by 16 bits.
0F A0	PUSH FS	N.E.	Valid	Push FS and decrement stack pointer by 32 bits.
0F A0	PUSH FS	Valid	N.E.	Push FS. Default operand size 64-bits. (66H override causes 16-bit operation).
0F A8	PUSH GS	Valid	Valid	Push GS and decrement stack pointer by 16 bits.
0F A8	PUSH GS	N.E.	Valid	Push GS and decrement stack pointer by 32 bits.
OF A8	PUSH GS	Valid	N.E.	Push GS, default operand size 64-bits. (66H override causes 16-bit operation).

NOTES:

^{*} See IA-32 Architecture Compatibility section below.



Description

Decrements the stack pointer and then stores the source operand on the top of the stack. The address-size attribute of the stack segment determines the stack pointer size (16, 32 or 64 bits). The operand-size attribute of the current code segment determines the amount the stack pointer is decremented (2, 4 or 8 bytes).

In non-64-bit modes: if the address-size and operand-size attributes are 32, the 32-bit ESP register (stack pointer) is decremented by 4. If both attributes are 16, the 16-bit SP register (stack pointer) is decremented by 2.

If the source operand is an immediate and its size is less than the address size of the stack, a sign-extended value is pushed on the stack. If the source operand is the FS or GS and its size is less than the address size of the stack, the zero-extended value is pushed on the stack.

The B flag in the stack segment's segment descriptor determines the stack's address-size attribute. The D flag in the current code segment's segment descriptor (with prefixes), determines the operand-size attribute and the address-size attribute of the source operand. Pushing a 16-bit operand when the stack address-size attribute is 32 can result in a misaligned stack pointer (a stack pointer that is not be aligned on a doubleword boundary).

The PUSH ESP instruction pushes the value of the ESP register as it existed before the instruction was executed. Thus if a PUSH instruction uses a memory operand in which the ESP register is used for computing the operand address, the address of the operand is computed before the ESP register is decremented.

In the real-address mode, if the ESP or SP register is 1 when the PUSH instruction is executed, the processor shuts down due to a lack of stack space. No exception is generated to indicate this condition.

In 64-bit mode, the instruction's default operation size is 64 bits. In a push, the 64-bit RSP register (stack pointer) is decremented by 8. A 66H override causes 16-bit operation. Note that pushing a 16-bit operand can result in the stack pointer misaligned to 8-byte boundary.

IA-32 Architecture Compatibility

For IA-32 processors from the Intel 286 on, the PUSH ESP instruction pushes the value of the ESP register as it existed before the instruction was executed. (This is also true in the real-address and virtual-8086 modes.) For the Intel 8086 processor, the PUSH SP instruction pushes the new value of the SP register (that is the value after it has been decremented by 2).



Operation

```
IF StackAddrSize = 64
   THEN
       IF OperandSize = 64
            THEN
                RSP \leftarrow (RSP - 8):
                IF (SRC is FS or GS)
                    THEN
                         TEMP = ZeroExtend64(SRC);
                    ELSE IF (SRC is IMMEDIATE)
                         TEMP = SignExtend64(SRC); FI;
                    ELSE
                         TEMP = SRC;
                RSP ← TEMP; (* Push quadword *)
            ELSE (* OperandSize = 16; 66H used *)
                RSP \leftarrow (RSP - 2);
                RSP ← SRC; (* Push word *)
       FI:
ELSE IF StackAddrSize = 32
   THEN
       IF OperandSize = 32
            THEN
                ESP \leftarrow (ESP - 4):
                IF (SRC is FS or GS)
                    THEN
                         TEMP = ZeroExtend32(SRC);
                    ELSE IF (SRC is IMMEDIATE)
                         TEMP = SignExtend32(SRC); FI;
                    ELSE
                         TEMP = SRC;
                FI;
                SS:ESP ← TEMP; (* Push doubleword *)
           ELSE (* OperandSize = 16*)
                ESP \leftarrow (ESP - 2);
                SS:ESP ← SRC; (* Push word *)
       FI:
   ELSE StackAddrSize = 16
       IF OperandSize = 16
           THEN
                SP \leftarrow (SP - 2);
                 SS:SP \leftarrow SRC; (* Push word *)
            ELSE (* OperandSize = 32 *)
                SP \leftarrow (SP - 4):
                SS:SP ← SRC; (* Push doubleword *)
       FI:
   FI;
FI;
```



Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

If the new value of the SP or ESP register is outside the stack segment

limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#SS(U) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



PUSHA/PUSHAD—Push All General-Purpose Registers

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
60	PUSHA	Invalid	Valid	Push AX, CX, DX, BX, original SP, BP, SI, and DI.
60	PUSHAD	Invalid	Valid	Push EAX, ECX, EDX, EBX, original ESP, EBP, ESI, and EDI.

Description

Pushes the contents of the general-purpose registers onto the stack. The registers are stored on the stack in the following order: EAX, ECX, EDX, EBX, EBP, ESP (original value), EBP, ESI, and EDI (if the current operand-size attribute is 32) and AX, CX, DX, BX, SP (original value), BP, SI, and DI (if the operand-size attribute is 16). These instructions perform the reverse operation of the POPA/POPAD instructions. The value pushed for the ESP or SP register is its value before prior to pushing the first register (see the "Operation" section below).

The PUSHA (push all) and PUSHAD (push all double) mnemonics reference the same opcode. The PUSHA instruction is intended for use when the operand-size attribute is 16 and the PUSHAD instruction for when the operand-size attribute is 32. Some assemblers may force the operand size to 16 when PUSHA is used and to 32 when PUSHAD is used. Others may treat these mnemonics as synonyms (PUSHA/PUSHAD) and use the current setting of the operand-size attribute to determine the size of values to be pushed from the stack, regardless of the mnemonic used.

In the real-address mode, if the ESP or SP register is 1, 3, or 5 when the PUSHA/PUSHAD instruction is executed, the processor shuts down due to a lack of stack space. No exception is generated to indicate this condition.

This instruction executes as described in compatibility mode and legacy mode. It is not valid in 64-bit mode.

Operation

```
IF 64-bit Mode
    THEN #UD

FI;

IF OperandSize = 32 (* PUSHAD instruction *)
    THEN
        Temp ← (ESP);
        Push(EAX);
        Push(ECX);
        Push(EDX);
        Push(EBX);
        Push(Temp):
```



```
Push(EBP);
Push(ESI);
Push(EDI);

ELSE (* OperandSize = 16, PUSHA instruction *)

Temp ← (SP);
Push(AX);
Push(CX);
Push(DX);
Push(DX);
Push(BX);
Push(BEP);
Push(BP);
Push(SI);
Push(DI);

FI:
```

Flags Affected

None.

Protected Mode Exceptions

#SS(0) If the starting or ending stack address is outside the stack segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current privilege level

is 3 and alignment checking is enabled.

Real-Address Mode Exceptions

#GP If the ESP or SP register contains 7, 9, 11, 13, or 15.

Virtual-8086 Mode Exceptions

#GP(0) If the ESP or SP register contains 7, 9, 11, 13, or 15.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment checking is

enabled.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#UD If in 64-bit mode.



PUSHF/PUSHFD—Push EFLAGS Register onto the Stack

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9C	PUSHF	Valid	Valid	Push lower 16 bits of EFLAGS.
9C	PUSHFD	N.E.	Valid	Push EFLAGS.
9C	PUSHFQ	Valid	N.E.	Push RFLAGS.

Description

Decrements the stack pointer by 4 (if the current operand-size attribute is 32) and pushes the entire contents of the EFLAGS register onto the stack, or decrements the stack pointer by 2 (if the operand-size attribute is 16) and pushes the lower 16 bits of the EFLAGS register (that is, the FLAGS register) onto the stack. These instructions reverse the operation of the POPF/POPFD instructions.

When copying the entire EFLAGS register to the stack, the VM and RF flags (bits 16 and 17) are not copied; instead, the values for these flags are cleared in the EFLAGS image stored on the stack. See the section titled "EFLAGS Register" in Chapter 3 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*, for information about the EFLAGS registers.

The PUSHF (push flags) and PUSHFD (push flags double) mnemonics reference the same opcode. The PUSHF instruction is intended for use when the operand-size attribute is 16 and the PUSHFD instruction for when the operand-size attribute is 32. Some assemblers may force the operand size to 16 when PUSHF is used and to 32 when PUSHFD is used. Others may treat these mnemonics as synonyms (PUSHF/PUSHFD) and use the current setting of the operand-size attribute to determine the size of values to be pushed from the stack, regardless of the mnemonic used.

In 64-bit mode, the instruction's default operation is to decrement the stack pointer (RSP) by 8 and pushs RFLAGS on the stack. 16-bit operation is supported using the operand size override prefix 66H. 32-bit operand size cannot be encoded in this mode. When copying RFLAGS to the stack, the VM and RF flags (bits 16 and 17) are not copied; instead, values for these flags are cleared in the RFLAGS image stored on the stack.

When in virtual-8086 mode and the I/O privilege level (IOPL) is less than 3, the PUSHF/PUSHFD instruction causes a general protection exception (#GP).

In the real-address mode, if the ESP or SP register is 1, 3, or 5 when the PUSHA/PUSHAD instruction is executed, the processor shuts down due to a lack of stack space. No exception is generated to indicate this condition.



Operation

```
IF (PE = 0) or (PE = 1) and ((VM = 0)) or (VM = 1) and (OPL = 3)
(* Real-Address Mode, Protected mode, or Virtual-8086 mode with IOPL equal to 3 *)
   THEN
       IF OperandSize = 32
           THEN
                push (EFLAGS AND 00FCFFFFH);
                (* VM and RF EFLAG bits are cleared in image stored on the stack *)
           ELSE
                push (EFLAGS); (* Lower 16 bits only *)
       FI:
   ELSE IF 64-bit MODE (* In 64-bit Mode *)
       IF OperandSize = 64
           THEN
                push (RFLAGS AND 00000000 00FCFFFFH);
                (* VM and RF RFLAG bits are cleared in image stored on the stack; *)
           FLSE
                push (EFLAGS); (* Lower 16 bits only *)
       FI;
   ELSE (* In Virtual-8086 Mode with IOPL less than 3 *)
       #GP(0); (* Trap to virtual-8086 monitor *)
FI:
```

Flags Affected

None.

Protected Mode Exceptions

#SS(0) If the new value of the ESP register is outside the stack segment boundary.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current privilege level

is 3 and alignment checking is enabled.

Real-Address Mode Exceptions

None.

Virtual-8086 Mode Exceptions

#GP(0) If the I/O privilege level is less than 3.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while alignment checking is

enabled.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#SS(U) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory reference is made while the current privilege level

is 3 and alignment checking is enabled.



PXOR—Logical Exclusive OR

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F EF /r	PXOR mm, mm/m64	Valid	Valid	Bitwise XOR of <i>mm/m64</i> and <i>mm</i> .
66 0F EF /r	PXOR xmm1, xmm2/m128	Valid	Valid	Bitwise XOR of xmm2/m128 and xmm1.

Description

Performs a bitwise logical exclusive-OR (XOR) operation on the source operand (second operand) and the destination operand (first operand) and stores the result in the destination operand. The source operand can be an MMX technology register or a 64-bit memory location or it can be an XMM register or a 128-bit memory location. The destination operand can be an MMX technology register or an XMM register. Each bit of the result is 1 if the corresponding bits of the two operands are different; each bit is 0 if the corresponding bits of the operands are the same.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST ← DEST XOR SRC;

Intel C/C++ Compiler Intrinsic Equivalent

PXOR __m64 _mm_xor_si64 (__m64 m1, __m64 m2)

PXOR __m128i _mm_xor_si128 (__m128i a, __m128i b)

Flags Affected

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

(128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

#SS(0) If a memory operand effective address is outside the SS segment limit.

INSTRUCTION SET REFERENCE, N-Z



#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP(0) (128-bit operations only) If a memory operand is not aligned on a 16-byte

boundary, regardless of segment.

If any part of the operand lies outside of the effective address space from

0 to FFFFH.

#UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

INSTRUCTION SET REFERENCE, N-Z



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

(128-bit operations only) If memory operand is not aligned on a 16-byte

boundary, regardless of segment.

UD If CR0.EM[bit 2] = 1.

(128-bit operations only) If CR4.OSFXSR[bit 9] = 0.

(128-bit operations only) If CPUID.01H:EDX.SSE2[bit 26] = 0.

#NM If CR0.TS[bit 3] = 1.

#MF (64-bit operations only) If there is a pending x87 FPU exception.

#PF(fault-code) If a page fault occurs.

#AC(0) (64-bit operations only) If alignment checking is enabled and an unaligned

memory reference is made while the current privilege level is 3.



RCL/RCR/ROL/ROR--Rotate

		64-Bit	Compat/	
Opcode**	Instruction	Mode	Leg Mode	Description
D0 /2	RCL r/m8, 1	Valid	Valid	Rotate 9 bits (CF, r/m8) left once.
REX + D0 /2	RCL r/m8*, 1	Valid	N.E.	Rotate 9 bits (CF, r/m8) left once.
D2 /2	RCL r/m8, CL	Valid	Valid	Rotate 9 bits (CF, r/m8) left CL times.
REX + D2 /2	RCL r/m8*, CL	Valid	N.E.	Rotate 9 bits (CF, r/m8) left CL times.
C0 /2 ib	RCL r/m8, imm8	Valid	Valid	Rotate 9 bits (CF, <i>r/m8</i>) left <i>imm8</i> times.
REX + C0 /2 ib	RCL r/m8*, imm8	Valid	N.E.	Rotate 9 bits (CF, <i>r/m8</i>) left <i>imm8</i> times.
D1 /2	RCL r/m16, 1	Valid	Valid	Rotate 17 bits (CF, r/m16) left once.
D3 /2	RCL r/m16, CL	Valid	Valid	Rotate 17 bits (CF, r/m16) left CL times.
C1 /2 ib	RCL r/m16, imm8	Valid	Valid	Rotate 17 bits (CF, r/m16) left imm8 times.
D1 /2	RCL r/m32, 1	Valid	Valid	Rotate 33 bits (CF, r/m32) left once.
REX.W + D1 /2	RCL r/m64, 1	Valid	N.E.	Rotate 65 bits (CF, r/m64) left once. Uses a 6 bit count.
D3 /2	RCL r/m32, CL	Valid	Valid	Rotate 33 bits (CF, r/m32) left CL times.
REX.W + D3 /2	RCL r/m64, CL	Valid	N.E.	Rotate 65 bits (CF, r/m64) left CL times. Uses a 6 bit count.
C1 /2 ib	RCL r/m32, imm8	Valid	Valid	Rotate 33 bits (CF, r/m32) left imm8 times.
REX.W + C1 /2 ib	RCL r/m64, imm8	Valid	N.E.	Rotate 65 bits (CF, r/m64) left imm8 times. Uses a 6 bit count.
D0 /3	RCR r/m8, 1	Valid	Valid	Rotate 9 bits (CF, r/m8) right once.
REX + D0 /3	RCR r/m8*, 1	Valid	N.E.	Rotate 9 bits (CF, r/m8) right once.
D2 /3	RCR r/m8, CL	Valid	Valid	Rotate 9 bits (CF, r/m8) right CL times.
REX + D2 /3	RCR r/m8*, CL	Valid	N.E.	Rotate 9 bits (CF, <i>r/m8</i>) right CL times.
C0 /3 ib	RCR r/m8, imm8	Valid	Valid	Rotate 9 bits (CF, <i>r/m8</i>) right <i>imm8</i> times.
REX + C0 /3 ib	RCR r/m8*, imm8	Valid	N.E.	Rotate 9 bits (CF, r/m8) right imm8 times.
D1 /3	RCR r/m16, 1	Valid	Valid	Rotate 17 bits (CF, r/m16) right once.
D3 /3	RCR <i>r/m16</i> , CL	Valid	Valid	Rotate 17 bits (CF, r/m16) right CL times.
C1 /3 ib	RCR r/m16, imm8	Valid	Valid	Rotate 17 bits (CF, r/m16) right imm8 times.
D1 /3	RCR r/m32, 1	Valid	Valid	Rotate 33 bits (CF, r/m32) right once. Uses a 6 bit count.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
REX.W + D1 /3	RCR r/m64, 1	Valid	N.E.	Rotate 65 bits (CF, r/m64) right once. Uses a 6 bit count.
D3 /3	RCR <i>r/m3</i> 2, CL	Valid	Valid	Rotate 33 bits (CF, r/m32) right CL times.
REX.W + D3 /3	RCR r/m64, CL	Valid	N.E.	Rotate 65 bits (CF, r/m64) right CL times. Uses a 6 bit count.
C1 /3 ib	RCR r/m32, imm8	Valid	Valid	Rotate 33 bits (CF, r/m32) right imm8 times.
REX.W + C1 /3 ib	RCR r/m64, imm8	Valid	N.E.	Rotate 65 bits (CF, r/m64) right imm8 times. Uses a 6 bit count.
D0 /0	ROL r/m8, 1	Valid	Valid	Rotate 8 bits r/m8 left once.
REX + D0 /0	ROL r/m8*, 1	Valid	N.E.	Rotate 8 bits r/m8 left once
D2 /0	ROL r/m8, CL	Valid	Valid	Rotate 8 bits r/m8 left CL times.
REX + D2 /0	ROL r/m8*, CL	Valid	N.E.	Rotate 8 bits r/m8 left CL times.
C0 /0 ib	ROL r/m8, imm8	Valid	Valid	Rotate 8 bits r/m8 left imm8 times.
REX + C0 /0 ib	ROL r/m8*, imm8	Valid	N.E.	Rotate 8 bits r/m8 left imm8 times.
D1 /0	ROL r/m16, 1	Valid	Valid	Rotate 16 bits r/m16 left once.
D3 /0	ROL r/m16, CL	Valid	Valid	Rotate 16 bits r/m16 left CL times.
C1 /0 ib	ROL r/m16, imm8	Valid	Valid	Rotate 16 bits r/m16 left imm8 times.
D1 /0	ROL r/m32, 1	Valid	Valid	Rotate 32 bits r/m32 left once.
REX.W + D1 /0	ROL <i>r/m64</i> , 1	Valid	N.E.	Rotate 64 bits <i>r/m64</i> left once. Uses a 6 bit count.
D3 /0	ROL r/m32, CL	Valid	Valid	Rotate 32 bits r/m32 left CL times.
REX.W + D3 /0	ROL r/m64, CL	Valid	N.E.	Rotate 64 bits <i>r/m64</i> left CL times. Uses a 6 bit count.
C1 /0 ib	ROL r/m32, imm8	Valid	Valid	Rotate 32 bits <i>r/m32</i> left <i>imm8</i> times.
C1 /0 ib	ROL r/m64, imm8	Valid	N.E.	Rotate 64 bits r/m64 left imm8 times. Uses a 6 bit count.
D0 /1	ROR <i>r/m8</i> , 1	Valid	Valid	Rotate 8 bits r/m8 right once.
REX + D0 /1	ROR r/m8*, 1	Valid	N.E.	Rotate 8 bits r/m8 right once.
D2 /1	ROR r/m8, CL	Valid	Valid	Rotate 8 bits r/m8 right CL times.
REX + D2 /1	ROR r/m8*, CL	Valid	N.E.	Rotate 8 bits r/m8 right CL times.
C0 /1 ib	ROR r/m8, imm8	Valid	Valid	Rotate 8 bits <i>r/m16</i> right <i>imm8</i> times.
REX + C0 /1 ib	ROR r/m8*, imm8	Valid	N.E.	Rotate 8 bits <i>r/m16</i> right <i>imm8</i> times.
D1 /1	ROR r/m16, 1	Valid	Valid	Rotate 16 bits r/m16 right once.
D3 /1	ROR <i>r/m16</i> , CL	Valid	Valid	Rotate 16 bits r/m16 right CL times.
C1 /1 ib	ROR r/m16, imm8	Valid	Valid	Rotate 16 bits <i>r/m16</i> right <i>imm8</i> times.
D1 /1	ROR r/m32, 1	Valid	Valid	Rotate 32 bits r/m32 right once.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
REX.W + D1 /1	ROR <i>r/m64</i> , 1	Valid	N.E.	Rotate 64 bits <i>r/m64</i> right once. Uses a 6 bit count.
D3 /1	ROR r/m32, CL	Valid	Valid	Rotate 32 bits r/m32 right CL times.
REX.W + D3 /1	ROR r/m64, CL	Valid	N.E.	Rotate 64 bits <i>r/m64</i> right CL times. Uses a 6 bit count.
C1 /1 ib	ROR r/m32, imm8	Valid	Valid	Rotate 32 bits <i>r/m32</i> right <i>imm8</i> times.
REX.W + C1 /1 ib	ROR r/m64, imm8	Valid	N.E.	Rotate 64 bits <i>r/m64</i> right <i>imm8</i> times. Uses a 6 bit count.

NOTES:

Description

Shifts (rotates) the bits of the first operand (destination operand) the number of bit positions specified in the second operand (count operand) and stores the result in the destination operand. The destination operand can be a register or a memory location; the count operand is an unsigned integer that can be an immediate or a value in the CL register. In legacy and compatibility mode, the processor restricts the count to a number between 0 and 31 by masking all the bits in the count operand except the 5 least-significant bits.

The rotate left (ROL) and rotate through carry left (RCL) instructions shift all the bits toward more-significant bit positions, except for the most-significant bit, which is rotated to the least-significant bit location (see Figure 7-11 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*). The rotate right (ROR) and rotate through carry right (RCR) instructions shift all the bits toward less significant bit positions, except for the least-significant bit, which is rotated to the most-significant bit location (see Figure 7-11 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*).

The RCL and RCR instructions include the CF flag in the rotation. The RCL instruction shifts the CF flag into the least-significant bit and shifts the most-significant bit into the CF flag (see Figure 7-11 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*). The RCR instruction shifts the CF flag into the most-significant bit and shifts the least-significant bit into the CF flag (see Figure 7-11 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*). For the ROL and ROR instructions, the original value of the CF flag is not a part of the result, but the CF flag receives a copy of the bit that was shifted from one end to the other.

The OF flag is defined only for the 1-bit rotates; it is undefined in all other cases (except that a zero-bit rotate does nothing, that is affects no flags). For left rotates, the OF flag is set to the exclusive OR of the CF bit (after the rotate) and the most-significant bit of the result. For right rotates, the OF flag is set to the exclusive OR of the two most-significant bits of the result.

In 64-bit mode, using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Use of REX.W promotes the first operand to 64 bits and causes the count operand to become a 6-bit counter.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.

^{**} See IA-32 Architecture Compatibility section below.



IA-32 Architecture Compatibility

The 8086 does not mask the rotation count. However, all other IA-32 processors (starting with the Intel 286 processor) do mask the rotation count to 5 bits, resulting in a maximum count of 31. This masking is done in all operating modes (including the virtual-8086 mode) to reduce the maximum execution time of the instructions.

Operation

```
(* RCL and RCR instructions *)
SIZE ← OperandSize;
CASE (determine count) OF
   SIZE \leftarrow 8: tempCOUNT \leftarrow (COUNT AND 1FH) MOD 9;
   SIZE ← 16: tempCOUNT ← (COUNT AND 1FH) MOD 17;
   SIZE ← 32: tempCOUNT ← COUNT AND 1FH;
   SIZE \leftarrow 64: tempCOUNT \leftarrow COUNT AND 3FH;
ESAC:
(* RCL instruction operation *)
WHILE (tempCOUNT \neq 0)
   DO
       tempCF \leftarrow MSB(DEST);
       DEST \leftarrow (DEST * 2) + CF;
       CF \leftarrow tempCF:
       tempCOUNT ← tempCOUNT - 1;
   OD:
ELIHW:
IF COUNT = 1
   THEN OF \leftarrow MSB(DEST) XOR CF;
   ELSE OF is undefined:
FI:
(* RCR instruction operation *)
IF COUNT = 1
   THEN OF \leftarrow MSB(DEST) XOR CF;
   ELSE OF is undefined:
FI:
WHILE (tempCOUNT \neq 0)
   DO
       tempCF \leftarrow LSB(SRC);
       DEST \leftarrow (DEST / 2) + (CF * 2<sup>SIZE</sup>);
       CF ← tempCF:
       tempCOUNT ← tempCOUNT - 1;
   OD:
(* ROL and ROR instructions *)
SIZE ← OperandSize:
CASE (determine count) OF
```



```
tempCOUNT ← (COUNT AND 1FH) MOD 8; (* Mask count before MOD *)
   SIZE \leftarrow 8:
   SIZE ← 16: tempCOUNT ← (COUNT AND 1FH) MOD 16;
   SIZE ← 32: tempCOUNT ← (COUNT AND 1FH) MOD 32;
   SIZE ← 64: tempCOUNT ← (COUNT AND 1FH) MOD 64;
ESAC:
(* ROL instruction operation *)
IF (tempCOUNT > 0) (* Prevents updates to CF *)
   WHILE (tempCOUNT \neq 0)
       DO
           tempCF \leftarrow MSB(DEST);
            DEST \leftarrow (DEST * 2) + tempCF;
           tempCOUNT ← tempCOUNT - 1;
       OD:
   ELIHW;
   CF \leftarrow LSB(DEST):
   IF COUNT = 1
       THEN OF \leftarrow MSB(DEST) XOR CF;
       ELSE OF is undefined:
   FI:
FI;
(* ROR instruction operation *)
IF tempCOUNT > 0) (* Prevent updates to CF *)
   WHILE (tempCOUNT \neq 0)
       DO
           tempCF \leftarrow LSB(SRC):
           DEST \leftarrow (DEST / 2) + (tempCF * 2<sup>SIZE</sup>);
           tempCOUNT ← tempCOUNT – 1;
       OD:
   ELIHW;
   CF \leftarrow MSB(DEST);
   IF COUNT = 1
       THEN OF \leftarrow MSB(DEST) XOR MSB – 1(DEST);
       ELSE OF is undefined:
   FI;
FI:
```

Flags Affected

The CF flag contains the value of the bit shifted into it. The OF flag is affected only for single-bit rotates (see "Description" above); it is undefined for multi-bit rotates. The SF, ZF, AF, and PF flags are not affected.



Protected Mode Exceptions

#GP(0) If the source operand is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the source operand is located in a nonwritable segment.

If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



RCPPS—Compute Reciprocals of Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 53 /r	RCPPS xmm1, xmm2/m128	Valid	Valid	Computes the approximate reciprocals of the packed single-precision floating-point values in <i>xmm2/m128</i> and stores the results in <i>xmm1</i> .

Description

Performs an SIMD computation of the approximate reciprocals of the four packed single-precision floating-point values in the source operand (second operand) stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD single-precision floating-point operation.

The relative error for this approximation is:

```
|Relative Error| \leq 1.5 * 2^{-12}
```

The RCPPS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an ∞ of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). Tiny results are always flushed to 0.0, with the sign of the operand. (Input values greater than or equal to |1.111111111111010000000000008* 2^{125} | are guaranteed to not produce tiny results; input values less than or equal to |1.0000000000110000000018* 2^{126} | are guaranteed to produce tiny results, which are in turn flushed to 0.0; and input values in between this range may or may not produce tiny results, depending on the implementation.) When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
DEST[31:0] ← APPROXIMATE(1.0/(SRC[31:0]));
DEST[63:32] ← APPROXIMATE(1.0/(SRC[63:32]));
DEST[95:64] ← APPROXIMATE(1.0/(SRC[95:64]));
DEST[127:96] ← APPROXIMATE(1.0/(SRC[127:96]));
```

Intel C/C++ Compiler Intrinsic Equivalent

RCCPS __m128 _mm_rcp_ps(__m128 a)



SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



RCPSS—Compute Reciprocal of Scalar Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 53 /r	RCPSS xmm1, xmm2/m32	Valid	Valid	Computes the approximate reciprocal of the scalar single-precision floating-point value in <i>xmm2/m32</i> and stores the result in <i>xmm1</i> .

Description

Computes of an approximate reciprocal of the low single-precision floating-point value in the source operand (second operand) and stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of a scalar single-precision floating-point operation.

The relative error for this approximation is:

$$|Relative Error| \le 1.5 * 2^{-12}$$

The RCPSS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an ∞ of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). Tiny results are always flushed to 0.0, with the sign of the operand. (Input values greater than or equal to |1.111111111111010000000000008* 2^{125} | are guaranteed to not produce tiny results; input values less than or equal to |1.0000000000110000000001B* 2^{126} | are guaranteed to produce tiny results, which are in turn flushed to 0.0; and input values in between this range may or may not produce tiny results, depending on the implementation.) When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] ← APPROX (1.0/(SRC[31:0])); (* DEST[127:32] unchanged *)

Intel C/C++ Compiler Intrinsic Equivalent

RCPSS __m128 _mm_rcp_ss(__m128 a)

SIMD Floating-Point Exceptions

None.



Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) For unaligned memory reference.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.





64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



RDMSR—Read from Model Specific Register

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 32	RDMSR	Valid	Valid	Load MSR specified by ECX into EDX:EAX.
REX.W + 0F 32	RDMSR	Valid	N.E.	Load MSR specified by RCX into RDX:RAX.

NOTES:

Description

Loads the contents of a 64-bit model specific register (MSR) specified in an index register into registers EDX:EAX. The input value loaded into the index register is the address of the MSR to be read. The EDX register is loaded with the high-order 32 bits of the MSR and the EAX register is loaded with the low-order 32 bits. If fewer than 64 bits are implemented in the MSR being read, the values returned to EDX:EAX in unimplemented bit locations are undefined. In non-64-bit mode, the index register is specified in ECX. In 64-bit mode, the index register is specified in RCX and the higher 32-bits of RDX and RAX are cleared.

This instruction must be executed at privilege level 0 or in real-address mode; otherwise, a general protection exception #GP(0) will be generated. Specifying a reserved or unimplemented MSR address in ECX will also cause a general protection exception.

The MSRs control functions for testability, execution tracing, performance-monitoring, and machine check errors. Appendix B, *Model-Specific Registers (MSRs)*, in the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*, lists all the MSRs that can be read with this instruction and their addresses. Note that each processor family has its own set of MSRs.

The CPUID instruction should be used to determine whether MSRs are supported (EDX[5]=1) before using this instruction.

IA-32 Architecture Compatibility

The MSRs and the ability to read them with the RDMSR instruction were introduced into the IA-32 Architecture with the Pentium processor. Execution of this instruction by an IA-32 processor earlier than the Pentium processor results in an invalid opcode exception #UD.

^{*} See IA-32 Architecture Compatibility section below.



Operation

```
IF 64-Bit Mode and REX.W used THEN  \begin{array}{c} \text{RAX}[31:0] \leftarrow \text{MSR}(\text{RCX})[31:0]; \\ \text{RAX}[63:32] \leftarrow 0]; \\ \text{RDX}[31:0] \leftarrow \text{MSR}(\text{RCX})[63:32]; \\ \text{RDX}[63:32] \leftarrow 0]; \\ \text{ELSE} \\ (* \text{Non-64-bit modes, 64-bit mode default *}) \\ \text{EDX-EAX} \leftarrow \text{MSR}[\text{ECX}]; \\ \text{FI}; \end{array}
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the current privilege level is not 0.

If the value in ECX specifies a reserved or unimplemented MSR address.

Real-Address Mode Exceptions

#GP If the value in ECX specifies a reserved or unimplemented MSR address.

Virtual-8086 Mode Exceptions

#GP(0) The RDMSR instruction is not recognized in virtual-8086 mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the current privilege level is not 0.

If the value in ECX or RCX specifies a reserved or unimplemented MSR

address.



RDPMC—Read Performance-Monitoring Counters

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 33	RDPMC	Valid	Valid	Read performance-monitoring counter specified by ECX into EDX:EAX.

Description

Loads the 40-bit performance-monitoring counter specified in the ECX register into registers EDX:EAX. The EDX register is loaded with the high-order 8 bits of the counter and the EAX register is loaded with the low-order 32 bits. The counter to be read is specified with an unsigned integer placed in the ECX register.

The P6 family processors and Pentium processors with MMX technology have two performance-monitoring counters (0 and 1), which are specified by placing 0000H or 0001H, respectively, in the ECX register. Pentium 4 and Intel Xeon processors have 18 counters (0 through 17), which are specified with 0000H through 0011H, respectively.

The Pentium 4 and Intel Xeon processors also support "fast" (32-bit) and "slow" (40-bit) reads of performance counters. This option is selected with bit 31 of the ECX register. If bit 31 is set, the RDPMC instruction reads only the low 32 bits of the selected performance counter; if bit 31 is clear, all 40 bits of the counter are read. The 32-bit counter result is returned in the EAX register, and the EDX register is set to 0. A 32-bit read executes faster on a Pentium 4 or Intel Xeon processor than a full 40-bit read.

When in protected or virtual 8086 mode, the performance-monitoring counters enabled (PCE) flag in register CR4 restricts the use of the RDPMC instruction as follows. When the PCE flag is set, the RDPMC instruction can be executed at any privilege level; when the flag is clear, the instruction can only be executed at privilege level 0. (When in real-address mode, the RDPMC instruction is always enabled.)

The performance-monitoring counters can also be read with the RDMSR instruction, when executing at privilege level 0.

The performance-monitoring counters are event counters that can be programmed to count events such as the number of instructions decoded, number of interrupts received, or number of cache loads. Appendix A, *Performance-Monitoring Events*, in the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*, lists the events that can be counted for the Pentium 4, Intel Xeon, and earlier IA-32 processors.

The RDPMC instruction is not a serializing instruction; that is, it does not imply that all the events caused by the preceding instructions have been completed or that events caused by subsequent instructions have not begun. If an exact event count is desired, software must insert a serializing instruction (such as the CPUID instruction) before and/or after the RDPCM instruction.



In the Pentium 4 and Intel Xeon processors, performing back-to-back fast reads are not guaranteed to be monotonic. To guarantee monotonicity on back-to-back reads, a serializing instruction must be placed between the tow RDPMC instructions.

The RDPMC instruction can execute in 16-bit addressing mode or virtual-8086 mode; however, the full contents of the ECX register are used to select the counter, and the event count is stored in the full EAX and EDX registers.

The RDPMC instruction was introduced into the IA-32 Architecture in the Pentium Pro processor and the Pentium processor with MMX technology. The earlier Pentium processors have performance-monitoring counters, but they must be read with the RDMSR instruction.

In 64-bit mode, RDPMC behavior is unchanged from 32-bit mode. The upper 32 bits of RAX and RDX are cleared.

Operation

```
(* P6 family processors and Pentium processor with MMX technology *)
IF (ECX = 0 \text{ or } 1) and ((CR4.PCE = 1) \text{ or } (CPL = 0) \text{ or } (CR0.PE = 0))
   THEN
        EAX \leftarrow PMC(ECX)[31:0];
        EDX \leftarrow PMC(ECX)[39:32]:
   ELSE (* ECX is not 0 or 1 or CR4.PCE is 0 and CPL is 1, 2, or 3 and CR0.PE is 1 *)
        #GP(0):
FI:
(* Pentium 4 and Intel Xeon processor *)
IF (ECX[30:0] = 0:17) and ((CR4.PCE = 1) \text{ or } (CPL = 0) \text{ or } (CR0.PE = 0))
   THEN IF ECX[31] = 0
        THEN IF 64-Bit Mode
             THEN
                  RAX[31:0] \leftarrow PMC(ECX[30:0])[31:0]; (* 40-bit read *)
                  RAX[63:32] \leftarrow 0:
                  RDX[31:0] \leftarrow PMC(ECX[30:0])[39:32];
                  RDX[63:32] \leftarrow 0;
             ELSE
                  EAX ← PMC(ECX[30:0])[31:0]; (* 40-bit read *)
                  EDX \leftarrow PMC(ECX[30:0])[39:32];
             FI:
        ELSE IF ECX[31] = 1
             THEN IF 64-Bit Mode
                  THEN
                       RAX[31:0] ← PMC(ECX[30:0])[31:0]; (* 32-bit read *)
                       RAX[63:32] \leftarrow 0:
                       RDX \leftarrow 0:
                  FLSE
                       EAX ← PMC(ECX[30:0])[31:0]; (* 32-bit read *)
                       EDX \leftarrow 0:
             FI:
   FI:
```



ELSE (* ECX[30:0] \neq 0:17 or CR4.PCE = 0 and (CPL = 1, 2, or 3) and CR0.PE = 1 *) #GP(0);

FI;

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the current privilege level is not 0 and the PCE flag in the CR4 register

is clear.

(P6 family processors and Pentium processors with MMX technology) If

the value in the ECX register is not 0 or 1.

(Pentium 4 and Intel Xeon processors) If the value in ECX[30:0] is not

within the range of 0 through 17.

Real-Address Mode Exceptions

#GP (P6 family processors and Pentium processors with MMX technology) If

the value in the ECX register is not 0 or 1.

(Pentium 4 and Intel Xeon processors) If the value in ECX[30:0] is not

within the range of 0 through 17.

Virtual-8086 Mode Exceptions

#GP(0) If the PCE flag in the CR4 register is clear.

(P6 family processors and Pentium processors with MMX technology) If

the value in the ECX register is not 0 or 1.

(Pentium 4 and Intel Xeon processors) If the value in ECX[30:0] is not

within the range of 0 through 17.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the current privilege level is not 0 and the PCE flag in the CR4 register

is clear

If the value in ECX[30:0] is not within the range of 0 through 17.



RDTSC—Read Time-Stamp Counter

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 31	RDTSC	Valid	Valid	Read time-stamp counter into EDX:EAX.

Description

In legacy, compatibility and default 64-bit mode; loads the current value of the processor's time-stamp counter into the EDX:EAX registers. The time-stamp counter is contained in a 64-bit MSR. The high-order 32 bits of the MSR are loaded into the EDX register, and the low-order 32 bits are loaded into the EAX register.

The processor monotonically increments the time-stamp counter MSR every clock cycle and resets it to 0 whenever the processor is reset. See "Time Stamp Counter" in Chapter 15 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 3* for specific details of the time stamp counter behavior.

When in protected or virtual 8086 mode, the time stamp disable (TSD) flag in register CR4 restricts the use of the RDTSC instruction as follows. When the TSD flag is clear, the RDTSC instruction can be executed at any privilege level; when the flag is set, the instruction can only be executed at privilege level 0. (When in real-address mode, the RDTSC instruction is always enabled.)

The time-stamp counter can also be read with the RDMSR instruction, when executing at privilege level 0.

The RDTSC instruction is not a serializing instruction. Thus, it does not necessarily wait until all previous instructions have been executed before reading the counter. Similarly, subsequent instructions may begin execution before the read operation is performed.

This instruction was introduced by the Pentium processor.

In 64-bit mode, RDTSC behavior is unchanged from 32-bit mode. The upper 32 bits of RAX and RDX are cleared.



Operation

```
IF (CR4.TSD = 0) or (CPL = 0) or (CR0.PE = 0)  
THEN  
IF 64-Bit Mode  
THEN  
RAX[31:0] \leftarrow TimeStampCounter[31:0];  
RAX[63:32] \leftarrow 0;  
RDX[31:0] \leftarrow TimeStampCounter[63:32];  
RDX[63:32] \leftarrow 0;  
ELSE  
EDX:EAX \leftarrow TimeStampCounter;  
FI;  
ELSE (* CR4.TSD = 1 and (CPL = 1, 2, or 3) and CR0.PE = 1 *)  
#GP(0);  
FI;
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the TSD flag in register CR4 is set and the CPL is greater than 0.

Real-Address Mode Exceptions

None.

Virtual-8086 Mode Exceptions

#GP(0) If the TSD flag in register CR4 is set.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



REP/REPE/REPNE/REPNZ—Repeat String Operation Prefix

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 6C	REP INS m8, DX	Valid	Valid	Input (E)CX bytes from port DX into ES:[(E)DI].
F3 6C	REP INS m8, DX	Valid	N.E.	Input RCX bytes from port DX into [RDI].
F3 6D	REP INS <i>m16</i> , DX	Valid	Valid	Input (E)CX words from port DX into ES:[(E)DI.]
F3 6D	REP INS m32, DX	Valid	Valid	Input (E)CX doublewords from port DX into ES:[(E)DI].
F3 6D	REP INS r/m32, DX	Valid	N.E.	Input RCX default size from port DX into [RDI].
F3 A4	REP MOVS m8, m8	Valid	Valid	Move (E)CX bytes from DS:[(E)SI] to ES:[(E)DI].
REX.W + F3 A4	REP MOVS m8, m8	Valid	N.E.	Move RCX bytes from [RSI] to [RDI].
F3 A5	REP MOVS <i>m16, m16</i>	Valid	Valid	Move (E)CX words from DS:[(E)SI] to ES:[(E)DI].
F3 A5	REP MOVS <i>m32,</i> <i>m32</i>	Valid	Valid	Move (E)CX doublewords from DS:[(E)SI] to ES:[(E)DI].
REX.W + F3 A5	REP MOVS <i>m64,</i> <i>m64</i>	Valid	N.E.	Move RCX quadwords from [RSI] to [RDI].
F3 6E	REP OUTS DX, r/m8	Valid	Valid	Output (E)CX bytes from DS:[(E)SI] to port DX.
REX.W + F3 6E	REP OUTS DX, r/m8*	Valid	N.E.	Output RCX bytes from [RSI] to port DX.
F3 6F	REP OUTS DX, r/m16	Valid	Valid	Output (E)CX words from DS:[(E)SI] to port DX.
F3 6F	REP OUTS DX, r/m32	Valid	Valid	Output (E)CX doublewords from DS:[(E)SI] to port DX.
REX.W + F3 6F	REP OUTS DX, r/m32	Valid	N.E.	Output RCX default size from [RSI] to port DX.
F3 AC	REP LODS AL	Valid	Valid	Load (E)CX bytes from DS:[(E)SI] to AL.
REX.W + F3 AC	REP LODS AL	Valid	N.E.	Load RCX bytes from [RSI] to AL.
F3 AD	REP LODS AX	Valid	Valid	Load (E)CX words from DS:[(E)SI] to AX.
F3 AD	REP LODS EAX	Valid	Valid	Load (E)CX doublewords from DS:[(E)SI] to EAX.
REX.W + F3 AD	REP LODS RAX	Valid	N.E.	Load RCX quadwords from [RSI] to RAX.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 AA	REP STOS m8	Valid	Valid	Fill (E)CX bytes at ES:[(E)DI] with AL.
REX.W + F3 AA	REP STOS m8	Valid	N.E.	Fill RCX bytes at [RDI] with AL.
F3 AB	REP STOS m16	Valid	Valid	Fill (E)CX words at ES:[(E)DI] with AX.
F3 AB	REP STOS m32	Valid	Valid	Fill (E)CX doublewords at ES:[(E)DI] with EAX.
REX.W + F3 AB	REP STOS m64	Valid	N.E.	Fill RCX quadwords at [RDI] with RAX.
F3 A6	REPE CMPS <i>m8,</i> <i>m8</i>	Valid	Valid	Find nonmatching bytes in ES:[(E)DI] and DS:[(E)SI].
REX.W + F3 A6	REPE CMPS m8, m8	Valid	N.E.	Find non-matching bytes in [RDI] and [RSI].
F3 A7	REPE CMPS <i>m16, m16</i>	Valid	Valid	Find nonmatching words in ES:[(E)DI] and DS:[(E)SI].
F3 A7	REPE CMPS <i>m32, m32</i>	Valid	Valid	Find nonmatching doublewords in ES:[(E)DI] and DS:[(E)SI].
REX.W + F3 A7	REPE CMPS <i>m64</i> , <i>m64</i>	Valid	N.E.	Find non-matching quadwords in [RDI] and [RSI].
F3 AE	REPE SCAS m8	Valid	Valid	Find non-AL byte starting at ES:[(E)DI].
REX.W + F3 AE	REPE SCAS m8	Valid	N.E.	Find non-AL byte starting at [RDI].
F3 AF	REPE SCAS m16	Valid	Valid	Find non-AX word starting at ES:[(E)DI].
F3 AF	REPE SCAS m32	Valid	Valid	Find non-EAX doubleword starting at ES:[(E)DI].
REX.W + F3 AF	REPE SCAS m64	Valid	N.E.	Find non-RAX quadword starting at [RDI].
F2 A6	REPNE CMPS m8, m8	Valid	Valid	Find matching bytes in ES:[(E)DI] and DS:[(E)SI].
REX.W + F2 A6	REPNE CMPS m8, m8	Valid	N.E.	Find matching bytes in [RDI] and [RSI].
F2 A7	REPNE CMPS m16, m16	Valid	Valid	Find matching words in ES:[(E)DI] and DS:[(E)SI].
F2 A7	REPNE CMPS m32, m32	Valid	Valid	Find matching doublewords in ES:[(E)DI] and DS:[(E)SI].
REX.W + F2 A7	REPNE CMPS m64, m64	Valid	N.E.	Find matching doublewords in [RDI] and [RSI].



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 AE	REPNE SCAS m8	Valid	Valid	Find AL, starting at ES:[(E)DI].
REX.W + F2 AE	REPNE SCAS m8	Valid	N.E.	Find AL, starting at [RDI].
F2 AF	REPNE SCAS m16	Valid	Valid	Find AX, starting at ES:[(E)DI].
F2 AF	REPNE SCAS m32	Valid	Valid	Find EAX, starting at ES:[(E)DI].
REX.W + F2 AF	REPNE SCAS m64	Valid	N.E.	Find RAX, starting at [RDI].

NOTES:

Description

Repeats a string instruction the number of times specified in the count register or until the indicated condition of the ZF flag is no longer met. The REP (repeat), REPE (repeat while equal), REPNE (repeat while not equal), REPZ (repeat while zero), and REPNZ (repeat while not zero) mnemonics are prefixes that can be added to one of the string instructions. The REP prefix can be added to the INS, OUTS, MOVS, LODS, and STOS instructions, and the REPE, REPNE, REPZ, and REPNZ prefixes can be added to the CMPS and SCAS instructions. (The REPZ and REPNZ prefixes are synonymous forms of the REPE and REPNE prefixes, respectively.) The behavior of the REP prefix is undefined when used with non-string instructions.

The REP prefixes apply only to one string instruction at a time. To repeat a block of instructions, use the LOOP instruction or another looping construct. All of these repeat prefixes cause the associated instruction to be repeated until the count in register is decremented to 0. See Table 4-1.

Repeat Prefix	Termination Condition 1*	Termination Condition 2
REP	RCX or (E)CX = 0	None
REPE/REPZ	RCX or (E)CX = 0	ZF = 0
REPNE/REPNZ	RCX or (E)CX = 0	ZF = 1

Table 4-1. Repeat Prefixes

NOTES:

The REPE, REPNE, REPZ, and REPNZ prefixes also check the state of the ZF flag after each iteration and terminate the repeat loop if the ZF flag is not in the specified state. When both termination conditions are tested, the cause of a repeat termination can be determined either by testing the count register with a JECXZ instruction or by testing the ZF flag (with a JZ, JNZ, or JNE instruction).

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.

^{*} Count register is CX, ECX or RCX by default, depending on attributes of the operating modes. In 64-bit mode, if default operation size is 32 bits, the count register becomes RCX when a REX.W prefix is used.



When the REPE/REPZ and REPNE/REPNZ prefixes are used, the ZF flag does not require initialization because both the CMPS and SCAS instructions affect the ZF flag according to the results of the comparisons they make.

A repeating string operation can be suspended by an exception or interrupt. When this happens, the state of the registers is preserved to allow the string operation to be resumed upon a return from the exception or interrupt handler. The source and destination registers point to the next string elements to be operated on, the EIP register points to the string instruction, and the ECX register has the value it held following the last successful iteration of the instruction. This mechanism allows long string operations to proceed without affecting the interrupt response time of the system.

When a fault occurs during the execution of a CMPS or SCAS instruction that is prefixed with REPE or REPNE, the EFLAGS value is restored to the state prior to the execution of the instruction. Since the SCAS and CMPS instructions do not use EFLAGS as an input, the processor can resume the instruction after the page fault handler.

Use the REP INS and REP OUTS instructions with caution. Not all I/O ports can handle the rate at which these instructions execute. Note that a REP STOS instruction is the fastest way to initialize a large block of memory.

In 64-bit mode, default operation size is 32 bits. The default count register is RCX for REP INS and REP OUTS; it is ECX for other instructions. REX.W does not promote operation to 64-bit for REP INS and REP OUTS. However, using an REX prefix in the form of REX.W does promote operation to 64-bit operands for other REP/REPNE/REPNZ instructions. See the summary chart at the beginning of this section for encoding data and limits.

Operation

```
IF AddressSize = 16
   THEN
       Use CX for CountReg:
   ELSE IF AddressSize = 64 and REX.W used
       THEN Use RCX for CountReg; FI;
   ELSE
       Use ECX for CountReg;
FI;
WHILE CountReg ≠ 0
   DO
       Service pending interrupts (if any):
       Execute associated string instruction;
       CountReg \leftarrow (CountReg - 1);
       IF CountReg = 0
           THEN exit WHILE loop; FI;
       IF (Repeat prefix is REPZ or REPE) and (ZF = 0)
       or (Repeat prefix is REPNZ or REPNE) and (ZF = 1)
           THEN exit WHILE loop; FI;
   OD:
```



Flags Affected

None; however, the CMPS and SCAS instructions do set the status flags in the EFLAGS register.

Exceptions (All Operating Modes)

None; however, exceptions can be generated by the instruction a repeat prefix is associated with.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.



RET—Return from Procedure

		64-Bit	Compat/	
Opcode	Instruction	Mode	Leg Mode	Description
C3	RET	Valid	Valid	Near return to calling procedure.
СВ	RET	Valid	Valid	Far return to calling procedure.
C2 iw	RET imm16	Valid	Valid	Near return to calling procedure and pop imm16 bytes from stack.
CA iw	RET imm16	Valid	Valid	Far return to calling procedure and pop imm16 bytes from stack.

Description

Transfers program control to a return address located on the top of the stack. The address is usually placed on the stack by a CALL instruction, and the return is made to the instruction that follows the CALL instruction.

The optional source operand specifies the number of stack bytes to be released after the return address is popped; the default is none. This operand can be used to release parameters from the stack that were passed to the called procedure and are no longer needed. It must be used when the CALL instruction used to switch to a new procedure uses a call gate with a non-zero word count to access the new procedure. Here, the source operand for the RET instruction must specify the same number of bytes as is specified in the word count field of the call gate.

The RET instruction can be used to execute three different types of returns:

- Near return—A return to a calling procedure within the current code segment (the segment currently pointed to by the CS register), sometimes referred to as an intrasegment return.
- Far return—A return to a calling procedure located in a different segment than the current code segment, sometimes referred to as an intersegment return.
- Inter-privilege-level far return—A far return to a different privilege level than that of the currently executing program or procedure.

The inter-privilege-level return type can only be executed in protected mode. See the section titled "Calling Procedures Using Call and RET" in Chapter 6 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*, for detailed information on near, far, and inter-privilege-level returns.

When executing a near return, the processor pops the return instruction pointer (offset) from the top of the stack into the EIP register and begins program execution at the new instruction pointer. The CS register is unchanged.

When executing a far return, the processor pops the return instruction pointer from the top of the stack into the EIP register, then pops the segment selector from the top of the stack into the CS register. The processor then begins program execution in the new code segment at the new instruction pointer.



The mechanics of an inter-privilege-level far return are similar to an intersegment return, except that the processor examines the privilege levels and access rights of the code and stack segments being returned to determine if the control transfer is allowed to be made. The DS, ES, FS, and GS segment registers are cleared by the RET instruction during an inter-privilege-level return if they refer to segments that are not allowed to be accessed at the new privilege level. Since a stack switch also occurs on an inter-privilege level return, the ESP and SS registers are loaded from the stack.

If parameters are passed to the called procedure during an inter-privilege level call, the optional source operand must be used with the RET instruction to release the parameters on the return. Here, the parameters are released both from the called procedure's stack and the calling procedure's stack (that is, the stack being returned to).

In 64-bit mode, the default operation size of this instruction is the stack size, i.e. 64 bits.

Operation

```
(* Near return *)
IF instruction = Near return
   THEN:
       IF OperandSize = 32
            THEN
                IF top 4 bytes of stack not within stack limits
                     THEN #SS(0); FI;
                EIP \leftarrow Pop():
            FLSE
                IF OperandSize = 64
                     THEN
                         IF top 8 bytes of stack not within stack limits
                              THEN #SS(0); FI;
                         RIP \leftarrow Pop():
                     ELSE (* OperandSize = 16 *)
                         IF top 2 bytes of stack not within stack limits
                              THEN #SS(0); FI;
                         tempEIP \leftarrow Pop();
                         tempEIP ← tempEIP AND 0000FFFFH;
                         IF tempEIP not within code segment limits
                              THEN #GP(0); FI;
                         EIP ← tempEIP;
                FI;
       FI:
   IF instruction has immediate operand
       THEN IF StackAddressSize = 32
            THEN
                ESP ← ESP + SRC; (* Release parameters from stack *)
            ELSE
                IF StackAddressSize = 64
                     THEN
```



```
RSP ← RSP + SRC; (* Release parameters from stack *)
                     ELSE (* StackAddressSize = 16 *)
                         SP ← SP + SRC; (* Release parameters from stack *)
                FI;
       FI:
   FI:
FI;
(* Real-address mode or virtual-8086 mode *)
IF ((PE = 0) or (PE = 1 AND VM = 1)) and instruction = far return
   THEN
       IF OperandSize = 32
            THEN
                IF top 12 bytes of stack not within stack limits
                     THEN #SS(0); FI;
                EIP \leftarrow Pop():
                CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded *)
            ELSE (* OperandSize = 16 *)
                IF top 6 bytes of stack not within stack limits
                     THEN #SS(0); FI;
                tempEIP \leftarrow Pop():
                tempEIP ← tempEIP AND 0000FFFFH;
                IF tempEIP not within code segment limits
                     THEN #GP(0); FI;
                EIP ← tempEIP:
                CS \leftarrow Pop(); (* 16-bit pop *)
       FI;
   IF instruction has immediate operand
       THEN
            SP ← SP + (SRC AND FFFFH); (* Release parameters from stack *)
   FI;
FI:
(* Protected mode, not virtual-8086 mode *)
IF (PE = 1 and VM = 0 and IA32_EFER.LMA = 0) and instruction = far RET
   THEN
       IF OperandSize = 32
            THEN
                IF second doubleword on stack is not within stack limits
                     THEN #SS(0); FI;
            ELSE (* OperandSize = 16 *)
                IF second word on stack is not within stack limits
                     THEN #SS(0); FI;
       FI:
   IF return code segment selector is NULL
       THEN GP(0); FI;
   IF return code segment selector addrsses descriptor beyond diescriptor table limit
```



```
THEN GP(selector); FI;
   Obtain descriptor to which return code segment selector points from descriptor table;
   IF return code segment descriptor is not a code segment
       THEN #GP(selector); FI;
   IF return code segment selector RPL < CPL
       THEN #GP(selector); FI;
   IF return code segment descriptor is conforming
   and return code segment DPL > return code segment selector RPL
            THEN #GP(selector); FI;
   IF return code segment descriptor is not present
       THEN #NP(selector); FI:
   IF return code segment selector RPL > CPL
       THEN GOTO RETURN-OUTER-PRIVILEGE-LEVEL:
       ELSE GOTO RETURN-TO-SAME-PRIVILEGE-LEVEL;
   FI:
FI:
RETURN-SAME-PRIVILEGE-LEVEL:
   IF the return instruction pointer is not within ther return code segment limit
       THEN #GP(0): FI:
   IF OperandSize = 32
       THEN
            EIP \leftarrow Pop():
            CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded *)
            ESP ← ESP + SRC; (* Release parameters from stack *)
       ELSE (* OperandSize = 16 *)
            EIP \leftarrow Pop():
            EIP ← EIP AND 0000FFFFH;
            CS \leftarrow Pop(); (* 16-bit pop *)
            ESP ← ESP + SRC; (* Release parameters from stack *)
   FI;
RETURN-OUTER-PRIVILEGE-LEVEL:
   IF top (16 + SRC) bytes of stack are not within stack limits (OperandSize = 32)
   or top (8 + SRC) bytes of stack are not within stack limits (OperandSize = 16)
            THEN #SS(0); FI;
   Read return segment selector;
   IF stack segment selector is NULL
       THEN #GP(0); FI;
   IF return stack segment selector index is not within its descriptor table limits
       THEN #GP(selector); FI;
   Read segment descriptor pointed to by return segment selector;
   IF stack segment selector RPL ≠ RPL of the return code segment selector
   or stack segment is not a writable data segment
   or stack segment descriptor DPL ≠ RPL of the return code segment selector
            THEN #GP(selector); FI;
   IF stack segment not present
```



```
THEN #SS(StackSegmentSelector); FI;
IF the return instruction pointer is not within the return code segment limit
    THEN #GP(0); FI;
CPL ← ReturnCodeSegmentSelector(RPL);
IF OperandSize = 32
    THEN
         EIP \leftarrow Pop():
         CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded; segment descriptor
         information also loaded *)
         CS(RPL) ← CPL;
         ESP ← ESP + SRC; (* Release parameters from called procedure's stack *)
         tempESP \leftarrow Pop():
         tempSS ← Pop(); (* 32-bit pop, high-order 16 bits discarded; segment
         descriptor information also loaded *)
         ESP \leftarrow tempESP:
         SS \leftarrow tempSS:
    ELSE (* OperandSize = 16 *)
         EIP \leftarrow Pop();
         EIP ← EIP AND 0000FFFFH;
         CS ← Pop(); (* 16-bit pop; segment descriptor information also loaded *)
         CS(RPL) \leftarrow CPL;
         ESP ← ESP + SRC; (* Release parameters from called procedure's stack *)
         tempESP \leftarrow Pop():
         tempSS ← Pop(); (* 16-bit pop; segment descriptor information also loaded *)
         ESP \leftarrow tempESP:
         SS ← tempSS:
FI:
FOR each of segment register (ES, FS, GS, and DS)
    DO
         IF segment register points to data or non-conforming code segment
         and CPL > segment descriptor DPL (* DPL in hidden part of segment register *)
             THEN SegmentSelector ← 0; (* Segment selector invalid *)
         FI;
    OD:
For each of ES, FS, GS, and DS
    DO
         IF segment selector index is not within descriptor table limits
         or segment descriptor indicates the segment is not a data or
         readable code segment
         or if the segment is a data or non-conforming code segment
         and the segment descriptor's DPL < CPL or RPL of code segment's
         segment selector
             THEN SegmentSelector ← 0; (* Segment selector invalid *)
ESP ← ESP + SRC: (* Release parameters from calling procedure's stack *)
```



```
(* IA-32e Mode *)
   IF (PE = 1 and VM = 0 and IA32_EFER.LMA = 1) and instruction = far RET
           IF OperandSize = 32
                THEN
                    IF second doubleword on stack is not within stack limits
                        THEN #SS(0); FI;
                    IF first or second doubleword on stack is not in canonical space
                        THEN #SS(0); FI;
                ELSE
                    IF OperandSize = 16
                        THEN
                             IF second word on stack is not within stack limits
                                 THEN #SS(0); FI;
                             IF first or second word on stack is not in canonical space
                                 THEN #SS(0); FI;
                        ELSE (* OperandSize = 64 *)
                             IF first or second quadword on stack is not in canonical space
                                 THEN #SS(0); FI;
                    FΙ
           FI:
       IF return code segment selector is NULL
           THEN GP(0); FI;
       IF return code segment selector addresses descriptor beyond descriptor table limit
           THEN GP(selector); FI;
       IF return code segment selector addresses descriptor in non-canonical space
           THEN GP(selector); FI;
       Obtain descriptor to which return code segment selector points from descriptor table;
       IF return code segment descriptor is not a code segment
           THEN #GP(selector); FI;
       IF return code segment descriptor has L-bit = 1 and D-bit = 1
           THEN #GP(selector); FI;
       IF return code segment selector RPL < CPL
           THEN #GP(selector); FI;
       IF return code segment descriptor is conforming
       and return code segment DPL > return code segment selector RPL
           THEN #GP(selector); FI;
       IF return code segment descriptor is non-conforming
       and return code segment DPL ≠ return code segment selector RPL
           THEN #GP(selector); FI;
       IF return code segment descriptor is not present
           THEN #NP(selector); FI:
       IF return code segment selector RPL > CPL
           THEN GOTO IA-32E-MODE-RETURN-OUTER-PRIVILEGE-LEVEL;
           ELSE GOTO IA-32E-MODE-RETURN-SAME-PRIVILEGE-LEVEL;
       FI;
   FI:
```



```
IA-32F-MODE-RETURN-SAME-PRIVILEGE-LEVEL:
IF the return instruction pointer is not within the return code segment limit
   THEN #GP(0); FI;
IF the return instruction pointer is not within canonical address space
   THEN #GP(0); FI;
IF OperandSize = 32
   THEN
       EIP \leftarrow Pop();
       CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded *)
       ESP ← ESP + SRC; (* Release parameters from stack *)
   ELSE
       IF OperandSize = 16
            THEN
                EIP \leftarrow Pop():
                EIP ← EIP AND 0000FFFFH;
                CS \leftarrow Pop(); (* 16-bit pop *)
                ESP ← ESP + SRC; (* Release parameters from stack *)
            ELSE (* OperandSize = 64 *)
                RIP \leftarrow Pop():
                CS ← Pop(); (* 64-bit pop, high-order 48 bits discarded *)
                ESP ← ESP + SRC: (* Release parameters from stack *)
       FI:
FI;
IA-32E-MODE-RETURN-OUTER-PRIVILEGE-LEVEL:
IF top (16 + SRC) bytes of stack are not within stack limits (OperandSize = 32)
or top (8 + SRC) bytes of stack are not within stack limits (OperandSize = 16)
   THEN #SS(0); FI;
IF top (16 + SRC) bytes of stack are not in canonical address space (OperandSize = 32)
or top (8 + SRC) bytes of stack are not in canonical address space (OperandSize = 16)
or top (32 + SRC) bytes of stack are not in canonical address space (OperandSize = 64)
   THEN #SS(0); FI;
Read return stack segment selector:
IF stack segment selector is NULL
   THEN
       IF new CS descriptor L-bit = 0
            THEN #GP(selector);
       IF stack segment selector RPL = 3
            THEN #GP(selector);
FI:
IF return stack segment descriptor is not within descriptor table limits
       THEN #GP(selector); FI;
IF return stack segment descriptor is in non-canonical address space
       THEN #GP(selector); FI;
Read segment descriptor pointed to by return segment selector;
IF stack segment selector RPL ≠ RPL of the return code segment selector
```



```
or stack segment is not a writable data segment
or stack segment descriptor DPL ≠ RPL of the return code segment selector
   THEN #GP(selector); FI;
IF stack segment not present
   THEN #SS(StackSegmentSelector); FI;
IF the return instruction pointer is not within the return code segment limit
   THEN #GP(0); FI:
IF the return instruction pointer is not within canonical address space
   THEN #GP(0); FI;
CPL ← ReturnCodeSegmentSelector(RPL);
IF OperandSize = 32
   THEN
        EIP \leftarrow Pop();
        CS ← Pop(); (* 32-bit pop, high-order 16 bits discarded, segment descriptor
        information also loaded *)
        CS(RPL) ← CPL;
        ESP ← ESP + SRC: (* Release parameters from called procedure's stack *)
        tempESP \leftarrow Pop():
        tempSS ← Pop(); (* 32-bit pop, high-order 16 bits discarded, segment descriptor
        information also loaded *)
        ESP \leftarrow tempESP:
        SS \leftarrow tempSS:
   ELSE
        IF OperandSize = 16
            THEN
                 EIP \leftarrow Pop():
                 EIP ← EIP AND 0000FFFFH;
                 CS \leftarrow Pop(); (* 16-bit pop; segment descriptor information also loaded *)
                 CS(RPL) \leftarrow CPL:
                 ESP ← ESP + SRC; (* release parameters from called
                 procedure's stack *)
                 tempESP \leftarrow Pop();
                 tempSS ← Pop(); (* 16-bit pop; segment descriptor information loaded *)
                 ESP \leftarrow tempESP:
                 SS \leftarrow tempSS;
            ELSE (* OperandSize = 64 *)
                 RIP \leftarrow Pop():
                 CS ← Pop(); (* 64-bit pop; high-order 48 bits discarded; segment
                 descriptor information loaded *)
                 CS(RPL) \leftarrow CPL;
                 ESP ← ESP + SRC: (* Release parameters from called procedure's
                 stack *)
                 tempESP \leftarrow Pop():
                 tempSS ← Pop(); (* 64-bit pop; high-order 48 bits discarded; segment
                 descriptor information also loaded *)
                 ESP ← tempESP:
                 SS \leftarrow tempSS:
        FI:
```



```
FI;
FOR each of segment register (ES, FS, GS, and DS)
   DO
       IF segment register points to data or non-conforming code segment
       and CPL > segment descriptor DPL; (* DPL in hidden part of segment register *)
            THEN SegmentSelector ← 0: (* SegmentSelector invalid *)
       FI:
   OD:
For each of ES, FS, GS, and DS
   DO
       IF segment selector index is not within descriptor table limits
       or segment descriptor indicates the segment is not a data or readable code segment
       or if the segment is a data or non-conforming code segment
       and the segment descriptor's DPL < CPL or RPL of code segment's segment selector
            THEN SegmentSelector ← 0; (* SegmentSelector invalid *)
   OD:
ESP ESP + SRC; (* Release parameters from calling procedure's stack *)
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the return code or stack segment selector NULL.

If the return instruction pointer is not within the return code segment limit

#GP(selector)

If the RPL of the return code segment selector is less then the CPL.

If the return code or stack segment selector index is not within its descriptor table limits.

If the return code segment descriptor does not indicate a code segment.

If the return code segment is non-conforming and the segment selector's DPL is not equal to the RPL of the code segment's segment selector

If the return code segment is conforming and the segment selector's DPL greater than the RPL of the code segment's segment selector

If the stack segment is not a writable data segment.

If the stack segment selector RPL is not equal to the RPL of the return code segment selector.

If the stack segment descriptor DPL is not equal to the RPL of the return code segment selector.



#SS(0) If the top bytes of stack are not within stack limits.

If the return stack segment is not present.

#NP(selector) If the return code segment is not present.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory access occurs when the CPL is 3 and alignment

checking is enabled.

Real-Address Mode Exceptions

#GP If the return instruction pointer is not within the return code segment limit

#SS If the top bytes of stack are not within stack limits.

Virtual-8086 Mode Exceptions

#GP(0) If the return instruction pointer is not within the return code segment limit

#SS(0) If the top bytes of stack are not within stack limits.

#PF(fault-code) If a page fault occurs.

#AC(0) If an unaligned memory access occurs when alignment checking is

enabled.

Compatibility Mode Exceptions

Same as 64-bit mode exceptions.

64-Bit Mode Exceptions

#GP(0) If the return instruction pointer is non-canonical.

If the return instruction pointer is not within the return code segment limit.

If the stack segment selector is NULL going back to compatibility mode.

If the stack segment selector is NULL going back to CPL3 64-bit mode. If a NULL stack segment selector RPL is not equal to CPL going back to

non-CPL3 64-bit mode.

If the return code segment selector is NULL.

#GP(selector) If the proposed segment descriptor for a code segment does not indicate it

is a code segment.

If the proposed new code segment descriptor has both the D-bit and L-bit

set.

If the DPL for a nonconforming-code segment is not equal to the RPL of

the code segment selector.



If CPL is greater than the RPL of the code segment selector.

If the DPL of a conforming-code segment is greater than the return code segment selector RPL.

If a segment selector index is outside its descriptor table limits.

If a segment descriptor memory address is non-canonical.

If the stack segment is not a writable data segment.

If the stack segment descriptor DPL is not equal to the RPL of the return

code segment selector.

If the stack segment selector RPL is not equal to the RPL of the return code

segment selector.

#SS(0) If an attempt to pop a value off the stack violates the SS limit.

If an attempt to pop a value off the stack causes a non-canonical address

to be referenced.

#NP(selector) If the return code or stack segment is not present.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



RSM—Resume from System Management Mode

Opcode	Instruction	Non- SMM Mode	SMM Mode	Description
0F AA	RSM	Invalid	Valid	Resume operation of interrupted program.

Description

Returns program control from system management mode (SMM) to the application program or operating-system procedure that was interrupted when the processor received an SMM interrupt. The processor's state is restored from the dump created upon entering SMM. If the processor detects invalid state information during state restoration, it enters the shutdown state. The following invalid information can cause a shutdown:

- Any reserved bit of CR4 is set to 1.
- Any illegal combination of bits in CR0, such as (PG=1 and PE=0) or (NW=1 and CD=0).
- (Intel Pentium and Intel486 processors only.) The value stored in the state dump base field is not a 32-KByte aligned address.

The contents of the model-specific registers are not affected by a return from SMM.

The SMM state map used by RSM supports resuming processor context for non-64-bit modes and 64-bit mode.

See Chapter 13, System Management Mode (SMM), in the IA-32 Intel Architecture Software Developer's Manual, Volume 3, for more information about SMM and the behavior of the RSM instruction.

Operation

```
ReturnFromSMM;
IF (IA-32e mode supported)
    THEN
    ProcessorState ← Restore(SMMDump(IA-32e SMM STATE MAP));
Else
    ProcessorState ← Restore(SMMDump(Non-32-Bit-Mode SMM STATE MAP));
FI
```

Flags Affected

A11.



Protected Mode Exceptions

#UD If an attempt is made to execute this instruction when the processor is not

in SMM.

Real-Address Mode Exceptions

Same exceptions as in Protected Mode.

Virtual-8086 Mode Exceptions

Same exceptions as in Protected Mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



RSQRTPS—Compute Reciprocals of Square Roots of Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 52 /r	RSQRTPS xmm1, xmm2/m128	Valid	Valid	Computes the approximate reciprocals of the square roots of the packed single-precision floating-point values in xmm2/m128 and stores the results in xmm1.

Description

Performs an SIMD computation of the approximate reciprocals of the square roots of the four packed single-precision floating-point values in the source operand (second operand) and stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD single-precision floating-point operation.

The relative error for this approximation is:

 $|Relative Error| \le 1.5 * 2^{-12}$

The RSQRTPS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an ∞ of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). When a source value is a negative value (other than -0.0), a floating-point indefinite is returned. When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] \leftarrow APPROXIMATE(1.0/SQRT(SRC[31:0])); DEST[63:32] \leftarrow APPROXIMATE(1.0/SQRT(SRC[63:32])); DEST[95:64] \leftarrow APPROXIMATE(1.0/SQRT(SRC[95:64])); DEST[127:96] \leftarrow APPROXIMATE(1.0/SQRT(SRC[127:96]));

Intel C/C++ Compiler Intrinsic Equivalent

RSQRTPS __m128 _mm_rsqrt_ps(__m128 a)

SIMD Floating-Point Exceptions

None.



Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.





64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



RSQRTSS—Compute Reciprocal of Square Root of Scalar Single-Precision Floating-Point Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 52 /r	RSQRTSS xmm1, xmm2/m32	Valid	Valid	Computes the approximate reciprocal of the square root of the low single-precision floating-point value in <i>xmm2/m32</i> and stores the results in <i>xmm1</i> .

Description

Computes an approximate reciprocal of the square root of the low single-precision floating-point value in the source operand (second operand) stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order double-words of the destination operand remain unchanged. See Figure 10-6 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of a scalar single-precision floating-point operation.

The relative error for this approximation is:

 $|Relative Error| \le 1.5 * 2^{-12}$

The RSQRTSS instruction is not affected by the rounding control bits in the MXCSR register. When a source value is a 0.0, an ∞ of the sign of the source value is returned. A denormal source value is treated as a 0.0 (of the same sign). When a source value is a negative value (other than -0.0), a floating-point indefinite is returned. When a source value is an SNaN or QNaN, the SNaN is converted to a QNaN or the source QNaN is returned.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] \leftarrow APPROXIMATE(1.0/SQRT(SRC[31:0])); (* DEST[127:32] unchanged *)

Intel C/C++ Compiler Intrinsic Equivalent

RSQRTSS __m128 _mm_rsqrt_ss(__m128 a)

SIMD Floating-Point Exceptions

None.



Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SAHF—Store AH into Flags

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9E	SAHF	Invalid*	Valid	Loads SF, ZF, AF, PF, and CF from AH into EFLAGS register.

^{*} Valid in specific steppings. See Description section.

Description

Loads the SF, ZF, AF, PF, and CF flags of the EFLAGS register with values from the corresponding bits in the AH register (bits 7, 6, 4, 2, and 0, respectively). Bits 1, 3, and 5 of register AH are ignored; the corresponding reserved bits (1, 3, and 5) in the EFLAGS register remain as shown in the "Operation" section below.

This instruction executes as described above in compatibility mode and legacy mode. It is valid in 64-bit mode only if CPUID.80000001H:ECX.LAHF-SAHF[bit 0] = 1.

Operation

```
IF IA-64 Mode THEN IF CPUID.80000001.ECX[0] = 1; THEN RFLAGS(SF:ZF:0:AF:0:PF:1:CF) \leftarrow AH; ELSE #UD; FI ELSE EFLAGS(SF:ZF:0:AF:0:PF:1:CF) \leftarrow AH; FI:
```

Flags Affected

The SF, ZF, AF, PF, and CF flags are loaded with values from the AH register. Bits 1, 3, and 5 of the EFLAGS register are unaffected, with the values remaining 1, 0, and 0, respectively.

Protected Mode Exceptions

None.

Real-Address Mode Exceptions

None.

Virtual-8086 Mode Exceptions

None.

INSTRUCTION SET REFERENCE, N-Z



Compatibility Mode Exceptions

None.

64-Bit Mode Exceptions

#UD If CPUID.80000001.ECX[0] = 0.



SAL/SAR/SHL/SHR—Shift

Opcode***	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D0 /4	SAL <i>r/m8</i> , 1	Valid	Valid	Multiply r/m8 by 2, once.
REX + D0 /4	SAL r/m8**, 1	Valid	N.E.	Multiply r/m8 by 2, once.
D2 /4	SAL r/m8, CL	Valid	Valid	Multiply r/m8 by 2, CL times.
REX + D2 /4	SAL r/m8**, CL	Valid	N.E.	Multiply r/m8 by 2, CL times.
C0 /4 ib	SAL r/m8, imm8	Valid	Valid	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
REX + C0 /4 ib	SAL r/m8**, imm8	Valid	N.E.	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
D1 /4	SAL r/m16, 1	Valid	Valid	Multiply r/m16 by 2, once.
D3 /4	SAL r/m16, CL	Valid	Valid	Multiply r/m16 by 2, CL times.
C1 /4 ib	SAL r/m16, imm8	Valid	Valid	Multiply <i>r/m16</i> by 2, <i>imm8</i> times.
D1 /4	SAL r/m32, 1	Valid	Valid	Multiply r/m32 by 2, once.
REX.W + D1 /4	SAL <i>r/m64</i> , 1	Valid	N.E.	Multiply r/m64 by 2, once.
D3 /4	SAL r/m32, CL	Valid	Valid	Multiply r/m32 by 2, CL times.
REX.W + D3 /4	SAL <i>r/m64</i> , CL	Valid	N.E.	Multiply r/m64 by 2, CL times.
C1 /4 ib	SAL r/m32, imm8	Valid	Valid	Multiply <i>r/m32</i> by 2, <i>imm8</i> times.
REX.W + C1 /4 ib	SAL r/m64, imm8	Valid	N.E.	Multiply <i>r/m64</i> by 2, <i>imm8</i> times.
D0 /7	SAR <i>r/m8</i> , 1	Valid	Valid	Signed divide* r/m8 by 2, once.
REX + D0 /7	SAR <i>r/m8**</i> , 1	Valid	N.E.	Signed divide* r/m8 by 2, once.
D2 /7	SAR r/m8, CL	Valid	Valid	Signed divide* r/m8 by 2, CL times.
REX + D2 /7	SAR <i>r/m8**</i> , CL	Valid	N.E.	Signed divide* r/m8 by 2, CL times.
C0 /7 ib	SAR r/m8, imm8	Valid	Valid	Signed divide* r/m8 by 2, imm8 time.
REX + C0 /7 ib	SAR r/m8**, imm8	Valid	N.E.	Signed divide* r/m8 by 2, imm8 times.
D1 /7	SAR <i>r/m16</i> ,1	Valid	Valid	Signed divide* r/m16 by 2, once.
D3 /7	SAR r/m16, CL	Valid	Valid	Signed divide* r/m16 by 2, CL times.
C1 /7 ib	SAR r/m16, imm8	Valid	Valid	Signed divide* r/m16 by 2, imm8 times.
D1 /7	SAR <i>r/m32</i> , 1	Valid	Valid	Signed divide* r/m32 by 2, once.
REX.W + D1 /7	SAR <i>r/m64</i> , 1	Valid	N.E.	Signed divide* r/m64 by 2, once.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D3 /7	SAR <i>r/m3</i> 2, CL	Valid	Valid	Signed divide* r/m32 by 2, CL times.
REX.W + D3 /7	SAR r/m64, CL	Valid	N.E.	Signed divide* r/m64 by 2, CL times.
C1 /7 ib	SAR r/m32, imm8	Valid	Valid	Signed divide* r/m32 by 2, imm8 times.
REX.W + C1 /7 ib	SAR r/m64, imm8	Valid	N.E.	Signed divide* r/m64 by 2, imm8 times
D0 /4	SHL <i>r/m8</i> , 1	Valid	Valid	Multiply r/m8 by 2, once.
REX + D0 /4	SHL r/m8**, 1	Valid	N.E.	Multiply r/m8 by 2, once.
D2 /4	SHL r/m8, CL	Valid	Valid	Multiply r/m8 by 2, CL times.
REX + D2 /4	SHL r/m8**, CL	Valid	N.E.	Multiply r/m8 by 2, CL times.
C0 /4 ib	SHL r/m8, imm8	Valid	Valid	Multiply <i>r/m8</i> by 2, <i>imm8</i> times.
REX + C0 /4 ib	SHL r/m8**, imm8	Valid	N.E.	Multiply r/m8 by 2, imm8 times.
D1 /4	SHL r/m16,1	Valid	Valid	Multiply r/m16 by 2, once.
D3 /4	SHL r/m16, CL	Valid	Valid	Multiply r/m16 by 2, CL times.
C1 /4 ib	SHL r/m16, imm8	Valid	Valid	Multiply r/m16 by 2, imm8 times.
D1 /4	SHL r/m32,1	Valid	Valid	Multiply r/m32 by 2, once.
REX.W + D1 /4	SHL <i>r/m64</i> ,1	Valid	N.E.	Multiply r/m64 by 2, once.
D3 /4	SHL r/m32, CL	Valid	Valid	Multiply r/m32 by 2, CL times.
REX.W + D3 /4	SHL r/m64, CL	Valid	N.E.	Multiply r/m64 by 2, CL times.
C1 /4 ib	SHL r/m32, imm8	Valid	Valid	Multiply <i>r/m32</i> by 2, <i>imm8</i> times.
REX.W + C1 /4 ib	SHL r/m64, imm8	Valid	N.E.	Multiply r/m64 by 2, imm8 times.
D0 /5	SHR <i>r/m8</i> ,1	Valid	Valid	Unsigned divide <i>r/m8</i> by 2, once.
REX + D0 /5	SHR <i>r/m8**</i> , 1	Valid	N.E.	Unsigned divide <i>r/m8</i> by 2, once.
D2 /5	SHR r/m8, CL	Valid	Valid	Unsigned divide r/m8 by 2, CL times.
REX + D2 /5	SHR <i>r/m8**</i> , CL	Valid	N.E.	Unsigned divide r/m8 by 2, CL times.
C0 /5 ib	SHR r/m8, imm8	Valid	Valid	Unsigned divide <i>r/m8</i> by 2, <i>imm8</i> times.
REX + C0 /5 ib	SHR r/m8**, imm8	Valid	N.E.	Unsigned divide <i>r/m8</i> by 2, <i>imm8</i> times.
D1 /5	SHR <i>r/m16</i> , 1	Valid	Valid	Unsigned divide r/m16 by 2, once.
D3 /5	SHR r/m16, CL	Valid	Valid	Unsigned divide <i>r/m16</i> by 2, CL times
C1 /5 ib	SHR r/m16, imm8	Valid	Valid	Unsigned divide r/m16 by 2, imm8 times.



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D1 /5	SHR <i>r/m3</i> 2, 1	Valid	Valid	Unsigned divide <i>r/m32</i> by 2, once.
REX.W + D1 /5	SHR <i>r/m64</i> , 1	Valid	N.E.	Unsigned divide <i>r/m64</i> by 2, once.
D3 /5	SHR r/m32, CL	Valid	Valid	Unsigned divide <i>r/m32</i> by 2, CL times.
REX.W + D3 /5	SHR r/m64, CL	Valid	N.E.	Unsigned divide <i>r/m64</i> by 2, CL times.
C1 /5 ib	SHR r/m32, imm8	Valid	Valid	Unsigned divide <i>r/m32</i> by 2, <i>imm8</i> times.
REX.W + C1 /5 <i>ib</i>	SHR r/m64, imm8	Valid	N.E.	Unsigned divide <i>r/m64</i> by 2, <i>imm8</i> times.

NOTES:

- * Not the same form of division as IDIV; rounding is toward negative infinity.
- ** In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.
- *** See IA-32 Architecture Compatibility section below.

Description

Shifts the bits in the first operand (destination operand) to the left or right by the number of bits specified in the second operand (count operand). Bits shifted beyond the destination operand boundary are first shifted into the CF flag, then discarded. At the end of the shift operation, the CF flag contains the last bit shifted out of the destination operand.

The destination operand can be a register or a memory location. The count operand can be an immediate value or the CL register. The count is masked to 5 bits (or 6 bits if in 64-bit mode and REX.W is used). The count range is limited to 0 to 31 (or 63 if 64-bit mode and REX.W is used). A special opcode encoding is provided for a count of 1.

The shift arithmetic left (SAL) and shift logical left (SHL) instructions perform the same operation; they shift the bits in the destination operand to the left (toward more significant bit locations). For each shift count, the most significant bit of the destination operand is shifted into the CF flag, and the least significant bit is cleared (see Figure 7-7 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*).

The shift arithmetic right (SAR) and shift logical right (SHR) instructions shift the bits of the destination operand to the right (toward less significant bit locations). For each shift count, the least significant bit of the destination operand is shifted into the CF flag, and the most significant bit is either set or cleared depending on the instruction type. The SHR instruction clears the most significant bit (see Figure 7-8 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*); the SAR instruction sets or clears the most significant bit to correspond to the sign (most significant bit) of the original value in the destination operand. In effect, the SAR instruction fills the empty bit position's shifted value with the sign of the unshifted value (see Figure 7-9 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*).



The SAR and SHR instructions can be used to perform signed or unsigned division, respectively, of the destination operand by powers of 2. For example, using the SAR instruction to shift a signed integer 1 bit to the right divides the value by 2.

Using the SAR instruction to perform a division operation does not produce the same result as the IDIV instruction. The quotient from the IDIV instruction is rounded toward zero, whereas the "quotient" of the SAR instruction is rounded toward negative infinity. This difference is apparent only for negative numbers. For example, when the IDIV instruction is used to divide -9 by 4, the result is -2 with a remainder of -1. If the SAR instruction is used to shift -9 right by two bits, the result is -3 and the "remainder" is +3; however, the SAR instruction stores only the most significant bit of the remainder (in the CF flag).

The OF flag is affected only on 1-bit shifts. For left shifts, the OF flag is set to 0 if the most-significant bit of the result is the same as the CF flag (that is, the top two bits of the original operand were the same); otherwise, it is set to 1. For the SAR instruction, the OF flag is cleared for all 1-bit shifts. For the SHR instruction, the OF flag is set to the most-significant bit of the original operand.

In 64-bit mode, the instruction's default operation size is 32 bits and the mask width for CL is 5 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64-bits and sets the mask width for CL to 6 bits. See the summary chart at the beginning of this section for encoding data and limits.

IA-32 Architecture Compatibility

The 8086 does not mask the shift count. However, all other IA-32 processors (starting with the Intel 286 processor) do mask the shift count to 5 bits, resulting in a maximum count of 31. This masking is done in all operating modes (including the virtual-8086 mode) to reduce the maximum execution time of the instructions.

Operation

```
IF 64-Bit Mode and using REX.W
   THEN
       countMASK ← 3FH:
   ELSE
       countMASK ← 1FH;
FΙ
tempCOUNT \leftarrow (COUNT AND countMASK);
tempDEST ← DEST:
WHILE (tempCOUNT \neq 0)
DO
   IF instruction is SAL or SHL
       THEN
           CF \leftarrow MSB(DEST);
       ELSE (* Instruction is SAR or SHR *)
           CF \leftarrow LSB(DEST):
   FI:
   IF instruction is SAL or SHL
```



```
THEN
            DEST ← DEST * 2:
       ELSE
            IF instruction is SAR
                THEN
                    DEST ← DEST / 2; (* Signed divide, rounding toward negative infinity *)
                ELSE (* Instruction is SHR *)
                    DEST ← DEST / 2; (* Unsigned divide *)
            FI;
   FI;
   tempCOUNT ← tempCOUNT - 1;
OD:
(* Determine overflow for the various instructions *)
IF (COUNT and countMASK) = 1
   THEN
       IF instruction is SAL or SHL
            THFN
                OF \leftarrow MSB(DEST) XOR CF;
            FLSE
                IF instruction is SAR
                    THEN
                         OF \leftarrow 0:
                    ELSE (* Instruction is SHR *)
                         OF \leftarrow MSB(tempDEST);
                FI:
       FI;
   ELSE IF (COUNT AND countMASK) = 0
       THEN
            All flags unchanged;
       ELSE (* COUNT not 1 or 0 *)
           OF ← undefined;
   FI;
FI;
```

Flags Affected

The CF flag contains the value of the last bit shifted out of the destination operand; it is undefined for SHL and SHR instructions where the count is greater than or equal to the size (in bits) of the destination operand. The OF flag is affected only for 1-bit shifts (see "Description" above); otherwise, it is undefined. The SF, ZF, and PF flags are set according to the result. If the count is 0, the flags are not affected. For a non-zero count, the AF flag is undefined.



Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SBB—Integer Subtraction with Borrow

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
1C ib	SBB AL, imm8	Valid	Valid	Subtract with borrow imm8 from AL.
1D <i>iw</i>	SBB AX, imm16	Valid	Valid	Subtract with borrow imm16 from AX.
1D id	SBB EAX, imm32	Valid	Valid	Subtract with borrow <i>imm32</i> from EAX.
REX.W + 1D id	SBB RAX, imm32	Valid	N.E.	Subtract with borrow sign- extended <i>imm.32 to 64-bits</i> from RAX.
80 /3 ib	SBB r/m8, imm8	Valid	Valid	Subtract with borrow <i>imm8</i> from <i>r/m8</i> .
REX + 80 /3 ib	SBB r/m8*, imm8	Valid	N.E.	Subtract with borrow <i>imm8</i> from <i>r/m8</i> .
81 /3 <i>iw</i>	SBB r/m16, imm16	Valid	Valid	Subtract with borrow <i>imm16</i> from <i>r/m16</i> .
81 /3 id	SBB r/m32, imm32	Valid	Valid	Subtract with borrow <i>imm32</i> from <i>r/m32</i> .
REX.W + 81 /3 id	SBB r/m64, imm32	Valid	N.E.	Subtract with borrow sign- extended <i>imm32 to 64-bits</i> from <i>r/m64</i> .
83 /3 ib	SBB r/m16, imm8	Valid	Valid	Subtract with borrow sign- extended <i>imm8</i> from <i>r/m16</i> .
83 /3 ib	SBB r/m32, imm8	Valid	Valid	Subtract with borrow sign-extended <i>imm8</i> from <i>r/m32</i> .
REX.W + 83 /3 ib	SBB r/m64, imm8	Valid	N.E.	Subtract with borrow sign- extended <i>imm8</i> from <i>r/m64</i> .
18 /r	SBB <i>r/m8</i> , <i>r</i> 8	Valid	Valid	Subtract with borrow <i>r8</i> from <i>r/m8</i> .
REX + 18 /r	SBB <i>r/m8*, r8</i>	Valid	N.E.	Subtract with borrow <i>r8</i> from <i>r/m8</i> .
19 /r	SBB <i>r/m16, r16</i>	Valid	Valid	Subtract with borrow <i>r16</i> from <i>r/m16</i> .
19 /r	SBB <i>r/m32, r32</i>	Valid	Valid	Subtract with borrow <i>r32</i> from <i>r/m32</i> .
REX.W + 19 /r	SBB <i>r/m64, r64</i>	Valid	N.E.	Subtract with borrow r64 from r/m64.
1A /r	SBB <i>r8, r/m8</i>	Valid	Valid	Subtract with borrow r/m8 from r8.
REX + 1A /r	SBB <i>r8*, r/m8*</i>	Valid	N.E.	Subtract with borrow r/m8 from r8.
1B /r	SBB r16, r/m16	Valid	Valid	Subtract with borrow <i>r/m16</i> from <i>r16</i> .



Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
1B /r	SBB <i>r32, r/m32</i>	Valid	Valid	Subtract with borrow <i>r/m32</i> from <i>r32</i> .
REX.W + 1B /r	SBB <i>r64, r/m64</i>	Valid	N.E.	Subtract with borrow <i>r/m64</i> from <i>r64</i> .

NOTES:

Description

Adds the source operand (second operand) and the carry (CF) flag, and subtracts the result from the destination operand (first operand). The result of the subtraction is stored in the destination operand. The destination operand can be a register or a memory location; the source operand can be an immediate, a register, or a memory location. (However, two memory operands cannot be used in one instruction.) The state of the CF flag represents a borrow from a previous subtraction.

When an immediate value is used as an operand, it is sign-extended to the length of the destination operand format.

The SBB instruction does not distinguish between signed or unsigned operands. Instead, the processor evaluates the result for both data types and sets the OF and CF flags to indicate a borrow in the signed or unsigned result, respectively. The SF flag indicates the sign of the signed result.

The SBB instruction is usually executed as part of a multibyte or multiword subtraction in which a SUB instruction is followed by a SBB instruction.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

Operation

 $DEST \leftarrow (DEST - (SRC + CF));$

Flags Affected

The OF, SF, ZF, AF, PF, and CF flags are set according to the result.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.+



SCAS/SCASB/SCASW/SCASD—Scan String

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
AE	SCAS m8	Valid	Valid	Compare AL with byte at ES:(E)DI or RDI, then set status flags ^a .
AF	SCAS m16	Valid	Valid	Compare AX with word at ES:(E)DI or RDI, then set status flags. ^a
AF	SCAS m32	Valid	Valid	Compare EAX with doubleword at ES(E)DI or RDI then set status flags. ^a
REX.W + AF	SCAS m64	Valid	N.E.	Compare RAX with quadword at RDI or EDI then set status flags.
AE	SCASB	Valid	Valid	Compare AL with byte at ES:(E)DI or RDI then set status flags. ^a
AF	SCASW	Valid	Valid	Compare AX with word at ES:(E)DI or RDI then set status flags. ^a
AF	SCASD	Valid	Valid	Compare EAX with doubleword at ES:(E)DI or RDI then set status flags. ^a
REX.W + AF	SCASQ	Valid	N.E.	Compare RAX with quadword at RDI or EDI then set status flags.

NOTES:

a. In 64-bit mode, only 64-bit (RDI) and 32-bit (EDI) address sizes are supported. In non-64-bit mode, only 32-bit (EDI) and 16-bit (DI) address sizes are supported.

Description

In non-64-bit modes and in default 64-bit mode: this instruction compares a byte, word, double-word or quadword specified using a memory operand with the value in AL, AX, or EAX. It then sets status flags in EFLAGS recording the results. The memory operand address is read from ES:(E)DI register (depending on the address-size attribute of the instruction and the current operational mode). Note that ES cannot be overridden with a segment override prefix.

At the assembly-code level, two forms of this instruction are allowed. The explicit-operand form and the no-operands form. The explicit-operand form (specified using the SCAS mnemonic) allows a memory operand to be specified explicitly. The memory operand must be a symbol that indicates the size and location of the operand value. The register operand is then automatically selected to match the size of the memory operand (AL register for byte comparisons, AX for word comparisons, EAX for doubleword comparisons). The explicit-operand form is provided to allow documentation. Note that the documentation provided by this form can be misleading. That is, the memory operand symbol must specify the correct type (size) of the operand (byte, word, or doubleword) but it does not have to specify the correct location. The location is always specified by ES:(E)DI.

The no-operands form of the instruction uses a short form of SCAS. Again, ES:(E)DI is assumed to be the memory operand and AL, AX, or EAX is assumed to be the register operand. The size



of operands is selected by the mnemonic: SCASB (byte comparison), SCASW (word comparison), or SCASD (doubleword comparison).

After the comparison, the (E)DI register is incremented or decremented automatically according to the setting of the DF flag in the EFLAGS register. If the DF flag is 0, the (E)DI register is incremented; if the DF flag is 1, the (E)DI register is decremented. The register is incremented or decremented by 1 for byte operations, by 2 for word operations, and by 4 for doubleword operations.

SCAS, SCASB, SCASW, SCASD, and SCASQ can be preceded by the REP prefix for block comparisons of ECX bytes, words, doublewords, or quadwords. Often, however, these instructions will be used in a LOOP construct that takes some action based on the setting of status flags. See "REP/REPE/REPZ/REPNE /REPNZ—Repeat String Operation Prefix" in this chapter for a description of the REP prefix.

In 64-bit mode, the instruction's default address size is 64-bits, 32-bit address size is supported using the prefix 67H. Using an REX prefix in the form of REX.W promotes operation on doubleword operand to 64 bits. The 64-bit no-operand mnemonic is SCASQ. Address of the memory operand is specified in either RDI or EDI, and AL/AX/EAX/RAX may be used as the register operand. After a comparison, the destination register is incremented or decremented by the current operand size (depending on the value of the DF flag). See the summary chart at the beginning of this section for encoding data and limits.

Operation

```
Non-64-bit Mode:
IF (Byte cmparison)
   THEN
        temp \leftarrow AL – SRC;
        SetStatusFlags(temp);
             THEN IF DF = 0
                  THEN (E)DI \leftarrow (E)DI + 1;
                  ELSE (E)DI \leftarrow (E)DI - 1; FI;
   ELSE IF (Word comparison)
        THEN
             temp \leftarrow AX - SRC:
             SetStatusFlags(temp);
             IF DF = 0
                  THEN (E)DI \leftarrow (E)DI + 2;
                  ELSE (E)DI \leftarrow (E)DI -2; FI;
   ELSE IF (Doubleword comparison)
        THEN
             temp \leftarrow EAX – SRC:
             SetStatusFlags(temp);
             IF DF = 0
                  THEN (E)DI \leftarrow (E)DI + 4;
                  ELSE (E)DI \leftarrow (E)DI -4; FI;
        FI;
```



```
FI;
64-bit Mode:
IF (Byte cmparison)
   THEN
        temp \leftarrow AL – SRC;
        SetStatusFlags(temp);
             THEN IF DF = 0
                  THEN (R|E)DI \leftarrow (R|E)DI + 1;
                  ELSE (R|E)DI \leftarrow (R|E)DI - 1; FI;
   ELSE IF (Word comparison)
        THEN
             temp \leftarrow AX - SRC:
             SetStatusFlags(temp);
             IF DF = 0
                  THEN (R|E)DI \leftarrow (R|E)DI + 2;
                  ELSE (R|E)DI \leftarrow (R|E)DI - 2; FI;
        FI:
   ELSE IF (Doubleword comparison)
        THEN
             temp \leftarrow EAX – SRC;
             SetStatusFlags(temp);
             IFDF = 0
                  THEN (R|E)DI \leftarrow (R|E)DI + 4;
                  ELSE (R|E)DI \leftarrow (R|E)DI - 4; FI;
        FI:
   ELSE IF (Quadword comparison using REX.W)
        THEN
             temp \leftarrow RAX - SRC;
             SetStatusFlags(temp);
             IF DF = 0
                  THEN (R|E)DI \leftarrow (R|E)DI + 8;
                  ELSE (R|E)DI \leftarrow (R|E)DI - 8;
             FI;
   FI;
F
```

Flags Affected

The OF, SF, ZF, AF, PF, and CF flags are set according to the temporary result of the comparison.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the limit of the ES segment.

If the ES register contains a NULL segment selector.

If an illegal memory operand effective address in the ES segment is given.



INSTRUCTION SET REFERENCE, N-Z

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.



Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SETcc—Set Byte on Condition

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 97	SETA r/m8	Valid	Valid	Set byte if above (CF=0 and ZF=0).
REX + 0F 97	SETA r/m8*	Valid	N.E.	Set byte if above (CF=0 and ZF=0).
0F 93	SETAE r/m8	Valid	Valid	Set byte if above or equal (CF=0).
REX + 0F 93	SETAE r/m8*	Valid	N.E.	Set byte if above or equal (CF=0).
0F 92	SETB r/m8	Valid	Valid	Set byte if below (CF=1).
REX + 0F 92	SETB r/m8*	Valid	N.E.	Set byte if below (CF=1).
0F 96	SETBE r/m8	Valid	Valid	Set byte if below or equal (CF=1 or ZF=1).
REX + 0F 96	SETBE r/m8*	Valid	N.E.	Set byte if below or equal (CF=1 or ZF=1).
0F 92	SETC r/m8	Valid	Valid	Set byte if carry (CF=1).
REX + 0F 92	SETC r/m8*	Valid	N.E.	Set byte if carry (CF=1).
0F 94	SETE r/m8	Valid	Valid	Set byte if equal (ZF=1).
REX + 0F 94	SETE r/m8*	Valid	N.E.	Set byte if equal (ZF=1).
0F 9F	SETG r/m8	Valid	Valid	Set byte if greater (ZF=0 and SF=OF).
REX + 0F 9F	SETG r/m8*	Valid	N.E.	Set byte if greater (ZF=0 and SF=OF).
0F 9D	SETGE r/m8	Valid	Valid	Set byte if greater or equal (SF=OF).
REX + 0F 9D	SETGE r/m8*	Valid	N.E.	Set byte if greater or equal (SF=OF).
0F 9C	SETL r/m8	Valid	Valid	Set byte if less (SF≠ OF).
REX + 0F 9C	SETL r/m8*	Valid	N.E.	Set byte if less (SF≠ OF).
0F 9E	SETLE r/m8	Valid	Valid	Set byte if less or equal (ZF=1 or SF \neq OF).
REX + 0F 9E	SETLE r/m8*	Valid	N.E.	Set byte if less or equal (ZF=1 or SF \neq OF).
0F 96	SETNA r/m8	Valid	Valid	Set byte if not above (CF=1 or ZF=1).
REX + 0F 96	SETNA r/m8*	Valid	N.E.	Set byte if not above (CF=1 or ZF=1).
0F 92	SETNAE r/m8	Valid	Valid	Set byte if not above or equal (CF=1).
REX + 0F 92	SETNAE r/m8*	Valid	N.E.	Set byte if not above or equal (CF=1).
0F 93	SETNB r/m8	Valid	Valid	Set byte if not below (CF=0).
REX + 0F 93	SETNB r/m8*	Valid	N.E.	Set byte if not below (CF=0).
0F 97	SETNBE r/m8	Valid	Valid	Set byte if not below or equal (CF=0 and ZF=0).



		64-Bit	Compat/	
Opcode	Instruction	Mode	Leg Mode	Description
REX + 0F 97	SETNBE r/m8*	Valid	N.E.	Set byte if not below or equal (CF=0 and ZF=0).
0F 93	SETNC r/m8	Valid	Valid	Set byte if not carry (CF=0).
REX + 0F 93	SETNC r/m8*	Valid	N.E.	Set byte if not carry (CF=0).
0F 95	SETNE r/m8	Valid	Valid	Set byte if not equal (ZF=0).
REX + 0F 95	SETNE r/m8*	Valid	N.E.	Set byte if not equal (ZF=0).
0F 9E	SETNG r/m8	Valid	Valid	Set byte if not greater (ZF=1 or SF≠ OF)
REX + 0F 9E	SETNG r/m8*	Valid	N.E.	Set byte if not greater (ZF=1 or SF≠ OF).
0F 9C	SETNGE r/m8	Valid	Valid	Set byte if not greater or equal $(SF \neq OF)$.
REX + 0F 9C	SETNGE r/m8*	Valid	N.E.	Set byte if not greater or equal $(SF \neq OF)$.
0F 9D	SETNL r/m8	Valid	Valid	Set byte if not less (SF=OF).
REX + 0F 9D	SETNL r/m8*	Valid	N.E.	Set byte if not less (SF=OF).
0F 9F	SETNLE r/m8	Valid	Valid	Set byte if not less or equal (ZF=0 and SF=OF).
REX + 0F 9F	SETNLE r/m8*	Valid	N.E.	Set byte if not less or equal (ZF=0 and SF=OF).
0F 91	SETNO r/m8	Valid	Valid	Set byte if not overflow (OF=0).
REX + 0F 91	SETNO r/m8*	Valid	N.E.	Set byte if not overflow (OF=0).
0F 9B	SETNP r/m8	Valid	Valid	Set byte if not parity (PF=0).
REX + 0F 9B	SETNP r/m8*	Valid	N.E.	Set byte if not parity (PF=0).
0F 99	SETNS r/m8	Valid	Valid	Set byte if not sign (SF=0).
REX + 0F 99	SETNS r/m8*	Valid	N.E.	Set byte if not sign (SF=0).
0F 95	SETNZ r/m8	Valid	Valid	Set byte if not zero (ZF=0).
REX + 0F 95	SETNZ r/m8*	Valid	N.E.	Set byte if not zero (ZF=0).
0F 90	SETO r/m8	Valid	Valid	Set byte if overflow (OF=1)
REX + 0F 90	SETO r/m8*	Valid	N.E.	Set byte if overflow (OF=1).
0F 9A	SETP r/m8	Valid	Valid	Set byte if parity (PF=1).
REX + 0F 9A	SETP r/m8*	Valid	N.E.	Set byte if parity (PF=1).
0F 9A	SETPE r/m8	Valid	Valid	Set byte if parity even (PF=1).
REX + 0F 9A	SETPE r/m8*	Valid	N.E.	Set byte if parity even (PF=1).
0F 9B	SETPO r/m8	Valid	Valid	Set byte if parity odd (PF=0).
REX + 0F 9B	SETPO r/m8*	Valid	N.E.	Set byte if parity odd (PF=0).
0F 98	SETS r/m8	Valid	Valid	Set byte if sign (SF=1).
REX + 0F 98	SETS r/m8*	Valid	N.E.	Set byte if sign (SF=1).
0F 94	SETZ r/m8	Valid	Valid	Set byte if zero (ZF=1).
REX + 0F 94	SETZ r/m8*	Valid	N.E.	Set byte if zero (ZF=1).

NOTES:

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



Description

Sets the destination operand to 0 or 1 depending on the settings of the status flags (CF, SF, OF, ZF, and PF) in the EFLAGS register. The destination operand points to a byte register or a byte in memory. The condition code suffix (*cc*) indicates the condition being tested for.

The terms "above" and "below" are associated with the CF flag and refer to the relationship between two unsigned integer values. The terms "greater" and "less" are associated with the SF and OF flags and refer to the relationship between two signed integer values.

Many of the SETcc instruction opcodes have alternate mnemonics. For example, SETG (set byte if greater) and SETNLE (set if not less or equal) have the same opcode and test for the same condition: ZF equals 0 and SF equals OF. These alternate mnemonics are provided to make code more intelligible. Appendix B, EFLAGS Condition Codes, in the IA-32 Intel Architecture Software Developer's Manual, Volume 1, shows the alternate mnemonics for various test conditions.

Some languages represent a logical one as an integer with all bits set. This representation can be obtained by choosing the logically opposite condition for the SETcc instruction, then decrementing the result. For example, to test for overflow, use the SETNO instruction, then decrement the result.

In IA-64 mode, the operand size is fixed at 8 bits. Use of REX prefix enable uniform addressing to additional byte registers. Otherwise, this instruction's operation is the same as in legacy mode and compatibility mode.

Operation

```
IF condition

THEN DEST ← 1;

ELSE DEST ← 0;

FI:
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.



Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.



SFENCE—Store Fence

Opcode	Instruction	64-Bit Mode	Compat /Leg Mode	Description
0F AE /7	SFENCE	Valid	Valid	Serializes store operations.

Description

Performs a serializing operation on all store-to-memory instructions that were issued prior the SFENCE instruction. This serializing operation guarantees that every store instruction that precedes in program order the SFENCE instruction is globally visible before any store instruction that follows the SFENCE instruction is globally visible. The SFENCE instruction is ordered with respect store instructions, other SFENCE instructions, any MFENCE instructions, and any serializing instructions (such as the CPUID instruction). It is not ordered with respect to load instructions or the LFENCE instruction.

Weakly ordered memory types can be used to achieve higher processor performance through such techniques as out-of-order issue, write-combining, and write-collapsing. The degree to which a consumer of data recognizes or knows that the data is weakly ordered varies among applications and may be unknown to the producer of this data. The SFENCE instruction provides a performance-efficient way of insuring store ordering between routines that produce weakly-ordered results and routines that consume this data.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

Wait_On_Following_Stores_Until(preceding_stores_globally_visible);

Intel C/C++ Compiler Intrinsic Equivalent

void_mm_sfence(void)

Exceptions (All Operating Modes)

None.



SGDT—Store Global Descriptor Table Register

Opcode*	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /0	SGDT m	Valid	Valid	Store GDTR to m.

NOTES:

Description

Stores the content of the global descriptor table register (GDTR) in the destination operand. The destination operand specifies a memory location:

In legacy or compatibility mode, the destination operand is a 6-byte memory location. If the operand-size attribute is 16 bits, the limit is stored in the low 2 bytes and the 24-bit base address is stored in bytes 3-5, and byte 6 is zero-filled. If the operand-size attribute is 32 bits, the 16-bit limit field of the register is stored in the low 2 bytes of the memory location and the 32-bit base address is stored in the high 4 bytes.

In IA-32e mode, the operand size is fixed at 8+2 bytes. The instruction stores an 8-byte base and a 2-byte limit.

SGDT is useful only by operating-system software. However, it can be used in application programs without causing an exception to be generated. See "LGDT/LIDT—Load Global/Interrupt Descriptor Table Register" in Chapter 3 for information on loading the GDTR and IDTR.

IA-32 Architecture Compatibility

The 16-bit form of the SGDT is compatible with the Intel 286 processor if the upper 8 bits are not referenced. The Intel 286 processor fills these bits with 1s; the Pentium 4, Intel Xeon, P6 processor family, Pentium, Intel486, and Intel386TM processors fill these bits with 0s.

Operation

```
IF instruction is SGDT

IF OperandSize = 16

THEN

DEST[0:15] \leftarrow GDTR(Limit);
DEST[16:39] \leftarrow GDTR(Base); (* 24 bits of base address stored *)
DEST[40:47] \leftarrow 0;
ELSE \ IF (32-bit \ Operand \ Size)
DEST[0:15] \leftarrow GDTR(Limit);
DEST[16:47] \leftarrow GDTR(Base); (* Full \ 32-bit \ base \ address \ stored *)
FI;
ELSE \ (* 64-bit \ Operand \ Size *)
DEST[0:15] \leftarrow GDTR(Limit);
```

^{*} See IA-32 Architecture Compatibility section below.



DEST[16:79] ← GDTR(Base); (* Full 64-bit base address stored *)

FI:

FI;

Flags Affected

None.

Protected Mode Exceptions

#UD If the destination operand is a register.

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#UD If the destination operand is a register.

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#UD If the destination operand is a register.

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#UD If the destination operand is a register.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



CLI	\mathbf{r}	$\neg \neg \cdot \iota$		Dras	iaian	Shift	- tı
ЭПЬ	.u—	DOUL	иe	Frec	ISION	ı əniit	цеп

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F A4	SHLD r/m16, r16, imm8	Valid	Valid	Shift <i>r/m16</i> to left <i>imm8</i> places while shifting bits from <i>r16</i> in from the right.
0F A5	SHLD <i>r/m16, r16</i> , CL	Valid	Valid	Shift r/m16 to left CL places while shifting bits from r16 in from the right.
0F A4	SHLD r/m32, r32, imm8	Valid	Valid	Shift r/m32 to left imm8 places while shifting bits from r32 in from the right.
REX.W + 0F A4	SHLD r/m64, r64, imm8	Valid	N.E.	Shift r/m64 to left imm8 places while shifting bits from r64 in from the right.
0F A5	SHLD <i>r/m32, r32,</i> CL	Valid	Valid	Shift r/m32 to left CL places while shifting bits from r32 in from the right.
REX.W + 0F A5	SHLD <i>r/m64</i> , <i>r64</i> , CL	Valid	N.E.	Shift r/m64 to left CL places while shifting bits from r64 in from the right.

Description

The SHLD instruction is used for multi-precision shifts of 64 bits or more.

The instruction shifts the first operand (destination operand) to the left the number of bits specified by the third operand (count operand). The second operand (source operand) provides bits to shift in from the right (starting with bit 0 of the destination operand).

The destination operand can be a register or a memory location; the source operand is a register. The count operand is an unsigned integer that can be stored in an immediate byte or in the CL register. If the count operand is CL, the shift count is the logical AND of CL and a count mask. In non-64-bit modes and default 64-bit mode; only bits 0 through 4 of the count are used. This masks the count to a value between 0 and 31. If a count is greater than the operand size, the result is undefined.

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. If the count operand is 0, flags are not affected.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits (upgrading the count mask to 6 bits). See the summary chart at the beginning of this section for encoding data and limits.



Operation

```
IF (In 64-Bit Mode and REX.W = 1)
   THEN COUNT ← COUNT MOD 64;
   ELSE COUNT ← COUNT MOD 32;
FΙ
SIZE ← OperandSize:
IF COUNT = 0
   THEN
       No operation:
   FLSE
       IF COUNT > SIZE
           THEN (* Bad parameters *)
               DEST is undefined;
               CF, OF, SF, ZF, AF, PF are undefined;
           ELSE (* Perform the shift *)
               CF ← BIT[DEST, SIZE – COUNT];
               (* Last bit shifted out on exit *)
               FOR i ← SIZE – 1 DOWN TO COUNT
                   DO
                        Bit(DEST, i) \leftarrow Bit(DEST, i – COUNT);
                   OD:
               FOR i ← COUNT – 1 DOWN TO 0
                   DO
                        BIT[DEST, i] \leftarrow BIT[SRC, i - COUNT + SIZE];
                   OD:
       FI:
FI;
```

Flags Affected

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand and the SF, ZF, and PF flags are set according to the value of the result. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. For shifts greater than 1 bit, the OF flag is undefined. If a shift occurs, the AF flag is undefined. If the count operand is 0, the flags are not affected. If the count is greater than the operand size, the flags are undefined.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.



INSTRUCTION SET REFERENCE, N-Z

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SHRD—Double Precision Shift Right

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F AC	SHRD r/m16, r16, imm8	Valid	Valid	Shift <i>r/m16</i> to right <i>imm8</i> places while shifting bits from <i>r16</i> in from the left.
0F AD	SHRD <i>r/m16,</i> <i>r16</i> , CL	Valid	Valid	Shift r/m16 to right CL places while shifting bits from r16 in from the left.
0F AC	SHRD r/m32, r32, mm8	Valid	Valid	Shift <i>r/m32</i> to right <i>imm8</i> places while shifting bits from <i>r32</i> in from the left.
REX.W + 0F AC	SHRD r/m64, r64, imm8	Valid	N.E.	Shift <i>r/m64</i> to right <i>imm8</i> places while shifting bits from <i>r64</i> in from the left.
0F AD	SHRD <i>r/m32,</i> <i>r3</i> 2, CL	Valid	Valid	Shift <i>r/m32</i> to right CL places while shifting bits from <i>r32</i> in from the left.
REX.W + 0F AD	SHRD <i>r/m64,</i> <i>r64</i> , CL	Valid	N.E.	Shift <i>r/m64</i> to right CL places while shifting bits from <i>r64</i> in from the left.

Description

The SHRD instruction is useful for multi-precision shifts of 64 bits or more.

The instruction shifts the first operand (destination operand) to the right the number of bits specified by the third operand (count operand). The second operand (source operand) provides bits to shift in from the left (starting with the most significant bit of the destination operand).

The destination operand can be a register or a memory location; the source operand is a register. The count operand is an unsigned integer that can be stored in an immediate byte or the CL register. If the count operand is CL, the shift count is the logical AND of CL and a count mask. In non-64-bit modes and default 64-bit mode, the width of the count mask is 5 bits. Only bits 0 through 4 of the count register are used (masking the count to a value between 0 and 31). If the count is greater than the operand size, the result is undefined.

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. If the count operand is 0, flags are not affected.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits (upgrading the count mask to 6 bits). See the summary chart at the beginning of this section for encoding data and limits.



Operation

```
IF (In 64-Bit Mode and REX.W = 1)
  THEN COUNT ← COUNT MOD 64;
   ELSE COUNT ← COUNT MOD 32;
FΙ
SIZE ← OperandSize:
IF COUNT = 0
  THEN
       No operation:
   ELSE
       IF COUNT > SIZE
           THEN (* Bad parameters *)
               DEST is undefined:
               CF, OF, SF, ZF, AF, PF are undefined;
           ELSE (* Perform the shift *)
               CF ← BIT[DEST, COUNT – 1]; (* Last bit shifted out on exit *)
               FOR i ← 0 TO SIZE – 1 – COUNT
                   DO
                       BIT[DEST, i] ← BIT[DEST, i + COUNT];
                   OD:
               FOR i ← SIZE – COUNT TO SIZE – 1
                       BIT[DEST,i] \leftarrow BIT[SRC, i + COUNT - SIZE];
                   OD:
       FI:
FI;
```

Flags Affected

If the count is 1 or greater, the CF flag is filled with the last bit shifted out of the destination operand and the SF, ZF, and PF flags are set according to the value of the result. For a 1-bit shift, the OF flag is set if a sign change occurred; otherwise, it is cleared. For shifts greater than 1 bit, the OF flag is undefined. If a shift occurs, the AF flag is undefined. If the count operand is 0, the flags are not affected. If the count is greater than the operand size, the flags are undefined.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

nade.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SHUFPD-	-Shuffle Pa	cked Double	-Precision	Floating	g-Point Values
---------	-------------	-------------	------------	----------	----------------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F C6 /r ib	SHUFPD xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle packed double-precision floating-point values selected by <i>imm8</i> from <i>xmm1</i> and <i>xmm2/m128</i> to <i>xmm1</i> .

Description

Moves either of the two packed double-precision floating-point values from destination operand (first operand) into the low quadword of the destination operand; moves either of the two packed double-precision floating-point values from the source operand into to the high quadword of the destination operand (see Figure 4-12). The select operand (third operand) determines which values are moved to the destination operand.

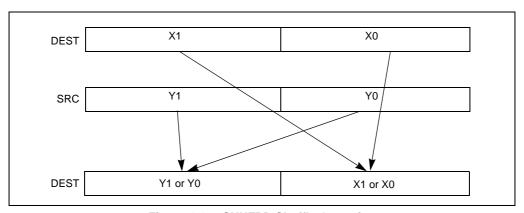


Figure 4-12. SHUFPD Shuffle Operation

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The select operand is an 8-bit immediate: bit 0 selects which value is moved from the destination operand to the result (where 0 selects the low quadword and 1 selects the high quadword) and bit 1 selects which value is moved from the source operand to the result. Bits 2 through 7 of the select operand are reserved and must be set to 0.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
IF SELECT[0] = 0

THEN DEST[63:0] ← DEST[63:0];

ELSE DEST[63:0] ← DEST[127:64]; FI;

IF SELECT[1] = 0

THEN DEST[127:64] ← SRC[63:0];

ELSE DEST[127:64] ← SRC[127:64]; FI;
```

Intel C/C++ Compiler Intrinsic Equivalent

SHUFPD __m128d _mm_shuffle_pd(__m128d a, __m128d b, unsigned int imm8)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



SHUFPS—Shuffle Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C6 /r ib	SHUFPS xmm1, xmm2/m128, imm8	Valid	Valid	Shuffle packed single-precision floating-point values selected by imm8 from xmm1 and xmm1/m128 to xmm1.

Description

Moves two of the four packed single-precision floating-point values from the destination operand (first operand) into the low quadword of the destination operand; moves two of the four packed single-precision floating-point values from the source operand (second operand) into to the high quadword of the destination operand (see Figure 4-13). The select operand (third operand) determines which values are moved to the destination operand.

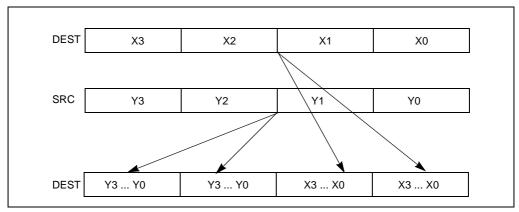


Figure 4-13. SHUFPS Shuffle Operation

The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. The select operand is an 8-bit immediate: bits 0 and 1 select the value to be moved from the destination operand to the low doubleword of the result, bits 2 and 3 select the value to be moved from the destination operand to the second doubleword of the result, bits 4 and 5 select the value to be moved from the source operand to the third doubleword of the result, and bits 6 and 7 select the value to be moved from the source operand to the high doubleword of the result.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

```
CASE (SELECT[1:0]) OF
   0: DEST[31:0] \leftarrow DEST[31:0];
   1: DEST[31:0] \leftarrow DEST[63:32];
   2: DEST[31:0] \leftarrow DEST[95:64];
   3: DEST[31:0] \leftarrow DEST[127:96];
ESAC;
CASE (SELECT[3:2]) OF
   0: DEST[63:32] \leftarrow DEST[31:0]:
   1: DEST[63:32] ← DEST[63:32]:
   2: DEST[63:32] \leftarrow DEST[95:64];
   3: DEST[63:32] \leftarrow DEST[127:96];
ESAC:
CASE (SELECT[5:4]) OF
   0: DEST[95:64] \leftarrow SRC[31:0];
   1: DEST[95:64] \leftarrow SRC[63:32];
   2: DEST[95:64] ← SRC[95:64];
   3: DEST[95:64] \leftarrow SRC[127:96];
ESAC:
CASE (SELECT[7:6]) OF
   0: DEST[127:96] \leftarrow SRC[31:0];
   1: DEST[127:96] \leftarrow SRC[63:32];
   2: DEST[127:96] \leftarrow SRC[95:64];
   3: DEST[127:96] \leftarrow SRC[127:96];
ESAC:
```

Intel C/C++ Compiler Intrinsic Equivalent

SHUFPS __m128 _mm_shuffle_ps(__m128 a, __m128 b, unsigned int imm8)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

INSTRUCTION SET REFERENCE, N-Z



#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



SIDT—Store Interrupt Descriptor Table Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /1	SIDT m	Valid	Valid	Store IDTR to m.

Description

Stores the content the interrupt descriptor table register (IDTR) in the destination operand. The destination operand specifies a 6-byte memory location.

In non-64-bit modes, if the operand-size attribute is 32 bits, the 16-bit limit field of the register is stored in the low 2 bytes of the memory location and the 32-bit base address is stored in the high 4 bytes. If the operand-size attribute is 16 bits, the limit is stored in the low 2 bytes and the 24-bit base address is stored in the third, fourth, and fifth byte, with the sixth byte filled with 0s.

In 64-bit mode, the operand size fixed at 8+2 bytes. The instruction stores 8-byte base and 2-byte limit values.

SIDT is only useful in operating-system software; however, it can be used in application programs without causing an exception to be generated. See "LGDT/LIDT—Load Global/Interrupt Descriptor Table Register" in Chapter 4 for information on loading the GDTR and IDTR.

IA-32 Architecture Compatibility

The 16-bit form of SIDT is compatible with the Intel 286 processor if the upper 8 bits are not referenced. The Intel 286 processor fills these bits with 1s; the Pentium 4, Intel Xeon, P6 processor family, Pentium, Intel486, and Intel386 processors fill these bits with 0s.

Operation

```
IF instruction is SIDT THEN

IF OperandSize = 16

THEN

DEST[0:15] \leftarrow IDTR(Limit);
DEST[16:39] \leftarrow IDTR(Base); (* 24 \text{ bits of base address stored; *})
DEST[40:47] \leftarrow 0;
ELSE \text{ IF (32-bit Operand Size)}
DEST[0:15] \leftarrow IDTR(Limit);
DEST[16:47] \leftarrow IDTR(Base); \text{ FI; (* Full 32-bit base address stored *})}
ELSE \text{ (* 64-bit Operand Size *})
DEST[0:15] \leftarrow IDTR(Limit);
DEST[0:15] \leftarrow IDTR(Limit);
DEST[16:79] \leftarrow IDTR(Base); \text{ (* Full 64-bit base address stored *})}
FI;
```



Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#UD If the destination operand is a register.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SLDT—Store Local Descriptor Table Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 00 /0	SLDT r/m16	Valid	Valid	Stores segment selector from LDTR in r/m16.
REX.W+0F 00 /0	SLDT r64/m16	Valid	Valid	Stores segment selector from LDTR in r64/m16.

Description

Stores the segment selector from the local descriptor table register (LDTR) in the destination operand. The destination operand can be a general-purpose register or a memory location. The segment selector stored with this instruction points to the segment descriptor (located in the GDT) for the current LDT. This instruction can only be executed in protected mode.

Outside IA-32e mode, when the destination operand is a 32-bit register, the 16-bit segment selector is copied into the low-order 16 bits of the register. The high-order 16 bits of the register are cleared for the Pentium 4, Intel Xeon, and P6 family processors. They are undefined for Pentium, Intel486, and Intel386 processors. When the destination operand is a memory location, the segment selector is written to memory as a 16-bit quantity, regardless of the operand size.

In compatibility mode, when the destination operand is a 32-bit register, the 16-bit segment selector is copied into the low-order 16 bits of the register. The high-order 16 bits of the register are cleared. When the destination operand is a memory location, the segment selector is written to memory as a 16-bit quantity, regardless of the operand size.

In 64-bit mode, using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). The behavior of SLDT with a 64-bit register is to zero-extend the 16-bit selector and store it in the register. If the destination is memory and operand size is 64, SLDT will write the 16-bit selector to memory as a 16-bit quantity, regardless of the operand size

Operation

DEST ← LDTR(SegmentSelector);

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains a NULL segment selector.



INSTRUCTION SET REFERENCE, N-Z

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#UD The SLDT instruction is not recognized in real-address mode.

Virtual-8086 Mode Exceptions

#UD The SLDT instruction is not recognized in virtual-8086 mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SMSW—Store Machine Status Word

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /4	SMSW r/m16	Valid	Valid	Store machine status word to r/m16.
0F 01 /4	SMSW r32/m16	Valid	Valid	Store machine status word in low-order 16 bits of <i>r32/m16</i> ; high-order 16 bits of <i>r32</i> are undefined.
REX.W + 0F 01 /4	SMSW r64/m16	Valid	Valid	Store machine status word in low-order 16 bits of <i>r64/m16</i> ; high-order 16 bits of <i>r32</i> are undefined.

Description

Stores the machine status word (bits 0 through 15 of control register CR0) into the destination operand. The destination operand can be a general-purpose register or a memory location.

In non-64-bit modes, when the destination operand is a 32-bit register, the low-order 16 bits of register CR0 are copied into the low-order 16 bits of the register and the high-order 16 bits are undefined. When the destination operand is a memory location, the low-order 16 bits of register CR0 are written to memory as a 16-bit quantity, regardless of the operand size.

In 64-bit mode, the behavior of the SMSW instruction is defined by the following examples:

- SMSW r16 operand size 16, store CR0[15:0] in r16
- SMSW r32 operand size 32, zero-extend CR0[31:0], and store in r32
- SMSW r64 operand size 64, zero-extend CR0[63:0], and store in r64
- SMSW m16 operand size 16, store CR0[15:0] in m16
- SMSW m16 operand size 32, store CR0[15:0] in m16 (not m32)
- SMSW m16 operands size 64, store CR0[15:0] in m16 (not m64)

SMSW is only useful in operating-system software. However, it is not a privileged instruction and can be used in application programs. The is provided for compatibility with the Intel 286 processor. Programs and procedures intended to run on the Pentium 4, Intel Xeon, P6 family, Pentium, Intel486, and Intel386 processors should use the MOV (control registers) instruction to load the machine status word.

Operation

DEST ← CR0[15:0]; (* Machine status word *)

Flags Affected

None.



Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SQRTPD—Compute Square Roots of Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 51 /r	SQRTPD xmm1, xmm2/m128	Valid	Valid	Computes square roots of the packed double-precision floating-point values in <i>xmm2/m128</i> and stores the results in <i>xmm1</i> .

Description

Performs an SIMD computation of the square roots of the two packed double-precision floating-point values in the source operand (second operand) stores the packed double-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 11-3 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD double-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[63:0] \leftarrow SQRT(SRC[63:0]); DEST[127:64] \leftarrow SQRT(SRC[127:64]);

Intel C/C++ Compiler Intrinsic Equivalent

SQRTPD __m128d _mm_sqrt_pd (m128d a)

SIMD Floating-Point Exceptions

Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.





#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.CR4.OSXMMEXCPT(bit 10) is 1.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

INSTRUCTION SET REFERENCE, N-Z



#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



SQRTPS—Compute Square Roots of Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 51 /r	SQRTPS xmm1, xmm2/m128	Valid	Valid	Computes square roots of the packed single-precision floating-point values in xmm2/m128 and stores the results in xmm1.

Description

Performs an SIMD computation of the square roots of the four packed single-precision floating-point values in the source operand (second operand) stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD single-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] \leftarrow SQRT(SRC[31:0]); DEST[63:32] \leftarrow SQRT(SRC[63:32]); DEST[95:64] \leftarrow SQRT(SRC[95:64]); DEST[127:96] \leftarrow SQRT(SRC[127:96]);

Intel C/C++ Compiler Intrinsic Equivalent

SQRTPS __m128 _mm_sqrt_ps(__m128 a)

SIMD Floating-Point Exceptions

Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

INSTRUCTION SET REFERENCE, N-Z



#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.





64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



SQRTSD—Compute Square Root of Scalar Double-Precision Floating-Point Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 0F 51 /r	SQRTSD xmm1, xmm2/m64	Valid	Valid	Computes square root of the low double-precision floating-point value in <i>xmm2/m64</i> and stores the results in <i>xmm1</i> .

Description

Computes the square root of the low double-precision floating-point value in the source operand (second operand) and stores the double-precision floating-point result in the destination operand. The source operand can be an XMM register or a 64-bit memory location. The destination operand is an XMM register. The high quadword of the destination operand remains unchanged. See Figure 11-4 in the IA-32 Intel Architecture Software Developer's Manual, Volume 1 for an illustration of a scalar double-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[63:0] \leftarrow SQRT(SRC[63:0]): (* DEST[127:64] unchanged *)

Intel C/C++ Compiler Intrinsic Equivalent

SQRTSD m128d mm sgrt sd (m128d a)

SIMD Floating-Point Exceptions

Invalid, Precision, Denormal.

Protected Mode Exceptions

For an illegal memory operand effective address in the CS, DS, ES, FS or #GP(0)

GS segments.

#SS(0)For an illegal address in the SS segment.

For a page fault. #PF(fault-code) #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.



INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

4-284 Vol. 2B



SQRTSS—Compute Square Root of Scalar Single-Precision Floating-Point Value

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 51 /r	SQRTSS xmm1, xmm2/m32	Valid	Valid	Computes square root of the low single-precision floating-point value in <i>xmm2/m32</i> and stores the results in <i>xmm1</i> .

Description

Computes the square root of the low single-precision floating-point value in the source operand (second operand) and stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of a scalar single-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] \leftarrow SQRT (SRC[31:0]); (* DEST[127:64] unchanged *)

Intel C/C++ Compiler Intrinsic Equivalent

SQRTSS __m128 _mm_sqrt_ss(__m128 a)

SIMD Floating-Point Exceptions

Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

INSTRUCTION SET REFERENCE, N-Z



#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.





64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



STC—Set Carry Flag

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F9	STC	Valid	Valid	Set CF flag.

Description

Sets the CF flag in the EFLAGS register.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

 $CF \leftarrow 1$;

Flags Affected

The CF flag is set. The OF, ZF, SF, AF, and PF flags are unaffected.

Exceptions (All Operating Modes)

None.



STD—Set Direction Flag

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
FD	STD	Valid	Valid	Set DF flag.

Description

Sets the DF flag in the EFLAGS register. When the DF flag is set to 1, string operations decrement the index registers (ESI and/or EDI).

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

 $DF \leftarrow 1$;

Flags Affected

The DF flag is set. The CF, OF, ZF, SF, AF, and PF flags are unaffected.

Exceptions (All Operating Modes)

None.



STI—Set Interrupt Flag

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
FB	STI	Valid	Valid	Set interrupt flag; external, maskable interrupts enabled at the end of the next instruction.

Description

If protected-mode virtual interrupts are not enabled, STI sets the interrupt flag (IF) in the EFLAGS register. After the IF flag is set, the processor begins responding to external, maskable interrupts after the next instruction is executed. The delayed effect of this instruction is provided to allow interrupts to be enabled just before returning from a procedure (or subroutine). For instance, if an STI instruction is followed by an RET instruction, the RET instruction is allowed to execute before external interrupts are recognized². If the STI instruction is followed by a CLI instruction (which clears the IF flag), the effect of the STI instruction is negated.

The IF flag and the STI and CLI instructions do not prohibit the generation of exceptions and NMI interrupts. NMI interrupts may be blocked for one macroinstruction following an STI.

When protected-mode virtual interrupts are enabled, CPL is 3, and IOPL is less than 3; STI sets the VIF flag in the EFLAGS register, leaving IF unaffected.

Table 4-2 indicates the action of the STI instruction depending on the processor's mode of operation and the CPL/IOPL settings of the running program or procedure.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

STI

STI

RET

^{2.} The STI instruction delays recognition of interrupts only if it is executed with EFLAGS.IF = 0. In a sequence of STI instructions, only the first instruction in the sequence is guaranteed to delay interrupts. In the following instruction sequence, interrupts may be recognized before RET executes:



PE	VM	IOPL	CPL	PVI	VIP	VME	STI Result	
0	Х	Х	Х	Х	Х	Х	IF = 1	
1	0	≥ CPL	Х	Х	Х	Х	IF = 1	
1	0	< CPL	3	1	0	Х	VIF = 1	
1	0	< CPL	< 3	Х	Х	Х	GP Fault	
1	0	< CPL	Х	0	Х	Х	GP Fault	
1	0	< CPL	Х	Х	1	Х	GP Fault	
1	1	3	Х	Х	Х	Х	IF = 1	
1	1	< 3	Х	Х	0	1	VIF = 1	
1	1	< 3	Х	Х	1	Х	GP Fault	
1	1	< 3	Х	Х	Х	0	GP Fault	
	X = This setting has no impact.							

Table 4-2. Decision Table for STI Results

Operation

```
IF PE = 0 (* Executing in real-address mode *)
   THEN
        IF ← 1; (* Set Interrupt Flag *)
   ELSE (* Executing in protected mode or virtual-8086 mode *)
        IF VM = 0 (* Executing in protected mode*)
            THEN
                 IF IOPL > CPL
                     THEN
                          <u>IF</u> ← 1; (* Set Interrupt Flag *)
                 ELSE
                      IF (IOPL < CPL) and (CPL = 3) and (VIP = 0)
                          THEN
                               <u>VIF</u> ← 1; (* Set Virtual Interrupt Flag *)
                          ELSE
                               #GP(0);
                      FI;
                 FI:
            ELSE (* Executing in Virtual-8086 mode *)
                 IF IOPL = 3
                     THEN
                          <u>IF</u> \leftarrow 1; (* Set Interrupt Flag *)
                 ELSE
```



```
IF ((IOPL < 3) \text{ and } (VIP = 0) \text{ and } (VME = 1)) \\ THEN \\ \underline{VIF} \leftarrow 1; \ (* \text{ Set Virtual Interrupt Flag *}) \\ ELSE \\ \#GP(0); \ (* \text{ Trap to virtual-8086 monitor *}) \\ FI;) \\ FI; \\ FI; \\ FI:
```

Flags Affected

The <u>IF</u> flag is set to 1; or the <u>VIF</u> flag is set to 1.

Protected Mode Exceptions

#GP(0) If the CPL is greater (has less privilege) than the IOPL of the current

program or procedure.

Real-Address Mode Exceptions

None.

Virtual-8086 Mode Exceptions

#GP(0) If the CPL is greater (has less privilege) than the IOPL of the current

program or procedure.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



STMXCSR—Store MXCSR Register State

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F AE /3	STMXCSR m32	Valid	Valid	Store contents of MXCSR register to m32.

Description

Stores the contents of the MXCSR control and status register to the destination operand. The destination operand is a 32-bit memory location. The reserved bits in the MXCSR register are stored as 0s.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

m32 ← MXCSR:

Intel C/C++ Compiler Intrinsic Equivalent

_mm_getcsr(void)

Exceptions

None.

Numeric Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS, or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#AC For unaligned memory reference. To enable #AC exceptions, three condi-

tions must be true: CR0.AM[bit 18] = 1, EFLAGS.AC[bit 18] = 1, current

CPL = 3.

#UD If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



Real Address Mode Exceptions

GP(0) If any part of the operand would lie outside of the effective address space

from 0 to 0FFFFH.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#UD If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual 8086 Mode Exceptions

Same exceptions as in Real Address Mode.

#PF(fault-code) For a page fault.

#AC For unaligned memory reference.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#UD If CR0.EM[bit 2] = 1. #NM If CR0.TS[bit 3] = 1.

#AC For unaligned memory reference. To enable #AC exceptions, three condi-

tions must be true: CR0.AM[bit 18] = 1, EFLAGS.AC[bit 18] = 1, current

CPL = 3

#UD If CR4.OSFXSR[bit 9] = 0.

#UD If CPUID.01H:EDX.SSE[bit 25] = 0.



STOS/STOSB/STOSW/STOSD/STOSQ—Store String

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
AA	STOS m8	Valid	Valid	For legacy mode, store AL at address ES:(E)DI; For 64-bit mode store AL at address RDI or EDI.
AB	STOS m16	Valid	Valid	For legacy mode, store AX at address ES:(E)DI; For 64-bit mode store AX at address RDI or EDI.
АВ	STOS m32	Valid	Valid	For legacy mode, store EAX at address ES:(E)DI; For 64-bit mode store EAX at address RDI or EDI.
REX.W + AB	STOS m64	Valid	N.E.	Store RAX at address RDI or EDI.
AA	STOSB	Valid	Valid	For legacy mode, store AL at address ES:(E)DI; For 64-bit mode store AL at address RDI or EDI.
AB	STOSW	Valid	Valid	For legacy mode, store AX at address ES:(E)DI; For 64-bit mode store AX at address RDI or EDI.
AB	STOSD	Valid	Valid	For legacy mode, store EAX at address ES:(E)DI; For 64-bit mode store EAX at address RDI or EDI.
REX.W + AB	STOSQ	Valid	N.E.	Store RAX at address RDI or EDI.

Description

In non-64-bit and default 64-bit mode; stores a byte, word, or doubleword from the AL, AX, or EAX register (respectively) into the destination operand. The destination operand is a memory location, the address of which is read from either the ES:EDI or ES:DI register (depending on the address-size attribute of the instruction and the mode of operation). The ES segment cannot be overridden with a segment override prefix.

At the assembly-code level, two forms of the instruction are allowed: the "explicit-operands" form and the "no-operands" form. The explicit-operands form (specified with the STOS mnemonic) allows the destination operand to be specified explicitly. Here, the destination operand should be a symbol that indicates the size and location of the destination value. The source operand is then automatically selected to match the size of the destination operand (the AL register for byte operands, AX for word operands, EAX for doubleword operands). The explicit-operands form is provided to allow documentation; however, note that the documentation provided by this form can be misleading. That is, the destination operand symbol must specify the correct **type** (size) of the operand (byte, word, or doubleword), but it does not have to specify the correct **location**. The location is always specified by the ES:(E)DI register. These must be loaded correctly before the store string instruction is executed.

The no-operands form provides "short forms" of the byte, word, doubleword, and quadword versions of the STOS instructions. Here also ES:(E)DI is assumed to be the destination operand and AL, AX, or EAX is assumed to be the source operand. The size of the destination and source



operands is selected by the mnemonic: STOSB (byte read from register AL), STOSW (word from AX), STOSD (doubleword from EAX).

After the byte, word, or doubleword is transferred from the register to the memory location, the (E)DI register is incremented or decremented according to the setting of the DF flag in the EFLAGS register. If the DF flag is 0, the register is incremented; if the DF flag is 1, the register is decremented (the register is incremented or decremented by 1 for byte operations, by 2 for word operations, by 4 for doubleword operations).

In 64-bit mode, the default address size is 64 bits, 32-bit address size is supported using the prefix 67H. Using an REX prefix in the form of REX.W promotes operation on doubleword operand to 64 bits. The promoted no-operand mnemonic is STOSQ. STOSQ (and its explicit operands variant) store a quadword from the RAX register into the destination addressed by RDI or EDI. See the summary chart at the beginning of this section for encoding data and limits.

The STOS, STOSB, STOSW, STOSD, STOSQ instructions can be preceded by the REP prefix for block loads of ECX bytes, words, or doublewords. More often, however, these instructions are used within a LOOP construct because data needs to be moved into the AL, AX, or EAX register before it can be stored. See "REP/REPE/REPZ/REPNE /REPNZ—Repeat String Operation Prefix" in this chapter for a description of the REP prefix.

Operation

```
Non-64-bit Mode:
IF (Byte store)
   THEN
        DEST ← AL:
             THEN IF DF = 0
                  THEN (E)DI \leftarrow (E)DI + 1;
                  ELSE (E)DI \leftarrow (E)DI -1;
             FI:
   ELSE IF (Word store)
        THEN
             DEST \leftarrow AX;
                  THEN IF DF = 0
                       THEN (E)DI \leftarrow (E)DI + 2;
                       ELSE (E)DI \leftarrow (E)DI -2;
                  FI:
        FI:
   ELSE IF (Doubleword store)
        THEN
             DEST ← EAX:
                  THEN IF DF = 0
                       THEN (E)DI \leftarrow (E)DI + 4;
                       ELSE (E)DI \leftarrow (E)DI -4;
                  FI;
        FI;
FI:
```



```
64-bit Mode:
IF (Byte store)
   THEN
        DEST ← AL:
             THEN IF DF = 0
                  THEN (R|E)DI \leftarrow (R|E)DI + 1;
                  ELSE (R|E)DI \leftarrow (R|E)DI - 1;
             FI;
   ELSE IF (Word store)
        THEN
             DEST \leftarrow AX:
                  THEN IF DF = 0
                      THEN (R|E)DI \leftarrow (R|E)DI + 2;
                       ELSE (R|E)DI \leftarrow (R|E)DI - 2;
                  FI:
        FI;
   ELSE IF (Doubleword store)
        THEN
             DEST ← EAX;
                  THEN IF DF = 0
                      THEN (R|E)DI \leftarrow (R|E)DI + 4;
                      ELSE (R|E)DI \leftarrow (R|E)DI - 4;
                  FI;
        FI:
   ELSE IF (Quadword store using REX.W)
        THEN
             DEST ← RAX:
                  THEN IF DF = 0
                      THEN (R|E)DI \leftarrow (R|E)DI + 8;
                      ELSE (R|E)DI \leftarrow (R|E)DI - 8;
                  FI;
        FI;
FI:
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the limit of the ES

segment.

If the ES register contains a NULL segment selector.

#PF(fault-code) If a page fault occurs.



#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the ES segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the ES segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



STR—Store Task Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 00 /1	STR r/m16	Valid	Valid	Stores segment selector from TR in r/m16.

Description

Stores the segment selector from the task register (TR) in the destination operand. The destination operand can be a general-purpose register or a memory location. The segment selector stored with this instruction points to the task state segment (TSS) for the currently running task.

When the destination operand is a 32-bit register, the 16-bit segment selector is copied into the lower 16 bits of the register and the upper 16 bits of the register are cleared. When the destination operand is a memory location, the segment selector is written to memory as a 16-bit quantity, regardless of operand size.

In 64-bit mode, operation is the same. The size of the memory operand is fixed at 16 bits. In register stores, the 2-byte TR is zero extended if stored to a 64-bit register.

The STR instruction is useful only in operating-system software. It can only be executed in protected mode.

Operation

 $DEST \leftarrow TR(SegmentSelector);$

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the destination is a memory operand that is located in a non-writable

segment or if the effective address is outside the CS, DS, ES, FS, or GS

segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#UD The STR instruction is not recognized in real-address mode.



Virtual-8086 Mode Exceptions

#UD The STR instruction is not recognized in virtual-8086 mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If the memory address is in a non-canonical form.

#SS(U) If the stack address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SUB—Subtract

		64-Bit	Compat/	
Opcode	Instruction	Mode	Leg Mode	Description
2C ib	SUB AL, imm8	Valid	Valid	Subtract imm8 from AL.
2D <i>iw</i>	SUB AX, imm16	Valid	Valid	Subtract imm16 from AX.
2D id	SUB EAX, imm32	Valid	Valid	Subtract imm32 from EAX.
REX.W + 2D id	SUB RAX, imm32	Valid	N.E.	Subtract <i>imm32</i> sign-extended to 64-bits from RAX.
80 /5 <i>ib</i>	SUB r/m8, imm8	Valid	Valid	Subtract imm8 from r/m8.
REX + 80 /5 ib	SUB r/m8*, imm8	Valid	N.E.	Subtract imm8 from r/m8.
81 /5 <i>iw</i>	SUB r/m16, imm16	Valid	Valid	Subtract imm16 from r/m16.
81 /5 <i>id</i>	SUB r/m32, imm32	Valid	Valid	Subtract imm32 from r/m32.
REX.W + 81 /5 id	SUB r/m64, imm32	Valid	N.E.	Subtract <i>imm32</i> sign- extended to 64-bits from r/m64.
83 /5 ib	SUB r/m16, imm8	Valid	Valid	Subtract sign-extended <i>imm8</i> from <i>r/m16</i> .
83 /5 ib	SUB r/m32, imm8	Valid	Valid	Subtract sign-extended <i>imm8</i> from <i>r/m32</i> .
REX.W + 83 /5 ib	SUB r/m64, imm8	Valid	N.E.	Subtract sign-extended <i>imm8</i> from <i>r/m64</i> .
28 /r	SUB r/m8, r8	Valid	Valid	Subtract r8 from r/m8.
REX + 28 /r	SUB r/m8*, r8*	Valid	N.E.	Subtract r8 from r/m8.
29 /r	SUB r/m16, r16	Valid	Valid	Subtract r16 from r/m16.
29 /r	SUB r/m32, r32	Valid	Valid	Subtract r32 from r/m32.
REX.W + 29 /r	SUB r/m64, r32	Valid	N.E.	Subtract r64 from r/m64.
2A /r	SUB r8, r/m8	Valid	Valid	Subtract r/m8 from r8.
REX + 2A /r	SUB r8*, r/m8*	Valid	N.E.	Subtract r/m8 from r8.
2B /r	SUB r16, r/m16	Valid	Valid	Subtract r/m16 from r16.
2B /r	SUB r32, r/m32	Valid	Valid	Subtract r/m32 from r32.
REX.W + 2B /r	SUB r64, r/m64	Valid	N.E.	Subtract r/m64 from r64.

NOTES:

Description

Subtracts the second operand (source operand) from the first operand (destination operand) and stores the result in the destination operand. The destination operand can be a register or a memory location; the source operand can be an immediate, register, or memory location. (However, two memory operands cannot be used in one instruction.) When an immediate value is used as an operand, it is sign-extended to the length of the destination operand format.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.

INSTRUCTION SET REFERENCE, N-Z



The SUB instruction performs integer subtraction. It evaluates the result for both signed and unsigned integer operands and sets the OF and CF flags to indicate an overflow in the signed or unsigned result, respectively. The SF flag indicates the sign of the signed result.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

Operation

 $DEST \leftarrow (DEST - SRC);$

Flags Affected

The OF, SF, ZF, AF, PF, and CF flags are set according to the result.

Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SUBPD—Subtract Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 5C /r	SUBPD xmm1, xmm2/m128	Valid	Valid	Subtract packed double-precision floating-point values in <i>xmm2/m128</i> from <i>xmm1</i> .

Description

Performs an SIMD subtract of the two packed double-precision floating-point values in the source operand (second operand) from the two packed double-precision floating-point values in the destination operand (first operand), and stores the packed double-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 11-3 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD double-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[63:0] \leftarrow DEST[63:0] - SRC[63:0]; DEST[127:64] \leftarrow DEST[127:64] - SRC[127:64];

Intel C/C++ Compiler Intrinsic Equivalent

SUBPD __m128d _mm_sub_pd (m128d a, m128d b)

SIMD Floating-Point Exceptions

Overflow, Underflow, Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.



INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 1.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



SUBPS—Subtract Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 5C /r	SUBPS xmm1 xmm2/m128	Valid	Valid	Subtract packed single-precision floating-point values in <i>xmm2/mem</i> from <i>xmm1</i> .

Description

Performs an SIMD subtract of the four packed single-precision floating-point values in the source operand (second operand) from the four packed single-precision floating-point values in the destination operand (first operand), and stores the packed single-precision floating-point results in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register. See Figure 10-5 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of an SIMD double-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
\begin{split} & \mathsf{DEST}[31:0] \leftarrow \mathsf{DEST}[31:0] - \mathsf{SRC}[31:0]; \\ & \mathsf{DEST}[63:32] \leftarrow \mathsf{DEST}[63:32] - \mathsf{SRC}[63:32]; \\ & \mathsf{DEST}[95:64] \leftarrow \mathsf{DEST}[95:64] - \mathsf{SRC}[95:64]; \\ & \mathsf{DEST}[127:96] \leftarrow \mathsf{DEST}[127:96] - \mathsf{SRC}[127:96]; \end{split}
```

Intel C/C++ Compiler Intrinsic Equivalent

SUBPS __m128 _mm_sub_ps(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

Overflow, Underflow, Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

INSTRUCTION SET REFERENCE, N-Z



#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



SUBSD—Subtract Scalar Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F2 0F 5C /r	SUBSD xmm1, xmm2/m64	Valid	Valid	Subtracts the low double-precision floating-point values in xmm2/mem64 from xmm1.

Description

Subtracts the low double-precision floating-point value in the source operand (second operand) from the low double-precision floating-point value in the destination operand (first operand), and stores the double-precision floating-point result in the destination operand. The source operand can be an XMM register or a 64-bit memory location. The destination operand is an XMM register. The high quadword of the destination operand remains unchanged. See Figure 11-4 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of a scalar double-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

$$\label{eq:decomposition} \begin{split} \mathsf{DEST}[63:0] \leftarrow \mathsf{DEST}[63:0] - \mathsf{SRC}[63:0]; \\ (* \ \mathsf{DEST}[127:64] \ \mathsf{unchanged} \ *) \end{split}$$

Intel C/C++ Compiler Intrinsic Equivalent

SUBSD __m128d _mm_sub_sd (m128d a, m128d b)

SIMD Floating-Point Exceptions

Overflow, Underflow, Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.



INSTRUCTION SET REFERENCE, N-Z

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SUBSS—Subtract Scalar Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
F3 0F 5C /r	SUBSS xmm1, xmm2/m32	Valid	Valid	Subtract the lower single-precision floating-point values in <i>xmm2/m32</i> from <i>xmm1</i> .

Description

Subtracts the low single-precision floating-point value in the source operand (second operand) from the low single-precision floating-point value in the destination operand (first operand), and stores the single-precision floating-point result in the destination operand. The source operand can be an XMM register or a 32-bit memory location. The destination operand is an XMM register. The three high-order doublewords of the destination operand remain unchanged. See Figure 10-6 in the *IA-32 Intel Architecture Software Developer's Manual, Volume 1* for an illustration of a scalar single-precision floating-point operation.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] ← DEST[31:0] − SRC[31:0]; (* DEST[127:96] unchanged *)

Intel C/C++ Compiler Intrinsic Equivalent

SUBSS __m128 _mm_sub_ss(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

Overflow, Underflow, Invalid, Precision, Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

INSTRUCTION SET REFERENCE, N-Z



#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



SWAPGS—Swap GS Base Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 01 /7	SWAPGS	Valid	Invalid	Exchanges the current GS base register value with the value contained in MSR address C0000102H.

Description

SWAPGS exchanges the current GS base register value with the value contained in MSR address C0000102H (MSR_KERNELGSbase). KernelGSbase is guaranteed to be canonical; so SWAPGS does not perform a canonical check. The SWAPGS instruction is a privileged instruction intended for use by system software.

When using SYSCALL to implement system calls, there is no kernel stack at the OS entry point. Neither is there a straightforward method to obtain a pointer to kernel structures from which the kernel stack pointer could be read. Thus, the kernel can't save general purpose registers or reference memory.

By design, SWAPGS does not require any general purpose registers or memory operands. No registers need to be saved before using the instruction. SWAPGS exchanges the CPL 0 data pointer from the KernelGSbase MSR with the GS base register. The kernel can then use the GS prefix on normal memory references to access kernel data structures. Similarly, when the OS kernel is entered using an interrupt or exception (where the kernel stack is already set up), SWAPGS can be used to quickly get a pointer to the kernel data structures.

The KernelGSbase MSR itself is only accessible using RDMSR/WRMSR instructions. Those instructions are only accessible at privilege level 0. WRMSR will cause a #GP(0) if the value to be written to KernelGSbase MSR is non-canonical.

See Table 4-3.

Table 4-3. SWAPGS Operation Parameters

Opcode	ModR/M Byte			Instr	uction
	MOD	REG	R/M	Not 64-bit Mode	64-bit Mode
OF 01	MOD ≠ 11	111	xxx	INVLPG	INVLPG
	11	111	000	#UD	SWPGS
	11	111	≠ 000	#UD	#UD



Operation

```
IF CS.L \neq 1 (* Not in 64-Bit Mode *)

THEN #UD; FI;

IF CPL \neq 0

THEN #GP(0); FI;

tmp \leftarrow GS(BASE);

GS(BASE) \leftarrow KERNELGSbase;

KERNELGSbase \leftarrow tmp;
```

Flags Affected

None

Protected Mode Exceptions

#UD If Mode \neq 64-Bit

Real-Address Mode Exceptions

#UD Instruction not recognized.

Virtual-8086 Mode Exceptions

#UD Instruction not recognized.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If $CPL \neq 0$.



SYSCALL—Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 05	SYSCALL	Valid	Invalid	Fast call to privilege level 0 system procedures.

Description

SYSCALL saves the RIP of the instruction following SYSCALL to RCX and loads a new RIP from the IA32_LSTAR (64-bit mode). Upon return, SYSRET copies the value saved in RCX to the RIP.

SYSCALL saves RFLAGS (lower 32 bit only) in R11. It then masks RFLAGS with an OS-defined value using the IA32_FMASK (MSR C000_0084). The actual mask value used by the OS is the complement of the value written to the IA32_FMASK MSR. None of the bits in RFLAGS are automatically cleared (except for RF). SYSRET restores RFLAGS from R11 (the lower 32 bits only).

Software should not alter the CS or SS descriptors in a manner that violates the following assumptions made by SYSCALL/SYSRET:

- The CS and SS base and limit remain the same for all processes, including the operating system (the base is 0H and the limit is 0FFFFFFFH).
- The CS of the SYSCALL target has a privilege level of 0.
- The CS of the SYSRET target has a privilege level of 3.

SYSCALL/SYSRET do not check for violations of these assumptions.

Operation

```
IF ((CS \neq 1) or (IA32_EFER.SCE \neq 1))
(* Not in 64-Bit Mode or SYSCALL/SYSRET not enabled in IA32_EFER *)
   THEN #UD; FI;
RCX \leftarrow RIP;
RIP ← LSTAR MSR:
R11 ← EFLAGS:
EFLAGS ← (EFLAGS MASKED BY IA32_FMASK);
CPL \leftarrow 0:
CS(SEL) \leftarrow IA32\_STAR\_MSR[47:32];
CS(DPL) \leftarrow 0;
CS(BASE) \leftarrow 0;
CS(LIMIT) \leftarrow 0xFFFFF;
CS(GRANULAR) \leftarrow 1;
SS(SEL) \leftarrow IA32\_STAR\_MSR[47:32] + 8;
SS(DPL) \leftarrow 0:
SS(BASE) \leftarrow 0;
```



 $SS(LIMIT) \leftarrow 0xFFFFF;$ $SS(GRANULAR) \leftarrow 1;$

Flags Affected

A11.

Protected Mode Exceptions

#UD If Mode \neq 64-bit.

Real-Address Mode Exceptions

#UD Instruction is not recognized in this mode.

Virtual-8086 Mode Exceptions

#UD Instruction is not recognized in this mode.

Compatibility Mode Exceptions

#UD Instruction is not recognized in this mode.

64-Bit Mode Exceptions

#UD If $IA32_EFER.SCE = 0$.



SYSENTER—Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 34	SYSENTER	Valid	Valid	Fast call to privilege level 0 system procedures.

Description

Executes a fast call to a level 0 system procedure or routine. SYSENTER is a companion instruction to SYSEXIT. The instruction is optimized to provide the maximum performance for system calls from user code running at privilege level 3 to operating system or executive procedures running at privilege level 0.

Prior to executing the SYSENTER instruction, software must specify the privilege level 0 code segment and code entry point, and the privilege level 0 stack segment and stack pointer by writing values to the following MSRs:

- IA32_SYSENTER_CS Contains the 32-bit segment selector for the privilege level 0 code segment. This value is also used to compute the segment selector of the privilege level 0 stack segment.
- IA32_SYSENTER_EIP Contains the 32-bit offset into the privilege level 0 code segment to the first instruction of the selected operating procedure or routine.
- IA32_SYSENTER_ESP Contains the 32-bit stack pointer for the privilege level 0 stack.

These MSRs can be read from and written to using RDMSR/WRMSR. Register addresses are listed in Table 4-4. The addresses are defined to remain fixed for future IA-32 processors.

Table 4-4. MSRs Used By the SYSENTER and SYSEXIT Instructions

MSR	Address
IA32_SYSENTER_CS	174H
IA32_SYSENTER_ESP	175H
IA32_SYSENTER_EIP	176H

When SYSENTER is executed, the processor:

- 1. Loads the segment selector from the IA32_SYSENTER_CS into the CS register.
- 2. Loads the instruction pointer from the IA32_SYSENTER_EIP into the EIP register.
- 3. Adds 8 to the value in IA32 SYSENTER CS and loads it into the SS register.
- 4. Loads the stack pointer from the IA32_SYSENTER_ESP into the ESP register.
- 5. Switches to privilege level 0.



- 6. Clears the VM flag in the EFLAGS register, if the flag is set.
- 7. Begins executing the selected system procedure.

The processor does not save a return IP or other state information for the calling procedure.

The SYSENTER instruction always transfers program control to a protected-mode code segment with a DPL of 0. The instruction requires that the following conditions are met by the operating system:

- The segment descriptor for the selected system code segment selects a flat, 32-bit code segment of up to 4 GBytes, with execute, read, accessed, and non-conforming permissions.
- The segment descriptor for selected system stack segment selects a flat 32-bit stack segment of up to 4 GBytes, with read, write, accessed, and expand-up permissions.

The SYSENTER can be invoked from all operating modes except real-address mode.

The SYSENTER and SYSEXIT instructions are companion instructions, but they do not constitute a call/return pair. When executing a SYSENTER instruction, the processor does not save state information for the user code, and neither the SYSENTER nor the SYSEXIT instruction supports passing parameters on the stack.

To use the SYSENTER and SYSEXIT instructions as companion instructions for transitions between privilege level 3 code and privilege level 0 operating system procedures, the following conventions must be followed:

- The segment descriptors for the privilege level 0 code and stack segments and for the privilege level 3 code and stack segments must be contiguous in the global descriptor table. This convention allows the processor to compute the segment selectors from the value entered in the SYSENTER_CS_MSR MSR.
- The fast system call "stub" routines executed by user code (typically in shared libraries or DLLs) must save the required return IP and processor state information if a return to the calling procedure is required. Likewise, the operating system or executive procedures called with SYSENTER instructions must have access to and use this saved return and state information when returning to the user code.

The SYSENTER and SYSEXIT instructions were introduced into the IA-32 architecture in the Pentium II processor. The availability of these instructions on a processor is indicated with the SYSENTER/SYSEXIT present (SEP) feature flag returned to the EDX register by the CPUID instruction. An operating system that qualifies the SEP flag must also qualify the processor family and model to ensure that the SYSENTER/SYSEXIT instructions are actually present. For example:

```
IF CPUID SEP bit is set
   THEN IF (Family = 6) and (Model < 3) and (Stepping < 3)
   THEN
        SYSENTER/SYSEXIT_Not_Supported; FI;
   ELSE
        SYSENTER/SYSEXIT_Supported; FI;
FI;</pre>
```



When the CPUID instruction is executed on the Pentium Pro processor (model 1), the processor returns a the SEP flag as set, but does not support the SYSENTER/SYSEXIT instructions.

Operation

```
IF CR0.PE = 0 THEN \#GP(0); FI;
IF SYSENTER CS MSR = 0 THEN #GP(0); FI;
EFLAGS.VM \leftarrow 0:
                                               (* Insures protected mode execution *)
EFLAGS.IF \leftarrow 0;
                                               (* Mask interrupts *)
EFLAGS.RF \leftarrow 0:
                                               (* Operating system provides CS *)
CS.SEL ← SYSENTER_CS_MSR
(* Set rest of CS to a fixed value *)
CS.SEL.CPL \leftarrow 0;
CS.BASE \leftarrow 0:
                                               (* Flat segment *)
CS.LIMIT ← FFFFH:
                                               (* 4-GByte limit *)
CS.ARbyte.G \leftarrow 1;
                                               (* 4-KByte granularity *)
CS.ARbyte.S \leftarrow 1;
                                               (* Execute + Read, Accessed *)
CS.ARbyte.TYPE \leftarrow 1011B;
CS.ARbyte.D \leftarrow 1;
                                          (* 32-bit code segment*)
CS.ARbyte.DPL \leftarrow 0;
CS.ARbyte.RPL \leftarrow 0;
CS.ARbyte.P \leftarrow 1:
SS.SEL \leftarrow CS.SEL + 8:
(* Set rest of SS to a fixed value *)
SS.BASE \leftarrow 0:
                                               (* Flat segment *)
SS.LIMIT ← FFFFH;
                                               (* 4-GByte limit *)
SS.ARbyte.G \leftarrow 1;
                                               (* 4-KByte granularity *)
SS.ARbyte.S ←;
SS.ARbyte.TYPE ← 0011B;
                                               (* Read/Write, Accessed *)
SS.ARbyte.D \leftarrow 1;
                                               (* 32-bit stack segment*)
SS.ARbyte.DPL \leftarrow 0;
SS.ARbyte.RPL \leftarrow 0;
SS.ARbyte.P \leftarrow 1;
ESP ← SYSENTER ESP MSR;
EIP \leftarrow SYSENTER\_EIP\_MSR;
```

IA-32e Mode Operation

In IA-32e mode, SYSENTER executes a fast system calls from user code running at privilege level 3 (in compatibility mode or 64-bit mode) to 64-bit executive procedures running at privilege level 0. This instruction is a companion instruction to the SYSEXIT instruction.

In IA-32e mode, the IA32_SYSENTER_EIP and IA32_SYSENTER_ESP MSRs hold 64-bit addresses and must be in canonical form; IA32_SYSENTER_CS must not contain a NULL selector.



When SYSENTER transfers control, the following fields are generated and bits set:

- Target code segment Reads non-NULL selector from IA32_SYSENTER_CS.
- New CS attributes L-bit = 1 (go to 64-bit mode); CS base = 0, CS limit = FFFFFFFH.
- **Target instruction** Reads 64-bit canonical address from IA32_SYSENTER_EIP.
- **Stack segment** Computed by adding 8 to the value from IA32_SYSENTER_CS.
- **Stack pointer** Reads 64-bit canonical address from IA32_SYSENTER_ESP.
- New SS attributes SS base = 0, SS limit = FFFFFFFH.

Flags Affected

VM, IF, RF (see Operation above)

Protected Mode Exceptions

#GP(0) If IA32_SYSENTER_CS = 0.

Real-Address Mode Exceptions

#GP(0) If protected mode is not enabled.

Virtual-8086 Mode Exceptions

Same exceptions as in Protected Mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



SYSEXIT—Fast Return from Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 35	SYSEXIT	Valid	Valid	Fast return to privilege level 3 user code.
REX.W + 0F 35	SYSEXIT	Valid	Valid	Fast return to 64-bit mode privilege level 3 user code.

Description

Executes a fast return to privilege level 3 user code. SYSEXIT is a companion instruction to the SYSENTER instruction. The instruction is optimized to provide the maximum performance for returns from system procedures executing at protections levels 0 to user procedures executing at protection level 3. It must be executed from code executing at privilege level 0.

Prior to executing SYSEXIT, software must specify the privilege level 3 code segment and code entry point, and the privilege level 3 stack segment and stack pointer by writing values into the following MSR and general-purpose registers:

- IA32_SYSENTER_CS Contains the 32-bit segment selector for the privilege level 0 code segment in which the processor is currently executing. This value is used to compute the segment selectors for the privilege level 3 code and stack segments.
- **EDX** Contains the 32-bit offset into the privilege level 3 code segment to the first instruction to be executed in the user code.
- **ECX** Contains the 32-bit stack pointer for the privilege level 3 stack.

The IA32_SYSENTER_CS MSR can be read from and written to using RDMSR/WRMSR. The register address is listed in Table 4-4. This address is defined to remain fixed for future IA-32 processors.

When SYSEXIT is executed, the processor:

- 1. Adds 16 to the value in IA32_SYSENTER_CS and loads the sum into the CS selector register.
- 2. Loads the instruction pointer from the EDX register into the EIP register.
- Adds 24 to the value in IA32_SYSENTER_CS and loads the sum into the SS selector register.
- 4. Loads the stack pointer from the ECX register into the ESP register.
- 5. Switches to privilege level 3.
- 6. Begins executing the user code at the EIP address.

See "SWAPGS—Swap GS Base Register" for information about using the SYSENTER and SYSEXIT instructions as companion call and return instructions.



The SYSEXIT instruction always transfers program control to a protected-mode code segment with a DPL of 3. The instruction requires that the following conditions are met by the operating system:

- The segment descriptor for the selected user code segment selects a flat, 32-bit code segment of up to 4 GBytes, with execute, read, accessed, and non-conforming permissions.
- The segment descriptor for selected user stack segment selects a flat, 32-bit stack segment of up to 4 GBytes, with expand-up, read, write, and accessed permissions.

The SYSENTER can be invoked from all operating modes except real-address mode.

The SYSENTER and SYSEXIT instructions were introduced into the IA-32 architecture in the Pentium II processor. The availability of these instructions on a processor is indicated with the SYSENTER/SYSEXIT present (SEP) feature flag returned to the EDX register by the CPUID instruction. An operating system that qualifies the SEP flag must also qualify the processor family and model to ensure that the SYSENTER/SYSEXIT instructions are actually present. For example:

When the CPUID instruction is executed on the Pentium Pro processor (model 1), the processor returns a the SEP flag as set, but does not support the SYSENTER/SYSEXIT instructions.

Operation

```
IF SYSENTER_CS_MSR = 0 THEN #GP(0); FI;
IF CR0.PE = 0 THEN \#GP(0); FI;
IF CPL \neq 0 THEN #GP(0); FI;
CS.SEL ← (SYSENTER_CS_MSR + 16); (* Segment selector for return CS *)
(* Set rest of CS to a fixed value *)
CS.BASE \leftarrow 0:
                                              (* Flat segment *)
                                              (* 4-GByte limit *)
CS.LIMIT ← FFFFH;
CS.ARbyte.G \leftarrow 1;
                                              (* 4-KByte granularity *)
CS.ARbyte.S \leftarrow 1;
CS.ARbyte.TYPE \leftarrow 1011B;
                                              (* Execute, Read, Non-Conforming Code *)
CS.ARbyte.D \leftarrow 1;
                                              (* 32-bit code segment*)
CS.ARbyte.DPL \leftarrow 3;
CS.ARbyte.RPL \leftarrow 3;
CS.ARbyte.P \leftarrow 1;
SS.SEL ← (SYSENTER_CS_MSR + 24); (* Segment selector for return SS *)
(* Set rest of SS to a fixed value *);
SS.BASE \leftarrow 0:
                                              (* Flat segment *)
SS.LIMIT \leftarrow FFFFH;
                                              (* 4-GBvte limit *)
```

INSTRUCTION SET REFERENCE, N-Z



```
SS.ARbyte.G \leftarrow 1; \qquad (* 4-KByte granularity *) \\ SS.ARbyte.S \leftarrow ; \\ SS.ARbyte.TYPE \leftarrow 0011B; \qquad (* Expand Up, Read/Write, Data *) \\ SS.ARbyte.D \leftarrow 1; \qquad (* 32-bit stack segment*) \\ SS.ARbyte.DPL \leftarrow 3; \\ SS.ARbyte.PL \leftarrow 3; \\ SS.ARbyte.P \leftarrow 1; \\ ESP \leftarrow ECX; \\ EIP \leftarrow EDX;
```

IA-32e Mode Operation

In IA-32e mode, SYSEXIT executes a fast system calls from a 64-bit executive procedures running at privilege level 0 to user code running at privilege level 3 (in compatibility mode or 64-bit mode). This instruction is a companion instruction to the SYSENTER instruction.

In IA-32e mode, the IA32_SYSENTER_EIP and IA32_SYSENTER_ESP MSRs hold 64-bit addresses and must be in canonical form; IA32_SYSENTER_CS must not contain a NULL selector.

When the SYSEXIT instruction transfers control to 64-bit mode user code using REX.W, the following fields are generated and bits set:

- Target code segment Computed by adding 32 to the value in the IA32 SYSENTER CS.
- New CS attributes L-bit = 1 (go to 64-bit mode).
- Target instruction Reads 64-bit canonical address in RDX.
- Stack segment Computed by adding 8 to the value of CS selector.
- Stack pointer Update RSP using 64-bit canonical address in RCX.

When SYSEXIT transfers control to compatibility mode user code when the operand size attribute is 32 bits, the following fields are generated and bits set:

- Target code segment Computed by adding 16 to the value in IA32 SYSENTER CS.
- New CS attributes L-bit = 0 (go to compatibility mode).
- **Target instruction** Fetch the target instruction from 32-bit address in EDX.
- Stack segment Computed by adding 24 to the value in IA32 SYSENTER CS.
- Stack pointer Update ESP from 32-bit address in ECX.

Flags Affected

None.



Protected Mode Exceptions

#GP(0) If IA32_SYSENTER_CS = 0.

Real-Address Mode Exceptions

#GP(0) If protected mode is not enabled.

Virtual-8086 Mode Exceptions

#GP(0) If IA32_SYSENTER_CS = 0.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#GP(0) If IA32_SYSENTER_CS = 0.

If $CPL \neq 0$.

If ECX or EDX contains a non-canonical address.



SYSRET—Return From Fast System Call

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 07	SYSRET	Valid	Invalid	Return from fast system call

Description

SYSCALL saves the RIP of the instruction following the SYSCALL into RCX and loads the new RIP from the LSTAR (64-bit mode only). Upon return, SYSRET copies the value saved in RCX to the RIP.

In a return to 64-bit mode using Osize 64, SYSRET sets the CS selector value to MSR IA32 STAR[63:48] +16. The SS is set to IA32 STAR[63:48] +8.

SYSRET transfer control to compatibility mode using Osize 32. The CS selector value is set to MSR IA32 STAR[63:48]. The SS is set to IA32 STAR[63:48] + 8.

It is the responsibility of the OS to keep descriptors in the GDT/LDT that correspond to selectors loaded by SYSCALL/SYSRET consistent with the base, limit and attribute values forced by the these instructions.

Software should not alter the CS or SS descriptors in a manner that violates the following assumptions made by SYSCALL/SYSRET:

- CS and SS base and limit remain the same for all processes, including the operating system.
- CS of the SYSCALL target has a privilege level of 0.
- CS of the SYSRET target has a privilege level of 3.

SYSCALL/SYSRET do not check for violations of these assumptions.

Operation

```
IF (CS.L \neq 1 ) or (IA32_EFER.SCE \neq 1) (* Not in 64-Bit Mode or SYSCALL/SYSRET not enabled in IA32_EFER *) THEN #UD; FI;
IF (CPL \neq 0) THEN #GP(0); FI;
IF (RCX \neq CANONICAL_ADDRESS) THEN #GP(0); FI;
IF (OPERAND_SIZE = 64) THEN (* Return to 64-Bit Mode *) EFLAGS \leftarrow R11; CPL \leftarrow 0x3; CS(SEL) \leftarrow IA32_STAR[63:48] + 16; CS(PL) \leftarrow 0x3; SS(SEL) \leftarrow IA32_STAR[63:48] + 8;
```



```
\begin{split} SS(PL) \leftarrow 0x3; \\ RIP \leftarrow RCX; \\ ELSE (* Return to Compatibility Mode *) \\ EFLAGS \leftarrow R11; \\ CPL \leftarrow 0x3; \\ CS(SEL) \leftarrow IA32\_STAR[63:48]; \\ CS(PL) \leftarrow 0x3; \\ SS(SEL) \leftarrow IA32\_STAR[63:48] + 8; \\ SS(PL) \leftarrow 0x3; \\ EIP \leftarrow ECX; \\ FI; \end{split}
```

Flags Affected

VM, IF, RF.

Protected Mode Exceptions

#UD If Mode \neq 64-Bit.

Real-Address Mode Exceptions

#UD Instruction not recognized in this mode.

Virtual-8086 Mode Exceptions

#UD Instruction not recognized in this mode.

Compatibility Mode Exceptions

#UD Instruction not recognized in this mode.

64-Bit Mode Exceptions

#UD If IA32_EFER.SCE bit = 0.

#GP(0) If $CPL \neq 0$.

If ECX contains a non-canonical address.



TEST—Logical Compare

		64-Bit	Compat/	
Opcode	Instruction	Mode	Leg Mode	Description
A8 ib	TEST AL, imm8	Valid	Valid	AND <i>imm8</i> with AL; set SF, ZF, PF according to result.
A9 iw	TEST AX, imm16	Valid	Valid	AND <i>imm16</i> with AX; set SF, ZF, PF according to result.
A9 id	TEST EAX, imm32	Valid	Valid	AND <i>imm32</i> with EAX; set SF, ZF, PF according to result.
REX.W + A9 <i>id</i>	TEST RAX, imm32	Valid	N.E.	AND <i>imm32</i> sign-extended to 64-bits with RAX; set SF, ZF, PF according to result.
F6 /0 <i>ib</i>	TEST r/m8, imm8	Valid	Valid	AND <i>imm8</i> with <i>r/m8</i> ; set SF, ZF, PF according to result.
REX + F6 /0 ib	TEST r/m8*, imm8	Valid	N.E.	AND <i>imm8</i> with <i>r/m8</i> ; set SF, ZF, PF according to result.
F7 /0 <i>iw</i>	TEST r/m16, imm16	Valid	Valid	AND <i>imm16</i> with <i>r/m16</i> ; set SF, ZF, PF according to result.
F7 /0 id	TEST r/m32, imm32	Valid	Valid	AND <i>imm32</i> with <i>r/m32</i> ; set SF, ZF, PF according to result.
REX.W + F7 /0 id	TEST r/m64, imm32	Valid	N.E.	AND <i>imm32</i> sign-extended to 64-bits with <i>r/m64</i> ; set SF, ZF, PF according to result.
84 /r	TEST r/m8, r8	Valid	Valid	AND r8 with r/m8; set SF, ZF, PF according to result.
REX + 84 /r	TEST r/m8*, r8*	Valid	N.E.	AND r8 with r/m8; set SF, ZF, PF according to result.
85 /r	TEST r/m16, r16	Valid	Valid	AND <i>r16</i> with <i>r/m16</i> ; set SF, ZF, PF according to result.
85 /r	TEST r/m32, r32	Valid	Valid	AND r32 with r/m32; set SF, ZF, PF according to result.
REX.W + 85 /r	TEST r/m64, r64	Valid	N.E.	AND <i>r64</i> with <i>r/m64</i> ; set SF, ZF, PF according to result.

NOTES:

Description

Computes the bit-wise logical AND of first operand (source 1 operand) and the second operand (source 2 operand) and sets the SF, ZF, and PF status flags according to the result. The result is then discarded.

In 64-bit mode, using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



Operation

```
TEMP \leftarrow SRC1 AND SRC2;

SF \leftarrow MSB(TEMP);

IF TEMP = 0

THEN ZF \leftarrow 1;

ELSE ZF \leftarrow 0;

FI:

PF \leftarrow BitwiseXNOR(TEMP[0:7]);

CF \leftarrow 0;

OF \leftarrow 0;

(* AF is undefined *)
```

Flags Affected

The OF and CF flags are set to 0. The SF, ZF, and PF flags are set according to the result (see the "Operation" section above). The state of the AF flag is undefined.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



UCOMISD—Unordered Compare Scalar Double-Precision Floating-Point Values and Set EFLAGS

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 2E /r	UCOMISD xmm1, xmm2/m64	Valid	Valid	Compares (unordered) the low double-precision floating-point values in <i>xmm1</i> and <i>xmm2/m64</i> and set the EFLAGS accordingly.

Description

Performs and unordered compare of the double-precision floating-point values in the low quadwords of source operand 1 (first operand) and source operand 2 (second operand), and sets the ZF, PF, and CF flags in the EFLAGS register according to the result (unordered, greater than, less than, or equal). The OF, SF and AF flags in the EFLAGS register are set to 0. The unordered result is returned if either source operand is a NaN (QNaN or SNaN).

Source operand 1 is an XMM register; source operand 2 can be an XMM register or a 64 bit memory location.

The UCOMISD instruction differs from the COMISD instruction in that it signals an SIMD floating-point invalid operation exception (#I) only when a source operand is an SNaN. The COMISD instruction signals an invalid operation exception if a source operand is either a QNaN or an SNaN.

The EFLAGS register is not updated if an unmasked SIMD floating-point exception is generated.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
\label{eq:result} \begin{split} & \text{RESULT} \leftarrow \text{UnorderedCompare}(\text{SRC1}[63:0] <> \text{SRC2}[63:0]) \ \{ \\ & \text{(* Set EFLAGS *)} \\ & \text{CASE (RESULT) OF} \\ & \text{UNORDERED:} & \text{ZF, PF, CF} \leftarrow 111; \\ & \text{GREATER\_THAN:} & \text{ZF, PF, CF} \leftarrow 000; \\ & \text{LESS\_THAN:} & \text{ZF, PF, CF} \leftarrow 001; \\ & \text{EQUAL:} & \text{ZF, PF, CF} \leftarrow 100; \\ & \text{ESAC;} \\ & \text{OF, AF, SF} \leftarrow 0; \end{split}
```



Intel C/C++ Compiler Intrinsic Equivalent

int_mm_ucomieq_sd(__m128d a, __m128d b)
int_mm_ucomilt_sd(__m128d a, __m128d b)
int_mm_ucomile_sd(__m128d a, __m128d b)
int_mm_ucomigt_sd(__m128d a, __m128d b)
int_mm_ucomige_sd(__m128d a, __m128d b)
int_mm_ucomineq_sd(__m128d a, __m128d b)

SIMD Floating-Point Exceptions

Invalid (if SNaN operands), Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1. If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.





If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.

If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



UCOMISS—Unordered Compare Scalar Single-Precision Floating-Point Values and Set EFLAGS

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 2E /r	UCOMISS xmm1, xmm2/m32	Valid	Valid	Compare lower single-precision floating-point value in <i>xmm1</i> register with lower single-precision floating-point value in <i>xmm2/mem</i> and set the status flags accordingly.

Description

Performs and unordered compare of the single-precision floating-point values in the low double-words of the source operand 1 (first operand) and the source operand 2 (second operand), and sets the ZF, PF, and CF flags in the EFLAGS register according to the result (unordered, greater than, less than, or equal). In The OF, SF and AF flags in the EFLAGS register are set to 0. The unordered result is returned if either source operand is a NaN (QNaN or SNaN).

Source operand 1 is an XMM register; source operand 2 can be an XMM register or a 32 bit memory location.

The UCOMISS instruction differs from the COMISS instruction in that it signals an SIMD floating-point invalid operation exception (#I) only when a source operand is an SNaN. The COMISS instruction signals an invalid operation exception if a source operand is either a QNaN or an SNaN.

The EFLAGS register is not updated if an unmasked SIMD floating-point exception is generated.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

```
\label{eq:result} \begin{split} & \text{RESULT} \leftarrow \text{UnorderedCompare}(\text{SRC1[63:0]} <> \text{SRC2[63:0]}) \, \{ \\ & (* \, \text{Set} \, \text{EFLAGS} \, *) \\ & \text{CASE} \, (\text{RESULT}) \, \text{OF} \\ & \text{UNORDERED:} & \text{ZF,PF,CF} \leftarrow 111; \\ & \text{GREATER\_THAN:} & \text{ZF,PF,CF} \leftarrow 000; \\ & \text{LESS\_THAN:} & \text{ZF,PF,CF} \leftarrow 001; \\ & \text{EQUAL:} & \text{ZF,PF,CF} \leftarrow 100; \\ & \text{ESAC;} \\ & \text{OF,AF,SF} \leftarrow 0; \end{split}
```



Intel C/C++ Compiler Intrinsic Equivalent

int_mm_ucomieq_ss(__m128 a, __m128 b)
int_mm_ucomilt_ss(__m128 a, __m128 b)
int_mm_ucomile_ss(__m128 a, __m128 b)
int_mm_ucomigt_ss(__m128 a, __m128 b)
int_mm_ucomige_ss(__m128 a, __m128 b)
int_mm_ucomineq_ss(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

Invalid (if SNaN operands), Denormal.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0. If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

GP(0) If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.



If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#XM If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 1.

#UD If an unmasked SIMD floating-point exception and CR4.OSXM-

MEXCPT[bit 10] = 0.If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



UD2—Undefined Instruction

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 0B	UD2	Valid	Valid	Raise invalid opcode exception.

Description

Generates an invalid opcode. This instruction is provided for software testing to explicitly generate an invalid opcode. The opcode for this instruction is reserved for this purpose.

Other than raising the invalid opcode exception, this instruction is the same as the NOP instruction.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

#UD (* Generates invalid opcode exception *);

Flags Affected

None.

Exceptions (All Operating Modes)

#UD

Instruction is guaranteed to raise an invalid opcode exception in all operating modes.



UNPCKHPD—Unpack and Interleave High Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 15 /r	UNPCKHPD xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves double-precision floating-point values from high quadwords of <i>xmm1</i> and <i>xmm2/m128</i> .

Description

Performs an interleaved unpack of the high double-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-14. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

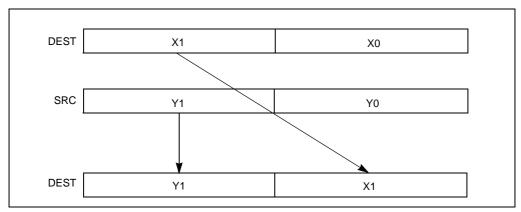


Figure 4-14. UNPCKHPD Instruction High Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

DEST[63:0] \leftarrow DEST[127:64]; DEST[127:64] \leftarrow SRC[127:64];

Intel C/C++ Compiler Intrinsic Equivalent

UNPCKHPD __m128d _mm_unpackhi_pd(__m128d a, __m128d b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode #PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



UNPCKHPS—Unpack and Interleave High Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 15 /r	UNPCKHPS xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves single- precision floating-point values from high quadwords of xmm1 and xmm2/mem into xmm1.

Description

Performs an interleaved unpack of the high-order single-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-15. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

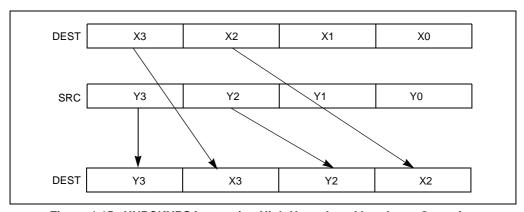


Figure 4-15. UNPCKHPS Instruction High Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[31:0] \leftarrow DEST[95:64]; DEST[63:32] \leftarrow SRC[95:64]; DEST[95:64] \leftarrow DEST[127:96]; DEST[127:96] \leftarrow SRC[127:96];



Intel C/C++ Compiler Intrinsic Equivalent

UNPCKHPS __m128 _mm_unpackhi_ps(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.





64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



UNPCKLPD—Unpack and Interleave Low Packed Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 14 /r	UNPCKLPD xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves double- precision floating-point values from low quadwords of <i>xmm1</i> and <i>xmm2/m128</i> .

Description

Performs an interleaved unpack of the low double-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-16. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

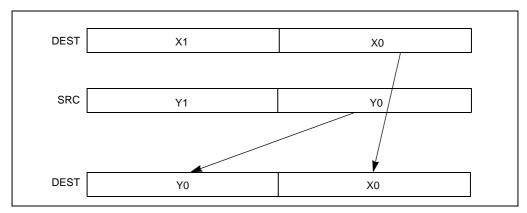


Figure 4-16. UNPCKLPD Instruction Low Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[63:0] \leftarrow DEST[63:0]; DEST[127:64] \leftarrow SRC[63:0];



Intel C/C++ Compiler Intrinsic Equivalent

UNPCKHPD __m128d _mm_unpacklo_pd(__m128d a, __m128d b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.



64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



UNPCKLPS—Unpack and Interleave Low Packed Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 14 /r	UNPCKLPS xmm1, xmm2/m128	Valid	Valid	Unpacks and Interleaves single-precision floating-point values from low quadwords of <i>xmm1</i> and <i>xmm2/mem</i> into <i>xmm1</i> .

Description

Performs an interleaved unpack of the low-order single-precision floating-point values from the source operand (second operand) and the destination operand (first operand). See Figure 4-17. The source operand can be an XMM register or a 128-bit memory location; the destination operand is an XMM register.

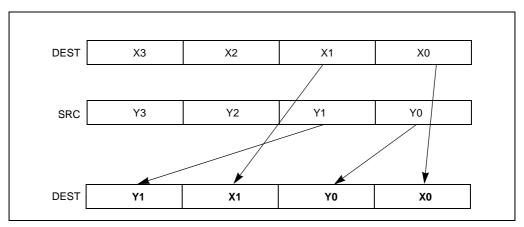


Figure 4-17. UNPCKLPS Instruction Low Unpack and Interleave Operation

When unpacking from a memory operand, an implementation may fetch only the appropriate 64 bits; however, alignment to 16-byte boundary and normal segment checking will still be enforced.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).



Operation

DEST[31:0] ← DEST[31:0]; DEST[63:32] ← SRC[31:0]; DEST[95:64] ← DEST[63:32]; DEST[127:96] ← SRC[63:32];

Intel C/C++ Compiler Intrinsic Equivalent

UNPCKLPS __m128 _mm_unpacklo_ps(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



VERR/VERW—Verify a Segment for Reading or Writing

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 00 /4	VERR r/m16	Valid	Valid	Set ZF=1 if segment specified with <i>r/m16</i> can be read.
0F 00 /5	VERW r/m16	Valid	Valid	Set ZF=1 if segment specified with <i>r/m16</i> can be written.

Description

Verifies whether the code or data segment specified with the source operand is readable (VERR) or writable (VERW) from the current privilege level (CPL). The source operand is a 16-bit register or a memory location that contains the segment selector for the segment to be verified. If the segment is accessible and readable (VERR) or writable (VERW), the ZF flag is set; otherwise, the ZF flag is cleared. Code segments are never verified as writable. This check cannot be performed on system segments.

To set the ZF flag, the following conditions must be met:

- The segment selector is not NULL.
- The selector must denote a descriptor within the bounds of the descriptor table (GDT or LDT).
- The selector must denote the descriptor of a code or data segment (not that of a system segment or gate).
- For the VERR instruction, the segment must be readable.
- For the VERW instruction, the segment must be a writable data segment.
- If the segment is not a conforming code segment, the segment's DPL must be greater than or equal to (have less or the same privilege as) both the CPL and the segment selector's RPL.

The validation performed is the same as is performed when a segment selector is loaded into the DS, ES, FS, or GS register, and the indicated access (read or write) is performed. The segment selector's value cannot result in a protection exception, enabling the software to anticipate possible segment access problems.

This instruction's operation is the same in non-64-bit modes and 64-bit mode. The operand size is fixed at 16 bits.



Operation

```
\begin{split} & \text{IF SRC(Offset)} > (\text{GDTR(Limit) or (LDTR(Limit))} \\ & \text{THEN ZF} \leftarrow 0; \text{FI;} \\ & \text{Read segment descriptor;} \\ & \text{IF SegmentDescriptor(DescriptorType)} = 0 \ (* \text{ System segment *}) \\ & \text{or (SegmentDescriptor(Type)} \neq \text{conforming code segment)} \\ & \text{and (CPL} > \text{DPL) or (RPL} > \text{DPL)} \\ & \text{THEN} \\ & \text{ZF} \leftarrow 0; \\ & \text{ELSE} \\ & \text{IF ((Instruction} = \text{VERR) and (Segment readable))} \\ & \text{or ((Instruction} = \text{VERW)) and (Segment writable))} \\ & \text{THEN} \\ & \text{ZF} \leftarrow 1; \\ & \text{FI;} \\ & \text{FI;} \\ \end{split}
```

Flags Affected

The ZF flag is set to 1 if the segment is accessible and readable (VERR) or writable (VERW); otherwise, it is set to 0.

Protected Mode Exceptions

The only exceptions generated for these instructions are those related to illegal addressing of the source operand.

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register is used to access memory and it contains

a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#UD The VERR and VERW instructions are not recognized in real-address

mode.

Virtual-8086 Mode Exceptions

#UD The VERR and VERW instructions are not recognized in virtual-8086

mode.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



WAIT/FWAIT—Wait

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
9B	WAIT	Valid	Valid	Check pending unmasked floating- point exceptions.
9B	FWAIT	Valid	Valid	Check pending unmasked floating- point exceptions.

Description

Causes the processor to check for and handle pending, unmasked, floating-point exceptions before proceeding. (FWAIT is an alternate mnemonic for WAIT.)

This instruction is useful for synchronizing exceptions in critical sections of code. Coding a WAIT instruction after a floating-point instruction insures that any unmasked floating-point exceptions the instruction may raise are handled before the processor can modify the instruction's results. See the section titled "Floating-Point Exception Synchronization" in Chapter 8 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 1*, for more information on using the WAIT/FWAIT instruction.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

Operation

CheckForPendingUnmaskedFloatingPointExceptions;

FPU Flags Affected

The C0, C1, C2, and C3 flags are undefined.

Floating-Point Exceptions

None.

Protected Mode Exceptions

#NM If CR0.MP[bit 1] = 1 and CR0.TS[bit 3] = 1.

Real-Address Mode Exceptions

#NM If CR0.MP[bit 1] = 1 and CR0.TS[bit 3] = 1.

Virtual-8086 Mode Exceptions

#NM If CR0.MP[bit 1] = 1 and CR0.TS[bit 3] = 1.

INSTRUCTION SET REFERENCE, N-Z



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



WBINVD—Write Back and Invalidate Cache

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 09	WBINVD	Valid	Valid	Write back and flush Internal caches; initiate writing-back and flushing of external caches.

Description

Writes back all modified cache lines in the processor's internal cache to main memory and invalidates (flushes) the internal caches. The instruction then issues a special-function bus cycle that directs external caches to also write back modified data and another bus cycle to indicate that the external caches should be invalidated.

After executing this instruction, the processor does not wait for the external caches to complete their write-back and flushing operations before proceeding with instruction execution. It is the responsibility of hardware to respond to the cache write-back and flush signals.

The WBINVD instruction is a privileged instruction. When the processor is running in protected mode, the CPL of a program or procedure must be 0 to execute this instruction. This instruction is also a serializing instruction (see "Serializing Instructions" in Chapter 8 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*).

In situations where cache coherency with main memory is not a concern, software can use the INVD instruction.

This instruction's operation is the same in non-64-bit modes and 64-bit mode.

IA-32 Architecture Compatibility

The WBINVD instruction is implementation dependent, and its function may be implemented differently on future IA-32 processors. The instruction is not supported on IA-32 processors earlier than the Intel486 processor.

Operation

WriteBack(InternalCaches); Flush(InternalCaches); SignalWriteBack(ExternalCaches); SignalFlush(ExternalCaches); Continue; (* Continue execution *)

Flags Affected

None.



Protected Mode Exceptions

#GP(0) If the current privilege level is not 0.

Real-Address Mode Exceptions

None.

Virtual-8086 Mode Exceptions

#GP(0) The WBINVD instruction cannot be executed at the virtual-8086 mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



	WRMSR-	-Write to	Model S	pecific	Register
--	--------	-----------	---------	---------	----------

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 30	WRMSR	Valid	Valid	Write the value in EDX:EAX to MSR specified by ECX.
REX.W + 0F 30	WRMSR	Valid	N.E.	Write the value in RDX[31:0]: RAX[31:0] to MSR specified by RCX.

Description

In legacy and compatibility mode, writes the contents of registers EDX:EAX into the 64-bit model specific register (MSR) specified by the ECX register. The value loaded into the ECX register is the address of the MSR. The contents of the EDX register are copied to high-order 32 bits of the selected MSR and the contents of the EAX register are copied to low-order 32 bits of the MSR. Undefined or reserved bits in an MSR should be set to values previously read.

This instruction must be executed at privilege level 0 or in real-address mode; otherwise, a general protection exception #GP(0) is generated. Specifying a reserved or unimplemented MSR address in ECX will also cause a general protection exception. The processor may also generate a general protection exception if software attempts to write to bits in a reserved MSR.

When the WRMSR instruction is used to write to an MTRR, the TLBs are invalidated. This includes global entries (see "Translation Lookaside Buffers (TLBs)" in Chapter 3 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*).

MSRs control functions for testability, execution tracing, performance-monitoring and machine check errors. Appendix B, *Model-Specific Registers (MSRs)*, in the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*, lists all MSRs that can be read with this instruction and their addresses. Note that each processor family has its own set of MSRs.

The WRMSR instruction is a serializing instruction (see "Serializing Instructions" in Chapter 8 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*).

The CPUID instruction should be used to determine whether MSRs are supported (EDX[5]=1) before using this instruction.

In 64-bit mode, operation is the same as legacy mode, except that targeted registers are updated by MSR[63:32] = RDX[31:0], MSR[31:0] = RAX[31:0].

IA-32 Architecture Compatibility

The MSRs and the ability to read them with the WRMSR instruction were introduced into the IA-32 architecture with the Pentium processor. Execution of this instruction by an IA-32 processor earlier than the Pentium processor results in an invalid opcode exception #UD.



Operation

```
IF 64-Blt Mode and REX.W used
THEN
MSR[RCX] ← RDX:RAX;
ELSE IF (Non-64-Bit Modes or Default 64-Bit Mode)
MSR[ECX] ← EDX:EAX; FI;
FI;
```

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If the current privilege level is not 0.

If the value in ECX specifies a reserved or unimplemented MSR address.

Real-Address Mode Exceptions

#GP If the value in ECX specifies a reserved or unimplemented MSR address.

Virtual-8086 Mode Exceptions

#GP(0) The WRMSR instruction is not recognized in virtual-8086 mode.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

Same exceptions as in Protected Mode.



XADD—Exchange and Add

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F C0 /r	XADD r/m8, r8	Valid	Valid	Exchange <i>r8</i> and <i>r/m8</i> ; load sum into <i>r/m8</i> .
REX + 0F C0 /r	XADD r/m8*, r8*	Valid	N.E.	Exchange <i>r8</i> and <i>r/m8</i> ; load sum into <i>r/m8</i> .
0F C1 /r	XADD r/m16, r16	Valid	Valid	Exchange <i>r16</i> and <i>r/m16</i> ; load sum into <i>r/m16</i> .
0F C1 /r	XADD r/m32, r32	Valid	Valid	Exchange <i>r32</i> and <i>r/m32</i> ; load sum into <i>r/m32</i> .
REX.W + 0F C1 /r	XADD <i>r/m64, r64</i>	Valid	N.E.	Exchange <i>r64</i> and <i>r/m64</i> ; load sum into <i>r/m64</i> .

NOTES:

Description

Exchanges the first operand (destination operand) with the second operand (source operand), then loads the sum of the two values into the destination operand. The destination operand can be a register or a memory location; the source operand is a register.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

IA-32 Architecture Compatibility

IA-32 processors earlier than the Intel486 processor do not recognize this instruction. If this instruction is used, you should provide an equivalent code sequence that runs on earlier processors.

Operation

TEMP \leftarrow SRC + DEST; SRC \leftarrow DEST; DEST \leftarrow TEMP;

Flags Affected

The CF, PF, AF, SF, ZF, and OF flags are set according to the result of the addition, which is stored in the destination operand.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



Protected Mode Exceptions

#GP(0) If the destination is located in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



XCHG—Exchange Register/Memory with Register

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
90+ <i>rw</i>	XCHG AX, 16	Valid	Valid	Exchange <i>r16</i> with AX.
90+ <i>rw</i>	XCHG <i>r16</i> , X	Valid	Valid	Exchange AX with r16.
90+ <i>rd</i>	XCHG EAX, r32	Valid	Valid	Exchange r32 with EAX.
REX.W + 90+rd	XCHG RAX, r64	Valid	N.E.	Exchange r64 with RAX.
90+ <i>rd</i>	XCHG r32, EAX	Valid	Valid	Exchange EAX with r32.
REX.W + 90+rd	XCHG r64, RAX	Valid	N.E.	Exchange RAX with r64.
86 /r	XCHG r/m8, r8	Valid	Valid	Exchange <i>r8</i> (byte register) with byte from <i>r/m8</i> .
REX + 86 /r	XCHG <i>r/m8*, r8*</i>	Valid	N.E.	Exchange <i>r8</i> (byte register) with byte from <i>r/m8</i> .
86 /r	XCHG r8, r/m8	Valid	Valid	Exchange byte from <i>r/m8</i> with <i>r8</i> (byte register).
REX + 86 /r	XCHG r8*, r/m8*	Valid	N.E.	Exchange byte from <i>r/m8</i> with <i>r8</i> (byte register).
87 /r	XCHG r/m16, r16	Valid	Valid	Exchange <i>r16</i> with word from <i>r/m16</i> .
87 /r	XCHG r16, r/m16	Valid	Valid	Exchange word from <i>r/m16</i> with <i>r16</i> .
87 /r	XCHG r/m32, r32	Valid	Valid	Exchange <i>r</i> 32 with doubleword from <i>r/m</i> 32.
REX.W + 87 /r	XCHG r/m64, r64	Valid	N.E.	Exchange <i>r64</i> with quadword from <i>r/m64</i> .
87 /r	XCHG r32, r/m32	Valid	Valid	Exchange doubleword from <i>r/m32</i> with <i>r32</i> .
REX.W + 87 /r	XCHG r64, r/m64	Valid	N.E.	Exchange quadword from <i>r/m64</i> with <i>r64</i> .

NOTES:

Description

Exchanges the contents of the destination (first) and source (second) operands. The operands can be two general-purpose registers or a register and a memory location. If a memory operand is referenced, the processor's locking protocol is automatically implemented for the duration of the exchange operation, regardless of the presence or absence of the LOCK prefix or of the value of the IOPL. (See the LOCK prefix description in this chapter for more information on the locking protocol.)

This instruction is useful for implementing semaphores or similar data structures for process synchronization. (See "Bus Locking" in Chapter 7 of the *IA-32 Intel Architecture Software Developer's Manual, Volume 3*, for more information on bus locking.)

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



The XCHG instruction can also be used instead of the BSWAP instruction for 16-bit operands.

In 64-bit mode, the instruction's default operation size is 32 bits. Using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

Operation

TEMP \leftarrow DEST; DEST \leftarrow SRC; SRC \leftarrow TEMP;

Flags Affected

None.

Protected Mode Exceptions

#GP(0) If either operand is in a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



XLAT/XLATB—Table Look-up Translation

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
D7	XLAT m8	Valid	Valid	Set AL to memory byte DS:[(E)BX + unsigned AL].
D7	XLATB	Valid	Valid	Set AL to memory byte DS:[(E)BX + unsigned AL].
REX.W + D7	XLATB	Valid	N.E.	Set AL to memory byte [RBX + unsigned AL].

Description

Locates a byte entry in a table in memory, using the contents of the AL register as a table index, then copies the contents of the table entry back into the AL register. The index in the AL register is treated as an unsigned integer. The XLAT and XLATB instructions get the base address of the table in memory from either the DS:EBX or the DS:BX registers (depending on the address-size attribute of the instruction, 32 or 16, respectively). (The DS segment may be overridden with a segment override prefix.)

At the assembly-code level, two forms of this instruction are allowed: the "explicit-operand" form and the "no-operand" form. The explicit-operand form (specified with the XLAT mnemonic) allows the base address of the table to be specified explicitly with a symbol. This explicit-operands form is provided to allow documentation; however, note that the documentation provided by this form can be misleading. That is, the symbol does not have to specify the correct base address. The base address is always specified by the DS:(E)BX registers, which must be loaded correctly before the XLAT instruction is executed.

The no-operands form (XLATB) provides a "short form" of the XLAT instructions. Here also the processor assumes that the DS:(E)BX registers contain the base address of the table.

In 64-bit mode, operation is similar to that in legacy or compatibility mode. AL is used to specify the table index (the operand size is fixed at 8 bits). RBX, however, is used to specify the table's base address. See the summary chart at the beginning of this section for encoding data and limits.

Operation

```
\begin{split} \text{IF AddressSize} &= 16 \\ \text{THEN} \\ &\quad \text{AL} \leftarrow (\text{DS:BX} + \text{ZeroExtend(AL)}); \\ \text{ELSE IF (AddressSize} &= 32) \\ &\quad \text{AL} \leftarrow (\text{DS:EBX} + \text{ZeroExtend(AL)}); \text{FI;} \\ \text{ELSE (AddressSize} &= 64) \\ &\quad \text{AL} \leftarrow (\text{RBX} + \text{ZeroExtend(AL)}); \\ \text{FI:} \end{split}
```



Flags Affected

None.

Protected Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.



XOR—Logical Exclusive OR

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
34 <i>ib</i>	XOR AL, imm8	Valid	Valid	AL XOR imm8.
35 <i>iw</i>	XOR AX, imm16	Valid	Valid	AX XOR imm16.
35 id	XOR EAX, imm32	Valid	Valid	EAX XOR imm32.
REX.W + 35 id	XOR RAX, imm32	Valid	N.E.	RAX XOR imm32 (sign- extended).
80 /6 ib	XOR r/m8, imm8	Valid	Valid	r/m8 XOR imm8.
REX + 80 /6 ib	XOR r/m8*, imm8	Valid	N.E.	r/m8 XOR imm8.
81 /6 <i>iw</i>	XOR r/m16, imm16	Valid	Valid	r/m16 XOR imm16.
81 /6 <i>id</i>	XOR r/m32, imm32	Valid	Valid	r/m32 XOR imm32.
REX.W + 81 /6 id	XOR r/m64, imm32	Valid	N.E.	r/m64 XOR imm32 (sign- extended).
83 /6 ib	XOR r/m16, imm8	Valid	Valid	r/m16 XOR imm8 (sign- extended).
83 /6 <i>ib</i>	XOR r/m32, imm8	Valid	Valid	r/m32 XOR imm8 (sign- extended).
REX.W + 83 /6 ib	XOR r/m64, imm8	Valid	N.E.	r/m64 XOR imm8 (sign- extended).
30 /r	XOR r/m8, r8	Valid	Valid	r/m8 XOR r8.
REX + 30 /r	XOR r/m8*, r8*	Valid	N.E.	r/m8 XOR r8.
31 /r	XOR r/m16, r16	Valid	Valid	r/m16 XOR r16.
31 /r	XOR r/m32, r32	Valid	Valid	r/m32 XOR r32.
REX.W + 31 /r	XOR r/m64, r64	Valid	N.E.	r/m64 XOR r64.
32 /r	XOR r8, r/m8	Valid	Valid	r8 XOR r/m8.
REX + 32 /r	XOR r8*, r/m8*	Valid	N.E.	r8 XOR r/m8.
33 /r	XOR r16, r/m16	Valid	Valid	r16 XOR r/m16.
33 /r	XOR r32, r/m32	Valid	Valid	r32 XOR r/m32.
REX.W + 33 /r	XOR r64, r/m64	Valid	N.E.	r64 XOR r/m64.

NOTES:

Description

Performs a bitwise exclusive OR (XOR) operation on the destination (first) and source (second) operands and stores the result in the destination operand location. The source operand can be an immediate, a register, or a memory location; the destination operand can be a register or a memory location. (However, two memory operands cannot be used in one instruction.) Each bit of the result is 1 if the corresponding bits of the operands are different; each bit is 0 if the corresponding bits are the same.

^{*} In 64-bit mode, r/m8 can not be encoded to access the following byte registers if an REX prefix is used: AH, BH, CH, DH.



This instruction can be used with a LOCK prefix to allow the instruction to be executed atomically.

In 64-bit mode, using an REX prefix in the form of REX.R permits access to additional registers (R8-R15). Using an REX prefix in the form of REX.W promotes operation to 64 bits. See the summary chart at the beginning of this section for encoding data and limits.

Operation

DEST ← DEST XOR SRC:

Flags Affected

The OF and CF flags are cleared; the SF, ZF, and PF flags are set according to the result. The state of the AF flag is undefined.

Protected Mode Exceptions

#GP(0) If the destination operand points to a non-writable segment.

If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

If the DS, ES, FS, or GS register contains a NULL segment selector.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.

Real-Address Mode Exceptions

#GP If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS If a memory operand effective address is outside the SS segment limit.

Virtual-8086 Mode Exceptions

#GP(0) If a memory operand effective address is outside the CS, DS, ES, FS, or

GS segment limit.

#SS(0) If a memory operand effective address is outside the SS segment limit.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made.



Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

#PF(fault-code) If a page fault occurs.

#AC(0) If alignment checking is enabled and an unaligned memory reference is

made while the current privilege level is 3.



XORPD—Bitwise Logical XOR for Double-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
66 0F 57 /r	XORPD xmm1, xmm2/m128	Valid	Valid	Bitwise exclusive-OR of xmm2/m128 and xmm1.

Description

Performs a bitwise logical exclusive-OR of the two packed double-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[127:0] \leftarrow DEST[127:0] BitwiseXOR SRC[127:0];

Intel C/C++ Compiler Intrinsic Equivalent

XORPD __m128d _mm_xor_pd(__m128d a, __m128d b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE2[bit 26] = 0.



XORPS—Bitwise Logical XOR for Single-Precision Floating-Point Values

Opcode	Instruction	64-Bit Mode	Compat/ Leg Mode	Description
0F 57 /r	XORPS xmm1, xmm2/m128	Valid	Valid	Bitwise exclusive-OR of xmm2/m128 and xmm1.

Description

Performs a bitwise logical exclusive-OR of the four packed single-precision floating-point values from the source operand (second operand) and the destination operand (first operand), and stores the result in the destination operand. The source operand can be an XMM register or a 128-bit memory location. The destination operand is an XMM register.

In 64-bit mode, using an REX prefix in the form of REX.R permits this instruction to access additional registers (XMM8-XMM15).

Operation

DEST[127:0] \leftarrow DEST[127:0] BitwiseXOR SRC[127:0];

Intel C/C++ Compiler Intrinsic Equivalent

XORPS __m128 _mm_xor_ps(__m128 a, __m128 b)

SIMD Floating-Point Exceptions

None.

Protected Mode Exceptions

#GP(0) For an illegal memory operand effective address in the CS, DS, ES, FS or

GS segments.

If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#SS(0) For an illegal address in the SS segment.

#PF(fault-code) For a page fault. #NM If CR0.TS[bit 3] = 1.

#UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.



Real-Address Mode Exceptions

#GP(0) If a memory operand is not aligned on a 16-byte boundary, regardless of

segment.

If any part of the operand lies outside the effective address space from 0

to FFFFH.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

Virtual-8086 Mode Exceptions

Same exceptions as in Real Address Mode

#PF(fault-code) For a page fault.

Compatibility Mode Exceptions

Same exceptions as in Protected Mode.

64-Bit Mode Exceptions

#SS(0) If a memory address referencing the SS segment is in a non-canonical

form.

#GP(0) If the memory address is in a non-canonical form.

If memory operand is not aligned on a 16-byte boundary, regardless of

segment.

#PF(fault-code) For a page fault.

#NM If CR0.TS[bit 3] = 1. #UD If CR0.EM[bit 2] = 1.

If CR4.OSFXSR[bit 9] = 0.

If CPUID.01H:EDX.SSE[bit 25] = 0.

A

Opcode Map



APPENDIX A OPCODE MAP

Opcode tables in this appendix are provided to aid in interpreting IA-32 object code. Instructions are divided into three encoding groups: 1-byte opcode encoding, 2-byte opcode encoding, and escape (floating-point) encoding.

One and 2-byte opcode encoding is used to encode integer, system, MMX technology, and SSE/SSE2/SSE3 instructions. The opcode maps for these instructions are given in Table A-2 through Table A-7. Each opcode map consists of two parts. For example, one-byte opcode maps includes two tables: Table A-2 covers instruction and operands in non-IA-32e mode and compatibility mode (referred to as non-64-bit modes); Table A-2 covers one-byte opcode map for 64-bit mode. Section A.3.1, "One-Byte Opcode Instructions" through Section A.3.4, "Opcode Extensions for One-Byte and Two-Byte Opcodes" give instructions for interpreting 1- and 2-byte opcode maps.

Escape encoding is used to encode floating-point instructions. The opcode maps for these instructions are in Table A-8 through Table A-23. Section A.3.5, "Escape Opcode Instructions" provides instructions for interpreting the escape opcode maps.

NOTE

All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

A.1 NOTES ON USING OPCODE TABLES

Tables in this appendix define a primary opcode (including instruction prefix where appropriate) and the ModR/M byte. Blank cells in the tables indicate opcodes that are reserved or undefined. Use the four high-order bits of the primary opcode as an index to a row of the opcode table; use the four low-order bits as an index to a column of the table. If the first byte of the primary opcode is 0FH, or 0FH is preceded by either 66H, F2H, F3H; refer to the 2-byte opcode table and use the second byte of the opcode to index the rows and columns of that table.

When the ModR/M byte includes opcode extensions, this indicates that the instructions are an instruction group in Table A-2, Table A-4. More information about opcode extensions in the ModR/M byte are covered in Table A-6.

The escape (ESC) opcode tables for floating-point instructions identify the eight high-order bits of the opcode at the top of each page. If the accompanying ModR/M byte is in the range 00H through BFH, bits 3-5 (along the top row of the third table on each page), along with the REG bits of the ModR/M, determine the opcode. ModR/M bytes outside the range 00H-BFH are mapped by the bottom two tables on each page.



Refer to Chapter 2 in *IA-32 Intel Architecture Software Developer's Manual, Volume 2A* for more information on the ModR/M byte, register values, and addressing forms.

A.2 KEY TO ABBREVIATIONS

Operands are identified by a two-character code of the form Zz. The first character (Z) specifies the addressing method; the second character (z) specifies the type of operand.

A.2.1 Codes for Addressing Method

The following abbreviations are used for addressing methods:

- A Direct address. The instruction has no ModR/M byte; the address of the operand is encoded in the instruction; no base register, index register, or scaling factor can be applied (for example, far JMP (EA)).
- C The reg field of the ModR/M byte selects a control register (for example, MOV (0F20, 0F22)).
- D The reg field of the ModR/M byte selects a debug register (for example, MOV (0F21,0F23)).
- E A ModR/M byte follows the opcode and specifies the operand. The operand is either a general-purpose register or a memory address. If it is a memory address, the address is computed from a segment register and any of the following values: a base register, an index register, a scaling factor, or a displacement.
- F EFLAGS register.
- G The reg field of the ModR/M byte selects a general register (for example, AX (000)).
- I Immediate data. The operand value is encoded in subsequent bytes of the instruction.
- J The instruction contains a relative offset to be added to the instruction pointer register (for example, JMP (0E9), LOOP).
- M The ModR/M byte may refer only to memory: mod != 11B (BOUND, LEA, LES, LDS, LSS, LFS, LGS, CMPXCHG8B, LDDQU).
- N The R/M field of the ModR/M byte selects a packed quadword MMX technology register.
- O The instruction has no ModR/M byte; the offset of the operand is coded as a word or double word (depending on address size attribute) in the instruction. No base register, index register, or scaling factor can be applied (for example, MOV (A0–A3)).
- P The reg field of the ModR/M byte selects a packed quadword MMX technology register.
- Q A ModR/M byte follows the opcode and specifies the operand. The operand is either an MMX technology register or a memory address. If it is a memory address, the ad-



- dress is computed from a segment register and any of the following values: a base register, an index register, a scaling factor, and a displacement.
- R The mod field of the ModR/M byte may refer only to a general register (for example, MOV (0F20-0F24, 0F26)).
- S The reg field of the ModR/M byte selects a segment register (for example, MOV (8C,8E)).
- T The reg field of the ModR/M byte selects a test register (for example, MOV (0F24,0F26)).
- U The R/M field of the ModR/M byte selects a 128-bit XMM register.
- V The reg field of the ModR/M byte selects a 128-bit XMM register.
- W A ModR/M byte follows the opcode and specifies the operand. The operand is either a 128-bit XMM register or a memory address. If it is a memory address, the address is computed from a segment register and any of the following values: a base register, an index register, a scaling factor, and a displacement
- X Memory addressed by the DS:(E)SI or by RSI (for example, MOVS, CMPS, OUTS, or LODS). In 64-bit mode, only 64-bit (RSI) and 32-bit (ESI) address sizes are supported. In non-64-bit mode, only 32-bit (ESI) and 16-bit (SI) address sizes are supported.
- Y Memory addressed by the ES:(E)DI or by RDI (for example, MOVS, CMPS, INS, STOS, or SCAS). In 64-bit mode, only 64-bit (RDI) and 32-bit (EDI) address sizes are supported. In non-64-bit mode, only 32-bit (EDI) and 16-bit (DI) address sizes are supported.

A.2.2 Codes for Operand Type

The following abbreviations are used for operand types:

- a Two one-word operands in memory or two double-word operands in memory, depending on operand-size attribute (used only by the BOUND instruction).
- b Byte, regardless of operand-size attribute.
- bsq Byte, sign-extended to 64 bits.
- bss Byte, sign-extended to the size of stack pointer.
- c Byte or word, depending on operand-size attribute.
- d Doubleword, regardless of operand-size attribute.
- dq Double-quadword, regardless of operand-size attribute.
- ds Doubleword, sign-extended to 64 bits.
- p 32-bit or 48-bit pointer, depending on operand-size attribute.
- pi Quadword MMX technology register (for example, mm0)



- pd 128-bit packed double-precision floating-point data
- ps 128-bit packed single-precision floating-point data.
- pt 80-bit far pointer.
- q Quadword, regardless of operand-size attribute.
- qp Quadword, promoted by REX.W.
- s 6-byte pseudo-descriptor.
- sd Scalar element of a 128-bit packed double-precision floating data.
- ss Scalar element of a 128-bit packed single-precision floating data.
- si Doubleword integer register (e.g., eax)
- t 10-byte far pointer.
- v Word or doubleword, depending on operand-size attribute.
- vq Quadword (default) or word if 66H is used.
- vs Word or doubleword sign extended to the width of the stack pointer.
- w Word, regardless of operand-size attribute.

A.2.3 Register Codes

When an operand is a specific register encoded in the opcode, the register is identified by its name (for example, AX, CL, or ESI). The name of the register indicates whether the register is 32, 16, or 8 bits wide. A register identifier of the form eXX is used when the width of the register depends on the operand-size attribute. For example, eAX indicates that the AX register is used when the operand-size attribute is 16, and the EAX register is used when the operand-size attribute is 32.

A.3 OPCODE LOOK-UP EXAMPLES

This section provides several examples to demonstrate how the following opcode maps are used.

A.3.1 One-Byte Opcode Instructions

The opcode maps for 1-byte opcodes are shown in Table A-2. Looking at the 1-byte opcode maps, the instruction mnemonic and its operands can be determined from the hexadecimal value of the 1-byte opcode. The opcode map for 1-byte opcodes is arranged by row (the least-significant 4 bits of the hexadecimal value) and column (the most-significant 4 bits of the hexadecimal value). Each entry in the table lists one of the following types of opcodes:

- Instruction mnemonic and operand types using the notations listed in Section A.2.2
- An opcode used as an instruction prefix



For each entry in the opcode map that corresponds to an instruction, the rules for interpreting the next byte following the primary opcode may fall in one of the following cases:

- ModR/M byte is required and is interpreted according to the abbreviations listed in Section
 A.2 and Chapter 2 in *IA-32 Intel Architecture Software Developer's Manual, Volume 2A*.
 The operand types are listed according to the notations listed in Section A.2.2
- ModR/M byte is required and includes an opcode extension in the reg field within the ModR/M byte. Use Table A-6 when interpreting the ModR/M byte.
- The use of the ModR/M byte is reserved or undefined. This applies to entries that represents an instruction prefix or an entry for instruction without operands related to ModR/M (for example: 60H, PUSHA; 06H, PUSH ES).

For example to look up the opcode sequence below:

Opcode: 030500000000H

LSB address					MSB address
03	05	00	00	00	00

Opcode 030500000000H for an ADD instruction can be interpreted from the 1-byte opcode map as follows. The first digit (0) of the opcode indicates the row, and the second digit (3) indicates the column in the opcode map tables. The first operand (type Gv) indicates a general register that is a word or doubleword depending on the operand-size attribute. The second operand (type Ev) indicates that a ModR/M byte follows that specifies whether the operand is a word or doubleword general-purpose register or a memory address. The ModR/M byte for this instruction is 05H, which indicates that a 32-bit displacement follows (00000000H). The reg/opcode portion of the ModR/M byte (bits 3 through 5) is 000, indicating the EAX register. Thus, it can be determined that the instruction for this opcode is ADD EAX, mem_op, and the offset of mem_op is 00000000H.

Some 1- and 2-byte opcodes point to "group" numbers. These group numbers indicate that the instruction uses the reg/opcode bits in the ModR/M byte as an opcode extension (refer to Section A.3.4, "Opcode Extensions for One-Byte and Two-Byte Opcodes").

A.3.2 Two-Byte Opcode Instructions

The two-byte opcode map shown in Table A-4 includes primary opcodes that are either two bytes or three bytes in length. Primary opcodes that are 2 bytes in length begin with an escape opcode 0FH, the upper and lower four bits of the second byte is used as indices to a particular row and column in Table A-4. Two-byte opcodes that are 3 bytes in length begin with a mandatory prefix (66H, F2H, or F3H), the escape opcode, the upper and lower four bits of the third byte is used as indices to a particular row and column in Table A-4. The two-byte escape sequence consists of a mandatory prefix (either 66H, F2H, or F3H), followed by the escape prefix byte 0FH.



For each entry in the opcode map, the rules for interpreting the next byte following the primary opcode may fall in one of the following cases:

- ModR/M byte is required and is interpreted according to the abbreviations listed in Section A.2 and Chapter 2 in *IA-32 Intel Architecture Software Developer's Manual, Volume 2A* for more information on the ModR/M byte, register values, and the various addressing forms. The operand types are listed according to the notations listed in Section A.2.2
- ModR/M byte is required and includes an opcode extension in the reg field within the ModR/M byte. Use Table A-6 when interpreting the ModR/M byte.
- The use of the ModR/M byte is reserved or undefined. This applies to entries that represents an instruction without operands encoded via ModR/M (e.g. 0F77H, EMMS).

For example, the opcode 0FA4050000000003H is located on the two-byte opcode map in row A, column 4. This opcode indicates a SHLD instruction with the operands Ev, Gv, and Ib. These operands are defined as follows:

- Ev The ModR/M byte follows the opcode to specify a word or doubleword operand
- Gv The reg field of the ModR/M byte selects a general-purpose register
- Ib Immediate data is encoded in the subsequent byte of the instruction.

The third byte is the ModR/M byte (05H). The mod and opcode/reg fields indicate that a 32-bit displacement follows, located in the EAX register, and is the source.

The next part of the opcode is the 32-bit displacement for the destination memory operand (00000000H), and finally the immediate byte representing the count of the shift (03H).

By this breakdown, it has been shown that this opcode represents the instruction:

```
SHLD DS:00000000H, EAX, 3
```

The next part of the SHLD opcode is the 32-bit displacement for the destination memory operand (00000000H), which is followed by the immediate byte representing the count of the shift (03H). By this breakdown, it has been shown that the opcode 0FA4050000000003H represents the instruction:

```
SHLD DS:00000000H, EAX, 3.
```

Lower case is used in the following tables to highlight the mnemonics added by MMX technology, SSE, and SSE2 instructions.

A.3.3 Opcode Map Notes

Table A-1 contains notes on particular encodings in the opcode map tables. These notes are indicated in the following Opcode Maps (Tables A-2 and A-7) by superscripts.

For the One-byte Opcode Maps (Table A-2 and Table A-3) shading indicates instruction groupings.



Table A-1. Notes on Instruction Encoding in Opcode Map Tables

Symbol	Note
1A	Bits 5, 4, and 3 of ModR/M byte used as an opcode extension (refer to Section A.3.4, "Opcode Extensions for One-Byte and Two-Byte Opcodes").
1B	Use the 0F0B opcode (UD2 instruction) or the 0FB9H opcode when deliberately trying to generate an invalid opcode exception (#UD).
1C	Some instructions added in the Pentium III processor may use the same two-byte opcode. If the instruction has variations, or the opcode represents different instructions, the ModR/M byte will be used to differentiate the instruction. For the value of the ModR/M byte needed to completely decode the instruction, see Table A-6. (These instructions include SFENCE, STMXCSR, LDMXCSR, FXRSTOR, and FXSAVE, as well as PREFETCH and its variations.)
1D	The instruction represented by this opcode expression does not have a ModR/M byte following the primary opcode.
1E	Valid encoding for the r/m field of the ModR/M byte is shown in parenthesis.
1F	The instruction represented by this opcode expression does not support both source and destination operands to be registers.
1G	When the source operand is a register, it must be an XMM register.
1H	The instruction represented by this opcode expression does not support any operand to be a memory location.
1J	The instruction represented by this opcode expression does not support register operand.
1K	Valid encoding for the reg/opcode field of the ModR/M byte is shown in parenthesis.
1L	The address-size attribute of the instruction determines the size of the offset to be 16, 32, or 64 bits. 64 bit offset applies to 64-bit mode only.
1M	In 64-bit mode, uniform byte register addressing applies to register encoding (AH, CH, DH, BH is no longer addressable) when REX.R is used.
1N	In 64-bit mode, 32 bit operand is not encodable or 16 bit operand is not supported because 66H prefix results in implementation-specific behavior.
1P	In 64-bit mode, default operand size is 64 bits; 32 bit operand is not encodable;16 bit operand is supported using 66H prefix.
1Q	In 64-bit mode, use of REX.W selects 64-bit target address.



Table A-2. One-Byte Opcode Map for Non-64-Bit Modes[†]

	0	1	2	3	4	5	6	7
0		l	A	DD	1	l	PUSH	POP
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}	ES ^{1D}	ES ^{1D}
1			A	DC			PUSH	POP
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}	SS ^{1D}	SS ^{1D}
2			A	ND			SEG=ES	DAA ^{1D}
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}	Prefix	
3			Х	OR			SEG=SS	AAA ^{1D}
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}	Prefix	
4				INC gene	ral register			
	eAX ^{1D}	eCX ^{1D}	eDX ^{1D}	eBX ^{1D}	eSP ^{1D}	eBP ^{1D}	eSI ^{1D}	eDI ^{1D}
5				PUSH gene	ral register ^{1D}			
	eAX	eCX	eDX	eBX	eSP	eBP	eSI	eDI
6	PUSHA/ PUSHAD ^{1D}	POPA/ POPAD ^{1D}	BOUND Gv, Ma	ARPL Ew, Gw	SEG=FS Prefix	SEG=GS Prefix	Opd Size Prefix	Addr Size Prefix
7			Jcc, Jb	- Short-displace	ement jump on	condition		1
	O ^{1D}	NO ^{1D}	B/NAE/C ^{1D}	NB/AE/NC ^{1D}		NZ/NE ^{1D}	BE/NA ^{1D}	NBE/A ^{1D}
8		Immedia	ate Grp 1 ^{1A}	1	T	EST	X	CHG
	Eb, Ib	Ev, Iv	Eb, lb	Ev, Ib	Eb, Gb	Ev, Gv	Eb, Gb	Ev, Gv
9	NOP ^{1D}		1	XCHG word or	double-word re	gister with eAX ¹	D	
		eCX	eDX	eBX	eSP	eBP	eSI	eDI
Α		MO	V1D, 1L		MOVS/	MOVS/	CMPS/	CMPS/
	AL, Ob	eAX, Ov	Ob, AL	Ov, eAX	MOVSB Yb, Xb ^{1D}	MOVSW/ MOVSD Yv, Xv ^{1D}	CMPSB Yb, Xb ^{1D}	CMPSW/ CMPSD Xv, Yv ^{1D}
В			MO	V immediate byt	te into byte regi	ster ^{1D}		
	AL	CL	DL	BL	AH	СН	DH	ВН
С	Shift Grp 2 ^{1A}	1	RET	RET ^{1D}	LES	LDS	Grp 11	^{1A} - MOV
	Eb, lb	Ev, Ib	lw ^{1D}		Gv, Mp	Gv, Mp	Eb, lb	Ev, Iv
D		Shift	Grp 2 ^{1A}	1	AAM	AAD		XLAT/
	Eb, 1	Ev, 1	Eb, CL	Ev, CL	lb ^{1D}	lb ^{1D}		XLATB ^{1D}
Е	LOOPNE/	LOOPE/	LOOP	JCXZ/		IN	C	UT
	LOOPNZ Jb ^{1D}	LOOPZ Jb ^{1D}	Jb ^{1D}	JECXZ Jb ^{1D}	AL, Ib ^{1D}	eAX, Ib ^{1D}	Ib, AL ^{1D}	Ib, eAX ^{1D}
F	LOCK		REPNE	REP/	HLT ^{1D}	CMC ^{1D}	Unary	Grp 3 ^{1A}
	Prefix		Prefix	REPE Prefix			Eb	Ev



Table A-2. One-Byte Opcode Map for Non-64-Bit Modes[†] (Contd.)

			Byte ope				(Oonta.)	·
	8	9	Α	В	С	D	Е	F
0	Eb, Gb	Ev, Gv	Gb, Eb	OR Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}	PUSH CS ^{1D}	Escape opcode to 2-byte
1	F. 0.	l- o	1	SBB	I 1D	I .v 1D	PUSH DS ^{1D}	POP DS ^{1D}
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}		
2		Í	1	SUB	1	1	SEG=CS Prefix	DAS ^{1D}
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}		
3		•		CMP			SEG=DS Prefix	AAS ^{1D}
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	AL, Ib ^{1D}	eAX, Iv ^{1D}	Pielix	
4				DEC gen	eral register			
	eAX ^{1D}	eCX ^{1D}	eDX ^{1D}	eBX ^{1D}	eSP ^{1D}	eBP ^{1D}	eSI ^{1D}	eDI ^{1D}
5		-		POP into ger	neral register1[)		
	eAX	eCX	eDX	eBX	eSP	eBP	eSI	eDI
6	PUSH Iv ^{1D}	IMUL Gv, Ev, Iv	PUSH Ib ^{1D}	IMUL Gv, Ev, Ib	INS/ INSB Yb, DX ^{1D}	INS/INSW/ INSD Yv, DX ^{1D}	OUTS/ OUTSB DX, Xb ^{1D}	OUTS/ OUTSW/ OUTSD DX, Xv ^{1D}
7			Jcc,	Jb- Short displace	ement jump on	condition		•
	S ^{1D}	NS ^{1D}	P/PE ^{1D}	NP/PO ^{1D}	L/NGE ^{1D}	NL/GE ^{1D}	LE/NG ^{1D}	NLE/G ^{1D}
8			MOV	MOV		LEA	MOV	POP
	Eb, Gb	Ev, Gv	Gb, Eb	Gv, Ev	Ew, Sw	Gv, M	Sw, Ew	Ev
9	CBW/ CWDE ^{1D}	CWD/ CDQ ^{1D}	CALLF Ap ^{1D}	FWAIT/ WAIT ^{1D}	PUSHF/ PUSHFD Fv ^{1D}	POPF/ POPFD Fv ^{1D}	SAHF ^{1D}	LAHF ^{1D}
Α	T	EST ^{1D}	STOS/	STOS/	LODS/	LODS/	SCAS/	SCAS/
	AL, Ib	eAX, Iv	STOSB Yb, AL ^{1D}	STOSW/ STOSD Yv, eAX ^{1D}	LODSB AL, Xb ^{1D}	LODSW/ LODSD eAX, Xv ^{1D}	SCASB AL, Yb ^{1D}	SCASW/ SCASD eAX, Yv ^{1D}
В			MOV immedi	ate word or doub	le into word or	double register ¹¹	D	· L
	eAX	eCX	eDX	eBX	eSP	eBP	eSI	eDI
С	ENTER	LEAVE ^{1D}	RETF	RETF ^{1D}	INT 3 ^{1D}	INT	INTO ^{1D}	IRET ^{1D}
	Iw, Ib ^{1D}		lw ^{1D}			lb ^{1D}		
D			ESC	(Escape to copr	ocessor instru	ction set)		
Е	CALL		JMP			IN	(OUT
	Jv ^{1D}	near Jv ^{1D}	far Ap ^{1D}	short Jb ^{1D}	AL, DX ^{1D}	eAX, DX ^{1D}	DX, AL ^{1D}	DX, eAX ^{1D}
F	CLC ^{1D}	STC ^{1D}	CLI ^{1D}	STI ^{1D}	CLD ^{1D}	STD ^{1D}	INC/DEC	INC/DEC
							Grp 4 ^{1A}	Grp 5 ^{1A}
	1		1		1	I .	1	1

NOTES:

[†] To use the table, take the opcode's first Hex character from the row designation and the second character from the column designation. For example: 07H for POP ES. All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



Table A-3. One-Byte Opcode Map for 64-bit Mode[†]

	0	1	2	3	4	5	6	7
0		_	. A	DD		_		
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids		
1			A	DC				
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids		
2			A	ND			SEG=ES	
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids	Prefix	
3			Х	OR		•	SEG=SS	
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids	Prefix	
4			•	REX F	Prefixes	•	•	•
		REX.B	REX.X	REX.XB	REX.R	REXRB	REX.RX	REX.RXB
5			PUSI	word or quadv	vord general reg	ister ^{1D}	•	•
	rAX	rAX	rDX	rBX	rSP	rBP	rSI	rDI
6				MOVSXD Gqp, Eds	SEG=FS Prefix	SEG=GS Prefix	Opd Size Prefix	Addr Size Prefix
7			Jcc, Jb	- Short-displace	ement jump on o	condition		l
	O ^{1D}	NO ^{1D}	B/NAE/C ^{1D}	NB/AE/NC ^{1D}	Z/E ^{1D}	NZ/NE ^{1D}	BE/NA ^{1D}	NBE/A ^{1D}
8		Immedia	te Grp 1 ^{1A}	•	TI	ST	XC	HG
	Eb, lb	Ev, Iv Eqp, Ids	Eb, Ib	Ev, Ib Eqp, Ibsq	Eb, Gb	Ev, Gv Eqp, Gqp	Eb, Gb	Ev, Gv Eqp, Gqp
9	NOP ^{1D}	XC	HG word or dou	ble-word registe	r with eAX (or X	CHG quadword	register with RA	X) ^{1D}
		eCX RCX	eDX RDX	eBX RBX	eSP RSP	eBP RBP	eSI RSI	eDI RDI
Α		MO	/1D, 1L		MOVS/	MOVS/	CMPS/	CMPS/
	AL, Ob	eAX, Ov rAX, Oqp	Ob, AL	Ov, eAX Oqp, rAX	MOVSB Yb, Xb ^{1D}	MOVSW/ MOVSD Yv, Xv ^{1D} Yqp, Xqp ^{1D}	CMPSB Yb, Xb ^{1D}	CMPSW/ CMPSD Xv, Yv ^{1D} Xqp, Yqp ^{1D}
В			MO	V immediate by	te into byte regis	ster ^{1D}		
	AL	CL	DL	BL	AH ^{1M}	CH ^{1M}	DH ^{1M}	BH ^{1M}
С	Shift	Grp 2 ^{1A}	RET	RET ^{1D}			Grp 11 ¹	A - MOV
	Eb, lb	Ev, Ib Eqp, Ib	lw ^{1D}				Eb, Ib	Ev, Iv Eqp, Ids
D		Shift	Grp 2 ^{1A}	•				XLAT/
	Eb, 1	Ev, 1	Eb, CL	Ev, CL				XLATB ^{1D}
E	LOOPNE/	LOOPE/	LOOP	JCXZ/		IN	0	UT
	LOOPNZ Jb ^{1D}	LOOPZ Jb ^{1D}	Jb ^{1D}	JECXZ Jb ^{1D}	AL, Ib ^{1D}	eAX, Ib ^{1D}	lb, AL ^{1D}	lb, eAX ^{1D}
F	LOCK		REPNE	REP/	HLT ^{1D}	CMC ^{1D}	Unary	Grp 3 ^{1A}
	Prefix		Prefix	REPE Prefix			Eb ^{1M}	Ev Eqp



Table A-3. One-Byte Opcode Map for 64-bit Mode[†] (Contd.)

	8	9	A	В	С	D	E	F
0				DR				Escape
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids		opcode to 2- byte
1			S	BB				
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids		
2			S	UB			SEG=CS	
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids	Prefix	
3			С	MP			SEG=DS	
	Eb, Gb	Ev, Gv Eqp, Gqp	Gb, Eb	Gv, Ev Gqp, Eqp	AL, Ib ^{1D}	eAX, Iv ^{1D} rAX, Ids	Prefix	
4				REX F	Prefixes			
	REX.W	REX.WB	REX.WX	REX.WXB	REX.WR	REX.WRB	REX.WRX	REX.WRXB
5			POP ir	nto word or quad	word general re	gister ^{1D}	•	•
	rAX	rCX	rDX	rBX	rSP	rBP	rSI	rDI
6	PUSH lvs ^{1D}	IMUL Gv, Ev, Iv Gqp, Eqp, Ids	PUSH lbss ^{1D}	IMUL Gv, Ev, Ib Gqp, Eqp, Ibs	INS/INSB Yb, DX ^{1D}	INS/INSW/ INSD Yv, DX ^{1D}	OUTS/ OUTSB DX, Xb ^{1D}	OUTS/ OUTSW/ OUTSD DX, Xv ^{1D}
7			Jcc, Jk	o- Short displace	ment jump on c	ondition	-	
	S ^{1D}	NS ^{1D}	P/PE ^{1D}	NP/PO ^{1D}	L/NGE ^{1D}	NL/GE ^{1D}	LE/NG ^{1D}	NLE/G ^{1D}
8		M	OV		MOV Ew, Sw	LEA Gv, M	MOV Sw, Ew	POP
	Eb, Gb ^{1M}	Ev, Gv Eqp, Gqp	Gb, Eb ^{1M}	Gv, Ev Gqp, Eqp	Eqp, Sw	Gqp, M	Sw, Eqp	Evq
9	CBW/ CWDE ^{1D}	CWD/ CDQ ^{1D}		FWAIT/ WAIT ^{1D}	PUSHF/ PUSHFD Fvq ^{1D}	POPF/ POPFD Fvq ^{1D}		
A	AL, Ib	eAX, Iv RAX, Iqp	STOS/ STOSB Yb, AL ^{1D}	STOS/ STOSW/ STOSD/ STOSQ Yv, eAX ^{1D} Yqp, RAX	LODS/ LODSB AL, Xb ^{1D}	LODS/ LODSW/ LODSD/ LODSQ eAX, Xv ^{1D} RAX, Xqp	SCAS/ SCASB AL, Yb ^{1D}	SCAS/ SCASW/ SCASD/ SCASQ eAX, Yv ^{1D} RAX, Yqp
В		MOV immediat	e word, doublev	word or quadwor	d into word, dou	bleword or qua	dword register1D	
	eAX RAX	eCX RCX	eDX RDX	eBX RBX	eSP RSP	eBP RBP	eSI RSI	eDI RDI
С	ENTER	LEAVE ^{1D}	RETF	RETF ^{1D}	INT 3 ^{1D}	INT		IRET ^{1D}
	lw, lb ^{1D}		lw ^{1D}			Ib ^{1D}		
D		· 	ESC	(Escape to copro	ocessor instructi	on set)		·
Е	CALL		JMP	I		N .	0	UT
	Jd ^{1D}	near Jd ^{1D}	-	short Jb ^{1D}	AL, DX ^{1D}	eAX, DX ^{1D}	DX, AL ^{1D}	DX, eAX ^{1D}
F	CLC ^{1D}	STC ^{1D}	CLI ^{1D}	STI ^{1D}	CLD ^{1D}	STD ^{1D}	INC/DEC Grp 4 ^{1A}	INC/DEC Grp 5 ^{1A}

NOTES:

[†] To use the table, take the opcode's first Hex character from the row designation and the second character from the column designation. For example: F9H for STC. All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



Table A-4. Two-Byte Opcode Map for Non-64-Bit Mode (First Byte is 0FH)[†]

	0	1	2	3	4	5	6	7
0	Grp 6 ^{1A}	Grp 7 ^{1A}	LAR Gv, Ew	LSL Gv, Ew			CLTS ^{1D}	
1	MOVUPS Vps, Wps MOVSS (F3) Vss, Wss MOVUPD (66) Vpd, Wpd MOVSD (F2) Vsd, Wsd	MOVUPS Wps, Vps MOVSS (F3) Wss, Vss MOVUPD (66) Wpd, Vpd MOVSD (F2) Wsd, Vsd	MOVLPS Vq. Mq ^{1F} MOVLPD (66) Vq. Mq ^{1F} MOVHLPS Vps, Vps MOVDDUP (F2) Vq. Wq ^{1G} MOVSLDUP (F3) Vps, Wps	MOVLPS Mq, Vq ^{1F} MOVLPD (66) Mq, Vq ^{1F}	UNPCKLPS Vps, Wps UNPCKLPD (66) Vpd, Wpd	UNPCKHPS Vps, Wps UNPCKHPD (66) Vpd, Wpd	MOVHPS Vq, Mq ^{1F} MOVHPD (66) Vq, Mq ^{1F} MOVLHPS Vps, Vps MOVSHDUP (F3) Vps, Wps	MOVHPS Mq, Vps ^{1F} MOVHPD (66) Mq, Vpd ^{1F}
2	MOV Rd, Cd ^{1H}	MOV Rd, Dd ^{1H}	MOV Cd, Rd ^{1H}	MOV Dd, Rd ^{1H}	MOV Rd, Td ^{††}		MOV Td, Rd††	
3	WRMSR ^{1D}	RDTSC ^{1D}	RDMSR ^{1D}	RDPMC ^{1D}	SYSENTER ^{1D}	SYSEXIT ^{1D}		
4		•	CM	IOVcc, (Gv, Ev)	- Conditional M	ove		
	0	NO	B/C/NAE	AE/NB/NC	E/Z	NE/NZ	BE/NA	A/NBE
5	MOVMSKPS Gd, Vps ^{1H} MOVMSKPD (66) Gd, Vpd ^{1H}	SQRTPS Vps, Wps SQRTSS (F3) Vss, Wss SQRTPD (66) Vpd, Wpd SQRTSD (F2) Vsd, Wsd	RSQRTPS Vps, Wps RSQRTSS (F3) Vss, Wss	RCPPS Vps, Wps RCPSS (F3) Vss, Wss	ANDPS Vps, Wps ANDPD (66) Vpd, Wpd	ANDNPS Vps, Wps ANDNPD (66) Vpd, Wpd	ORPS Vps, Wps ORPD (66) Vpd, Wpd	XORPS Vps, Wps XORPD (66) Vpd, Wpd
6	PUNPCKLB W Pq, Qd PUNPCKLB W (66) Vdq, Wdq	PUNPCKLW D Pq, Qd PUNPCKLW D (66) Vdq, Wdq	PUNPCKLDQ Pq, Qd PUNPCKLDQ (66) Vdq, Wdq	PACKSSWB Pq, Qq PACKSSWB (66) Vdq, Wdq	PCMPGTB Pq, Qq PCMPGTB (66) Vdq, Wdq	PCMPGTW Pq, Qq PCMPGTW (66) Vdq, Wdq	PCMPGTD Pq, Qq PCMPGTD (66) Vdq, Wdq	PACKUSWB Pq, Qq PACKUSWB (66) Vdq, Wdq
7	PSHUFW Pq, Qq, lb PSHUFD (66) Vdq, Wdq, lb PSHUFHW (F3) Vdq, Wdq, lb PSHUFLW (F2) Vdq, Wdq, lb	(Grp 12 ^{1A})	(Grp 13 ^{1A})	(Grp 14 ^{1A})	PCMPEQB Pq, Qq PCMPEQB (66) Vdq, Wdq	PCMPEQW Pq, Qq PCMPEQW (66) Vdq, Wdq	PCMPEQD Pq, Qq PCMPEQD (66) Vdq, Wdq	EMMS ^{1D}



Table A-4. Two-Byte Opcode Map for Non-64-Bit Mode (First Byte is 0FH)[†] (Contd.)

	8 A-4. IWO	9	A	B B	С	D	E	F
0	INVD ^{1D}	WBINVD ^{1D}		UD2		NOP Ev		ı
1	PREFETCH ^{1C} (Grp 16 ^{1A})			I				NOP Ev
2	MOVAPS Vps, Wps MOVAPD (66) Vpd, Wpd	MOVAPS Wps, Vps MOVAPD (66) Wpd, Vpd	CVTPI2PS Vps, Qq CVTSI2SS (F3) Vss, Ed CVTPI2PD (66) Vpd, Qq CVTSI2SD (F2) Vsd, Ed	MOVNTPS Mps, Vps ^{1F} MOVNTPD (66) Mpd, Vpd ^{1F}	CVTTPS2PI Pq, Wq CVTTSS2SI (F3) Gd, Wss CVTTPD2PI (66) Pq, Wpd CVTTSD2SI (F2) Gd, Wsd	CVTPS2PI Pq, Wq CVTSS2SI (F3) Gd, Wss CVTPD2PI (66) Pq, Wpd CVTSD2SI (F2) Gd, Wsd	UCOMISS Vss, Wss UCOMISD (66) Vsd, Wsd	COMISS Vps, Wps COMISD (66) Vsd, Wsd
3								
4	S	NS	CI P/PE	MOVcc(Gv, Ev) NP/PO	- Conditional Mo L/NGE	ove NL/GE	LE/NG	NLE/G
5	ADDPS Vps, Wps ADDSS (F3) Vss, Wss ADDPD (66) Vpd, Wpd ADDSD (F2) Vsd, Wsd	MULPS Vps, Wps MULSS (F3) Vss, Wss MULPD (66) Vpd, Wpd MULSD (F2) Vsd, Wsd	CVTPS2PD Vpd, Wq CVTSS2SD (F3) Vsd, Wss CVTPD2PS (66) Vps, Wpd CVTSD2SS (F2) Vss, Wsd	CVTDQ2PS Vps, Wdq CVTPS2DQ (66) Vdq, Wps CVTTPS2DQ (F3) Vdq, Wps	SUBPS Vps, Wps SUBSS (F3) Vss, Wss SUBPD (66) Vpd, Wpd SUBSD (F2) Vsd, Wsd	MINPS Vps, Wps MINSS (F3) Vss, Wss MINPD (66) Vpd, Wpd MINSD (F2) Vsd, Wsd	DIVPS Vps, Wps DIVSS (F3) Vss, Wss DIVPD (66) Vpd, Wpd DIVSD (F2) Vsd, Wsd	MAXPS Vps, Wps MAXSS (F3) Vss, Wss MAXPD (66) Vpd, Wpd MAXSD (F2) Vsd, Wsd
6	PUNPCKHB W Pq, Qq PUNPCKHB W (66) Vdq, Qdq	PUNPCKHW D Pq, Qq PUNPCKHW D (66) Vdq, Qdq	PUNPCKHD Q Pq, Qq PUNPCKHD Q (66) Vdq, Qdq	PACKSSDW Pq, Qq PACKSSDW (66) Vdq, Qdq	PUNPCKLQD Q (66) Vdq, Wdq	PUNPCKHQ DQ (66) Vdq, Wdq	MOVD Pd, Ed MOVD (66) Vd, Ed	MOVQ Pq, Qq MOVDQA (66) Vdq, Wdq MOVDQU (F3) Vdq, Wdq
7	MMX UD (Res	erved for future	use)		HADDPD (66) Vpd, Wpd HADDPS (F2) Vps, Wps	HSUBPD (66) Vpd, Wpd HSUBPS (F2) Vps, Wps	MOVD Ed, Pd MOVD (66) Ed, Vd MOVQ (F3) Vq, Wq	MOVQ Qq, Pq MOVDQA (66) Wdq, Vdq MOVDQU (F3) Wdq, Vdq



Table A-4. Two-Byte Opcode Map for Non-64-Bit Mode (First Byte is 0FH)[†] (Contd.)

	0	1	2	3	4	5	6	7
8			Jcc, Jv	- Long-displace	ement jump on c	ondition		
	O ^{1D}	NO ^{1D}	B/C/NAE ^{1D}	AE/NB/NC ^{1D}	E/Z ^{1D}	NE/NZ ^{1D}	BE/NA ^{1D}	A/NBE ^{1D}
9	SETcc, Eb - Byte Set on condition (000) ^{1K}							
	0	NO	B/C/NAE	AE/NB/NC	E/Z	NE/NZ	BE/NA	A/NBE
Α	PUSH FS ^{1D}	POP FS ^{1D}	CPUID ^{1D}	BT Ev, Gv	SHLD Ev, Gv, Ib	SHLD Ev, Gv, CL		
В	CMP	XCHG	LSS	BTR	LFS	LGS	MC	VZX
	Eb, Gb	Ev, Gv	Мр	Ev, Gv	Мр	Мр	Gv, Eb	Gv, Ew
С	XADD Eb, Gb	XADD Ev, Gv	CMPPS Vps, Wps, lb CMPSS (F3) Vss, Wss, lb CMPPD (66) Vpd, Wpd, lb CMPSD (F2) Vsd, Wsd, lb	MOVNTI Md, Gd ^{1F}	PINSRW Pw, Ew, Ib PINSRW (66) Vw, Ew, Ib	PEXTRW Gd, Nq, Ib ^{1H} PEXTRW (66) Gd, Udq, Ib ^{1H}	SHUFPS Vps, Wps, lb SHUFPD (66) Vpd, Wpd, lb	Grp 9 ^{1A}
D	ADDSUBPD (66) Vpd, Wpd ADDSUBPS (F2) Vps, Wps	PSRLW Pq, Qq PSRLW (66) Vdq, Wdq	PSRLD Pq, Qq PSRLD (66) Vdq, Wdq	PSRLQ Pq, Qq PSRLQ (66) Vdq, Wdq	PADDQ Pq, Qq PADDQ (66) Vdq, Wdq	PMULLW Pq, Qq PMULLW (66) Vdq, Wdq	MOVQ (66) Wq, Vq MOVQ2DQ (F3) Vdq, Qq ^{1H} MOVDQ2Q (F2) Pq, Vq ^{1H}	PMOVMSKB Gd, Nq ^{1H} PMOVMSKB (66) Gd, Udq ^{1H}
E	PAVGB Pq, Qq PAVGB (66) Vdq, Wdq	PSRAW Pq, Qq PSRAW (66) Vdq, Wdq	PSRAD Pq, Qq PSRAD (66) Vdq, Wdq	PAVGW Pq, Qq PAVGW (66) Vdq, Wdq	PMULHUW Pq, Qq PMULHUW (66) Vdq, Wdq	PMULHW Pq, Qq PMULHW (66) Vdq, Wdq	CVTPD2DQ (F2) Vdq, Wpd CVTTPD2DQ (66) Vdq, Wpd CVTDQ2PD (F3) Vpd, Wq	MOVNTQ Mq, Vq ^{1F} MOVNTDQ (66) Mdq, Vdq ^{1F}
F	LDDQU (F2) Vdq, Mdq	PSLLW Pq, Qq PSLLW (66) Vdq, Wdq	PSLLD Pq, Qq PSLLD (66) Vdq, Wdq	PSLLQ Pq, Qq PSLLQ (66) Vdq, Wdq	PMULUDQ Pq, Qq PMULUDQ (66) Vdq, Wdq	PMADDWD Pq, Qq PMADDWD (66) Vdq, Wdq	PSADBW Pq, Qq PSADBW (66) Vdq, Wdq	MASKMOVQ Pq, Pq ^{1H} MASKMOV- DQU (66) Vdq, Vdq ^{1H}



Table A-4. Two-Byte Opcode Map for Non-64-Bit Mode (First Byte is 0FH)[†] (Contd.)

	8	9	А	В	С	D	E	F
8			Jcc, Jv	- Long-displace	ment jump on c	ondition		
	S ^{1D}	NS ^{1D}	P/PE ^{1D}	NP/PO ^{1D}	L/NGE ^{1D}	NL/GE ^{1D}	LE/NG ^{1D}	NLE/G ^{1D}
9			SET	cc, Eb - Byte Se	t on condition (0	00) ^{1K}		
	S	NS	P/PE	NP/PO	L/NGE	NL/GE	LE/NG	NLE/G
А	PUSH GS ^{1D}	POP GS ^{1D}	RSM ^{1D}	BTS Ev, Gv	SHRD Ev, Gv, Ib	SHRD Ev, Gv, CL	(Grp 15 ^{1A}) ^{1C}	IMUL Gv, Ev
В		Grp 10 ^{1A}	Grp 8 ^{1A}	BTC	BSF	BSR	MO	VSX
		Invalid Opcode ^{1B}	Ev, Ib	Ev, Gv	Gv, Ev	Gv, Ev	Gv, Eb	Gv, Ew
С				BSW	/AP ^{1D}		•	
	EAX	ECX	EDX	EBX	ESP	EBP	ESI	EDI
D	PSUBUSB Pq, Qq PSUBUSB (66) Vdq, Wdq	PSUBUSW Pq, Qq PSUBUSW (66) Vdq, Wdq	PMINUB Pq, Qq PMINUB (66) Vdq, Wdq	PAND Pq, Qq PAND (66) Vdq, Wdq	PADDUSB Pq, Qq PADDUSB (66) Vdq, Wdq	PADDUSW Pq, Qq PADDUSW (66) Vdq, Wdq	PMAXUB Pq, Qq PMAXUB (66) Vdq, Wdq	PANDN Pq, Qq PANDN (66) Vdq, Wdq
E	PSUBSB Pq, Qq PSUBSB (66) Vdq, Wdq	PSUBSW Pq, Qq PSUBSW (66) Vdq, Wdq	PMINSW Pq, Qq PMINSW (66) Vdq, Wdq	POR Pq, Qq POR (66) Vdq, Wdq	PADDSB Pq, Qq PADDSB (66) Vdq, Wdq	PADDSW Pq, Qq PADDSW (66) Vdq, Wdq	PMAXSW Pq, Qq PMAXSW (66) Vdq, Wdq	PXOR Pq, Qq PXOR (66) Vdq, Wdq
F	PSUBB Pq, Qq PSUBB (66) Vdq, Wdq	PSUBW Pq, Qq PSUBW (66) Vdq, Wdq	PSUBD Pq, Qq PSUBD (66) Vdq, Wdq	PSUBQ Pq, Qq PSUBQ (66) Vdq, Wdq	PADDB Pq, Qq PADDB (66) Vdq, Wdq	PADDW Pq, Qq PADDW (66) Vdq, Wdq	PADDD Pq, Qq PADDD (66) Vdq, Wdq	

NOTES:

- To use the table, use 0FH for the first byte of the opcode. For the second byte, take the first Hex character from the row designation and the second character from the column designation. For example: 0F03H for LSL GV, EW. All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.
- This opcode is not currently supported after Pentium Pro and Pentium II families. Using this opcode on the current generation of processors will generate a #UD. For future processors, the value is reserved.



Table A-5. Two-Byte Opcode Map for 64-Bit Mode [Proceeding Byte is 0FH][†]

	0	1	2	3	4	5	6	7
0	Grp 6 ^{1A}	Grp 7 ^{1A}	LAR Gv, Ew Gqp, Ed	LSL Gv, Ew Gqp, Ed		SYSCALL ^{1D}	CLTS ^{1D}	SYSRET ^{1D}
1	MOVUPS Vps, Wps MOVSS (F3) Vss, Wss MOVUPD (66) Vpd, Wpd MOVSD (F2) Vsd, Wsd	MOVUPS Wps, Vps MOVSS (F3) Wss, Vss MOVUPD (66) Wpd, Vpd MOVSD (F2) Wsd, Vsd	MOVLPS Vq, Mq ^{1F} MOVLPD (66) Vq, Mq ^{1F} MOVHLPS Vps, Vps MOVDDUP (F2) Vq, Wq ^{1G} MOVSLDUP (F3) Vps, Wps	MOVLPS Mq, Vq ^{1F} MOVLPD (66) Mq, Vq ^{1F}	UNPCKLPS Vps, Wps UNPCKLPD (66) Vpd, Wpd	UNPCKHPS Vps, Wps UNPCKHPD (66) Vpd, Wpd	MOVHPS Vq, Mq ^{1F} MOVHPD (66) Vq, Mq ^{1F} MOVLHPS Vps, Vps MOVSHDUP (F3) Vps, Wps	MOVHPS Mq, Vps ^{1F} MOVHPD (66) Mq, Vpd ^{1F}
2	MOV ^{1H} Rd, Cd Rqp, Cqp	MOV ^{1H} Rd, Cd Rqp, Cqp	MOV ^{1H} Rd, Cd Rqp, Cqp	MOV ^{1H} Rd, Cd Rqp, Cqp				
3	WRMSR ^{1D}	RDTSC ^{1D}	RDMSR ^{1D}	RDPMC ^{1D}	SYSENT-ER ^{1D}	SYSEXIT ^{1D} SYSEXIT ^{1D,1Q}		
4			, ,	CMOVcc,	- Conditional M (Gqp, Eqp)	i		ı
	0	NO	B/C/NAE	AE/NB/NC	E/Z	NE/NZ	BE/NA	A/NBE
5	MOVMSKPS Gd, Vps ^{1H} MOVMSKPD (66) Gd, Vpd ^{1H}	SQRTPS Vps, Wps SQRTSS (F3) Vss, Wss SQRTPD (66) Vpd, Wpd SQRTSD (F2) Vsd, Wsd	(F3)	RCPPS Vps, Wps RCPSS (F3) Vss, Wss	ANDPS Vps, Wps ANDPD (66) Vpd, Wpd	ANDNPS Vps, Wps ANDNPD (66) Vpd, Wpd	ORPS Vps, Wps ORPD (66) Vpd, Wpd	XORPS Vps, Wps XORPD (66) Vpd, Wpd
6	PUNPCKLB W Pq, Qd PUNPCKLB W (66) Vdq, Wdq	PUNPCKLW D Pq, Qd PUNPCKLW D (66) Vdq, Wdq	PUNPCKLDQ Pq, Qd PUNPCKLDQ (66) Vdq, Wdq	PACKSSWB Pq, Qq PACKSSWB (66) Vdq, Wdq	PCMPGTB Pq, Qq PCMPGTB (66) Vdq, Wdq	PCMPGTW Pq, Qq PCMPGTW (66) Vdq, Wdq	PCMPGTD Pq, Qq PCMPGTD (66) Vdq, Wdq	PACKUSWB Pq, Qq PACKUSWB (66) Vdq, Wdq
7	PSHUFW Pq, Qq, lb PSHUFD (66) Vdq, Wdq, lb PSHUFHW (F3) Vdq, Wdq, lb PSHUFLW (F2) Vdq, Wdq, lb	(Grp 12 ^{1A})	(Grp 13 ^{1A})	(Grp 14 ^{1A})	PCMPEQB Pq, Qq PCMPEQB (66) Vdq, Wdq	PCMPEQW Pq, Qq PCMPEQW (66) Vdq, Wdq	PCMPEQD Pq, Qq PCMPEQD (66) Vdq, Wdq	EMMS ^{1D}



Table A-5. Two-Byte Opcode Map for 64-Bit Mode [Proceeding Byte is 0FH]† (Contd.)

Table A	8	9	Α	В	c Procee	D	E	(Conta.)			
0	INVD ^{1D}	WBINVD ^{1D}		UD2				l			
1	PREFETCH ^{1C} (Grp 16 ^{1A})										
2	MOVAPS Vps, Wps MOVAPD (66) Vpd, Wpd	MOVAPS Wps, Vps MOVAPD (66) Wpd, Vpd	CVTPI2PS Vps, Qq CVTSI2SS (F3) Vss, Ed Vss, Eqp CVTPI2PD (66) Vpd, Qq CVTSI2SD (F2) Vsd, Ed Vsd, Eqp	MOVNTPS Mps, Vps ^{1F} MOVNTPD (66) Mpd, Vpd ^{1F}	CVTTPS2PI Pq, Wq CVTTSS2SI (F3) Gd, Wss Gqp, Wss CVTTPD2PI (66) Pq, Wpd CVTTSD2SI (F2) Gd, Wsd Gqp, Wsd	CVTPS2PI Pq, Wq CVTSS2SI (F3) Gd, Wss Gqp, Wss CVTPD2PI (66) Pq, Wpd CVTSD2SI (F2) Gd, Wsd Gqp, Wsd	UCOMISS Vss, Wss UCOMISD (66) Vsd, Wsd	COMISS Vps, Wps COMISD (66) Vsd, Wsd			
3											
4		CMOVcc(Gv, Ev) - Conditional Move CMOVcc(Gqp, Eqp)									
	S	NS	P/PE	NP/PO	L/NGE	NL/GE	LE/NG	NLE/G			
5	ADDPS Vps, Wps ADDSS (F3) Vss, Wss ADDPD (66) Vpd, Wpd ADDSD (F2) Vsd, Wsd	MULPS Vps, Wps MULSS (F3) Vss, Wss MULPD (66) Vpd, Wpd MULSD (F2) Vsd, Wsd	CVTPS2PD Vpd, Wq CVTSS2SD (F3) Vsd, Wss CVTPD2PS (66) Vps, Wpd CVTSD2SS (F2) Vss, Wsd	CVTDQ2PS Vps, Wdq CVTPS2DQ (66) Vdq, Wps CVTTPS2DQ (F3) Vdq, Wps	SUBPS Vps, Wps SUBSS (F3) Vss, Wss SUBPD (66) Vpd, Wpd SUBSD (F2) Vsd, Wsd	MINPS Vps, Wps MINSS (F3) Vss, Wss MINPD (66) Vpd, Wpd MINSD (F2) Vsd, Wsd	DIVPS Vps, Wps DIVSS (F3) Vss, Wss DIVPD (66) Vpd, Wpd DIVSD (F2) Vsd, Wsd	MAXPS Vps, Wps MAXSS (F3) Vss, Wss MAXPD (66) Vpd, Wpd MAXSD (F2) Vsd, Wsd			
6	PUNPCKHBW Pq, Qq PUNPCKHBW (66) Vdq, Qdq	PUNPCKHWD Pq, Qq PUNPCKHWD (66) Vdq, Qdq	PUNPCKHDQ Pq, Qq PUNPCKHD Q (66) Vdq, Qdq	PACKSSDW Pq, Qq PACKSSDW (66) Vdq, Qdq	PUNPCKLQDQ (66) Vdq, Wdq	PUNPCKHQDQ (66) Vdq, Wdq	MOVD Pd, Ed MOVD (66) Vd, Ed	MOVQ Pq, Qq MOVDQA (66) Vdq, Wdq MOVDQU (F3) Vdq, Wdq			
7					HADDPD (66) Vpd, Wpd HADDPS (F2) Vps, Wps	HSUBPD (66) Vpd, Wpd HSUBPS (F2) Vps, Wps	MOVD Ed, Pd MOVD (66) Ed, Vd MOVQ (F3) Vq, Wq	MOVQ Qq, Pq MOVDQA (66) Wdq, Vdq MOVDQU (F3) Wdq, Vdq			

[†] To use the table, use 0FH for the first byte of the opcode. For the second byte, take the first Hex character from the row designation and the second character from the column designation. For example: 0F03H for LSL GV, EW. All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.4 Opcode Extensions for One-Byte and Two-Byte Opcodes

Some 1-byte and 2-byte opcodes use bits 3-5 of the ModR/M byte (nnn field in Figure A-1) as an extension of the opcode. The bits 3-5 also correspond to the "/digit" portion of opcode notation.




Figure A-1. ModR/M Byte nnn Field (Bits 5, 4, and 3)

Opcodes that have opcode extensions are indicated in Table A-6 and organized by group number. Group numbers (from 1 to 16, second column) provide a table entry point. The encoding for the r/m field for each instruction can be established using the third column of the table.

For example: an ADD instruction with a 1-byte opcode of 80H is a Group 1 instruction. Table A-6 indicates that the opcode extension field encoded in the ModR/M byte for this instruction is 000B. The r/m field can be encoded to access a register (11B) or a memory address using a specified addressing mode (for example: mem = 00B, 01B, 10B).

Table A-6. Non-64-bit Mode Opcode Extensions for One-byte and Two-byte Opcodes by Group Number[†]

Opcode	Group	Mod 7,6			Encoding	of Bits [5:3]	of the Mod	R/M Byte		
			000	001	010	011	100	101	110	111
80-83	1	mem,11B	ADD	OR	ADC	SBB	AND	SUB	XOR	CMP
C0, C1 reg, imm D0, D1 reg, 1 D2, D3 reg, CL	2	mem,11B	ROL	ROR	RCL	RCR	SHL/SAL	SHR		SAR
F6, F7	3	mem,11B	TEST lb/lv		NOT	NEG	MUL AL/eAX	IMUL AL/eAX	DIV AL/eAX	IDIV AL/eAX
FE	4	mem,11B	INC Eb	DEC Eb						
FF	5	mem,11B	INC Ev	DEC Ev	CALLN Ev	CALLF Ep ^{1J}	JMPN Ev	JMPF Ep ^{1J}	PUSH Ev	
0F 00	6	mem,11B	SLDT Ew	STR Ev	LLDT Ew	LTR Ew	VERR Ew	VERW Ew		
0F 01	7	mem,11B	SGDT Ms	SIDT Ms	LGDT Ms	LIDT Ms	SMSW Ew		LMSW Ew	INVLPG Mb
				MONITOR eAX, eCX, eDX (000)1E						
				MWAIT eAX, eCX (001)1E						



Table A-6. Non-64-bit Mode Opcode Extensions for One-byte and Two-byte Opcodes by Group Number[†] (Contd.)

Opcode	Group	Mod 7,6			Encoding	of Bits 5,4,3	of the Mod	IR/M Byte		
			000	001	010	011	100	101	110	111
0F BA	8	mem,11B					ВТ	BTS	BTR	втс
0F C7	9	mem,11B		CMPXCH8B Mq						
0F B9	10	mem,11B								
C6	11	mem,11B	MOV Eb, lb							
C7			MOV Ev, Iv							
0F 71	12	mem,11B			PSRLW Pq, lb PSRLW (66) Pdq, lb		PSRAW Pq, lb PSRAW (66) Pdq, lb		PSLLW Pq, lb PSLLW (66) Pdq, lb	
0F 72	13	mem,11B			PSRLD Pq, lb PSRLD (66) Wdq, lb		PSRAD Pq, lb PSRAD (66) Wdq, lb		PSLLD Pq, lb PSLLD (66) Wdq, lb	
0F 73	14	mem,11B			PSRLQ Pq, lb PSRLQ (66) Wdq, lb	PSRLDQ (66) Wdq, lb			PSLLQ Pq, lb PSLLQ (66) Wdq, lb	PSLLDQ (66) Wdq, lb
0F AE	15	mem,11B	FXSAVE	FXRSTOR	LDMXCSR	STMXCSR				CLFLUSH
								LFENCE (000) ^{1E}	MFENCE (000) ^{1E}	SFENCE (000) ^{1E}
0F 18	16	mem,11B	PREFETCH - NTA	PREFETCH- T0	PREFETCH- T1	PREFETCH- T2				

[†] All blanks in all opcode maps are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



Table A-7. 64-bit Mode Opcode Extensions for One-Byte and Two-byte Opcodes by Group Number[†]

Opcode	Group	Mod 7,6			Encodin	g of Bits 5,4	1,3 of the Mo	dR/M Byte		
			000	001	010	011	100	101	110	111
80-83	1	mem,11B	ADD	OR	ADC	SBB	AND	SUB	XOR	СМР
C0 reg, imm D0, reg, 1 D2 reg, CL	2	mem,11B	ROL ^{1M}	ROR ^{1M}	RCL ^{1M}	RCR ^{1M}	SHL/ SAL ^{1M}	SHR ^{1M}		SAR ^{1M}
C1 reg, imm D1 reg, 1 D3 reg, CL	2	mem,11B	ROL	ROR	RCL	RCR	SHL/ SAL	SHR		SAR
F6, F7	3	mem,11B	TEST		NOT	NEG	MUL AL/eAX/ RAX	IMUL AL/eAX/ RAX	DIV AL/eAX/ RAX	IDIV AL/eAX/ RAX
FE	4	mem,11B	INC Eb ^{1M}	DEC Eb ^{1M}						
FF	5	mem,11B	INC Ev Eqp	DEC Ev Eqp	CALLN ^{1N} Eq	CALLF ^{1J} Ep Et	JMPN ^{1N} Eq	JMPF ^{1J} Ep Et	PUSH Ew Eq	
0F 00	6	mem,11B	SLDT Ew	STR Ev	LLDT Ew	LTR Ew	VERR Ew	VERW Ew		
0F 01	7	mem,11B	SGDT Ms	SIDT Ms	LGDT Ms	LIDT Ms	SMSW Ew		LMSW Ew	INVLPG Mb
				MONITOR RAX, eCX, eDX (000) ^{1E}						SWAPGS (000) ^{1E}
				MWAIT eAX, eCX (001) ^{1E}						
0F BA	8	mem,11B					ВТ	BTS	BTR	втс
0F C7	9	mem,11B		CMPXCH8 B Mq CMPXCH1 6B Mdq						
0F B9	10	mem,11B								
C6	11	mem,11B	MOV ^{1M} Eb, lb							
C7		mem,11B	MOV Ev, Iv Eqp, Ids							



Table A-7. 64-bit Mode Opcode Extensions for One-Byte and Two-byte Opcodes by Group Number[†] (Contd.)

Opcode	Group	Mod 7,6			Encoding	of Bits 5,4,	3 of the Mo	dR/M Byte		
			000	001	010	011	100	101	110	111
0F 71	12	mem,11B			PSRLW Pq, lb PSRLW (66) Pdq, lb		PSRAW Pq, lb PSRAW (66) Pdq, lb		PSLLW Pq, lb PSLLW (66) Pdq, lb	
0F 72	13	mem,11B								
					PSRLD Pq, lb PSRLD (66) Wdq, lb		PSRAD Pq, lb PSRAD (66) Wdq, lb		PSLLD Pq, lb PSLLD (66) Wdq, lb	
0F 73	14	mem,11B								
					PSRLQ Pq, lb PSRLQ (66) Wdq, lb	PSRLDQ (66) Wdq, lb			PSLLQ Pq, lb PSLLQ (66) Wdq, lb	PSLLDQ (66) Wdq, Ib
0F AE	15	mem,11B	FXSAVE	FXRSTOR	LDMXCSR	STMXCSR				CLFLUSH
								LFENCE (000) ^{1E}	MFENCE (000) ^{1E}	SFENCE (000) ^{1E}
0F 18	16	mem,11B	PREFETCH- NTA	PREFETCH- TO	PREFETCH- T1	PREFETCH- T2				

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5 Escape Opcode Instructions

Opcode maps for coprocessor escape instruction opcodes (x87 floating-point instruction opcodes) are in Table A-8 through Table A-23. These maps are grouped by the first byte of the opcode, from D8-DF. Each of these opcodes has a ModR/M byte. If the ModR/M byte is within the range of 00H-BFH, bits 3-5 of the ModR/M byte are used as an opcode extension, similar to the technique used for 1-and 2-byte opcodes (see Section A.3.4). If the ModR/M byte is outside the range of 00H through BFH, the entire ModR/M byte is used as an opcode extension.

Example A-4. Opcode with ModR/M Byte in the 00H through BFH Range

DD050400000H can be interpreted as follows:

- The instruction encoded with this opcode can be located in Section A.3.5.6. Since the ModR/M byte (05H) is within the 00H through BFH range, bits 3 through 5 (000) of this byte indicate the opcode for an FLD double-real instruction (see Table A-10).
- The double-real value to be loaded is at 00000004H (the 32-bit displacement that follows and belongs to this opcode).

Example A-5. Opcode with ModR/M Byte outside the 00H through BFH Range

D8C1H can be interpreted as follows:

- This example illustrates an opcode with a ModR/M byte outside the range of 00H through BFH. The instruction can be located in Section A.3.4.
- In Table A-9, the ModR/M byte C1H indicates row C, column 1 (the FADD instruction using ST(0), ST(1) as operands).



A.3.5.1 ESCAPE OPCODES WITH D8 AS FIRST BYTE

Table A-8 and Table A-9 contain opcode maps for the escape instruction opcodes that begin with D8H. Table A-8 shows the opcode map if the accompanying ModR/M byte within the range of 00H-BFH. Here, the value of bits 3-5 (nnn field in Figure A-1) selects the instruction.

Table A-8. D8 Opcode Map When ModR/M Byte is Within 00H to BFH[†]

nnn Field of ModR/M Byte									
000B	001B	010B	011B	100B	101B	110B	111B		

NOTES:

Table A-9 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case, the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-9. D8 Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

	0	1	2	3	4	5	6	7				
С	FADD											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
D				FC	ОМ							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),T(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
Е				FS	SUB							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
F	FDIV											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				

	8	9	А	В	С	D	Е	F				
С	FMUL											
	ST(0),ST(0) ST(0),ST(1) ST(0),ST(2) ST(0),ST(3) ST(0),ST(4) ST(0),ST(5) ST(0),ST(6) ST(0),ST(7)											
D				FCC	OMP							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),T(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
Е				FSI	JBR							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
F	FDIVR											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.2 ESCAPE OPCODES WITH D9 AS FIRST BYTE

Table A-10 and Table A-11 contain opcode maps for escape instruction opcodes that begin with D9H. Table A-10 shows the opcode map if the accompanying ModR/M byte is within the range of 00H-BFH. Here, the value of bits 3-5 (nnn field in Figure A-1) selects the instruction.

Table A-10. D9 Opcode Map When ModR/M Byte is Within 00H to BFH[†]

	nnn Field of ModR/M Byte										
000B	001B	010B	011B	100B	101B	110B	111B				
FLD single-real		FST single-real	FSTP single-real	FLDENV 14/28 bytes	FLDCW 2 bytes	FNSTENV 14/28 bytes	FNSTCW 2 bytes				

NOTE:

Table A-11 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case, the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-11. D9 Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

	0	1	2	3	4	5	6	7				
С	FLD											
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
D	FNOP											
Е	FCHS	FABS			FTST	FXAM						
F	F2XM1	FYL2X	FPTAN	FPATAN	FXTRACT	FPREM1	FDECSTP	FINCSTP				

	8	9	А	В	С	D	E	F			
С	FXCH										
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
D											
Е	FLD1	FLDL2T	FLDL2E	FLDPI	FLDLG2	FLDLN2	FLDZ				
F	FPREM	FYL2XP1	FSQRT	FSINCOS	FRNDINT	FSCALE	FSIN	FCOS			

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.3 ESCAPE OPCODES WITH DA AS FIRST BYTE

Table A-12 and Table A-13 contain the opcode maps for the escape instruction opcodes that begin with DAH. Table A-12 shows the opcode map if the accompanying ModR/M byte within the range of 00H-BFH. Here, the value of bits 3-5 (nnn field in Figure A-1) selects the instruction.

Table A-12. DA Opcode Map When ModR/M Byte is Within 00H to BFH[†]

	nnn Field of ModR/M Byte										
000B	001B	010B	011B	100B	101B	110B	111B				
FIADD dword-integer	FIMUL dword-integer	FICOM dword-integer	FICOMP dword-integer	FISUB dword-integer	FISUBR dword-integer	FIDIV dword-integer	FIDIVR dword-integer				

NOTES:

Table A-13 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-13. DA Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

			-								
	0	1	2	3	4	5	6	7			
С		FCMOVB									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
D		FCMOVBE									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
Е											
F											

	8	9	Α	В	С	D	E	F				
С		FCMOVE										
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
D		FCMOVU										
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
Е		FUCOMPP										
F												

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.4 ESCAPE OPCODES WITH DB AS FIRST BYTE

Table A-14 and Table A-15 contain the opcode maps for the escape instruction opcodes that begin with DBH. Table A-14 shows the opcode map if the accompanying ModR/M byte within the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-14. DB Opcode Map When ModR/M Byte is Within 00H to BFH[†]

	nnn Field of ModR/M Byte										
000B	001B	010B	011B	100B	101B	110B	111B				
FILD dword-integer	FISTTP dword-integer	FIST dword-integer	FISTP dword-integer		FLD extended-real		FSTP extended-real				

NOTES:

Table A-15 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case, the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-15. DB Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

	0	1	2	3	4	5	6	7			
С		FCMOVNB									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
D		FCMOVNBE									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			
Е			FNCLEX	FNINIT							
F		FCOMI									
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)			

	8	9	Α	В	С	D	E	F				
С		FCMOVNE										
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
D		FCMOVNU										
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
Е				FUC	COMI							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)				
F												

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.5 ESCAPE OPCODES WITH DC AS FIRST BYTE

Table A-16 and Table A-17 contain the opcode maps for the escape instruction opcodes that begin with DCH. Table A-16 shows the opcode map if the accompanying ModR/M byte within the range of 00H-BFH. Here, the value of bits 3-5 (the nnn field in Figure A-1) selects the instruction.

Table A-16. DC Opcode Map When ModR/M Byte is Within 00H to BFH[†]

	nnn Field of ModR/M Byte										
000B	001B	010B	011B	100B	101B	110B	111B				
FADD double- real	FMUL double- real	FCOM double-real	FCOMP double-real	FSUB double- real	FSUBR double-real	FDIV double- real	FDIVR double-real				

NOTES:

Table A-17 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case, the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-17. DC Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

	0	1	2	3	4	5	6	7			
С		FADD									
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)			
D											
Е				FSI	UBR						
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)			
F		FDIVR									
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)			

	8	9	Α	В	С	D	E	F		
С				FN	/ UL					
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)		
D										
Е				. FS	SUB		_			
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)		
F	FDIV									
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)		

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.6 ESCAPE OPCODES WITH DD AS FIRST BYTE

Table A-18 and Table A-19 contain the opcode maps for the escape instruction opcodes that begin with DDH. Table A-18 shows the opcode map if the accompanying ModR/M byte within the range of 00H-BFH. Here, the value of bits 3-5 (nnn field in Figure A-1) selects the instruction.

Table A-18. DD Opcode Map When ModR/M Byte is Within 00H to BFH[†]

nnn Field of ModR/M Byte								
000B	001B	010B	011B	100B	101B	110B	111B	

NOTES:

Table A-19 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case, the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-19. DD Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

	0	1	2	3	4	5	6	7			
С	FFREE										
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)			
D				F	ST						
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)			
Е				FU	СОМ						
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)			
F											

	8	9	А	В	С	D	Е	F		
С										
D		FSTP								
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)		
Е				FUC	OMP					
	ST(0)	ST(1)	ST(2)	ST(3)	ST(4)	ST(5)	ST(6)	ST(7)		
F										

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.7 ESCAPE OPCODES WITH DE AS FIRST BYTE

Table A-20 and Table A-21 contain the opcode maps for the escape instruction opcodes that begin with DEH. Table A-20 shows the opcode map if the accompanying ModR/M byte within the range of 00H-BFH. Here, the value of bits 3-5 (nnn field in Figure A-1) selects the instruction.

Table A-20. DE Opcode Map When ModR/M Byte is Within 00H to BFH[†]

nnn Field of ModR/M Byte								
000B	001B	010B	011B	100B	101B	110B	111B	

NOTES:

Table A-21 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H-BFH. In this case, the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-21. DE Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

	0	1	2	3	4	5	6	7
С				FAI	DDP			
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)
D								
Е				FSU	JBRP			
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)
F	FDIVRP							
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)

	8	9	А	В	С	D	E	F
С				FM	ULP			
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)
D		FCOMPP						
Е				FS	UBP			
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0)	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)
F	FDIVP							
	ST(0),ST(0)	ST(1),ST(0)	ST(2),ST(0).	ST(3),ST(0)	ST(4),ST(0)	ST(5),ST(0)	ST(6),ST(0)	ST(7),ST(0)

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.



A.3.5.8 ESCAPE OPCODES WITH DF AS FIRST BYTE

Table A-22 and Table A-23 contain the opcode maps for the escape instruction opcodes that begin with DFH. Table A-22 shows the opcode map if the accompanying ModR/M byte within the range of 00H=BFH. Here, the value of bits 3-5 (nnn field in Figure A-1) selects the instruction.

Table A-22. DF Opcode Map When ModR/M Byte is Within 00H to BFH[†]

	nnn Field of ModR/M Byte							
000B	001B	010B	011B	100B	101B	110B	111B	
FILD word-integer	FISTTP word-integer	FIST word-integer	FISTP word-integer	FBLD packed- BCD	FILD qword-integer	FBSTP packed-BCD	FISTP qword-integer	

NOTES:

Table A-23 shows the opcode map if the accompanying ModR/M byte is outside the range of 00H to BFH. In this case the first digit of the ModR/M byte selects the row in the table and the second digit selects the column.

Table A-23. DF Opcode Map When ModR/M Byte is Outside 00H to BFH[†]

			poodo mar					
	0	1	2	3	4	5	6	7
С								
D								
E	FSTSW AX							
F				FCC	OMIP	I.	l.	l .
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)
	8	9	А	В	С	D	E	F
С								
_		1		1		1	1	1

С								
D								
Е	FUCOMIP							
	ST(0),ST(0)	ST(0),ST(1)	ST(0),ST(2)	ST(0),ST(3)	ST(0),ST(4)	ST(0),ST(5)	ST(0),ST(6)	ST(0),ST(7)
F								

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

[†] All blanks in the opcode map are reserved and must not be used. Do not depend on the operation of undefined or reserved opcodes.

B

Instruction Formats and Encodings



APPENDIX B INSTRUCTION FORMATS AND ENCODINGS

This appendix provides machine instruction formats and encodings of IA-32 architecture instructions. The first section describes the IA-32 architecture's machine instruction format. The remaining sections show the formats and encoding of general-purpose, MMX, P6 family, SSE/SSE2/SSE3, and x87 FPU instructions. Instruction formats used in 64-bit mode are provided in the following sections as supersets of the above.

B.1 MACHINE INSTRUCTION FORMAT

All Intel Architecture instructions are encoded using subsets of the general machine instruction format shown in Figure B-1. Each instruction consists of:

- an opcode
- a register and/or address mode specifier consisting of the ModR/M byte and sometimes the scale-index-base (SIB) byte (if required)
- a displacement and an immediate data field (if required)

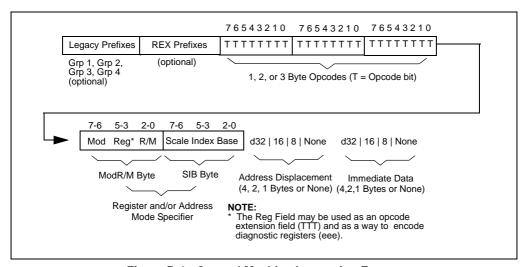


Figure B-1. General Machine Instruction Format

The following sections discuss this format.



B.1.1 Legacy Prefixes

The legacy prefixes noted in Figure B-1 include 66H, 67H, F2H and F3H. They are optional, except when F2H, F3H and 66H are used in new instruction extensions. Legacy prefixes must be placed before REX prefixes.

Refer to Section 2.1.1, "Instruction Prefixes" in the *IA-32 Intel Architecture Software Developer's Manual, Volume 2A* for more information on legacy prefixes.

B.1.2 REX Prefixes

REX prefixes are a set of 16 opcodes that span one row of the opcode map and occupy entries 40H to 4FH. These opcodes represent valid instructions (INC or DEC) in legacy IA-32 operating modes and in compatibility mode. In 64-bit mode, the same opcodes represent the instruction prefix REX and are not treated as individual instructions.

Refer to Section 2.2.1, "REX Prefixes" in the *IA-32 Intel Architecture Software Developer's Manual, Volume 2A* for more information on REX prefixes.

B.1.3 Opcode Fields

The primary opcode for an instruction is encoded in one to three bytes of the instruction. Within the primary opcode, smaller encoding fields may be defined. These fields vary according to the class of operation being performed.

Almost all instructions that refer to a register and/or memory operand have a register and/or address mode byte following the opcode. This byte, the ModR/M byte, consists of the mod field (3 bits), the reg field (3 bits; this field is sometimes an opcode extension), and the R/M field (2 bits). Certain encodings of the ModR/M byte indicate that a second address mode byte, the SIB byte, must be used.

If the addressing mode specifies a displacement, the displacement value is placed immediately following the ModR/M byte or SIB byte. Possible sizes are 8, 16, or 32 bits. If the instruction specifies an immediate value, the immediate value follows any displacement bytes. The immediate, if specified, is always the last field of the instruction.

Refer to Chapter 2.1.2, *Opcodes*, in the *IA-32 Intel Architecture Software Developer's Manual, Volume 2A* for more information.

B.1.4 Special Fields

Table B-1 lists bit fields that appear in certain instructions, sometimes within the opcode bytes. All of these fields (except the d bit) occur in the general-purpose instruction formats in Table B-13.

Table B-1. Special Fields Within Instruction Encodings

Field Name	Description	Number of Bits
reg	General-register specifier (see Table B-4 or B-5)	3
w	Specifies if data is byte or full-sized, where full-sized is 16 or 32 bits (see Table B-6)	1
S	Specifies sign extension of an immediate field (see Table B-7)	1
sreg2	Segment register specifier for CS, SS, DS, ES (see Table B-8)	2
sreg3	Segment register specifier for CS, SS, DS, ES, FS, GS (see Table B-8)	3
eee	Specifies a special-purpose (control or debug) register (see Table B-9)	3
tttn	For conditional instructions, specifies a condition asserted or negated (see Table B-12)	4
d	Specifies direction of data operation (see Table B-11)	1

B.1.4.1 Reg Field (reg) for Non-64-Bit Modes

The reg field in the ModR/M byte specifies a general-purpose register operand. The group of registers specified is modified by the presence and state of the w bit in an encoding (refer to Section B.1.4.3). Table B-2 shows the encoding of the reg field when the w bit is not present in an encoding; Table B-3 shows the encoding of the reg field when the w bit is present.

Table B-2. Encoding of reg Field When w Field is Not Present in Instruction

reg Field	Register Selected during 16-Bit Data Operations	Register Selected during 32-Bit Data Operations
000	AX	EAX
001	СХ	ECX
010	DX	EDX
011	BX	EBX
100	SP	ESP
101	BP	EBP
110	SI	ESI
111	DI	EDI



Table B-3. Encoding of reg Field When w Field is Present in Instruction

Table B 3. Ellocaling of reg ricia vi						
	Register Specified by reg Field During 16-Bit Data Operations					
	Function	of w Field				
reg	When w = 0	When w = 1				
000	AL	AX				
001	CL	CX				
010	DL	DX				
011	BL	BX				
100	AH	SP				
101	СН	BP				
110	DH	SI				
111	ВН	DI				

	Register Specified by reg Field During 32-Bit Data Operations					
	Function of	Function of w Field				
reg	When w = 0	When w = 1				
000	AL	EAX				
001	CL	ECX				
010	DL	EDX				
011	BL	EBX				
100	AH	ESP				
101	СН	EBP				
110	DH	ESI				
111	ВН	EDI				

B.1.4.2 Reg Field (reg) for 64-Bit Mode

Just like in non-64-bit modes, the reg field in the ModR/M byte specifies a general-purpose register operand. The group of registers specified is modified by the presence of and state of the w bit in an encoding (refer to Section B.1.4.3). Table B-4 shows the encoding of the reg field when the w bit is not present in an encoding; Table B-5 shows the encoding of the reg field when the w bit is present.

Table B-4. Encoding of reg Field When w Field is Not Present in Instruction

reg Field	Register Selected during 16-Bit Data Operations	Register Selected during 32-Bit Data Operations	Register Selected during 64-Bit Data Operations
000	AX	EAX	RAX
001	CX	ECX	RCX
010	DX	EDX	RDX
011	BX	EBX	RBX
100	SP	ESP	RSP
101	BP	EBP	RBP
110	SI	ESI	RSI
111	DI	EDI	RDI



Table B-5. Encoding of reg Field When w Field is Present in Instruction

	Register Specified by reg Field During 16-Bit Data Operations					
	Function	Function of w Field				
reg	When w = 0	When w = 1				
000	AL	AX				
001	CL	CX				
010	DL	DX				
011	BL	BX				
100	AH*	SP				
101	CH*	ВР				
110	DH*	SI				
111	BH*	DI				

	Register Specified by reg Field During 32-Bit Data Operations	
	Function of w Field	
reg	When w = 0	When w = 1
000	AL	EAX
001	CL	ECX
010	DL	EDX
011	BL	EBX
100	AH*	ESP
101	CH*	EBP
110	DH*	ESI
111	BH*	EDI

NOTES:

B.1.4.3 Encoding of Operand Size (w) Bit

The current operand-size attribute determines whether the processor is performing 16-bit, 32-bit or 64-bit operations. Within the constraints of the current operand-size attribute, the operand-size bit (w) can be used to indicate operations on 8-bit operands or the full operand size specified with the operand-size attribute. Table B-6 shows the encoding of the w bit depending on the current operand-size attribute.

Table B-6. Encoding of Operand Size (w) Bit

w Bit	Operand Size When Operand-Size Attribute is 16 Bits	Operand Size When Operand-Size Attribute is 32 Bits
0	8 Bits	8 Bits
1	16 Bits	32 Bits

B.1.4.4 Sign-Extend (s) Bit

The sign-extend (s) bit occurs in instructions with immediate data fields that are being extended from 8 bits to 16 or 32 bits. See Table B-7.

 ^{*} AH, CH, DH, BH can not be encoded when REX prefix is used. Such an expression defaults to the low byte.



Table B-7. Encoding of Sign-Extend (s) Bit

s	Effect on 8-Bit Immediate Data	Effect on 16- or 32-Bit Immediate Data
0	None	None
1	Sign-extend to fill 16-bit or 32-bit destination	None

B.1.4.5 Segment Register (sreg) Field

When an instruction operates on a segment register, the reg field in the ModR/M byte is called the sreg field and is used to specify the segment register. Table B-8 shows the encoding of the sreg field. This field is sometimes a 2-bit field (sreg2) and other times a 3-bit field (sreg3).

Table B-8. Encoding of the Segment Register (sreg) Field

2-Bit sreg2 Field	Segment Register Selected
00	ES
01	CS
10	SS
11	DS

3-Bit sreg3 Field	Segment Register Selected
000	ES
001	CS
010	SS
011	DS
100	FS
101	GS
110	Reserved*
111	Reserved

^{*} Do not use reserved encodings.



B.1.4.6 Special-Purpose Register (eee) Field

When control or debug registers are referenced in an instruction they are encoded in the eee field, located in bits 5 though 3 of the ModR/M byte (an alternate encoding of the sreg field). See Table B-9.

Table B-9. Encoding of Special-Purpose Register (eee) Field

eee	Control Register	Debug Register
000	CR0	DR0
001	Reserved*	DR1
010	CR2	DR2
011	CR3	DR3
100	CR4	Reserved
101	Reserved	Reserved
110	Reserved	DR6
111	Reserved	DR7

NOTES:

B.1.4.7 Condition Test (tttn) Field

For conditional instructions (such as conditional jumps and set on condition), the condition test field (tttn) is encoded for the condition being tested. The ttt part of the field gives the condition to test and the n part indicates whether to use the condition (n = 0) or its negation (n = 1).

- For 1-byte primary opcodes, the tttn field is located in bits 3, 2, 1, and 0 of the opcode byte.
- For 2-byte primary opcodes, the tttn field is located in bits 3, 2, 1, and 0 of the second opcode byte.

Table B-10 shows the encoding of the tttn field.

^{*} Do not use reserved encodings.



Table B-10. Encoding of Conditional Test (tttn) Field

tttn	Mnemonic	Condition
0000	0	Overflow
0001	NO	No overflow
0010	B, NAE	Below, Not above or equal
0011	NB, AE	Not below, Above or equal
0100	E, Z	Equal, Zero
0101	NE, NZ	Not equal, Not zero
0110	BE, NA	Below or equal, Not above
0111	NBE, A	Not below or equal, Above
1000	S	Sign
1001	NS	Not sign
1010	P, PE	Parity, Parity Even
1011	NP, PO	Not parity, Parity Odd
1100	L, NGE	Less than, Not greater than or equal to
1101	NL, GE	Not less than, Greater than or equal to
1110	LE, NG	Less than or equal to, Not greater than
1111	NLE, G	Not less than or equal to, Greater than

B.1.4.8 Direction (d) Bit

In many two-operand instructions, a direction bit (d) indicates which operand is considered the source and which is the destination. See Table B-11.

- When used for integer instructions, the d bit is located at bit 1 of a 1-byte primary opcode. Note that this bit does not appear as the symbol "d" in Table B-13; the actual encoding of the bit as 1 or 0 is given.
- When used for floating-point instructions (in Table B-16), the d bit is shown as bit 2 of the first byte of the primary opcode.

Table B-11. Encoding of Operation Direction (d) Bit

d	Source	Destination
0	reg Field	ModR/M or SIB Byte
1	ModR/M or SIB Byte	reg Field

intel

INSTRUCTION FORMATS AND ENCODINGS

B.1.5 Other Notes

Table B-12 contains notes on particular encodings. These notes are indicated in the tables shown in the following sections by superscripts.

Table B-12. Notes on Instruction Encoding

Symbol	Note
Α	A value of 11B in bits 7 and 6 of the ModR/M byte is reserved.



B.2 GENERAL-PURPOSE INSTRUCTION FORMATS AND ENCODINGS FOR NON-64-BIT MODES

Table B-13 shows machine instruction formats and encodings for general purpose instructions in non-64-bit modes.

Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes

Instruction and Format	Encoding
AAA – ASCII Adjust after Addition	0011 0111
AAD – ASCII Adjust AX before Division	1101 0101 : 0000 1010
AAM – ASCII Adjust AX after Multiply	1101 0100 : 0000 1010
AAS – ASCII Adjust AL after Subtraction	0011 1111
ADC – ADD with Carry	
register1 to register2	0001 000w : 11 reg1 reg2
register2 to register1	0001 001w : 11 reg1 reg2
memory to register	0001 001w : mod reg r/m
register to memory	0001 000w : mod reg r/m
immediate to register	1000 00sw : 11 010 reg : immediate data
immediate to AL, AX, or EAX	0001 010w : immediate data
immediate to memory	1000 00sw : mod 010 r/m : immediate data
ADD – Add	
register1 to register2	0000 000w : 11 reg1 reg2
register2 to register1	0000 001w : 11 reg1 reg2
memory to register	0000 001w : mod reg r/m
register to memory	0000 000w : mod reg r/m
immediate to register	1000 00sw : 11 000 reg : immediate data
immediate to AL, AX, or EAX	0000 010w : immediate data
immediate to memory	1000 00sw : mod 000 r/m : immediate data
AND – Logical AND	
register1 to register2	0010 000w : 11 reg1 reg2
register2 to register1	0010 001w : 11 reg1 reg2
memory to register	0010 001w : mod reg r/m
register to memory	0010 000w : mod reg r/m
immediate to register	1000 00sw : 11 100 reg : immediate data
immediate to AL, AX, or EAX	0010 010w : immediate data
immediate to memory	1000 00sw : mod 100 r/m : immediate data



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

for Non-64-Bit Modes (Contd.) Instruction and Format Encoding		
	Encoding	
ARPL – Adjust RPL Field of Selector	0440 0044 - 44 4 0	
from register	0110 0011 : 11 reg1 reg2	
from memory	0110 0011 : mod reg r/m	
BOUND – Check Array Against Bounds	0110 0010 : mod ^A reg r/m	
BSF – Bit Scan Forward		
register1, register2	0000 1111 : 1011 1100 : 11 reg1 reg2	
memory, register	0000 1111 : 1011 1100 : mod reg r/m	
BSR – Bit Scan Reverse		
register1, register2	0000 1111 : 1011 1101 : 11 reg1 reg2	
memory, register	0000 1111 : 1011 1101 : mod reg r/m	
BSWAP – Byte Swap	0000 1111 : 1100 1 reg	
BT – Bit Test		
register, immediate	0000 1111 : 1011 1010 : 11 100 reg: imm8 data	
memory, immediate	0000 1111 : 1011 1010 : mod 100 r/m : imm8 data	
register1, register2	0000 1111 : 1010 0011 : 11 reg2 reg1	
memory, reg	0000 1111 : 1010 0011 : mod reg r/m	
BTC – Bit Test and Complement		
register, immediate	0000 1111 : 1011 1010 : 11 111 reg: imm8 data	
memory, immediate	0000 1111 : 1011 1010 : mod 111 r/m : imm8 data	
register1, register2	0000 1111 : 1011 1011 : 11 reg2 reg1	
memory, reg	0000 1111 : 1011 1011 : mod reg r/m	
BTR – Bit Test and Reset		
register, immediate	0000 1111 : 1011 1010 : 11 110 reg: imm8 data	
memory, immediate	0000 1111 : 1011 1010 : mod 110 r/m : imm8 data	
register1, register2	0000 1111 : 1011 0011 : 11 reg2 reg1	
memory, reg	0000 1111 : 1011 0011 : mod reg r/m	
BTS – Bit Test and Set		
register, immediate	0000 1111 : 1011 1010 : 11 101 reg: imm8 data	
memory, immediate	0000 1111 : 1011 1010 : mod 101 r/m : imm8 data	
register1, register2	0000 1111 : 1010 1011 : 11 reg2 reg1	
memory, reg	0000 1111 : 1010 1011 : mod reg r/m	
	_	



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
CALL – Call Procedure (in same segment)	Literating
direct	1110 1000 : full displacement
register indirect	1111 1111 : 11 010 reg
memory indirect	1111 1111 : mod 010 r/m
CALL – Call Procedure (in other segment)	1111 1111 . 11100 010 1/111
direct	1001 1010 : unsigned full offset, selector
indirect	1111 1111 : mod 011 r/m
	1001 1000
CBW – Convert Byte to Word	
CDQ – Convert Doubleword to Qword	1001 1001
CLC – Clear Carry Flag	1111 1000
CLD – Clear Direction Flag	1111 1100
CLI – Clear Interrupt Flag	1111 1010
CLTS – Clear Task-Switched Flag in CR0	0000 1111 : 0000 0110
CMC – Complement Carry Flag	1111 0101
CMP – Compare Two Operands	
register1 with register2	0011 100w : 11 reg1 reg2
register2 with register1	0011 101w : 11 reg1 reg2
memory with register	0011 100w : mod reg r/m
register with memory	0011 101w : mod reg r/m
immediate with register	1000 00sw : 11 111 reg : immediate data
immediate with AL, AX, or EAX	0011 110w : immediate data
immediate with memory	1000 00sw : mod 111 r/m : immediate data
CMPS/CMPSB/CMPSW/CMPSD – Compare String Operands	1010 011w
CMPXCHG – Compare and Exchange	
register1, register2	0000 1111 : 1011 000w : 11 reg2 reg1
memory, register	0000 1111 : 1011 000w : mod reg r/m
CPUID - CPU Identification	0000 1111 : 1010 0010
CWD – Convert Word to Doubleword	1001 1001
CWDE – Convert Word to Doubleword	1001 1000
DAA – Decimal Adjust AL after Addition	0010 0111
DAS – Decimal Adjust AL after Subtraction	0010 1111



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

for Non-64-Bit Modes (Contd.)	
Instruction and Format	Encoding
DEC – Decrement by 1	
register	1111 111w: 11 001 reg
register (alternate encoding)	0100 1 reg
memory	1111 111w : mod 001 r/m
DIV – Unsigned Divide	
AL, AX, or EAX by register	1111 011w: 11 110 reg
AL, AX, or EAX by memory	1111 011w : mod 110 r/m
ENTER – Make Stack Frame for High Level Procedure	1100 1000 : 16-bit displacement : 8-bit level (L)
HLT – Halt	1111 0100
IDIV – Signed Divide	
AL, AX, or EAX by register	1111 011w: 11 111 reg
AL, AX, or EAX by memory	1111 011w : mod 111 r/m
IMUL – Signed Multiply	
AL, AX, or EAX with register	1111 011w : 11 101 reg
AL, AX, or EAX with memory	1111 011w : mod 101 reg
register1 with register2	0000 1111 : 1010 1111 : 11 : reg1 reg2
register with memory	0000 1111 : 1010 1111 : mod reg r/m
register1 with immediate to register2	0110 10s1 : 11 reg1 reg2 : immediate data
memory with immediate to register	0110 10s1 : mod reg r/m : immediate data
IN – Input From Port	
fixed port	1110 010w : port number
variable port	1110 110w
INC – Increment by 1	
reg	1111 111w : 11 000 reg
reg (alternate encoding)	0100 0 reg
memory	1111 111w : mod 000 r/m
INS – Input from DX Port	0110 110w
INT n – Interrupt Type n	1100 1101 : type
INT – Single-Step Interrupt 3	1100 1100
INTO – Interrupt 4 on Overflow	1100 1110
INVD – Invalidate Cache	0000 1111 : 0000 1000



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

for Non-64-Bit Modes (Contd.)	
Instruction and Format	Encoding
INVLPG – Invalidate TLB Entry	0000 1111 : 0000 0001 : mod 111 r/m
IRET/IRETD - Interrupt Return	1100 1111
Jcc – Jump if Condition is Met	
8-bit displacement	0111 tttn: 8-bit displacement
full displacement	0000 1111 : 1000 tttn : full displacement
JCXZ/JECXZ – Jump on CX/ECX Zero Address-size prefix differentiates JCXZ and JECXZ	1110 0011 : 8-bit displacement
JMP – Unconditional Jump (to same segment)	
short	1110 1011 : 8-bit displacement
direct	1110 1001 : full displacement
register indirect	1111 1111 : 11 100 reg
memory indirect	1111 1111 : mod 100 r/m
JMP – Unconditional Jump (to other segment)	
direct intersegment	1110 1010 : unsigned full offset, selector
indirect intersegment	1111 1111 : mod 101 r/m
LAHF – Load Flags into AHRegister	1001 1111
LAR - Load Access Rights Byte	
from register	0000 1111 : 0000 0010 : 11 reg1 reg2
from memory	0000 1111 : 0000 0010 : mod reg r/m
LDS – Load Pointer to DS	1100 0101 : mod ^A reg r/m
LEA - Load Effective Address	1000 1101 : mod ^A reg r/m
LEAVE – High Level Procedure Exit	1100 1001
LES – Load Pointer to ES	1100 0100 : mod ^A reg r/m
LFS – Load Pointer to FS	0000 1111 : 1011 0100 : mod ^A reg r/m
LGDT – Load Global Descriptor Table Register	0000 1111 : 0000 0001 : mod ^A 010 r/m
LGS – Load Pointer to GS	0000 1111 : 1011 0101 : mod ^A reg r/m
LIDT – Load Interrupt Descriptor Table Register	0000 1111 : 0000 0001 : mod ^A 011 r/m
LLDT – Load Local Descriptor Table Register	
LDTR from register	0000 1111 : 0000 0000 : 11 010 reg
LDTR from memory	0000 1111 : 0000 0000 : mod 010 r/m



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

for Non-64-Bit N Instruction and Format	Encoding
LMSW – Load Machine Status Word	-
from register	0000 1111 : 0000 0001 : 11 110 reg
from memory	0000 1111 : 0000 0001 : mod 110 r/m
LOCK – Assert LOCK# Signal Prefix	1111 0000
LODS/LODSB/LODSW/LODSD – Load String Operand	1010 110w
LOOP – Loop Count	1110 0010 : 8-bit displacement
LOOPZ/LOOPE – Loop Count while Zero/Equal	1110 0001 : 8-bit displacement
LOOPNZ/LOOPNE – Loop Count while not Zero/Equal	1110 0000 : 8-bit displacement
LSL – Load Segment Limit	
from register	0000 1111 : 0000 0011 : 11 reg1 reg2
from memory	0000 1111 : 0000 0011 : mod reg r/m
LSS – Load Pointer to SS	0000 1111 : 1011 0010 : mod ^A reg r/m
LTR – Load Task Register	
from register	0000 1111 : 0000 0000 : 11 011 reg
from memory	0000 1111 : 0000 0000 : mod 011 r/m
MOV – Move Data	
register1 to register2	1000 100w : 11 reg1 reg2
register2 to register1	1000 101w : 11 reg1 reg2
memory to reg	1000 101w : mod reg r/m
reg to memory	1000 100w : mod reg r/m
immediate to register	1100 011w : 11 000 reg : immediate data
immediate to register (alternate encoding)	1011 w reg : immediate data
immediate to memory	1100 011w : mod 000 r/m : immediate data
memory to AL, AX, or EAX	1010 000w : full displacement
AL, AX, or EAX to memory	1010 001w: full displacement
MOV – Move to/from Control Registers	
CR0 from register	0000 1111 : 0010 0010 : 11 000 reg
CR2 from register	0000 1111 : 0010 0010 : 11 010reg
CR3 from register	0000 1111 : 0010 0010 : 11 011 reg
CR4 from register	0000 1111 : 0010 0010 : 11 100 reg
register from CR0-CR4	0000 1111 : 0010 0000 : 11 eee reg



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
MOV – Move to/from Debug Registers	
DR0-DR3 from register	0000 1111 : 0010 0011 : 11 eee reg
DR4-DR5 from register	0000 1111 : 0010 0011 : 11 eee reg
DR6-DR7 from register	0000 1111 : 0010 0011 : 11 eee reg
register from DR6-DR7	0000 1111 : 0010 0001 : 11 eee reg
register from DR4-DR5	0000 1111 : 0010 0001 : 11 eee reg
register from DR0-DR3	0000 1111 : 0010 0001 : 11 eee reg
MOV – Move to/from Segment Registers	
register to segment register	1000 1110 : 11 sreg3 reg
register to SS	1000 1110 : 11 sreg3 reg
memory to segment reg	1000 1110 : mod sreg3 r/m
memory to SS	1000 1110 : mod sreg3 r/m
segment register to register	1000 1100 : 11 sreg3 reg
segment register to memory	1000 1100 : mod sreg3 r/m
MOVS/MOVSB/MOVSW/MOVSD – Move Data from String to String	1010 010w
MOVSX – Move with Sign-Extend	
register2 to register1	0000 1111 : 1011 111w : 11 reg1 reg2
memory to reg	0000 1111 : 1011 111w : mod reg r/m
MOVZX – Move with Zero-Extend	
register2 to register1	0000 1111 : 1011 011w : 11 reg1 reg2
memory to register	0000 1111 : 1011 011w : mod reg r/m
MUL – Unsigned Multiply	
AL, AX, or EAX with register	1111 011w: 11 100 reg
AL, AX, or EAX with memory	1111 011w : mod 100 reg
NEG – Two's Complement Negation	
register	1111 011w : 11 011 reg
memory	1111 011w : mod 011 r/m
NOP – No Operation	1001 0000
NOT – One's Complement Negation	
register	1111 011w : 11 010 reg
memory	1111 011w : mod 010 r/m



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
OR – Logical Inclusive OR	Liteduling
	0000 100w : 11 rog1 rog2
register1 to register2	0000 100w : 11 reg1 reg2
register2 to register1	0000 101w : 11 reg1 reg2
memory to register	0000 101w : mod reg r/m
register to memory	0000 100w : mod reg r/m
immediate to register	1000 00sw : 11 001 reg : immediate data
immediate to AL, AX, or EAX	0000 110w : immediate data
immediate to memory	1000 00sw : mod 001 r/m : immediate data
OUT – Output to Port	
fixed port	1110 011w : port number
variable port	1110 111w
OUTS - Output to DX Port	0110 111w
POP – Pop a Word from the Stack	
register	1000 1111 : 11 000 reg
register (alternate encoding)	0101 1 reg
memory	1000 1111 : mod 000 r/m
POP – Pop a Segment Register from the Stack (Note: CS cannot be sreg2 in this usage.)	
segment register DS, ES	000 sreg2 111
segment register SS	000 sreg2 111
segment register FS, GS	0000 1111: 10 sreg3 001
POPA/POPAD – Pop All General Registers	0110 0001
POPF/POPFD – Pop Stack into FLAGS or EFLAGS Register	1001 1101
PUSH – Push Operand onto the Stack	
register	1111 1111 : 11 110 reg
register (alternate encoding)	0101 0 reg
memory	1111 1111 : mod 110 r/m
immediate	0110 10s0 : immediate data
PUSH – Push Segment Register onto the Stack	
segment register CS,DS,ES,SS	000 sreg2 110
segment register FS,GS	0000 1111: 10 sreg3 000



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
PUSHA/PUSHAD – Push All General Registers	0110 0000
PUSHF/PUSHFD – Push Flags Register onto the Stack	1001 1100
RCL – Rotate thru Carry Left	
register by 1	1101 000w : 11 010 reg
memory by 1	1101 000w : mod 010 r/m
register by CL	1101 001w : 11 010 reg
memory by CL	1101 001w : mod 010 r/m
register by immediate count	1100 000w : 11 010 reg : imm8 data
memory by immediate count	1100 000w : mod 010 r/m : imm8 data
RCR - Rotate thru Carry Right	
register by 1	1101 000w : 11 011 reg
memory by 1	1101 000w : mod 011 r/m
register by CL	1101 001w : 11 011 reg
memory by CL	1101 001w : mod 011 r/m
register by immediate count	1100 000w : 11 011 reg : imm8 data
memory by immediate count	1100 000w : mod 011 r/m : imm8 data
RDMSR – Read from Model-Specific Register	0000 1111 : 0011 0010
RDPMC – Read Performance Monitoring Counters	0000 1111 : 0011 0011
RDTSC – Read Time-Stamp Counter	0000 1111 : 0011 0001
REP INS – Input String	1111 0011 : 0110 110w
REP LODS – Load String	1111 0011 : 1010 110w
REP MOVS – Move String	1111 0011 : 1010 010w
REP OUTS – Output String	1111 0011 : 0110 111w
REP STOS – Store String	1111 0011 : 1010 101w
REPE CMPS – Compare String	1111 0011 : 1010 011w
REPE SCAS – Scan String	1111 0011 : 1010 111w
REPNE CMPS – Compare String	1111 0010 : 1010 011w
REPNE SCAS – Scan String	1111 0010 : 1010 111w
RET – Return from Procedure (to same segment)	
no argument	1100 0011
adding immediate to SP	1100 0010 : 16-bit displacement



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
RET – Return from Procedure (to other segment)	3
intersegment	1100 1011
adding immediate to SP	1100 1010 : 16-bit displacement
ROL – Rotate Left	·
register by 1	1101 000w : 11 000 reg
memory by 1	1101 000w : mod 000 r/m
register by CL	1101 001w: 11 000 reg
memory by CL	1101 001w: mod 000 r/m
register by immediate count	1100 000w : 11 000 reg : imm8 data
memory by immediate count	1100 000w : mod 000 r/m : imm8 data
ROR – Rotate Right	
register by 1	1101 000w : 11 001 reg
memory by 1	1101 000w : mod 001 r/m
register by CL	1101 001w : 11 001 reg
memory by CL	1101 001w : mod 001 r/m
register by immediate count	1100 000w : 11 001 reg : imm8 data
memory by immediate count	1100 000w : mod 001 r/m : imm8 data
RSM – Resume from System Management Mode	0000 1111 : 1010 1010
SAHF – Store AH into Flags	1001 1110
SAL - Shift Arithmetic Left	same instruction as SHL
SAR – Shift Arithmetic Right	
register by 1	1101 000w : 11 111 reg
memory by 1	1101 000w : mod 111 r/m
register by CL	1101 001w : 11 111 reg
memory by CL	1101 001w : mod 111 r/m
register by immediate count	1100 000w : 11 111 reg : imm8 data
memory by immediate count	1100 000w : mod 111 r/m : imm8 data
SBB – Integer Subtraction with Borrow	
register1 to register2	0001 100w : 11 reg1 reg2
register2 to register1	0001 101w : 11 reg1 reg2
memory to register	0001 101w : mod reg r/m
register to memory	0001 100w : mod reg r/m



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
immediate to register	1000 00sw : 11 011 reg : immediate data
immediate to AL, AX, or EAX	0001 110w : immediate data
immediate to memory	1000 00sw : mod 011 r/m : immediate data
SCAS/SCASB/SCASW/SCASD – Scan String	1010 111w
SETcc – Byte Set on Condition	Toto III w
register	0000 1111 : 1001 tttn : 11 000 reg
memory	0000 1111 : 1001 tttn : mod 000 r/m
SGDT – Store Global Descriptor Table Register	0000 1111 : 0000 0001 : mod ^A 000 r/m
SHL – Shift Left	0000 1111 1 0000 0001 1 11100 000 1/111
register by 1	1101 000w : 11 100 reg
memory by 1	1101 000w : mod 100 r/m
register by CL	1101 001w : 11 100 reg
memory by CL	1101 001w : mod 100 r/m
register by immediate count	1100 000w : 11 100 reg : imm8 data
	1100 000w : mod 100 r/m : imm8 data
memory by immediate count SHLD – Double Precision Shift Left	1100 000w : IIIOu 100 I/III : IIIIIII8 data
register by immediate count	0000 1111 : 1010 0100 : 11 reg2 reg1 : imm8
memory by immediate count	0000 1111 : 1010 0100 : 11 regz reg : :iiiiiilo 0000 1111 : 1010 0100 : mod reg r/m : imm8
register by CL	
, , , , , , , , , , , , , , , , , , ,	0000 1111 : 1010 0101 : 11 reg2 reg1
memory by CL	0000 1111 : 1010 0101 : mod reg r/m
SHR – Shift Right	1101 000w : 11 101 rog
register by 1	1101 000w : 11 101 reg 1101 000w : mod 101 r/m
memory by 1	
register by CL	1101 001w : 11 101 reg
memory by CL	1101 001w : mod 101 r/m
register by immediate count	1100 000w : 11 101 reg : imm8 data
memory by immediate count	1100 000w : mod 101 r/m : imm8 data
SHRD – Double Precision Shift Right	0000 4444 + 4040 4400 + 4424 + i2
register by immediate count	0000 1111 : 1010 1100 : 11 reg2 reg1 : imm8
memory by immediate count	0000 1111 : 1010 1100 : mod reg r/m : imm8
register by CL	0000 1111 : 1010 1101 : 11 reg2 reg1
memory by CL	0000 1111 : 1010 1101 : mod reg r/m



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
SIDT – Store Interrupt Descriptor Table Register	0000 1111 : 0000 0001 : mod ^A 001 r/m
SLDT – Store Local Descriptor Table Register	
to register	0000 1111 : 0000 0000 : 11 000 reg
to memory	0000 1111 : 0000 0000 : mod 000 r/m
SMSW – Store Machine Status Word	
to register	0000 1111 : 0000 0001 : 11 100 reg
to memory	0000 1111 : 0000 0001 : mod 100 r/m
STC – Set Carry Flag	1111 1001
STD – Set Direction Flag	1111 1101
STI – Set Interrupt Flag	1111 1011
STOS/STOSB/STOSW/STOSD – Store String Data	1010 101w
STR – Store Task Register	
to register	0000 1111 : 0000 0000 : 11 001 reg
to memory	0000 1111 : 0000 0000 : mod 001 r/m
SUB – Integer Subtraction	
register1 to register2	0010 100w : 11 reg1 reg2
register2 to register1	0010 101w : 11 reg1 reg2
memory to register	0010 101w : mod reg r/m
register to memory	0010 100w : mod reg r/m
immediate to register	1000 00sw : 11 101 reg : immediate data
immediate to AL, AX, or EAX	0010 110w : immediate data
immediate to memory	1000 00sw : mod 101 r/m : immediate data
TEST – Logical Compare	
register1 and register2	1000 010w : 11 reg1 reg2
memory and register	1000 010w : mod reg r/m
immediate and register	1111 011w : 11 000 reg : immediate data
immediate and AL, AX, or EAX	1010 100w : immediate data
immediate and memory	1111 011w : mod 000 r/m : immediate data
UD2 – Undefined instruction	0000 FFFF : 0000 1011
VERR – Verify a Segment for Reading	
register	0000 1111 : 0000 0000 : 11 100 reg
memory	0000 1111 : 0000 0000 : mod 100 r/m



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
VERW – Verify a Segment for Writing	
register	0000 1111 : 0000 0000 : 11 101 reg
memory	0000 1111 : 0000 0000 : mod 101 r/m
WAIT – Wait	1001 1011
WBINVD – Writeback and Invalidate Data Cache	0000 1111 : 0000 1001
WRMSR – Write to Model-Specific Register	0000 1111 : 0011 0000
XADD – Exchange and Add	
register1, register2	0000 1111 : 1100 000w : 11 reg2 reg1
memory, reg	0000 1111 : 1100 000w : mod reg r/m
XCHG – Exchange Register/Memory with Register	
register1 with register2	1000 011w : 11 reg1 reg2
AX or EAX with reg	1001 0 reg
memory with reg	1000 011w : mod reg r/m
XLAT/XLATB – Table Look-up Translation	1101 0111
XOR – Logical Exclusive OR	
register1 to register2	0011 000w : 11 reg1 reg2
register2 to register1	0011 001w : 11 reg1 reg2
memory to register	0011 001w : mod reg r/m
register to memory	0011 000w : mod reg r/m
immediate to register	1000 00sw : 11 110 reg : immediate data
immediate to AL, AX, or EAX	0011 010w : immediate data
immediate to memory	1000 00sw : mod 110 r/m : immediate data
Prefix Bytes	
address size	0110 0111
LOCK	1111 0000
operand size	0110 0110
CS segment override	0010 1110
DS segment override	0011 1110
ES segment override	0010 0110



Table B-13. General Purpose Instruction Formats and Encodings for Non-64-Bit Modes (Contd.)

Instruction and Format	Encoding
FS segment override	0110 0100
GS segment override	0110 0101
SS segment override	0011 0110

B.2.1 General Purpose Instruction Formats and Encodings for 64-Bit Mode

Table B-15 shows machine instruction formats and encodings for general purpose instructions in 64-bit mode.

Table B-14. Special Symbols

Symbol	Application
S	If the value of REX.W. is 1, it overrides the presence of 66H.
W	The value of bit W. in REX is has no effect.

Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode

Instruction and Format	Encoding
ADC – ADD with Carry	
register1 to register2	0100 0R0B : 0001 000w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B : 0001 0001 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B : 0001 001w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B : 0001 0011 : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB: 0001 001w: mod reg r/m
memory to qwordregister	0100 1RXB : 0001 0011 : mod qwordreg r/m
register to memory	0100 0RXB: 0001 000w: mod reg r/m
qwordregister to memory	0100 1RXB : 0001 0001 : mod qwordreg r/m
immediate to register	0100 000B : 1000 00sw : 11 010 reg : immediate
immediate to qwordregister	0100 100B : 1000 0001 : 11 010 qwordreg : imm32
immediate to qwordregister	0100 1R0B : 1000 0011 : 11 010 qwordreg : imm8
immediate to AL, AX, or EAX	0001 010w : immediate data
immediate to RAX	0100 1000 : 0000 0101 : imm32



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate to memory	0100 00XB : 1000 00sw : mod 010 r/m : immediate
immediate32 to memory64	0100 10XB : 1000 0001 : mod 010 r/m : imm32
immediate8 to memory64	0100 10XB : 1000 0031 : mod 010 r/m : imm8
ADD – Add	
register1 to register2	0100 0R0B : 0000 000w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 0000 0000 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B : 0000 001w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 0000 0010 : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB : 0000 001w : mod reg r/m
memory64 to qwordregister	0100 1RXB : 0000 0000 : mod qwordreg r/m
register to memory	0100 0RXB : 0000 000w : mod reg r/m
qwordregister to memory64	0100 1RXB : 0000 0011 : mod qwordreg r/m
immediate to register	0100 0000B : 1000 00sw : 11 000 reg : immediate data
immediate32 to qwordregister	0100 100B : 1000 0001 : 11 010 qwordreg : imm
immediate to AL, AX, or EAX	0000 010w : immediate8
immediate to RAX	0100 1000 : 0000 0101 : imm32
immediate to memory	0100 00XB : 1000 00sw : mod 000 r/m : immediate
immediate32 to memory64	0100 10XB : 1000 0001 : mod 010 r/m : imm32
immediate8 to memory64	0100 10XB : 1000 0011 : mod 010 r/m : imm8
AND – Logical AND	
register1 to register2	0100 0R0B 0010 000w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 0010 0001 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B 0010 001w : 11 reg1 reg2
register1 to register2	0100 1R0B 0010 0011 : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB 0010 001w : mod reg r/m
memory64 to qwordregister	0100 1RXB : 0010 0011 : mod qwordreg r/m
register to memory	0100 0RXB: 0010 000w: mod reg r/m
qwordregister to memory64	0100 1RXB : 0010 0001 : mod qwordreg r/m
immediate to register	0100 000B : 1000 00sw : 11 100 reg : immediate
immediate32 to qwordregister	0100 100B 1000 0001 : 11 100 qwordreg : imm32
immediate to AL, AX, or EAX	0010 010w : immediate



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate32 to RAX	0100 1000 0010 1001 : imm32
immediate to memory	0100 00XB : 1000 00sw : mod 100 r/m : immediate
immediate32 to memory64	0100 10XB : 1000 0001 : mod 100 r/m : immediate32
immediate8 to memory64	0100 10XB : 1000 0011 : mod 100 r/m : imm8
BSF – Bit Scan Forward	
register1, register2	0100 0R0B 0000 1111 : 1011 1100 : 11 reg1 reg2
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 1100 : 11 qwordreg1 qwordreg2
memory, register	0100 0RXB 0000 1111 : 1011 1100 : mod reg r/m
memory64, qwordregister	0100 1RXB 0000 1111 : 1011 1100 : mod qwordreg r/m
BSR – Bit Scan Reverse	
register1, register2	0100 0R0B 0000 1111 : 1011 1101 : 11 reg1 reg2
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 1101 : 11 qwordreg1 qwordreg2
memory, register	0100 0RXB 0000 1111 : 1011 1101 : mod reg r/m
memory64, qwordregister	0100 1RXB 0000 1111 : 1011 1101 : mod qwordreg r/m
BSWAP – Byte Swap	0000 1111 : 1100 1 reg
BSWAP – Byte Swap	0100 100B 0000 1111 : 1100 1 qwordreg
BT – Bit Test	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 100 reg: imm8
qwordregister, immediate8	0100 100B 1111 : 1011 1010 : 11 100 qwordreg: imm8 data
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 100 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 100 r/m : imm8 data
register1, register2	0100 0R0B 0000 1111 : 1010 0011 : 11 reg2 reg1
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1010 0011 : 11 qwordreg2 qwordreg1
memory, reg	0100 0RXB 0000 1111 : 1010 0011 : mod reg r/m
memory, qwordreg	0100 1RXB 0000 1111 : 1010 0011 : mod qwordreg r/m



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format Encoding	
BTC – Bit Test and Complement	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 111 reg: imm8
qwordregister, immediate8	0100 100B 0000 1111 : 1011 1010 : 11 111 qwordreg: imm8
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 111 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 111 r/m : imm8
register1, register2	0100 0R0B 0000 1111 : 1011 1011 : 11 reg2 reg1
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 1011 : 11 qwordreg2 qwordreg1
memory, register	0100 0RXB 0000 1111 : 1011 1011 : mod reg r/m
memory, qwordreg	0100 1RXB 0000 1111 : 1011 1011 : mod qwordreg r/m
BTR – Bit Test and Reset	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 110 reg: imm8
qwordregister, immediate8	0100 100B 0000 1111 : 1011 1010 : 11 110 qwordreg: imm8
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 110 r/m : imm8
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 110 r/m : imm8
register1, register2	0100 0R0B 0000 1111 : 1011 0011 : 11 reg2 reg1
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1011 0011 : 11 qwordreg2 qwordreg1
memory, register	0100 0RXB 0000 1111 : 1011 0011 : mod reg r/m
memory64, qwordreg	0100 1RXB 0000 1111 : 1011 0011 : mod qwordreg r/m
BTS – Bit Test and Set	
register, immediate	0100 000B 0000 1111 : 1011 1010 : 11 101 reg: imm8
qwordregister, immediate8	0100 100B 0000 1111 : 1011 1010 : 11 101 qwordreg: imm8
memory, immediate	0100 00XB 0000 1111 : 1011 1010 : mod 101 r/m : imm8



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)		
Instruction and Format	Encoding	
memory64, immediate8	0100 10XB 0000 1111 : 1011 1010 : mod 101 r/m : imm8	
register1, register2	0100 0R0B 0000 1111 : 1010 1011 : 11 reg2 reg1	
qwordregister1, qwordregister2	0100 1R0B 0000 1111 : 1010 1011 : 11 qwordreg2 qwordreg1	
memory, register	0100 0RXB 0000 1111 : 1010 1011 : mod reg r/m	
memory64, qwordreg	0100 1RXB 0000 1111 : 1010 1011 : mod qwordreg r/m	
CALL – Call Procedure (in same segment)		
direct	1110 1000 : displacement32	
register indirect	0100 WR00 ^w 1111 1111 : 11 010 reg	
memory indirect	0100 W0XB ^w 1111 1111 : mod 010 r/m	
CALL - Call Procedure (in other segment)		
indirect	1111 1111 : mod 011 r/m	
indirect	0100 10XB 0100 1000 1111 1111 : mod 011 r/m	
CBW – Convert Byte to Word	1001 1000	
CDQ – Convert Doubleword to Qword+	1001 1001	
CDQE – RAX, Sign-Extend of EAX	0100 1000 1001 1001	
CLC – Clear Carry Flag	1111 1000	
CLD – Clear Direction Flag	1111 1100	
CLI – Clear Interrupt Flag	1111 1010	
CLTS – Clear Task-Switched Flag in CR0	0000 1111 : 0000 0110	
CMC – Complement Carry Flag	1111 0101	
CMP – Compare Two Operands		
register1 with register2	0100 0R0B 0011 100w : 11 reg1 reg2	
qwordregister1 with qwordregister2	0100 1R0B 0011 1001 : 11 qwordreg1 qwordreg2	
register2 with register1	0100 0R0B 0011 101w: 11 reg1 reg2	
qwordregister2 with qwordregister1	0100 1R0B 0011 101w : 11 qwordreg1 qwordreg2	
memory with register	0100 0RXB 0011 100w : mod reg r/m	
memory64 with qwordregister	0100 1RXB 0011 1001 : mod qwordreg r/m	
register with memory	0100 0RXB 0011 101w : mod reg r/m	
qwordregister with memory64	0100 1RXB 0011 101w1 : mod qwordreg r/m	
immediate with register	0100 000B 1000 00sw : 11 111 reg : imm	



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
immediate32 with qwordregister	0100 100B 1000 0001 : 11 111 qwordreg : imm64
immediate with AL, AX, or EAX	0011 110w : imm
immediate32 with RAX	0100 1000 0011 1101 : imm32
immediate with memory	0100 00XB 1000 00sw : mod 111 r/m : imm
immediate32 with memory64	0100 1RXB 1000 0001 : mod 111 r/m : imm64
immediate8 with memory64	0100 1RXB 1000 0011 : mod 111 r/m : imm8
CMPS/CMPSB/CMPSW/CMPSD/CMPSQ – Compare String Operands	
compare string operands [X at DS:(E)SI with Y at ES:(E)DI]	1010 011w
qword at address RSI with qword at address RDI	0100 1000 1010 0111
CMPXCHG – Compare and Exchange	
register1, register2	0000 1111 : 1011 000w : 11 reg2 reg1
byteregister1, byteregister2	0100 000B 0000 1111 : 1011 0000 : 11 bytereg2 reg1
qwordregister1, qwordregister2	0100 100B 0000 1111 : 1011 0001 : 11 qwordreg2 reg1
memory, register	0000 1111 : 1011 000w : mod reg r/m
memory8, byteregister	0100 00XB 0000 1111 : 1011 0000 : mod bytereg r/m
memory64, qwordregister	0100 10XB 0000 1111 : 1011 0001 : mod qwordreg r/m
CPUID - CPU Identification	0000 1111 : 1010 0010
CQO – Sign-Extend RAX	0100 1000 1001 1001
CWD – Convert Word to Doubleword	1001 1001
CWDE – Convert Word to Doubleword	1001 1000
DEC – Decrement by 1	
register	0100 000B 1111 111w: 11 001 reg
qwordregister	0100 100B 1111 1111 : 11 001 qwordreg
memory	0100 00XB 1111 111w : mod 001 r/m
memory64	0100 10XB 1111 1111 : mod 001 r/m
DIV – Unsigned Divide	
AL, AX, or EAX by register	0100 000B 1111 011w : 11 110 reg
Divide RDX:RAX by qwordregister	0100 100B 1111 0111 : 11 110 qwordreg



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding
AL, AX, or EAX by memory	0100 00XB 1111 011w : mod 110 r/m
Divide RDX:RAX by memory64	0100 10XB 1111 0111 : mod 110 r/m
ENTER – Make Stack Frame for High Level Procedure	1100 1000 : 16-bit displacement : 8-bit level (L)
HLT – Halt	1111 0100
IDIV – Signed Divide	
AL, AX, or EAX by register	0100 000B 1111 011w : 11 111 reg
RDX:RAX by qwordregister	0100 100B 1111 0111 : 11 111 qwordreg
AL, AX, or EAX by memory	0100 00XB 1111 011w : mod 111 r/m
RDX:RAX by memory64	0100 10XB 1111 0111 : mod 111 r/m
IMUL - Signed Multiply	
AL, AX, or EAX with register	0100 000B 1111 011w : 11 101 reg
RDX:RAX <- RAX with qwordregister	0100 100B 1111 0111 : 11 101 qwordreg
AL, AX, or EAX with memory	0100 00XB 1111 011w : mod 101 r/m
RDX:RAX <- RAX with memory64	0100 10XB 1111 0111 : mod 101 r/m
register1 with register2	0000 1111 : 1010 1111 : 11 : reg1 reg2
qwordregister1 <- qwordregister1 with qwordregister2	0100 1R0B 0000 1111 : 1010 1111 : 11 : qwordreg1 qwordreg2
register with memory	0100 0RXB 0000 1111 : 1010 1111 : mod reg r/m
qwordregister <- qwordregister with memory64	0100 1RXB 0000 1111 : 1010 1111 : mod qwordreg r/m
register1 with immediate to register2	0100 0R0B 0110 10s1 : 11 reg1 reg2 : imm
qwordregister1 <- qwordregister2 with sign- extended immediate8	0100 1R0B 0110 1011 : 11 qwordreg1 qwordreg2 : imm8
qwordregister1 <- qwordregister2 with immediate32	0100 1R0B 0110 1001 : 11 qwordreg1 qwordreg2 : imm32
memory with immediate to register	0100 0RXB 0110 10s1 : mod reg r/m : imm
qwordregister <- memory64 with sign-extended immediate8	0100 1RXB 0110 1011 : mod qwordreg r/m : imm8
qwordregister <- memory64 with immediate32	0100 1RXB 0110 1001 : mod qwordreg r/m : imm32
IN – Input From Port	
fixed port	1110 010w : port number
variable port	1110 110w



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
INC – Increment by 1	
reg	0100 000B 1111 111w : 11 000 reg
qwordreg	0100 100B 1111 1111 : 11 000 qwordreg
memory	0100 00XB 1111 111w : mod 000 r/m
memory64	0100 10XB 1111 1111 : mod 000 r/m
INS – Input from DX Port	0110 110w
INT n – Interrupt Type n	1100 1101 : type
INT – Single-Step Interrupt 3	1100 1100
INTO – Interrupt 4 on Overflow	1100 1110
INVD – Invalidate Cache	0000 1111 : 0000 1000
INVLPG – Invalidate TLB Entry	0000 1111 : 0000 0001 : mod 111 r/m
IRETO – Interrupt Return	1100 1111
Jcc – Jump if Condition is Met	
8-bit displacement	0111 tttn : 8-bit displacement
displacements (excluding 16-bit relative offsets)	0000 1111 : 1000 tttn : displacement32
JCXZ/JECXZ – Jump on CX/ECX Zero Address-size prefix differentiates JCXZ and JECXZ	1110 0011 : 8-bit displacement
JMP – Unconditional Jump (to same segment)	
short	1110 1011 : 8-bit displacement
direct	1110 1001 : displacement32
register indirect	0100 W00Bw: 1111 1111: 11 100 reg
memory indirect	0100 W0XB ^w : 1111 1111 : mod 100 r/m
JMP – Unconditional Jump (to other segment)	
indirect intersegment	0100 00XB : 1111 1111 : mod 101 r/m
64-bit indirect intersegment	0100 10XB : 1111 1111 : mod 101 r/m
LAR - Load Access Rights Byte	
from register	0100 0R0B : 0000 1111 : 0000 0010 : 11 reg1 reg2
from dwordregister to qwordregister, masked by 00FxFF00H	0100 WR0B : 0000 1111 : 0000 0010 : 11 qwordreg1 dwordreg2
from memory	0100 0RXB : 0000 1111 : 0000 0010 : mod reg r/m
from memory32 to qwordregister, masked by 00FxFF00H	0100 WRXB 0000 1111 : 0000 0010 : mod r/m



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mo	
Instruction and Format	Encoding
LEA – Load Effective Address	
in wordregister/dwordregister	0100 0RXB : 1000 1101 : mod ^A reg r/m
in qwordregister	0100 1RXB : 1000 1101 : mod ^A qwordreg r/m
LEAVE – High Level Procedure Exit	1100 1001
LFS – Load Pointer to FS	
FS:r16/r32 with far pointer from memory	0100 0RXB : 0000 1111 : 1011 0100 : mod ^A reg r/m
FS:r64 with far pointer from memory	0100 1RXB : 0000 1111 : 1011 0100 : mod ^A qwordreg r/m
LGDT – Load Global Descriptor Table Register	0100 10XB : 0000 1111 : 0000 0001 : mod ^A 010 r/m
LGS – Load Pointer to GS	
GS:r16/r32 with far pointer from memory	0100 0RXB : 0000 1111 : 1011 0101 : mod ^A reg r/m
GS:r64 with far pointer from memory	0100 1RXB : 0000 1111 : 1011 0101 : mod ^A qwordreg r/m
LIDT – Load Interrupt Descriptor Table Register	0100 10XB : 0000 1111 : 0000 0001 : mod ^A 011 r/m
LLDT – Load Local Descriptor Table Register	
LDTR from register	0100 000B : 0000 1111 : 0000 0000 : 11 010 reg
LDTR from memory	0100 00XB :0000 1111 : 0000 0000 : mod 010 r/m
LMSW – Load Machine Status Word	
from register	0100 000B : 0000 1111 : 0000 0001 : 11 110 reg
from memory	0100 00XB :0000 1111 : 0000 0001 : mod 110 r/m
LOCK – Assert LOCK# Signal Prefix	1111 0000
LODS/LODSB/LODSW/LODSD/LODSQ – Load String Operand	
at DS:(E)SI to AL/EAX/EAX	1010 110w
at (R)SI to RAX	0100 1000 1010 1101
LOOP – Loop Count	
if count != 0, 8-bit displacement	1110 0010
if count !=0, RIP + 8-bit displacement sign- extended to 64-bits	0100 1000 1110 0010



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
LOOPE – Loop Count while Zero/Equal	
if count != 0 & ZF =1, 8-bit displacement	1110 0001
if count !=0 & ZF = 1, RIP + 8-bit displacement sign-extended to 64-bits	0100 1000 1110 0001
LOOPNE/LOOPNZ – Loop Count while not Zero/Equal	
if count != 0 & ZF = 0, 8-bit displacement	1110 0000
if count !=0 & ZF = 0, RIP + 8-bit displacement sign-extended to 64-bits	0100 1000 1110 0000
LSL – Load Segment Limit	
from register	0000 1111 : 0000 0011 : 11 reg1 reg2
from qwordregister	0100 1R00 0000 1111 : 0000 0011 : 11 qwordreg1 reg2
from memory16	0000 1111 : 0000 0011 : mod reg r/m
from memory64	0100 1RXB 0000 1111 : 0000 0011 : mod qwordreg r/m
LSS – Load Pointer to SS	
SS:r16/r32 with far pointer from memory	0100 0RXB : 0000 1111 : 1011 0010 : mod ^A reg r/m
SS:r64 with far pointer from memory	0100 1WXB : 0000 1111 : 1011 0010 : mod ^A qwordreg r/m
LTR – Load Task Register	
from register	0100 0R00 : 0000 1111 : 0000 0000 : 11 011 reg
from memory	0100 00XB : 0000 1111 : 0000 0000 : mod 011 r/m
MOV – Move Data	
register1 to register2	0100 0R0B : 1000 100w : 11 reg1 reg2
qwordregister1 to qwordregister2	0100 1R0B 1000 1001 : 11 qwordeg1 qwordreg2
register2 to register1	0100 0R0B : 1000 101w : 11 reg1 reg2
qwordregister2 to qwordregister1	0100 1R0B 1000 1011 : 11 qwordreg1 qwordreg2
memory to reg	0100 0RXB : 1000 101w : mod reg r/m
memory64 to qwordregister	0100 1RXB 1000 1011 : mod qwordreg r/m
reg to memory	0100 0RXB : 1000 100w : mod reg r/m
qwordregister to memory64	0100 1RXB 1000 1001 : mod qwordreg r/m
immediate to register	0100 000B : 1100 011w : 11 000 reg : imm
immediate32 to qwordregister (zero extend)	0100 100B 1100 0111 : 11 000 qwordreg : imm32



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)		
Instruction and Format	Encoding	
immediate to register (alternate encoding)	0100 000B : 1011 w reg : imm	
immediate64 to qwordregister (alternate encoding)	0100 100B 1011 1000 reg : imm64	
immediate to memory	0100 00XB : 1100 011w : mod 000 r/m : imm	
immediate32 to memory64 (zero extend)	0100 10XB 1100 0111 : mod 000 r/m : imm32	
memory to AL, AX, or EAX	0100 0000 : 1010 000w : displacement	
memory64 to RAX	0100 1000 1010 0001 : displacement64	
AL, AX, or EAX to memory	0100 0000 : 1010 001w : displacement	
RAX to memory64	0100 1000 1010 0011 : displacement64	
MOV – Move to/from Control Registers		
CR0-CR4 from register	0100 0R0B : 0000 1111 : 0010 0010 : 11 eee reg (eee = CR#)	
CRx from qwordregister	0100 1R0B : 0000 1111 : 0010 0010 : 11 eee qwordreg (Reee = CR#)	
register from CR0-CR4	0100 0R0B : 0000 1111 : 0010 0000 : 11 eee reg (eee = CR#)	
qwordregister from CRx	0100 1R0B 0000 1111 : 0010 0000 : 11 eee qwordreg (Reee = CR#)	
MOV – Move to/from Debug Registers		
DR0-DR7 from register	0000 1111 : 0010 0011 : 11 eee reg (eee = DR#)	
DR0-DR7 from quadregister	0100 10OB 0000 1111 : 0010 0011 : 11 eee reg (eee = DR#)	
register from DR0-DR7	0000 1111 : 0010 0001 : 11 eee reg (eee = DR#)	
quadregister from DR0-DR7	0100 10OB 0000 1111 : 0010 0001 : 11 eee quadreg (eee = DR#)	
MOV – Move to/from Segment Registers		
register to segment register	0100 W00B ^w : 1000 1110 : 11 sreg reg	
register to SS	0100 000B : 1000 1110 : 11 sreg reg	
memory to segment register	0100 00XB : 1000 1110 : mod sreg r/m	
memory64 to segment register (lower 16 bits)	0100 10XB 1000 1110 : mod sreg r/m	
memory to SS	0100 00XB : 1000 1110 : mod sreg r/m	
segment register to register	0100 000B : 1000 1100 : 11 sreg reg	
segment register to qwordregister (zero extended)	0100 100B 1000 1100 : 11 sreg qwordreg	
segment register to memory	0100 00XB : 1000 1100 : mod sreg r/m	
segment register to memory64 (zero extended)	0100 10XB 1000 1100 : mod sreg3 r/m	



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding
MOVS/MOVSB/MOVSW/MOVSD/MOVSQ – Move Data from String to String	
Move data from string to string	1010 010w
Move data from string to string (qword)	0100 1000 1010 0101
MOVSX/MOVSXD – Move with Sign-Extend	
register2 to register1	0100 0R0B : 0000 1111 : 1011 111w : 11 reg1 reg2
byteregister2 to qwordregister1 (sign-extend)	0100 1R0B 0000 1111 : 1011 1110 : 11 quadreg1 bytereg2
wordregister2 to qwordregister1	0100 1R0B 0000 1111 : 1011 1111 : 11 quadreg1 wordreg2
dwordregister2 to qwordregister1	0100 1R0B 0110 0011 : 11 quadreg1 dwordreg2
memory to register	0100 0RXB : 0000 1111 : 1011 111w : mod reg r/m
memory8 to qwordregister (sign-extend)	0100 1RXB 0000 1111 : 1011 1110 : mod qwordreg r/m
memory16 to qwordregister	0100 1RXB 0000 1111 : 1011 1111 : mod qwordreg r/m
memory32 to qwordregister	0100 1RXB 0110 0011 : mod qwordreg r/m
MOVZX – Move with Zero-Extend	
register2 to register1	0100 0R0B : 0000 1111 : 1011 011w : 11 reg1 reg2
dwordregister2 to qwordregister1	0100 1R0B 0000 1111 : 1011 0111 : 11 qwordreg1 dwordreg2
memory to register	0100 0R0B : 0000 1111 : 1011 011w : mod reg r/m
memory32 to qwordregister	0100 1R0B 0000 1111 : 1011 0111 : mod qwordreg r/m
MUL – Unsigned Multiply	
AL, AX, or EAX with register	0100 000B : 1111 011w : 11 100 reg
RAX with qwordregister (to RDX:RAX)	0100 100B 1111 0111 : 11 100 qwordreg
AL, AX, or EAX with memory	0100 00XB 1111 011w : mod 100 r/m
RAX with memory64 (to RDX:RAX)	0100 10XB 1111 0111 : mod 100 r/m
NEG – Two's Complement Negation	
register	0100 000B : 1111 011w : 11 011 reg
qwordregister	0100 100B 1111 0111 : 11 011 qwordreg
memory	0100 00XB : 1111 011w : mod 011 r/m
memory64	0100 10XB 1111 0111 : mod 011 r/m
NOP – No Operation	1001 0000



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding
NOT – One's Complement Negation	
register	0100 000B: 1111 011w: 11 010 reg
qwordregister	0100 000B 1111 0111 : 11 010 qwordreg
memory	0100 00XB: 1111 011w: mod 010 r/m
memory64	0100 1RXB 1111 0111 : mod 010 r/m
OR – Logical Inclusive OR	
register1 to register2	0000 100w : 11 reg1 reg2
byteregister1 to byteregister2	0100 0R0B 0000 1000 : 11 bytereg1 bytereg2
qwordregister1 to qwordregister2	0100 1R0B 0000 1001 : 11 qwordreg1 qwordreg2
register2 to register1	0000 101w : 11 reg1 reg2
byteregister2 to byteregister1	0100 0R0B 0000 1010 : 11 bytereg1 bytereg2
qwordregister2 to qwordregister1	0100 0R0B 0000 1011 : 11 qwordreg1 qwordreg2
memory to register	0000 101w : mod reg r/m
memory8 to byteregister	0100 0RXB 0000 1010 : mod bytereg r/m
memory8 to qwordregister	0100 0RXB 0000 1011 : mod qwordreg r/m
register to memory	0000 100w : mod reg r/m
byteregister to memory8	0100 0RXB 0000 1000 : mod bytereg r/m
qwordregister to memory64	0100 1RXB 0000 1001 : mod qwordreg r/m
immediate to register	1000 00sw : 11 001 reg : imm
immediate8 to byteregister	0100 000B 1000 0000 : 11 001 bytereg : imm8
immediate32 to qwordregister	0100 000B 1000 0001 : 11 001 qwordreg : imm32
immediate8 to qwordregister	0100 000B 1000 0011 : 11 001 qwordreg : imm8
immediate to AL, AX, or EAX	0000 110w : imm
immediate64 to RAX	0100 1000 0000 1101 : imm64
immediate to memory	1000 00sw : mod 001 r/m : imm
immediate8 to memory8	0100 00XB 1000 0000 : mod 001 r/m : imm8
immediate32 to memory64	0100 00XB 1000 0001 : mod 001 r/m : imm32
immediate8 to memory64	0100 00XB 1000 0011 : mod 001 r/m : imm8
OUT – Output to Port	
fixed port	1110 011w : port number
variable port	1110 111w



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
OUTS – Output to DX Port	
output to DX Port	0110 111w
POP – Pop a Value from the Stack	
wordregister	0101 0101 : 0100 000B : 1000 1111 : 11 000 reg16
qwordregister	0100 W00B ^S : 1000 1111 : 11 000 reg64
wordregister (alternate encoding)	0101 0101 : 0100 000B : 0101 1 reg16
qwordregister (alternate encoding)	0100 W00B : 0101 1 reg64
memory64	0100 W0XB ^S : 1000 1111 : mod 000 r/m
memory16	0101 0101 : 0100 00XB 1000 1111 : mod 000 r/m
POP – Pop a Segment Register from the Stack (Note: CS cannot be sreg2 in this usage.)	
segment register FS, GS	0000 1111: 10 sreg3 001
POPF/POPFQ – Pop Stack into FLAGS/RFLAGS Register	
pop stack to FLAGS register	0101 0101 : 1001 1101
pop Stack to RFLAGS register	0100 1000 1001 1101
PUSH – Push Operand onto the Stack	
wordregister	0101 0101 : 0100 000B : 1111 1111 : 11 110 reg16
qwordregister	0100 W00B ^S : 1111 1111 : 11 110 reg64
wordregister (alternate encoding)	0101 0101 : 0100 000B : 0101 0 reg16
qwordregister (alternate encoding)	0100 W00B ^S : 0101 0 reg64
memory16	0101 0101 : 0100 000B : 1111 1111 : mod 110 r/m
memory64	0100 W00B ^S : 1111 1111 : mod 110 r/m
immediate8	0110 1010 : imm8
immediate16	0101 0101 : 0110 1000 : imm16
immediate64	0110 1000 : imm64
PUSH – Push Segment Register onto the Stack	
segment register FS,GS	0000 1111: 10 sreg3 000
PUSHF/PUSHFD – Push Flags Register onto the Stack	1001 1100
RCL – Rotate thru Carry Left	
register by 1	0100 000B : 1101 000w : 11 010 reg
qwordregister by 1	0100 100B 1101 0001 : 11 010 qwordreg



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	for 64-Bit Mode (Contd.)	
memory64 by 1 register by CL qwordregister by CL memory by CL memory by CL memory by CL register by immediate count qwordregister by immediate count memory by 1 memory by CL qwordregister by CL qwordregister by CL qwordregister by CL memory by immediate count qwordregister by immediate count qwordreg	Instruction and Format	Encoding
register by CL qwordregister by CL memory by CL memory by CL memory by CL register by immediate count memory by 1 memory by CL qwordregister by CL qwordregister by CL qwordregister by CL memory by immediate count qwordregister by immediate count memory by immediate memory by immediate memory by immediate memory by immed	memory by 1	0100 00XB : 1101 000w : mod 010 r/m
qwordregister by CL memory by CL memory by CL memory by CL register by immediate count qwordregister by immediate count memory 64 by immediate count RCR - Rotate thru Carry Right register by 1 qwordregister by 1 qwordregister by 1 memory 64 by CL memory by CL memory by CL memory 64 by CL memory 64 by CL memory 64 by immediate count qwordregister by immediate count memory 64 by immediate count memory 65 by immediate count memory 66 by immediate count memory 67 by immediate count memory 68 by immediate count memory 69 by immediate count memory 69 by immediate count memory 60 by immediate memory 60 by immediate memory 60 by im	memory64 by 1	0100 10XB 1101 0001 : mod 010 r/m
memory by CL memory64 by CL register by immediate count qwordregister by immediate count memory64 by immediate count RCR - Rotate thru Carry Right register by 1 qwordregister by 1 memory by 1 memory64 by 1 register by CL qwordregister by CL memory 64 by CL register by immediate count qwordregister by immediate count memory64 by immediate count memory64 by immediate count memory 64 by immediate count memory 64 by immediate count memory 65 by immediate count memory 66 by immediate count memory 67 by immediate count memory 68 by immediate count memory 69 brimmediate count memory 64 by immediate count memory 65 brimmediate count memory 66 brimmediate count memory 67 brimmediate count memory 68 brimmediate count memory 69 brimmediate count memory 60 brimmediate memo	register by CL	0100 000B : 1101 001w : 11 010 reg
memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count memory64 by immediate count memory64 by immediate count memory64 by immediate count memory64 by immediate count RCR – Rotate thru Carry Right register by 1 qwordregister by 1 memory64 by 1 memory64 by 1 memory64 by 1 register by CL qwordregister by CL memory by CL memory by CL memory by CL memory64 by CL register by immediate count qwordregister by immediate count memory64 by CL register by immediate count qwordregister by immediate count memory 64 by CL register by immediate count qwordregister by immediate count memory 64 by CL register by immediate count qwordregister by immediate count memory 64 by immediate count memory 65 by immediate count memory 64 by immediate count memory 65 by immediate count memory 64 by immediate count memory 65 by immediate count memory 64 by immediate count memory 65 by immediate count memory 64 by immediate count memory 65 by immediate count memory 66 by immediate count memory 67 by immediate count memory 68 by immediate count memory 69 by immediate count memory 69 by immediate count memory 60 by immediate memory 60 by i	qwordregister by CL	0100 100B 1101 0011 : 11 010 qwordreg
register by immediate count qwordregister by immediate count memory by immediate count memory by immediate count memory 64 by immediate count RCR – Rotate thru Carry Right register by 1 qwordregister by 1 qwordregister by 1 memory 64 by 1 memory 64 by 1 memory 64 by 1 memory 64 by 1 register by 1 qwordregister by CL qwordregister by CL qwordregister by CL memory by CL memory 64 by CL register by immediate count qwordregister	memory by CL	0100 00XB : 1101 001w : mod 010 r/m
qwordregister by immediate count memory by immediate count memory64 by immediate count RCR – Rotate thru Carry Right register by 1 qwordregister by 1 memory by 1 memory64 by 1 register by 1 qwordregister by 1 qwordregister by 1 qwordregister by 1 memory 64 by 1 register by CL qwordregister by CL memory by CL memory 64 by CL register by DL qwordregister by CL memory 64 by CL register by mimediate count qwordregister by immediate count qwordregister by immediate count memory 64 by immediate count memory 64 by immediate count memory 65 by immediate count memory 66 by immediate count memory 67 by immediate count memory 68 by immediate count memory 69 by immediate count memory 69 by immediate count memory 60 by immediate memo	memory64 by CL	0100 10XB 1101 0011 : mod 010 r/m
memory by immediate count memory64 by immediate count RCR - Rotate thru Carry Right register by 1 qwordregister by 1 memory by 1 memory by 1 memory64 by 1 register by CL qwordregister by CL qwordregister by CL memory by CL memory by CL memory by U memory64 by U register by immediate count qwordregister by immediate count qwordregister by immediate count qwordregister by immediate count memory by immediate memory by immediate memo	register by immediate count	0100 000B : 1100 000w : 11 010 reg : imm
memory64 by immediate count RCR - Rotate thru Carry Right register by 1 qwordregister by 1 memory by 1 memory64 by 1 register by CL qwordregister by CL qwordregister by CL memory by CL memory by CL memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count mem	qwordregister by immediate count	0100 100B 1100 0001 : 11 010 qwordreg : imm8
register by 1 qwordregister by 1 qwordregister by 1 memory by 1 register by CL qwordregister by CL memory 64 by CL register by immediate count qwordregister by immediate count memory by immediate count memory 64 by immediate count pwordregister by immediate count memory by immediate count memory 64 by immediate count pwordregister by immediate count memory 64 by immediate count memory 65 by immediate count memory 66 by immediate count memory 67 by immediate count memory 68 by immediate count memory 69 by immediate count memory 69 by immediate count memory 60 by immediate count memory 61 by immediate count memory 62 by immediate count memory 63 by immediate count memory 64 by immediate count memory 65 by immediate count memory 66 by immediate count memory 67 by immediate count memory 68 by immediate count memory 69 by immediate count memory 69 by immediate count memory 60 by immediate count memory 61 by immediate count memory 61 by immediate count memory 62 by immediate count memory 64 by imme	memory by immediate count	0100 00XB : 1100 000w : mod 010 r/m : imm
register by 1 qwordregister by 1 qwordregister by 1 memory by 1 memory64 by 1 register by CL qwordregister by CL qwordregister by CL qwordregister by CL memory by CL register by immediate count qwordregister by immediate count memory by immediate count	memory64 by immediate count	0100 10XB 1100 0001 : mod 010 r/m : imm8
qwordregister by 1 memory by 1 memory64 by 1 register by CL qwordregister by CL memory by CL memory64 by CL register by mmediate count qwordregister by immediate count memory by immediate count memory64 by immediate count memory65 by immediate count memory66 by immediate count memory67 by immediate count memory68 by immediate count memory69 by immediate count memory69 by immediate count memory69 by immediate count memory69 by immediate count memory60 by i	RCR – Rotate thru Carry Right	
memory by 1 memory64 by 1 register by CL qwordregister by CL memory64 by CL register by CL qwordregister by CL memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count memory64 by immediate count memory64 by immediate count memory65 by immediate count memory65 by immediate count memory66 by immediate count memory67 by immediate count memory68 by immediate count memory69 by immediate count memory69 by immediate count memory69 by immediate count memory60 by immediate count memory61 by immediate count memory62 by immediate count memory63 by immediate count memory64 by immediate count memory65 by immediate count memory66 by immediate count memory67 by immediate count memory68 by immediate count memory69 by immediate count memory69 by immediate count memory60 by immediate count memory60 by immediate count memory60 by immediate count memory61 by immediate count memory62 by immediate count memory63 by immediate count memory64 by immediate count memory64 by immediate count memory65 by immediate count memory66 by immediate count memory by immediate c	register by 1	0100 000B : 1101 000w : 11 011 reg
memory64 by 1 register by CL qwordregister by CL memory by CL memory64 by CL register by CL memory64 by CL register by immediate count memory by immediate count memory64 by immediate count memory by immediate count memory64 by immediate count memory by immediate	qwordregister by 1	0100 100B 1101 0001 : 11 011 qwordreg
register by CL qwordregister by CL memory by CL memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count memory64 by immediate count memory by imme	memory by 1	0100 00XB : 1101 000w : mod 011 r/m
qwordregister by CL memory by CL memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count qwordregister by immediate count qwordregister by immediate count memory by immediate count memory by immediate count memory64 by immediate count RDMSR - Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC - Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC - Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0000 1111 : 0011 0001	memory64 by 1	0100 10XB 1101 0001 : mod 011 r/m
memory by CL memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count memory64 by immediate count memory64 by immediate count memory64 by immediate count RDMSR - Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC - Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC - Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0100 10XB 1100 0000 : 11 011 qwordreg : imm8 0100 10XB 1100 0000 : mod 011 r/m : imm8 0100 10XB 1100 0000 : mod 011 r/m : imm8 0100 10XB 1100 0000 : mod 011 r/m : imm8 0100 10XB 1100 0000 : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8	register by CL	0100 000B : 1101 001w : 11 011 reg
memory64 by CL register by immediate count qwordregister by immediate count memory by immediate count memory64 by immediate count RDMSR - Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC - Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC - Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0100 10XB 1100 000w : 11 011 qwordreg : imm8 0100 00XB : 1100 000w : mod 011 r/m : imm8 0100 10XB 1100 0000 : mod 01	qwordregister by CL	0100 000B 1101 0010 : 11 011 qwordreg
register by immediate count qwordregister by immediate count qwordregister by immediate count memory by immediate count memory64 by immediate count RDMSR - Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC - Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC - Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0100 100B : 1100 000w : 11 011 reg : imm8 0100 100B : 1100 000w : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0100 10XB 1100 0000 : 11 0011 r/m : imm8 0100 10XB 1100 0000 : 11 0011 r/m : imm8 0100 10XB 1100 0000 : mod 011 r/m : imm8 0100 10XB 1100 0000 : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0000 1111 : 0011 0010	memory by CL	0100 00XB : 1101 001w : mod 011 r/m
qwordregister by immediate count memory by immediate count memory64 by immediate count RDMSR - Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC - Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC - Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0100 100B 1100 0001 : 11 011 qwordreg : imm8 0100 100XB : 1100 000w : mod 011 r/m : imm8 0100 100XB 1100 0001 : mod 011 r/m : imm8 0100 100XB 1100 0001 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 100XB 1100 0000 : mod 011 r/m : imm8 0100 1111 : 0011 0010	memory64 by CL	0100 10XB 1101 0011 : mod 011 r/m
memory by immediate count memory64 by immediate count RDMSR – Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC – Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC – Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0100 00XB : 1100 000w : mod 011 r/m : imm8 0100 10XB 1100 0001 : mod 011 r/m : imm8 0000 1111 : 0011 0010 0000 1111 : 0011 0011	register by immediate count	0100 000B : 1100 000w : 11 011 reg : imm8
memory64 by immediate count RDMSR – Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC – Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC – Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0100 10XB 1100 0001 : mod 011 r/m : imm8 0000 1111 : 0011 0010 0000 1111 : 0011 0011	qwordregister by immediate count	0100 100B 1100 0001 : 11 011 qwordreg : imm8
RDMSR – Read from Model-Specific Register load ECX-specified register into EDX:EAX RDPMC – Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC – Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0000 1111 : 0011 0011 0000 1111 : 0011 0001	memory by immediate count	0100 00XB : 1100 000w : mod 011 r/m : imm8
load ECX-specified register into EDX:EAX RDPMC – Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC – Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0000 1111 : 0011 0010 0000 1111 : 0011 0011	memory64 by immediate count	0100 10XB 1100 0001 : mod 011 r/m : imm8
RDPMC – Read Performance Monitoring Counters load ECX-specified performance counter into EDX:EAX RDTSC – Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0000 1111 : 0011 0001	RDMSR – Read from Model-Specific Register	
Counters load ECX-specified performance counter into EDX:EAX RDTSC - Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0000 1111 : 0011 0011	load ECX-specified register into EDX:EAX	0000 1111 : 0011 0010
RDTSC – Read Time-Stamp Counter read time-stamp counter into EDX:EAX 0000 1111 : 0011 0001		
read time-stamp counter into EDX:EAX 0000 1111 : 0011 0001		0000 1111 : 0011 0011
· ·	RDTSC – Read Time-Stamp Counter	
REP INS – Input String	read time-stamp counter into EDX:EAX	0000 1111 : 0011 0001
	REP INS – Input String	
REP LODS – Load String	REP LODS – Load String	



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
REP MOVS – Move String	
REP OUTS – Output String	
REP STOS – Store String	
REPE CMPS - Compare String	
REPE SCAS – Scan String	
REPNE CMPS – Compare String	
REPNE SCAS – Scan String	
RET – Return from Procedure (to same segment)	
no argument	1100 0011
adding immediate to SP	1100 0010 : 16-bit displacement
RET – Return from Procedure (to other segment)	
intersegment	1100 1011
adding immediate to SP	1100 1010 : 16-bit displacement
ROL – Rotate Left	
register by 1	0100 000B 1101 000w : 11 000 reg
byteregister by 1	0100 000B 1101 0000 : 11 000 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 000 qwordreg
memory by 1	0100 00XB 1101 000w : mod 000 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 000 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 000 r/m
register by CL	0100 000B 1101 001w : 11 000 reg
byteregister by CL	0100 000B 1101 0010 : 11 000 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 000 qwordreg
memory by CL	0100 00XB 1101 001w : mod 000 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 000 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 000 r/m
register by immediate count	1100 000w : 11 000 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 000 bytereg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 000 bytereg : imm8
memory by immediate count	1100 000w : mod 000 r/m : imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 000 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 000 r/m : imm8



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding
ROR - Rotate Right	
register by 1	0100 000B 1101 000w : 11 001 reg
byteregister by 1	0100 000B 1101 0000 : 11 001 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 001 qwordreg
memory by 1	0100 00XB 1101 000w : mod 001 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 001 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 001 r/m
register by CL	0100 000B 1101 001w : 11 001 reg
byteregister by CL	0100 000B 1101 0010 : 11 001 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 001 qwordreg
memory by CL	0100 00XB 1101 001w : mod 001 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 001 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 001 r/m
register by immediate count	0100 000B 1100 000w : 11 001 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 001 reg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 001 qwordreg : imm8
memory by immediate count	0100 00XB 1100 000w : mod 001 r/m : imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 001 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 001 r/m : imm8
RSM – Resume from System Management Mode	0000 1111 : 1010 1010
SAL - Shift Arithmetic Left	same instruction as SHL
SAR – Shift Arithmetic Right	
register by 1	0100 000B 1101 000w : 11 111 reg
byteregister by 1	0100 000B 1101 0000 : 11 111 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 111 qwordreg
memory by 1	0100 00XB 1101 000w : mod 111 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 111 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 111 r/m
register by CL	0100 000B 1101 001w : 11 111 reg
byteregister by CL	0100 000B 1101 0010 : 11 111 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 111 qwordreg



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mo	for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding	
memory by CL	0100 00XB 1101 001w : mod 111 r/m	
memory8 by CL	0100 00XB 1101 0010 : mod 111 r/m	
memory64 by CL	0100 10XB 1101 0011 : mod 111 r/m	
register by immediate count	0100 000B 1100 000w : 11 111 reg : imm8	
byteregister by immediate count	0100 000B 1100 0000 : 11 111 bytereg : imm8	
qwordregister by immediate count	0100 100B 1100 0001 : 11 111 qwordreg : imm8	
memory by immediate count	0100 00XB 1100 000w : mod 111 r/m : imm8	
memory8 by immediate count	0100 00XB 1100 0000 : mod 111 r/m : imm8	
memory64 by immediate count	0100 10XB 1100 0001 : mod 111 r/m : imm8	
SBB – Integer Subtraction with Borrow		
register1 to register2	0100 0R0B 0001 100w : 11 reg1 reg2	
byteregister1 to byteregister2	0100 0R0B 0001 1000 : 11 bytereg1 bytereg2	
quadregister1 to quadregister2	0100 1R0B 0001 1001 : 11 quadreg1 quadreg2	
register2 to register1	0100 0R0B 0001 101w : 11 reg1 reg2	
byteregister2 to byteregister1	0100 0R0B 0001 1010 : 11 reg1 bytereg2	
byteregister2 to byteregister1	0100 1R0B 0001 1011 : 11 reg1 bytereg2	
memory to register	0100 0RXB 0001 101w : mod reg r/m	
memory8 to byteregister	0100 0RXB 0001 1010 : mod bytereg r/m	
memory64 to byteregister	0100 1RXB 0001 1011 : mod quadreg r/m	
register to memory	0100 0RXB 0001 100w : mod reg r/m	
byteregister to memory8	0100 0RXB 0001 1000 : mod reg r/m	
quadregister to memory64	0100 1RXB 0001 1001 : mod reg r/m	
immediate to register	0100 000B 1000 00sw : 11 011 reg : imm	
immediate8 to byteregister	0100 000B 1000 0000 : 11 011 bytereg : imm8	
immediate32 to qwordregister	0100 100B 1000 0001 : 11 011 qwordreg : imm32	
immediate8 to qwordregister	0100 100B 1000 0011 : 11 011 qwordreg : imm8	
immediate to AL, AX, or EAX	0100 000B 0001 110w : imm	
immediate32 to RAL	0100 1000 0001 1101 : imm32	
immediate to memory	0100 00XB 1000 00sw : mod 011 r/m : imm	
immediate8 to memory8	0100 00XB 1000 0000 : mod 011 r/m : imm8	
immediate32 to memory64	0100 10XB 1000 0001 : mod 011 r/m : imm32	
immediate8 to memory64	0100 10XB 1000 0011 : mod 011 r/m : imm8	



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding
SCAS/SCASB/SCASW/SCASD – Scan String	
scan string	1010 111w
scan string (compare AL with byte at RDI)	0100 1000 1010 1110
scan string (compare RAX with qword at RDI)	0100 1000 1010 1111
SETcc – Byte Set on Condition	
register	0100 000B 0000 1111 : 1001 tttn : 11 000 reg
register	0100 0000 0000 1111 : 1001 tttn : 11 000 reg
memory	0100 00XB 0000 1111 : 1001 tttn : mod 000 r/m
memory	0100 0000 0000 1111 : 1001 tttn : mod 000 r/m
SGDT – Store Global Descriptor Table Register	0000 1111 : 0000 0001 : mod ^A 000 r/m
SHL - Shift Left	
register by 1	0100 000B 1101 000w : 11 100 reg
byteregister by 1	0100 000B 1101 0000 : 11 100 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 100 qwordreg
memory by 1	0100 00XB 1101 000w : mod 100 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 100 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 100 r/m
register by CL	0100 000B 1101 001w : 11 100 reg
byteregister by CL	0100 000B 1101 0010 : 11 100 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 100 qwordreg
memory by CL	0100 00XB 1101 001w : mod 100 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 100 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 100 r/m
register by immediate count	0100 000B 1100 000w : 11 100 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 100 bytereg : imm8
quadregister by immediate count	0100 100B 1100 0001 : 11 100 quadreg : imm8
memory by immediate count	0100 00XB 1100 000w : mod 100 r/m : imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 100 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 100 r/m : imm8



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mo	de (Conta.)
Instruction and Format	Encoding
SHLD - Double Precision Shift Left	
register by immediate count	0100 0R0B 0000 1111 : 1010 0100 : 11 reg2 reg1 : imm8
qwordregister by immediate8	0100 1R0B 0000 1111 : 1010 0100 : 11 qworddreg2 qwordreg1 : imm8
memory by immediate count	0100 0RXB 0000 1111 : 1010 0100 : mod reg r/m : imm8
memory64 by immediate8	0100 1RXB 0000 1111 : 1010 0100 : mod qwordreg r/m : imm8
register by CL	0100 0R0B 0000 1111 : 1010 0101 : 11 reg2 reg1
quadregister by CL	0100 1R0B 0000 1111 : 1010 0101 : 11 quadreg2 quadreg1
memory by CL	0100 00XB 0000 1111 : 1010 0101 : mod reg r/m
memory64 by CL	0100 1RXB 0000 1111 : 1010 0101 : mod quadreg r/m
SHR – Shift Right	
register by 1	0100 000B 1101 000w : 11 101 reg
byteregister by 1	0100 000B 1101 0000 : 11 101 bytereg
qwordregister by 1	0100 100B 1101 0001 : 11 101 qwordreg
memory by 1	0100 00XB 1101 000w : mod 101 r/m
memory8 by 1	0100 00XB 1101 0000 : mod 101 r/m
memory64 by 1	0100 10XB 1101 0001 : mod 101 r/m
register by CL	0100 000B 1101 001w : 11 101 reg
byteregister by CL	0100 000B 1101 0010 : 11 101 bytereg
qwordregister by CL	0100 100B 1101 0011 : 11 101 qwordreg
memory by CL	0100 00XB 1101 001w : mod 101 r/m
memory8 by CL	0100 00XB 1101 0010 : mod 101 r/m
memory64 by CL	0100 10XB 1101 0011 : mod 101 r/m
register by immediate count	0100 000B 1100 000w : 11 101 reg : imm8
byteregister by immediate count	0100 000B 1100 0000 : 11 101 reg : imm8
qwordregister by immediate count	0100 100B 1100 0001 : 11 101 reg : imm8
memory by immediate count	0100 00XB 1100 000w : mod 101 r/m : imm8
memory8 by immediate count	0100 00XB 1100 0000 : mod 101 r/m : imm8
memory64 by immediate count	0100 10XB 1100 0001 : mod 101 r/m : imm8



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mode (Contd.)	
Instruction and Format	Encoding
SHRD – Double Precision Shift Right	
register by immediate count	0100 0R0B 0000 1111 : 1010 1100 : 11 reg2 reg1 : imm8
qwordregister by immediate8	0100 1R0B 0000 1111 : 1010 1100 : 11 qwordreg2 qwordreg1 : imm8
memory by immediate count	0100 00XB 0000 1111 : 1010 1100 : mod reg r/m : imm8
memory64 by immediate8	0100 1RXB 0000 1111 : 1010 1100 : mod qwordreg r/m : imm8
register by CL	0100 000B 0000 1111 : 1010 1101 : 11 reg2 reg1
qwordregister by CL	0100 1R0B 0000 1111 : 1010 1101 : 11 qwordreg2 qwordreg1
memory by CL	0000 1111 : 1010 1101 : mod reg r/m
memory64 by CL	0100 1RXB 0000 1111 : 1010 1101 : mod qwordreg r/m
SIDT – Store Interrupt Descriptor Table Register	0000 1111 : 0000 0001 : mod ^A 001 r/m
SLDT – Store Local Descriptor Table Register	
to register	0100 000B 0000 1111 : 0000 0000 : 11 000 reg
to memory	0100 00XB 0000 1111 : 0000 0000 : mod 000 r/m
SMSW – Store Machine Status Word	
to register	0100 000B 0000 1111 : 0000 0001 : 11 100 reg
to memory	0100 00XB 0000 1111 : 0000 0001 : mod 100 r/m
STC – Set Carry Flag	1111 1001
STD – Set Direction Flag	1111 1101
STI – Set Interrupt Flag	1111 1011
STOS/STOSB/STOSW/STOSD/STOSQ - Store String Data	
store string data	1010 101w
store string data (RAX at address RDI)	0100 1000 1010 1011
STR – Store Task Register	
to register	0100 000B 0000 1111 : 0000 0000 : 11 001 reg
to memory	0100 00XB 0000 1111 : 0000 0000 : mod 001 r/m
SUB – Integer Subtraction	
register1 from register2	0100 0R0B 0010 100w : 11 reg1 reg2
byteregister1 from byteregister2	0100 0R0B 0010 1000 : 11 bytereg1 bytereg2



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
qwordregister1 from qwordregister2	0100 1R0B 0010 1000 : 11 qwordreg1 qwordreg2
register2 from register1	0100 0R0B 0010 101w : 11 reg1 reg2
byteregister2 from byteregister1	0100 0R0B 0010 1010 : 11 bytereg1 bytereg2
qwordregister2 from qwordregister1	0100 1R0B 0010 1011 : 11 qwordreg1 qwordreg2
memory from register	0100 00XB 0010 101w : mod reg r/m
memory8 from byteregister	0100 0RXB 0010 1010 : mod bytereg r/m
memory64 from qwordregister	0100 1RXB 0010 1011 : mod qwordreg r/m
register from memory	0100 0RXB 0010 100w : mod reg r/m
byteregister from memory8	0100 0RXB 0010 1000 : mod bytereg r/m
qwordregister from memory8	0100 1RXB 0010 1000 : mod qwordreg r/m
immediate from register	0100 000B 1000 00sw : 11 101 reg : imm
immediate8 from byteregister	0100 000B 1000 0000 : 11 101 bytereg : imm8
immediate32 from qwordregister	0100 100B 1000 0001 : 11 101 qwordreg : imm32
immediate8 from qwordregister	0100 100B 1000 0011 : 11 101 qwordreg : imm8
immediate from AL, AX, or EAX	0100 000B 0010 110w : imm
immediate32 from RAX	0100 1000 0010 1101 : imm32
immediate from memory	0100 00XB 1000 00sw : mod 101 r/m : imm
immediate8 from memory8	0100 00XB 1000 0000 : mod 101 r/m : imm8
immediate32 from memory64	0100 10XB 1000 0001 : mod 101 r/m : imm32
immediate8 from memory64	0100 10XB 1000 0011 : mod 101 r/m : imm8
SWAPGS – Swap GS Base Register	
GS base register value for value in MSR C0000102H	0000 1111 0000 0001 [this one incomplete]
SYSCALL - Fast System Call	
fast call to privilege level 0 system procedures	0000 1111 0000 0101
SYSRET – Return From Fast System Call	
return from fast system call	0000 1111 0000 0111
TEST – Logical Compare	
register1 and register2	0100 0R0B 1000 010w : 11 reg1 reg2
byteregister1 and byteregister2	0100 0R0B 1000 0100 : 11 bytereg1 bytereg2
qwordregister1 and qwordregister2	0100 1R0B 1000 0101 : 11 qwordreg1 qwordreg2
memory and register	0100 0R0B 1000 010w : mod reg r/m



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

for 64-Bit Mo	· ,
Instruction and Format	Encoding
memory8 and byteregister	0100 0RXB 1000 0100 : mod bytereg r/m
memory64 and qwordregister	0100 1RXB 1000 0101 : mod qwordreg r/m
immediate and register	0100 000B 1111 011w : 11 000 reg : imm
immediate8 and byteregister	0100 000B 1111 0110 : 11 000 bytereg : imm8
immediate32 and qwordregister	0100 100B 1111 0111 : 11 000 bytereg : imm8
immediate and AL, AX, or EAX	0100 000B 1010 100w : imm
immediate32 and RAX	0100 1000 1010 1001 : imm32
immediate and memory	0100 00XB 1111 011w : mod 000 r/m : imm
immediate8 and memory8	0100 1000 1111 0110 : mod 000 r/m : imm8
immediate32 and memory64	0100 1000 1111 0111 : mod 000 r/m : imm32
UD2 – Undefined instruction	0000 FFFF : 0000 1011
VERR – Verify a Segment for Reading	
register	0100 000B 0000 1111 : 0000 0000 : 11 100 reg
memory	0100 00XB 0000 1111 : 0000 0000 : mod 100 r/m
VERW – Verify a Segment for Writing	
register	0100 000B 0000 1111 : 0000 0000 : 11 101 reg
memory	0100 00XB 0000 1111 : 0000 0000 : mod 101 r/m
WAIT – Wait	1001 1011
WBINVD – Writeback and Invalidate Data Cache	0000 1111 : 0000 1001
WRMSR – Write to Model-Specific Register	
write EDX:EAX to ECX specified MSR	0000 1111 : 0011 0000
write RDX[31:0]:RAX[31:0] to RCX specified MSR	0100 1000 0000 1111 : 0011 0000
XADD – Exchange and Add	
register1, register2	0100 0R0B 0000 1111 : 1100 000w : 11 reg2 reg1
byteregister1, byteregister2	0100 0R0B 0000 1111 : 1100 0000 : 11 bytereg2 bytereg1
qwordregister1, qwordregister2	0100 0R0B 0000 1111 : 1100 0001 : 11 qwordreg2 qwordreg1
memory, register	0100 0RXB 0000 1111 : 1100 000w : mod reg r/m
memory8, bytereg	0100 1RXB 0000 1111 : 1100 0000 : mod bytereg r/m
memory64, qwordreg	0100 1RXB 0000 1111 : 1100 0001 : mod qwordreg r/m



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
Instruction and Format	Encoung
XCHG – Exchange Register/Memory with Register	
register1 with register2	1000 011w: 11 reg1 reg2
AX or EAX with register	1001 0 reg
memory with register	1000 011w : mod reg r/m
XLAT/XLATB – Table Look-up Translation	
AL to byte DS:[(E)BX + unsigned AL]	1101 0111
AL to byte DS:[RBX + unsigned AL]	0100 1000 1101 0111
XOR – Logical Exclusive OR	
register1 to register2	0100 0RXB 0011 000w : 11 reg1 reg2
byteregister1 to byteregister2	0100 0R0B 0011 0000 : 11 bytereg1 bytereg2
qwordregister1 to qwordregister2	0100 1R0B 0011 0001 : 11 qwordreg1 qwordreg2
register2 to register1	0100 0R0B 0011 001w : 11 reg1 reg2
byteregister2 to byteregister1	0100 0R0B 0011 0010 : 11 bytereg1 bytereg2
qwordregister2 to qwordregister1	0100 1R0B 0011 0011 : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB 0011 001w : mod reg r/m
memory8 to byteregister	0100 0RXB 0011 0010 : mod bytereg r/m
memory64 to qwordregister	0100 1RXB 0011 0011 : mod qwordreg r/m
register to memory	0100 0RXB 0011 000w : mod reg r/m
byteregister to memory8	0100 0RXB 0011 0000 : mod bytereg r/m
qwordregister to memory8	0100 1RXB 0011 0001 : mod qwordreg r/m
immediate to register	0100 000B 1000 00sw : 11 110 reg : imm
immediate8 to byteregister	0100 000B 1000 0000 : 11 110 bytereg : imm8
immediate32 to qwordregister	0100 100B 1000 0001 : 11 110 qwordreg : imm32
immediate8 to qwordregister	0100 100B 1000 0011 : 11 110 qwordreg : imm8
immediate to AL, AX, or EAX	0100 000B 0011 010w : imm
immediate to RAX	0100 1000 0011 0101 : immediate data
immediate to memory	0100 00XB 1000 00sw : mod 110 r/m : imm
immediate8 to memory8	0100 00XB 1000 0000 : mod 110 r/m : imm8
immediate32 to memory64	0100 10XB 1000 0001 : mod 110 r/m : imm32
immediate8 to memory64	0100 10XB 1000 0011 : mod 110 r/m : imm8



Table B-15. General Purpose Instruction Formats and Encodings for 64-Bit Mode (Contd.)

Instruction and Format	Encoding
Prefix Bytes	
address size	0110 0111
LOCK	1111 0000
operand size	0110 0110
CS segment override	0010 1110
DS segment override	0011 1110
ES segment override	0010 0110
FS segment override	0110 0100
GS segment override	0110 0101
SS segment override	0011 0110

B.3 PENTIUM® PROCESSOR FAMILY INSTRUCTION FORMATS AND ENCODINGS

The following table shows formats and encodings introduced by the Pentium processor family.

Table B-16. Pentium Processor Family Instruction Formats and Encodings, Non-64-Bit Modes

Instruction and Format	Encoding
CMPXCHG8B – Compare and Exchange 8 Bytes	
EDX:EAX with memory64	0000 1111 : 1100 0111 : mod 001 r/m

Table B-17. Pentium Processor Family Instruction Formats and Encodings, 64-Bit Mode

Instruction and Format	Encoding
CMPXCHG8B/CMPXCHG16B – Compare and Exchange Bytes	
EDX:EAX with memory64	0000 1111 : 1100 0111 : mod 001 r/m
RDX:RAX with memory128	0100 10XB 0000 1111 : 1100 0111 : mod 001 r/m



B.4 64-BIT MODE INSTRUCTION ENCODINGS FOR SIMD INSTRUCTION EXTENSIONS

Non-64-bit mode instruction encodings for MMX Technology, SSE, SSE2, and SSE3 are covered by applying these rules to Table B-19 through Table B-30. Table B-31 lists special encodings (instructions that do not follow the rules below).

- 1. The REX instruction has no effect:
 - On immediates
 - If both operands are MMX registers
 - On MMX registers and XMM registers
 - If an MMX register is encoded in the reg field of the ModR/M byte
- 2. If a memory operand is encoded in the r/m field of the ModR/M byte, REX.X and REX.B may be used for encoding the memory operand.
- 3. If a general-purpose register is encoded in the r/m field of the ModR/M byte, REX.B may be used for register encoding and REX.W may be used to encode the 64-bit operand size.
- 4. If an XMM register operand is encoded in the reg field of the ModR/M byte, REX.R may be used for register encoding. If an XMM register operand is encoded in the r/m field of the ModR/M byte, REX.B may be used for register encoding.

B.5 MMX INSTRUCTION FORMATS AND ENCODINGS

MMX instructions, except the EMMS instruction, use a format similar to the 2-byte Intel Architecture integer format. Details of subfield encodings within these formats are presented below.

B.5.1 Granularity Field (gg)

The granularity field (gg) indicates the size of the packed operands that the instruction is operating on. When this field is used, it is located in bits 1 and 0 of the second opcode byte. Table B-18 shows the encoding of the gg field.

gg Granularity of Data

00 Packed Bytes

01 Packed Words

10 Packed Doublewords

11 Quadword

Table B-18. Encoding of Granularity of Data Field (gg)



B.5.2 MMX Technology and General-Purpose Register Fields (mmxreg and reg)

When MMX technology registers (mmxreg) are used as operands, they are encoded in the ModR/M byte in the reg field (bits 5, 4, and 3) and/or the R/M field (bits 2, 1, and 0).

If an MMX instruction operates on a general-purpose register (reg), the register is encoded in the R/M field of the ModR/M byte.

B.5.3 MMX Instruction Formats and Encodings Table

Table B-19 shows the formats and encodings of the integer instructions.

Table B-19. MMX Instruction Formats and Encodings

Instruction and Format	Encoding
EMMS - Empty MMX technology state	0000 1111:01110111
MOVD - Move doubleword	
reg to mmreg	0000 1111:0110 1110: 11 mmxreg reg
reg from mmxreg	0000 1111:0111 1110: 11 mmxreg reg
mem to mmxreg	0000 1111:0110 1110: mod mmxreg r/m
mem from mmxreg	0000 1111:0111 1110: mod mmxreg r/m
MOVQ - Move quadword	
mmxreg2 to mmxreg1	0000 1111:0110 1111: 11 mmxreg1 mmxreg2
mmxreg2 from mmxreg1	0000 1111:0111 1111: 11 mmxreg1 mmxreg2
mem to mmxreg	0000 1111:0110 1111: mod mmxreg r/m
mem from mmxreg	0000 1111:0111 1111: mod mmxreg r/m
PACKSSDW ¹ - Pack dword to word data (signed with saturation)	
mmxreg2 to mmxreg1	0000 1111:0110 1011: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 1011: mod mmxreg r/m
PACKSSWB ¹ - Pack word to byte data (signed with saturation)	
mmxreg2 to mmxreg1	0000 1111:0110 0011: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 0011: mod mmxreg r/m
PACKUSWB ¹ - Pack word to byte data (unsigned with saturation)	
mmxreg2 to mmxreg1	0000 1111:0110 0111: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 0111: mod mmxreg r/m



Table B-19. MMX Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding (Contd.)
PADD - Add with wrap-around	
mmxreg2 to mmxreg1	0000 1111: 1111 11gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111: 1111 11gg: mod mmxreg r/m
PADDS - Add signed with saturation	
mmxreg2 to mmxreg1	0000 1111: 1110 11gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111: 1110 11gg: mod mmxreg r/m
PADDUS - Add unsigned with saturation	
mmxreg2 to mmxreg1	0000 1111: 1101 11gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111: 1101 11gg: mod mmxreg r/m
PAND - Bitwise And	
mmxreg2 to mmxreg1	0000 1111:1101 1011: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1101 1011: mod mmxreg r/m
PANDN - Bitwise AndNot	
mmxreg2 to mmxreg1	0000 1111:1101 1111: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1101 1111: mod mmxreg r/m
PCMPEQ - Packed compare for equality	
mmxreg1 with mmxreg2	0000 1111:0111 01gg: 11 mmxreg1 mmxreg2
mmxreg with memory	0000 1111:0111 01gg: mod mmxreg r/m
PCMPGT - Packed compare greater (signed)	
mmxreg1 with mmxreg2	0000 1111:0110 01gg: 11 mmxreg1 mmxreg2
mmxreg with memory	0000 1111:0110 01gg: mod mmxreg r/m
PMADDWD - Packed multiply add	
mmxreg2 to mmxreg1	0000 1111:1111 0101: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1111 0101: mod mmxreg r/m
PMULHUW - Packed multiplication, store high word (unsigned)	
mmxreg2 to mmxreg1	0000 1111: 1110 0100: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111: 1110 0100: mod mmxreg r/m
PMULHW - Packed multiplication, store high word	
mmxreg2 to mmxreg1	0000 1111:1110 0101: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1110 0101: mod mmxreg r/m



INSTRUCTION FORMATS AND ENCODINGS

Table B-19. MMX Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
PMULLW - Packed multiplication, store low word	
mmxreg2 to mmxreg1	0000 1111:1101 0101: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1101 0101: mod mmxreg r/m
POR - Bitwise Or	
mmxreg2 to mmxreg1	0000 1111:1110 1011: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1110 1011: mod mmxreg r/m
PSLL ² - Packed shift left logical	
mmxreg1 by mmxreg2	0000 1111:1111 00gg: 11 mmxreg1 mmxreg2
mmxreg by memory	0000 1111:1111 00gg: mod mmxreg r/m
mmxreg by immediate	0000 1111:0111 00gg: 11 110 mmxreg: imm8 data
PSRA ² - Packed shift right arithmetic	
mmxreg1 by mmxreg2	0000 1111:1110 00gg: 11 mmxreg1 mmxreg2
mmxreg by memory	0000 1111:1110 00gg: mod mmxreg r/m
mmxreg by immediate	0000 1111:0111 00gg: 11 100 mmxreg: imm8 data
PSRL ² - Packed shift right logical	
mmxreg1 by mmxreg2	0000 1111:1101 00gg: 11 mmxreg1 mmxreg2
mmxreg by memory	0000 1111:1101 00gg: mod mmxreg r/m
mmxreg by immediate	0000 1111:0111 00gg: 11 010 mmxreg: imm8 data
PSUB - Subtract with wrap-around	
mmxreg2 from mmxreg1	0000 1111:1111 10gg: 11 mmxreg1 mmxreg2
memory from mmxreg	0000 1111:1111 10gg: mod mmxreg r/m
PSUBS - Subtract signed with saturation	
mmxreg2 from mmxreg1	0000 1111:1110 10gg: 11 mmxreg1 mmxreg2
memory from mmxreg	0000 1111:1110 10gg: mod mmxreg r/m
PSUBUS - Subtract unsigned with saturation	
mmxreg2 from mmxreg1	0000 1111:1101 10gg: 11 mmxreg1 mmxreg2
memory from mmxreg	0000 1111:1101 10gg: mod mmxreg r/m
PUNPCKH - Unpack high data to next larger type	
mmxreg2 to mmxreg1	0000 1111:0110 10gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 10gg: mod mmxreg r/m



Table B-19. MMX Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
PUNPCKL - Unpack low data to next larger type	
mmxreg2 to mmxreg1	0000 1111:0110 00gg: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:0110 00gg: mod mmxreg r/m
PXOR - Bitwise Xor	
mmxreg2 to mmxreg1	0000 1111:1110 1111: 11 mmxreg1 mmxreg2
memory to mmxreg	0000 1111:1110 1111: mod mmxreg r/m

NOTES:

- 1 The pack instructions perform saturation from signed packed data of one type to signed or unsigned data of the next smaller type.
- 2 The format of the shift instructions has one additional format to support shifting by immediate shift-counts. The shift operations are not supported equally for all data types.

B.6 P6 FAMILY INSTRUCTION FORMATS AND ENCODINGS

Table B-20 shows the formats and encodings for several instructions that were introduced into the IA-32 architecture in the P6 family processors.

Table B-20. Formats and Encodings of P6 Family Instructions

Instruction and Format	Encoding
CMOVcc - Conditional Move	
register2 to register1	0000 1111: 0100 tttn : 11 reg1 reg2
memory to register	0000 1111 : 0100 tttn : mod reg r/m
FCMOVcc – Conditional Move on EFLAG Register Condition Codes	
move if below (B)	11011 010 : 11 000 ST(i)
move if equal (E)	11011 010 : 11 001 ST(i)
move if below or equal (BE)	11011 010 : 11 010 ST(i)
move if unordered (U)	11011 010 : 11 011 ST(i)
move if not below (NB)	11011 011 : 11 000 ST(i)
move if not equal (NE)	11011 011 : 11 001 ST(i)
move if not below or equal (NBE)	11011 011 : 11 010 ST(i)
move if not unordered (NU)	11011 011 : 11 011 ST(i)
FCOMI – Compare Real and Set EFLAGS	11011 011 : 11 110 ST(i)



rabio b 20. 1 ormate and Endounings of 1 or anning metrations (Contact)		
Instruction and Format	Encoding	
FXRSTOR—Restore x87 FPU, MMX, SSE, and SSE2 State	0000 1111:1010 1110: mod ^A 001 r/m	
FYSAVE—Save v87 FPII MMY SSF and SSF2	0000 1111:1010 1110: mod ^A 000 r/m	

0000 1111:0011 0100

0000 1111:0011 0101

Table B-20. Formats and Encodings of P6 Family Instructions (Contd.)

NOTES:

SYSENTER—Fast System Call

State

SYSEXIT—Fast Return from Fast System Call

B.7 SSE INSTRUCTION FORMATS AND ENCODINGS

The SSE instructions use the ModR/M format and are preceded by the 0FH prefix byte. In general, operations are not duplicated to provide two directions (that is, separate load and store variants).

The following three tables (Tables B-21, B-22, and B-23) show the formats and encodings for the SSE SIMD floating-point, SIMD integer, and cacheability and memory ordering instructions, respectively. Some SSE instructions require a mandatory prefix (66H, F2H, F3H) as part of the two-byte opcode. Mandatory prefixes are included in the tables.

Table B-21. Formats and Encodings of SSE Floating-Point Instructions

Instruction and Format	Encoding
ADDPS—Add Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1000:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1000: mod xmmreg r/m
ADDSS—Add Scalar Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:01011000:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:01011000: mod xmmreg r/m
ANDNPS—Bitwise Logical AND NOT of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0101: mod xmmreg r/m
ANDPS—Bitwise Logical AND of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0100: mod xmmreg r/m

^{*} In FXSAVE and FXRSTOR, "mod = 11" is reserved.



Table B-21. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
CMPPS—Compare Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0000 1111:1100 0010: mod xmmreg r/m: imm8
CMPSS—Compare Scalar Single- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	1111 0011:0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	1111 0011:0000 1111:1100 0010: mod xmmreg r/m: imm8
COMISS—Compare Scalar Ordered Single-Precision Floating-Point Values and Set EFLAGS	
xmmreg to xmmreg	0000 1111:0010 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0010 1111: mod xmmreg r/m
CVTPI2PS—Convert Packed Doubleword Integers to Packed Single-Precision Floating-Point Values	
mmreg to xmmreg	0000 1111:0010 1010:11 xmmreg1 mmreg1
mem to xmmreg	0000 1111:0010 1010: mod xmmreg r/m
CVTPS2PI—Convert Packed Single- Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to mmreg	0000 1111:0010 1101:11 mmreg1 xmmreg1
mem to mmreg	0000 1111:0010 1101: mod mmreg r/m
CVTSI2SS—Convert Doubleword Integer to Scalar Single-Precision Floating-Point Value	
r32 to xmmreg1	1111 0011:0000 1111:00101010:11 xmmreg r32
mem to xmmreg	1111 0011:0000 1111:00101010: mod xmmreg r/m
CVTSS2SI—Convert Scalar Single- Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	1111 0011:0000 1111:0010 1101:11 r32 xmmreg
mem to r32	1111 0011:0000 1111:0010 1101: mod r32 r/m
CVTTPS2PI—Convert with Truncation Packed Single-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to mmreg	0000 1111:0010 1100:11 mmreg1 xmmreg1
mem to mmreg	0000 1111:0010 1100: mod mmreg r/m



Table B-21. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
CVTTSS2SI—Convert with Truncation Scalar Single-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	1111 0011:0000 1111:0010 1100:11 r32 xmmreg1
mem to r32	1111 0011:0000 1111:0010 1100: mod r32 r/m
DIVPS—Divide Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1110: mod xmmreg r/m
DIVSS—Divide Scalar Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1110: mod xmmreg r/m
LDMXCSR—Load MXCSR Register State	
m32 to MXCSR	0000 1111:1010 1110:mod ^A 010 mem
MAXPS—Return Maximum Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1111: mod xmmreg r/m
MAXSS—Return Maximum Scalar Double- Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1111:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1111: mod xmmreg r/m
MINPS—Return Minimum Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1101: mod xmmreg r/m
MINSS—Return Minimum Scalar Double- Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1101:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1101: mod xmmreg r/m
MOVAPS—Move Aligned Packed Single- Precision Floating-Point Values	
xmmreg2 to xmmreg1	0000 1111:0010 1000:11 xmmreg2 xmmreg1
mem to xmmreg1	0000 1111:0010 1000: mod xmmreg r/m



Table B-21. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
xmmreg1 to xmmreg2	0000 1111:0010 1001:11 xmmreg1 xmmreg2
xmmreg1 to mem	0000 1111:0010 1001: mod xmmreg r/m
MOVHLPS—Move Packed Single- Precision Floating-Point Values High to Low	
xmmreg to xmmreg	0000 1111:0001 0010:11 xmmreg1 xmmreg2
MOVHPS—Move High Packed Single- Precision Floating-Point Values	
mem to xmmreg	0000 1111:0001 0110: mod xmmreg r/m
xmmreg to mem	0000 1111:0001 0111: mod xmmreg r/m
MOVLHPS—Move Packed Single- Precision Floating-Point Values Low to High	
xmmreg to xmmreg	0000 1111:00010110:11 xmmreg1 xmmreg2
MOVLPS—Move Low Packed Single- Precision Floating-Point Values	
mem to xmmreg	0000 1111:0001 0010: mod xmmreg r/m
xmmreg to mem	0000 1111:0001 0011: mod xmmreg r/m
MOVMSKPS—Extract Packed Single- Precision Floating-Point Sign Mask	
xmmreg to r32	0000 1111:0101 0000:11 r32 xmmreg
MOVSS—Move Scalar Single-Precision Floating-Point Values	
xmmreg2 to xmmreg1	1111 0011:0000 1111:0001 0000:11 xmmreg2 xmmreg1
mem to xmmreg1	1111 0011:0000 1111:0001 0000: mod xmmreg r/m
xmmreg1 to xmmreg2	1111 0011:0000 1111:0001 0001:11 xmmreg1 xmmreg2
xmmreg1 to mem	1111 0011:0000 1111:0001 0001: mod xmmreg r/m
MOVUPS—Move Unaligned Packed Single-Precision Floating-Point Values	
xmmreg2 to xmmreg1	0000 1111:0001 0000:11 xmmreg2 xmmreg1
mem to xmmreg1	0000 1111:0001 0000: mod xmmreg r/m
xmmreg1 to xmmreg2	0000 1111:0001 0001:11 xmmreg1 xmmreg2
xmmreg1 to mem	0000 1111:0001 0001: mod xmmreg r/m
MULPS—Multiply Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1001: mod xmmreg rm





Table B-21. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
MULSS—Multiply Scalar Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1001:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1001: mod xmmreg r/m
ORPS—Bitwise Logical OR of Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0110 mod xmmreg r/m
RCPPS—Compute Reciprocals of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0011: mod xmmreg r/m
RCPSS—Compute Reciprocals of Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:01010011:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:01010011: mod xmmreg r/m
RSQRTPS—Compute Reciprocals of Square Roots of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0010:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0010 mode xmmreg r/m
RSQRTSS—Compute Reciprocals of Square Roots of Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 0010:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 0010 mod xmmreg r/m
SHUFPS—Shuffle Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0000 1111:1100 0110:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0000 1111:1100 0110: mod xmmreg r/m: imm8
SQRTPS—Compute Square Roots of Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0001:11 xmmreg1 xmmreg 2
mem to xmmreg	0000 1111:0101 0001 mod xmmreg r/m



Table B-21. Formats and Encodings of SSE Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
SQRTSS—Compute Square Root of Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 0001:11 xmmreg1 xmmreg 2
mem to xmmreg	1111 0011:0000 1111:0101 0001:mod xmmreg r/m
STMXCSR—Store MXCSR Register State	
MXCSR to mem	0000 1111:1010 1110:mod ^A 011 mem
SUBPS—Subtract Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1100:mod xmmreg r/m
SUBSS—Subtract Scalar Single-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1100:mod xmmreg r/m
UCOMISS—Unordered Compare Scalar Ordered Single-Precision Floating-Point Values and Set EFLAGS	
xmmreg to xmmreg	0000 1111:0010 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0010 1110 mod xmmreg r/m
UNPCKHPS—Unpack and Interleave High Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0001 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0001 0101 mod xmmreg r/m
UNPCKLPS—Unpack and Interleave Low Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0001 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0001 0100 mod xmmreg r/m
XORPS—Bitwise Logical XOR of Single- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 0111:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 0111 mod xmmreg r/m



Table B-22. Formats and Encodings of SSE Integer Instructions

Instruction and Format	gs of SSE Integer Instructions Encoding
PAVGB/PAVGW—Average Packed Integers	3
mmreg to mmreg	0000 1111:1110 0000:11 mmreg1 mmreg2
	0000 1111:1110 0011:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 0000 mod mmreg r/m
-	0000 1111:1110 0011 mod mmreg r/m
PEXTRW—Extract Word	
mmreg to reg32, imm8	0000 1111:1100 0101:11 r32 mmreg: imm8
PINSRW - Insert Word	
reg32 to mmreg, imm8	0000 1111:1100 0100:11 mmreg r32: imm8
m16 to mmreg, imm8	0000 1111:1100 0100 mod mmreg r/m: imm8
PMAXSW—Maximum of Packed Signed Word Integers	
mmreg to mmreg	0000 1111:1110 1110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 1110 mod mmreg r/m
PMAXUB—Maximum of Packed Unsigned Byte Integers	
mmreg to mmreg	0000 1111:1101 1110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1101 1110 mod mmreg r/m
PMINSW—Minimum of Packed Signed Word Integers	
mmreg to mmreg	0000 1111:1110 1010:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 1010 mod mmreg r/m
PMINUB—Minimum of Packed Unsigned Byte Integers	
mmreg to mmreg	0000 1111:1101 1010:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1101 1010 mod mmreg r/m
PMOVMSKB - Move Byte Mask To Integer	
mmreg to reg32	0000 1111:1101 0111:11 r32 mmreg
PMULHUW—Multiply Packed Unsigned Integers and Store High Result	
mmreg to mmreg	0000 1111:1110 0100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1110 0100 mod mmreg r/m



Table B-22. Formats and Encodings of SSE Integer Instructions (Contd.)

Instruction and Format	Encoding
PSADBW—Compute Sum of Absolute Differences	
mmreg to mmreg	0000 1111:1111 0110:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1111 0110 mod mmreg r/m
PSHUFW—Shuffle Packed Words	
mmreg to mmreg, imm8	0000 1111:0111 0000:11 mmreg1 mmreg2: imm8
mem to mmreg, imm8	0000 1111:0111 0000:11 mod mmreg r/m: imm8

Table B-23. Format and Encoding of SSE Cacheability & Memory Ordering Instructions

Instruction and Format	Encoding
MASKMOVQ—Store Selected Bytes of Quadword	
mmreg to mmreg	0000 1111:1111 0111:11 mmreg1 mmreg2
MOVNTPS—Store Packed Single-Precision Floating- Point Values Using Non-Temporal Hint	
xmmreg to mem	0000 1111:0010 1011: mod xmmreg r/m
MOVNTQ—Store Quadword Using Non-Temporal Hint	
mmreg to mem	0000 1111:1110 0111: mod mmreg r/m
PREFETCHT0—Prefetch Temporal to All Cache Levels	0000 1111:0001 1000:mod ^A 001 mem
PREFETCHT1—Prefetch Temporal to First Level Cache	0000 1111:0001 1000:mod ^A 010 mem
PREFETCHT2—Prefetch Temporal to Second Level Cache	0000 1111:0001 1000:mod ^A 011 mem
PREFETCHNTA—Prefetch Non-Temporal to All Cache Levels	0000 1111:0001 1000:mod ^A 000 mem
SFENCE—Store Fence	0000 1111:1010 1110:11 111 000



The SSE2 instructions use the ModR/M format and are preceded by the 0FH prefix byte. In general, operations are not duplicated to provide two directions (that is, separate load and store variants).

The following three tables show the formats and encodings for the SSE2 SIMD floating-point, SIMD integer, and cacheability instructions, respectively. Some SSE2 instructions require a mandatory prefix (66H, F2H, F3H) as part of the two-byte opcode. These prefixes are included in the tables.

Granularity Field (gg) B.8.1

00

01

10

The granularity field (gg) indicates the size of the packed operands that the instruction is operating on. When this field is used, it is located in bits 1 and 0 of the second opcode byte. Table B-24 shows the encoding of this gg field.

Granularity of Data gg

Packed Bytes

Packed Words Packed Doublewords

Table B-24. Encoding of Granularity of Data Field (gg)

11	Quadword

Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions

Instruction and Format	Encoding
ADDPD - Add Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1000:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1000: mod xmmreg r/m
ADDSD - Add Scalar Double-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1000:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1000: mod xmmreg r/m
ANDNPD—Bitwise Logical AND NOT of Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0101: mod xmmreg r/m



Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
ANDPD—Bitwise Logical AND of Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0100: mod xmmreg r/m
CMPPD—Compare Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:1100 0010: mod xmmreg r/m: imm8
CMPSD—Compare Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	1111 0010:0000 1111:1100 0010:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	11110 010:0000 1111:1100 0010: mod xmmreg r/m: imm8
COMISD—Compare Scalar Ordered Double-Precision Floating-Point Values and Set EFLAGS	
xmmreg to xmmreg	0110 0110:0000 1111:0010 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0010 1111: mod xmmreg r/m
CVTPI2PD—Convert Packed Doubleword Integers to Packed Double- Precision Floating-Point Values	
mmreg to xmmreg	0110 0110:0000 1111:0010 1010:11 xmmreg1 mmreg1
mem to xmmreg	0110 0110:0000 1111:0010 1010: mod xmmreg r/m
CVTPD2PI—Convert Packed Double- Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to mmreg	0110 0110:0000 1111:0010 1101:11 mmreg1 xmmreg1
mem to mmreg	0110 0110:0000 1111:0010 1101: mod mmreg r/m
CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value	
r32 to xmmreg1	1111 0010:0000 1111:0010 1010:11 xmmreg r32
mem to xmmreg	1111 0010:0000 1111:0010 1010: mod xmmreg r/m



Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
CVTSD2SI—Convert Scalar Double- Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	1111 0010:0000 1111:0010 1101:11 r32 xmmreg
mem to r32	1111 0010:0000 1111:0010 1101: mod r32 r/m
CVTTPD2PI—Convert with Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to mmreg	0110 0110:0000 1111:0010 1100:11 mmreg xmmreg
mem to mmreg	0110 0110:0000 1111:0010 1100: mod mmreg r/m
CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	1111 0010:0000 1111:0010 1100:11 r32 xmmreg
mem to r32	1111 0010:0000 1111:0010 1100: mod r32 r/m
CVTPD2PS—Covert Packed Double- Precision Floating-Point Values to Packed Single-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1010: mod xmmreg r/m
CVTPS2PD—Covert Packed Single- Precision Floating-Point Values to Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1010: mod xmmreg r/m
CVTSD2SS—Covert Scalar Double- Precision Floating-Point Value to Scalar Single-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1010: mod xmmreg r/m
CVTSS2SD—Covert Scalar Single- Precision Floating-Point Value to Scalar Double-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:00001 111:0101 1010: mod xmmreg r/m



Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
CVTPD2DQ—Convert Packed Double- Precision Floating-Point Values to Packed Doubleword Integers	-
xmmreg to xmmreg	1111 0010:0000 1111:1110 0110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:1110 0110: mod xmmreg r/m
CVTTPD2DQ—Convert With Truncation Packed Double-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1110 0110: mod xmmreg r/m
CVTDQ2PD—Convert Packed Doubleword Integers to Packed Single- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0011:0000 1111:1110 0110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:1110 0110: mod xmmreg r/m
CVTPS2DQ—Convert Packed Single- Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1011: mod xmmreg r/m
CVTTPS2DQ—Convert With Truncation Packed Single-Precision Floating-Point Values to Packed Doubleword Integers	
xmmreg to xmmreg	1111 0011:0000 1111:0101 1011:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0101 1011: mod xmmreg r/m
CVTDQ2PS—Convert Packed Doubleword Integers to Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0000 1111:0101 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0000 1111:0101 1011: mod xmmreg r/m
DIVPD—Divide Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1110: mod xmmreg r/m
DIVSD—Divide Scalar Double-Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1110: mod xmmreg r/m



Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

reg1 xmmreg2
nmreg r/m
reg1 xmmreg2
nmreg r/m
nreg1 xmmreg2
mmreg r/m
reg1 xmmreg2
mmreg r/m
nreg2 xmmreg1
mmreg r/m
nreg1 xmmreg2
mmreg r/m
mmreg r/m
mmreg r/m
mmreg r/m
mmreg r/m
xmmreg



Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
MOVSD—Move Scalar Double-Precision Floating-Point Values	
xmmreg2 to xmmreg1	1111 0010:0000 1111:0001 0001:11 xmmreg2 xmmreg1
mem to xmmreg1	1111 0010:0000 1111:0001 0001: mod xmmreg r/m
xmmreg1 to xmmreg2	1111 0010:0000 1111:0001 0000:11 xmmreg1 xmmreg2
xmmreg1 to mem	1111 0010:0000 1111:0001 0000: mod xmmreg r/m
MOVUPD—Move Unaligned Packed Double-Precision Floating-Point Values	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0001 0001:11 xmmreg2 xmmreg1
mem to xmmreg1	0110 0110:0000 1111:0001 0001: mod xmmreg r/m
xmmreg1 to xmmreg2	0110 0110:0000 1111:0001 0000:11 xmmreg1 xmmreg2
xmmreg1 to mem	0110 0110:0000 1111:0001 0000: mod xmmreg r/m
MULPD—Multiply Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1001:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1001: mod xmmreg rm
MULSD—Multiply Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:00001111:01011001:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:00001111:01011001: mod xmmreg r/m
ORPD—Bitwise Logical OR of Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0110: mod xmmreg r/m
SHUFPD—Shuffle Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:1100 0110:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:1100 0110: mod xmmreg r/m: imm8
SQRTPD—Compute Square Roots of Packed Double-Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0001:11 xmmreg1 xmmreg 2
mem to xmmreg	0110 0110:0000 1111:0101 0001: mod xmmreg r/m



Table B-25. Formats and Encodings of SSE2 Floating-Point Instructions (Contd.)

Instruction and Format	Encoding
SQRTSD—Compute Square Root of Scalar Double-Precision Floating-Point Value	
xmmreg to xmmreg	1111 0010:0000 1111:0101 0001:11 xmmreg1 xmmreg 2
mem to xmmreg	1111 0010:0000 1111:0101 0001: mod xmmreg r/m
SUBPD—Subtract Packed Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 1100: mod xmmreg r/m
SUBSD—Subtract Scalar Double- Precision Floating-Point Values	
xmmreg to xmmreg	1111 0010:0000 1111:0101 1100:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0010:0000 1111:0101 1100: mod xmmreg r/m
UCOMISD—Unordered Compare Scalar Ordered Double-Precision Floating- Point Values and Set EFLAGS	
xmmreg to xmmreg	0110 0110:0000 1111:0010 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0010 1110: mod xmmreg r/m
UNPCKHPD—Unpack and Interleave High Packed Double-Precision Floating- Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0001 0101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0001 0101: mod xmmreg r/m
UNPCKLPD—Unpack and Interleave Low Packed Double-Precision Floating- Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0001 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0001 0100: mod xmmreg r/m
XORPD—Bitwise Logical OR of Double- Precision Floating-Point Values	
xmmreg to xmmreg	0110 0110:0000 1111:0101 0111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0101 0111: mod xmmreg r/m



Table B-26. Formats and Encodings of SSE2 Integer Instructions

Instruction and Format	Encoding
MOVD - Move Doubleword	
reg to xmmeg	0110 0110:0000 1111:0110 1110: 11 xmmreg reg
reg from xmmreg	0110 0110:0000 1111:0111 1110: 11 xmmreg reg
mem to xmmreg	0110 0110:0000 1111:0110 1110: mod xmmreg r/m
mem from xmmreg	0110 0110:0000 1111:0111 1110: mod xmmreg r/m
MOVDQA—Move Aligned Double Quadword	
xmmreg to xmmreg	0110 0110:0000 1111:0110 1111:11 xmmreg1 xmmreg2
	0110 0110:0000 1111:0111 1111:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 1111: mod xmmreg r/m
mem from xmmreg	0110 0110:0000 1111:0111 1111: mod xmmreg r/m
MOVDQU—Move Unaligned Double Quadword	
xmmreg to xmmreg	1111 0011:0000 1111:0110 1111:11 xmmreg1 xmmreg2
	1111 0011:0000 1111:0111 1111:11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0110 1111: mod xmmreg r/m
mem from xmmreg	1111 0011:0000 1111:0111 1111: mod xmmreg r/m
MOVQ2DQ—Move Quadword from MMX to XMM Register	
mmreg to xmmreg	1111 0011:0000 1111:1101 0110:11 mmreg1 mmreg2
MOVDQ2Q—Move Quadword from XMM to MMX Register	
xmmreg to mmreg	1111 0010:0000 1111:1101 0110:11 mmreg1 mmreg2
MOVQ - Move Quadword	
xmmreg2 to xmmreg1	1111 0011:0000 1111:0111 1110: 11 xmmreg1 xmmreg2
xmmreg2 from xmmreg1	0110 0110:0000 1111:1101 0110: 11 xmmreg1 xmmreg2
mem to xmmreg	1111 0011:0000 1111:0111 1110: mod xmmreg r/m
mem from xmmreg	0110 0110:0000 1111:1101 0110: mod xmmreg r/m
PACKSSDW ¹ - Pack Dword To Word Data (signed with saturation)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0110 1011: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:0110 1011: mod xmmreg r/m





Table B-26. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format Instruction and Format Instruction and Format	
Instruction and Format	Encoding
PACKSSWB - Pack Word To Byte Data (signed with saturation)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0110 0011: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:0110 0011: mod xmmreg r/m
PACKUSWB - Pack Word To Byte Data (unsigned with saturation)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:0110 0111: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:0110 0111: mod xmmreg r/m
PADDQ—Add Packed Quadword Integers	
mmreg to mmreg	0000 1111:1101 0100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1101 0100: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:1101 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1101 0100: mod xmmreg r/m
PADD - Add With Wrap-around	
xmmreg2 to xmmreg1	0110 0110:0000 1111: 1111 11gg: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111: 1111 11gg: mod xmmreg r/m
PADDS - Add Signed With Saturation	
xmmreg2 to xmmreg1	0110 0110:0000 1111: 1110 11gg: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111: 1110 11gg: mod xmmreg r/m
PADDUS - Add Unsigned With Saturation	
xmmreg2 to xmmreg1	0110 0110:0000 1111: 1101 11gg: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111: 1101 11gg: mod xmmreg r/m
PAND - Bitwise And	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1101 1011: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1101 1011: mod xmmreg r/m
PANDN - Bitwise AndNot	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1101 1111: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1101 1111: mod xmmreg r/m
PAVGB—Average Packed Integers	
xmmreg to xmmreg	0110 0110:0000 1111:11100 000:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:11100000 mod xmmreg r/m
l	1



Table B-26. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
PAVGW—Average Packed Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 0011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1110 0011 mod xmmreg r/m
PCMPEQ - Packed Compare For Equality	
xmmreg1 with xmmreg2	0110 0110:0000 1111:0111 01gg: 11 xmmreg1 xmmreg2
xmmreg with memory	0110 0110:0000 1111:0111 01gg: mod xmmreg r/m
PCMPGT - Packed Compare Greater (signed)	
xmmreg1 with xmmreg2	0110 0110:0000 1111:0110 01gg: 11 xmmreg1 xmmreg2
xmmreg with memory	0110 0110:0000 1111:0110 01gg: mod xmmreg r/m
PEXTRW—Extract Word	
xmmreg to reg32, imm8	0110 0110:0000 1111:1100 0101:11 r32 xmmreg: imm8
PINSRW - Insert Word	
reg32 to xmmreg, imm8	0110 0110:0000 1111:1100 0100:11 xmmreg r32: imm8
m16 to xmmreg, imm8	0110 0110:0000 1111:1100 0100 mod xmmreg r/m: imm8
PMADDWD - Packed Multiply Add	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1111 0101: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1111 0101: mod xmmreg r/m
PMAXSW—Maximum of Packed Signed Word Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 1110:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:11101110 mod xmmreg r/m
PMAXUB—Maximum of Packed Unsigned Byte Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1101 1110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1101 1110 mod xmmreg r/m
PMINSW—Minimum of Packed Signed Word Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1110 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1110 1010 mod xmmreg r/m
PMINUB—Minimum of Packed Unsigned Byte Integers	
xmmreg to xmmreg	0110 0110:0000 1111:1101 1010:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1101 1010 mod xmmreg r/m



Table B-26. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
PMOVMSKB - Move Byte Mask To Integer	
xmmreg to reg32	0110 0110:0000 1111:1101 0111:11 r32 xmmreg
PMULHUW - Packed multiplication, store high word (unsigned)	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 0100: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1110 0100: mod xmmreg r/m
PMULHW - Packed Multiplication, store high word	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 0101: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1110 0101: mod xmmreg r/m
PMULLW - Packed Multiplication, store low word	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1101 0101: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1101 0101: mod xmmreg r/m
PMULUDQ—Multiply Packed Unsigned Doubleword Integers	
mmreg to mmreg	0000 1111:1111 0100:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1111 0100: mod mmreg r/m
xmmreg to xmmreg	0110 0110:00001111:1111 0100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:00001111:1111 0100: mod xmmreg r/m
POR - Bitwise Or	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 1011: 11 xmmreg1 xmmreg2
xmemory to xmmreg	0110 0110:0000 1111:1110 1011: mod xmmreg r/m
PSADBW—Compute Sum of Absolute Differences	
xmmreg to xmmreg	0110 0110:0000 1111:1111 0110:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1111 0110: mod xmmreg r/m
PSHUFLW—Shuffle Packed Low Words	
xmmreg to xmmreg, imm8	1111 0010:0000 1111:0111 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	1111 0010:0000 1111:0111 0000:11 mod xmmreg r/m: imm8



Table B-26. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
PSHUFHW—Shuffle Packed High Words	
xmmreg to xmmreg, imm8	1111 0011:0000 1111:0111 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	1111 0011:0000 1111:0111 0000:11 mod xmmreg r/m: imm8
PSHUFD—Shuffle Packed Doublewords	
xmmreg to xmmreg, imm8	0110 0110:0000 1111:0111 0000:11 xmmreg1 xmmreg2: imm8
mem to xmmreg, imm8	0110 0110:0000 1111:0111 0000:11 mod xmmreg r/m: imm8
PSLLDQ—Shift Double Quadword Left Logical	
xmmreg, imm8	0110 0110:0000 1111:0111 0011:11 111 xmmreg: imm8
PSLL - Packed Shift Left Logical	
xmmreg1 by xmmreg2	0110 0110:0000 1111:1111 00gg: 11 xmmreg1 xmmreg2
xmmreg by memory	0110 0110:0000 1111:1111 00gg: mod xmmreg r/m
xmmreg by immediate	0110 0110:0000 1111:0111 00gg: 11 110 xmmreg: imm8
PSRA - Packed Shift Right Arithmetic	
xmmreg1 by xmmreg2	0110 0110:0000 1111:1110 00gg: 11 xmmreg1 xmmreg2
xmmreg by memory	0110 0110:0000 1111:1110 00gg: mod xmmreg r/m
xmmreg by immediate	0110 0110:0000 1111:0111 00gg: 11 100 xmmreg: imm8
PSRLDQ—Shift Double Quadword Right Logical	
xmmreg, imm8	0110 0110:00001111:01110011:11 011 xmmreg: imm8
PSRL - Packed Shift Right Logical	
xmmxreg1 by xmmxreg2	0110 0110:0000 1111:1101 00gg: 11 xmmreg1 xmmreg2
xmmxreg by memory	0110 0110:0000 1111:1101 00gg: mod xmmreg r/m
xmmxreg by immediate	0110 0110:0000 1111:0111 00gg: 11 010 xmmreg: imm8
PSUBQ—Subtract Packed Quadword Integers	
mmreg to mmreg	0000 1111:11111 011:11 mmreg1 mmreg2
mem to mmreg	0000 1111:1111 1011: mod mmreg r/m
xmmreg to xmmreg	0110 0110:0000 1111:1111 1011:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:1111 1011: mod xmmreg r/m



Table B-26. Formats and Encodings of SSE2 Integer Instructions (Contd.)

Instruction and Format	Encoding
PSUB - Subtract With Wrap-around	
xmmreg2 from xmmreg1	0110 0110:0000 1111:1111 10gg: 11 xmmreg1 xmmreg2
memory from xmmreg	0110 0110:0000 1111:1111 10gg: mod xmmreg r/m
PSUBS - Subtract Signed With Saturation	
xmmreg2 from xmmreg1	0110 0110:0000 1111:1110 10gg: 11 xmmreg1 xmmreg2
memory from xmmreg	0110 0110:0000 1111:1110 10gg: mod xmmreg r/m
PSUBUS - Subtract Unsigned With Saturation	
xmmreg2 from xmmreg1	0000 1111:1101 10gg: 11 xmmreg1 xmmreg2
memory from xmmreg	0000 1111:1101 10gg: mod xmmreg r/m
PUNPCKH—Unpack High Data To Next Larger Type	
xmmreg to xmmreg	0110 0110:0000 1111:0110 10gg:11 xmmreg1 Xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 10gg: mod xmmreg r/m
PUNPCKHQDQ—Unpack High Data	
xmmreg to xmmreg	0110 0110:0000 1111:0110 1101:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 1101: mod xmmreg r/m
PUNPCKL—Unpack Low Data To Next Larger Type	
xmmreg to xmmreg	0110 0110:0000 1111:0110 00gg:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 00gg: mod xmmreg r/m
PUNPCKLQDQ—Unpack Low Data	
xmmreg to xmmreg	0110 0110:0000 1111:0110 1100:11 xmmreg1 xmmreg2
mem to xmmreg	0110 0110:0000 1111:0110 1100: mod xmmreg r/m
PXOR - Bitwise Xor	
xmmreg2 to xmmreg1	0110 0110:0000 1111:1110 1111: 11 xmmreg1 xmmreg2
memory to xmmreg	0110 0110:0000 1111:1110 1111: mod xmmreg r/m



Table B-27. Format and Encoding of SSE2 Cacheability Instructions

Instruction and Format	Encoding
MASKMOVDQU—Store Selected Bytes of Double Quadword	
xmmreg to xmmreg	0110 0110:0000 1111:1111 0111:11 xmmreg1 xmmreg2
CLFLUSH—Flush Cache Line	
mem	0000 1111:1010 1110:mod r/m
MOVNTPD—Store Packed Double- Precision Floating-Point Values Using Non-Temporal Hint	
xmmreg to mem	0110 0110:0000 1111:0010 1011: mod xmmreg r/m
MOVNTDQ—Store Double Quadword Using Non-Temporal Hint	
xmmreg to mem	0110 0110:0000 1111:1110 0111: mod xmmreg r/m
MOVNTI—Store Doubleword Using Non-Temporal Hint	
reg to mem	0000 1111:1100 0011: mod reg r/m
PAUSE—Spin Loop Hint	1111 0011:1001 0000
LFENCE—Load Fence	0000 1111:1010 1110: 11 101 000
MFENCE—Memory Fence	0000 1111:1010 1110: 11 110 000



B.9 SSE3 FORMATS AND ENCODINGS TABLE

The tables in this section provide SSE3 formats and encodings. Some SSE3 instructions require a mandatory prefix (66H, F2H, F3H) as part of the two-byte opcode. These prefixes are included in the tables.

When in IA-32e mode, use of the REX.R prefix permits instructions that use general purpose and XMM registers to access additional registers. Some instructions require the REX.W prefix to promote the instruction to 64-bit operation. Instructions that require the REX.W prefix are listed (with their opcodes) in Section B.10.

Table B-28. Formats and Encodings of SSE3 Floating-Point Instructions

Instruction and Format	Encoding
ADDSUBPD—Add /Sub packed DP FP numbers from XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	01100110:00001111:11010000:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:11010000: mod xmmreg r/m
ADDSUBPS — Add /Sub packed SP FP numbers from XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	11110010:00001111:11010000:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:11010000: mod xmmreg r/m
HADDPD — Add horizontally packed DP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	01100110:00001111:01111100:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:01111100: mod xmmreg r/m
HADDPS — Add horizontally packed SP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	11110010:00001111:01111100:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:01111100: mod xmmreg r/m
HSUBPD — Sub horizontally packed DP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	01100110:00001111:01111101:11 xmmreg1 xmmreg2
mem to xmmreg	01100110:00001111:01111101: mod xmmreg r/m
HSUBPS — Sub horizontally packed SP FP numbers XMM2/Mem to XMM1	
xmmreg2 to xmmreg1	11110010:00001111:01111101:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:01111101: mod xmmreg r/m



Table B-29. Formats and Encodings for SSE3 Event Management Instructions

Instruction and Format	Encoding
MONITOR — Set up a linear address range to be monitored by hardware	
eax, ecx, edx	0000 1111 : 0000 0001:11 001 000
MWAIT — Wait until write-back store performed within the range specified by the instruction MONITOR	
eax, ecx	0000 1111 : 0000 0001:11 001 001

Table B-30. Formats and Encodings for SSE3 Integer and Move Instructions

Instruction and Format	Encoding
FISTTP — Store ST in int16 (chop) and pop	
m16int	11011 111 : mod ^A 001 r/m
FISTTP — Store ST in int32 (chop) and pop	
m32int	11011 011 : mod ^A 001 r/m
FISTTP — Store ST in int64 (chop) and pop	
m64int	11011 101 : mod ^A 001 r/m
LDDQU — Load unaligned integer 128-bit	
xmm, m128	11110010:00001111:11110000: mod ^A xmmreg r/m
MOVDDUP — Move 64 bits representing one DP data from XMM2/Mem to XMM1 and duplicate	
xmmreg2 to xmmreg1	11110010:00001111:00010010:11 xmmreg1 xmmreg2
mem to xmmreg	11110010:00001111:00010010: mod xmmreg r/m
MOVSHDUP — Move 128 bits representing 4 SP data from XMM2/Mem to XMM1 and duplicate high	
xmmreg2 to xmmreg1	11110011:00001111:00010110:11 xmmreg1 xmmreg2
mem to xmmreg	11110011:00001111:00010110: mod xmmreg r/m
MOVSLDUP — Move 128 bits representing 4 SP data from XMM2/Mem to XMM1 and duplicate low	
xmmreg2 to xmmreg1	11110011:00001111:00010010:11 xmmreg1 xmmreg2
mem to xmmreg	11110011:00001111:00010010: mod xmmreg r/m



B.10 SPECIAL ENCODINGS FOR 64-BIT MODE

The following Pentium, P6, MMX, SSE, SSE2, SSE3 instructions are promoted to 64-bit operation in IA-32e mode by using REX.W. However, these entries are special cases that do not follow the general rules (specified in Section B.4).

Table B-31. Special Case Instructions Promoted Using REX.W

Instruction and Format	Encoding
CMOVcc - Conditional Move	
register2 to register1	0100 0R0B 0000 1111: 0100 tttn : 11 reg1 reg2
qwordregister2 to qwordregister1	0100 1R0B 0000 1111: 0100 tttn : 11 qwordreg1 qwordreg2
memory to register	0100 0RXB 0000 1111 : 0100 tttn : mod reg r/m
memory64 to qwordregister	0100 1RXB 0000 1111 : 0100 tttn : mod qwordreg r/m
CVTSD2SI—Convert Scalar Double-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 1111 0010:0000 1111:0010 1101:11 r32 xmmreg
xmmreg to r64	0100 1R0B 1111 0010:0000 1111:0010 1101:11 r64 xmmreg
mem64 to r32	0100 0R0XB 1111 0010:0000 1111:0010 1101: mod r32 r/m
mem64 to r64	0100 1RXB 1111 0010:0000 1111:0010 1101: mod r64 r/m
CVTSI2SS—Convert Doubleword Integer to Scalar Single-Precision Floating-Point Value	
r32 to xmmreg1	0100 0R0B 1111 0011:0000 1111:0010 1010:11 xmmreg r32
r64 to xmmreg1	0100 1R0B 1111 0011:0000 1111:0010 1010:11 xmmreg r64
mem to xmmreg	0100 0RXB 1111 0011:0000 1111:0010 1010: mod xmmreg r/m
mem64 to xmmreg	0100 1RXB 1111 0011:0000 1111:0010 1010: mod xmmreg r/m
CVTSI2SD—Convert Doubleword Integer to Scalar Double-Precision Floating-Point Value	
r32 to xmmreg1	0100 0R0B 1111 0010:0000 1111:0010 1010:11 xmmreg r32
r64 to xmmreg1	0100 1R0B 1111 0010:0000 1111:0010 1010:11 xmmreg r64



Table B-31. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding
mem to xmmreg	0100 0RXB 1111 0010:0000 1111:00101 010: mod xmmreg r/m
mem64 to xmmreg	0100 1RXB 1111 0010:0000 1111:0010 1010: mod xmmreg r/m
CVTSS2SI—Convert Scalar Single-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 1111 0011:0000 1111:0010 1101:11 r32 xmmreg
xmmreg to r64	0100 1R0B 1111 0011:0000 1111:0010 1101:11 r64 xmmreg
mem to r32	0100 0RXB 11110011:00001111:00101101: mod r32 r/m
mem32 to r64	0100 1RXB 1111 0011:0000 1111:0010 1101: mod r64 r/m
CVTTSD2SI—Convert with Truncation Scalar Double-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 11110010:00001111:00101100:11 r32 xmmreg
xmmreg to r64	0100 1R0B 1111 0010:0000 1111:0010 1100:11 r64 xmmreg
mem64 to r32	0100 0RXB 1111 0010:0000 1111:0010 1100: mod r32 r/m
mem64 to r64	0100 1RXB 1111 0010:0000 1111:0010 1100: mod r64 r/m
CVTTSS2SI—Convert with Truncation Scalar Single-Precision Floating-Point Value to Doubleword Integer	
xmmreg to r32	0100 0R0B 1111 0011:0000 1111:0010 1100:11 r32 xmmreg1
xmmreg to r64	0100 1R0B 1111 0011:0000 1111:0010 1100:11 r64 xmmreg1
mem to r32	0100 0RXB 1111 0011:0000 1111:0010 1100: mod r32 r/m
mem32 to r64	0100 1RXB 1111 0011:0000 1111:0010 1100: mod r64 r/m
MOVD/MOVQ - Move doubleword	
reg to mmxreg	0100 0R0B 0000 1111:0110 1110: 11 mmxreg reg
qwordreg to mmxreg	0100 1R0B 0000 1111:0110 1110: 11 mmxreg qwordreg
reg from mmxreg	0100 0R0B 0000 1111:0111 1110: 11 mmxreg reg



Table B-31. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding	
qwordreg from mmxreg	0100 1R0B 0000 1111:0111 1110: 11 mmxreg qwordreg	
mem to mmxreg	0100 0RXB 0000 1111:0110 1110: mod mmxreg r/m	
mem64 to mmxreg	0100 1RXB 0000 1111:0110 1110: mod mmxreg r/m	
mem from mmxreg	0100 0RXB 0000 1111:0111 1110: mod mmxreg r/m	
mem64 from mmxreg	0100 1RXB 0000 1111:0111 1110: mod mmxreg r/m	
mmxreg with memory	0100 0RXB 0000 1111:0110 01gg: mod mmxreg r/m	
MOVMSKPS—Extract Packed Single-Precision Floating-Point Sign Mask		
xmmreg to r32	0100 0R0B 0000 1111:0101 0000:11 r32 xmmreg	
xmmreg to r64	0100 1R0B 00001111:01010000:11 r64 xmmreg	
PEXTRW—Extract Word		
mmreg to reg32, imm8	0100 0R0B 0000 1111:1100 0101:11 r32 mmreg: imm8	
mmreg to reg64, imm8	0100 1R0B 0000 1111:1100 0101:11 r64 mmreg: imm8	
xmmreg to reg32, imm8	0100 0R0B 0110 0110 0000 1111:1100 0101:11 r32 xmmreg: imm8	
xmmreg to reg64, imm8	0100 1R0B 0110 0110 0000 1111:1100 0101:11 r64 xmmreg: imm8	
PINSRW - Insert Word		
reg32 to mmreg, imm8	0100 0R0B 0000 1111:1100 0100:11 mmreg r32: imm8	
reg64 to mmreg, imm8	0100 1R0B 0000 1111:1100 0100:11 mmreg r64: imm8	
m16 to mmreg, imm8	0100 0R0B 0000 1111:1100 0100 mod mmreg r/m: imm8	
m16 to mmreg, imm8	0100 1RXB 0000 1111:11000100 mod mmreg r/m: imm8	
reg32 to xmmreg, imm8	0100 0RXB 0110 0110 0000 1111:1100 0100:11 xmmreg r32: imm8	
reg64 to xmmreg, imm8	0100 0RXB 0110 0110 0000 1111:1100 0100:11 xmmreg r64: imm8	
m16 to xmmreg, imm8	0100 0RXB 0110 0110 0000 1111:1100 0100 mod xmmreg r/m: imm8	



Table B-31. Special Case Instructions Promoted Using REX.W (Contd.)

Instruction and Format	Encoding
m16 to xmmreg, imm8	0100 1RXB 0110 0110 0000 1111:1100 0100 mod xmmreg r/m: imm8
PMOVMSKB - Move Byte Mask To Integer	
mmreg to reg32	0100 0RXB 0000 1111:1101 0111:11 r32 mmreg
mmreg to reg64	0100 1R0B 0000 1111:1101 0111:11 r64 mmreg
xmmreg to reg32	0100 0RXB 0110 0110 0000 1111:1101 0111:11 r32 mmreg
xmmreg to reg64	0110 0110 0000 1111:1101 0111:11 r64 xmmreg

B.11 FLOATING-POINT INSTRUCTION FORMATS AND ENCODINGS

Table B-32 shows the five different formats used for floating-point instructions. In all cases, instructions are at least two bytes long and begin with the bit pattern 11011.

Table B-32. General Floating-Point Instruction Formats

	Instruction										
	First Byte Second Byte					Optiona	al Fields				
1	11011	OI	PA	1	m	od	1	OPB	r/m	s-i-b	disp
2	11011	M	lF	OPA	m	od	OF	B	r/m	s-i-b	disp
3	11011	d	Р	OPA	1	1	OPB	R	ST(i)		
4	11011	0	0	1	1	1	1		OP		
5	11011	0	1	1	1	1	1		OP		
	15–11	10	9	8	7	6	5	4 3	2 1 0	- '	

 $MF = Memory\ Format$

00 — 32-bit real

01 — 32-bit integer

10 — 64-bit real

11 — 16-bit integer

P = Pop

0 — Do not pop stack

1 — Pop stack after operation

d = Destination

0 — Destination is ST(0)

1 — Destination is ST(i)

R XOR d = 0 — Destination OP Source R XOR d = 1 — Source OP Destination

ST(i) = Register stack element i

000 = Stack Top

001 = Second stack element

.

111 = Eighth stack element



The Mod and R/M fields of the ModR/M byte have the same interpretation as the corresponding fields of the integer instructions. The SIB byte and disp (displacement) are optionally present in instructions that have Mod and R/M fields. Their presence depends on the values of Mod and R/M, as for integer instructions.

Table B-33 shows the formats and encodings of the floating-point instructions.

Table B-33. Floating-Point Instruction Formats and Encodings

Instruction and Format	Encoding
F2XM1 – Compute 2 ^{ST(0)} – 1	11011 001 : 1111 0000
FABS – Absolute Value	11011 001 : 1110 0001
FADD – Add	
$ST(0) \leftarrow ST(0) + 32$ -bit memory	11011 000 : mod 000 r/m
$ST(0) \leftarrow ST(0) + 64$ -bit memory	11011 100 : mod 000 r/m
$ST(d) \leftarrow ST(0) + ST(i)$	11011 d00 : 11 000 ST(i)
FADDP – Add and Pop	
$ST(0) \leftarrow ST(0) + ST(i)$	11011 110 : 11 000 ST(i)
FBLD – Load Binary Coded Decimal	11011 111 : mod 100 r/m
FBSTP – Store Binary Coded Decimal and Pop	11011 111 : mod 110 r/m
FCHS – Change Sign	11011 001 : 1110 0000
FCLEX - Clear Exceptions	11011 011 : 1110 0010
FCOM – Compare Real	
32-bit memory	11011 000 : mod 010 r/m
64-bit memory	11011 100 : mod 010 r/m
ST(i)	11011 000 : 11 010 ST(i)
FCOMP – Compare Real and Pop	
32-bit memory	11011 000 : mod 011 r/m
64-bit memory	11011 100 : mod 011 r/m
ST(i)	11011 000 : 11 011 ST(i)
FCOMPP – Compare Real and Pop Twice	11011 110 : 11 011 001
FCOMIP – Compare Real, Set EFLAGS, and Pop	11011 111 : 11 110 ST(i)
FCOS – Cosine of ST(0)	11011 001 : 1111 1111
FDECSTP – Decrement Stack-Top Pointer	11011 001 : 1111 0110
FDIV – Divide	
$ST(0) \leftarrow ST(0) \div 32$ -bit memory	11011 000 : mod 110 r/m
ST(0) ← ST(0) ÷ 64-bit memory	11011 100 : mod 110 r/m
$ST(d) \leftarrow ST(0) \div ST(i)$	11011 d00 : 1111 R ST(i)



Table B-33. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
FDIVP – Divide and Pop	
$ST(0) \leftarrow ST(0) \div ST(i)$	11011 110 : 1111 1 ST(i)
FDIVR – Reverse Divide	
$ST(0) \leftarrow 32$ -bit memory $\div ST(0)$	11011 000 : mod 111 r/m
$ST(0) \leftarrow 64$ -bit memory $\div ST(0)$	11011 100 : mod 111 r/m
$ST(d) \leftarrow ST(i) \div ST(0)$	11011 d00 : 1111 R ST(i)
FDIVRP – Reverse Divide and Pop	
ST(0) " ST(i) ÷ ST(0)	11011 110 : 1111 0 ST(i)
FFREE – Free ST(i) Register	11011 101 : 1100 0 ST(i)
FIADD – Add Integer	
ST(0) ← ST(0) + 16-bit memory	11011 110 : mod 000 r/m
$ST(0) \leftarrow ST(0) + 32$ -bit memory	11011 010 : mod 000 r/m
FICOM – Compare Integer	
16-bit memory	11011 110 : mod 010 r/m
32-bit memory	11011 010 : mod 010 r/m
FICOMP – Compare Integer and Pop	
16-bit memory	11011 110 : mod 011 r/m
32-bit memory	11011 010 : mod 011 r/m
FIDIV	
$ST(0) \leftarrow ST(0) \div 16$ -bit memory	11011 110 : mod 110 r/m
$ST(0) \leftarrow ST(0) \div 32$ -bit memory	11011 010 : mod 110 r/m
FIDIVR	
$ST(0) \leftarrow 16$ -bit memory $\div ST(0)$	11011 110 : mod 111 r/m
$ST(0) \leftarrow 32$ -bit memory $\div ST(0)$	11011 010 : mod 111 r/m
FILD – Load Integer	
16-bit memory	11011 111 : mod 000 r/m
32-bit memory	11011 011 : mod 000 r/m
64-bit memory	11011 111 : mod 101 r/m
FIMUL	
$ST(0) \leftarrow ST(0) \times 16$ -bit memory	11011 110 : mod 001 r/m
$ST(0) \leftarrow ST(0) \times 32$ -bit memory	11011 010 : mod 001 r/m
FINCSTP – Increment Stack Pointer	11011 001 : 1111 0111
FINIT – Initialize Floating-Point Unit	





Table B-33. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding	
FIST – Store Integer		
16-bit memory	11011 111 : mod 010 r/m	
32-bit memory	11011 011 : mod 010 r/m	
FISTP – Store Integer and Pop		
16-bit memory	11011 111 : mod 011 r/m	
32-bit memory	11011 011 : mod 011 r/m	
64-bit memory	11011 111 : mod 111 r/m	
FISUB		
$ST(0) \leftarrow ST(0)$ - 16-bit memory	11011 110 : mod 100 r/m	
$ST(0) \leftarrow ST(0)$ - 32-bit memory	11011 010 : mod 100 r/m	
FISUBR		
$ST(0) \leftarrow 16$ -bit memory – $ST(0)$	11011 110 : mod 101 r/m	
$ST(0) \leftarrow 32$ -bit memory – $ST(0)$	11011 010 : mod 101 r/m	
FLD – Load Real		
32-bit memory	11011 001 : mod 000 r/m	
64-bit memory	11011 101 : mod 000 r/m	
80-bit memory	11011 011 : mod 101 r/m	
ST(i)	11011 001 : 11 000 ST(i)	
FLD1 - Load +1.0 into ST(0)	11011 001 : 1110 1000	
FLDCW - Load Control Word	11011 001 : mod 101 r/m	
FLDENV - Load FPU Environment	11011 001 : mod 100 r/m	
FLDL2E – Load $log_2(\varepsilon)$ into ST(0)	11011 001 : 1110 1010	
FLDL2T - Load log ₂ (10) into ST(0)	11011 001 : 1110 1001	
FLDLG2 – Load log ₁₀ (2) into ST(0)	11011 001 : 1110 1100	
FLDLN2 – Load $\log_{\epsilon}(2)$ into ST(0)	11011 001 : 1110 1101	
FLDPI – Load π into ST(0)	11011 001 : 1110 1011	



Table B-33. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding	
FLDZ - Load +0.0 into ST(0)	11011 001 : 1110 1110	
FMUL – Multiply		
$ST(0) \leftarrow ST(0) \times 32$ -bit memory	11011 000 : mod 001 r/m	
$ST(0) \leftarrow ST(0) \times 64$ -bit memory	11011 100 : mod 001 r/m	
$ST(d) \leftarrow ST(0) \times ST(i)$	11011 d00 : 1100 1 ST(i)	
FMULP – Multiply		
$ST(i) \leftarrow ST(0) \times ST(i)$	11011 110 : 1100 1 ST(i)	
FNOP – No Operation	11011 001 : 1101 0000	
FPATAN – Partial Arctangent	11011 001 : 1111 0011	
FPREM – Partial Remainder	11011 001 : 1111 1000	
FPREM1 – Partial Remainder (IEEE)	11011 001 : 1111 0101	
FPTAN - Partial Tangent	11011 001 : 1111 0010	
FRNDINT – Round to Integer	11011 001 : 1111 1100	
FRSTOR – Restore FPU State	11011 101 : mod 100 r/m	
FSAVE – Store FPU State	11011 101 : mod 110 r/m	
FSCALE - Scale	11011 001 : 1111 1101	
FSIN - Sine	11011 001 : 1111 1110	
FSINCOS – Sine and Cosine	11011 001 : 1111 1011	
FSQRT – Square Root	11011 001 : 1111 1010	
FST – Store Real		
32-bit memory	11011 001 : mod 010 r/m	
64-bit memory	11011 101 : mod 010 r/m	
ST(i)	11011 101 : 11 010 ST(i)	
FSTCW – Store Control Word	11011 001 : mod 111 r/m	
FSTENV – Store FPU Environment	11011 001 : mod 110 r/m	
FSTP – Store Real and Pop		
32-bit memory	11011 001 : mod 011 r/m	
64-bit memory	11011 101 : mod 011 r/m	
80-bit memory	11011 011 : mod 111 r/m	
ST(i)	11011 101 : 11 011 ST(i)	
FSTSW – Store Status Word into AX	11011 111 : 1110 0000	
FSTSW – Store Status Word into Memory	11011 101 : mod 111 r/m	





Table B-33. Floating-Point Instruction Formats and Encodings (Contd.)

Instruction and Format	Encoding
FSUB - Subtract	
$ST(0) \leftarrow ST(0) - 32$ -bit memory	11011 000 : mod 100 r/m
$ST(0) \leftarrow ST(0) - 64$ -bit memory	11011 100 : mod 100 r/m
$ST(d) \leftarrow ST(0) - ST(i)$	11011 d00 : 1110 R ST(i)
FSUBP – Subtract and Pop	
$ST(0) \leftarrow ST(0) - ST(i)$	11011 110 : 1110 1 ST(i)
FSUBR – Reverse Subtract	
$ST(0) \leftarrow 32$ -bit memory – $ST(0)$	11011 000 : mod 101 r/m
$ST(0) \leftarrow 64$ -bit memory – $ST(0)$	11011 100 : mod 101 r/m
$ST(d) \leftarrow ST(i) - ST(0)$	11011 d00 : 1110 R ST(i)
FSUBRP – Reverse Subtract and Pop	
$ST(i) \leftarrow ST(i) - ST(0)$	11011 110 : 1110 0 ST(i)
FTST – Test	11011 001 : 1110 0100
FUCOM – Unordered Compare Real	11011 101 : 1110 0 ST(i)
FUCOMP – Unordered Compare Real and Pop	11011 101 : 1110 1 ST(i)
FUCOMPP – Unordered Compare Real and Pop Twice	11011 010 : 1110 1001
FUCOMI – Unorderd Compare Real and Set EFLAGS	11011 011 : 11 101 ST(i)
FUCOMIP – Unorderd Compare Real, Set EFLAGS, and Pop	11011 111 : 11 101 ST(i)
FXAM – Examine	11011 001 : 1110 0101
FXCH – Exchange ST(0) and ST(i)	11011 001 : 1100 1 ST(i)
FXTRACT – Extract Exponent and Significand	11011 001 : 1111 0100
$FYL2X - ST(1) \times log_2(ST(0))$	11011 001 : 1111 0001
FYL2XP1 - ST(1) × log ₂ (ST(0) + 1.0)	11011 001 : 1111 1001
FWAIT – Wait until FPU Ready	1001 1011



C

Intel C/C++ Compiler Intrinsics and Functional Equivalents



APPENDIX C INTEL C/C++ COMPILER INTRINSICS AND FUNCTIONAL EQUIVALENTS

The two tables in this appendix itemize the Intel C/C++ compiler intrinsics and functional equivalents for the Intel MMX technology, SSE, SSE2, and SSE3 instructions.

There may be additional intrinsics that do not have an instruction equivalent. It is strongly recommended that the reader reference the compiler documentation for the complete list of supported intrinsics. Please refer to the *Intel C/C++ Compiler User's Guide With Support for the Streaming SIMD Extensions 2* (Order Number 718195-2001).

Table C-1 presents simple intrinsics and Table C-2 presents composite intrinsics. Some intrinsics are "composites" because they require more than one instruction to implement them.

Intel C/C++ Compiler intrinsic names reflect the following naming conventions:

mm<intrin_op>_<suffix>

where:

<intrin op>

Indicates the intrinsics basic operation; for example, add for addition and sub for subtraction

<suffix>

Denotes the type of data operated on by the instruction. The first one or two letters of each suffix denotes whether the data is packed (p), extended packed (ep), or scalar (s). The remaining letters denote the type:

- s single-precision floating point
- d double-precision floating point
- i128 signed 128-bit integer
- i64 signed 64-bit integer
- u64 unsigned 64-bit integer
- i32 signed 32-bit integer
- u32 unsigned 32-bit integer
- i16 signed 16-bit integer
- u16 unsigned 16-bit integer

INTEL C/C++ COMPILER INTRINSICS AND FUNCTIONAL EQUIVALENTS



i8 signed 8-bit integer

u8 unsigned 8-bit integer

The variable r is generally used for the intrinsic's return value. A number appended to a variable name indicates the element of a packed object. For example, r0 is the lowest word of r.

The packed values are represented in right-to-left order, with the lowest value being used for scalar operations. Consider the following example operation:

```
double a[2] = {1.0, 2.0};
__m128d t = _mm_load_pd(a);
The result is the same as either of the following:
__m128d t = _mm_set_pd(2.0, 1.0);
__m128d t = _mm_set_pd(1.0, 2.0);
```

In other words, the XMM register that holds the value t will look as follows:



The "scalar" element is 1.0. Due to the nature of the instruction, some intrinsics require their arguments to be immediates (constant integer literals).

To use an intrinsic in your code, insert a line with the following syntax:

data_type intrinsic_name (parameters)

Where:

__m128, __m128d, or __m128i. Only the _mm_empty intrinsic re-

turns void.

intrinsic_name Is the name of the intrinsic, which behaves like a function that you

can use in your C/C++ code instead of in-lining the actual instruction.

parameters Represents the parameters required by each intrinsic.



C.1 SIMPLE INTRINSICS

Table C-1. Simple Intrinsics

Mnemonic	Intrinsic	Description
ADDPD	m128d _mm_add_pd(m128d a,m128d b)	Adds the two DP FP (double-precision, floating-point) values of a and b.
ADDPS	m128 _mm_add_ps(m128 a,m128 b)	Adds the four SP FP (single-precision, floating-point) values of a and b.
ADDSD	m128d _mm_add_sd(m128d a,m128d b)	Adds the lower DP FP values of a and b; the upper three DP FP values are passed through from a.
ADDSS	m128 _mm_add_ss(m128 a,m128 b)	Adds the lower SP FP values of a and b; the upper three SP FP values are passed through from a.
ADDSUBPD	m128d _mm_addsub_pd(m128d a,m128d b)	Add/Subtract packed DP FP numbers from XMM2/Mem to XMM1.
ADDSUBPS	m128 _mm_addsub_ps(m128 a,m128 b)	Add/Subtract packed SP FP numbers from XMM2/Mem to XMM1.
ANDNPD	m128d _mm_andnot_pd(m128d a,m128d b)	Computes the bitwise AND- NOT of the two DP FP values of a and b.
ANDNPS	m128 _mm_andnot_ps(m128 a,m128 b)	Computes the bitwise AND- NOT of the four SP FP values of a and b.
ANDPD	m128d _mm_and_pd(m128d a,m128d b)	Computes the bitwise AND of the two DP FP values of a and b.
ANDPS	m128 _mm_and_ps(m128 a,m128 b)	Computes the bitwise AND of the four SP FP values of a and b.
CLFLUSH	void _mm_clflush(void const *p)	Cache line containing p is flushed and invalidated from all caches in the coherency domain.
CMPPD	m128d _mm_cmpeq_pd(m128d a,m128d b)	Compare for equality.
	m128d _mm_cmplt_pd(m128d a,m128d b)	Compare for less-than.
	m128d _mm_cmple_pd(m128d a,m128d b)	Compare for less-than-or-equal.
	m128d _mm_cmpgt_pd(m128d a,m128d b)	Compare for greater-than.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Schial	Description
	m128d _mm_cmpge_pd(m128d a,m128d b)	Compare for greater-than-or-equal.
	m128d _mm_cmpneq_pd(m128d a,m128d b)	Compare for inequality.
	m128d _mm_cmpnlt_pd(m128d a,m128d b)	Compare for not-less-than.
	m128d _mm_cmpngt_pd(m128d a,m128d b)	Compare for not-greater-than.
	m128d _mm_cmpnge_pd(m128d a,m128d b)	Compare for not-greater- than-or-equal.
	m128d _mm_cmpord_pd(m128d a,m128d b)	Compare for ordered.
	m128d _mm_cmpunord_pd(m128d a, m128d b)	Compare for unordered.
	m128d _mm_cmpnle_pd(m128d a,m128d b)	Compare for not-less-than-or-equal.
CMPPS	m128 _mm_cmpeq_ps(m128 a,m128 b)	Compare for equality.
	m128 _mm_cmplt_ps(m128 a,m128 b)	Compare for less-than.
	m128 _mm_cmple_ps(m128 a,m128 b)	Compare for less-than-or-equal.
	m128 _mm_cmpgt_ps(m128 a,m128 b)	Compare for greater-than.
	m128 _mm_cmpge_ps(m128 a,m128 b)	Compare for greater-than-or-equal.
	m128 _mm_cmpneq_ps(m128 a,m128 b)	Compare for inequality.
	m128 _mm_cmpnlt_ps(m128 a,m128 b)	Compare for not-less-than.
	m128 _mm_cmpngt_ps(m128 a,m128 b)	Compare for not-greater-than.
	m128 _mm_cmpnge_ps(m128 a,m128 b)	Compare for not-greater- than-or-equal.
	m128 _mm_cmpord_ps(m128 a,m128 b)	Compare for ordered.
	m128 _mm_cmpunord_ps(m128 a,m128 b)	Compare for unordered.
	m128 _mm_cmpnle_ps(m128 a,m128 b)	Compare for not-less-than-or- equal.
CMPSD	m128d _mm_cmpeq_sd(m128d a,m128d b)	Compare for equality.
	m128d _mm_cmplt_sd(m128d a,m128d b)	Compare for less-than.
	m128d _mm_cmple_sd(m128d a,m128d b)	Compare for less-than-or-equal.
	m128d _mm_cmpgt_sd(m128d a,m128d b)	Compare for greater-than.
	m128d _mm_cmpge_sd(m128d a,m128d b)	Compare for greater-than-or-equal.
	m128 _mm_cmpneq_sd(m128d a,m128d b)	Compare for inequality.
	m128 _mm_cmpnlt_sd(m128d a,m128d b)	Compare for not-less-than.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Conta.	Description
	m128d _mm_cmpnle_sd(m128d a,m128d b)	Compare for not-greater-than.
	m128d _mm_cmpngt_sd(m128d a,m128d b)	Compare for not-greater-than-or-equal.
	m128d _mm_cmpnge_sd(m128d a,m128d b)	Compare for ordered.
	m128d _mm_cmpord_sd(m128d a,m128d b)	Compare for unordered.
	m128d _mm_cmpunord_sd(m128d a, m128d b)	Compare for not-less-than-or-equal.
CMPSS	m128 _mm_cmpeq_ss(m128 a,m128 b)	Compare for equality.
	m128 _mm_cmplt_ss(m128 a,m128 b)	Compare for less-than.
	m128 _mm_cmple_ss(m128 a,m128 b)	Compare for less-than-or-equal.
	m128 _mm_cmpgt_ss(m128 a,m128 b)	Compare for greater-than.
	m128 _mm_cmpge_ss(m128 a,m128 b)	Compare for greater-than-or-equal.
	m128 _mm_cmpneq_ss(m128 a,m128 b)	Compare for inequality.
	m128 _mm_cmpnlt_ss(m128 a,m128 b)	Compare for not-less-than.
	m128 _mm_cmpnle_ss(m128 a,m128 b)	Compare for not-greater-than.
	m128 _mm_cmpngt_ss(m128 a,m128 b)	Compare for not-greater- than-or-equal.
	m128 _mm_cmpnge_ss(m128 a,m128 b)	Compare for ordered.
	m128 _mm_cmpord_ss(m128 a,m128 b)	Compare for unordered.
	m128 _mm_cmpunord_ss(m128 a,m128 b)	Compare for not-less-than-or-equal.
COMISD	int _mm_comieq_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a equal to b. If a and b are equal, 1 is returned. Otherwise 0 is returned.
	int _mm_comilt_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a less than b. If a is less than b, 1 is returned. Otherwise 0 is returned.
	int _mm_comile_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a less than or equal to b. If a is less than or equal to b, 1 is returned. Otherwise 0 is returned.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
	int _mm_comigt_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a greater than b. If a is greater than b are equal, 1 is returned. Otherwise 0 is returned.
	int _mm_comige_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a greater than or equal to b. If a is greater than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_comineq_sd(m128d a,m128d b)	Compares the lower SDP FP value of a and b for a not equal to b. If a and b are not equal, 1 is returned. Otherwise 0 is returned.
COMISS	int _mm_comieq_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a equal to b. If a and b are equal, 1 is returned. Otherwise 0 is returned.
	int _mm_comilt_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a less than b. If a is less than b, 1 is returned. Otherwise 0 is returned.
	int _mm_comile_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a less than or equal to b. If a is less than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_comigt_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a greater than b. If a is greater than b are equal, 1 is returned. Otherwise 0 is returned.
	int _mm_comige_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a greater than or equal to b. If a is greater than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_comineq_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a not equal to b. If a and b are not equal, 1 is returned. Otherwise 0 is returned.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
CVTDQ2PD	m128d _mm_cvtepi32_pd(m128i a)	Convert the lower two 32-bit signed integer values in packed form in a to two DP FP values.
CVTDQ2PS	m128 _mm_cvtepi32_ps(m128i a)	Convert the four 32-bit signed integer values in packed form in a to four SP FP values.
CVTPD2DQ	m128i _mm_cvtpd_epi32(m128d a)	Convert the two DP FP values in a to two 32-bit signed integer values.
CVTPD2PI	m64 _mm_cvtpd_pi32(m128d a)	Convert the two DP FP values in a to two 32-bit signed integer values.
CVTPD2PS	m128 _mm_cvtpd_ps(m128d a)	Convert the two DP FP values in a to two SP FP values.
CVTPI2PD	m128d _mm_cvtpi32_pd(m64 a)	Convert the two 32-bit integer values in a to two DP FP values
CVTPI2PS	m128 _mm_cvt_pi2ps(m128 a,m64 b) m128 _mm_cvtpi32_ps(m128 a,m64 b)	Convert the two 32-bit integer values in packed form in b to two SP FP values; the upper two SP FP values are passed through from a.
CVTPS2DQ	m128i _mm_cvtps_epi32(m128 a)	Convert four SP FP values in a to four 32-bit signed integers according to the current rounding mode.
CVTPS2PD	m128d _mm_cvtps_pd(m128 a)	Convert the lower two SP FP values in a to DP FP values.
CVTPS2PI	m64 _mm_cvt_ps2pi(m128 a) m64 _mm_cvtps_pi32(m128 a)	Convert the two lower SP FP values of a to two 32-bit integers according to the current rounding mode, returning the integers in packed form.
CVTSD2SI	int _mm_cvtsd_si32(m128d a)	Convert the lower DP FP value in a to a 32-bit integer value.
CVTSD2SS	m128 _mm_cvtsd_ss(m128 a,m128d b)	Convert the lower DP FP value in b to a SP FP value; the upper three SP FP values of a are passed through.
CVTSI2SD	m128d _mm_cvtsi32_sd(m128d a, int b)	Convert the 32-bit integer value b to a DP FP value; the upper DP FP values are passed through from a.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
CVTSI2SS	m128 _mm_cvt_si2ss(m128 a, int b)m128 _mm_cvtsi32_ss(m128a, int b)	Convert the 32-bit integer value b to an SP FP value; the upper three SP FP values are passed through from a.
CVTSS2SD	m128d _mm_cvtss_sd(m128d a,m128 b)	Convert the lower SP FP value of b to DP FP value, the upper DP FP value is passed through from a.
CVTSS2SI	int _mm_cvt_ss2si(m128 a) int _mm_cvtss_si32(m128 a)	Convert the lower SP FP value of a to a 32-bit integer.
CVTTPD2DQ	m128i _mm_cvttpd_epi32(m128d a)	Convert the two DP FP values of a to two 32-bit signed integer values with truncation, the upper two integer values are 0.
CVTTPD2PI	m64 _mm_cvttpd_pi32(m128d a)	Convert the two DP FP values of a to 32-bit signed integer values with truncation.
CVTTPS2DQ	m128i _mm_cvttps_epi32(m128 a)	Convert four SP FP values of a to four 32-bit integer with truncation.
CVTTPS2PI	m64 _mm_cvtt_ps2pi(m128 a) m64 _mm_cvttps_pi32(m128 a)	Convert the two lower SP FP values of a to two 32-bit integer with truncation, returning the integers in packed form.
CVTTSD2SI	int _mm_cvttsd_si32(m128d a)	Convert the lower DP FP value of a to a 32-bit signed integer using truncation.
CVTTSS2SI	int _mm_cvtt_ss2si(m128 a) int _mm_cvttss_si32(m128 a)	Convert the lower SP FP value of a to a 32-bit integer according to the current rounding mode.
	m64 _mm_cvtsi32_si64(int i)	Convert the integer object i to a 64-bitm64 object. The integer value is zero extended to 64 bits.
	int _mm_cvtsi64_si32(m64 m)	Convert the lower 32 bits of them64 object m to an integer.
DIVPD	m128d _mm_div_pd(m128d a,m128d b)	Divides the two DP FP values of a and b.
DIVPS	m128 _mm_div_ps(m128 a,m128 b)	Divides the four SP FP values of a and b.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Conta.	Description
DIVSD	m128d _mm_div_sd(m128d a,m128d b)	Divides the lower DP FP values of a and b; the upper three DP FP values are passed through from a.
DIVSS	m128 _mm_div_ss(m128 a,m128 b)	Divides the lower SP FP values of a and b; the upper three SP FP values are passed through from a.
EMMS	void _mm_empty()	Clears the MMX technology state.
HADDPD	m128d _mm_hadd_pd(m128d a,m128d b)	Add horizontally packed DP FP numbers from XMM2/Mem to XMM1
HADDPS	m128 _mm_hadd_ps(m128 a,m128 b)	Add horizontally packed SP FP numbers from XMM2/Mem to XMM1
HSUBPD	m128d _mm_hsub_pd(m128d a,m128d b)	Subtract horizontally packed DP FP numbers in XMM2/Mem from XMM1.
HSUBPS	m128 _mm_hsub_ps(m128 a,m128 b)	Subtract horizontally packed SP FP numbers in XMM2/Mem from XMM1.
LDDQU	m128i _mm_lddqu_si128(m128i const *p)	Load 128 bits from Mem to XMM register.
LDMXCSR	_mm_setcsr(unsigned int i)	Sets the control register to the value specified.
LFENCE	void _mm_lfence(void)	Guaranteed that every load that proceeds, in program order, the load fence instruction is globally visible before any load instruction that follows the fence in program order.
MASKMOVDQU	void _mm_maskmoveu_si128(m128i d,m128i n, char *p)	Conditionally store byte elements of d to address p. The high bit of each byte in the selector n determines whether the corresponding byte in d will be stored.
MASKMOVQ	void _mm_maskmove_si64(m64 d,m64 n, char *p)	Conditionally store byte elements of d to address p. The high bit of each byte in the selector n determines whether the corresponding byte in d will be stored.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
MAXPD	m128d _mm_max_pd(m128d a,m128d b)	Computes the maximums of the two DP FP values of a and b.
MAXPS	m128 _mm_max_ps(m128 a,m128 b)	Computes the maximums of the four SP FP values of a and b.
MAXSD	m128d _mm_max_sd(m128d a,m128d b)	Computes the maximum of the lower DP FP values of a and b; the upper DP FP values are passed through from a.
MAXSS	m128 _mm_max_ss(m128 a,m128 b)	Computes the maximum of the lower SP FP values of a and b; the upper three SP FP values are passed through from a.
MFENCE	void _mm_mfence(void)	Guaranteed that every memory access that proceeds, in program order, the memory fence instruction is globally visible before any memory instruction that follows the fence in program order.
MINPD	m128d _mm_min_pd(m128d a,m128d b)	Computes the minimums of the two DP FP values of a and b.
MINPS	m128 _mm_min_ps(m128 a,m128 b)	Computes the minimums of the four SP FP values of a and b.
MINSD	m128d _mm_min_sd(m128d a,m128d b)	Computes the minimum of the lower DP FP values of a and b; the upper DP FP values are passed through from a.
MINSS	m128 _mm_min_ss(m128 a,m128 b)	Computes the minimum of the lower SP FP values of a and b; the upper three SP FP values are passed through from a.
MONITOR	void _mm_monitor(void const *p, unsigned extensions, unsigned hints)	Sets up a linear address range to be monitored by hardware and activates the monitor. The address range should be of a write-back memory caching type.
MOVAPD	m128d _mm_load_pd(double * p)	Loads two DP FP values. The address p must be 16-byte-aligned.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
	void_mm_store_pd(double *p,m128d a)	Stores two DP FP values to address p. The address p must be 16-byte-aligned.
MOVAPS	m128 _mm_load_ps(float * p)	Loads four SP FP values. The address p must be 16-byte-aligned.
	void_mm_store_ps(float *p,m128 a)	Stores four SP FP values. The address p must be 16- byte-aligned.
MOVD	m128i _mm_cvtsi32_si128(int a)	Moves 32-bit integer a to the lower 32-bit of the 128-bit destination, while zero-extending he upper bits.
	int _mm_cvtsi128_si32(m128i a)	Moves lower 32-bit integer of a to a 32-bit signed integer.
	m64 _mm_cvtsi32_si64(int a)	Moves 32-bit integer a to the lower 32-bit of the 64-bit destination, while zero-extending he upper bits.
	int _mm_cvtsi64_si32(m64 a)	Moves lower 32-bit integer of a to a 32-bit signed integer.
MOVDDUP	m128d _mm_movedup_pd(m128d a) m128d _mm_loaddup_pd(double const * dp)	Move 64 bits representing the lower DP data element from XMM2/Mem to XMM1 register and duplicate.
MOVDQA	m128i _mm_load_si128(m128i * p)	Loads 128-bit values from p. The address p must be 16- byte-aligned.
	void_mm_store_si128(m128i *p,m128i a)	Stores 128-bit value in a to address p. The address p must be 16-byte-aligned.
MOVDQU	m128i _mm_loadu_si128(m128i * p)	Loads 128-bit values from p. The address p need not be 16-byte-aligned.
	void_mm_storeu_si128(m128i *p,m128i a)	Stores 128-bit value in a to address p. The address p need not be 16-byte-aligned.
MOVDQ2Q	m64 _mm_movepi64_pi64(m128i a)	Return the lower 64-bits in a asm64 type.
MOVHLPS	m128 _mm_movehl_ps(m128 a,m128 b)	Moves the upper 2 SP FP values of b to the lower 2 SP FP values of the result. The upper 2 SP FP values of a are passed through to the result.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
MOVHPD	m128d _mm_loadh_pd(m128d a, double * p)	Load a DP FP value from the address p to the upper 64 bits of destination; the lower 64 bits are passed through from a.
	void _mm_storeh_pd(double * p,m128d a)	Stores the upper DP FP value of a to the address p.
MOVHPS	m128 _mm_loadh_pi(m128 a,m64 * p)	Sets the upper two SP FP values with 64 bits of data loaded from the address p; the lower two values are passed through from a.
	void _mm_storeh_pi(m64 * p,m128 a)	Stores the upper two SP FP values of a to the address p.
MOVLPD	m128d _mm_loadl_pd(m128d a, double * p)	Load a DP FP value from the address p to the lower 64 bits of destination; the upper 64 bits are passed through from a.
	void _mm_storel_pd(double * p,m128d a)	Stores the lower DP FP value of a to the address p.
MOVLPS	m128 _mm_loadl_pi(m128 a,m64 *p)	Sets the lower two SP FP values with 64 bits of data loaded from the address p; the upper two values are passed through from a.
	void_mm_storel_pi(m64 * p,m128 a)	Stores the lower two SP FP values of a to the address p.
MOVLHPS	m128 _mm_movelh_ps(m128 a,m128 b)	Moves the lower 2 SP FP values of b to the upper 2 SP FP values of the result. The lower 2 SP FP values of a are passed through to the result.
MOVMSKPD	int _mm_movemask_pd(m128d a)	Creates a 2-bit mask from the sign bits of the two DP FP values of a.
MOVMSKPS	int _mm_movemask_ps(m128 a)	Creates a 4-bit mask from the most significant bits of the four SP FP values.
MOVNTDQ	void_mm_stream_si128(m128i * p,m128i a)	Stores the data in a to the address p without polluting the caches. If the cache line containing p is already in the cache, the cache will be updated. The address must be 16-byte-aligned.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Conta.	Description
MOVNTPD	void_mm_stream_pd(double * p,m128d a)	Stores the data in a to the address p without polluting the caches. The address must be 16-byte-aligned.
MOVNTPS	void_mm_stream_ps(float * p,m128 a)	Stores the data in a to the address p without polluting the caches. The address must be 16-byte-aligned.
MOVNTI	void_mm_stream_si32(int * p, int a)	Stores the data in a to the address p without polluting the caches.
MOVNTQ	void_mm_stream_pi(m64 * p,m64 a)	Stores the data in a to the address p without polluting the caches.
MOVQ	m128i _mm_loadl_epi64(m128i * p)	Loads the lower 64 bits from p into the lower 64 bits of destination and zero-extend the upper 64 bits.
	void_mm_storel_epi64(_m128i * p,m128i a)	Stores the lower 64 bits of a to the lower 64 bits at p.
	m128i _mm_move_epi64(m128i a)	Moves the lower 64 bits of a to the lower 64 bits of destination. The upper 64 bits are cleared.
MOVQ2DQ	m128i _mm_movpi64_epi64(m64 a)	Move the 64 bits of a into the lower 64-bits, while zero-extending the upper bits.
MOVSD	m128d _mm_load_sd(double * p)	Loads a DP FP value from p into the lower DP FP value and clears the upper DP FP value. The address P need not be 16-byte aligned.
	void_mm_store_sd(double * p,m128d a)	Stores the lower DP FP value of a to address p. The address P need not be 16-byte aligned.
	m128d _mm_move_sd(m128d a,m128d b)	Sets the lower DP FP values of b to destination. The upper DP FP value is passed through from a.
MOVSHDUP	m128 _mm_movehdup_ps(m128 a)	Move 128 bits representing packed SP data elements from XMM2/Mem to XMM1 register and duplicate high.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
MOVSLDUP	m128 _mm_moveldup_ps(m128 a)	Move 128 bits representing packed SP data elements from XMM2/Mem to XMM1 register and duplicate low.
MOVSS	m128 _mm_load_ss(float * p)	Loads an SP FP value into the low word and clears the upper three words.
	void_mm_store_ss(float * p,m128 a)	Stores the lower SP FP value.
	m128 _mm_move_ss(m128 a,m128 b)	Sets the low word to the SP FP value of b. The upper 3 SP FP values are passed through from a.
MOVUPD	m128d _mm_loadu_pd(double * p)	Loads two DP FP values from p. The address p need not be 16-byte-aligned.
	void_mm_storeu_pd(double *p,m128d a)	Stores two DP FP values in a to p. The address p need not be 16-byte-aligned.
MOVUPS	m128 _mm_loadu_ps(float * p)	Loads four SP FP values. The address need not be 16-byte-aligned.
	void_mm_storeu_ps(float *p,m128 a)	Stores four SP FP values. The address need not be 16- byte-aligned.
MULPD	m128d _mm_mul_pd(m128d a,m128d b)	Multiplies the two DP FP values of a and b.
MULPS	m128 _mm_mul_ss(m128 a,m128 b)	Multiplies the four SP FP value of a and b.
MULSD	m128d _mm_mul_sd(m128d a,m128d b)	Multiplies the lower DP FP value of a and b; the upper DP FP value are passed through from a.
MULSS	m128 _mm_mul_ss(m128 a,m128 b)	Multiplies the lower SP FP value of a and b; the upper three SP FP values are passed through from a.
MWAIT	void _mm_mwait(unsigned extensions, unsigned hints)	A hint that allows the processor to stop instruction execution and enter an implementation-dependent optimized state until occurrence of a class of events.
ORPD	m128d _mm_or_pd(m128d a,m128d b)	Computes the bitwise OR of the two DP FP values of a and b.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
ORPS	m128 _mm_or_ps(m128 a,m128 b)	Computes the bitwise OR of the four SP FP values of a and b.
PACKSSWB	m128i _mm_packs_epi16(m128i m1, m128i m2)	Pack the eight 16-bit values from m1 into the lower eight 8-bit values of the result with signed saturation, and pack the eight 16-bit values from m2 into the upper eight 8-bit values of the result with signed saturation.
PACKSSWB	m64 _mm_packs_pi16(m64 m1,m64 m2)	Pack the four 16-bit values from m1 into the lower four 8-bit values of the result with signed saturation, and pack the four 16-bit values from m2 into the upper four 8-bit values of the result with signed saturation.
PACKSSDW	m128i _mm_packs_epi32 (m128i m1, m128i m2)	Pack the four 32-bit values from m1 into the lower four 16-bit values of the result with signed saturation, and pack the four 32-bit values from m2 into the upper four 16-bit values of the result with signed saturation.
PACKSSDW	m64 _mm_packs_pi32 (m64 m1,m64 m2)	Pack the two 32-bit values from m1 into the lower two 16-bit values of the result with signed saturation, and pack the two 32-bit values from m2 into the upper two 16-bit values of the result with signed saturation.
PACKUSWB	m128i _mm_packus_epi16(m128i m1,m128i m2)	Pack the eight 16-bit values from m1 into the lower eight 8-bit values of the result with unsigned saturation, and pack the eight 16-bit values from m2 into the upper eight 8-bit values of the result with unsigned saturation.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PACKUSWB	m64 _mm_packs_pu16(m64 m1,m64 m2)	Pack the four 16-bit values from m1 into the lower four 8-bit values of the result with unsigned saturation, and pack the four 16-bit values from m2 into the upper four 8-bit values of the result with unsigned saturation.
PADDB	m128i _mm_add_epi8(m128i m1,m128i m2)	Add the 16 8-bit values in m1 to the 16 8-bit values in m2.
PADDB	m64 _mm_add_pi8(m64 m1,m64 m2)	Add the eight 8-bit values in m1 to the eight 8-bit values in m2.
PADDW	m128i _mm_addw_epi16(m128i m1, m128i m2)	Add the 8 16-bit values in m1 to the 8 16-bit values in m2.
PADDW	m64 _mm_addw_pi16(m64 m1,m64 m2)	Add the four 16-bit values in m1 to the four 16-bit values in m2.
PADDD	m128i _mm_add_epi32(m128i m1, m128i m2)	Add the 4 32-bit values in m1 to the 4 32-bit values in m2.
PADDD	m64 _mm_add_pi32(m64 m1,m64 m2)	Add the two 32-bit values in m1 to the two 32-bit values in m2.
PADDQ	m128i _mm_add_epi64(m128i m1, m128i m2)	Add the 2 64-bit values in m1 to the 2 64-bit values in m2.
PADDQ	m64 _mm_add_si64(m64 m1,m64 m2)	Add the 64-bit value in m1 to the 64-bit value in m2.
PADDSB	m128i _mm_adds_epi8(m128i m1,m128i m2)	Add the 16 signed 8-bit values in m1 to the 16 signed 8-bit values in m2 and saturate.
PADDSB	m64 _mm_adds_pi8(m64 m1,m64 m2)	Add the eight signed 8-bit values in m1 to the eight signed 8-bit values in m2 and saturate.
PADDSW	m128i _mm_adds_epi16(m128i m1, m128i m2)	Add the 8 signed 16-bit values in m1 to the 8 signed 16-bit values in m2 and saturate.
PADDSW	m64 _mm_adds_pi16(m64 m1,m64 m2)	Add the four signed 16-bit values in m1 to the four signed 16-bit values in m2 and saturate.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PADDUSB	m128i _mm_adds_epu8(m128i m1, m128i m2)	Add the 16 unsigned 8-bit values in m1 to the 16 unsigned 8-bit values in m2 and saturate.
PADDUSB	m64 _mm_adds_pu8(m64 m1,m64 m2)	Add the eight unsigned 8-bit values in m1 to the eight unsigned 8-bit values in m2 and saturate.
PADDUSW	m128i _mm_adds_epu16(m128i m1, m128i m2)	Add the 8 unsigned 16-bit values in m1 to the 8 unsigned 16-bit values in m2 and saturate.
PADDUSW	m64 _mm_adds_pu16(m64 m1,m64 m2)	Add the four unsigned 16-bit values in m1 to the four unsigned 16-bit values in m2 and saturate.
PAND	m128i _mm_and_si128(m128i m1,m128i m2)	Perform a bitwise AND of the 128-bit value in m1 with the 128-bit value in m2.
PAND	m64 _mm_and_si64(m64 m1,m64 m2)	Perform a bitwise AND of the 64-bit value in m1 with the 64-bit value in m2.
PANDN	m128i _mm_andnot_si128(m128i m1, m128i m2)	Perform a logical NOT on the 128-bit value in m1 and use the result in a bitwise AND with the 128-bit value in m2.
PANDN	m64 _mm_andnot_si64(m64 m1,m64 m2)	Perform a logical NOT on the 64-bit value in m1 and use the result in a bitwise AND with the 64-bit value in m2.
PAUSE	void _mm_pause(void)	The execution of the next instruction is delayed by an implementation-specific amount of time. No architectural state is modified.
PAVGB	m128i _mm_avg_epu8(m128i a,m128i b)	Perform the packed average on the 16 8-bit values of the two operands.
PAVGB	m64 _mm_avg_pu8(m64 a,m64 b)	Perform the packed average on the eight 8-bit values of the two operands.
PAVGW	m128i _mm_avg_epu16(m128i a,m128i b)	Perform the packed average on the 8 16-bit values of the two operands.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PAVGW	m64 _mm_avg_pu16(m64 a,m64 b)	Perform the packed average on the four 16-bit values of the two operands.
PCMPEQB	m128i _mm_cmpeq_epi8(m128i m1, m128i m2)	If the respective 8-bit values in m1 are equal to the respective 8-bit values in m2 set the respective 8-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPEQB	m64 _mm_cmpeq_pi8(m64 m1,m64 m2)	If the respective 8-bit values in m1 are equal to the respective 8-bit values in m2 set the respective 8-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPEQW	m128i _mm_cmpeq_epi16 (m128i m1, m128i m2)	If the respective 16-bit values in m1 are equal to the respective 16-bit values in m2 set the respective 16-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPEQW	m64 _mm_cmpeq_pi16 (m64 m1,m64 m2)	If the respective 16-bit values in m1 are equal to the respective 16-bit values in m2 set the respective 16-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPEQD	m128i _mm_cmpeq_epi32(m128i m1, m128i m2)	If the respective 32-bit values in m1 are equal to the respective 32-bit values in m2 set the respective 32-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPEQD	m64 _mm_cmpeq_pi32(m64 m1,m64 m2)	If the respective 32-bit values in m1 are equal to the respective 32-bit values in m2 set the respective 32-bit resulting values to all ones, otherwise set them to all zeroes.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Conto	Description
PCMPGTB	m128i _mm_cmpgt_epi8 (m128i m1, m128i m2)	If the respective 8-bit values in m1 are greater than the respective 8-bit values in m2 set the respective 8-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPGTB	m64 _mm_cmpgt_pi8 (m64 m1,m64 m2)	If the respective 8-bit values in m1 are greater than the respective 8-bit values in m2 set the respective 8-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPGTW	m128i _mm_cmpgt_epi16(m128i m1, m128i m2)	If the respective 16-bit values in m1 are greater than the respective 16-bit values in m2 set the respective 16-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPGTW	m64 _mm_cmpgt_pi16 (m64 m1,m64 m2)	If the respective 16-bit values in m1 are greater than the respective 16-bit values in m2 set the respective 16-bit resulting values to all ones, otherwise set them to all zeroes.
PCMPGTD	m128i _mm_cmpgt_epi32(m128i m1, m128i m2)	If the respective 32-bit values in m1 are greater than the respective 32-bit values in m2 set the respective 32-bit resulting values to all ones, otherwise set them all to zeroes.
PCMPGTD	m64 _mm_cmpgt_pi32(m64 m1,m64 m2)	If the respective 32-bit values in m1 are greater than the respective 32-bit values in m2 set the respective 32-bit resulting values to all ones, otherwise set them all to zeroes.
PEXTRW	int _mm_extract_epi16(m128i a, int n)	Extracts one of the 8 words of a. The selector n must be an immediate.
PEXTRW	int _mm_extract_pi16(m64 a, int n)	Extracts one of the four words of a. The selector n must be an immediate.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PINSRW	m128i _mm_insert_epi16(m128i a, int d, int n)	Inserts word d into one of 8 words of a. The selector n must be an immediate.
PINSRW	m64 _mm_insert_pi16(m64 a, int d, int n)	Inserts word d into one of four words of a. The selector n must be an immediate.
PMADDWD	m128i _mm_madd_epi16(m128i m1 m128i m2)	Multiply 8 16-bit values in m1 by 8 16-bit values in m2 producing 8 32-bit intermediate results, which are then summed by pairs to produce 4 32-bit results.
PMADDWD	m64 _mm_madd_pi16(m64 m1,m64 m2)	Multiply four 16-bit values in m1 by four 16-bit values in m2 producing four 32-bit intermediate results, which are then summed by pairs to produce two 32-bit results.
PMAXSW	m128i _mm_max_epi16(m128i a,m128i b)	Computes the element-wise maximum of the 16-bit integers in a and b.
PMAXSW	m64 _mm_max_pi16(m64 a,m64 b)	Computes the element-wise maximum of the words in a and b.
PMAXUB	m128i _mm_max_epu8(m128i a,m128i b)	Computes the element-wise maximum of the unsigned bytes in a and b.
PMAXUB	m64 _mm_max_pu8(m64 a,m64 b)	Computes the element-wise maximum of the unsigned bytes in a and b.
PMINSW	m128i _mm_min_epi16(m128i a,m128i b)	Computes the element-wise minimum of the 16-bit integers in a and b.
PMINSW	m64 _mm_min_pi16(m64 a,m64 b)	Computes the element-wise minimum of the words in a and b.
PMINUB	m128i _mm_min_epu8(m128i a,m128i b)	Computes the element-wise minimum of the unsigned bytes in a and b.
PMINUB	m64 _mm_min_pu8(m64 a,m64 b)	Computes the element-wise minimum of the unsigned bytes in a and b.
PMOVMSKB	int _mm_movemask_epi8(m128i a)	Creates an 16-bit mask from the most significant bits of the bytes in a.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PMOVMSKB	int _mm_movemask_pi8(m64 a)	Creates an 8-bit mask from the most significant bits of the bytes in a.
PMULHUW	m128i _mm_mulhi_epu16(m128i a,m128i b)	Multiplies the 8 unsigned words in a and b, returning the upper 16 bits of the eight 32-bit intermediate results in packed form.
PMULHUW	m64 _mm_mulhi_pu16(m64 a,m64 b)	Multiplies the 4 unsigned words in a and b, returning the upper 16 bits of the four 32-bit intermediate results in packed form.
PMULHW	m128i _mm_mulhi_epi16(m128i m1, m128i m2)	Multiply 8 signed 16-bit values in m1 by 8 signed 16-bit values in m2 and produce the high 16 bits of the 8 results.
PMULHW	m64 _mm_mulhi_pi16(m64 m1,m64 m2)	Multiply four signed 16-bit values in m1 by four signed 16-bit values in m2 and produce the high 16 bits of the four results.
PMULLW	m128i _mm_mullo_epi16(m128i m1, m128i m2)	Multiply 8 16-bit values in m1 by 8 16-bit values in m2 and produce the low 16 bits of the 8 results.
PMULLW	m64 _mm_mullo_pi16(m64 m1,m64 m2)	Multiply four 16-bit values in m1 by four 16-bit values in m2 and produce the low 16 bits of the four results.
PMULUDQ	m64 _mm_mul_su32(m64 m1,m64 m2)	Multiply lower 32-bit unsigned value in m1 by the lower 32-bit unsigned value in m2 and store the 64 bit results.
	m128i _mm_mul_epu32(m128i m1, m128i m2)	Multiply lower two 32-bit unsigned value in m1 by the lower two 32-bit unsigned value in m2 and store the two 64 bit results.
POR	m64 _mm_or_si64(m64 m1,m64 m2)	Perform a bitwise OR of the 64-bit value in m1 with the 64-bit value in m2.
POR	m128i _mm_or_si128(m128i m1,m128i m2)	Perform a bitwise OR of the 128-bit value in m1 with the 128-bit value in m2.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PREFETCHh	void _mm_prefetch(char *a, int sel)	Loads one cache line of data from address p to a location "closer" to the processor. The value sel specifies the type of prefetch operation.
PSADBW	m128i _mm_sad_epu8(m128i a,m128i b)	Compute the absolute differences of the 16 unsigned 8-bit values of a and b; sum the upper and lower 8 differences and store the two 16-bit result into the upper and lower 64 bit.
PSADBW	m64 _mm_sad_pu8(m64 a,m64 b)	Compute the absolute differences of the 8 unsigned 8-bit values of a and b; sum the 8 differences and store the 16-bit result, the upper 3 words are cleared.
PSHUFD	m128i _mm_shuffle_epi32(m128i a, int n)	Returns a combination of the four doublewords of a. The selector n must be an immediate.
PSHUFHW	m128i _mm_shufflehi_epi16(m128i a, int n)	Shuffle the upper four 16-bit words in a as specified by n. The selector n must be an immediate.
PSHUFLW	m128i _mm_shufflelo_epi16(m128i a, int n)	Shuffle the lower four 16-bit words in a as specified by n. The selector n must be an immediate.
PSHUFW	m64 _mm_shuffle_pi16(m64 a, int n)	Returns a combination of the four words of a. The selector n must be an immediate.
PSLLW	m128i _mm_sll_epi16(m128i m,m128i count)	Shift each of 8 16-bit values in m left the amount specified by count while shifting in zeroes.
PSLLW	m128i _mm_slli_epi16(m128i m, int count)	Shift each of 8 16-bit values in m left the amount specified by count while shifting in zeroes.
PSLLW	m64 _mm_sll_pi16(m64 m,m64 count)	Shift four 16-bit values in m left the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	lable C-1. Simple Intrinsics (Contd.	
winemonic		Description
	m64 _mm_slli_pi16(m64 m, int count)	Shift four 16-bit values in m left the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSLLD	m128i _mm_slli_epi32(m128i m, int count)	Shift each of 4 32-bit values in m left the amount specified by count while shifting in zeroes.
	m128i _mm_sll_epi32(m128i m,m128i count)	Shift each of 4 32-bit values in m left the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSLLD	m64 _mm_slli_pi32(m64 m, int count)	Shift two 32-bit values in m left the amount specified by count while shifting in zeroes.
	m64 _mm_sll_pi32(m64 m,m64 count)	Shift two 32-bit values in m left the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSLLQ	m64 _mm_sll_si64(m64 m,m64 count)	Shift the 64-bit value in m left the amount specified by count while shifting in zeroes.
	m64 _mm_slli_si64(m64 m, int count)	Shift the 64-bit value in m left the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSLLQ	m128i _mm_sll_epi64(m128i m,m128i count)	Shift each of two 64-bit values in m left by the amount specified by count while shifting in zeroes.
	m128i _mm_slli_epi64(m128i m, int count)	Shift each of two 64-bit values in m left by the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSLLDQ	m128i _mm_slli_si128(m128i m, int imm)	Shift 128 bit in m left by imm bytes while shifting in zeroes.
PSRAW	m128i _mm_sra_epi16(m128i m,m128i count)	Shift each of 8 16-bit values in m right the amount specified by count while shifting in the sign bit.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
	m128i _mm_srai_epi16(m128i m, int count)	Shift each of 8 16-bit values in m right the amount specified by count while shifting in the sign bit. For the best performance, count should be a constant.
PSRAW	m64 _mm_sra_pi16(m64 m,m64 count)	Shift four 16-bit values in m right the amount specified by count while shifting in the sign bit.
	m64 _mm_srai_pi16(m64 m, int count)	Shift four 16-bit values in m right the amount specified by count while shifting in the sign bit. For the best performance, count should be a constant.
PSRAD	m128i _mm_sra_epi32 (m128i m,m128i count)	Shift each of 4 32-bit values in m right the amount specified by count while shifting in the sign bit.
	m128i _mm_srai_epi32 (m128i m, int count)	Shift each of 4 32-bit values in m right the amount specified by count while shifting in the sign bit. For the best performance, count should be a constant.
PSRAD	m64 _mm_sra_pi32 (m64 m,m64 count)	Shift two 32-bit values in m right the amount specified by count while shifting in the sign bit.
	m64 _mm_srai_pi32 (m64 m, int count)	Shift two 32-bit values in m right the amount specified by count while shifting in the sign bit. For the best performance, count should be a constant.
PSRLW	_m128i _mm_srl_epi16 (m128i m,m128i count)	Shift each of 8 16-bit values in m right the amount specified by count while shifting in zeroes.
	m128i _mm_srli_epi16 (m128i m, int count)	Shift each of 8 16-bit values in m right the amount specified by count while shifting in zeroes.
	m64 _mm_srl_pi16 (m64 m,m64 count)	Shift four 16-bit values in m right the amount specified by count while shifting in zeroes.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic (Conta.	Description
	m64 _mm_srli_pi16(m64 m, int count)	Shift four 16-bit values in m right the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSRLD	m128i _mm_srl_epi32 (m128i m, m128i count)	Shift each of 4 32-bit values in m right the amount specified by count while shifting in zeroes.
	m128i _mm_srli_epi32 (m128i m, int count)	Shift each of 4 32-bit values in m right the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSRLD	m64 _mm_srl_pi32 (m64 m,m64 count)	Shift two 32-bit values in m right the amount specified by count while shifting in zeroes.
	m64 _mm_srli_pi32 (m64 m, int count)	Shift two 32-bit values in m right the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSRLQ	m128i _mm_srl_epi64 (m128i m, m128i count)	Shift the 2 64-bit value in m right the amount specified by count while shifting in zeroes.
	m128i _mm_srli_epi64 (m128i m, int count)	Shift the 2 64-bit value in m right the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSRLQ	m64 _mm_srl_si64 (m64 m,m64 count)	Shift the 64-bit value in m right the amount specified by count while shifting in zeroes.
	m64 _mm_srli_si64 (m64 m, int count)	Shift the 64-bit value in m right the amount specified by count while shifting in zeroes. For the best performance, count should be a constant.
PSRLDQ	m128i _mm_srli_si128(m128i m, int imm)	Shift 128 bit in m right by imm bytes while shifting in zeroes.
PSUBB	m128i _mm_sub_epi8(m128i m1,m128i m2)	Subtract the 16 8-bit values in m2 from the 16 8-bit values in m1.
PSUBB	m64 _mm_sub_pi8(m64 m1,m64 m2)	Subtract the eight 8-bit values in m2 from the eight 8-bit values in m1.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PSUBW	m128i _mm_sub_epi16(m128i m1,m128i m2)	Subtract the 8 16-bit values in m2 from the 8 16-bit values in m1.
PSUBW	m64 _mm_sub_pi16(m64 m1,m64 m2)	Subtract the four 16-bit values in m2 from the four 16-bit values in m1.
PSUBD	m128i _mm_sub_epi32(m128i m1,m128i m2)	Subtract the 4 32-bit values in m2 from the 4 32-bit values in m1.
PSUBD	m64 _mm_sub_pi32(m64 m1,m64 m2)	Subtract the two 32-bit values in m2 from the two 32-bit values in m1.
PSUBQ	m128i _mm_sub_epi64(m128i m1,m128i m2)	Subtract the 2 64-bit values in m2 from the 2 64-bit values in m1.
PSUBQ	m64 _mm_sub_si64(m64 m1,m64 m2)	Subtract the 64-bit values in m2 from the 64-bit values in m1.
PSUBSB	m128i _mm_subs_epi8(m128i m1,m128i m2)	Subtract the 16 signed 8-bit values in m2 from the 16 signed 8-bit values in m1 and saturate.
PSUBSB	m64 _mm_subs_pi8(m64 m1,m64 m2)	Subtract the eight signed 8-bit values in m2 from the eight signed 8-bit values in m1 and saturate.
PSUBSW	m128i _mm_subs_epi16(m128i m1, m128i m2)	Subtract the 8 signed 16-bit values in m2 from the 8 signed 16-bit values in m1 and saturate.
PSUBSW	m64 _mm_subs_pi16(m64 m1,m64 m2)	Subtract the four signed 16- bit values in m2 from the four signed 16-bit values in m1 and saturate.
PSUBUSB	m128i _mm_sub_epu8(m128i m1,m128i m2)	Subtract the 16 unsigned 8-bit values in m2 from the 16 unsigned 8-bit values in m1 and saturate.
PSUBUSB	m64 _mm_sub_pu8(m64 m1,m64 m2)	Subtract the eight unsigned 8-bit values in m2 from the eight unsigned 8-bit values in m1 and saturate.
PSUBUSW	m128i _mm_sub_epu16(m128i m1, m128i m2)	Subtract the 8 unsigned 16-bit values in m2 from the 8 unsigned 16-bit values in m1 and saturate.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PSUBUSW	m64 _mm_sub_pu16(m64 m1,m64 m2)	Subtract the four unsigned 16-bit values in m2 from the four unsigned 16-bit values in m1 and saturate.
PUNPCKHBW	m64 _mm_unpackhi_pi8(m64 m1,m64 m2)	Interleave the four 8-bit values from the high half of m1 with the four values from the high half of m2 and take the least significant element from m1.
PUNPCKHBW	m128i _mm_unpackhi_epi8(m128i m1, m128i m2)	Interleave the 8 8-bit values from the high half of m1 with the 8 values from the high half of m2.
PUNPCKHWD	m64 _mm_unpackhi_pi16(m64 m1,m64 m2)	Interleave the two 16-bit values from the high half of m1 with the two values from the high half of m2 and take the least significant element from m1.
PUNPCKHWD	m128i _mm_unpackhi_epi16(m128i m1, m128i m2)	Interleave the 4 16-bit values from the high half of m1 with the 4 values from the high half of m2.
PUNPCKHDQ	m64 _mm_unpackhi_pi32(m64 m1, m64 m2)	Interleave the 32-bit value from the high half of m1 with the 32-bit value from the high half of m2 and take the least significant element from m1.
PUNPCKHDQ	m128i _mm_unpackhi_epi32(m128i m1, m128i m2)	Interleave two 32-bit value from the high half of m1 with the two 32-bit value from the high half of m2.
PUNPCKHQDQ	m128i _mm_unpackhi_epi64(m128i m1, m128i m2)	Interleave the 64-bit value from the high half of m1 with the 64-bit value from the high half of m2.
PUNPCKLBW	m64 _mm_unpacklo_pi8 (m64 m1,m64 m2)	Interleave the four 8-bit values from the low half of m1 with the four values from the low half of m2 and take the least significant element from m1.
PUNPCKLBW	m128i _mm_unpacklo_epi8 (m128i m1, m128i m2)	Interleave the 8 8-bit values from the low half of m1 with the 8 values from the low half of m2.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
PUNPCKLWD	m64 _mm_unpacklo_pi16(m64 m1,m64 m2)	Interleave the two 16-bit values from the low half of m1 with the two values from the low half of m2 and take the least significant element from m1.
PUNPCKLWD	m128i _mm_unpacklo_epi16(m128i m1, m128i m2)	Interleave the 4 16-bit values from the low half of m1 with the 4 values from the low half of m2.
PUNPCKLDQ	m64 _mm_unpacklo_pi32(m64 m1,m64 m2)	Interleave the 32-bit value from the low half of m1 with the 32-bit value from the low half of m2 and take the least significant element from m1.
PUNPCKLDQ	m128i _mm_unpacklo_epi32(m128i m1, m128i m2)	Interleave two 32-bit value from the low half of m1 with the two 32-bit value from the low half of m2.
PUNPCKLQDQ	m128i _mm_unpacklo_epi64(m128i m1, m128i m2)	Interleave the 64-bit value from the low half of m1 with the 64-bit value from the low half of m2.
PXOR	m64 _mm_xor_si64(m64 m1,m64 m2)	Perform a bitwise XOR of the 64-bit value in m1 with the 64-bit value in m2.
PXOR	m128i _mm_xor_si128(m128i m1,m128i m2)	Perform a bitwise XOR of the 128-bit value in m1 with the 128-bit value in m2.
RCPPS	m128 _mm_rcp_ps(m128 a)	Computes the approximations of the reciprocals of the four SP FP values of a.
RCPSS	m128 _mm_rcp_ss(m128 a)	Computes the approximation of the reciprocal of the lower SP FP value of a; the upper three SP FP values are passed through.
RSQRTPS	m128 _mm_rsqrt_ps(m128 a)	Computes the approximations of the reciprocals of the square roots of the four SP FP values of a.
RSQRTSS	m128 _mm_rsqrt_ss(m128 a)	Computes the approximation of the reciprocal of the square root of the lower SP FP value of a; the upper three SP FP values are passed through.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
SFENCE	void_mm_sfence(void)	Guarantees that every preceding store is globally visible before any subsequent store.
SHUFPD	m128d _mm_shuffle_pd(m128d a,m128d b, unsigned int imm8)	Selects two specific DP FP values from a and b, based on the mask imm8. The mask must be an immediate.
SHUFPS	m128 _mm_shuffle_ps(m128 a,m128 b, unsigned int imm8)	Selects four specific SP FP values from a and b, based on the mask imm8. The mask must be an immediate.
SQRTPD	m128d _mm_sqrt_pd(m128d a)	Computes the square roots of the two DP FP values of a.
SQRTPS	m128 _mm_sqrt_ps(m128 a)	Computes the square roots of the four SP FP values of a.
SQRTSD	m128d _mm_sqrt_sd(m128d a)	Computes the square root of the lower DP FP value of a; the upper DP FP values are passed through.
SQRTSS	m128 _mm_sqrt_ss(m128 a)	Computes the square root of the lower SP FP value of a; the upper three SP FP values are passed through.
STMXCSR	_mm_getcsr(void)	Returns the contents of the control register.
SUBPD	m128d _mm_sub_pd(m128d a,m128d b)	Subtracts the two DP FP values of a and b.
SUBPS	m128 _mm_sub_ps(m128 a,m128 b)	Subtracts the four SP FP values of a and b.
SUBSD	m128d _mm_sub_sd(m128d a,m128d b)	Subtracts the lower DP FP values of a and b. The upper DP FP values are passed through from a.
SUBSS	m128 _mm_sub_ss(m128 a,m128 b)	Subtracts the lower SP FP values of a and b. The upper three SP FP values are passed through from a.
UCOMISD	int _mm_ucomieq_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a equal to b. If a and b are equal, 1 is returned. Otherwise 0 is returned.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
	int _mm_ucomilt_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a less than b. If a is less than b, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomile_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a less than or equal to b. If a is less than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomigt_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a greater than b. If a is greater than b are equal, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomige_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a greater than or equal to b. If a is greater than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomineq_sd(m128d a,m128d b)	Compares the lower DP FP value of a and b for a not equal to b. If a and b are not equal, 1 is returned. Otherwise 0 is returned.
UCOMISS	int _mm_ucomieq_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a equal to b. If a and b are equal, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomilt_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a less than b. If a is less than b, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomile_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a less than or equal to b. If a is less than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomigt_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a greater than b. If a is greater than b are equal, 1 is returned. Otherwise 0 is returned.



Table C-1. Simple Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
	int _mm_ucomige_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a greater than or equal to b. If a is greater than or equal to b, 1 is returned. Otherwise 0 is returned.
	int _mm_ucomineq_ss(m128 a,m128 b)	Compares the lower SP FP value of a and b for a not equal to b. If a and b are not equal, 1 is returned. Otherwise 0 is returned.
UNPCKHPD	m128d _mm_unpackhi_pd(m128d a, m128d b)	Selects and interleaves the upper DP FP values from a and b.
UNPCKHPS	m128 _mm_unpackhi_ps(m128 a,m128 b)	Selects and interleaves the upper two SP FP values from a and b.
UNPCKLPD	m128d _mm_unpacklo_pd(m128d a, m128d b)	Selects and interleaves the lower DP FP values from a and b.
UNPCKLPS	m128 _mm_unpacklo_ps(m128 a,m128 b)	Selects and interleaves the lower two SP FP values from a and b.
XORPD	m128d _mm_xor_pd(m128d a,m128d b)	Computes bitwise EXOR (exclusive-or) of the two DP FP values of a and b.
XORPS	m128 _mm_xor_ps(m128 a,m128 b)	Computes bitwise EXOR (exclusive-or) of the four SP FP values of a and b.



C.2 COMPOSITE INTRINSICS

Table C-2. Composite Intrinsics

Mnemonic	Intrinsic	Description
(composite)	m128i _mm_set_epi64(m64 q1,m64 q0)	Sets the two 64-bit values to the two inputs.
(composite)	m128i _mm_set_epi32(int i3, int i2, int i1, int i0)	Sets the 4 32-bit values to the 4 inputs.
(composite)	m128i _mm_set_epi16(short w7,short w6, short w5, short w4, short w3, short w2, short w1,short w0)	Sets the 8 16-bit values to the 8 inputs.
(composite)	m128i _mm_set_epi8(char w15,char w14, char w13, char w12, char w11, char w10, char w9,char w8,char w7,char w6,char w5, char w4, char w3, char w2,char w1,char w0)	Sets the 16 8-bit values to the 16 inputs.
(composite)	m128i _mm_set1_epi64(m64 q)	Sets the 2 64-bit values to the input.
(composite)	m128i _mm_set1_epi32(int a)	Sets the 4 32-bit values to the input.
(composite)	m128i _mm_set1_epi16(short a)	Sets the 8 16-bit values to the input.
(composite)	m128i _mm_set1_epi8(char a)	Sets the 16 8-bit values to the input.
(composite)	m128i _mm_setr_epi64(m64 q1,m64 q0)	Sets the two 64-bit values to the two inputs in reverse order.
(composite)	m128i _mm_setr_epi32(int i3, int i2, int i1, int i0)	Sets the 4 32-bit values to the 4 inputs in reverse order.
(composite)	m128i _mm_setr_epi16(short w7,short w6, short w5, short w4, short w3, short w2, short w, short w0)	Sets the 8 16-bit values to the 8 inputs in reverse order.
(composite)	m128i _mm_setr_epi8(char w15,char w14, char w13, char w12, char w11, char w10, char w9,char w8,char w7,char w6,char w5, char w4, char w3, char w2,char w1,char w0)	Sets the 16 8-bit values to the 16 inputs in reverse order.
(composite)	m128i _mm_setzero_si128()	Sets all bits to 0.
(composite)	m128 _mm_set_ps1(float w) m128 _mm_set1_ps(float w)	Sets the four SP FP values to w.
(composite)	m128cmm_set1_pd(double w)	Sets the two DP FP values to w.
(composite)	m128d _mm_set_sd(double w)	Sets the lower DP FP values to w.
(composite)	m128d _mm_set_pd(double z, double y)	Sets the two DP FP values to the two inputs.
(composite)	m128 _mm_set_ps(float z, float y, float x, float w)	Sets the four SP FP values to the four inputs.
(composite)	m128d _mm_setr_pd(double z, double y)	Sets the two DP FP values to the two inputs in reverse order.



Table C-2. Composite Intrinsics (Contd.)

Mnemonic	Intrinsic	Description
(composite)	m128 _mm_setr_ps(float z, float y, float x, float w)	Sets the four SP FP values to the four inputs in reverse order.
(composite)	m128d _mm_setzero_pd(void)	Clears the two DP FP values.
(composite)	m128 _mm_setzero_ps(void)	Clears the four SP FP values.
MOVSD + shuffle	m128d _mm_load_pd(double * p) m128d _mm_load1_pd(double *p)	Loads a single DP FP value, copying it into both DP FP values.
MOVSS + shuffle	m128 _mm_load_ps1(float * p) m128 _mm_load1_ps(float *p)	Loads a single SP FP value, copying it into all four words.
MOVAPD + shuffle	m128d _mm_loadr_pd(double * p)	Loads two DP FP values in reverse order. The address must be 16-byte-aligned.
MOVAPS + shuffle	m128 _mm_loadr_ps(float * p)	Loads four SP FP values in reverse order. The address must be 16-byte-aligned.
MOVSD + shuffle	void _mm_store1_pd(double *p,m128d a)	Stores the lower DP FP value across both DP FP values.
MOVSS + shuffle	void _mm_store_ps1(float * p,m128 a) void _mm_store1_ps(float *p,m128 a)	Stores the lower SP FP value across four words.
MOVAPD + shuffle	_mm_storer_pd(double * p,m128d a)	Stores two DP FP values in reverse order. The address must be 16-byte-aligned.
MOVAPS + shuffle	_mm_storer_ps(float * p,m128 a)	Stores four SP FP values in reverse order. The address must be 16-byte-aligned.



Index



INDEX FOR VOLUME 2A & 2B

Numerics 64-bit mode 2-15 control and debug registers 2-15 default operand size 2-15 direct memory-offset MOVs 2-14 general purpose encodings B-23 immediates 2-14 introduction 2-9 machine instructions B-1 reg (reg) field B-4 REX prefixes 2-9, B-2 RIP-relative addressing 2-14 SIMD encodings B-48 special instruction encodings B-77 summary table notation 3-6	Binary numbers 1-4 Bit order 1-2 BOUND instruction 3-65 BOUND range exceeded exception (#BR) 3-65 Branch hints 2-2 Brand information 3-171 processor brand index 3-174 processor brand string 3-171 BSF instruction 3-69 BSWAP instruction 3-71 BT instruction 3-73 BTC instruction 3-73 BTC instruction 3-76, 3-533 BTR instruction 3-79, 3-533 BTS instruction 3-82, 3-533 Byte order 1-2
A	
	C
AAA instruction 3-18 AAD instruction 3-20 AAM instruction 3-22 AAS instruction 3-24 Abbreviations, opcode key A-2 Access rights, segment descriptor 3-504 ADC instruction 3-26, 3-533 ADD instruction 3-18, 3-29, 3-246, 3-533 ADDPD instruction 3-32 ADDPS instruction 3-35	Cache and TLB information
Addressing methods	4-260, 4-266, 4-302 CLC instruction
codes	CLD instruction
operand codes	CLFLUSH instruction
register codes	CPUID flag
Addressing, segments	CLI instruction
ADDSD instruction	CLTS instruction
ADDSS instruction	CMC instruction
ADDSUBPD instruction	CMOVcc flag 3-167
ADDSUBPS instruction	CMOVcc instructions
AND instruction	CPUID flag
ANDNPD instruction	CMP instruction
ANDNPS instruction	CMPPS instruction
ANDPD instruction	CMPS instruction
ANDPS instruction	CMPSB instruction
ARPL instruction	CMPSD instruction
AN Emstruction	CMPSQ instruction
n	CMPSS instruction
В	CMPSW instruction
B (default stack size) flag, segment	CMPXCHG instruction
descriptor	CPUID bit
Base (operand addressing)	CMPXCHG8B instruction
packed	CPUID flag
unpacked	



COMISS instruction	SpeedStep technology 3-164
Compatibility mode	SS2 extensions flag 3-167
introduction	SSE extensions flag 3-167
see 64-bit mode	SSE3 extensions flag
summary table notation	SYSENTER flag
Compatibility, software	SYSEXIT flag
Condition code flags, EFLAGS register 3-112	thermal monitor
Condition code flags, x87 FPU status word	time stamp counter
flags affected by instructions	using CPUID
setting	vendor ID string
Conditional jump	version information 3-157, 3-161, 3-171
Conforming code segment	virtual 8086 Mode flag
Control registers, moving values to and from 3-587	WRMSR flag
Cosine, x87 FPU operation 3-299, 3-369	CQO instruction
CPL	CR0 control register 4-274
CPUID instruction	CS register 3-86, 3-457, 3-475, 3-493, 3-582,
36-bit page size extension	4-103
APIC on-chip	CVTDQ2PD instruction
basic CPUID information	CVTDQ2PS instruction
cache and TLB characteristics 3-157, 3-168	CVTPD2DQ instruction
CLFLUSH flag	CVTPD2PI instruction
CLFLUSH instruction cache line size 3-163	CVTPD2PS instruction
CMPXCHG16B flag	CVTPI2PD instruction
CMPXCHG8B flag	CVTPI2PS instruction
CPL qualified debug store	CVTPS2DQ instruction
debug extensions, CR4.DE	CVTPS2PD instruction
debug store supported	CVTPS2PI instruction
deterministic cache parameters leaf 3-157,	CVTSD2SI instruction
3-158	CVTSD2SS instruction
extended function information	CVTSI2SD instruction
feature information	CVTSI2SS instruction
FPU on-chip	CVTSS2SD instruction
FSAVE flag	CVTSS2SI instruction
FXRSTOR flag	CVTTPD2DQ instruction 3-229
HT technology flag	CVTTPD2PI instruction
IA-32e mode available	CVTTPS2DQ instruction
input limits for EAX	CVTTPS2PI instruction
L1 Context ID	CVTTSD2SI instruction 3-238
local APIC physical ID	CVTTSS2SI instruction
machine check exception	CWD instruction
memory type range registers	CWDE instruction
microcode update signature	C/C++ compiler intrinsics
MONITOR/MWAIT flag	compiler functional equivalents
MONITOR/MWAIT leaf	composite
page attribute table	description of
page size extension	lists of
physical address bits	simple
physical address extension	
processor brand index 3-163, 3-171	D
processor brand string 3-159, 3-171	D (default operation size) flag, segment
processor serial number 3-157, 3-167	descriptor 4-103, 4-108, 4-179
processor type field	DAA instruction
PTE global bit	DAS instruction
RDMSR flag	Debug registers, moving value to and from . 3-590
	DEC instruction
returned in ECX & EDX	Denormalized finite number
Seli S0000	20.10.111dii20d ii111t0 Hallibol



DF (direction) flag, EFLAGS register 3-104, 3-132,	FCOMI instruction	3-296
3-454, 3-536, 3-657, 4-17, 4-245, 4-289	FCOMIP instruction	3-296
Displacement (operand addressing) 2-4	FCOMP instruction	3-292
DIV instruction	FCOMPP instruction	3-292
Divide error exception (#DE)	FCOS instruction	3-299
DIVPD instruction3-256	FDECSTP instruction	3-301
DIVPS instruction	FDIV instruction	3-303
DIVSD instruction3-262	FDIVP instruction	
DIVSS instruction	FDIVR instruction	
DS register 3-132, 3-514, 3-535, 3-656, 4-16	FDIVRP instruction	
g ,	Feature information, processor	
_	FFREE instruction	
E	FIADD instruction	
EDI register 4-244, 4-289, 4-295	FICOM instruction	-
Effective address	FICOMP instruction	
EFLAGS register	FIDIV instruction	
condition codes 3-115, 3-290, 3-296	FIDIVR instruction	
flags affected by instructions	FILD instruction	
loading	FIMUL instruction	
popping4-110	FINCSTP instruction	
popping on return from interrupt 3-475		
pushing	FINIT instruction	
pushing on interrupts		
saving	FIST instruction	
status flags 3-118, 3-489, 4-251, 4-330	FISTP instruction	
EIP register	FISTTP instruction	
EMMS instruction	FISUB instruction	
Encodings	FISUBR instruction	
See machine instructions, opcodes	FLD instruction	
ENTER instruction	FLD1 instruction	
ES register	FLDCW instruction	
	FLDENV instruction	
ESI register3-132, 3-535, 3-536, 3-656, 4-16, 4-289	FLDL2E instruction	
ESP register	FLDL2T instruction	
Exceptions	FLDLG2 instruction	
BOUND range exceeded (#BR)	FLDLN2 instruction	
notation	FLDPI instruction	
overflow exception (#OF)	FLDZ instruction	3-331
returning from	Floating point instructions	
Exponent, extracting from floating-point	machine encodings	B-80
number	Floating-point exceptions	
Extract exponent and significand, x87 FPU	SSE and SSE2 SIMD	3-16
operation	x87 FPU	3-16
	Flushing	
F	caches3-47	71, 4-357
-	TLB entry	3-473
F2XM1 instruction	FMUL instruction	3-338
FABS instruction	FMULP instruction	3-338
FADD instruction	FNCLEX instruction	3-288
FADDP instruction	FNINIT instruction	3-319
Far call, CALL instruction	FNOP instruction	3-342
Far pointer, loading	FNSAVE instruction	
Far return, RET instruction	FNSTCW instruction	
FBLD instruction	FNSTENV instruction	
FBSTP instruction	FNSTSW instruction	
FCHS instruction	FPATAN instruction	
FCLEX instruction	FPREM instruction	
FCMOVcc instructions	FPREM1 instruction	
FCOM instruction	FPTAN instruction	
	1 1 1/414 1113tt UCtiOII	5-552



FRNDINT instruction	1
FRSTOR instruction	IA-32e mode
FS register	CPUID flag
FSAVE instruction	introduction
FSAVE/FNSAVE instructions3-357	see 64-bit mode
FSCALE instruction	see compability mode
FSIN instruction	IA32_SYSENTER_CS MSR4-323, 4-326
FSINCOS instruction	IA32 SYSENTER EIP MSR 4-323, 4-323
FSQRT instruction	IA32 SYSENTER ESP MSR 4-323
FST instruction	IDIV instruction
FSTCW instruction	
FSTENV instruction	IDT (interrupt descriptor table) 3-458, 3-526
FSTP instruction	IDTR (interrupt descriptor table register) 3-526,
FSTSW instruction	4-269
FSUB instruction	IF (interrupt enable) flag, EFLAGS register . 3-107,
FSUBP instruction	4-290
FSUBR instruction	Immediate operands2-4
FSUBRP instruction	IMUL instruction
	IN instruction
FTST instruction	INC instruction
FUCOM instruction	Index (operand addressing) 2-4
FUCOMI instruction	Initialization x87 FPU 3-319
FUCOMIP instruction	INS instruction
FUCOMP instruction	INSB instruction
FUCOMPP instruction	INSD instruction
FXAM instruction	Instruction format
FXCH instruction	base field
FXRSTOR instruction	description of reference information 3-1
CPUID flag	displacement2-4
FXSAVE instruction	illustration of
CPUID flag	immediate
FXTRACT instruction	index field
FYL2X instruction3-417	Mod field
FYL2XP1 instruction	ModR/M byte2-4
	opcode
G	operands
GDT (global descriptor table) 3-526, 3-529	prefixes
GDTR (global descriptor table register) 3-526,	reg/opcode field
4-254	r/m field
General-purpose instructions	scale field
64-bit encodings	SIB byte
non-64-bit encodings B-10	See also: machine instructions, opcodes
General-purpose registers	Instruction reference, nomenclature 3-1
moving value to and from	Instruction set, reference
popping all	INSW instruction
pushing all	INT 3 instruction
GS register	Integer, storing, x87 FPU data type 3-321
05 register5-514	Intel NetBurst microarchitecture 1-1
	Intel Xeon processor 1-1
Н	Inter-privilege level
HADDPD instruction 3-422, 3-423	call, CALL instruction 3-86
HADDPS instruction	return, RET instruction 4-214
Hexadecimal numbers	Interrupts
HLT instruction	interrupt vector 4
HSUBPD instruction	returning from
HSUBPS instruction	software
Hyper-Threading Technology	INTn instruction
CPLIID flag 3-167	INTO instruction



Intrinsics	M
compiler functional equivalents C-1	Machine check architecture
composite	CPUID flag
description of	description
list of	Machine instructions
simple	64-bit mode
INVD instruction	condition test (tttn) field B-7
INVLPG instruction	direction bit (d) fieldB-8
IOPL (I/O privilege level) field, EFLAGS register	floating-point instruction encodings B-80
3-107, 4-184, 4-290	general description
IRET instruction	general-purpose encodings B-10–B-47
IRETD instruction	legacy prefixes
	MMX encodings B-48–B-52
J	opcode fieldsB-2
	operand size (w) bit
Jcc instructions	P6 family encodings B-52
JMP instruction	Pentium processor family encodings B-47
Jump operation	reg (reg) field
	REX prefixes
L	segment register (sreg) field B-6
L1 Context ID	sign-extend (s) bit
LAHF instruction	SIMD 64-bit encodings
	special 64-bit encodings B-77
LAR instruction	special fields
LDDQU instruction	special-purpose register (eee) fieldB-7
LDMXCSR instruction	SSE encodings B-53–B-60
LDS instruction	SSE2 encodings B-61–B-74
LDT (local descriptor table)	SSE3 encodings
LDTR (local descriptor table register) 3-529, 4-272	See also: opcodes
LEA instruction	Machine status word, CR0 register 3-531, 4-274
LEAVE instruction	MASKMOVDQU instruction
LES instruction	MASKMOVQ instruction
LFENCE instruction	MAXPD instruction
LFS instruction	MAXPS instruction
LGDT instruction	MAXSD instruction
LGS instruction	MAXSS instruction
LIDT instruction	MFENCE instruction
LLDT instruction	Microcode update signature
LMSW instruction	MINPD instruction
Load effective address operation3-520	MINPS instruction
LOCK prefix 3-27, 3-30, 3-52, 3-76, 3-79, 3-82,	MINSD instruction
3-144, 3-250, 3-451, 3-533, 4-2, 4-5, 4-8,	MINSS instruction
4-242, 4-302, 4-361, 4-363, 4-369	MMX instructions
Locking operation	CPUID flag for technology 3-167
LODS instruction	encodings
LODSB instruction	Mod field, instruction format
LODSD instruction	Model & family information
LODSQ instruction	ModR/M byte
LODSW instruction	16-bit addressing forms
Log epsilon, x87 FPU operation	32-bit addressing forms of 2-7
Log (base 2), x87 FPU operation	description of
LOOP instructions	format of
LOOPcc instructions	MONITOR instruction
LSL instruction	CPUID flag
LSS instruction	MOV instruction
LTR instruction	MOV instruction (control registers)3-587
	ivio v manucion (control registers) 3-307



MOV instruction (debug registers)	Nomenclature, used in instruction
MOVAPD instruction	reference pages 3-1
MOVAPS instruction	NOP instruction 4-4
MOVD instruction	NOT instruction
MOVDDUP instruction	Notation
MOVDQ2Q instruction	bit and byte order 1-2
MOVDQA instruction	exceptions
MOVDQU instruction	hexadecimal and binary numbers 1-4
MOVHLPS instruction	instruction operands 1-4
MOVHPD instruction	reserved bits
MOVHPS instruction	segmented addressing
MOVLHP instruction	Notational conventions
MOVLHPS instruction	NT (nested task) flag, EFLAGS register 3-475
MOVLPD instruction	
MOVLPS instruction	0
MOVMSKPD instruction	_
MOVMSKPS instruction	OF (carry) flag, EFLAGS register 3-445
MOVNTDQ instruction	OF (overflow) flag, EFLAGS register . 3-29, 3-457,
MOVNTI instruction	3-675, 4-242, 4-257, 4-260, 4-302
MOVNTPD instruction	Opcode
MOVNTPS instruction	escape instructions
MOVNTQ instruction	map
MOVQ instruction	Opcode extensions
MOVQ2DQ instruction	description
MOVS instruction	Opcode format
MOVSB instruction	Opcode integer instructions
MOVSD instruction	one-byte
MOVSHDUP instruction	one-byte opcode map
	one-byte opcodes
MOVSLDUP instruction	two-byte
MOVSQ instruction	two-byte opcode map A-17
MOVSS instruction	two-byte opcodes
MOVSW instruction	
MOVSX instruction	Opcode key abbreviations
MOVSXD instruction	Opcodes
MOVUPD instruction	look-up examples
MOVUPS instruction	Operands
MOVZX instruction	OR instruction
MSRs (model specific registers)	ORPD instruction 4-10
reading	ORPS instruction 4-12
writing	OUT instruction
MUL instruction	OUTS instruction
MULPD instruction	OUTSB instruction 4-16
MULPS instruction	OUTSD instruction 4-16
MULSD instruction	OUTSW instruction 4-16
MULSS instruction	Overflow exception (#OF) 3-457
MWAIT instruction	,
CPUID flag	_
Of Old flag	P
	P6 family processors
N	description of
NaN. testing for3-394	machine encodings B-52
Near	PACKSSDW instruction 4-21
call, CALL instruction	PACKSSWB instruction 4-21
return, RET instruction	PACKUSWB instruction 4-25
NEG instruction	PADDB instruction 4-29
NetBurst microarchitecture (see Intel NetBurst	PADDD instruction 4-29
microarchitecture)	PADDQ instruction 4-33
microarchitecture)	PADDSB instruction
	==



PADDSW instruction	REPNE/REPNZ	
PADDUSB instruction	REP/REPE/REPZ/REPNE/REPNZ	4-209
PADDUSW instruction	REX prefix encodings	B-2
PADDW instruction	Segment override prefixes	2-2
PAND instruction	PSADBW instruction	4-119
PANDN instruction	PSHUFD instruction	4-123
PAUSE instruction	PSHUFHW instruction	
PAVGB instruction	PSHUFLW instruction	4-129
PAVGW instruction	PSHUFW instruction	4-132
PCE flag, CR4 register4-204	PSLLD instruction	4-137
PCMPEQB instruction	PSLLDQ instruction	
PCMPEQD instruction	PSLLQ instruction	
PCMPEQW instruction	PSLLW instruction	4-137
PCMPGTB instruction	PSRAD instruction	
PCMPGTD instruction	PSRAW instruction	4-142
PCMPGTW instruction	PSRLD instruction	
PE (protection enable) flag, CR0 register3-531	PSRLDQ instruction	
Pending break enable	PSRLQ instruction	
Pentium 4 processor	PSRLW instruction	
Pentium II processor	PSUBB instruction	
Pentium III processor	PSUBD instruction	
Pentium M processor	PSUBQ instruction	
Pentium Pro processor	PSUBSB instruction	
Pentium processor	PSUBSW instruction	
Pentium processor family processors	PSUBUSB instruction	
machine encodings B-47	PSUBUSW instruction	
Performance-monitoring counters	PSUBW instruction	
reading	PUNPCKHBW instruction	
PEXTRW instruction	PUNPCKHDQ instruction	
Pi	PUNPCKHQDQ instruction	
PINSRW instruction	PUNPCKHWD instruction	
PMADDWD instruction	PUNPCKLBW instruction	
PMAXSW instruction	PUNPCKLDQ instruction	4-173
PMAXUB instruction	PUNPCKLQDQ instruction	
PMINSW instruction	PUNPCKLWD instruction	4-173
PMINUB instruction	PUSH instruction	
PMOVMSKB instruction	PUSHA instruction	4-182
PMULHUW instruction	PUSHAD instruction	4-182
PMULHW instruction	PUSHF instruction	4-184
PMULLW instruction	PUSHFD instruction	4-184
PMULUDQ instruction	PXOR instruction	
POP instruction		
POPA instruction	В	
POPAD instruction	R	
POPF instruction	RC (rounding control) field, x87 FPU	
POPFD instruction	control word 3-322, 3-331,	
POPFQ instruction	RCL instruction	
POR instruction	RCPPS instruction	
PREFETCHh instruction	RCPSS instruction	
Prefixes	RCR instruction	
Address-size override prefix	RDMSR instruction 4-202, 4-204,	
Branch hints	CPUID flag	
branch hints	RDPMC instruction	
instruction, description of	RDTSC instruction	
legacy prefix encodings B-2	Reg/opcode field, instruction format	
LOCK 2-2, 3-533	Related literature	
Operand-size override prefix2-2	Remainder, x87 FPU operation	3-349
DED or DEDE/DED7		



REP/REPE/REPZ/REPNE/REPNZ prefixes 3-132,	SIB byte
3-454, 4-17, 4-209	32-bit addressing forms of 2-8
Reserved	description of
use of reserved bits	format of
RET instruction	SIDT instruction
REX prefixes	Significand, extracting from floating-point
addressing modes2-11	number
and INC/DEC	SIMD floating-point exceptions, unmasking,
encodings	effects of
field names	Sine, x87 FPU operation
ModR/M byte	SLDT instruction
overview	SMSW instruction
REX.B2-10	SpeedStep technology 3-164
REX.R2-10	SQRTPD instruction 4-276
REX.W	SQRTPS instruction 4-279
special encodings	SQRTSD instruction 4-282
RIP-relative addressing	SQRTSS instruction 4-285
ROL instruction	Square root, Fx87 PU operation 3-372
ROR instruction	SS register 3-514, 3-582, 4-103
Rounding, round to integer, x87 FPU	SS3 extensions
operation	event mgmt instruction encodings B-76
RPL field	floating-point instruction encodings B-75
RSM instruction	SSE extensions
RSQRTPS instruction	cacheability instruction encodings B-60
RSQRTSS instruction	CPUID flag
R/m field, instruction format	floating-point encodings B-53
	instruction encodings B-53
S	integer instruction encodings B-59
	memory ordering encodings B-60
SAL instruction	SSE2 extensions
SAR instruction	cacheability instruction encodings B-74
SBB instruction	CPUID flag
Scale (operand addressing)2-4	floating-point encodings B-61
Scale, x87 FPU operation	integer instruction encodings B-68
Scan string instructions	SSE3 extensions
SCAS instruction 4-211, 4-244	CPUID extended function information 3-161
SCASB instruction	CPUID flag 3-164
SCASD instruction	integer instruction encodings B-76
SCASW instruction	Stack, pushing values on 4-179
Segment 2.541	Status flags, EFLAGS register 3-115, 3-118, 3-290,
descriptor, segment limit3-541	3-296, 3-489, 4-251, 4-330
limit	STC instruction
registers, moving values to and from 3-582	STD instruction
selector, RPL field	Stepping information
Self Snoop	STI instruction
	STMXCSR instruction 4-293
SET cc instructions	STOS instruction
SF (sign) flag, EFLAGS register	STOSB instruction 4-295
SFENCE instruction	STOSD instruction 4-295
SGDT instruction	STOSQ instruction 4-295
	STOSW instruction 4-295
Shift instructions	STR instruction
SHL instruction	String instructions3-131, 3-453, 3-535, 3-656, 4-16,
SHLD instruction	4-244, 4-295
SHR instruction	SUB instruction
SHRD instruction	SUBPD instruction 4-304
SHUFPD instruction	SUBSS instruction
SHUFPS instruction	Summary table notation



SWAPGS instruction 4-316 SYSCALL instruction 4-318 SYSENTER instruction 4-320	WAIT/FWAIT instructions
CPUID flag	Write-back and invalidate caches 4-357
SYSEXIT instruction	WRMSR instruction 4-359
CPUID flag	CPUID flag
SYSRET instruction	
т	X x87 FPU
Tangent, x87 FPU operation	checking for pending x87 FPU
Task register	exceptions 4-355
loading	constants
storing	initialization
Task switch	x87 FPU control word
CALL instruction	loading
return from nested task, IRET instruction .3-475	RC field 3-322, 3-331, 3-374
TEST instruction	restoring
Thermal Monitor CPUID flag	saving
Thermal Monitor 2	storing
CPUID flag	x87 FPU data pointer3-335, 3-357, 3-360, 3-380
Time Stamp Counter	x87 FPU instruction pointer3-335, 3-357, 3-360,
Time-stamp counter, reading	3-380 x87 FPU last opcode3-335, 3-357, 3-360, 3-380
TLB entry, invalidating (flushing)	x87 FPU last opcode5-355, 3-357, 3-360, 3-360
TS (task switched) flag, CR0 register 3-110	condition code flags3-292, 3-312, 3-394, 3-396,
TSD flag, CR4 register4-207	3-399
TSS, relationship to task register	loading
	restoring
U	saving 3-360, 3-380, 3-383
UCOMISD instruction	TOP field
UCOMISS instruction	x87 FPU flags affected by instructions 3-14
UD2 instruction	x87 FPU tag word 3-335, 3-357, 3-360, 3-380
Undefined, format opcodes	XADD instruction
Unordered values 3-292, 3-394, 3-396	XCHG instruction
UNPCKHPD instruction	XLAT instruction
UNPCKHPS instruction	XOR instruction
UNPCKLPD instruction	XORPD instruction 4-371
UNPCKLPS instruction4-349	XORPS instruction 4-373
V	7
VERR instruction	Z
Version information, processor3-156	ZF (zero) flag, EFLAGS register 3-144, 3-504,
VERW instruction	3-538, 3-541, 4-211, 4-352
VM (virtual 8086 mode) flag, EFLAGS	
register 3-475	





INTEL SALES OFFICES

ASIA PACIFIC Australia Intel Corp. Level 2 448 St Kilda Road Melbourne VIC 3004

3004 Australia Fax:613-9862 5599

China Intel Corp. Rm 709, Shaanxi Zhongda Int'l Bldg No.30 Nandajie Street Xian AX710002 China

Fax:(86 29) 7203356

Intel Corp. Rm 2710, Metropolian Tower 68 Zourong Rd Chongqing CQ 400015 China

Intel Corp. C1, 15 FIr, Fujian Oriental Hotel No. 96 East Street Fuzhou FJ 350001 China

Intel Corp. Rm 5803 CITIC Plaza 233 Tianhe Rd Guangzhou GD 510613

Intel Corp. Rm 1003, Orient Plaza No. 235 Huayuan Street Nangang District Harbin HL 150001 China

Intel Corp. Rm 1751 World Trade Center, No 2 Han Zhong Rd Nanjing JS 210009 China

Intel Corp. Hua Xin International Tower 215 Qing Nian St. ShenYang LN 110015 China

Intel Corp. Suite 1128 CITIC Plaza Jinan 150 Luo Yuan St. Jinan SN China

Intel Corp. Suite 412, Holiday Inn Crowne Plaza 31, Zong Fu Street Chengdu SU 610041 China Fax:86-28-6785965 Intel Corp.
Room 0724, White Rose
Hotel
No 750, MinZhu Road
WuChang District
Wuhan UB
430071
China

India Intel Corp. Paharpur Business Centre 21 Nehru Place New Delhi DH 110019 India

Intel Corp. Hotel Rang Sharda, 6th Floor Bandra Reclamation Mumbai MH 400050 India Fax:91-22-6415578

Intel Corp. DBS Corporate Club 31A Cathedral Garden Road Chennai TD 600034 India

Intel Corp. DBS Corporate Club 2nd Floor, 8 A.A.C. Bose Road Calcutta WB 700017 India

Japan Intel Corp. Kokusai Bldg 5F, 3-1-1, Marunouchi Chiyoda-Ku, Tokyo 1000005 Japan

Intel Corp. 2-4-1 Terauchi Toyonaka-Shi Osaka 5600872

Malaysia Intel Corp. Lot 102 1/F Block A Wisma Semantan 12 Jalan Gelenggang Damansara Heights Kuala Lumpur SL 50490 Malaysia

Thailand Intel Corp. 87 M. Thai Tower, 9th FI. All Seasons Place, Wireless Road Lumpini, Patumwan Bangkok 10330 Thailand Viet Nam Intel Corp. Hanoi Tung Shing Square, Ste #1106 2 Ngo Quyen St Hoan Kiem District Hanoi Viet Nam

EUROPE & AFRICA Belgium Intel Corp. Woluwelaan 158 Diegem 1831 Belgium

Czech Rep Intel Corp. Nahorni 14 Brno 61600 Czech Rep

Denmark Intel Corp. Soelodden 13 Maaloev DK2760 Denmark

Germany Intel Corp. Sandstrasse 4 Aichner 86551 Germany

Intel Corp. Dr Weyerstrasse 2 Juelich 52428 Germany

Intel Corp. Buchenweg 4 Wildberg 72218 Germany

Intel Corp. Kemnader Strasse 137 Bochum 44797 Germany

Intel Corp. Klaus-Schaefer Strasse 16-18 Erfstadt NW 50374 Germany

Intel Corp. Heldmanskamp 37 Lemgo NW 32657 Germany

Italy
Intel Corp Italia Spa
Milanofiori Palazzo E/4
Assago
Milan
20094
Italy
Fax:39-02-57501221

Netherland Intel Corp. Strausslaan 31 Heesch 5384CW Netherland

Poland

Poland

Intel Poland Developments, Inc Jerozolimskie Business Park Jerozolimskie 146c Warsaw 2305

Fax:+48-22-570 81 40

Portugal Intel Corp. PO Box 20 Alcabideche 2765 Portugal

Spain Intel Corp. Calle Rioja, 9 Bajo F Izquierda Madrid 28042 Spain

South Africa Intel SA Corporation Bldg 14, South Wing, 2nd Floor Uplands, The Woodlands Western Services Road Woodmead 2052 Sth Africa Fax:+27 11 806 4549

Intel Corp. 19 Summit Place, Halfway House Cnr 5th and Harry Galaun Streets Midrad 1685 Sth Africa

United Kingdom Intel Corp. The Manse Silver Lane Needingworth CAMBS PE274SL

Intel Corp. 2 Cameron Close Long Melford SUFFK CO109TS UK

Israel
Intel Corp.
MTM Industrial Center,
P.O.Box 498
Haifa
31000
Israel
Fax:972-4-8655444

LATIN AMERICA & CANADA Argentina Intel Corp. Dock IV - Bldg 3 - Floor 3 Olga Cossentini 240 Buenos Aires C1107BVA Argentina

Brazil Intel Corp. Rua Carlos Gomez 111/403 Porto Alegre 90480-003 Brazil

Intel Corp. Av. Dr. Chucri Zaidan 940 - 10th Floor San Paulo 04583-904 Brazil

Intel Corp. Av. Rio Branco, 1 - Sala 1804 Rio de Janeiro 20090-003 Brazil

Columbia Intel Corp. Carrera 7 No. 71021 Torre B, Oficina 603 Santefe de Bogota Columbia

Mexico Intel Corp. Av. Mexico No. 2798-9B, S.H. Guadalajara 44680 Mexico

Intel Corp.
Torre Esmeralda II,
7th Floor
Blvd. Manuel Avila
Comacho #36
Mexico Cith DF
11000
Mexico

Intel Corp. Piso 19, Suite 4 Av. Batallon de San Patricio No 111 Monterrey, Nuevo le 66269 Mexico

Canada Intel Corp. 168 Bonis Ave, Suite 202 Scarborough MIT3V6 Canada Fax:416-335-7695

Intel Corp. 3901 Highway #7, Suite 403 Vaughan L4L 8L5 Canada Fax:905-856-8868



Intel Corp. 999 CANADA PLACE, Suite 404,#11 Vancouver BC V6C 3E2 Canada Fax:604-844-2813

Intel Corp. 2650 Queensview Drive, Suite 250 Ottawa ON K2B 8H6 Canada Fax:613-820-5936

Intel Corp. 190 Attwell Drive, Suite 500 Rexcdale ON M9W 6H8 Canada Fax:416-675-2438

Intel Corp. 171 St. Clair Ave. E, Suite 6 Toronto ON Canada

Intel Corp. 1033 Oak Meadow Road Oakville ON L6M 1J6 Canada

USA California

Intel Corp. 551 Lundy Place Milpitas CA 95035-6833 USA Fax:408-451-8266

Intel Corp. 1551 N. Tustin Avenue, Suite 800 Santa Ana CA 92705 USA Fax:714-541-9157

Intel Corp. Executive Center del Mar 12230 El Camino Real Suite 140 San Diego CA 92130 USA Fax:858-794-5805

Intel Corp. 1960 E. Grand Avenue, Suite 150 El Segundo CA 90245 USA Fax:310-640-7133

Intel Corp. 23120 Alicia Parkway, Suite 215 Mission Viejo CA 92692 USA Fax:949-586-9499

Intel Corp. 30851 Agoura Road Suite 202 Agoura Hills CA 91301 USA Fax:818-874-1166 Intel Corp. 28202 Cabot Road, Suite #363 & #371 Laguna Niguel CA 92677 USA

Intel Corp. 657 S Cendros Avenue Solana Beach CA 90075

Intel Corp. 43769 Abeloe Terrace Fremont CA 94539 USA

Intel Corp. 1721 Warburton, #6 Santa Clara CA 95050 USA

Colorado Intel Corp. 600 S. Cherry Street, Suite 700 Denver CO 80222 USA Fax:303-322-8670

Connecticut Intel Corp. Lee Farm Corporate Pk 83 Wooster Heights Road Danbury CT 6810 USA

Florida Intel Corp. 7777 Glades Road Suite 310B Boca Raton FL 33434 USA Fax:813-367-5452

Fax:203-778-2168

Georgia Intel Corp. 20 Technology Park, Suite 150 Norcross GA 30092 USA Fax:770-448-0875

Intel Corp.
Three Northwinds Center
2500 Northwinds
Parkway, 4th Floor
Alpharetta GA
30092
USA
Fax:770-663-6354

Idaho Intel Corp. 910 W. Main Street, Suite 236 Boise ID 83702 USA Fax:208-331-2295 Illinois Intel Corp. 425 N. Martingale Road Suite 1500 Schaumburg IL 60173 USA Fax:847-605-9762

Intel Corp. 999 Plaza Drive Suite 360 Schaumburg IL 60173

Intel Corp. 551 Arlington Lane South Elgin IL 60177 USA

Indiana Intel Corp. 9465 Counselors Row, Suite 200 Indianapolis IN 46240 USA Fax:317-805-4939

Intel Corp. 125 Nagog Park Acton MA 01720 USA Fax:978-266-3867

Massachusetts

Intel Corp. 59 Composit Way suite 202 Lowell MA 01851 USA

Intel Corp. 800 South Street, Suite 100 Waltham MA 02154 USA

Maryland

Intel Corp. 131 National Business Parkway, Suite 200 Annapolis Junction MD 20701 USA Fax:301-206-3678

Michigan Intel Corp. 32255 Northwestern Hwy., Suite 212 Farmington Hills MI 48334 USA Fax:248-851-8770

Minnesota Intel Corp. 3600 W 80Th St Suite 450 Bloomington MN 55431 USA Fax:952-831-6497 North Carolina Intel Corp. 2000 CentreGreen Way, Suite 190 Cary NC 27513 USA Fax:919-678-2818

New Hampshire Intel Corp. 7 Suffolk Park Nashua NH 03063 USA

New Jersey Intel Corp. 90 Woodbridge Center Dr, Suite. 240 Woodbridge NJ 07095 USA Fax:732-602-0096

New York Intel Corp. 628 Crosskeys Office Pk Fairport NY 14450 USA Fax:716-223-2561

Intel Corp. 888 Veterans Memorial Highway Suite 530 Hauppauge NY 11788 USA Fax:516-234-5093

Ohio Intel Corp. 3401 Park Center Drive Suite 220 Dayton OH 45414 USA Fax:937-890-8658

Intel Corp. 56 Milford Drive Suite 205 Hudson OH 44236 USA Fax:216-528-1026

Oregon Intel Corp. 15254 NW Greenbrier Parkway, Building B Beaverton OR 97006 USA Fax:503-645-8181

Intel Corp. 925 Harvest Drive Suite 200 Blue Bell PA 19422 USA Fax:215-641-0785

Pennsylvania

Intel Corp. 7500 Brooktree Suite 213 Wexford PA 15090 USA Fax:714-541-9157 Texas Intel Corp. 5000 Quorum Drive, Suite 750 Dallas TX 75240 USA Fax:972-233-1325

Intel Corp. 20445 State Highway 249, Suite 300 Houston TX 77070 USA Fax:281-376-2891

Intel Corp. 8911 Capital of Texas Hwy, Suite 4230 Austin TX 78759 USA Fax:512-338-9335

Intel Corp. 7739 La Verdura Drive Dallas TX 75248 USA

Intel Corp. 77269 La Cabeza Drive Dallas TX 75249 USA

Intel Corp. 3307 Northland Drive Austin TX 78731 USA

Intel Corp. 15190 Prestonwood Blvd. #925 Dallas TX 75248 USA Intel Corp.

Washington Intel Corp. 2800 156Th Ave. SE Suite 105 Bellevue WA 98007 USA Fax:425-746-4495

Intel Corp. 550 Kirkland Way Suite 200 Kirkland WA 98033 USA

Wisconsin Intel Corp. 405 Forest Street Suites 109/112 Oconomowoc Wi 53066 USA