SPECIFICATION

Calypso Terminal API

Reader

Version 3.0.0-SNAPSHOT, 2026-10-28



Warning. The present document cancels and replaces the previous release.

© Calypso Networks Association 2026— Reproduction is prohibited without prior written agreement

Link and Contact



Website
https://calypsonet.org



Support
support@calypsonet.org

Copyright © Calypso Networks Association, https://calypsonet.org.

This specification is licensed under the **Creative Commons Attribution-NoDerivatives 4.0 International** *(CC BY-ND 4.0).*

You are free to **share** *— copy and redistribute this document in any medium or format for any purpose, even commercially — under the following terms:*

- ***Attribution*** *— You MUST give appropriate credit to the Calypso Networks Association, provide a link to the license, and indicate if changes were made. You MAY do so in any reasonable manner, but not in any way that suggests the Calypso Networks Association endorses you or your use.*
- ***NoDerivatives*** *— If you remix, transform, or build upon this document, you MAY NOT distribute the modified material.*

No additional restrictions — You MAY NOT apply legal terms or technological measures that legally restrict others from doing anything the license permits.

Implementation grant *— The* **NoDerivatives** *condition above applies to this specification* **document** *only — its text, tables and diagrams. It does* **not** *restrict the use of the technical information the document contains. The Calypso Networks Association hereby grants everyone an irrevocable, worldwide, royalty-free permission to use the information contained in this specification to design, develop, and distribute software implementations of this API, in any programming language, under the license of their choice.*

The full license text is available at https://creativecommons.org/licenses/by-nd/4.0/.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Table of Contents

1. Abstract . . . 6
2. Introduction . . . 7
2.1. Purpose . . . 7
2.2. Scope . . . 7
2.3. Conformance . . . 7
2.4. Document Conventions . . . 8
2.4.1. Naming . . . 8
2.4.2. Data types . . . 8
2.4.3. Type tables . . . 8
2.4.4. Operation tables . . . 9
2.4.5. Operation contracts . . . 9
2.4.6. Concurrency . . . 9
2.5. References and Resources . . . 10
2.5.1. Calypso References . . . 10
2.5.2. Normative References . . . 10
2.5.3. External Resources . . . 10
3. Glossary and Acronyms . . . 11
3.1. Glossary . . . 11
3.2. Acronyms . . . 11
4. Architectural Overview . . . 13
4.1. Functional positioning . . . 13
4.2. Logical namespaces . . . 13
4.3. Multi-channel design . . . 14
4.4. Card selection modes . . . 14
4.5. Reader observation lifecycle . . . 15
4.6. UML class diagram . . . 17
5. API Specification . . . 19
5.1. Constants . . . 19
5.1.1. Reader API Properties . . . 19
5.2. Data . . . 19
5.2.1. Basic Card Selector . . . 19
5.2.2. Card Detection Settings . . . 19
5.2.3. Card Reader Event . . . 20
5.2.4. ISO Card Selector . . . 20
5.2.5. Multichannel Card Selection Result . . . 21
5.2.6. Sequential Card Selection Result . . . 21
5.2.7. Single Card Selection Result . . . 22
5.3. API Interfaces . . . 22
5.3.1. Card Reader . . . 23
Get Name . . . 23
Is Card Present . . . 23
Is Contactless . . . 23
5.3.2. Card Reader Provider . . . 23
Find Reader . . . 24
Get Reader . . . 24
Get Reader Names . . . 24
Get Readers . . . 24

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

5.3.3. Card Selection Manager . . . 25
Export Card Selection Scenario . . . 26
Export Processed Card Selection Scenario . . . 26
Import Card Selection Scenario . . . 26
Prepare ISO Selection Case . . . 26
5.3.4. Card Selector . . . 27
5.3.5. Multichannel Card Selection Manager . . . 27
Import Processed Card Selection Scenario . . . 28
Process Card Selection Scenario . . . 28
5.3.6. Observable Card Reader . . . 28
Clear Scheduled Card Selection Scenario . . . 29
End Card Processing . . . 29
Start Card Detection . . . 29
Stop Card Detection . . . 30
5.3.7. Reader API Factory . . . 30
Create Multichannel Card Selection Manager . . . 30
Create Sequential Card Selection Manager . . . 30
Create Single Card Selection Manager . . . 31
Get Card Reader Provider . . . 31
5.3.8. Scheduled Card Selections Response . . . 31
5.3.9. Sequential Card Selection Manager . . . 31
Import Processed Card Selection Scenario . . . 32
Parse Scheduled Card Selections Response . . . 32
Prepare Basic Selection Case . . . 33
Process Card Selection Scenario . . . 33
Schedule Card Selection Scenario . . . 33
5.3.10. Single Card Selection Manager . . . 34
Import Processed Card Selection Scenario . . . 34
Parse Scheduled Card Selections Response . . . 34
Prepare Basic Selection Case . . . 35
Process Card Selection Scenario . . . 35
Schedule Card Selection Scenario . . . 35
5.4. SPI Interfaces . . . 36
5.4.1. Basic Card Selection Extension . . . 36
5.4.2. Card Reader Event Handler . . . 36
On Reader Error . . . 36
On Reader Event . . . 37
5.4.3. Card Transaction Manager . . . 37
Process Commands . . . 37
5.4.4. ISO Card Selection Extension . . . 38
5.4.5. ISO Card Transaction Manager . . . 38
As Multichannel Card Transaction Manager . . . 38
5.4.6. ISO Smart Card . . . 38
Get Select Application Response . . . 39
Is Basic Channel . . . 39
5.4.7. Multichannel Card Transaction Manager . . . 39
Close Channel . . . 39
Process Commands And Close Channel . . . 40
5.4.8. Smart Card . . . 40

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Get Power On Data . . . 40
Is Active . . . 41
5.5. Enumerations . . . 41
5.5.1. Card Presence Notification Policy . . . 41
5.5.2. Card Reader Event Type . . . 41
5.5.3. Channel Selection Policy . . . 42
5.5.4. Detection Mode . . . 42
5.5.5. File Control Information . . . 42
5.5.6. File Occurrence . . . 43
5.6. Errors . . . 43
5.6.1. Card Communication . . . 43
5.6.2. Invalid Card Response . . . 43
5.6.3. Reader Communication . . . 44
Annex A: Conformance to external requirements . . . 45
A.1. Applicability contexts . . . 45
A.2. Detection . . . 45
A.2.1. Removal notification — RL-DET-REMNOTIF.1 . . . 46
A.2.2. Control of the removal procedures — RL-DET-REMCTRL.1 . . . 46
A.2.3. Configuration of the polling command — RL-DET-REMCFG.1 . . . 47

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

1. Abstract

This document is the official technical specification of the **Terminal Reader API** standardised by the **Calypso Networks Association** (CNA). It defines, in a language-agnostic way (using a notation inspired by the Kotlin language), the interfaces, classes, enumerations, errors, structural relationships and behavioural requirements that any conforming implementation of the Terminal Reader API MUST satisfy.

The Terminal Reader API is part of the broader CNA **Terminal API** family and acts as the contract through which terminal applications discover card readers, observe card events, select cards and exchange data with them.

Document Status

Reference	261028-SP-CNATerminalAPI-Reader
Short name	CNA-TR-API
Version	3.0.0-SNAPSHOT
Revision date	2026-10-28
Editor	Calypso Networks Association
Source repository	https://github.com/calypsonet/calypsonet-terminal-reader-api-spec
Reference license	Creative Commons Attribution-NoDerivatives 4.0 International (CC BY-ND 4.0)



The present document specifies the 3.0.0-SNAPSHOT of the Terminal Reader API. It defines a single, coherent baseline against which conforming implementations are evaluated; the **Since** column indicates the version in which each member was introduced.

Revision List



This section lists the high-level changes per version. The complete, fine-grained changelog is maintained in the `CHANGELOG.md` file at the root of the source repository.

Version / Date	Modifications
v3.0.0-SNAPSHOT 2026-10-28	Initial edition of this document.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

2. Introduction

2.1. Purpose

The Terminal Reader API defines a standardised set of contracts allowing terminal applications to interact with card readers and the cards presented to them, independently of:

- the underlying reader hardware (contact, contactless, virtual, etc.),
- the card technology family (ISO/IEC 7816-4, ISO/IEC 14443, proprietary),
- the implementation technology of the application (programming language, runtime).

Conforming implementations of this specification MUST allow extension modules (e.g. card-specific APIs such as the Calypso Card API) to plug in transparently through the Service Provider Interface (SPI) mechanism defined in `reader.selection.spi` and `reader.transaction.spi`.

2.2. Scope

This specification covers:

- the discovery and basic interrogation of card readers,
- the observation of reader events related to card presence and selection,
- the configuration of card detection (RF technologies, detection mode, ECP frame),
- the description and orchestration of card selection scenarios, including multi-channel scenarios,
- the abstraction of the physical and logical communication channels established with cards,
- the contract surface required by card extension modules to interoperate with reader implementations,
- the management of single-channel and multi-channel card transactions.

The following topics are **out of scope**:

- the wire-level protocols used between reader and card (e.g. APDU framing, ISO/IEC 14443 anti-collision),
- the cryptographic operations performed by or on behalf of the card,
- the lifecycle and packaging of reader drivers,
- the user interface presented by the terminal application.

2.3. Conformance

A software product conforms to this specification if and only if:

1. it implements every interface and class defined in Chapter 5 with the operations and semantics prescribed in this document,
2. it raises errors exclusively of the types defined in Section 5.6 for the situations described,
3. it preserves the structural relationships described in Chapter 4.

Throughout this specification, the key words **MUST**, **MUST NOT**, **SHOULD**, **SHOULD NOT**, **RECOMMENDED**, **MAY** and **OPTIONAL** are to be interpreted as described in RFC 2119 and RFC 8174 when, and only when, they appear in all capitals.

In conformance with RFC 2119, **SHALL** is equivalent to **MUST**; this specification uses **MUST** exclusively in order

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

to avoid ambiguity.

2.4. Document Conventions

2.4.1. Naming

Type names follow `UpperCamelCase`; operation, parameter and enumeration-member names follow `lowerCamelCase` except for enumeration values which use `UPPER_SNAKE_CASE`. Names defined by this specification are reproduced as-is in the UML class diagram (Section 4.6).

2.4.2. Data types

The following type names, whose notation is inspired by the Kotlin language, are used in operation signatures and are mapped, in each binding, to the closest equivalent native type. Implementations MUST preserve the semantic intent rather than the syntactic form.

Type	Description	Typical bindings
`String`	Sequence of characters, UTF-8 encoded by default.	`String`, `string`, `str`.
`Boolean`	Two-state truth value.	`boolean`, `bool`.
`Int`	Signed 32-bit integer.	`int`, `Int32`, `i32`.
`Long`	Signed 64-bit integer.	`long`, `Int64`, `i64`.
`ByteArray`	Ordered sequence of octets.	`byte[]`, `[u8]`, `bytes`.
`List<T>`	Ordered collection of `T` values, may contain duplicates.	`List<T>`, `Vec<T>`.
`Set<T>`	Unordered collection of unique `T` values.	`Set<T>`, `HashSet<T>`.
`Map<K,V>`	Associative array binding keys of type `K` to values of type `V`.	`Map<K,V>`, `Dictionary<K,V>`, `HashMap<K,V>`.
`Any`	Value of any type, root of the type hierarchy.	`Object`, `Any`, `object`, `Box<dyn Any>`.
`T?`	Nullable value: either a `T` value or `null`.	`Optional<T>`, `T?`, `Option<T>`.
`null`	Absence of value, the alternative held by a nullable type.	`null`, `nil`, `None`.
`Self`	Own type of the receiver: a fluent operation returns the instance it was called on.	`Self`, `T` (recursive generic).
`Unit`	Indicates that an operation returns no value.	`void`, `Unit`, `()`.

2.4.3. Type tables

Each interface, class, enumeration and error defined in this document is described by a table of the form:

Name	The type's normalized name.
Kind	The category of the type (interface, class, enumeration, error, etc.).
Namespace	The namespace in which the type is defined.
Extends	The type extended by this type, when applicable.
Implements	The interface implemented by this type, when applicable.
Since	The version of the API in which the type was introduced.
Purpose	A normative description of the type's responsibility.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

See also	Cross-references to related operations or types, each a hyperlink to the corresponding table. Present only when applicable.

The **Purpose** row states, in one or two sentences, the responsibility of the type and the way an instance is obtained. It is meant to be scanned, not read: any content that requires structure or depth—rules, lists, notes, value tables or examples—is placed as prose below the table.

2.4.4. Operation tables

Each operation defined in this document is described by a table of the form:

Signature	The operation's signature.
Since	The version of the API in which the operation was introduced.
Description	A normative description of the operation's behaviour.
Parameters	A description of each input parameter.
Returns	A description of the returned value, if any.
Pre-conditions	The conditions the caller MUST satisfy before invoking the operation, each prefixed by its nature.
Errors	A list of error conditions a correct caller must handle, each mapped to a specific error type.
See also	Cross-references to related operations or types, each a hyperlink to the corresponding table. Present only when applicable.

2.4.5. Operation contracts

To avoid repetition, the following rules apply to every operation table in Chapter 5 and are therefore not restated for each operation:

- **Pre-conditions.** The **Pre-conditions** row states what the caller MUST guarantee before invoking the operation. Violating one is a contract error, never listed in the **Errors** row, which describes only the outcomes a correct caller must handle. Each entry is prefixed by its nature, which determines the error raised when the condition is not met:
  - **Argument**—an illegal argument error. Applies to any invalid argument, including values bounded by a card or SAM protocol.
  - **Range**—an index out of bounds error. Applies when the argument designates a position within a collection or memory image exposed by the API.
  - **State**—an illegal state error.
  - **Capability**—an unsupported operation error.
- **Non-`null` results.** Unless the return type is marked nullable (`T?`) or the **Returns** row states otherwise, an operation returns a non-`null` value.
- **Collections.** Unless the return type is marked nullable (`T?`), an operation whose return type is a collection (e.g. `List`, `Set`, `Map`) returns an empty collection rather than `null`.
- **Fluent composition.** Builder-style operations return the current instance so that calls can be chained.

2.4.6. Concurrency

Unless explicitly stated otherwise, the stateful types defined by this specification are **not** thread-safe. A given instance MUST be accessed from a single thread at a time; concurrent use of the same instance without external synchronisation results in undefined behaviour. Distinct instances MAY be used concurrently.

© Calypso Networks Association 2026—Reproduction is prohibited without prior written agreement

2.5. References and Resources

2.5.1. Calypso References

References to CNA Terminal APIs designate the indicated **major** version; any later release within the same major is backward-compatible per that API's evolution policy.

Reference	Document
[CNA-TRD-API]	*CNA Terminal API — Reader Definitions* (SP-CNATerminalAPI-ReaderDefinitions), version 1.0, Calypso Networks Association. Provides the `RfTechnology` and `CardType` enumerations referenced by this specification.

2.5.2. Normative References

Reference	Document
[RFC 2119]	*Key words for use in RFCs to Indicate Requirement Levels*, S. Bradner, March 1997.
[RFC 8174]	*Ambiguity of Uppercase vs Lowercase in RFC 2119 Key Words*, B. Leiba, May 2017.
[ISO/IEC 7816]	*Identification cards — Integrated circuit cards*.
[ISO/IEC 14443]	*Identification cards — Contactless integrated circuit cards — Proximity cards*.
[CNA-RL-REQ]	*Calypso Specification — Reader Layer Requirements* (200422-SP-ReaderLayer-Requirements), version 2.0, 7 September 2023, Calypso Networks Association. Restricted distribution.
[STA-ICS-PCD]	*STA Contactless Interface Certification for Public Transport Products — Implementation Conformance Statement (ICS) for PCD*, version 3.3, 15 July 2025, Smart Ticketing Alliance, Certification Working Group. Declares, among the characteristics of a certified PT reader, the card presence check method it implements (item PCD2.5).

2.5.3. External Resources

Resource	Link
Calypso Networks Association	https://calypsonet.org
Terminal APIs website	https://terminal-api.calypsonet.org
Terminal APIs documentation	https://docs.terminal-api.calypsonet.org

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

3. Glossary and Acronyms

3.1. Glossary

Term	Definition
Card	Any physical or virtual smart card that can be presented to a reader for selection and dialog.
Card Reader	Hardware or software component capable of detecting cards and exchanging data with them.
Card Selection	Sequence of operations used to identify, filter and prepare a card for application-level dialog.
Logical Channel	Software-level communication path established with a card after a successful selection.
Basic Channel	The default logical channel (channel `0`) of an ISO/IEC 7816-4 card.
Multi-Channel	Capability of an ISO/IEC 7816-4 card to host several active logical channels in parallel.
Physical Channel	Hardware-level communication path between the reader and the card.
Observable Reader	Reader implementation able to notify a registered event handler asynchronously of card-related events.
Power-on Data	Data returned by the reader at the moment a card is detected (e.g. ATR, virtual ATR, anti-collision data).
Card Application	Application Dedicated File (DF) selected on a card, identified by its AID, as defined in ISO/IEC 7816-4.
AID	Application IDentifier as defined in ISO/IEC 7816-4 (5 to 16 bytes).
APDU	Application Protocol Data Unit, the message format used between the terminal and the card, as defined in ISO/IEC 7816-3.
ECP	Enhanced Contactless Polling, an extended polling mechanism enabling fast card detection in mobile transit deployments.
RF Technology	Radio-frequency communication technology used by a contactless reader to detect a card, as defined in ISO/IEC 14443.
Card Type	Identified product or transport-protocol family of a detected card.
SPI	Service Provider Interface — a set of interfaces designed to be implemented by an extension module.

3.2. Acronyms

Abbreviation	Expansion
AID	Application IDentifier
APDU	Application Protocol Data Unit
ATR	Answer To Reset
CNA	Calypso Networks Association
DF	Dedicated File
ECP	Enhanced Contactless Polling
FCI	File Control Information
FCP	File Control Parameters
FMD	File Management Data
ICS	Implementation Conformance Statement
ISO	International Organization for Standardization
PCD	Proximity Coupling Device

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Abbreviation	Expansion
PT	Public Transport
RF	Radio Frequency
RFC	Request For Comments
SPI	Service Provider Interface
STA	Smart Ticketing Alliance
UML	Unified Modelling Language

© Calypso Networks Association 2026— Reproduction is prohibited without prior written agreement

4. Architectural Overview

4.1. Functional positioning

The Terminal Reader API sits between the terminal application and the reader drivers, exposing a stable contract on each side:

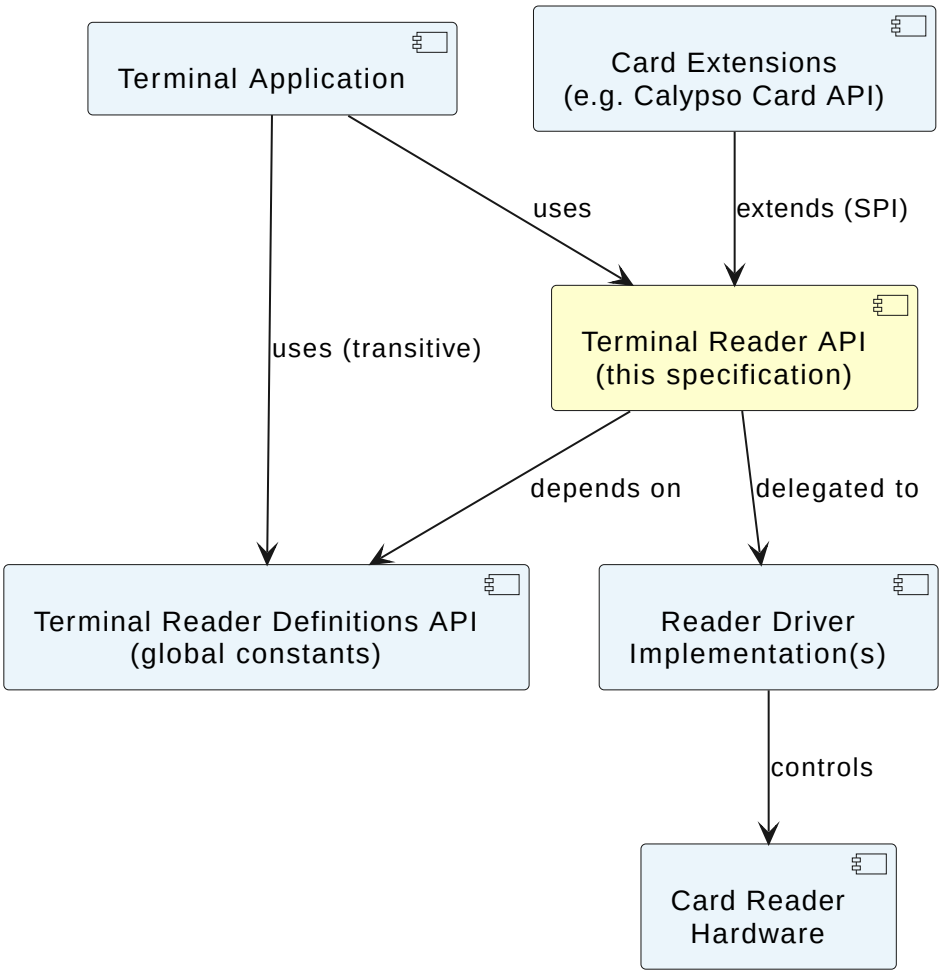


Figure 1. Terminal Reader API — Architecture Overview

4.2. Logical namespaces

Namespace	Role	Summary
`reader`	Public API	Entry points of the API and the abstractions used to manipulate readers and the events they produce; exposes `CardReaderProvider` to discover and access the readers available in the execution environment.
`reader.spi`	SPI	Contracts implemented by the application (as opposed to the reader implementation) when readers are observed.
`reader.selection`	Public API	Orchestration of card selection scenarios: the hierarchy of card selection managers (one per selection mode), the family of selectors, the channel and notification policies and the structures exposing selection results.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Namespace	Role	Summary
`reader.selection.spi`	SPI	Contracts implemented by card extensions to plug into the selection machinery.
`reader.transaction.spi`	SPI	Common contract shared by all card transaction managers exposed by card extensions; its three interfaces form a hierarchy letting each extension anchor its transaction manager at the capability level matching its card model (non-ISO, optionally multi-channel, intrinsically multi-channel).

4.3. Multi-channel design

The Terminal Reader API explicitly supports ISO/IEC 7816-4 cards that host several active logical channels in parallel. The design follows a three-tier hierarchy in the `reader.transaction.spi` namespace:

1. `CardTransactionManager` — root contract common to every transaction manager, regardless of channel model.
2. `IsoCardTransactionManager` — intermediate contract for ISO/IEC 7816-4 cards for which multi-channel is an **optional capability** of the underlying card. It exposes the cast operation `asMultichannelCardTransactionManager` that returns a `MultichannelCardTransactionManager` when the card supports it.
3. `MultichannelCardTransactionManager` — contract for cards that are **intrinsically multi-channel** by design. Consumer APIs whose target cards are always multi-channel SHOULD make their transaction manager extend this contract directly.

4.4. Card selection modes

A card selection scenario — prepared through one of the card selection managers described in `CardSelectionManager`, whose type determines the selection mode — can be operated in two ways, chosen according to the reader capability and the use case.



This section is *informative*. It gives an end-to-end view of the two modes; the normative behaviour of each operation is defined in the sections of the card selection managers.

Synchronous (explicit)

The card is already present on a `CardReader`. The application runs the scenario itself with the `processCardSelectionScenario` operation of its manager and obtains the corresponding result immediately (`SingleCardSelectionResult`, `SequentialCardSelectionResult` or `MultichannelCardSelectionResult`). The **same entity** manages both the selection and the subsequent card processing.

Asynchronous (scheduled / event-driven)

On an `ObservableCardReader`, the scenario is registered ahead of time with `scheduleCardSelectionScenario` — available on the single-channel managers `SingleCardSelectionManager` and `SequentialCardSelectionManager` only — and executed automatically by the reader upon card insertion. The outcome is delivered as a `CardReaderEvent` to the `CardReaderEventHandler` — its type (`CARD_MATCHED` or `CARD_INSERTED`) depending on the `CardPresenceNotificationPolicy` — and decoded with the `parseScheduledCardSelectionsResponse` operation of the same manager. Here the **reader** drives the selection while the **event handler** performs the card processing.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

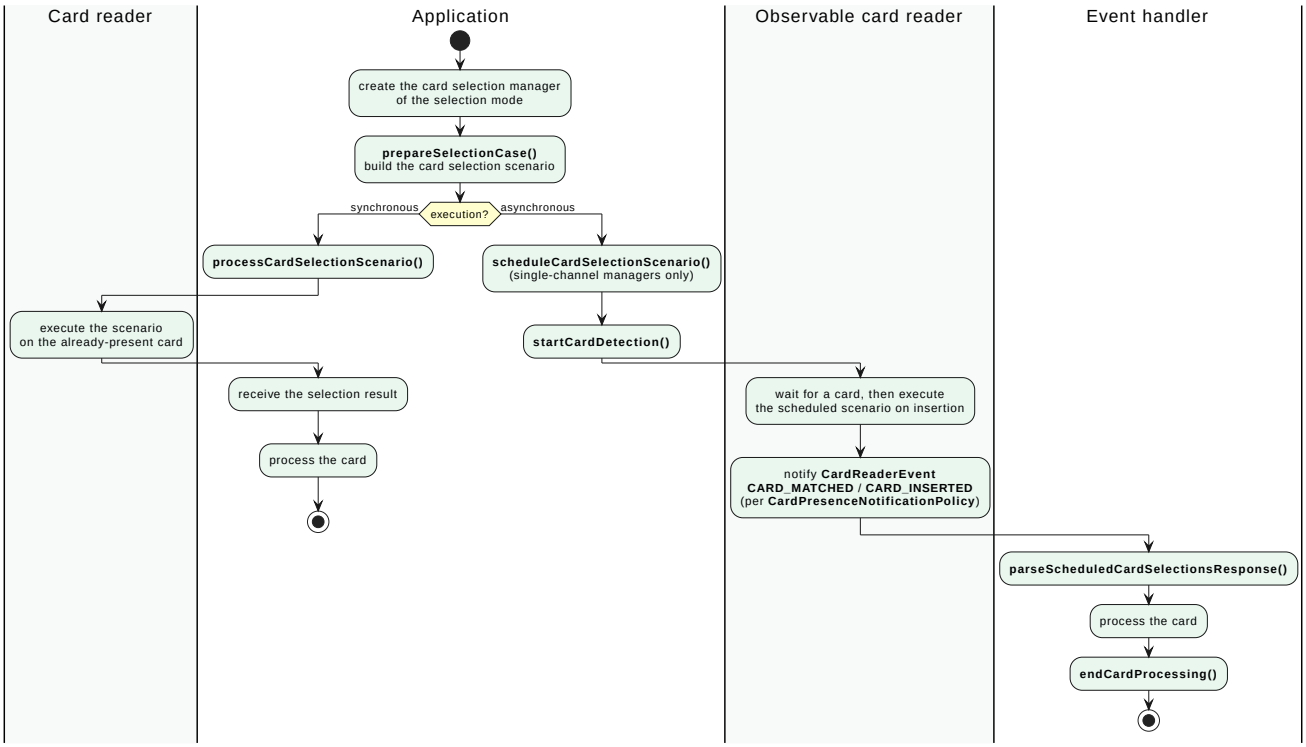


Figure 2. Terminal Reader API — Card Selection Modes Activity Diagram

The runtime execution of the asynchronous mode — the reader states and transitions — is detailed in Reader observation lifecycle.

4.5. Reader observation lifecycle

An `ObservableCardReader` tracks card insertion and removal through an internal state machine. The diagram below gives the integrator a complete view of that lifecycle: how `startCardDetection` / `stopCardDetection` and `endCardProcessing` move the reader between states, when a `CardReaderEvent` is produced, and how the `DetectionMode` and `CardPresenceNotificationPolicy` settings steer the flow.



This section is *informative*. The state and trigger names shown are internal to the implementation and are not part of the normative API surface; they are provided only to explain the observed runtime behavior.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

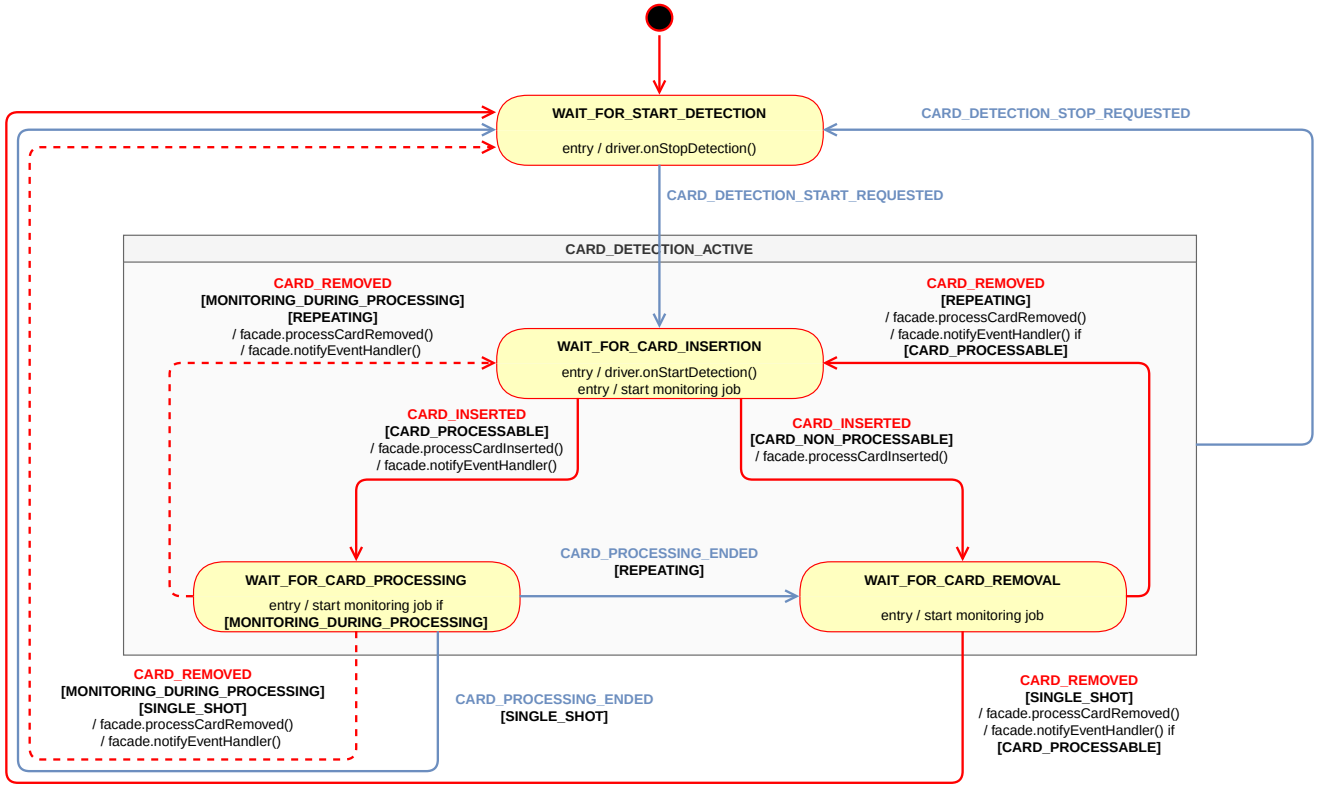


Figure 3. Card Reader Observation — FSM State Diagram

The diagram uses the following notation:

Triggers — events that drive the transitions:

- **Application** triggers (blue transitions in the diagram):
  - `CARD_DETECTION_START_REQUESTED` — the application called `startCardDetection`.
  - `CARD_DETECTION_STOP_REQUESTED` — the application called `stopCardDetection` (factorized on the composite-state boundary).
  - `CARD_PROCESSING_ENDED` — the application called `endCardProcessing`.
- **Hardware** triggers (red transitions in the diagram):
  - `CARD_INSERTED` — the monitoring job detected a card.
  - `CARD_REMOVED` — the monitoring job detected card removal.

Reader capabilities:

- `[MONITORING_DURING_PROCESSING]` — the reader can detect card removal while processing is running, **AND** card processing is executed in a dedicated thread.

Card eligibility:

- `[CARD_PROCESSABLE]` — the inserted card matched at least one case of the card selection scenario, **OR** the notification policy covers every detected card regardless of selection (`CardPresenceNotificationPolicy == ALWAYS`).
- `[CARD_NON_PROCESSABLE]` — the inserted card matched no case of the card selection scenario, **AND** the notification policy is restricted to matched cards (`CardPresenceNotificationPolicy == MATCHED_ONLY`).

Detection mode — the active `DetectionMode`, evaluated when a card-processing cycle ends:

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

- `[REPEATING]` — detection resumes after each card-processing cycle, ready for the next card.
- `[SINGLE_SHOT]` — detection stops after the first card-processing cycle; a new call to `startCardDetection` is required to detect further cards.

Actions — effect executed on a transition:

- `/ facade.operation()` — a public API call (event production or event-handler notification).
- `/ driver.operation()` — a low-level hardware call (hardware notification).
- `/ start job` — a monitoring job submitted to the background executor.

The removal phase closes the cycle for two operational reasons: it prevents a card that has never left the field from being processed a second time — the **double tap** that would revalidate a transport ticket immediately after its validation — and it releases the communication channel in a clean state, so that the next card is detected and processed without residual context. How this phase answers the external **Detection** requirements is documented in Appendix A.

4.6. UML class diagram

The following UML class diagram provides a visual representation of the types and relationships defined by this specification:

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

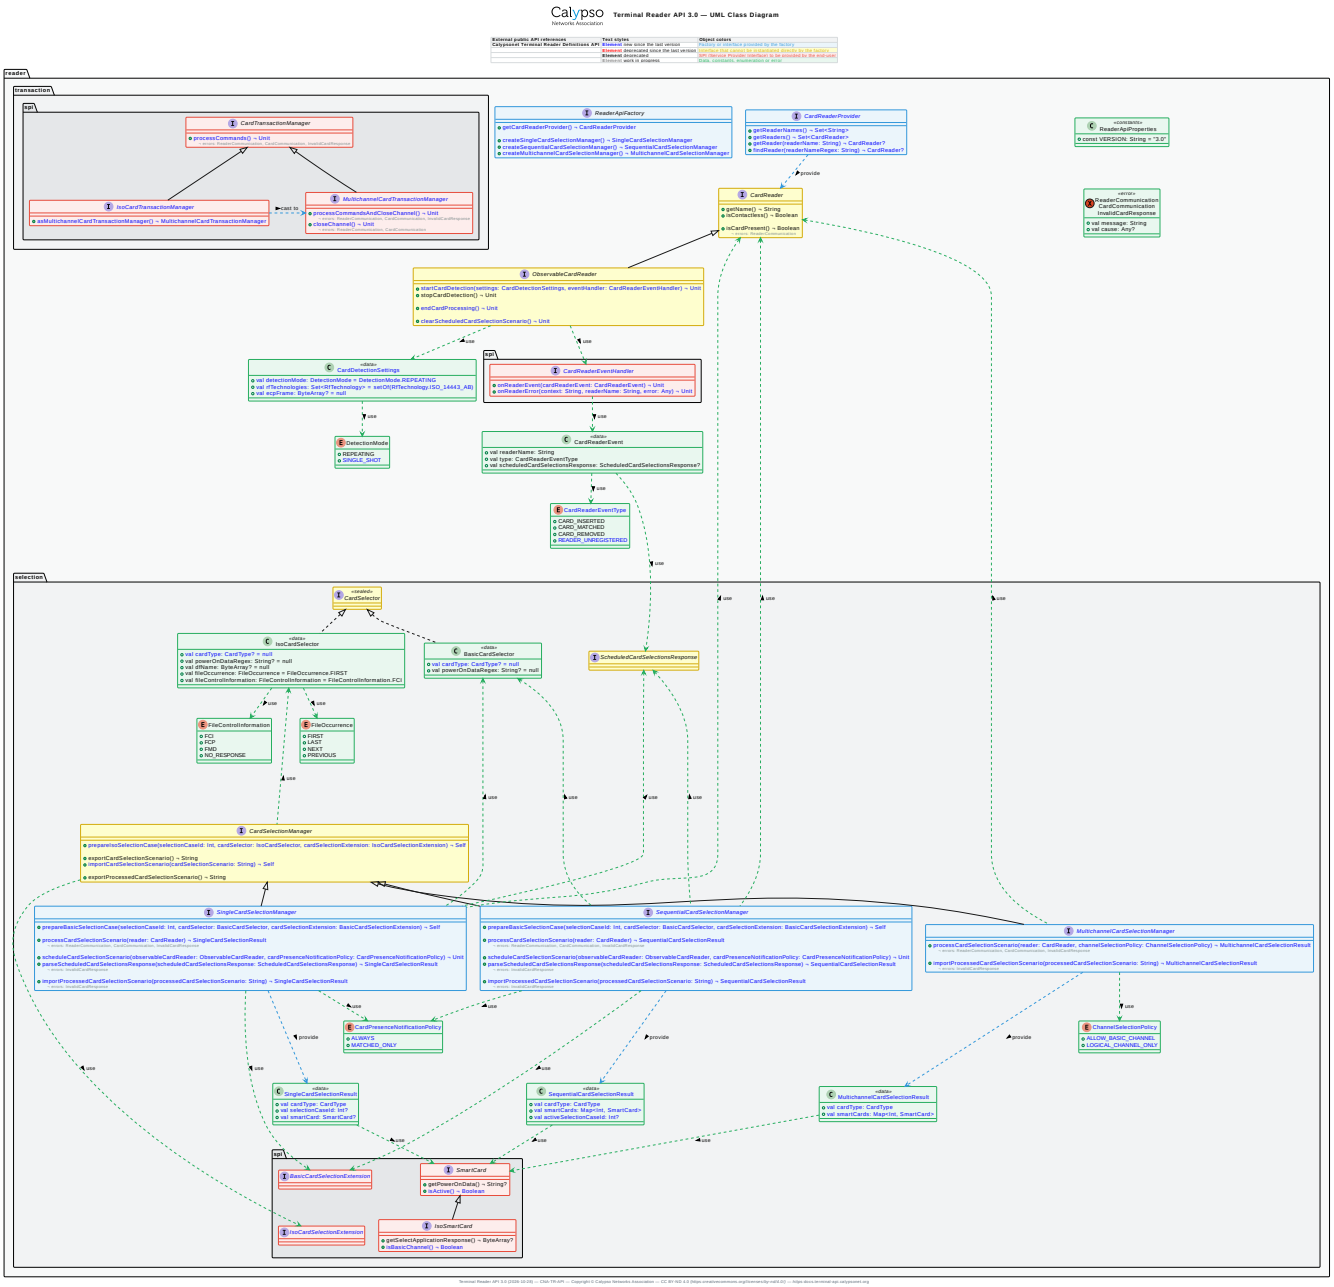


Figure 4. Terminal Reader API — UML Class Diagram

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

5. API Specification

5.1. Constants

5.1.1. Reader API Properties

Name	`ReaderApiProperties`
Kind	Constants
Namespace	`reader`
Since	1.0
Purpose	Exposes the immutable properties of the Terminal Reader API.

Name	Type	Since	Description
`VERSION`	`String`	1.0	String representation of the version of the API implemented by the conforming binding. The value is a dotted decimal of the form `MAJOR.MINOR`; it is `"3.0"` for this revision of the specification.

5.2. Data

5.2.1. Basic Card Selector

Name	`BasicCardSelector`
Kind	Data
Namespace	`reader.selection`
Implements	`CardSelector`
Since	2.0
Purpose	Basic, technology-agnostic card selector, built directly by the application.

`BasicCardSelector` carries no ISO/IEC 7816-4-specific filter; it exists to express their absence at the type level. Every filter is **optional** and MAY be combined with the others. When no filter is set, any card that responds when presented to the reader is considered selected; when one or more filters are set, the card is rejected as soon as one of them does not match.

Name	Type	Default	Since	Description
`cardType`	`CardType?` (CNA-TRD-API)	`null`	3.0	Restricts the selection to cards whose detected type matches this value. The value `UNKNOWN` MAY be used to capture cards whose type could not be identified. `null` disables the filter.
`powerOnDataRegex`	`String?`	`null`	2.0	Restricts the selection to cards whose power-on data, as provided by the reader, matches this regular expression. `null` disables the filter.

5.2.2. Card Detection Settings

Name	`CardDetectionSettings`
Kind	Data
Namespace	`reader`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Since	3.0
Purpose	Carries the configuration of a card detection cycle, built directly by the application.

Name	Type	Default	Since	Description
`detectionMode`	`DetectionMode`	`DetectionMode.REPEATING`	3.0	Governs the reader behaviour once a card-processing cycle has terminated. With `REPEATING`, the reader automatically resumes polling and waits for the next card insertion, enabling continuous, unattended operation. With `SINGLE_SHOT`, the reader stops detection after the current cycle; a new call to `startCardDetection` is required before another card can be detected.
`rfTechnologies`	`Set<RfTechnology>` (CNA-TRD-API)	`setOf(RfTechnology.ISO_14443_AB)`	3.0	The set of RF technologies the reader activates during polling. Not relevant for contact readers, where it is accepted without effect. MUST NOT be empty.
`ecpFrame`	`ByteArray?`	`null`	3.0	The ECP (Enhanced Contactless Polling) frame to emit at polling startup, treated by this specification as opaque binary data constructed by the application in accordance with the relevant ECP specification and transmitted as-is to the reader. Relevant only on readers supporting ECP; on the others the frame is silently ignored and a `WARN`-level message is typically logged. `null` means that no ECP frame is emitted. When set, it MUST NOT be empty.

5.2.3. Card Reader Event

Name	`CardReaderEvent`
Kind	Data
Namespace	`reader`
Since	1.0
Purpose	Data container describing a change of state observed by a `CardReader`.

A `CardReaderEvent` carries the origin of the event (the reader name), the event type and, when available, the card selection response. The circumstances under which each event type is emitted are described in Reader observation lifecycle.

Name	Type	Default	Since	Description
`readerName`	`String`	—	1.0	Name of the reader that generated the event. Non-empty.
`type`	`CardReaderEventType`	—	1.0	Type of the event.
`scheduledCardSelectionsResponse`	`ScheduledCardSelectionsResponse?`	—	1.0	Response of the selection scenario scheduled on the reader. It is **`null` only** when no selection scenario has been scheduled; in every other case it is non-`null`. When non-`null`, it MUST be passed for interpretation to the `parseScheduledCardSelectionsResponse` operation of the card selection manager that scheduled the associated selection scenario, or of another manager of the same type sharing the same context—that is, one that has previously prepared the same selection scenario.

5.2.4. ISO Card Selector

Name	`IsoCardSelector`
Kind	Data
Namespace	`reader.selection`

© Calypso Networks Association 2026—Reproduction is prohibited without prior written agreement

Implements	`CardSelector`
Since	2.0
Purpose	ISO/IEC 7816-4 card selector, built directly by the application.

`IsoCardSelector` adds the ISO/IEC 7816-4-specific filters to those common to every selector. They are all **optional** and MAY be combined. When no filter is set, any card that responds when presented to the reader is considered selected; when one or more filters are set, the card is rejected as soon as one of them does not match.

Name	Type	Default	Since	Description
`cardType`	`CardType?` (CNA-TRD-API)	`null`	3.0	Restricts the selection to cards whose detected type matches this value. The value `UNKNOWN` MAY be used to capture cards whose type could not be identified. `null` disables the filter.
`powerOnDataRegex`	`String?`	`null`	2.0	Restricts the selection to cards whose power-on data, as provided by the reader, matches this regular expression. `null` disables the filter.
`dfName`	`ByteArray?`	`null`	2.0	Selects a card application DF by its name: the DF is selected only if its name starts with this AID, as defined by ISO/IEC 7816-4 section 4.2. The value is used as a parameter of the **Select Application** ISO card command and MUST contain 5 to 16 bytes. `null` disables the filter.
`fileOccurrence`	`FileOccurrence`	`FileOccurrence.FIRST`	2.0	File occurrence mode (see ISO/IEC 7816-4).
`fileControlInformation`	`FileControlInformation`	`FileControlInformation.FCI`	2.0	File control mode (see ISO/IEC 7816-4).

5.2.5. Multichannel Card Selection Result

Name	`MultichannelCardSelectionResult`
Kind	Data
Namespace	`reader.selection`
Since	3.0
Purpose	Result of a selection scenario executed by a `MultichannelCardSelectionManager`.

Each successful selection case has been placed on its own logical channel. All the smart cards exposed by the result are active in parallel; the one placed on the basic channel, if any, is identified through `IsoSmartCard.isBasicChannel`.

Name	Type	Default	Since	Description
`cardType`	`CardType` (CNA-TRD-API)	—	3.0	Type of the detected card, as defined by the `CardType` enumeration of the Terminal Reader Definitions API (see CNA-TRD-API). `UNKNOWN` when the card type could not be identified. The value is intrinsically tied to the lifecycle of this result.
`smartCards`	`Map<Int, SmartCard>`	—	3.0	All `SmartCard` instances corresponding to successful selection cases, each active on its own logical channel, indexed by the `selectionCaseId` supplied at preparation. Possibly empty.

5.2.6. Sequential Card Selection Result

Name	`SequentialCardSelectionResult`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Kind	Data
Namespace	`reader.selection`
Since	3.0
Purpose	Result of a selection scenario executed by a `SequentialCardSelectionManager`.

Every selection case of the scenario has been tried. The result exposes the smart cards of all the successful selection cases, indexed by their `selectionCaseId`. Since the card is operated on a single channel, only the smart card of the last successful selection case, in execution order, remains active; the others are deactivated but still expose the data collected during their selection (see the `SmartCard` lifecycle). `activeSelectionCaseId` is `null` if and only if `smartCards` is empty.

Name	Type	Default	Since	Description
`cardType`	`CardType` (CNA-TRD-API)	—	3.0	Type of the detected card, as defined by the `CardType` enumeration of the Terminal Reader Definitions API (see CNA-TRD-API). `UNKNOWN` when the card type could not be identified. The value is intrinsically tied to the lifecycle of this result.
`smartCards`	`Map<Int, SmartCard>`	—	3.0	All `SmartCard` instances corresponding to successful selection cases, indexed by the `selectionCaseId` supplied at preparation. Possibly empty.
`activeSelectionCaseId`	`Int?`	—	3.0	Identifier of the last successful selection case in execution order, whose smart card is the only one remaining active, or `null` if no selection case succeeded. When non-`null`, it is a key of `smartCards`.

5.2.7. Single Card Selection Result

Name	`SingleCardSelectionResult`
Kind	Data
Namespace	`reader.selection`
Since	3.0
Purpose	Result of a selection scenario executed by a `SingleCardSelectionManager`.

The execution stops at the first successful selection case, so the result exposes at most one smart card, identified by the `selectionCaseId` supplied at preparation. `selectionCaseId` and `smartCard` are either both `null`, when no selection case succeeded, or both non-`null`.

Name	Type	Default	Since	Description
`cardType`	`CardType` (CNA-TRD-API)	—	3.0	Type of the detected card, as defined by the `CardType` enumeration of the Terminal Reader Definitions API (see CNA-TRD-API). `UNKNOWN` when the card type could not be identified. The value is intrinsically tied to the lifecycle of this result.
`selectionCaseId`	`Int?`	—	3.0	Identifier of the successful selection case, or `null` if no selection case succeeded.
`smartCard`	`SmartCard`?	—	3.0	The active `SmartCard` produced by the successful selection case, or `null` if no selection case succeeded.

5.3. API Interfaces

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

5.3.1. Card Reader

Name	`CardReader`
Kind	Interface
Namespace	`reader`
Since	1.0
Purpose	Represents a card reader capable of driving the underlying hardware to manage card detection.

Get Name

Signature	`getName() → String`
Since	1.0
Description	Returns the name of the reader.
Returns	A non-empty `String` identifying the reader. The value is stable for the lifetime of the reader instance.
Pre-conditions	None.
Errors	None.

Is Card Present

Signature	`isCardPresent() → Boolean`
Since	1.0
Description	Indicates whether a card is currently detected by the reader. What counts as **present** depends on the reader's communication mode (see `isContactless`): on a **contact** reader, a card is present when it is physically inserted in the slot; on a **contactless** reader, a card is present when it lies within range of the antenna (in the RF field).
Returns	`true` if a card is present — inserted for a contact reader, or within the field for a contactless reader — `false` otherwise.
Pre-conditions	None.
Errors	`ReaderCommunication` — if the communication with the reader has failed.

Is Contactless

Signature	`isContactless() → Boolean`
Since	1.0
Description	Indicates whether the card communication mode is contactless.
Returns	`true` if the communication mode is contactless, `false` otherwise.
Pre-conditions	None.
Errors	None.

5.3.2. Card Reader Provider

Name	`CardReaderProvider`
Kind	Interface
Namespace	`reader`
Since	3.0

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Purpose	Standardised discovery and access surface for the card readers available in the execution environment.

The `CardReaderProvider` is obtained from the `ReaderApiFactory`. It offers an implementation-agnostic view over the readers currently registered in the environment. Reader lifecycle (registration and un-registration) is handled by the runtime environment; the provider is a **read-only** view reflecting the readers active at the moment of each call.

Find Reader

Signature	`findReader(readerNameRegex: String) → CardReader?`
Since	3.0
Description	Returns the first reader whose name matches the supplied regular expression. This lookup is convenient when reader names embed variable elements (serial numbers, USB port index, etc.) that the application cannot hard-code.
Parameters	`readerNameRegex` — the regular expression matched against the reader names.
Returns	A `CardReader` whose name matches the expression, or `null` if none matches.
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — the supplied string is a valid regular expression.
Errors	None.

Get Reader

Signature	`getReader(readerName: String) → CardReader?`
Since	3.0
Description	Returns the reader whose name exactly matches the supplied string.
Parameters	`readerName` — the exact name of the reader to retrieve.
Returns	A `CardReader` whose name equals `readerName`, or `null` if no such reader is registered.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	None.

Get Reader Names

Signature	`getReaderNames() → Set<String>`
Since	3.0
Description	Returns the names of all readers currently registered in the execution environment.
Returns	A `Set` of reader names; empty if no reader is registered.
Pre-conditions	None.
Errors	None.

Get Readers

Signature	`getReaders() → Set<CardReader>`
Since	3.0
Description	Returns all readers currently registered in the execution environment.
Returns	A `Set` of `CardReader` references; empty if no reader is registered.
Pre-conditions	None.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Errors	None.

5.3.3. Card Selection Manager

Name	`CardSelectionManager`
Kind	Interface
Namespace	`reader.selection`
Since	1.0
Purpose	Common contract of the card selection managers: preparation of the card selection scenario and export/import of the scenario and of its processed result. An instance is obtained through one of the specialised managers created by the `ReaderApiFactory`.

A **card selection scenario** is composed of one or more **selection cases**, each identified by an application-chosen identifier and backed by the selection extension of a card extension. A selection case pairs a card selector with the selection extension of the same family: an `IsoCardSelector` with an `IsoCardSelectionExtension`, a `BasicCardSelector` with a `BasicCardSelectionExtension`. Each preparation operation accepts one pair only, so a selector and an extension that do not belong to the same family cannot be combined. A selection case targets a specific card and MAY define additional commands to be executed after the successful selection. Selection cases are executed in the order in which they were prepared, regardless of their identifiers. When a selection case fails, the manager tries the next selection case defined in the scenario, until no further selection case is available. All the selection cases of a scenario target the **same card** presented to the reader. What a scenario discriminates is, in practice, the **applications** hosted by that card—for example the Calypso applications of a multi-application card. The qualifiers **single**, **sequential** and **multichannel** in the names of the managers therefore describe how the scenario is executed and how many selections are retained, never a number of cards. The term **card** is kept throughout the API because a selection case also targets cards that host no application, such as storage cards, where the selection targets the card itself.

The selection mode is not a parameter of the execution: it is carried by the type of the manager, each specialised manager being obtained from its own factory operation and producing its own result type.

Manager	Behaviour	Execution	Result
`SingleCardSelectionManager`	Single-channel. Stops at the first successful selection case.	Explicit or scheduled	`SingleCardSelectionResult`
`SequentialCardSelectionManager`	Single-channel. Processes every selection case regardless of intermediate successes.	Explicit or scheduled	`SequentialCardSelectionResult`
`MultichannelCardSelectionManager`	ISO/IEC 7816-4 multi-channel cards. Places each successful selection case on its own logical channel, according to a `ChannelSelectionPolicy`.	Explicit	`MultichannelCardSelectionResult`

This interface carries the operations common to the three modes. The operations whose result depends on the mode—execution, scheduling, parsing of a scheduled response and import of a processed scenario—are defined by each specialised manager. See Card selection modes for an end-to-end view of the synchronous and asynchronous flows.

A scenario is considered **prepared** once at least one selection case has been appended via `prepareIsoSelectionCase` or `prepareBasicSelectionCase`, or imported via `importCardSelectionScenario`. A prepared scenario MAY be executed multiple times; each execution operates on the scenario as it stood at the time of the call.

© Calypso Networks Association 2026—Reproduction is prohibited without prior written agreement

Export Card Selection Scenario

Signature	`exportCardSelectionScenario() → String`
Since	1.1
Description	Exports the content of the current prepared selection scenario, including the identifiers of its selection cases, as a `String`. The result MAY be imported into any card selection manager, whatever its type, via `importCardSelectionScenario`.
Returns	A non-empty `String`.
Pre-conditions	None.
Errors	None.
See also	`importCardSelectionScenario`

Export Processed Card Selection Scenario

Signature	`exportProcessedCardSelectionScenario() → String`
Since	1.3
Description	Exports the content of the previously processed selection scenario as a `String`. The result MAY be imported through the `importProcessedCardSelectionScenario` operation of a manager of the same type. **Caution:** if the local environment does not have all the card extensions involved in the scenario, the selection result produced locally will not contain any active selection. In that case, the processed scenario MUST be exported so that it can be re-imported and interpreted on a manager which has the relevant card extensions.
Returns	A non-empty `String`.
Pre-conditions	**State**—the scenario has been processed successfully, via `processCardSelectionScenario` or `parseScheduledCardSelectionsResponse`.
Errors	None.

See also	`SingleCardSelectionManager.importProcessedCardSelectionScenario`
	`SequentialCardSelectionManager.importProcessedCardSelectionScenario`
	`MultichannelCardSelectionManager.importProcessedCardSelectionScenario`

Import Card Selection Scenario

Signature	`importCardSelectionScenario(cardSelectionScenario: String) → Self`
Since	1.1
Description	Replaces the current scenario with a previously exported scenario, including the identifiers of its selection cases. The selection cases prepared or imported before the call are discarded.
Parameters	`cardSelectionScenario`—the `String` containing the exported card selection scenario.
Returns	The current instance (`Self`).
Pre-conditions	**Argument**—every parameter is non-`null`. **Argument**—the string has been produced by `exportCardSelectionScenario` and is well-formed.
Errors	None.
See also	`exportCardSelectionScenario`

Prepare ISO Selection Case

© Calypso Networks Association 2026—Reproduction is prohibited without prior written agreement

Signature	`prepareIsoSelectionCase(`
	`  selectionCaseId: Int,`
	`  cardSelector: IsoCardSelector,`
	`  cardSelectionExtension: IsoCardSelectionExtension`
	`) → Self`

Since	3.0
Description	Appends a selection case targeting an ISO/IEC 7816-4 card, identified by `selectionCaseId`, to the scenario. This operation is carried by every selection manager. Selection cases are executed in the order in which they were prepared, regardless of their identifiers, and `selectionCaseId` designates the corresponding `SmartCard` in the selection result.
Parameters	`selectionCaseId` — the identifier of the selection case, chosen by the application. `cardSelector` (`IsoCardSelector`) — the card selector containing the filters to be used to select the card. `cardSelectionExtension` (`IsoCardSelectionExtension`) — the card selection extension to be used to parse the card selection response.
Returns	The current instance (`Self`).
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — `selectionCaseId` is not already used by a selection case of the scenario.
Errors	None.
See also	`SingleCardSelectionManager.prepareBasicSelectionCase` `SequentialCardSelectionManager.prepareBasicSelectionCase`

5.3.4. Card Selector

Name	`CardSelector`
Kind	Sealed interface
Namespace	`reader.selection`
Since	2.0
Purpose	Common supertype of the card selectors. Carries no member; it exists to let an operation accept any selector.

Its permitted implementations are `BasicCardSelector` and `IsoCardSelector`, which carry the filters restricting the selection process.

5.3.5. Multichannel Card Selection Manager

Name	`MultichannelCardSelectionManager`
Kind	Interface
Namespace	`reader.selection`
Extends	`CardSelectionManager`
Since	3.0
Purpose	Card selection manager executing every selection case of the scenario, keeping each matching application of an ISO/IEC 7816-4 multi-channel card active simultaneously, each on its own logical channel. Out of scope for storage cards. An instance is obtained via `ReaderApiFactory.createMultichannelCardSelectionManager`.

Being restricted to ISO/IEC 7816-4 cards, this manager exposes only `prepareIsoSelectionCase`: a selection case prepared without ISO/IEC 7816-4 filters has no meaning here, and the preparation operation that would accept one is not part of its contract.

Each successful selection case is placed on its own logical channel of the ISO/IEC 7816-4 card, the use of the

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

basic channel being governed by the `ChannelSelectionPolicy` passed at execution time. All the smart cards of the resulting `MultichannelCardSelectionResult` remain active in parallel. Only the explicit execution is available: scheduled selection is not supported in multi-channel mode.

Import Processed Card Selection Scenario

Signature	`importProcessedCardSelectionScenario(`
	`  processedCardSelectionScenario: String`
	`) → MultichannelCardSelectionResult`

Since	3.0
Description	Imports a previously exported **processed** selection scenario and returns the corresponding result.
Parameters	`processedCardSelectionScenario` — the `String` containing the exported processed card selection scenario.
Returns	A `MultichannelCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — the string has been produced by `exportProcessedCardSelectionScenario` of a `MultichannelCardSelectionManager`, is well-formed and contains no more selection cases than the current scenario. **State** — the manager has been configured with the same selection scenario as the manager that produced the export. **Capability** — the local environment possesses every card extension involved in the scenario.
Errors	`InvalidCardResponse` — if the data returned by the card could not be interpreted.
See also	`exportProcessedCardSelectionScenario`

Process Card Selection Scenario

Signature	`processCardSelectionScenario(`
	`  reader: CardReader,`
	`  channelSelectionPolicy: ChannelSelectionPolicy`
	`) → MultichannelCardSelectionResult`

Since	3.0
Description	Explicitly executes the previously prepared selection scenario in **multi-channel** mode against the provided reader, placing each successful selection case on its own logical channel according to the requested channel policy, and returns the result. If the presented card is not a multi-channel ISO/IEC 7816-4 card, an `InvalidCardResponse` is raised at scenario execution time.
Parameters	`reader` (`CardReader`) — the reader through which the card is reached. `channelSelectionPolicy` (`ChannelSelectionPolicy`) — the policy governing the channels on which selections are placed.
Returns	A `MultichannelCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	`ReaderCommunication` — if communication with the reader has failed. `CardCommunication` — if communication with the card has failed. `InvalidCardResponse` — if the card does not support multi-channel or returned invalid data.

5.3.6. Observable Card Reader

Name	`ObservableCardReader`
Kind	Interface
Namespace	`reader`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Extends	`CardReader`
Since	1.0
Purpose	A `CardReader` capable of observing the insertion and removal of cards.

The observation contract is co-located with the start of detection: a single call to `startCardDetection` provides both the `CardDetectionSettings` that govern the polling behaviour and the `CardReaderEventHandler` that receives the resulting events.

The reader's complete insertion/processing/removal lifecycle — including when each observation event is produced — is described in Reader observation lifecycle.

Clear Scheduled Card Selection Scenario

Signature	`clearScheduledCardSelectionScenario() → Unit`
Since	3.0
Description	Removes the card selection scenario scheduled on this reader, if any. From the next card insertion onwards, no scenario is executed and the `scheduledCardSelectionsResponse` of the resulting `CardReaderEvent` is `null`. The processing of a card already inserted is not affected. This operation is idempotent: calling it when no scenario is scheduled has no effect.
Pre-conditions	None.
Errors	None.
See also	`SingleCardSelectionManager.scheduleCardSelectionScenario` `SequentialCardSelectionManager.scheduleCardSelectionScenario`

End Card Processing

Signature	`endCardProcessing() → Unit`
Since	3.0
Description	Notifies the reader that the **business processing** of the current card has been completed. Upon receiving this notification, the reader: • performs the **DESELECT** sequence on the card (when applicable to the underlying technology) so that the card is brought to a clean idle state; • transitions to the **waiting-for-card-removal** phase, during which the observation cycle waits for the card to leave the reader's field before becoming able to detect a new card. In addition, the reader releases the references to the `SmartCard` instances held following the last selection (see the `SmartCard` lifecycle). This operation is idempotent: calling it twice on the same card processing cycle has no effect after the first call. It is RECOMMENDED to call `endCardProcessing` systematically (e.g. inside a `finally` block) at the end of a card processing whatever the outcome.
Pre-conditions	None.
Errors	None.

Start Card Detection

Signature	`startCardDetection(`
	`  settings: CardDetectionSettings,`
	`  eventHandler: CardReaderEventHandler`
	`) → Unit`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Since	3.0
Description	Activates card detection. Once activated, the application is notified of card events through the registered `CardReaderEventHandler`. The `CardDetectionSettings` configure the detection mode, the targeted RF technologies and, when applicable, the ECP frame to emit at polling startup. Parameters carried by `CardDetectionSettings` that are not supported by the underlying reader (for example an unsupported `RfTechnology`, or an ECP frame on a reader that does not support ECP) are silently ignored. A `WARN`-level message is typically logged in such cases. No error is raised.
Parameters	`settings` (`CardDetectionSettings`) — the detection configuration. `eventHandler` (`CardReaderEventHandler`) — the application-side handler that receives reader events and errors.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	None.

Stop Card Detection

Signature	`stopCardDetection() → Unit`
Since	1.0
Description	Stops card detection. After this operation has returned, the registered event handler does not receive card events until detection is restarted.
Pre-conditions	None.
Errors	None.

5.3.7. Reader API Factory

Name	`ReaderApiFactory`
Kind	Interface
Namespace	`reader`
Since	2.0
Purpose	Factory used by the application to obtain instances of the public types provided by the API.

The `ReaderApiFactory` is the single entry point through which the application instantiates the public types of the API. It is provided as a single instance. Its `create` operations each return a fresh, fully initialised object, whereas `getCardReaderProvider` gives access to the `CardReaderProvider` of the execution environment.

Create Multichannel Card Selection Manager

Signature	`createMultichannelCardSelectionManager() → MultichannelCardSelectionManager`
Since	3.0
Description	Creates a `MultichannelCardSelectionManager`, the service used to prepare and execute a card selection scenario on a multi-channel ISO/IEC 7816-4 card.
Returns	A `MultichannelCardSelectionManager`.
Pre-conditions	None.
Errors	None.

Create Sequential Card Selection Manager

Signature	`createSequentialCardSelectionManager() → SequentialCardSelectionManager`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Since	3.0
Description	Creates a `SequentialCardSelectionManager`, the service used to prepare and execute a card selection scenario processing every selection case.
Returns	A `SequentialCardSelectionManager`.
Pre-conditions	None.
Errors	None.

Create Single Card Selection Manager

Signature	`createSingleCardSelectionManager() → SingleCardSelectionManager`
Since	3.0
Description	Creates a `SingleCardSelectionManager`, the service used to prepare and execute a card selection scenario stopping at the first successful selection case.
Returns	A `SingleCardSelectionManager`.
Pre-conditions	None.
Errors	None.

Get Card Reader Provider

Signature	`getCardReaderProvider() → CardReaderProvider`
Since	3.0
Description	Returns the `CardReaderProvider` of the execution environment, giving standardised access to the readers available in it. Successive calls return the same instance.
Returns	A `CardReaderProvider`.
Pre-conditions	None.
Errors	None.

5.3.8. Scheduled Card Selections Response

Name	`ScheduledCardSelectionsResponse`
Kind	Marker interface
Namespace	`reader.selection`
Since	1.0
Purpose	Carrier for the response of the execution of a scheduled selection scenario, provided by a `CardReaderEvent`.

This interface declares no operation. It conveys the card responses to one or more of the scenario's selection cases (selection step itself plus any subsequent commands). Its content MUST be interpreted through the `parseScheduledCardSelectionsResponse` operation of the manager that scheduled the scenario (`SingleCardSelectionManager` or `SequentialCardSelectionManager`).

5.3.9. Sequential Card Selection Manager

Name	`SequentialCardSelectionManager`
Kind	Interface
Namespace	`reader.selection`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Extends	`CardSelectionManager`
Since	3.0
Purpose	Card selection manager executing every selection case of the scenario, selecting in turn each matching application of the card; only the last selected application remains active. Intended for cards hosting several applications, and therefore not applicable to storage cards. An instance is obtained via `ReaderApiFactory.createSequentialCardSelectionManager`.

Every selection case is tried, in the order in which they were prepared, whatever the outcome of the previous ones. Since the card is operated on a single channel, each successful selection deactivates the smart card produced by the previous one: in the resulting `SequentialCardSelectionResult`, only the smart card of the last successful selection case remains active. To keep several selections active in parallel on a multi-channel ISO/IEC 7816-4 card, the `MultichannelCardSelectionManager` MUST be used instead. The scenario can be executed explicitly, on a card already present, or scheduled on an `ObservableCardReader`.

Import Processed Card Selection Scenario

Signature	`importProcessedCardSelectionScenario(`
	`  processedCardSelectionScenario: String`
	`) → SequentialCardSelectionResult`

Since	3.0
Description	Imports a previously exported **processed** selection scenario and returns the corresponding result.
Parameters	`processedCardSelectionScenario` — the `String` containing the exported processed card selection scenario.
Returns	A `SequentialCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — the string has been produced by `exportProcessedCardSelectionScenario` of a `SequentialCardSelectionManager`, is well-formed and contains no more selection cases than the current scenario. **State** — the manager has been configured with the same selection scenario as the manager that produced the export. **Capability** — the local environment possesses every card extension involved in the scenario.
Errors	`InvalidCardResponse` — if the data returned by the card could not be interpreted.
See also	`exportProcessedCardSelectionScenario`

Parse Scheduled Card Selections Response

Signature	`parseScheduledCardSelectionsResponse(`
	`  scheduledCardSelectionsResponse: ScheduledCardSelectionsResponse`
	`) → SequentialCardSelectionResult`

Since	3.0
Description	Analyses the responses provided by a `CardReaderEvent` following the insertion of a card and the execution of the selection scenario scheduled with `scheduleCardSelectionScenario`.
Parameters	`scheduledCardSelectionsResponse` (`ScheduledCardSelectionsResponse`) — the card selection scenario execution response.
Returns	A `SequentialCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	`InvalidCardResponse` — if the data returned by the card could not be interpreted.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Prepare Basic Selection Case

Signature	`prepareBasicSelectionCase(`
	`  selectionCaseId: Int,`
	`  cardSelector: BasicCardSelector,`
	`  cardSelectionExtension: BasicCardSelectionExtension`
	`) → Self`

Since	3.0
Description	Appends a selection case targeting a card selected without ISO/IEC 7816-4 filters, identified by `selectionCaseId`, to the scenario. This operation is carried by the single-channel managers only, a card selected without ISO/IEC 7816-4 filters having no logical channel to be placed on. Selection cases are executed in the order in which they were prepared, regardless of their identifiers, and `selectionCaseId` designates the corresponding `SmartCard` in the selection result.
Parameters	`selectionCaseId` — the identifier of the selection case, chosen by the application. `cardSelector` (`BasicCardSelector`) — the card selector containing the filters to be used to select the card. `cardSelectionExtension` (`BasicCardSelectionExtension`) — the card selection extension to be used to parse the card selection response.
Returns	The current instance (`Self`).
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — `selectionCaseId` is not already used by a selection case of the scenario.
Errors	None.
See also	`CardSelectionManager.prepareIsoSelectionCase` `SingleCardSelectionManager.prepareBasicSelectionCase`

Process Card Selection Scenario

Signature	`processCardSelectionScenario(`
	`  reader: CardReader`
	`) → SequentialCardSelectionResult`

Since	3.0
Description	Explicitly executes the previously prepared selection scenario against the provided reader, processing every selection case regardless of intermediate successes, and returns the result.
Parameters	`reader` (`CardReader`) — the reader through which the card is reached.
Returns	A `SequentialCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	`ReaderCommunication` — if communication with the reader has failed. `CardCommunication` — if communication with the card has failed. `InvalidCardResponse` — if the card returned invalid data during the selection process, or if the status word check is enabled in the card request and the card returned an unexpected code.

Schedule Card Selection Scenario

Signature	`scheduleCardSelectionScenario(`
	`  observableCardReader: ObservableCardReader,`
	`  cardPresenceNotificationPolicy: CardPresenceNotificationPolicy`
	`) → Unit`

Since	3.0
Description	Schedules the execution of the prepared selection scenario as soon as a card is presented to the supplied observable reader. Events are pushed to the registered event handler according to the requested notification policy. The result of the execution MUST be parsed via `parseScheduledCardSelectionsResponse`.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Parameters	`observableCardReader` (`ObservableCardReader`) — the reader through which the card is reached. `cardPresenceNotificationPolicy` (`CardPresenceNotificationPolicy`) — the desired card-presence notification policy.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	None.

5.3.10. Single Card Selection Manager

Name	`SingleCardSelectionManager`
Kind	Interface
Namespace	`reader.selection`
Extends	`CardSelectionManager`
Since	3.0
Purpose	Card selection manager executing the scenario up to the first matching selection case: the first matching card application — for example the Calypso application of a Calypso card — or the card itself when it hosts no application, as a storage card. An instance is obtained via `ReaderApiFactory.createSingleCardSelectionManager`.

The selection cases are tried in the order in which they were prepared; the execution stops as soon as one of them succeeds. The resulting `SingleCardSelectionResult` therefore exposes at most one smart card. The scenario can be executed explicitly, on a card already present, or scheduled on an `ObservableCardReader`.

Import Processed Card Selection Scenario

Signature	`importProcessedCardSelectionScenario(`
	`  processedCardSelectionScenario: String`
	`) → SingleCardSelectionResult`

Since	3.0
Description	Imports a previously exported **processed** selection scenario and returns the corresponding result.
Parameters	`processedCardSelectionScenario` — the `String` containing the exported processed card selection scenario.
Returns	A `SingleCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — the string has been produced by `exportProcessedCardSelectionScenario` of a `SingleCardSelectionManager`, is well-formed and contains no more selection cases than the current scenario. **State** — the manager has been configured with the same selection scenario as the manager that produced the export. **Capability** — the local environment possesses every card extension involved in the scenario.
Errors	`InvalidCardResponse` — if the data returned by the card could not be interpreted.
See also	`exportProcessedCardSelectionScenario`

Parse Scheduled Card Selections Response

Signature	`parseScheduledCardSelectionsResponse(`
	`  scheduledCardSelectionsResponse: ScheduledCardSelectionsResponse`
	`) → SingleCardSelectionResult`

Since	3.0
Description	Analyses the responses provided by a `CardReaderEvent` following the insertion of a card and the execution of the selection scenario scheduled with `scheduleCardSelectionScenario`.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Parameters	`scheduledCardSelectionsResponse` (`ScheduledCardSelectionsResponse`) — the card selection scenario execution response.
Returns	A `SingleCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	`InvalidCardResponse` — if the data returned by the card could not be interpreted.

Prepare Basic Selection Case

Signature	`prepareBasicSelectionCase(`
	`  selectionCaseId: Int,`
	`  cardSelector: BasicCardSelector,`
	`  cardSelectionExtension: BasicCardSelectionExtension`
	`) → Self`

Since	3.0
Description	Appends a selection case targeting a card selected without ISO/IEC 7816-4 filters, identified by `selectionCaseId`, to the scenario. This operation is carried by the single-channel managers only, a card selected without ISO/IEC 7816-4 filters having no logical channel to be placed on. Selection cases are executed in the order in which they were prepared, regardless of their identifiers, and `selectionCaseId` designates the corresponding `SmartCard` in the selection result.
Parameters	`selectionCaseId` — the identifier of the selection case, chosen by the application. `cardSelector` (`BasicCardSelector`) — the card selector containing the filters to be used to select the card. `cardSelectionExtension` (`BasicCardSelectionExtension`) — the card selection extension to be used to parse the card selection response.
Returns	The current instance (`Self`).
Pre-conditions	**Argument** — every parameter is non-`null`. **Argument** — `selectionCaseId` is not already used by a selection case of the scenario.
Errors	None.
See also	`CardSelectionManager.prepareIsoSelectionCase` `SequentialCardSelectionManager.prepareBasicSelectionCase`

Process Card Selection Scenario

Signature	`processCardSelectionScenario(`
	`  reader: CardReader`
	`) → SingleCardSelectionResult`

Since	3.0
Description	Explicitly executes the previously prepared selection scenario against the provided reader, stopping at the first successful selection case, and returns the result.
Parameters	`reader` (`CardReader`) — the reader through which the card is reached.
Returns	A `SingleCardSelectionResult`.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	`ReaderCommunication` — if communication with the reader has failed. `CardCommunication` — if communication with the card has failed. `InvalidCardResponse` — if the card returned invalid data during the selection process, or if the status word check is enabled in the card request and the card returned an unexpected code.

Schedule Card Selection Scenario

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Signature	`scheduleCardSelectionScenario( observableCardReader: ObservableCardReader, cardPresenceNotificationPolicy: CardPresenceNotificationPolicy ) → Unit`
Since	3.0
Description	Schedules the execution of the prepared selection scenario as soon as a card is presented to the supplied observable reader. Events are pushed to the registered event handler according to the requested notification policy. The result of the execution MUST be parsed via `parseScheduledCardSelectionsResponse`.
Parameters	`observableCardReader` (`ObservableCardReader`) — the reader through which the card is reached. `cardPresenceNotificationPolicy` (`CardPresenceNotificationPolicy`) — the desired card-presence notification policy.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	None.

5.4. SPI Interfaces

5.4.1. Basic Card Selection Extension

Name	`BasicCardSelectionExtension`
Kind	Marker interface (SPI)
Namespace	`reader.selection.spi`
Since	3.0
Purpose	Selection extension provided by a card extension whose products are selected without ISO/IEC 7816-4 filters, such as storage cards or security modules selected on their power-on data. It declares no operation at the API level; the contract between the selection manager and the extension is defined by the card extension specification consuming this SPI.

It is paired with a `BasicCardSelector` by the `prepareBasicSelectionCase` operation of the single-channel selection managers.

5.4.2. Card Reader Event Handler

Name	`CardReaderEventHandler`
Kind	Interface (SPI)
Namespace	`reader.spi`
Since	3.0
Purpose	Interface that the application MUST implement to receive reader events and observation errors from an `ObservableCardReader`.

This SPI unifies the reception of nominal events (`onReaderEvent`) and of fatal observation errors (`onReaderError`) into a single contract, which the application implements once and registers at the call to `startCardDetection`.

On Reader Error

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Signature	`onReaderError( context: String, readerName: String, error: Any ) → Unit`
Since	3.0
Description	Called when a fatal error occurs on the observed reader. After the operation returns, the observation process is considered stopped.
Parameters	`context` — the context describing the operation that failed. `readerName` — the name of the reader on which the error occurred. `error` — the original error that triggered the notification.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	None.

On Reader Event

Signature	`onReaderEvent(cardReaderEvent: CardReaderEvent) → Unit`
Since	3.0
Description	Called when a reader event occurs. Dispatch is **sequential** and **synchronous** unless a different policy is explicitly documented.
Parameters	`cardReaderEvent` (`CardReaderEvent`) — the event payload.
Pre-conditions	**Argument** — every parameter is non-`null`.
Errors	None. Any error raised by the handler is routed to `onReaderError`.

5.4.3. Card Transaction Manager

Name	`CardTransactionManager`
Kind	Interface (SPI)
Namespace	`reader.transaction.spi`
Since	2.1
Purpose	Root contract common to every card transaction manager exposed by a card extension. Defines the single operation `processCommands`.

To exchange data with a card, the application first prepares the commands to transmit (via the operations of the consuming card extension) and then processes them. The preparation step allows commands to be grouped to minimise network exchanges, which is especially valuable in distributed architectures. The `SmartCard` registered with the manager is updated after each data exchange with the card.

Process Commands

Signature	`processCommands() → Unit`
Since	3.0
Description	Processes all previously prepared commands. All APDUs corresponding to the prepared commands are sent to the card, their responses retrieved and used to update the `SmartCard` associated with the transaction. For write commands, the `SmartCard` is updated only when the command is successful. The process is interrupted at the first failed command. The underlying logical channel is left open after processing.
Pre-conditions	None.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Errors	`ReaderCommunication` — if a communication error with the reader occurs. `CardCommunication` — if a communication error with the card occurs. `InvalidCardResponse` — if a command returns an unexpected status, or if the manager was obtained through `asMultichannelCardTransactionManager` and the card does not support multi-channel.

5.4.4. ISO Card Selection Extension

Name	`IsoCardSelectionExtension`
Kind	Marker interface (SPI)
Namespace	`reader.selection.spi`
Since	3.0
Purpose	Selection extension provided by a card extension whose products are selected through ISO/IEC 7816-4 filters, typically by the name of a dedicated file. It declares no operation at the API level; the contract between the selection manager and the extension is defined by the card extension specification consuming this SPI.

It is paired with an `IsoCardSelector` by the `prepareIsoSelectionCase` operation, which every selection manager exposes.

5.4.5. ISO Card Transaction Manager

Name	`IsoCardTransactionManager`
Kind	Interface (SPI)
Namespace	`reader.transaction.spi`
Extends	`CardTransactionManager`
Since	3.0
Purpose	Intermediate contract for ISO/IEC 7816-4 cards. Exposes the on-demand cast to multi-channel.

As Multichannel Card Transaction Manager

Signature	`asMultichannelCardTransactionManager() → MultichannelCardTransactionManager`
Since	3.0
Description	Returns a view of this manager as a `MultichannelCardTransactionManager`, granting access to the multi-channel operations. The conversion itself never fails. If the underlying ISO/IEC 7816-4 card does not support multi-channel operation, an `InvalidCardResponse` is raised only when the commands are processed through the returned manager.
Returns	A `MultichannelCardTransactionManager`.
Pre-conditions	None.
Errors	None.

5.4.6. ISO Smart Card

Name	`IsoSmartCard`
Kind	Interface (SPI)
Namespace	`reader.selection.spi`
Extends	`SmartCard`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Since	2.0
Purpose	ISO/IEC 7816-4 smart card whose communication has been established after a successful selection.

In addition to the inherited power-on data, an `IsoSmartCard` exposes the response to the **Select Application** command. Both the power-on data and the **Select Application** response are optional, but at least one of them is always present.

Get Select Application Response

Signature	`getSelectApplicationResponse() → ByteArray?`
Since	1.0
Description	Returns the data received from the card in response to the **Select Application** command, including the status word.
Returns	The non-empty response bytes, or `null` if no **Select Application** command has been performed.
Pre-conditions	None.
Errors	None.

Is Basic Channel

Signature	`isBasicChannel() → Boolean`
Since	3.0
Description	Indicates whether this smart card is attached to the basic channel (channel `0`) of the underlying ISO/IEC 7816-4 card, or to an additional logical channel.
Returns	`true` if attached to the basic channel, `false` if attached to an additional logical channel.
Pre-conditions	None.
Errors	None.

5.4.7. Multichannel Card Transaction Manager

Name	`MultichannelCardTransactionManager`
Kind	Interface (SPI)
Namespace	`reader.transaction.spi`
Extends	`CardTransactionManager`
Since	3.0
Purpose	Multi-channel contract. Exposes the operations to close a logical channel explicitly.

This contract MAY be obtained either:

- through `IsoCardTransactionManager.asMultichannelCardTransactionManager`, for ISO/IEC 7816-4 cards on which multi-channel is an optional capability;
- directly as the declared supertype of the transaction manager of a card extension targeting intrinsically multi-channel cards.

Close Channel

Signature	`closeChannel() → Unit`
Since	3.0

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Description	Closes the underlying logical channel without processing any pending command. This operation is idempotent: calling it on an already-closed channel has no effect.
Pre-conditions	None.
Errors	`ReaderCommunication` — if a communication error with the reader occurs. `CardCommunication` — if a communication error with the card occurs.

Process Commands And Close Channel

Signature	`processCommandsAndCloseChannel() → Unit`
Since	3.0
Description	Processes all previously prepared commands and, upon success, closes the underlying logical channel. If any command fails, the channel is left open, as with `processCommands`.
Pre-conditions	None.
Errors	`ReaderCommunication` — if a communication error with the reader occurs. `CardCommunication` — if a communication error with the card occurs. `InvalidCardResponse` — if a command returns an unexpected status, or if the card does not support multi-channel.

5.4.8. Smart Card

Name	`SmartCard`
Kind	Interface (SPI)
Namespace	`reader.selection.spi`
Since	1.0
Purpose	Basic smart card whose communication has been established after a successful selection. The instance is ready to receive APDUs.

Card extensions implement (and may extend) this interface to expose the data they collected during the selection.

Get Power On Data

Signature	`getPowerOnData() → String?`
Since	1.0
Description	Returns the card's power-on data, as collected by the reader at the moment the card was inserted. • For a contact reader, this is the Answer To Reset (ATR) defined by ISO/IEC 7816. • For a contactless reader, the reader decides what this data is. Some contactless readers provide a virtual ATR (partially standardised by the PC/SC standard), while other devices may have their own definition, including for example elements from the anti-collision stage of ISO/IEC 14443 (ATQA, ATQB, ATS, SAK, etc.) or any proprietary definitions. Because this data varies from one reader to another, it is exposed here as a `String` that MAY be either a hexadecimal string or any other relevant representation.
Returns	The non-empty power-on data, or `null` if no power-on data is available.
Pre-conditions	None.
Errors	None.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Is Active

Signature	`isActive() → Boolean`
Since	3.0
Description	Returns whether this smart card is currently active on its logical channel. A smart card is considered **active** between its creation (as the result of a successful selection case) and the occurrence of any of the following events, at which point the reader **deactivates** it (`isActive()` returns `false`) and releases its reference: · a **new selection in single-channel mode** (the previous smart cards become obsolete); · an **explicit channel closure request** through `MultichannelCardTransactionManager.closeChannel` or `processCommandsAndCloseChannel`; · a call to `ObservableCardReader.endCardProcessing`; · an error indicating that the card is no longer contactable (`CardCommunication` or `ReaderCommunication`). Until then, the reader holds the references to the `SmartCard` instances produced by the last successful selection. Once a smart card has been deactivated, any further attempt to use it is detected prior to any actual exchange with the card.
Returns	`true` if the smart card is active, `false` otherwise.
Pre-conditions	None.
Errors	None.

5.5. Enumerations

5.5.1. Card Presence Notification Policy

Name	`CardPresenceNotificationPolicy`
Kind	Enumeration
Namespace	`reader.selection`
Since	3.0
Purpose	Options applied when a card is detected, used to decide which cards trigger event-handler notifications.

In the reader observation lifecycle, this policy determines whether a detected card is treated as processable — see Reader observation lifecycle.

Value	Since	Description
`ALWAYS`	3.0	All cards presented to the reader are notified, regardless of the result of the selection.
`MATCHED_ONLY`	3.0	Only cards that have been successfully selected are notified. The others are ignored.

5.5.2. Card Reader Event Type

Name	`CardReaderEventType`
Kind	Enumeration
Namespace	`reader`

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Since	1.0
Purpose	Possible card reader events.

Value	Since	Description
`CARD_INSERTED`	1.0	A card has been inserted, with or without a specific selection.
`CARD_MATCHED`	1.0	A card has been inserted that matches the selection criteria.
`CARD_REMOVED`	1.0	The card has been removed from the reader.
`READER_UNREGISTERED`	3.0	The reader has been unregistered and is no longer usable.

5.5.3. Channel Selection Policy

Name	`ChannelSelectionPolicy`
Kind	Enumeration
Namespace	`reader.selection`
Since	3.0
Purpose	Policy governing the use of the basic channel in a multi-channel selection scenario.

Value	Since	Description
`ALLOW_BASIC_CHANNEL`	3.0	The basic channel (channel `0`) MAY host selection cases in addition to the additional logical channels.
`LOGICAL_CHANNEL_ONLY`	3.0	Selection cases are placed only on additional logical channels; the basic channel is not used.

5.5.4. Detection Mode

Name	`DetectionMode`
Kind	Enumeration
Namespace	`reader`
Since	3.0
Purpose	Defines the behaviour to apply after a card processing cycle has terminated.

In the reader observation lifecycle, this setting is the guard that decides whether detection resumes after a card-processing cycle—see Reader observation lifecycle.

Value	Since	Description
`REPEATING`	3.0	The reader continues waiting for the next card insertion.
`SINGLE_SHOT`	3.0	The reader stops detection after the current card-processing cycle; a new call to `startCardDetection` is required to detect further cards.

5.5.5. File Control Information

Name	`FileControlInformation`
Kind	Enumeration
Namespace	`reader.selection`
Since	2.0

© Calypso Networks Association 2026—Reproduction is prohibited without prior written agreement

Purpose	Types of templates returned in response to the **Select Application** command, according to ISO/IEC 7816-4.

Value	Since	Description
`FCI`	2.0	File Control Information.
`FCP`	2.0	File Control Parameters.
`FMD`	2.0	File Management Data.
`NO_RESPONSE`	2.0	No response expected.

5.5.6. File Occurrence

Name	`FileOccurrence`
Kind	Enumeration
Namespace	`reader.selection`
Since	2.0
Purpose	Navigation options through the applications contained on the card according to ISO/IEC 7816-4.

Value	Since	Description
`FIRST`	2.0	First occurrence.
`LAST`	2.0	Last occurrence.
`NEXT`	2.0	Next occurrence.
`PREVIOUS`	2.0	Previous occurrence.

5.6. Errors

Every error defined below carries two properties: `message` (`String`), which describes the condition, and `cause` (`Any?`), the underlying error that triggered it, `null` when there is none. They are not restated for each error.

5.6.1. Card Communication

Name	`CardCommunication`
Kind	Error
Namespace	`reader`
Since	1.0
Purpose	Indicates that the communication with the card has failed, typically because the card was removed from the reader before the exchange could complete.

5.6.2. Invalid Card Response

Name	`InvalidCardResponse`
Kind	Error
Namespace	`reader`
Since	2.1

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Purpose	Indicates that a response received from the card was invalid — typically when the returned status word does not match any of those expected — either during a selection process or during the processing of a transaction. This error is also raised when an ISO/IEC 7816-4 card does not support a requested multi-channel operation.

5.6.3. Reader Communication

Name	`ReaderCommunication`
Kind	Error
Namespace	`reader`
Since	1.0
Purpose	Indicates that the communication with the reader has failed. The most likely cause is a physical disconnection of the reader, but other technical problems MAY also be at the origin of the failure.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

Annex A: Conformance to external requirements



This annex is *informative*. Conformance defines what conforming **to this specification** means; this annex states, requirement by requirement, how this specification stands with respect to an **external** requirements profile, and records the reasons when a requirement is met through another mechanism, is deliberately not exposed, or is left to the implementation layer.

Each requirement reviewed below is given one of the following statuses:

Status	Meaning
Satisfied as stated	The specification provides what the requirement asks for, in the form the requirement describes.
Satisfied by an equivalent mechanism	The intent of the requirement is met, through a mechanism that differs from the one it describes.
Deliberately not exposed	The capability is not offered to the upper layer, as a design decision stated in the corresponding note.
Delegated to the implementation layer	The capability belongs to the reader driver or to its configuration, outside the surface of this API.

A.1. Applicability contexts

A requirement of the Reader Layer requirements may carry one or more **applicability contexts**. A context does not qualify the requirement but the reader layer itself: it states the kind of layer the requirement applies to, and a requirement that carries several contexts applies only to a layer satisfying all of them. Before any mapping, this subsection states under which conditions this specification constitutes such a layer.

Context	Satisfied by this specification	Condition
Detection	Partially	Only through an `ObservableCardReader`, which notifies card insertion and removal and exposes `startCardDetection`, `stopCardDetection` and `endCardProcessing`. A `CardReader` that is not observable has no detection property, so the requirements of this context do not apply to it.
Presence	Always	Every `CardReader` exposes `isCardPresent`, so a reader always offers a presence check.
Contactless	Declared by the reader	Each `CardReader` declares its interface through `isContactless`; the requirements of this context apply to the readers that declare a contactless interface.

The entries below give, for each requirement reviewed, the contexts it carries and the way this specification answers it.

A.2. Detection

The **Detection** applicability group of the Reader Layer requirements covers the notification of card insertion, the presence check and the removal of the card from the reader. The lifecycle described in Reader observation lifecycle is the part of this specification that answers it: the upper layer is notified of an insertion by a `CardReaderEvent`, it may ask the reader for the presence of a card at any time through `isCardPresent`, it declares the end of the business processing through `endCardProcessing`, and the departure of the card produces a `CARD_REMOVED` event before detection resumes according to the active `DetectionMode`.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

All seven requirements of the group carry the **Detection** context, and therefore apply only to an observable reader, as stated in Section A.1. Four of them are met as stated or fall to the implementation layer by their own terms; the three that concern the removal procedure call for the design decisions set out below.

Requirement	Applicability	Status	Mapping and rationale
RL-DET-INSNOTIF.1	Detection	Satisfied as stated	An `ObservableCardReader` notifies its `CardReaderEventHandler` of a `CARD_INSERTED` or `CARD_MATCHED` event when a card enters the reader.
RL-DET-PCRQ.1	Detection Presence	Satisfied as stated	`isCardPresent` returns the presence status of a card at any time.
RL-DET-PCAPDU.1	Detection Presence	Delegated to the implementation layer	This specification defines no command for the presence check: how the status is obtained, and the prohibition of application commands for that purpose, belong to the reader driver.
RL-DET-PCIBLOCK.1	Detection Presence Contactless	Delegated to the implementation layer	Likewise, the low-level frame used for the presence check in contactless mode is a property of the reader driver, outside the surface of this API.
RL-DET-REMCTRL.1	Detection	Deliberately not exposed	Removal procedures are capabilities of the reader and of its driver, not interchangeable options of the API; the implementation layer selects the best method the reader supports (see Section A.2.2).
RL-DET-REMNOTIF.1	Detection	Satisfied by an equivalent mechanism	The removal procedure is invoked by `endCardProcessing` and the removal is notified by a `CARD_REMOVED` event, so no operation dedicated to the procedure itself is required (see Section A.2.1).
RL-DET-REMCFG.1	Detection	Delegated to the implementation layer	The command used by the degraded polling mode is a technical parameter of the reader driver, set when that driver is instantiated, and is outside the surface of this API (see Section A.2.3).

A.2.1. Removal notification — RL-DET-REMNOTIF.1

The requirement expects the upper layer to be able to trigger the removal procedure and to learn when the card has actually gone. This specification provides both through the transaction paradigm rather than through a procedure-oriented operation.

The upper layer does not start a removal procedure: it declares that the business processing of the current card is finished, by calling `endCardProcessing`. That single declaration is what instructs the layer below to release the card and to begin observing its departure; the procedure itself, and the means it uses, belong to the implementation layer. The outcome is reported to the upper layer either directly, by a `CARD_REMOVED` event when the card leaves the field, or indirectly, by the resumption of detection for the next card when the `DetectionMode` is `REPEATING`.

The intent of the requirement is therefore met: the upper layer controls when the removal phase begins, and it is informed when the card has effectively left. What the specification does not define is a separate operation whose only purpose would be to trigger that phase, since no transaction can be considered complete while the card is still being processed.

A.2.2. Control of the removal procedures — RL-DET-REMCTRL.1

The requirement expects each removal procedure managed by the layer to be switched on and off individually by the upper layer. This specification does not expose such a choice, for a reason that is architectural rather than circumstantial.

A contactless coupler does not offer a basket of interchangeable procedures. The way a departure is observed is a property of the coupler's hardware and firmware: monitoring of the carrier or of the antenna load, low-level protocol primitives such as an empty I-block or an R(NAK) as used by ISO/IEC 14443 contactless

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement

implementations, or, when none of these is available, software polling. Which of them exists on a given product is decided by the reader manufacturer, not by the ticketing application. The requirements themselves acknowledge that variety, since a removal may also be observed through a presence check method or through the removal procedure of the contactless payment protocols. The certification of a public transport reader records that choice as a characteristic of the product: the vendor declares the card presence check method it implements—empty I-blocks, R(NAK), or none—and the condition under which that method is activated ([STA-ICS-PCD], item PCD2.5), a method that in most cases also serves as the removal procedure.

The API deliberately insulates the upper layer from those contingencies: the implementation layer selects the most appropriate method among those the underlying reader supports, and the upper layer controls only **when** the removal phase starts and **whether** detection resumes afterwards. Exposing per-procedure switches would make application code depend on reader families and would have to be rewritten for every new coupler, which runs against the portability objective stated in Architectural Overview.

A.2.3. Configuration of the polling command — RL-DET-REMCFG.1

The requirement originates from environments in which the reader driver cannot access the contactless transport frames directly—a generic smart card stack or a closed driver, for instance. Removal is then detected by sending an application command repeatedly until the card no longer answers, and the command used must be neutral for the card, since some products change state when they receive a command that is not.

This degraded mode is a property of the reader driver, not of the contract between the application and the reader. It is used only by implementations that cannot obtain the departure of the card from the reader itself, and the command it sends is a technical parameter of such an implementation, set when the reader driver is instantiated. Exposing that parameter in this API would require application code to know the radio-frequency idle protocol of a particular reader, which contradicts the abstraction principle described in Section A.2.2.

This specification therefore defines the effect—the reader reports the departure of the card—and leaves the means to the implementation layer, including the choice of a polling command where one is needed. An implementation that relies on such a command is expected to use one that leaves the card in the state it had before the polling started.

© Calypso Networks Association 2026 — Reproduction is prohibited without prior written agreement