


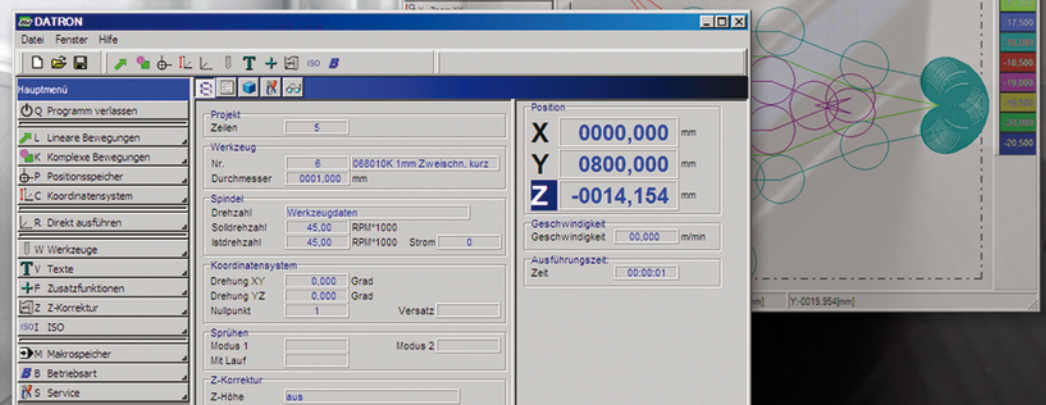

Postprocessor

Software Manual

Description	Software Manual
Product	Postprocessor
Language	en
Target group	Owner/operator, machine operator

DATRON AG
In den Gänsäckern 5
D-64367 Mühlthal

Tel.: +49 - (0) 6151 - 1419 - 0
Fax: +49 - (0) 6151 - 1419 - 29
www.datron.de

© Copyright by DATRON AG 2015

It is not permitted to distribute or copy these operating instructions, or to utilize or communicate their contents, without the express permission of DATRON AG. All rights regarding the registration of patents, utility models or registered designs remain reserved.

Contents

1 Description.....	1-1
2 Introduction.....	2-1
3 Overview.....	3-1
4 Parameter.....	4-1



1 Description

DATRON milling machines offer a high degree of precision, a comprehensive range of functions and simultaneously simple operating characteristics and low space requirements.

CAM software calculates the required motion sequences in the milling machine.

The settings required for the postprocessor are explained in this manual. Valid for all HSM™ products by Autodesk®.

- HSM™ Express
- HSM™Works
- Inventor HSM™
- Inventor HSM™ Express
- Fusion 360

The software and the description in this manual can be used exclusively with a DATRON milling machine.

The postprocessor operates with all 3-axis applications, for which the settings required for the DATRON software are essential (see **Chapter 4, "Parameter"**). Additional settings are optionally available to simplify working with the machine.

Machine-specific settings are required to enable the 3+2-axis option. If you have any questions about this or any other topics contact:

DATRON Application

Tel.: +49 - (0) 6151 - 1419 - 86

Fax: +49 - (0) 6151 - 1419 - 69

E-mail: **application@datron.de**

www.datron.de


2 Introduction

Unlike other postprocessors, the programmed operations are not added to one another as successive sequences but are created in a separate submacro for every operation. The main macro has the same structure as the CAM program.

The postprocessor also automatically creates a dialogue that asks which operations are to be executed when the macro is started. This makes it possible to select only specific operations when the macro is started.


The software and the description in this manual can be used exclusively with a DATRON milling machine.

3 Overview

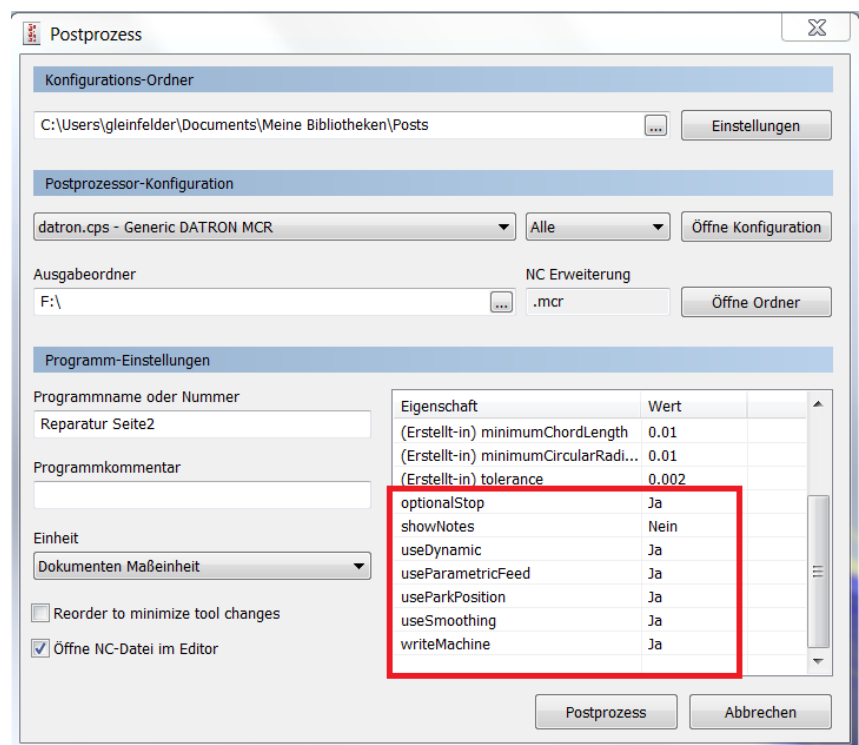

- 1 optionalStop
- 2 showNotes
- 3 useDynamic
- 4 useParametricFeed
- 5 useParkPosition
- 6 useSmoothing
- 7 writeMachine

Unlike other postprocessors, the programmed operations are not added to one another as successive sequences but are created in a separate submacro for every operation. The main macro has the same structure as the CAM program.

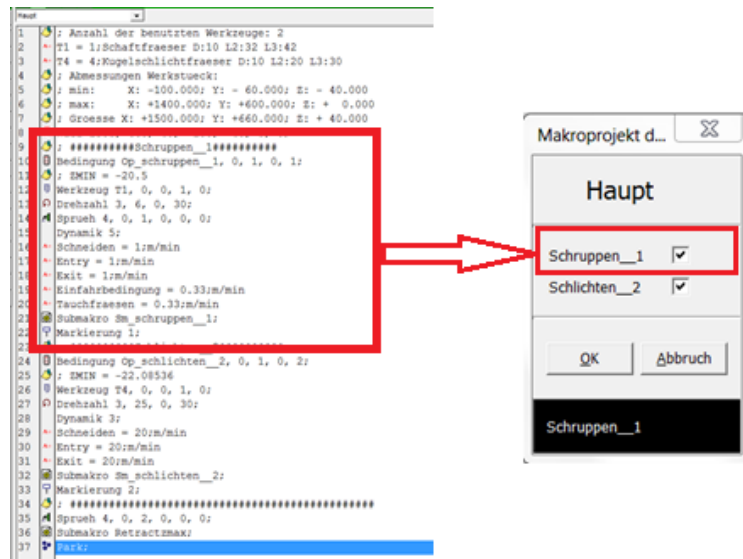

The postprocessor also automatically creates a dialogue that asks which operations are to be executed when the macro is started. This makes it possible to select only specific operations when the macro is started.

4 Parameter

Required settings

Parameter	DATRON CNC V9	DATRON HSC Pro (> V9.40)	DATRON HSC Pro Expert (> V9.40)	DATRON HSC Pro with PerfectCut
useDynamic	No	No	Yes	Yes
useSmoothing	No	No	No	Yes

useDynamic

The postprocessor automatically sets the dynamics profile depending on the programmed strategy.

```

9  ; #####Schruppen_1#####
10 Bedingung Op_schruppen_1, 0, 1, 0, 1;
11 ; ZMIN = -20.5
12 Werkzeug T1, 0, 0, 1, 0;
13 Drehzahl 3, 6, 0, 30;
14 Sprueh 4, 0, 1, 0, 0, 0;
15 Dynamik 5;
16 A= Schneiden = 1;m/min
17 A= Entry = 1;m/min
18 A= Exit = 1;m/min
19 A= Einfahrbedingung = 0.33;m/min
20 A= Tauchfraesen = 0.33;m/min
21 Submakro Sm_schruppen_1;
22 Markierung 1;

```

useSmoothing

The postprocessor automatically sets the contour smoothing depending on the programmed chord error.

Other settings

These functions can be set regardless of the software version.

optionalStop

This function inserts a stop option in the dialogue, which is displayed when the macro is run. If this is checked, the machine stops after every operation and prompts for confirmation by the operator before it continues (ideal for setting up programs).

**showNotes**

This functions outputs user comments that have been saved in operations as comments in the program.

useParametricFeed

This function allows the programmed feeds for an operation on the machine to be changed without having to return to the CAM (ideal for inserting programs).

```

9  ; #####Schruppen_1#####
10 ; Bedingung Op_schruppen_1, 0, 1, 0, 1;
11 ; ZMIN = -20.5
12 Werkzeug T1, 0, 0, 1, 0;
13 Drehzahl 3, 6, 0, 30;
14 Sprueh 4, 0, 1, 0, 0, 0;
15 Dynamik 5;
16 A- Schneiden = 1;m/min
17 A- Entry = 1;m/min
18 A- Exit = 1;m/min
19 A- Einfahrbedingung = 0.33;m/min
20 A- Tauchfraesen = 0.33;m/min
21 Submakro Sm_schruppen_1,
22 Markierung 1;

```

useParkPosition

Inserts the park command at the end of the program.

```

37 Park;

```

writeMachine

Inserts information on the machine into the header for use or simulation during CAM programming.