
Bus types
General purpose bus
Ignition
Injection
Analog inputs (sensors)
Discrete inputs
LS & HS outputs
DC Motor

M5
Module-wbo-0.6
5569-06A2
J3
J6
Conn_01x06
M7
Module-can-0.1
5569-18A2
J5
5569-08A2
J4
M6
Module:mega-mcu100/0.3
Ignition
LS HOT
3.5A MAX
Always hot
capable
Injector
LS
3.5A MAX
Solenoid load
capable
DC Driver 1
DC Driver 2
Flyback diodes
5569-16A2
J10
5569-20A2
J2
Pin 8 may be used for
shielding VR signals
M3
Module-vr-discrete-0.5
Install R770 for use
with very hot VR signals,
to dampen the signal
M4
Module-vr-max9924-0.1
Install R775 for use
with very hot VR signals,
to dampen the signal
Install a 4.7 kOhm R1 resistor for
using VR2- as a hall sensor input
M2
Module-knock-0.2
M1
Module-power_12and5V-0.3
Move the resistor from
position R6 to R5 to use
ADC3 for receiving the
analog signal VR-DISCRETE
instead of the knock signal
Move the resistor from
position R143 to R145 to
enable the CAN WAKEUP
function. The AUX1 analog
input will be unavailable.
uSD card and accelerometer
on SPI1 bus
Barometer
on this I2C bus
F40x does not
have UART8
Internal TC2030
connector
Internal
buttons
Bluetooth Module
JDY-33
1N4148WS
CR1220
Configurable "BUTTON" pulls
USB_B_Mini
USB_C

Pin	Name	Recommended function
B8	OUT_LS_HOT2	Fan Relay
B9	OUT_LS_HOT1	Main Relay
B16	OUT_LS4	Fuel Pump Replay
B18	OUT_LS2	Idle Air Valve
C8	GND	VR Shield
C15	IN_AUX3	Fuel Pressure
D10	IN_BUTTON2	A/C Request

All inputs are 12V-tolerant

Hellen-One-PCB-logo
https://rusefi.com/s/uaefi
rusEFI.com
Sheet: /
File: uaefi.kicad_sch
Title: UAEFI
Size: A3 | Date: 2026-09-01 | Rev: F3
KiCad E.D.A. 10.0.8 | Id: 1/9

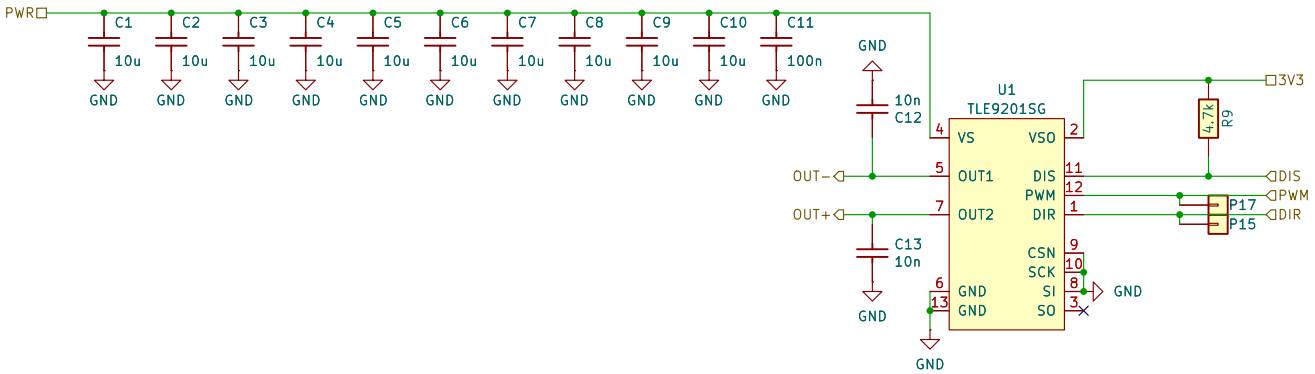


rusEFI.com

Sheet: /DC Driver 1/
File: DC_MOTOR_0.1.kicad_sch

Title: UAEFI

Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 2/9

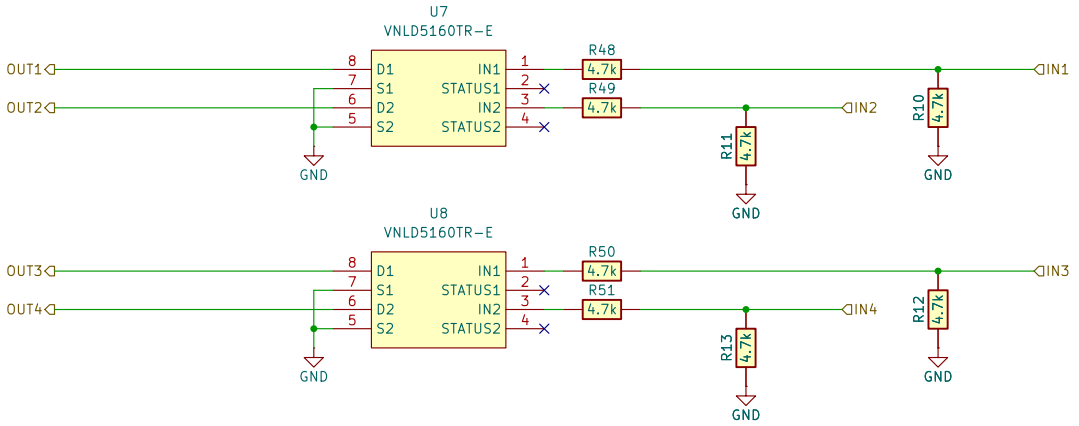


rusEFI.com

Sheet: /LS/
File: LS4.kicad_sch

Title: UAEFI

Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 3/9

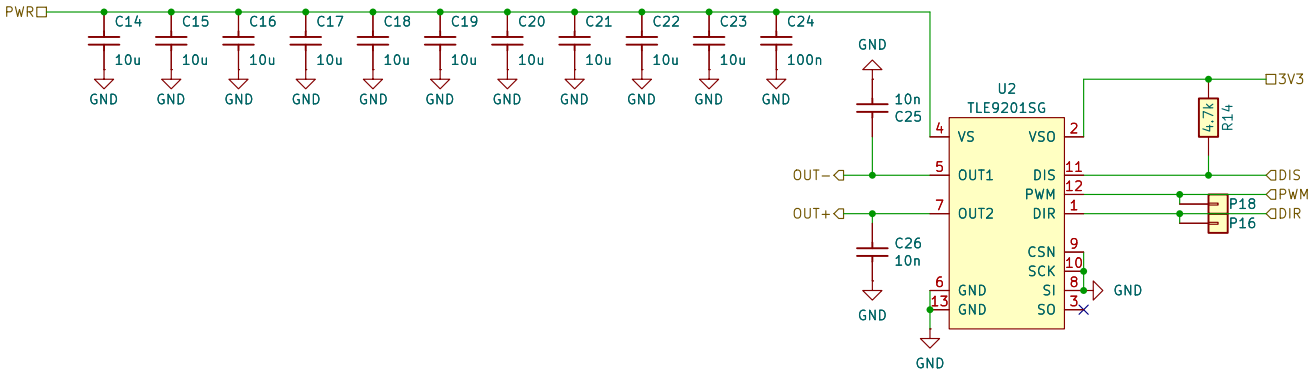


rusEFI.com


Sheet: /DC Driver 2/
File: DC_MOTOR_0.1.kicad_sch

Title: UAEFI

Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 4/9

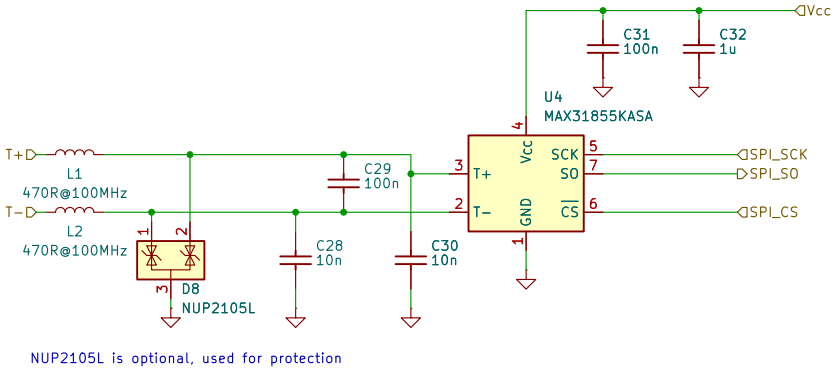

rusEFI.com		
Sheet: /EGT/		
File: egt.kicad_sch		
Title: UAEFI		
Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 5/9

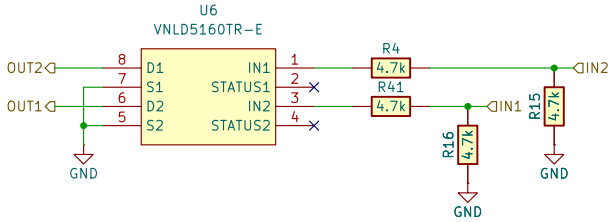


rusEFI.com

Sheet: /LS HOT/
File: LS_HOT.kicad_sch

Title: UAEFI

Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 6/9

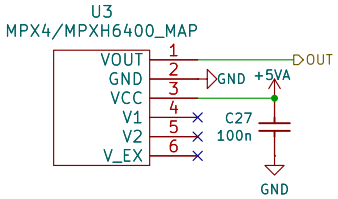


rusEFI.com

Sheet: /MAP/
File: MAP.kicad_sch

Title: UAEFI

Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 8/9

Remove R20–R22, R26–R28, and install Q7–Q12 for use with dumb coils

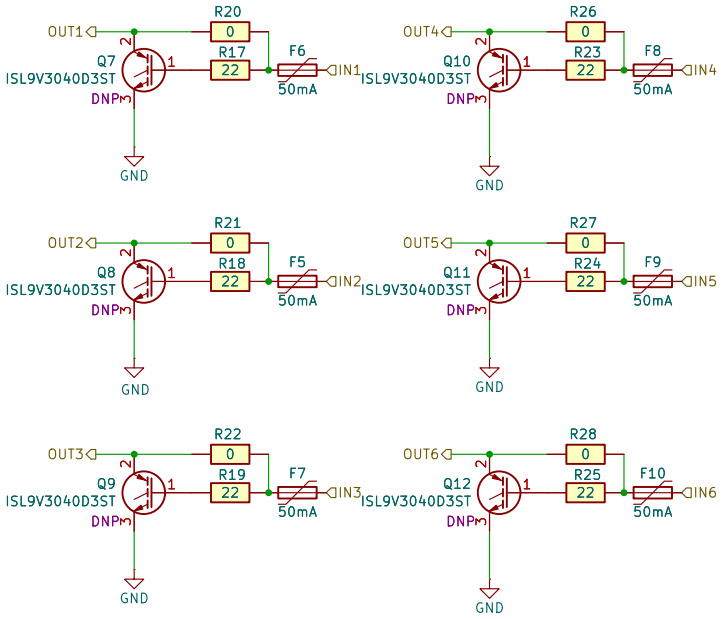


rusEFI.com

Sheet: /Ignition/
File: IGN6.kicad_sch

Title: UAEFI

Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 9/9

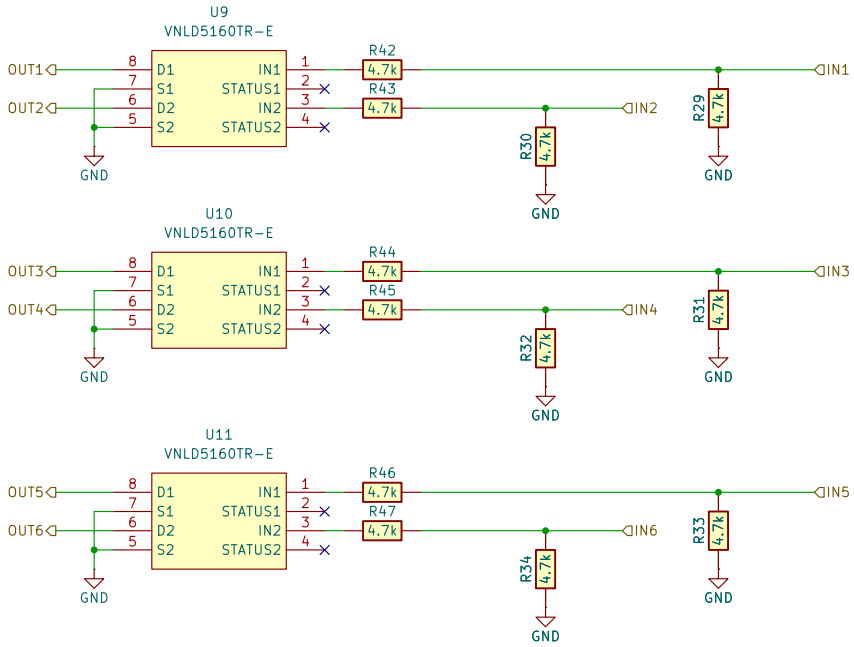

rusEFI.com		
Sheet: /Injector/ File: INJ6.kicad_sch		
Title: UAEFI		
Size: A4	Date: 2026-07-14	**Rev: F3**
KiCad E.D.A. 10.0.8		Id: 10/9