University of BRISTOL

Overview of Computer Architecture

Processors and Execution

Carl Henrik Ek - carlhenrik.ek@bristol.ac.uk

November 8, 2019

http://carlhenrik.com

Computer Science

Definition (Computer Science)

The systematic study (science) of algorithms

Definition (Algorithms)

an ordered set of unambigous, executable steps that defines a terminating process

Computing

Computer Architecture

Sinclair Spectrum

Commodore 64

Acorn

Archimedes

ARM

Execution

Start

Computer Architecture

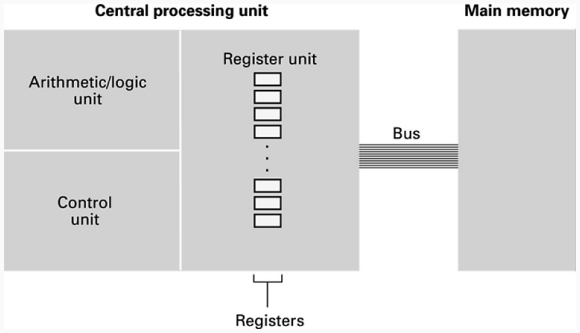

Memory

RAM as an array of bytes

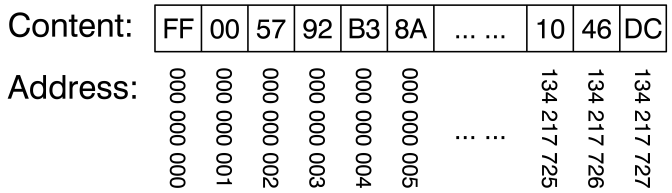

CPU

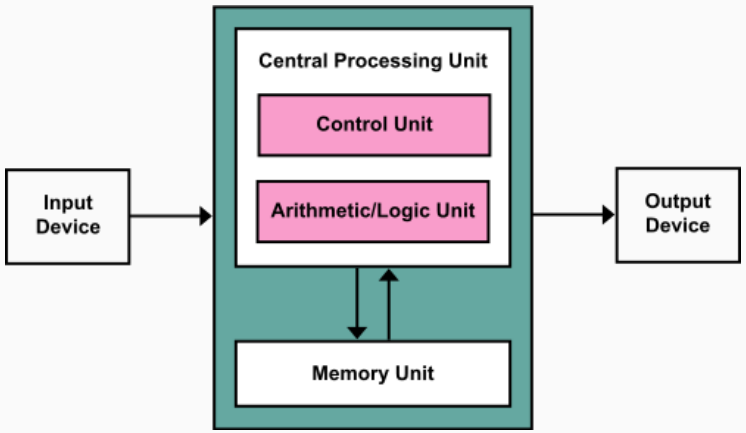
Central Processing Unit
Control Unit
Arithmetic/Logic Unit
Input Device
Output Device
Memory Unit

Register

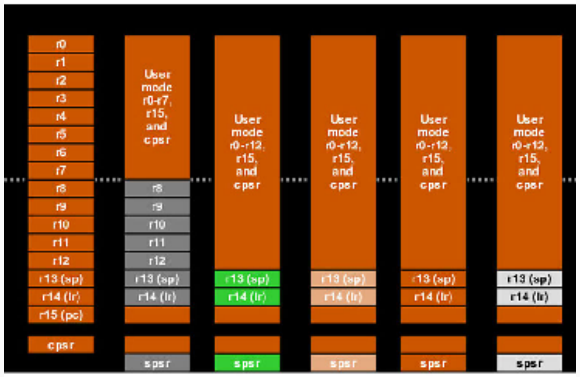
r0
r1
r2
r3
r4
r5
r6
r7
r8
r9
r10
r11
r12
r13 (sp)
r14 (lr)
r15 (pc)
cpsr
User mode r0-r7, r15, and cpsr
r8
r9
r10
r11
r12
r13 (sp)
r14 (lr)
spsr
User mode r0-r12, r15, and cpsr
r13 (sp)
r14 (lr)
spsr
User mode r0-r12, r15, and cpsr
r13 (sp)
r14 (lr)
spsr
User mode r0-r12, r15, and cpsr
r13 (sp)
r14 (lr)
spsr
User mode r0-r12, r15, and cpsr
r13 (sp)
r14 (lr)
spsr

Program Counter

Program Counter

- Address to memory to fetch instruction to execute
- Start position

Instruction Register

- Stores instruction

Execution

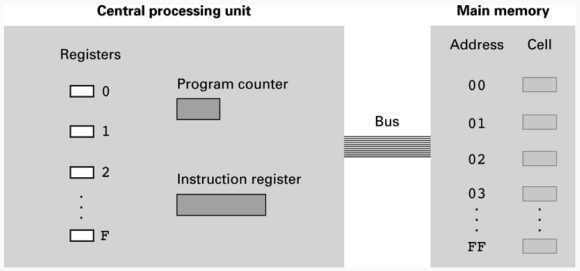
Central processing unit
Main memory
Registers
0
1
2
F
Program counter
Instruction register
Bus
Address
Cell
00
01
02
03
FF

Execution

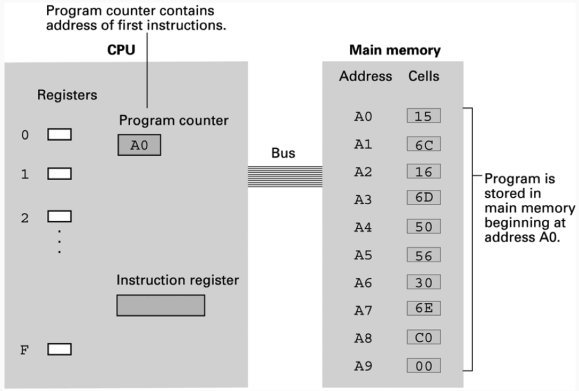
Program counter contains address of first instructions.
CPU
Registers
Program counter
A0
0
1
2
F
Instruction register
Bus
Main memory
Address
Cells
A0 15
A1 6C
A2 16
A3 6D
A4 50
A5 56
A6 30
A7 6E
A8 C0
A9 00
Program is stored in main memory beginning at address A0.

Execution

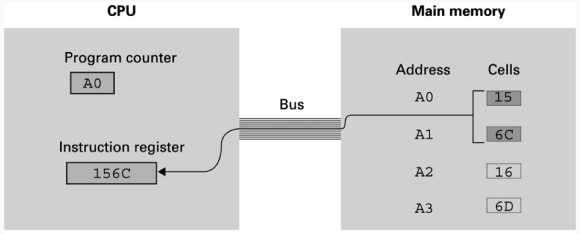

a. At the beginning of the fetch step the instruction starting at address A0 is retrieved from memory and placed in the instruction register.

Execution

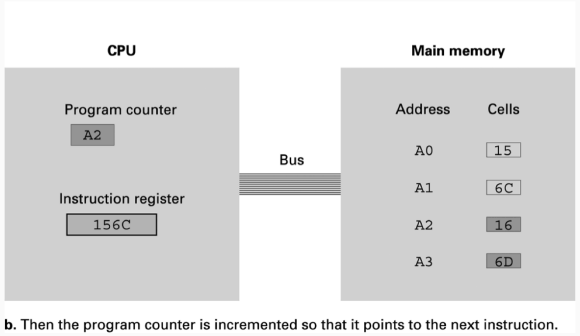

b. Then the program counter is incremented so that it points to the next instruction.

Execution

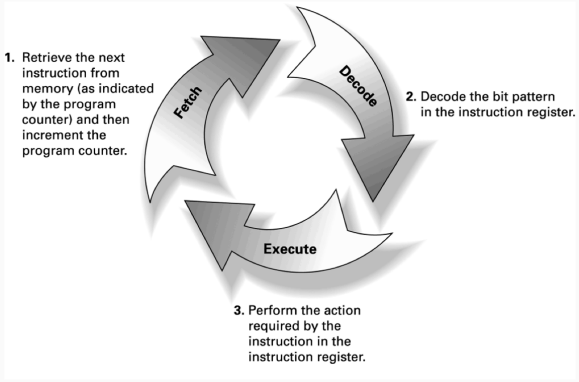
1. Retrieve the next instruction from memory (as indicated by the program counter) and then increment the program counter.
Fetch
Decode
2. Decode the bit pattern in the instruction register.
Execute
3. Perform the action required by the instruction in the instruction register.

Processors

Computer Architecture

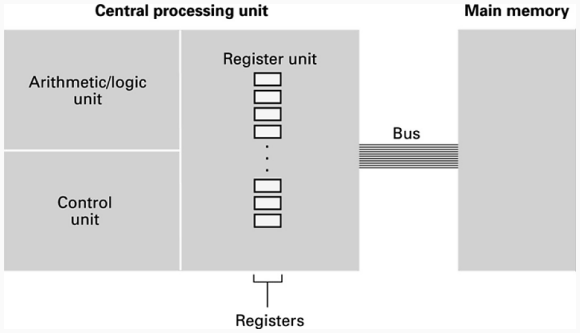

State Machine

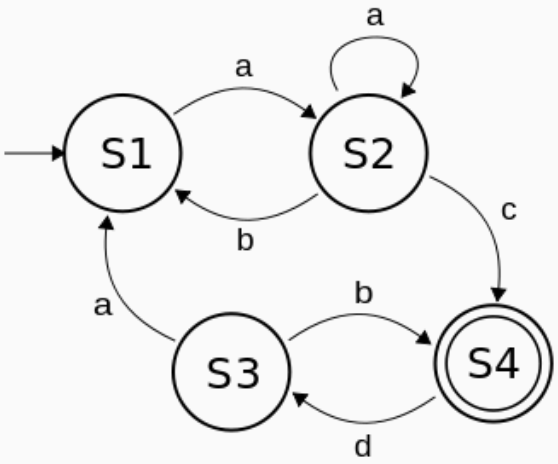

Status Register



Copies of the ALU status flags (latched if the instruction has the "S" bit set).

* **Condition Code Flags**
  N = **N**egative result from ALU flag.
  Z = **Z**ero result from ALU flag.
  C = ALU operation **C**arried out
  V = ALU operation o**V**erflowed

* **Mode Bits**
  M[4:0] define the processor mode.

* **Interrupt Disable bits.**
  I = 1, disables the IRQ.
  F = 1, disables the FIQ.

* **T Bit (Architecture v4T only)**
  T = 0, Processor in ARM state
  T = 1, Processor in Thumb state

Flags

	Logical Instruction	Arithmetic Instruction
Flag		
Negative (N='1')	No meaning	Bit 31 of the result has been set Indicates a negative number in signed operations
Zero (Z='1')	Result is all zeroes	Result of operation was zero
Carry (C='1')	After Shift operation '1' was left in carry flag	Result was greater than 32 bits
oVerflow (V='1')	No meaning	Result was greater than 31 bits Indicates a possible corruption of the sign bit in signed numbers

Conditions



0000 = EQ - Z set (equal)

0001 = NE - Z clear (not equal)

0010 = HS / CS - C set (unsigned higher or same)

0011 = LO / CC - C clear (unsigned lower)

0100 = MI -N set (negative)

0101 = PL - N clear (positive or zero)

0110 = VS - V set (overflow)

0111 = VC - V clear (no overflow)

1000 = HI - C set and Z clear (unsigned higher)

1001 = LS - C clear or Z (set unsigned lower or same)

1010 = GE - N set and V set, or N clear and V clear (>or =)

1011 = LT - N set and V clear, or N clear and V set (>)

1100 = GT - Z clear, and either N set and V set, or N clear and V set (>)

1101 = LE - Z set, or N set and V clear,or N clear and V set (<, or =)

1110 = AL - always

1111 = NV - reserved.

Instructions

- `OP-Code`
  - Decides operation
- `Operand`
  - OP-Code dependent
  - "Parameters"
- Each instruction on ARM `32 bits`

Instruction ARM

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Instruction Type
Condition		0	0	I	OPCODE					S	Rn				Rs				OPERAND-2													Data processing
Condition		0	0	0	0	0	0	A	S	Rd					Rn				Rs			1	0	0	1	Rm						Multiply
Condition		0	0	0	0	1	U	A	S	Rd HIGH					Rd LOW				Rs			1	0	0	1	Rm						Long Multiply
Condition		0	0	0	1	0	B	0	0	Rn					Rd				0	0	0	0	1	0	0	1	Rm					Swap
Condition		0	1	I	P	U	B	W	L	Rn					Rd				OFFSET													Load/Store - Byte/Word
Condition		1	0	0	P	U	B	W	L	Rn					REGISTER LIST																	Load/Store Multiple
Condition		0	0	0	P	U	1	W	L	Rn					Rd				OFFSET 1			1	S	H	1	OFFSET 2						Halfword Transfer Imm Off
Condition		0	0	0	P	U	0	W	L	Rn					Rd				0	0	0	0	1	S	H	1	Rm					Halfword Transfer Reg Off
Condition		1	0	1	L	BRANCH OFFSET																											Branch
Condition		0	0	0	1	0	0	1	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	1	Rn					Branch Exchange
Condition		1	1	0	P	U	N	W	L	Rn					CRd				CPNum			OFFSET										COPROCESSOR DATA XFER
Condition		1	1	1	0	Op-1				CRn					CRd				CPNum			OP-2			0	CRm					COPROCESSOR DATA OP
Condition						OP-1			L	CRn					Rd				CPNum			OP-2			1	CRm					COPROCESSOR REG XFER
Condition		1	1	1	1	SWI NUMBER																											Software Interrupt

Reference Manual

Instructions

- Data Transfer
  - `LDR`, `STR`
- Flow Control
  - `B`, `CMP`
- Arithmetic
  - `ADD`, `MUL`

LDR/STR

4.9 Single Data Transfer (LDR, STR)

The instruction is only executed if the condition is true. The various conditions are defined in ***Table 4-2: Condition code summary*** on page 4-5. The instruction encoding is shown in ***Figure 4-14: Single data transfer instructions***.

The single data transfer instructions are used to load or store single bytes or words of data. The memory address used in the transfer is calculated by adding an offset to or subtracting an offset from a base register.

The result of this calculation may be written back into the base register if auto-indexing is required.

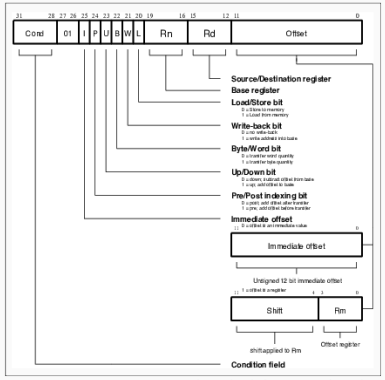

Figure 4-14: Single data transfer instructions

Addressing Modes

`ldr r0,[r1,#4]` Load word addressed by R1+4.

`str r0,[r1],#4` Store R0 to word addressed by R1. Increment R1 by 4.

`ldr r0,[r1,#4]!` Load word addressed by R1+4. Increment R1 by 4.

`ldr r0,=label` Load address of label `label` into R0

ADD

Code

```
_start:
        add         r0, r1
        add         r0, #4
        add         r0, [r1, #3]
```

MUL

4.7 Multiply and Multiply-Accumulate (MUL, MLA)

The instruction is only executed if the condition is true. The various conditions are defined in ***Table 4-2: Condition code summary*** on page 4-5. The instruction encoding is shown in ***Figure 4-12: Multiply instructions***.

The multiply and multiply-accumulate instructions use an 8 bit Booth's algorithm to perform integer multiplication.

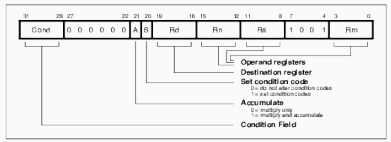

Figure 4-12: Multiply instructions

The multiply form of the instruction gives Rd:=Rm*Rs. Rn is ignored, and should be set to zero for compatibility with possible future upgrades to the instruction set.

The multiply-accumulate form gives Rd:=Rm*Rs+Rn, which can save an explicit ADD instruction in some circumstances.

Both forms of the instruction work on operands which may be considered as signed (2's complement) or unsigned integers.

The results of a signed multiply and of an unsigned multiply of 32 bit operands differ only in the upper 32 bits - the low 32 bits of the signed and unsigned results are identical. As these instructions only produce the low 32 bits of a multiply, they can be used for both signed and unsigned multiplies.

For example consider the multiplication of the operands:

Operand AOperand BResult

0xFFFFFFF8 0x00000010xFFFFFF38

If the operands are interpreted as signed

Operand A has the value -10, operand B has the value 20, and the result is -200 which is correctly represented as 0xFFFFFF38.

If the operands are interpreted as unsigned

Operand A has the value 4294967286, operand B has the value 20 and the result is 85899345720, which is represented as 0x13FFFFFF38, so the least significant 32 bits are 0xFFFFFF38.

4.7.1 Operand restrictions

The destination register Rd must not be the same as the operand register Rm. R15 must not be used as an operand or as the destination register.

Branch

4.4 Branch and Branch with Link (B, BL)

The instruction is only executed if the condition is true. The various conditions are defined ***Table 4-2: Condition code summary*** on page 4-5. The instruction encoding is shown in ***Figure 4-3: Branch instructions***, below.

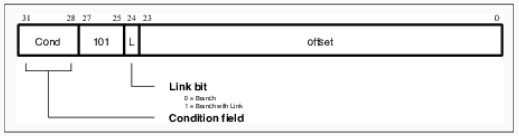

Figure 4-3: Branch instructions

Branch instructions contain a signed 2's complement 24 bit offset. This is shifted left two bits, sign extended to 32 bits, and added to the PC. The instruction can therefore specify a branch of +/- 32Mbytes. The branch offset must take account of the prefetch operation, which causes the PC to be 2 words (8 bytes) ahead of the current instruction.

Branches beyond +/- 32Mbytes must use an offset or absolute destination which has been previously loaded into a register. In this case the PC should be manually saved in R14 if a Branch with Link type operation is required.

4.4.1 The link bit

Branch with Link (BL) writes the old PC into the link register (R14) of the current bank. The PC value written into R14 is adjusted to allow for the prefetch, and contains the address of the instruction following the branch and link instruction. Note that the CPSR is not saved with the PC and R14[1:0] are always cleared.

To return from a routine called by Branch with Link use MOV PC,R14 if the link register is still valid or LDM Rn!,{..PC} if the link register has been saved onto a stack pointed to by Rn.

4.4.2 Instruction cycle times

Branch and Branch with Link instructions take 2S + 1N incremental cycles, where S and N are as defined in ***6.2 Cycle Types*** on page 6-3.

Code

Code

```
        .section        .text
        .align                2
        .global                _start
_start:
        ldr         r0, =matrix

        ldr         r1, [r0]          @ a
        ldr         r2, [r0, #12]        @ d
        mul         r7, r2,r1         @ a*d

        ldr         r1, [r0, #4]         @ b
        ldr         r2, [r0, #8]         @ c
        mul         r6, r2, r1         @ b*c
```

Summary

Summary

- This was just a very quick intro to CPUs
- You learn this by doing
- Lab on Monday we will play with these things