




USB INPUT

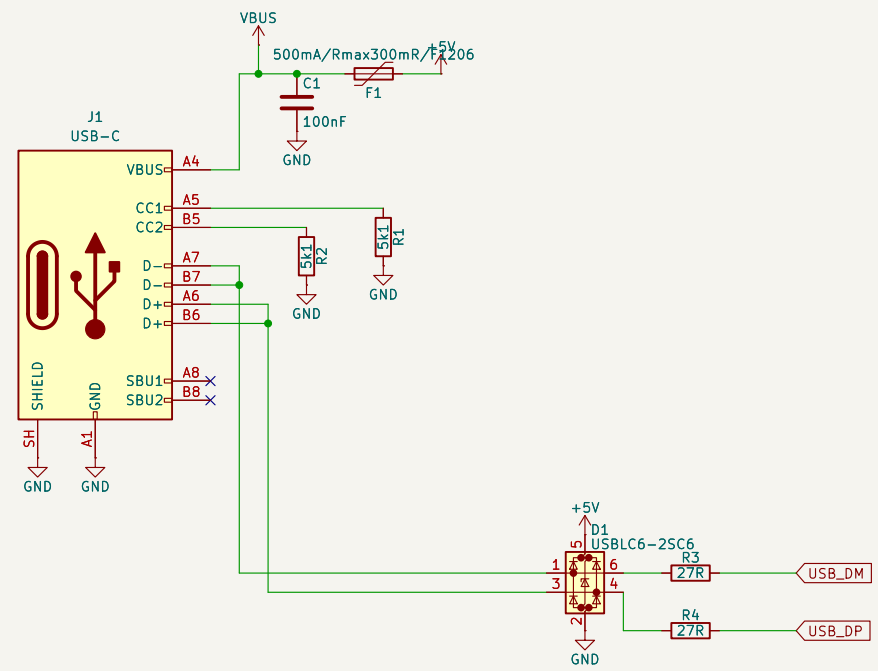


3.3V SUPPLY

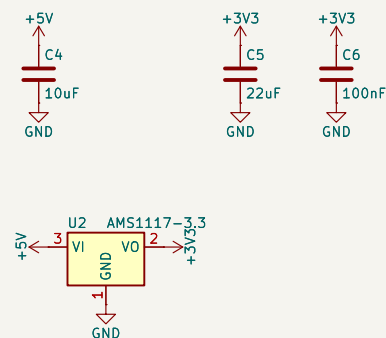


TARGET SUPPLY MUX

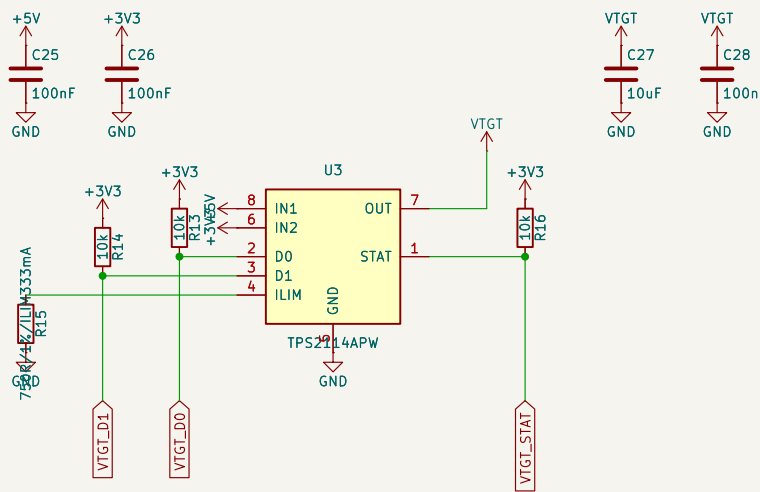


TARGET SENSE AND DISCHARGE

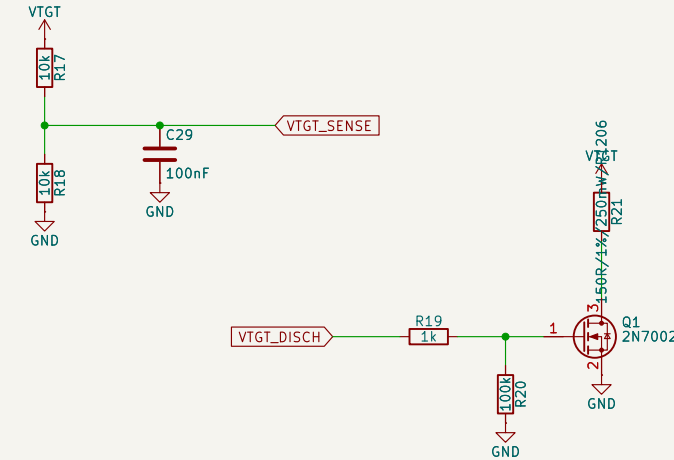

RP2354A

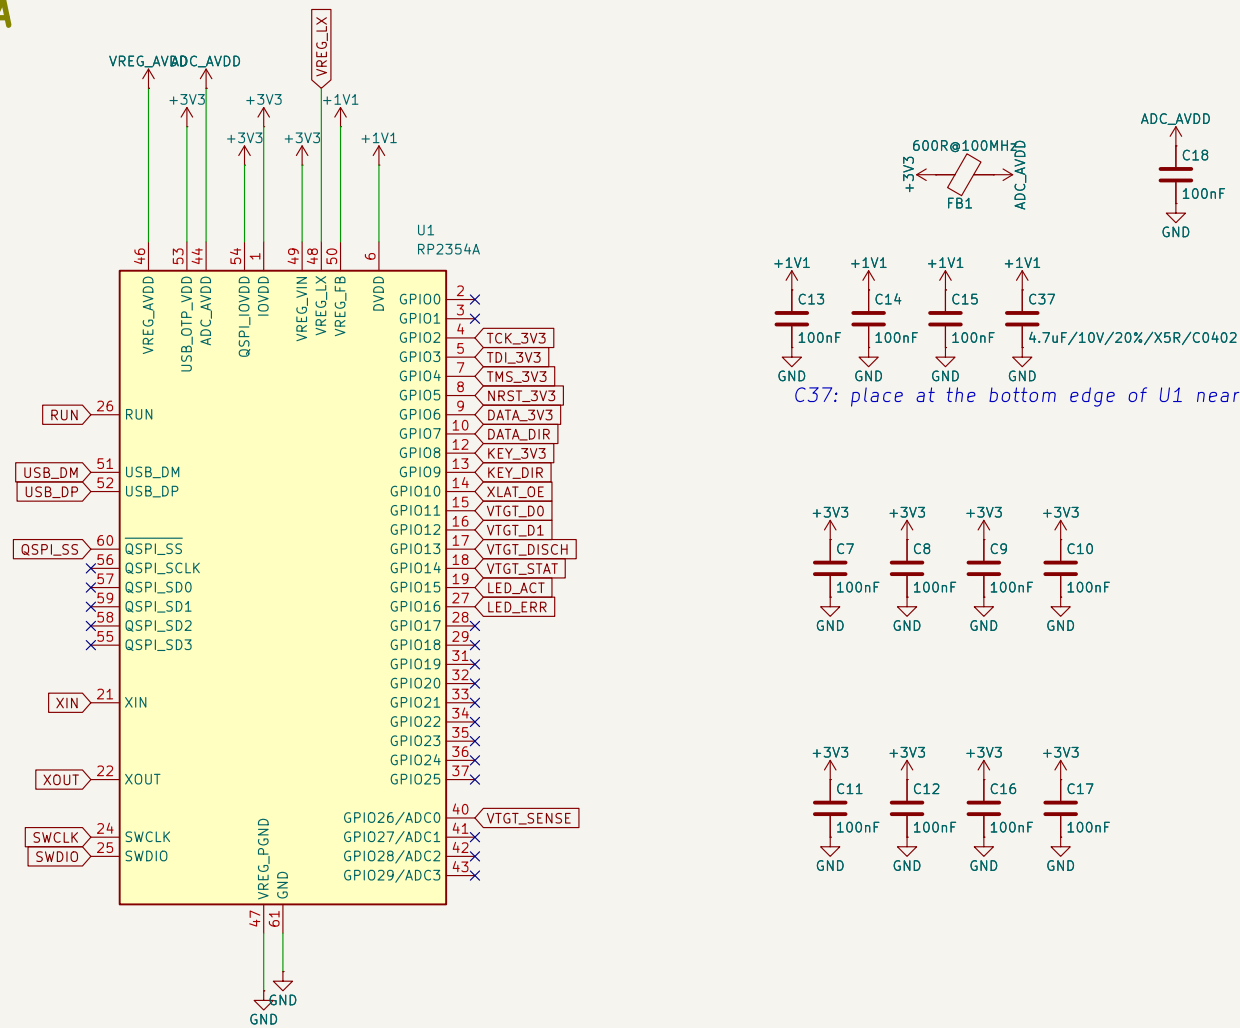


CORE REGULATOR, CLOCK, BOOT, SWD

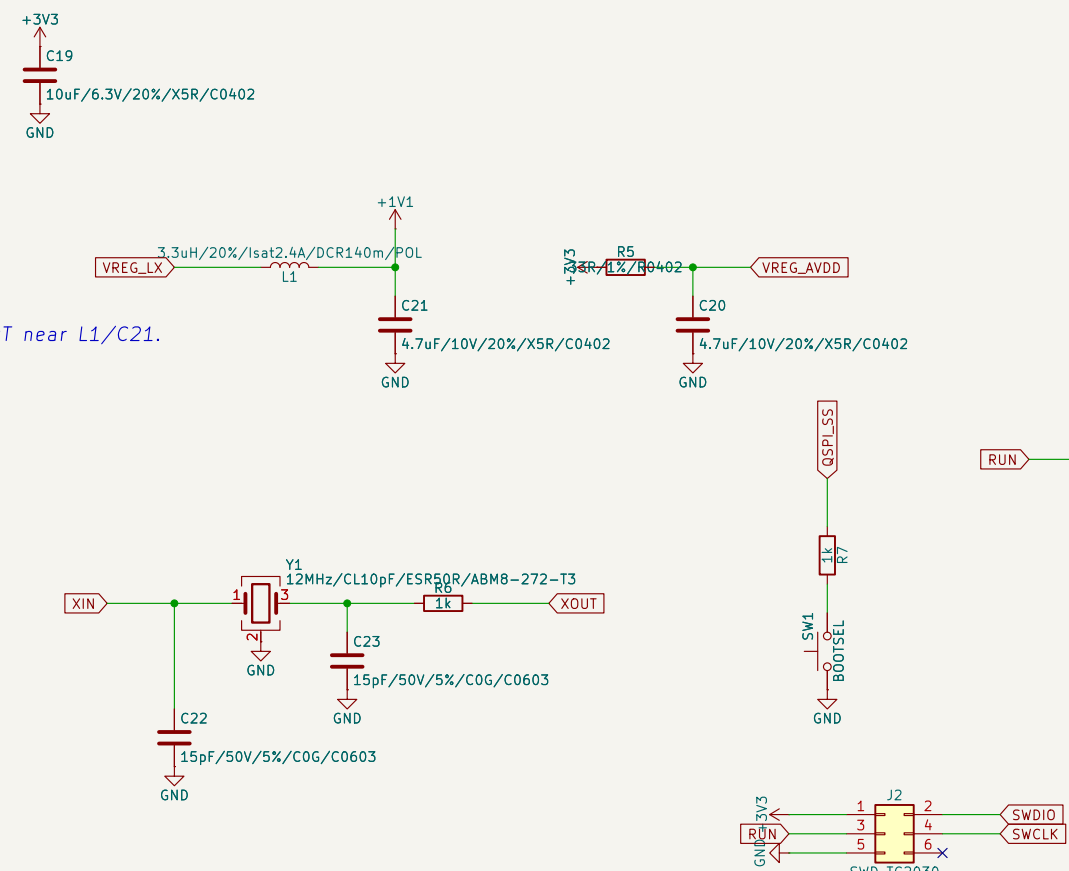


L1 polarity dot (pad 1) must face VREG_LX.
Do not substitute L1 or Y1 – see README.

LEVEL TRANSLATION

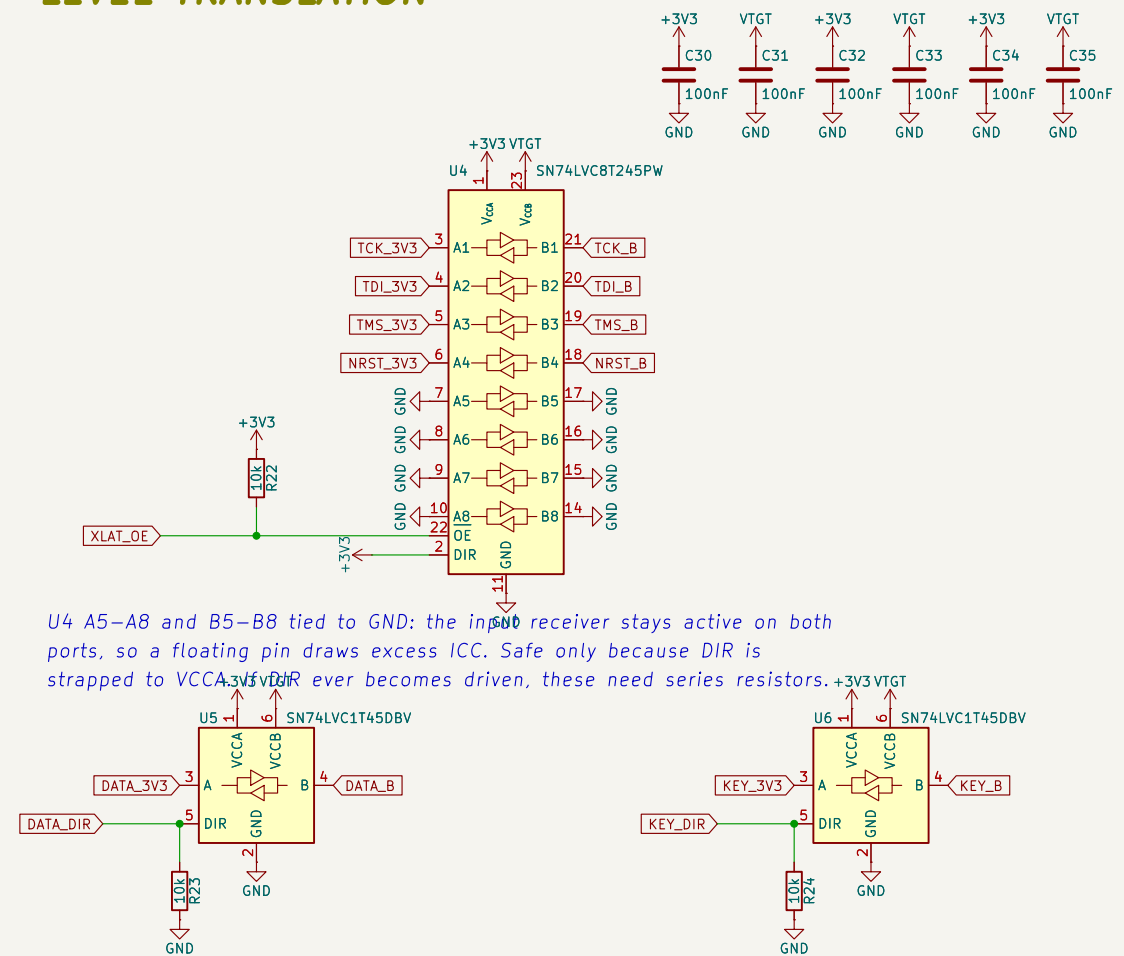


U4 A5–A8 and B5–B8 tied to GND: the input receiver stays active on both ports, so a floating pin draws excess ICC. Safe only because DIR is strapped to VCCA3V3; if ever becomes driven, these need series resistors. +3V3 VTGT


DUT CONNECTOR (SinoLink V2.2)

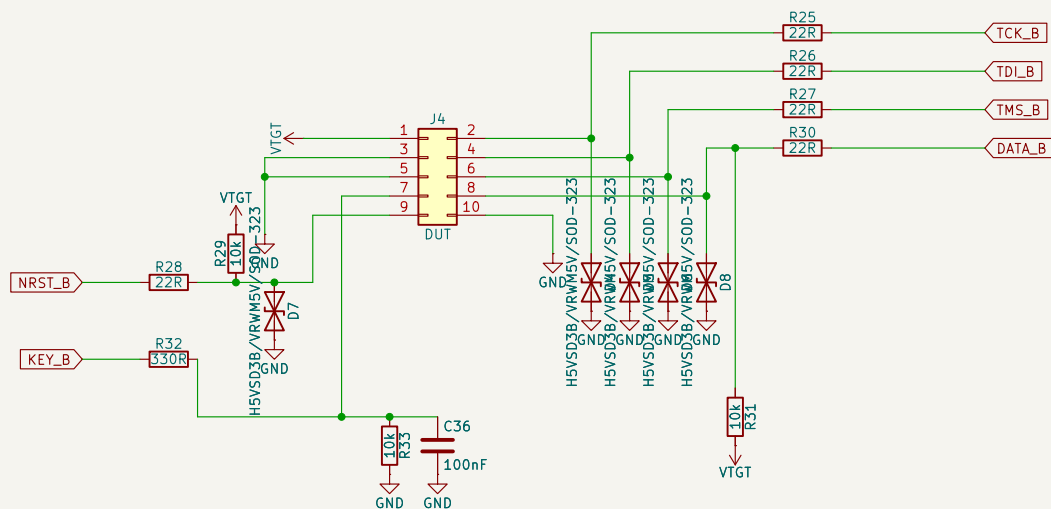

STATUS LEDS

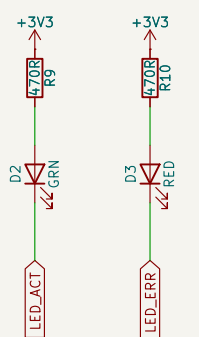

MOUNTING AND POWER FLAGS

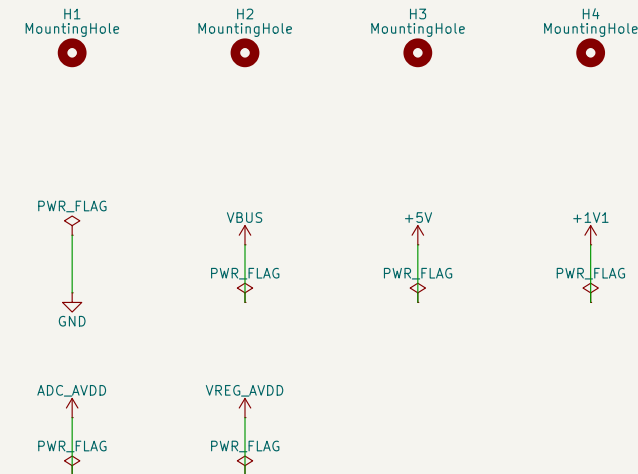

GPI-3.0-or-later
github.com/carlossless/sinodude
DUT header pin-compatible with SinoLink V2.2
USB ICP programmer for SinoWealth 8051 microcontrollers

Sheet: /
File: sinodude-rp2354.kicad_sch

Title: sinodude-rp2354

Size: A2 Date:

KiCad E.D.A. 10.0.6

Rev: A

Id: 1/1