



Broadcom FC card's setting

Boot to BIOS, boot the card's setting, set Boot from SAN "Enable"

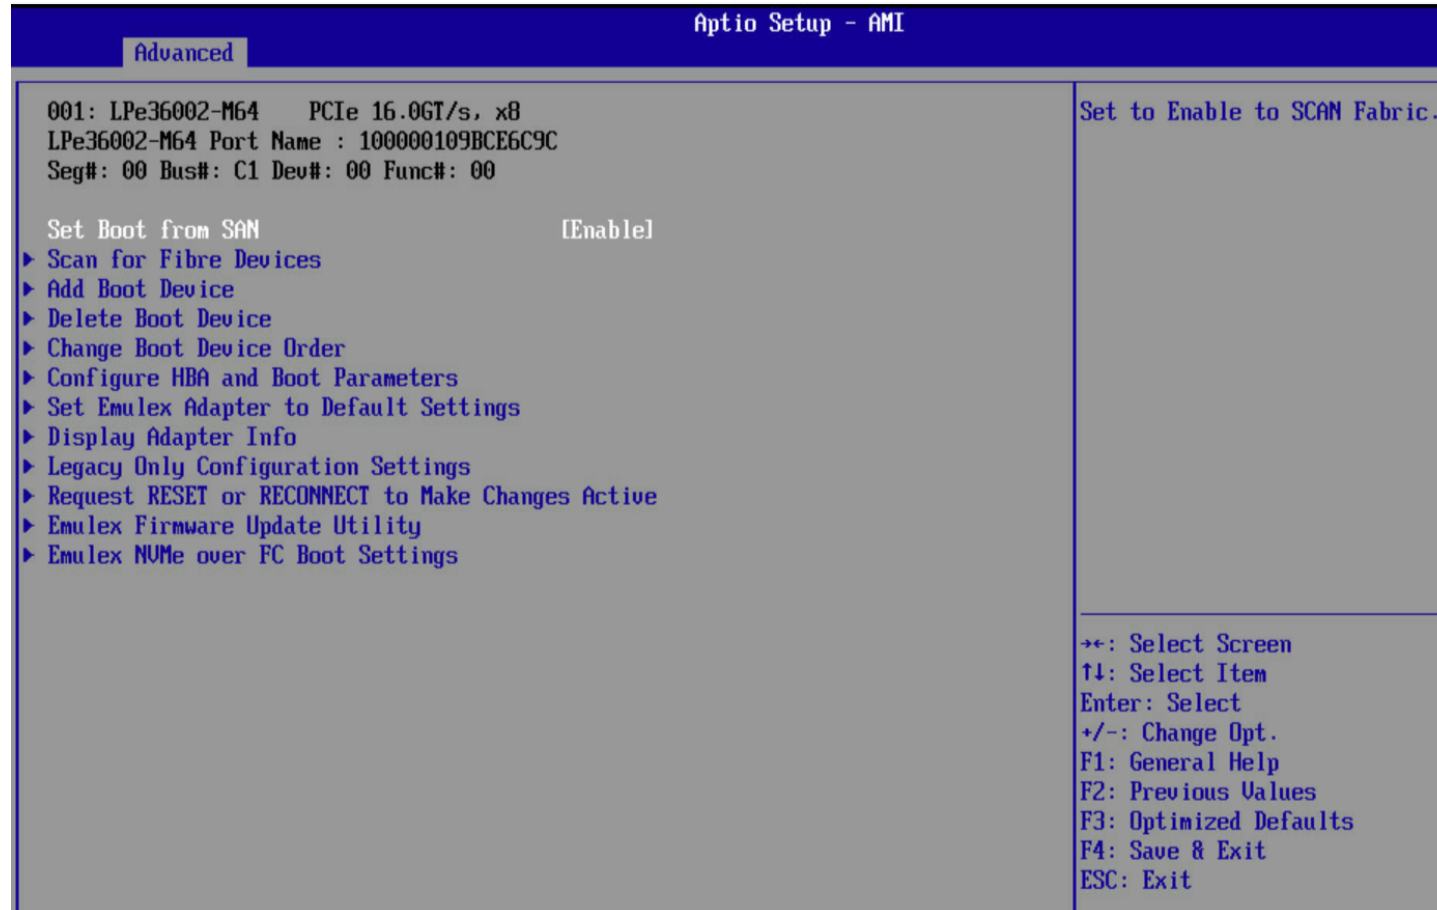

Configure HBA and Boot Parameters

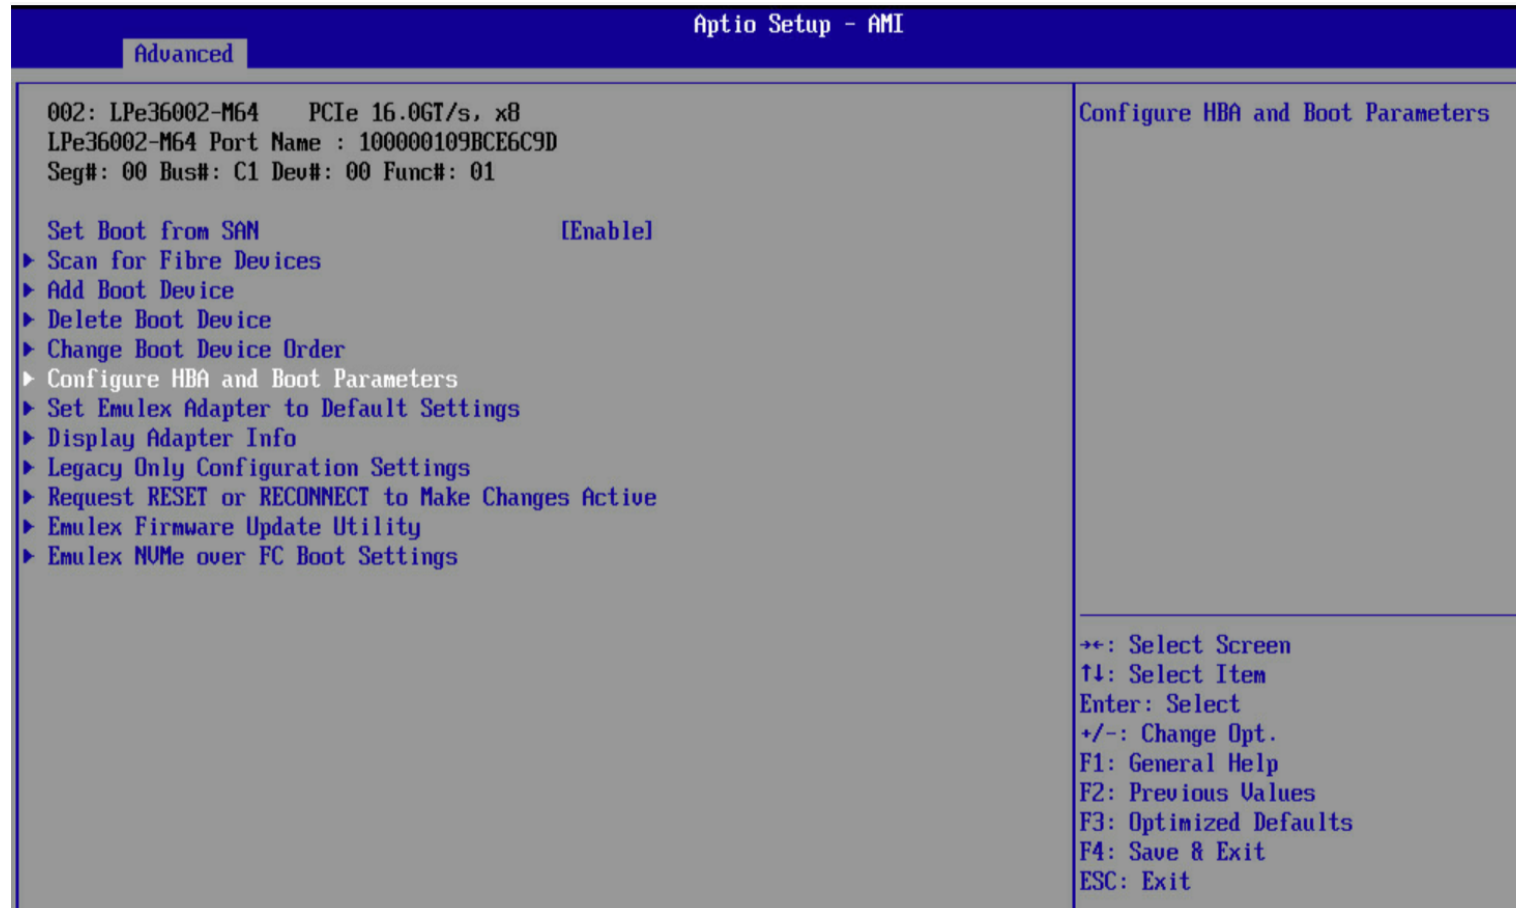

Change to “Point to Point”


Advanced		Aptio Setup - AMI	
LPe36002-M64 Port Name : 100000109BCE6C9D		Supports Point To Point Topology Only	
▶ Discard Changes			
▶ Commit Changes			
Topology		[Point to Point]	
PLOGI Retry Timer		[Disable - Default]	
Force Link Speed		[Auto negotiate - Default]	
Maximum Luns/Target		256	
Boot Target Scan Method		[Boot Path From NURAM Targets]	
Enable or Disable Brocade FA-PWWN		[Disable]	
Enable or Disable Brocade Boot LUN		[Disable]	
Enable or Disable 16G Forward Error Correction		[Enable]	
Trunking mode		[Disabled]	
		++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	

Commit Changes

Aptio Setup - AMI	
Advanced	
LPe36002-M64 Port Name : 100000109BCE6C9D	
Commit Changes and Go to the Previous Page	
▶ Discard Changes	
▶ Commit Changes	
Topology	[Point to Point]
PLOGI Retry Timer	[Disable - Default]
Force Link Speed	[Auto negotiate - Default]
Maximum Luns/Target	256
Boot Target Scan Method	[Boot Path From NURAM Targets]
Enable or Disable Brocade FA-PWWN	[Disable]
Enable or Disable Brocade Boot LUN	[Disable]
Enable or Disable 16G Forward Error Correction	[Enable]
Trunking mode	[Disabled]
++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	


- Do the all steps for another FC port.

Save Changes and Reset

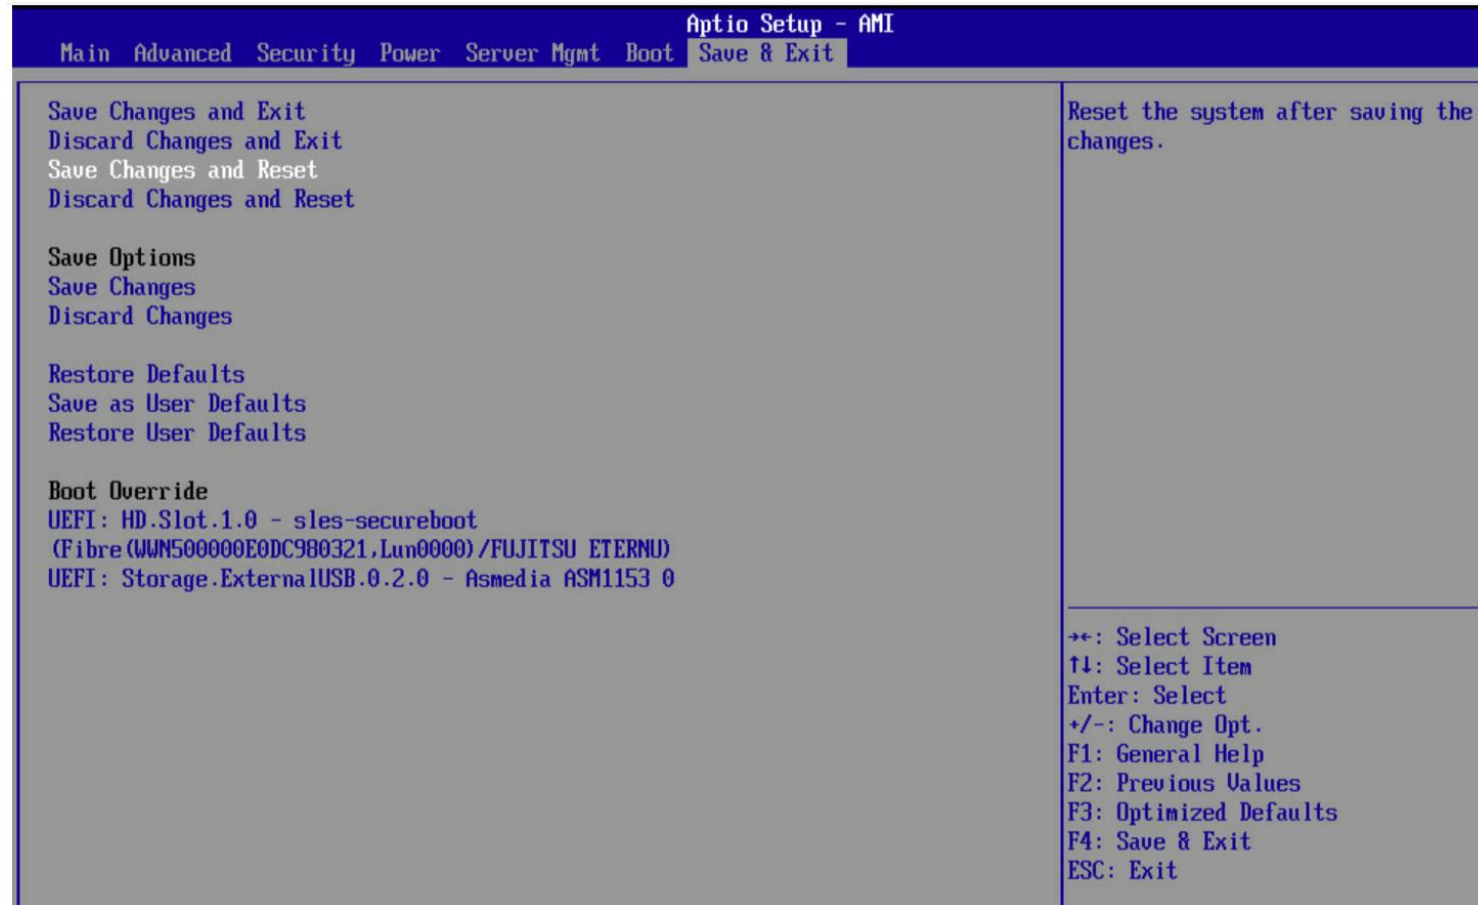


- Boot to BIOS


Scan for Fibre Devices

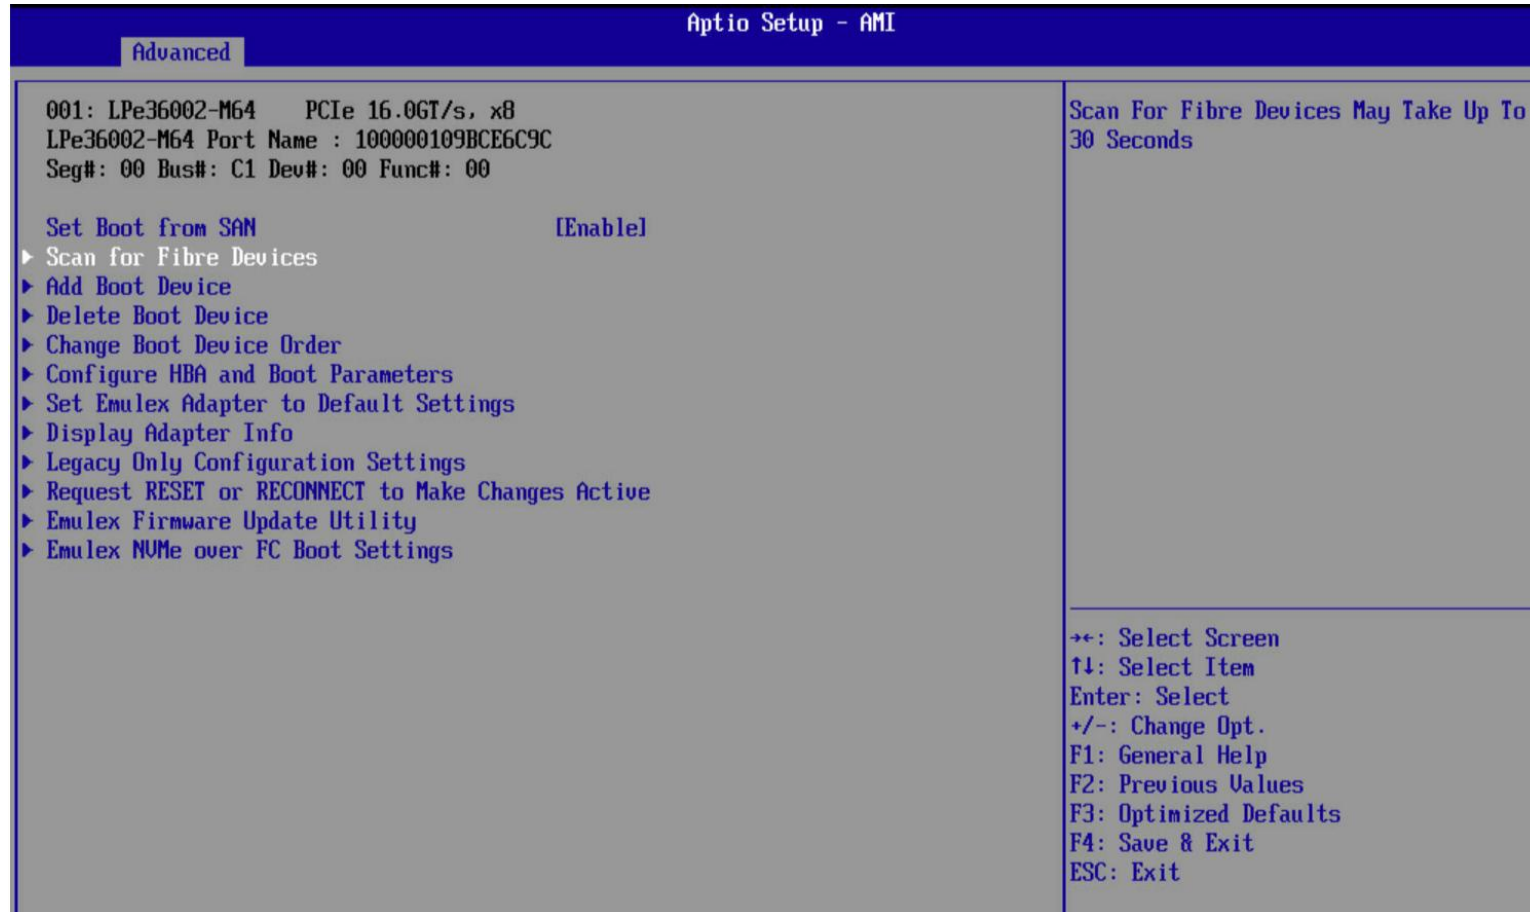


Check it has listed the storage

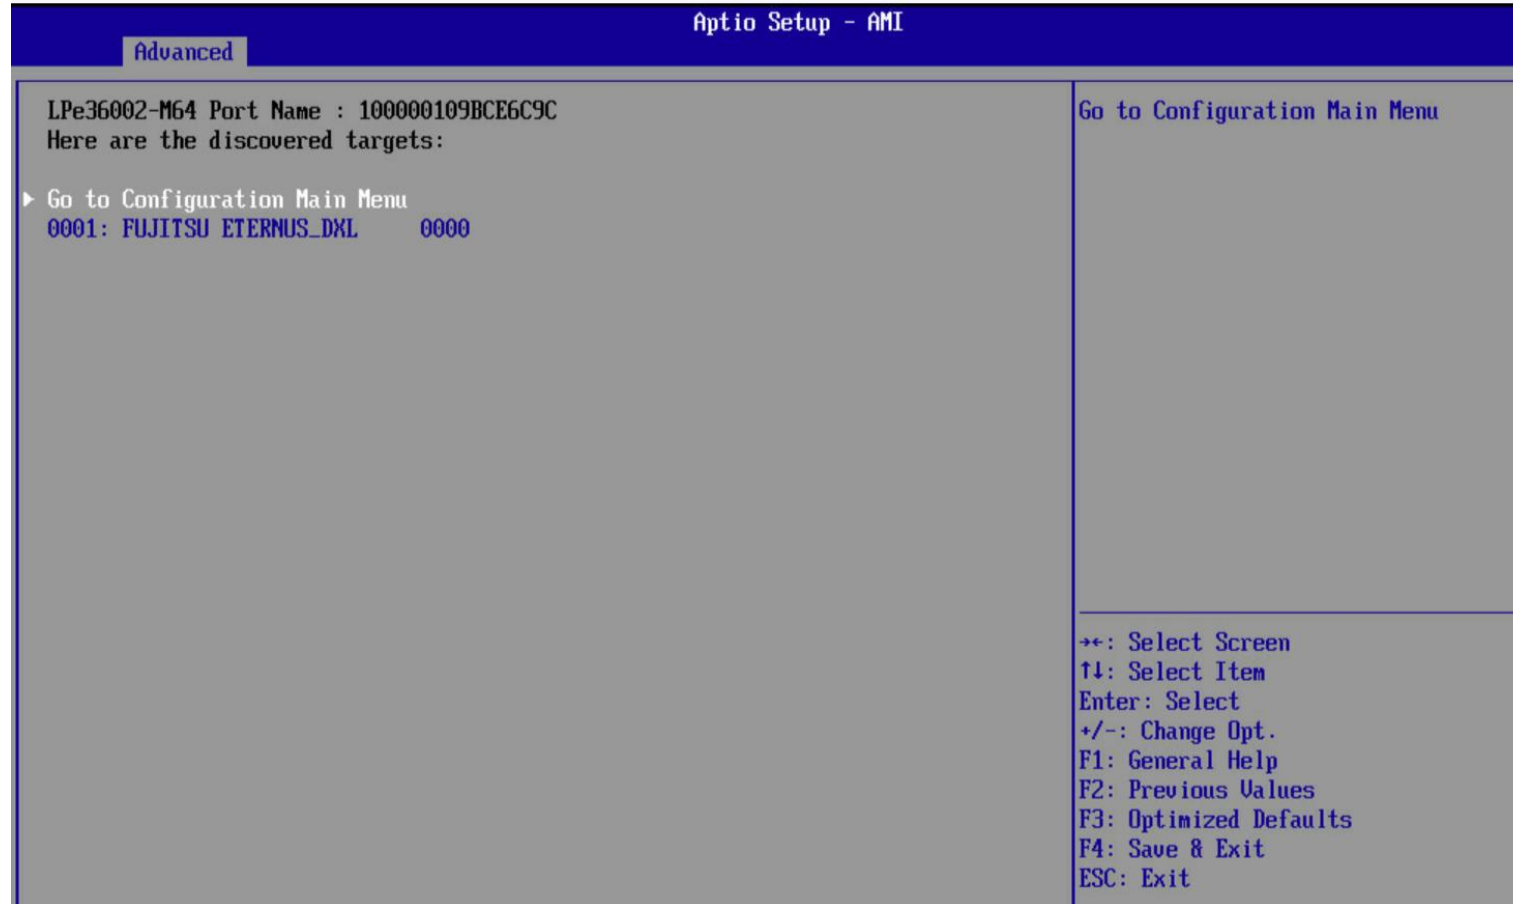


Delete Boot Device

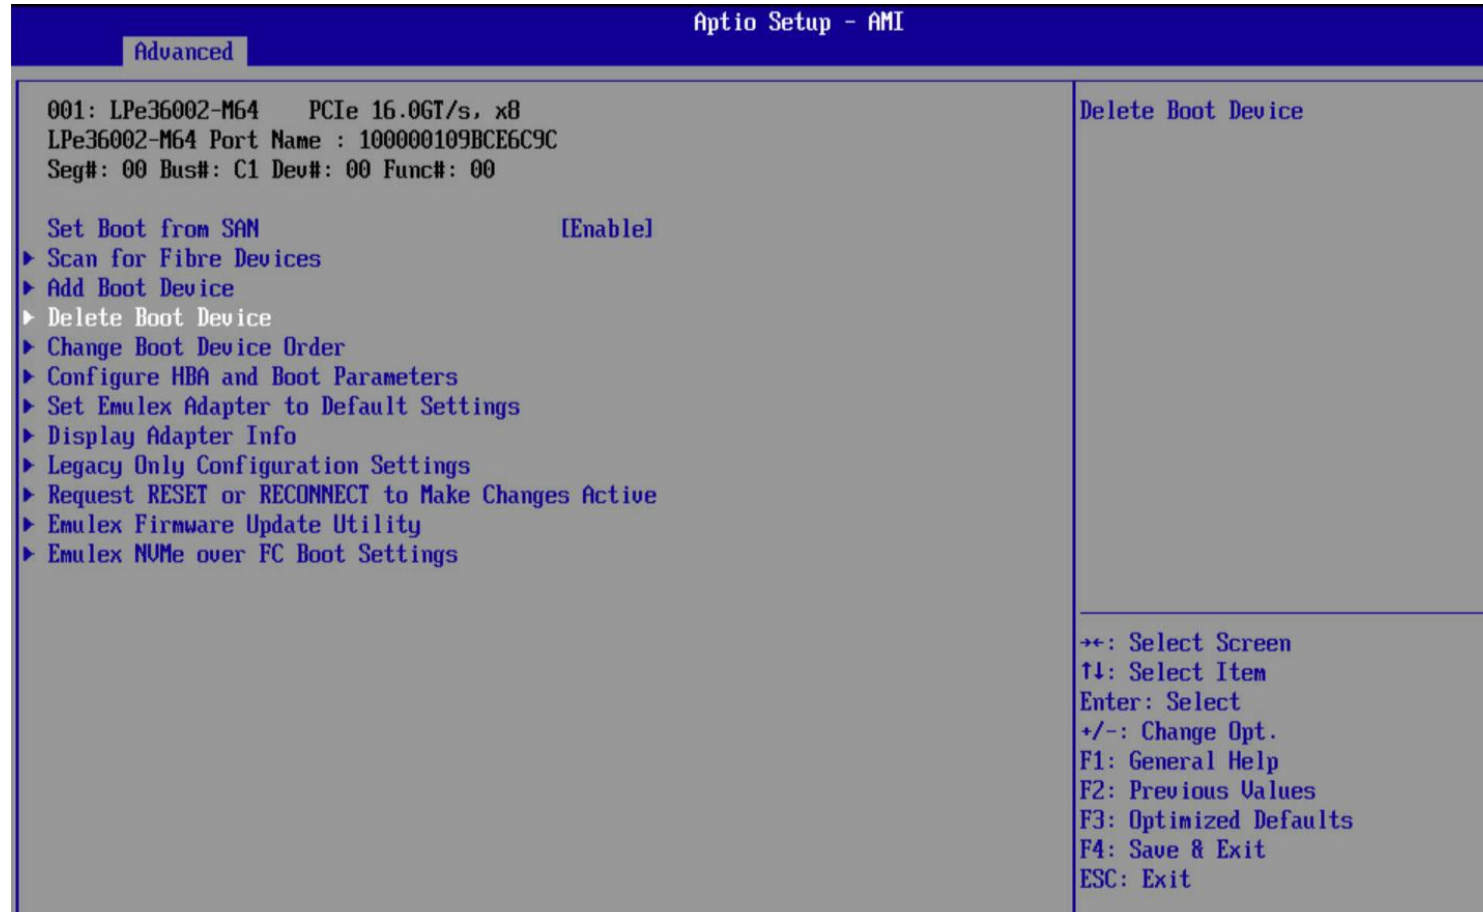


DELETE all device and Commit Changes

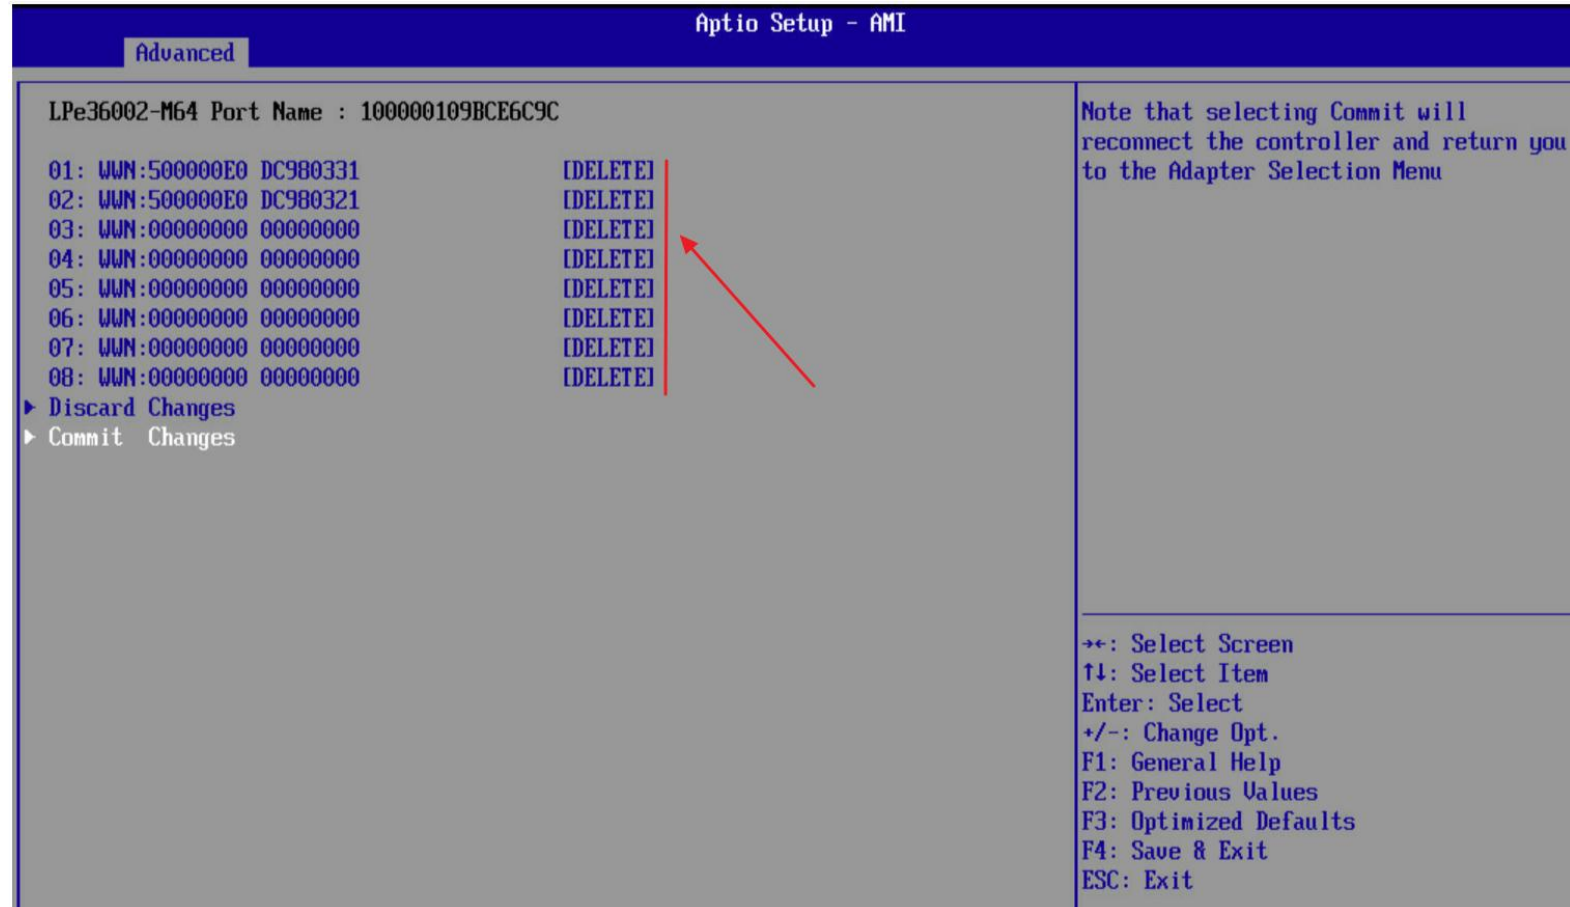


Add Boot Device

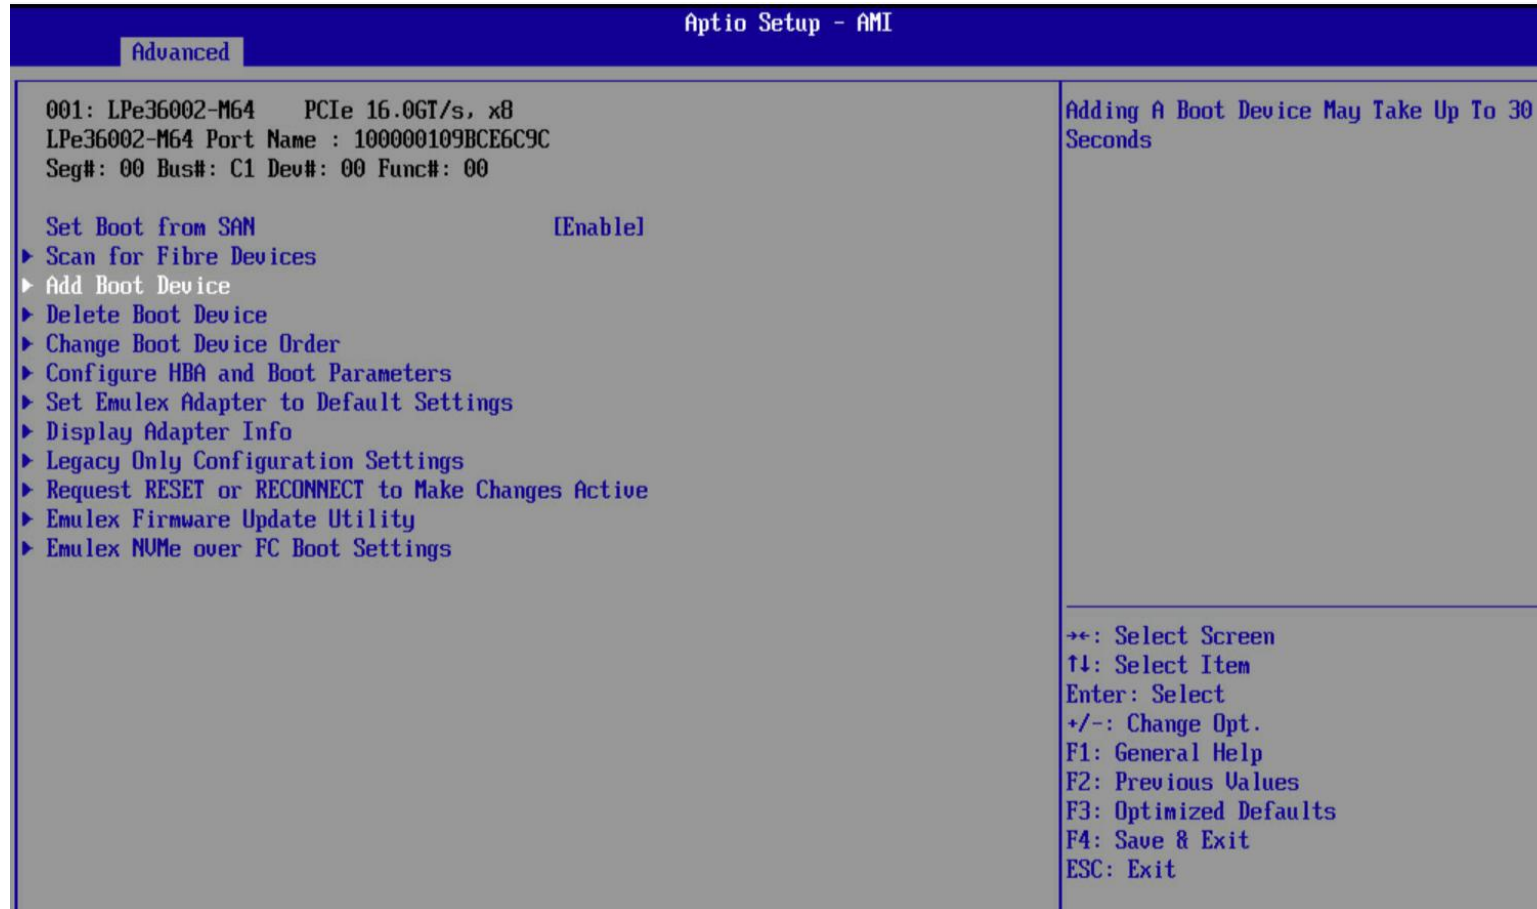


Choose the storage

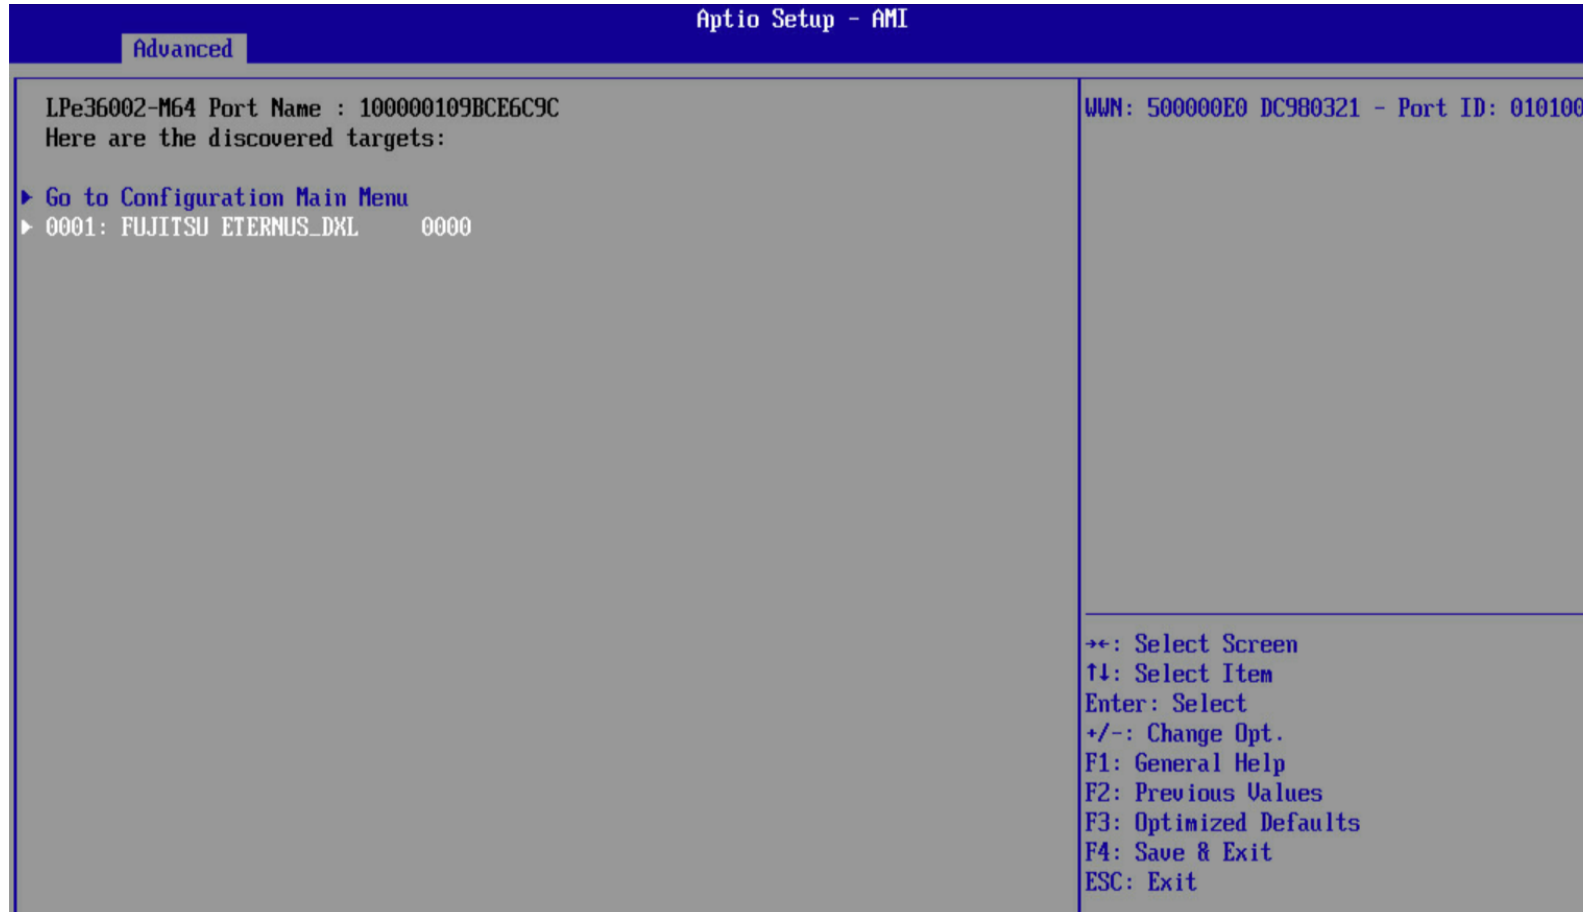


Choose “Peripheral dev”

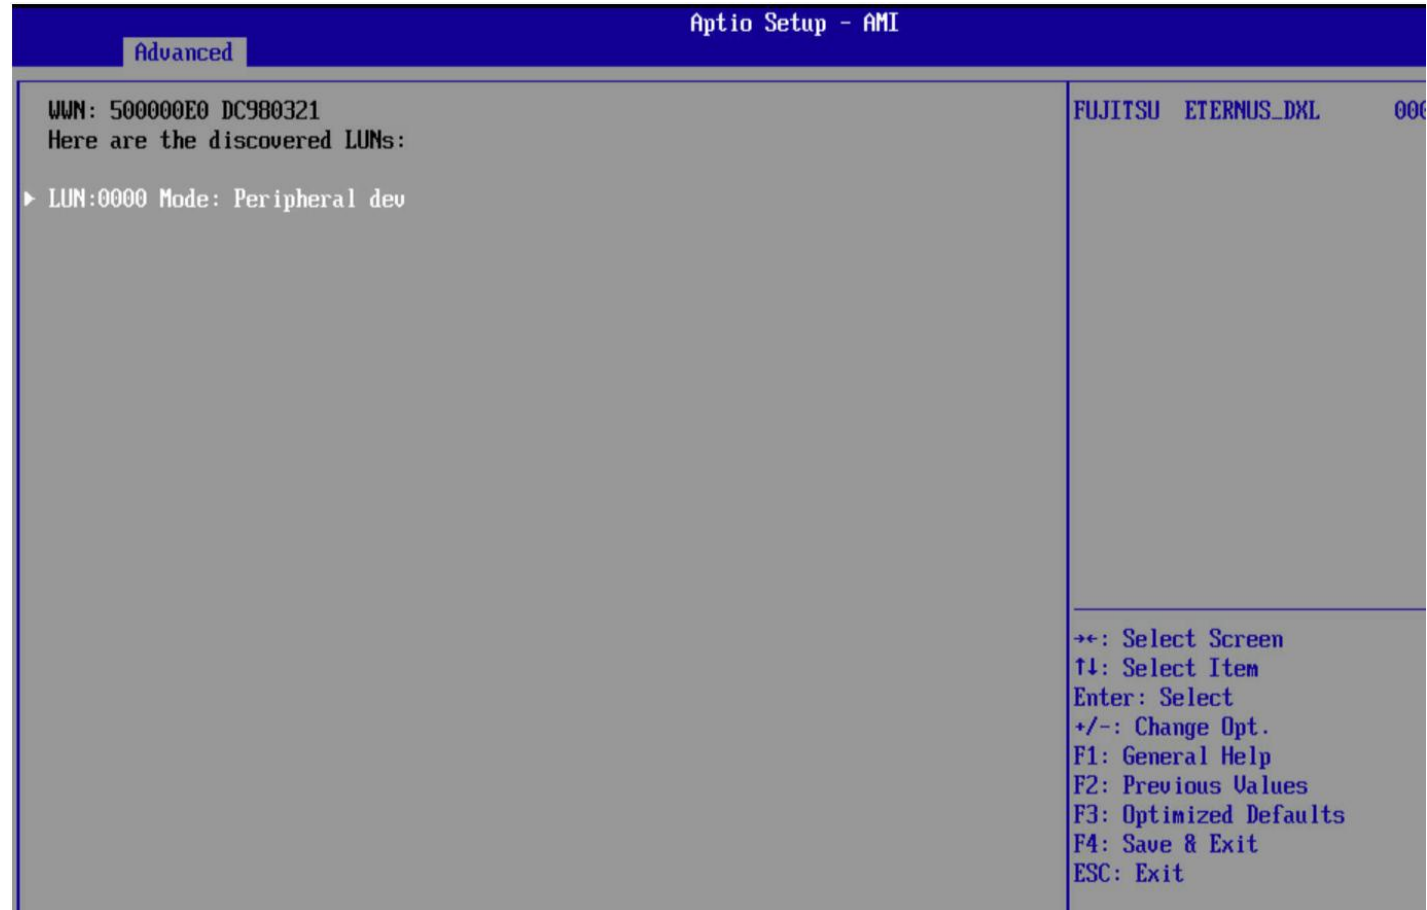


Press “Commit Changes”

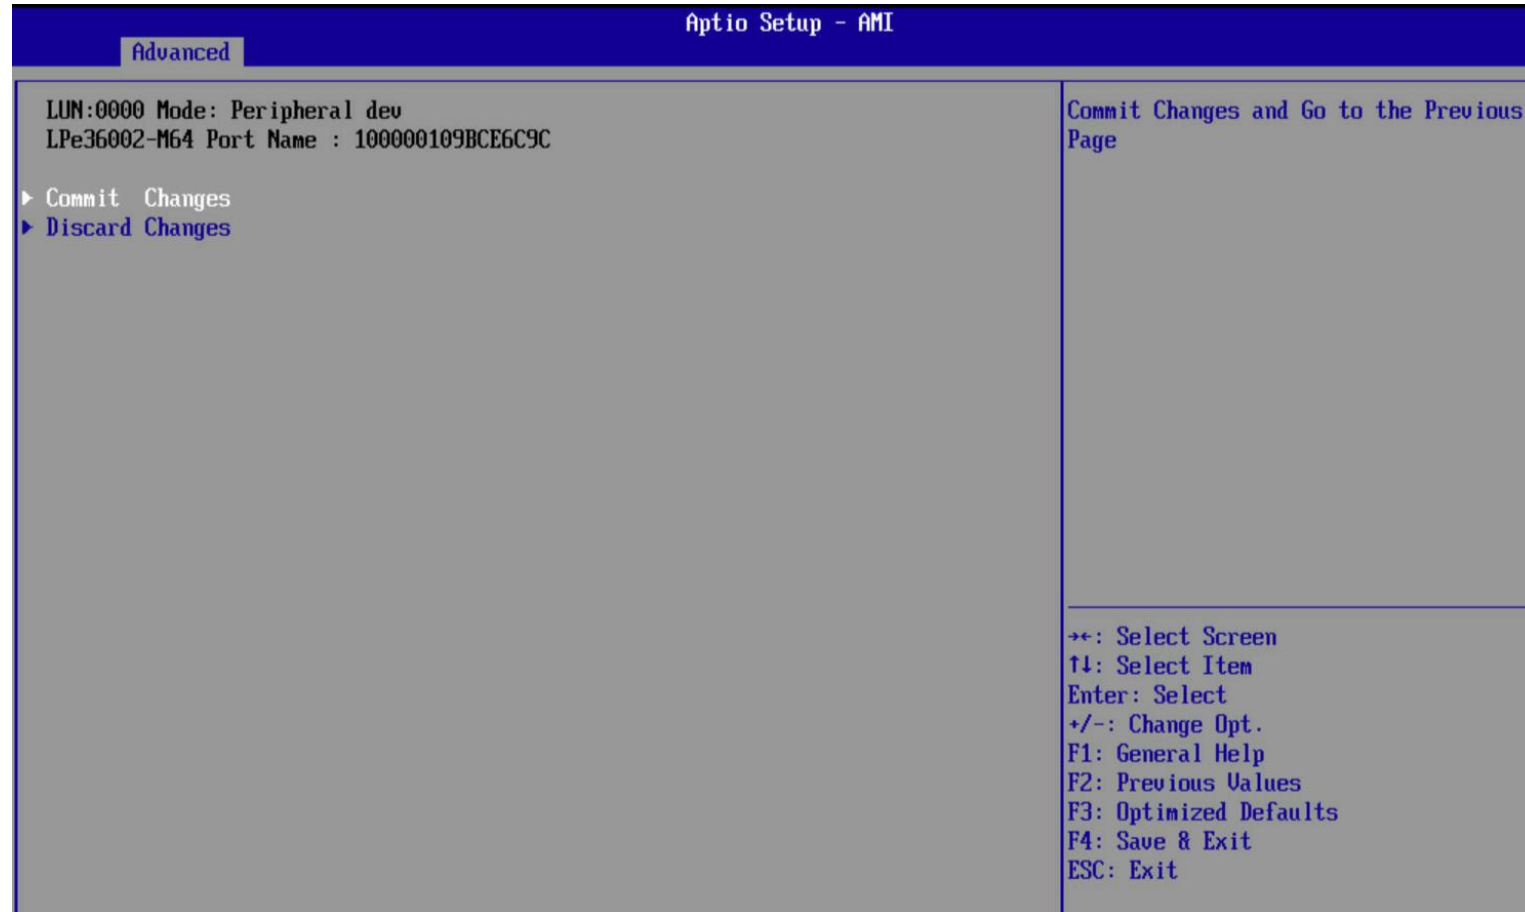

Change Boot Device Order

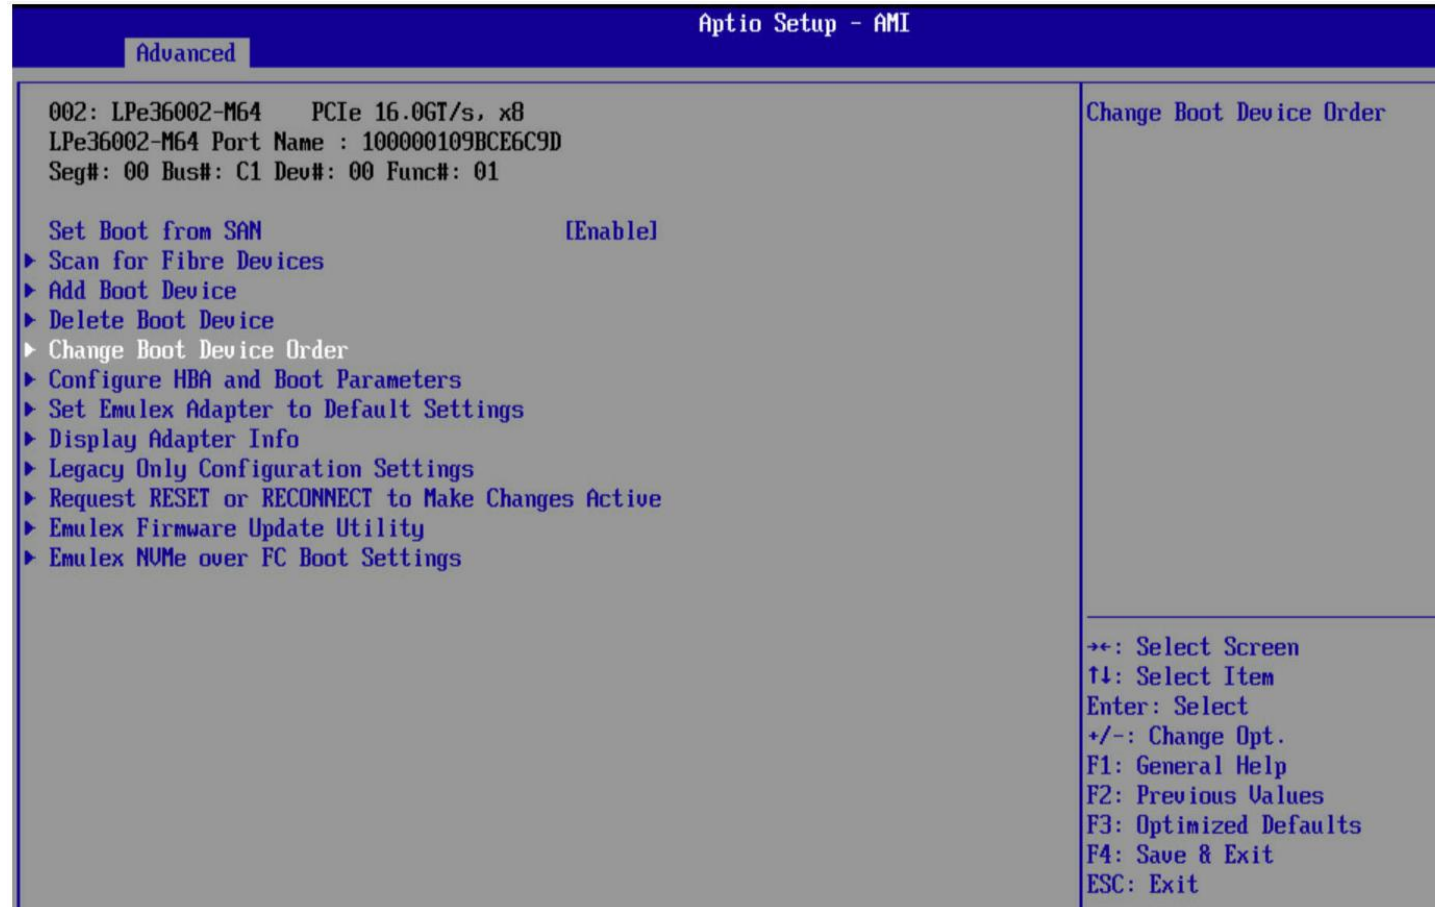

Check your WWN boot order listed in 01

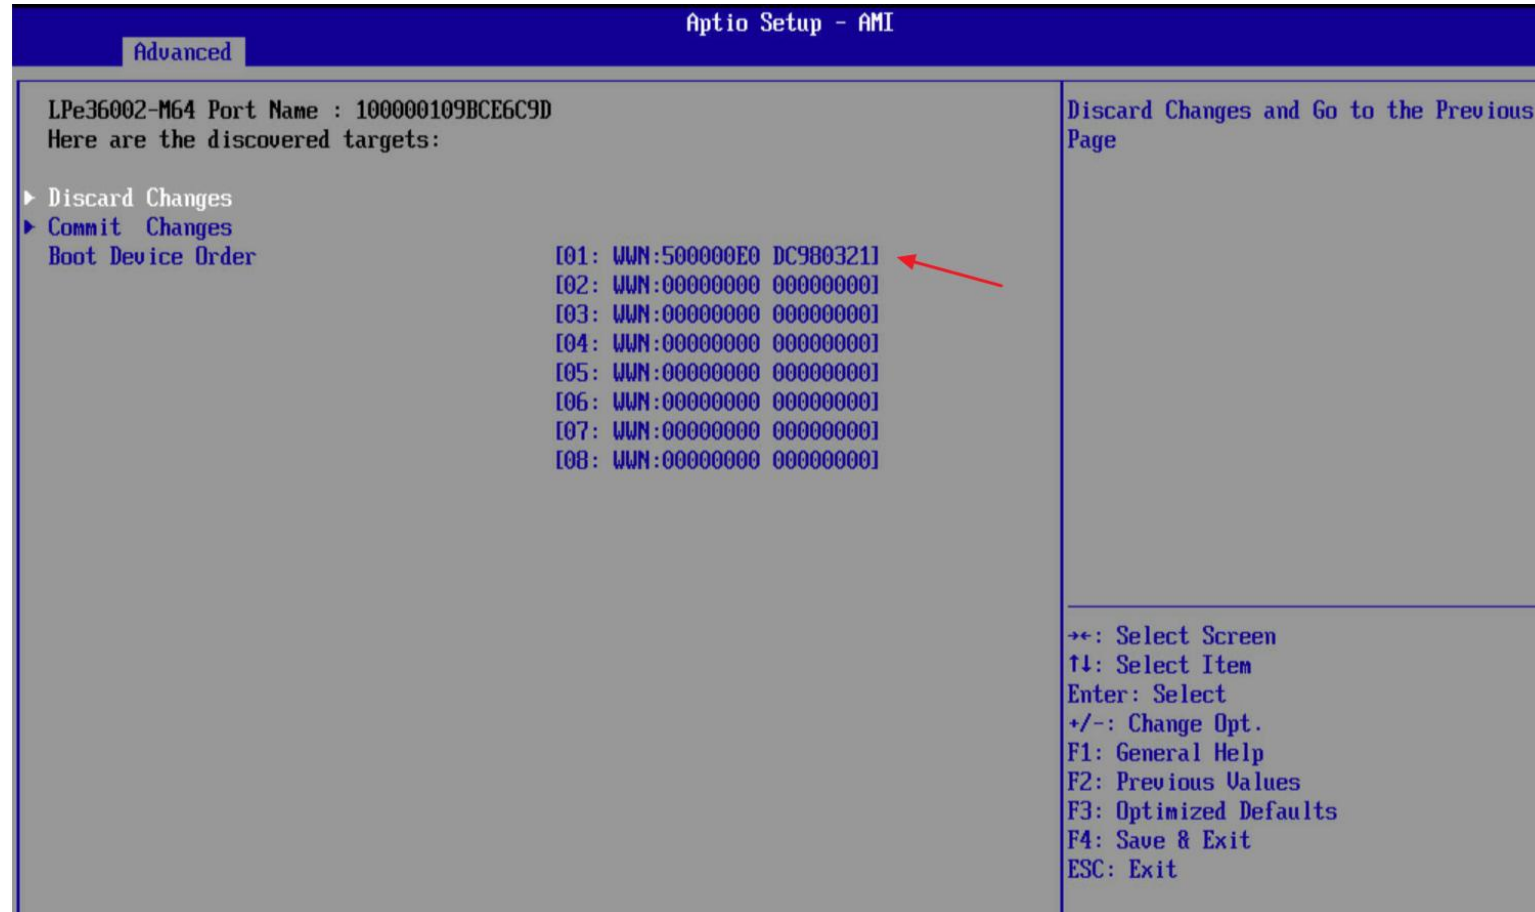

- Do the all steps for another FC port.

- After confirmed the setting, please install OS.
- Install FC card's driver.
- Update BIOS to the latest version (R0.75 or later)
- Run the cycles.