
SOO BIKE BACK WALL MOUNT


Z Install Mounting Hardware

a) Wood screws are the prelerred mounting hardware, Both wood screws must be screwed into vertical stud inside the wall.
b) Mark holes through rack mounting plate and drill 1/8" pilot holes install screws into vertical stud. Tighten lirmly.

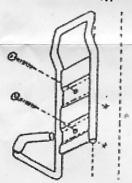

4 Securlity "Lock may "Lock may be used to secure


bike frame to rack.

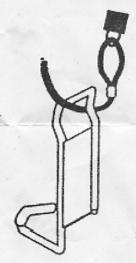

Detèrmine Mounting Height


a) Stand your longest bike on its rear tire with both tires against wall.
b) Mark wall where front tire touches wall.
c) Wheel hook must be installed 8" or more above the front tire mark or mark

allow rear tire to

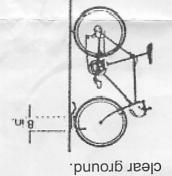

S Attach Cover Plate

a) Hang cover on top edge of rack mounting plate.
 b) Push cover bottom lirmly. Snap into place.

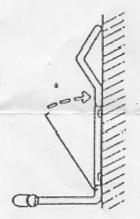

Important: Weight limit not to exceed 80 lbs.

ITW Brands A division of Illinois Tools Works Inc. 955 National Parkway, Suite 95500 Schaumburg, IL 60173 800-783-7725



© 2010 Illinois Tool Works Inc. Suu-183-1125

Racor and the Racor logo sre Registered www.racorinc.com
Trademarks of Illinois Tool Works Inc. Email: racorcs@itwbrands.com