
Illustrative. Northwater Fab, Cedar Reach, Valecrest. Front-end wafer fab. Not a survey and not a real building.

North utility chase
Gases, exhaust, and power. Pumps, chillers, and abatement are in the sub-fab below.


North is up

West chase
Utility

Cleanroom bay 1
Deposition, etch, strip, clean. D-01, E-01, S-01, C-01.

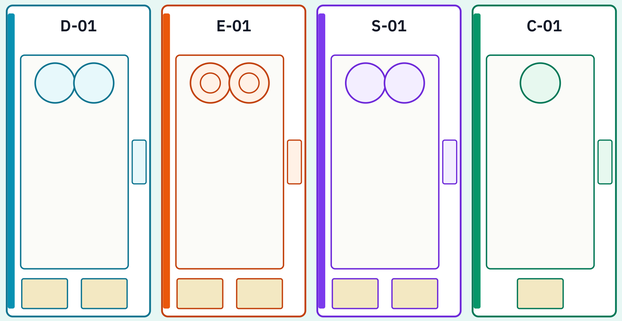


Cleanroom bay 2
Deposition, etch, strip, clean. D-02, E-02, S-02, C-02.

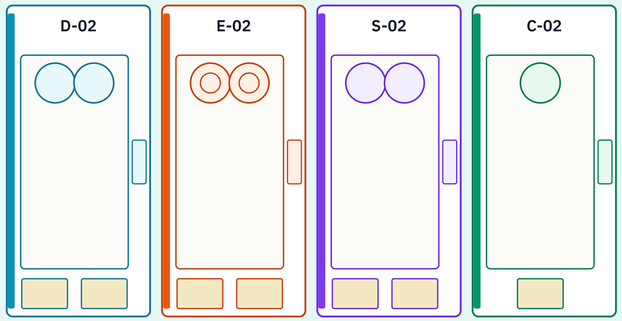


Stocker
Wafer carriers

Overhead wafer rail

Stocker
Wafer carriers

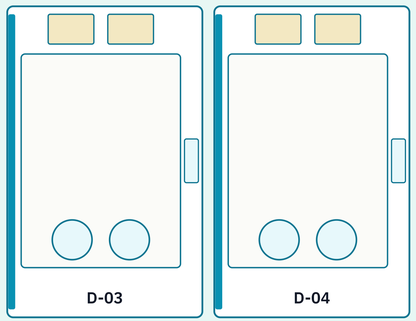

Cleanroom bay 3
Deposition. D-03, D-04.

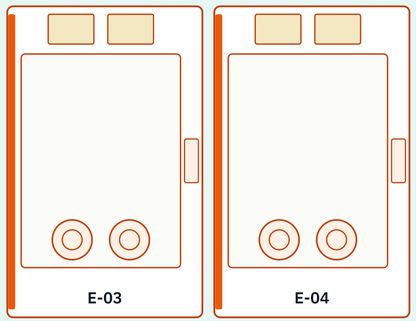

Cleanroom bay 4
Etch. E-03, E-04.

East chase
Utility

South utility chase


Wafer flow: Deposited wafers move to bay 1 for etch.

Wafer flow: Deposited wafers move to bay 2 for etch.


Wafer flow: Bay 1 wafers finish etch in bay 4.

Wafer flow: Bay 2 wafers finish etch in bay 4.


Deposition
MPS-D7. Plan view. Two chambers. Thin film.

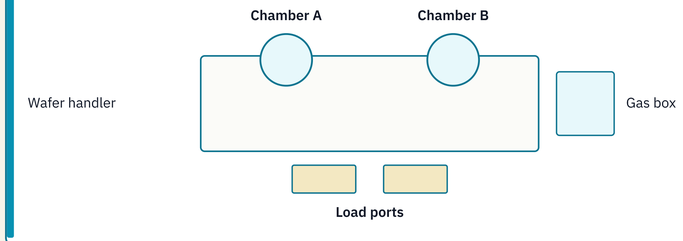


Etch
MPS-E7. Plan view. The inner ring is the edge ring.

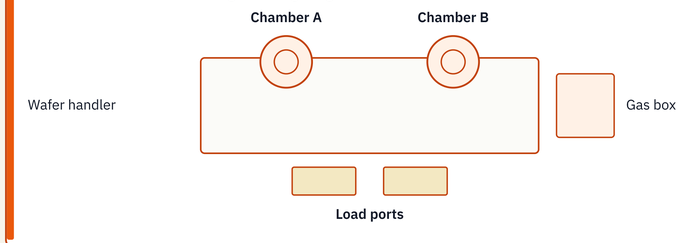

Strip
MPS-S7. Plan view. Two chambers. Photoresist strip.

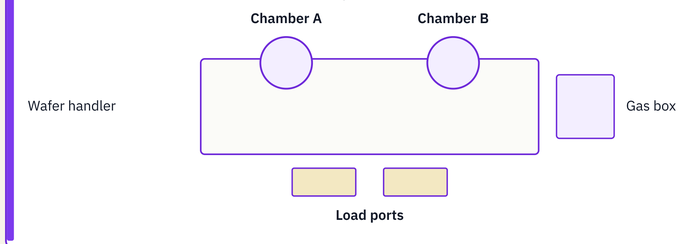

Clean
MPS-C7. Plan view. One chamber. Single wafer.

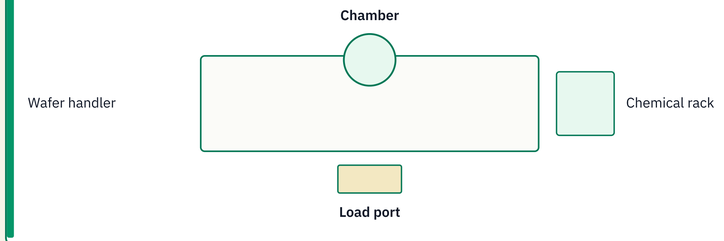

LEGEND

- Cleanroom bay. Filtered air.
- Pilot line bay.
- Utility chase. Sub-fab is below.
- Overhead rail and stocker.
- Deposition tool. MPS-D7.
- Etch tool. MPS-E7.
- Strip tool. MPS-S7.
- Clean tool. MPS-C7.

MERIDIAN PRECISION SYSTEMS
Quality and Engineering Issue Resolution

Northwater Fab floor plan
G7a · Issue G7 Version v1.0 Date 2026-10-14
Prepared by StatusNeo
(c) 2026 Bryan C. Weis and Common Consulting Company