


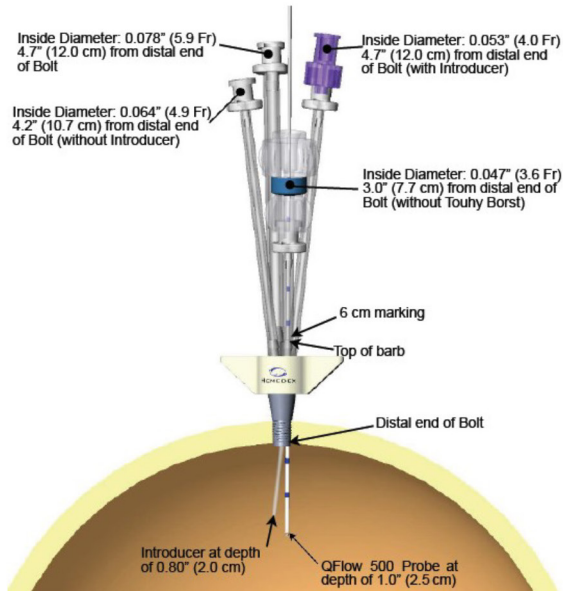

- Insert the QFlow 500™ Perfusion Probe through the compression fitting typically on the shortest pigtail and through the Cranial Bolt into the tissue **2.5 to 3 cm** below the Dura.
- The **6 cm** marking should be visible **above** the barb on the top of the bolt.
- The insertion depth can be gauged by the cm markings on the probe.
- Turn the compression fitting cap clockwise to secure the probe.

Refer to product IFU for further instructions.