

4.3 Data Transfer Modes between I/O Interfaces and Memory 1. Programmed I/O (software polling): It is the responsibility of the processor a) periodically to check the status of the I/O interface (ready/busy, complete) b) to perform the data transfer between memory (registers) and I/O interface. Read from the I/O Interface: Write to the I/O Interface: The CPU runs a program to check the If the CPU has a data to send, it status of the I/O interface. checks the status of the I/O interface. If the I/O interface If the I/O interface Read status Read status has received data has finished the from a peripheral it previous operation it sets the "COMPLETE" sets the "READY" Data Complete flag. flag. Ready? The CPU reads data The CPU reads data Yes Yes from the I/O from the memory and Read data interface and writes writes it to the I/O Read data from I/O to the memory. interface. from memory interface Write data to Write data to I/O Interface memory @⊕⊛⊜

Computer Architecture

1. Programmed I/O cont'd:

Disadvantage:

The main disadvantage of this technique is the busy-waiting of the CPU while checking the status of the I/O units.

During checking the status, the CPU cannot run other programs.

Data transfer is also performed by the CPU (The data flows over the CPU).

Advantage:

This technique is simple. Additional hardware units are not necessary.

When the CPU does not have any other task than performing I/O operations or

if the CPU cannot execute another program without performing the I/O operation, then busy-waiting is not a problem.

For such systems programmed I/O is a simple and suitable technique for I/O operations.

www.faculty.itu.edu.tr/buzluca



Computer Architecture

2. Interrupt-Driven I/O:

In the interrupt-driven technique the CPU sets the I/O interface to send an interrupt request if it is ready.

Advantage: The CPU does not need to check the status continuously. The "busy-waiting" problem does not exist.

The CPU can run other programs while the I/O interface is receiving data from or sending to a peripheral. $\underline{\hspace{1cm}}$

The I/O interface will then interrupt the processor to request service when it is ready to exchange data with the CPU.

The processor interrupts its current program, runs the interrupt service routine in which the data transfer is executed, and then resumes its former processing.

In this technique the CPU does not check the status but it is still the responsibility of the processor to perform the data transfer.

Disadvantage: Interrupt processing has its own overhead (saving return address, program status, registers and performing some other operations).

This operations are performed in the interrupt cycle for each interrupt; and while returning return-address and program status are read.

Interrupt-driven I/O is not suitable for applications where I/O operations are performed very frequently.

Interrupts are explained in Section 5.

www.faculty.itu.edu.tr/buzluca



2013-2014 Dr. Feza BUZLUCA 4.7

Computer Architecture

3. Direct Memory Access (DMA):

In the programmed and interrupt-driven techniques the CPU is responsible to transfer data between memory and I/O interfaces.

The CPU must execute a number of instructions for each I/O transfer.

The direct memory access (DMA) technique involves an additional hardware module on the system bus called the DMA controller (DMAC).

The DMAC is capable of acting as the CPU and of taking over control of the system bus from the processor.

When the CPU needs to read or write a block of data, it initializes the DMAC by sending the necessary information (address, size, transfer mode etc.).

So, it has delegated the I/O operation to the DMAC.

The CPU can continue with its other programs during the transfer of data. The data do not flow over the CPU.

The DMAC uses the system bus only when the processor does not need it, or it must force the processor to suspend the bus operations temporarily.


The DMA technique is suitable for applications where large volumes of data are transferred and I/O operations are performed very frequently.


An additional hardware module (DMAC) is necessary.


DMA is explained in Section 6.


www.faculty.itu.edu.tr/buzluca




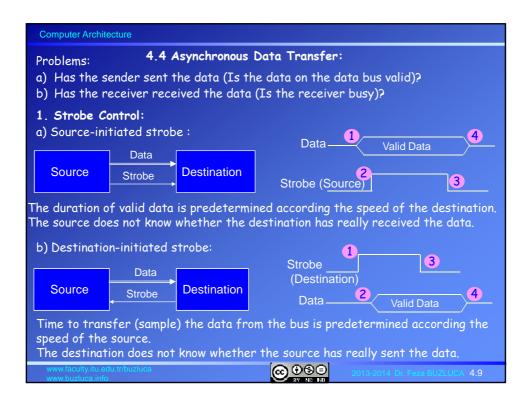

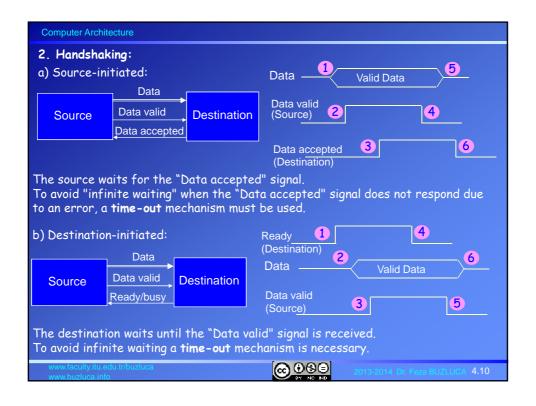

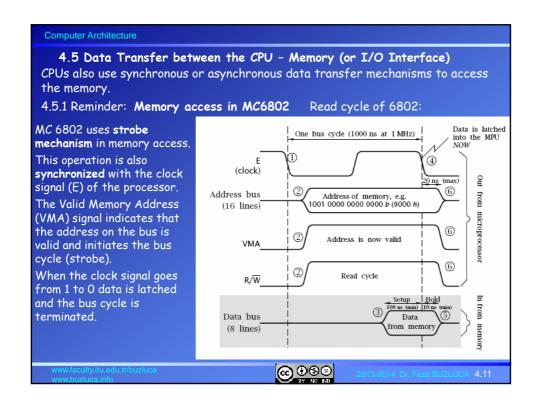

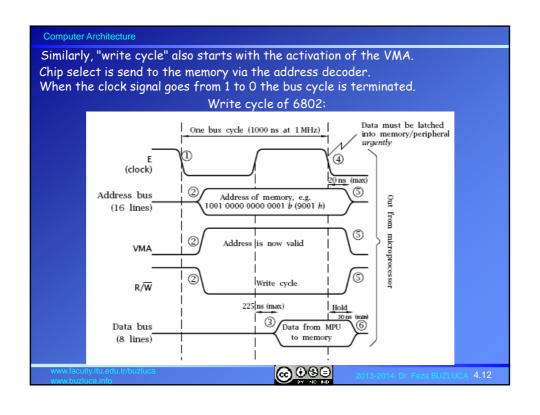

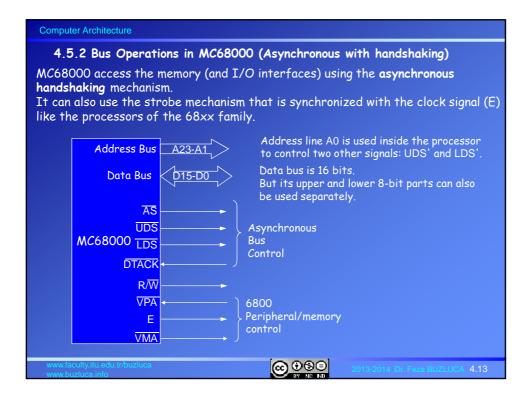

Computer Architecture

Control Signals of MC68000 used for memory access

- AS' (Address Strobe): It is asserted (active low) by the processor to indicate that a valid memory address exists on the address bus.
 It starts the bus cycle. First handshaking signal.
- UDS' (Upper Data Strobe) and LDS' (Lower Data Strobe): They determine the size of the data being accessed (word or byte).

Word: Both are asserted (low).

Byte (odd address): LDS' asserted, D0-D7 used


Byte (even address): UDS' asserted, D8-D15 used


- DTACK' (Data Transfer Acknowledge): Handshaking input pin of 68000
 Handshake signal generated by the device (memory/interface) being
 accessed indicates that the data bus contents are valid and that the 68000
 may proceed with the data transfer.
- VPA' (Valid Peripheral Address): This input informs the 68k that it has addressed a 6800 peripheral and that the data transfer should be synchronized with the E clock


If it is asserted during a bus operation (AS' is active) 68000 acts like 68xx and uses VMA and E signals to access the peripheral


www.faculty.itu.edu.tr/buzluc




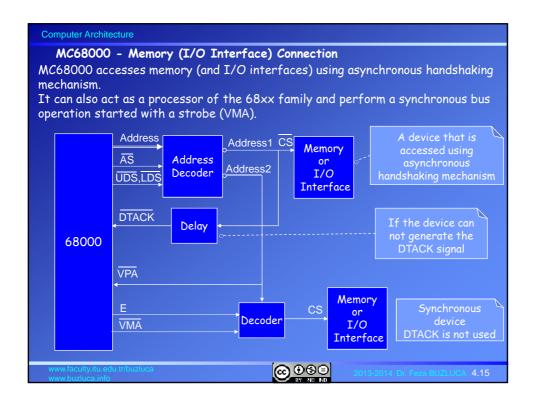


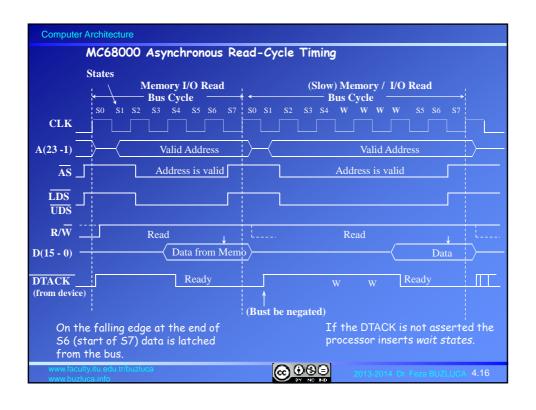


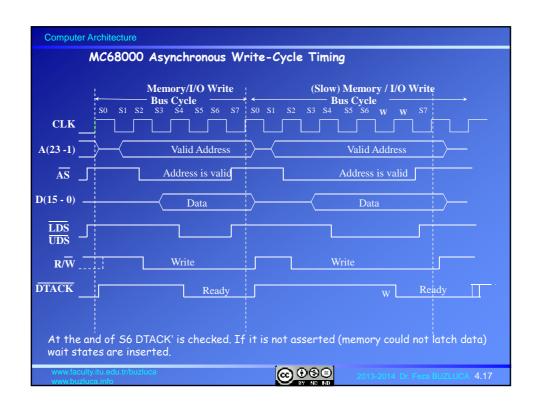

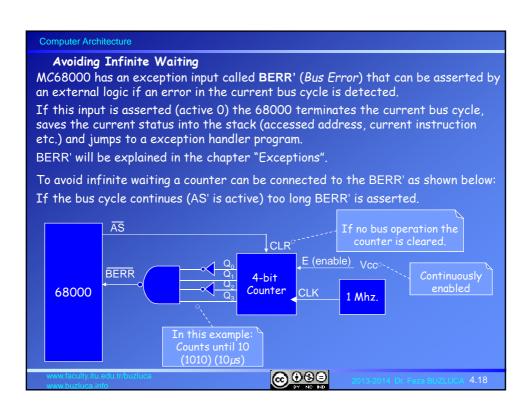

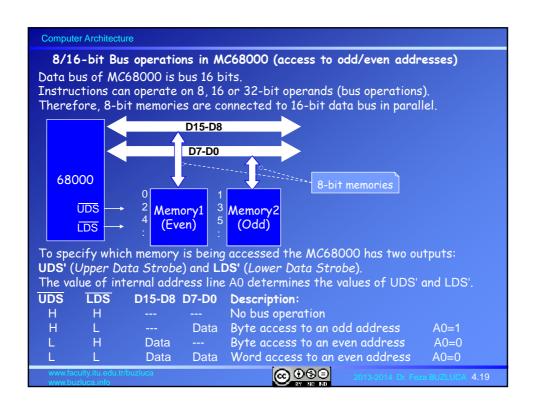

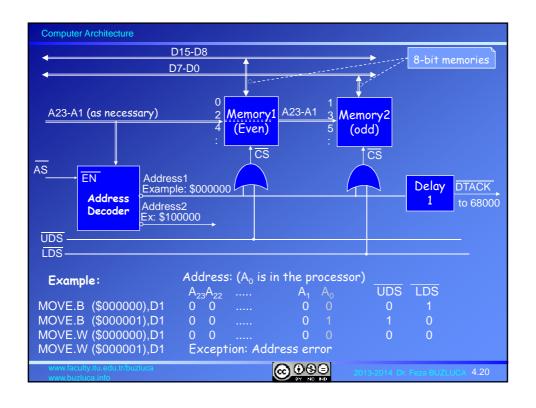

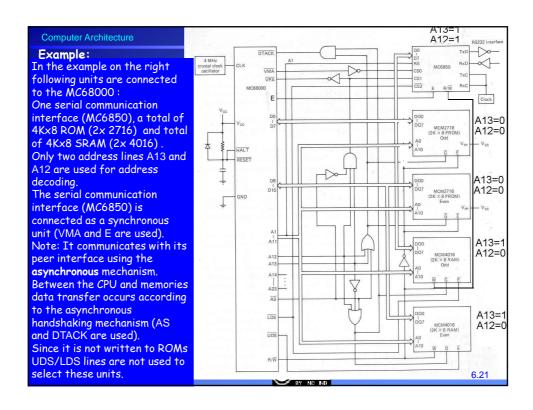

Computer Architecture

Function Code Outputs in MC68000

MC68000 has 3 outputs that indicate the type of the operations:

Function Codes Outputs: FC2, FC1, FC0.

These outputs get valid values in each bus cycle (when AS' is asserted) and indicate the type of the operation.

FC2 FC1 FC0			Description:
0	0	0	Undefined (Reserved)
0	0	1	User Mode, Data access (User Data)
0	1	0	User Mode, Program access (User Program)
0	1	1	Undefined (Reserved)
1	0	0	Undefined (Reserved)
1	0	1	Supervisor Mode, Data access (Supervisor Data)
1	1	0	Supervisor Mode, Program access (Supervisor Program)
1	1	1	Interrupt Acknowledge

These outputs can be used in address decoding.

- Access to specific devices and memory addresses can be restricted. These addresses can be accessed only in supervisor mode.
- Separate memory spaces can be created for programs and data.

www.faculty.itu.edu.tr/buzluca



