



MITER CORNER CAM JIG — SHEET 1 of 3

Print at 100% / "Actual size" (no "fit to page"). Check the square below before cutting.



CALIBRATION: this square must measure exactly 1" × 1"

and the bar below exactly 4". If not, reprint with scaling off.




CAMS — make 2 from 1/2" Baltic birch (or any ply ≥ 1/8" thinner than your frame stock)

Disk: R 1-1/2", pivot offset 3/8" from disk centre → 3/4" of clamping travel. Handle 1" wide. Solid line = cut, circle = drill.


Cam B is the same part flipped over (mirror image) so both cams pull their piece TOWARD the corner.

clamp

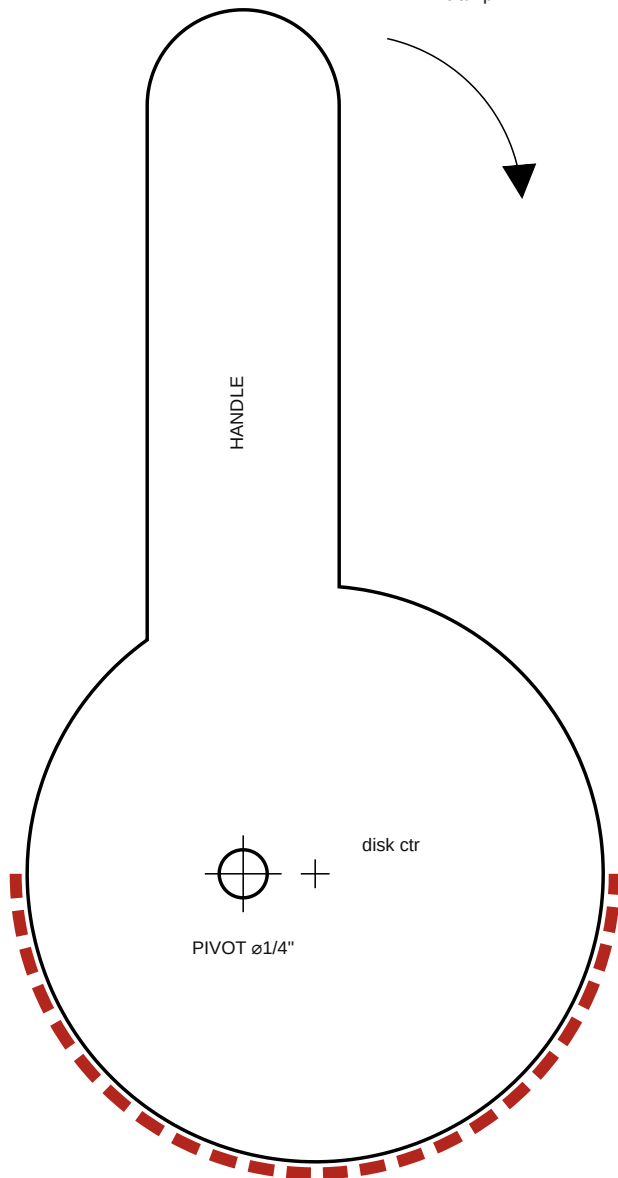

GRIP EDGE — glue 80-grit

CAM A

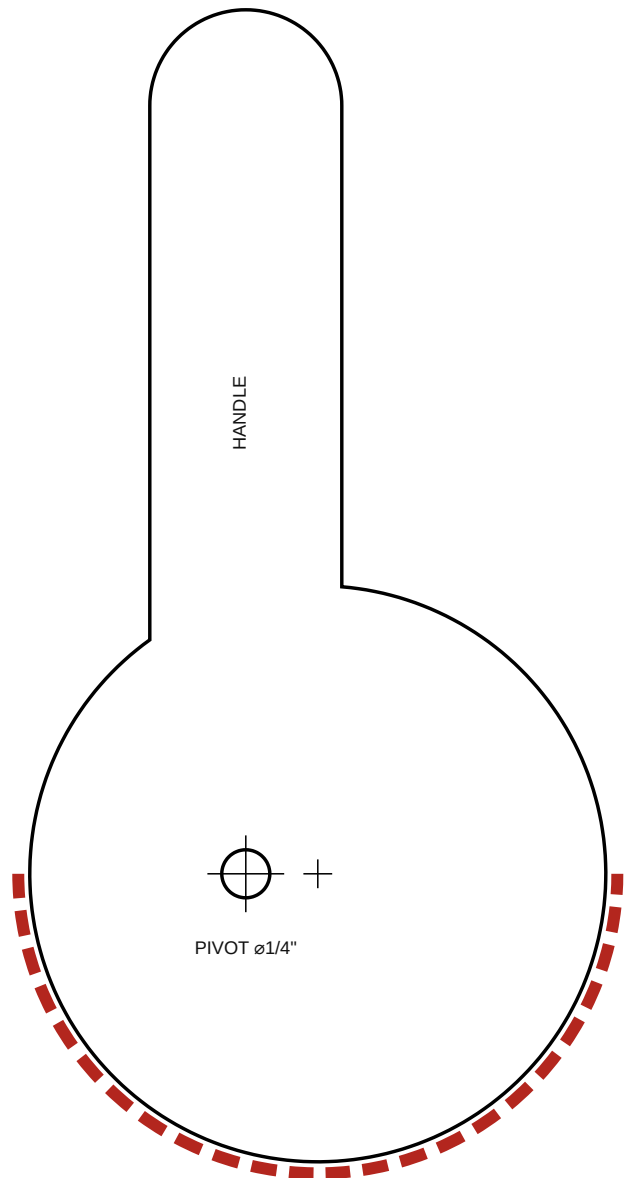


GRIP EDGE — glue 80-grit

CAM B (install face-down)

Tip: spray-mount this sheet to the ply, drill the pivot holes first, then bandsaw/jigsaw just outside the line and sand to it.


SHEET 2 of 3 — FULL-SIZE CORNER LAYOUT (1:1)

Tape to the base with the two "base edge" lines on the base edges. Set fences to the hatched areas; check with a framing square. Drill the relief hole after the fences are on.

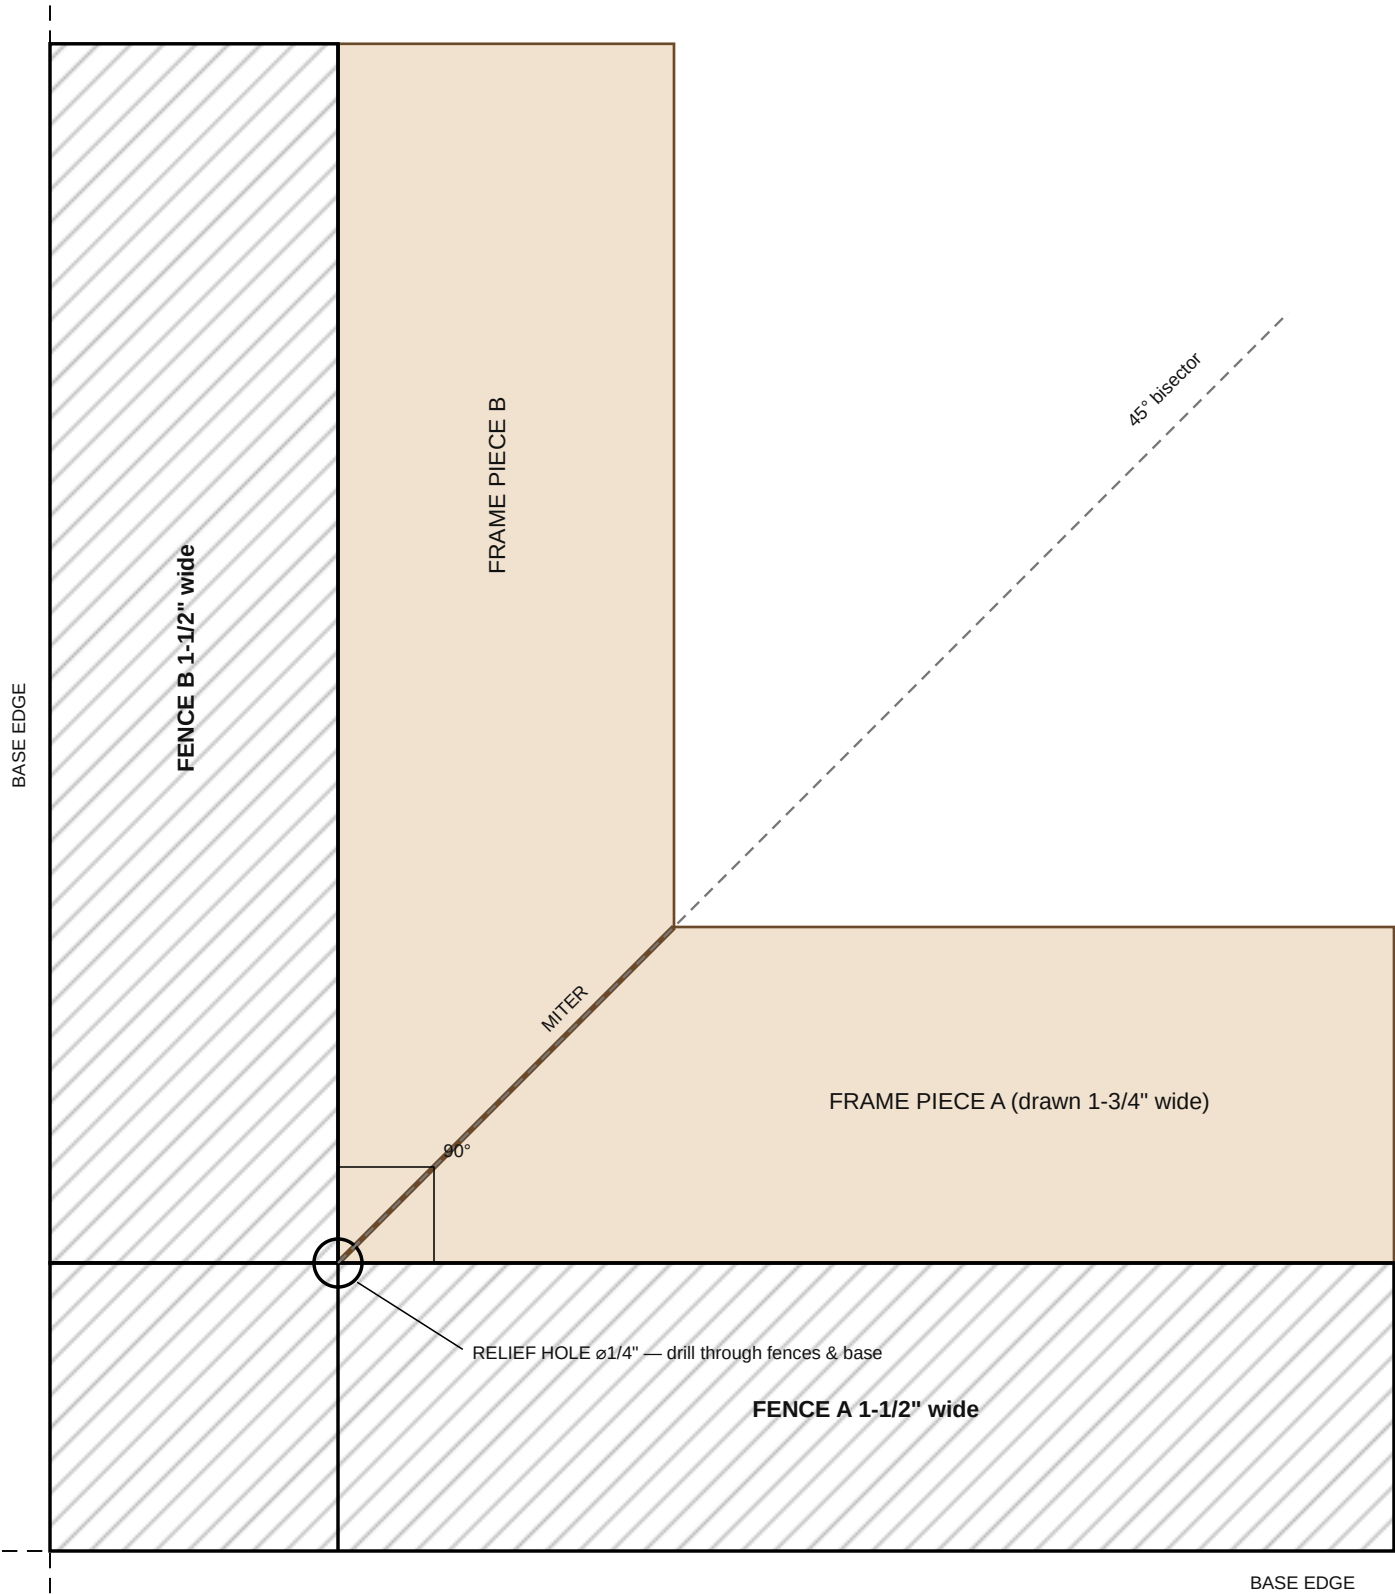

SHEET 3 of 3 — PLAN VIEW & CUT LIST

NOT TO SCALE — use the dimensions. Stock shown at 1-3/4" wide; cam pivots are located by dry-fit (step 4).

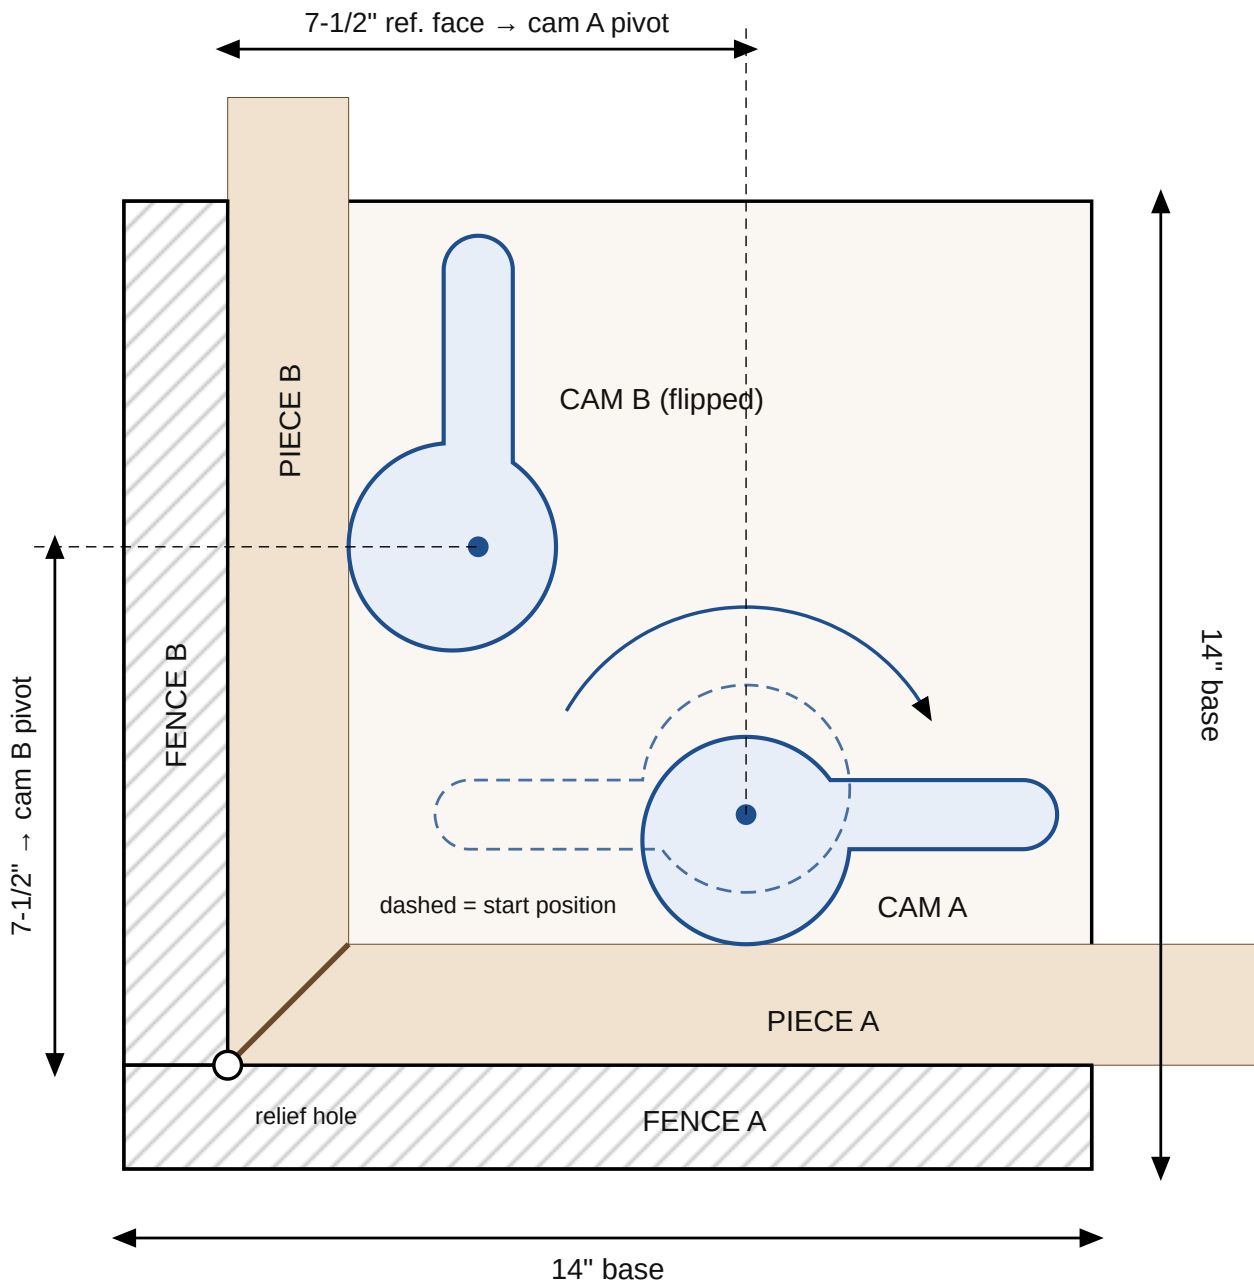

CUT LIST

Base 1 3/4" plywood 14" × 14" (check it is flat)
 Fence A 1 hardwood/ply strip 1-1/2" × 14", height ≤ frame thickness
 Fence B 1 hardwood/ply strip 1-1/2" × 12-1/2", same height
 Cam 2 1/2" Baltic birch from Sheet 1
 Hardware 2 × #10 × 1-1/4" pan-head screws + 2 fender washers (cam pivots); 8 × #8 × 1-1/4" screws + glue (fences);
 80-grit PSA sandpaper strip (cam grip edges); paste wax (fence faces).

IF A PLYWOOD GUSSET IS ALREADY ON THE UNDERSIDE

Dry-fit a corner on the base, trace the gusset, and cut that pocket out of the base (jigsaw) so the frame lies flat on the base.
 The cams bear on the frame edges above the pocket, so they still work.