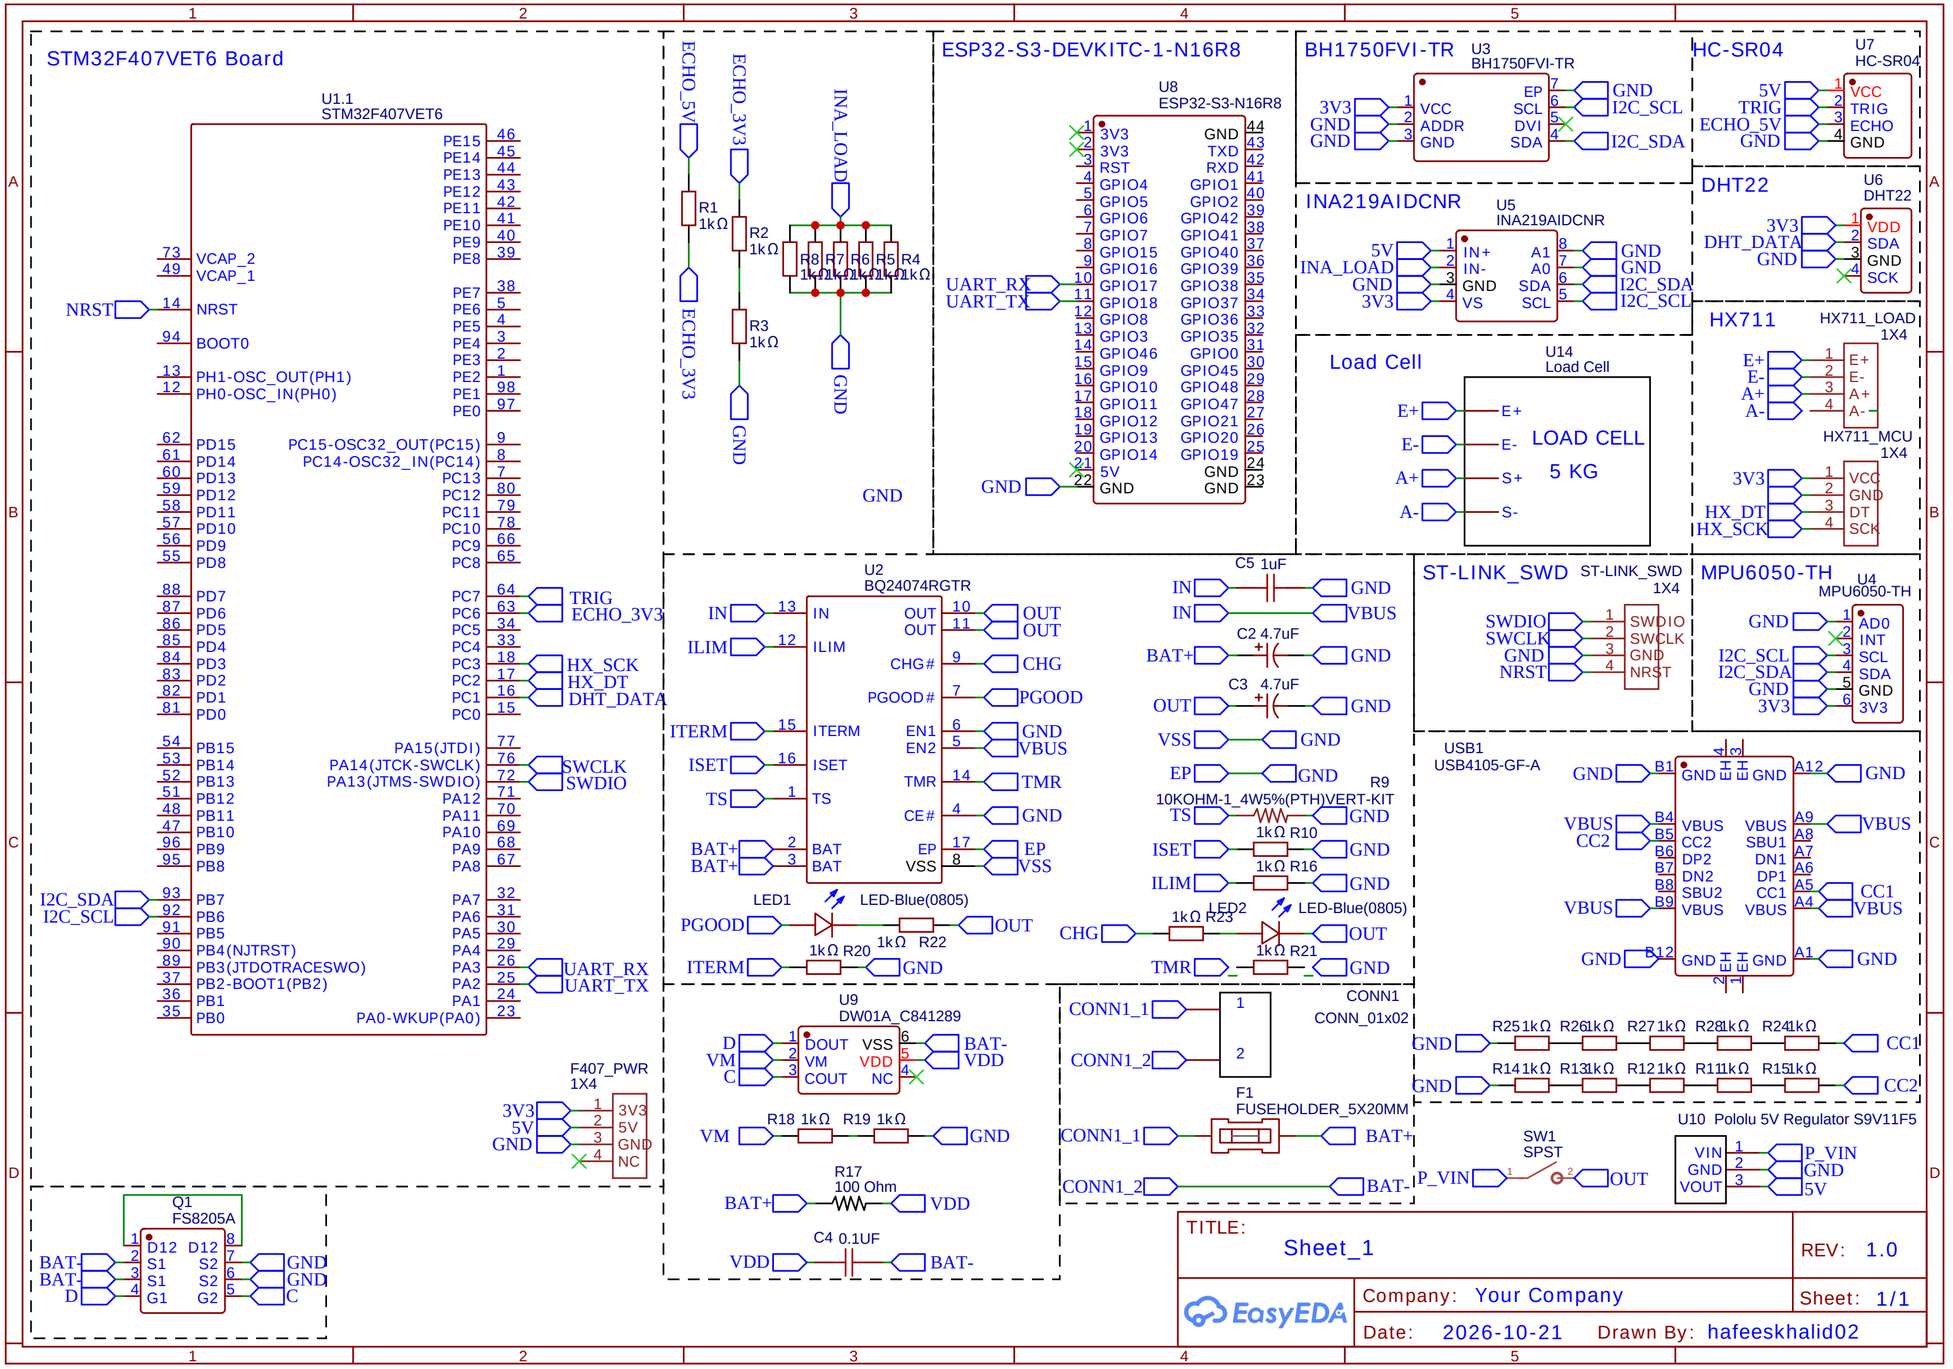


BH1750 module stand-in (C78960 symbol only): VCC=3V3, GND=GND, ADDR=GND (0x23), SCL=PB6, SDA=PB7, DVI=NC. Use a 1x5 header, not this footprint, for the PCB.

INA219 chip symbol (INA219AIDCNR) used only as a stand-in for the module. Real part: INA219 module with header. VS=3V3, GND=GND, SCL=PB6, SDA=PB7, A0=A1=GND (0x40), IN+/IN- to the load. Use a header footprint for the PCB.

DHT22 module stand-in (bare-sensor symbol): VCC=3V3, DATA=PC1 (pull-up on module), GND=GND, NC pin=no-connect. Check pin order on the real 3-pin module.

R2+R3 in series = 2k (Echo divider). R4-R8 in parallel = 200 ohm (INA219 test load)