

Device Status Tool



Summary

The Device Status Tool allows clients of HP Access Control to determine the status of devices on their network. The tool is a command line program that is designed to run and, get a “solution” status from each device listed (in an input file) to capture the following information:

- Device IP Address
- HP AC Pull Print Button URI
 - with the full post showing if the printer sends hostname, or IP and hostname
- Tracking URI
- License URI
- Authentication URI
- Version number of the HP AC Agent
- HP AC Agent license status
 - **Yes**, indicates device is licensed
 - **No**, indicates device is not licensed.

An input file is required for the Device Status Tool to identify the IP addresses of the devices to check. Multiple IP addresses can be checked to a maximum of 20 devices at a time.

The input file can be either a **.txt** file or a **.csv** file. If the file extension is CSV, a CSV parser will be used to find the IP address from the column header IPv4 address. Any other input file extension will be considered as a simple txt file with one (1) device IP on each line.


IMPORTANT: In order for the tool to retrieve the status of devices, the option “PJM Drive Access” must be enabled in the device EWS > Security tab > File System Access Settings section.

How to use the device status tool

Copy the **devicestatus.exe** along with the **OXPDLib-1.7.3.dll** and the **WebServicesSDKLib.dll** into a directory that has write access.

To create an input file:

1. Create a **.txt** file that contains a list of device IP addresses.

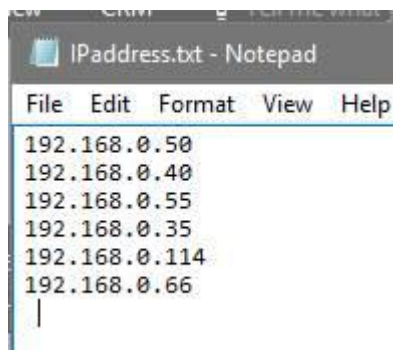


IMPORTANT: Be sure to enter each IP address on a separate line. And there must be an empty line at the end of the file.

NOTE: Alternatively, you can use an export from WJA as your input (text) file.

2. Run a command prompt as administrator and use the following syntax:

```
Devicestatus.exe <ip_filename.txt> <printerpassword> <snmp Get password> >
<result.csv>
```

NOTE: If the snmp Get password parameter is omitted, "public" will be used)

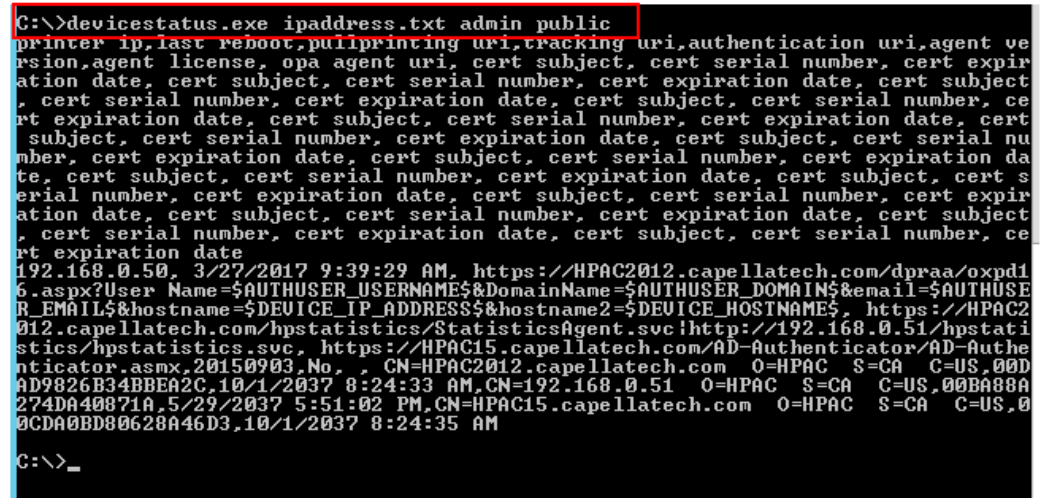

```
C:\>devicestatus.exe ipaddress.txt admin public
printer ip,last reboot,pullprinting uri,tracking uri,authentication uri,agent ve
rsion,agent license, opa agent uri, cert subject, cert serial number, cert expir
ation date, cert subject, cert serial number, cert expiration date, cert subject
, cert serial number, cert expiration date, cert subject, cert serial number, ce
rt expiration date, cert subject, cert serial number, cert expiration date, cert
subject, cert serial number, cert expiration date, cert subject, cert serial nu
mber, cert expiration date, cert subject, cert serial number, cert expiration da
te, cert subject, cert serial number, cert expiration date, cert subject, cert s
erial number, cert expiration date, cert subject, cert serial number, cert expir
ation date, cert subject, cert serial number, cert expiration date, cert subject
, cert serial number, cert expiration date, cert subject, cert serial number, ce
rt expiration date
192.168.0.50, 3/27/2017 9:39:29 AM, https://HPAC2012.capellatech.com/dpraa/oxpd1
6.aspx?User Name=$AUTHUSER_USERNAME$&DomainName=$AUTHUSER_DOMAIN$&email=$AUTHUSE
R_EMAIL$&hostname=$DEVICE_IP_ADDRESS$&hostname2=$DEVICE_HOSTNAME$, https://HPAC2
012.capellatech.com/hpstatistics/StatisticsAgent.svc!http://192.168.0.51/hpstatist
ics/hpstatistics.svc, https://HPAC15.capellatech.com/AD-Authenticator/AD-Authen
ticator.asmx,20150903.No,, CN=HPAC2012.capellatech.com O=HPAC S=CA C=US,00D
AD9826B34BBE02C,10/1/2037 8:24:33 AM,CN=192.168.0.51 O=HPAC S=CA C=US,00BA88A
274DA40871A,5/29/2037 5:51:02 PM,CN=HPAC15.capellatech.com O=HPAC S=CA C=US,0
0CDA0BD0628A46D3,10/1/2037 8:24:35 AM
C:\>_
```

3. If the <results.csv> parameter is included in the command line, the results will be redirected to the location of your defined by the parameter. The output resulting .csv file will contain the following information:

- 1st column is the Device IP
- 2nd column is the last reboot time and date of device
- 3rd column is the HP AC Pull Print Button URI
- 4th column is the HP AC Tracking URI
- 5th column is the License URI
- 6th column is the authentication URI
- 7th column is the version number of the HP AC Agent
- 8th column is the HP AC Agent license status
 - Yes, meaning device is licensed,
 - No, means printer is not licensed.
- Remaining Column contain information regarding Certificates:
 - Certificate Serial Number
 - Certificate Expiration Date
 - Certificate Subject.