
MCU

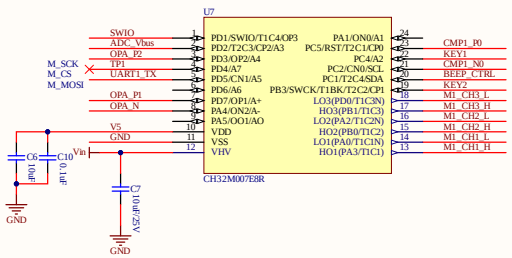


When laying out pins, watch out for keeping high-speed and high-current pins away from sensitive sampling lines

If UART1_TX and the like are high-speed signal lines when hooked up to a virtual oscilloscope, ...


Try to avoid running parallel to the simulated sampling signal, and it's recommended to add an RC to the serial port to reduce edge rise/fall rates.

The Vhv limit can't go over 26V


POWER

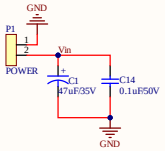


Buzzer

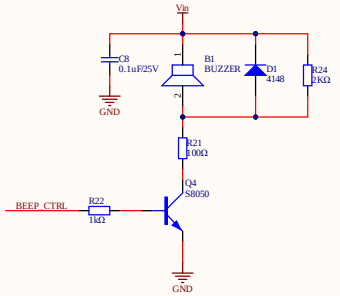

KEY



SWD

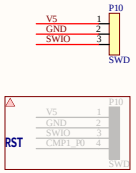

This series of MCUs has a single-wire programming feature

When the reset function is enabled on PC5, to avoid the inability to burn,

It is recommended to lead out this pin to the SWD interface.

Reset via LINK during programming

UART




Phase current sampling



Use the internal PGA


Comparator overcurrent

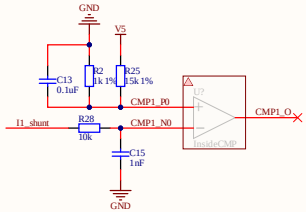

Internal output to TIM1_BKIN


Use internal comparator

Bus voltage detection

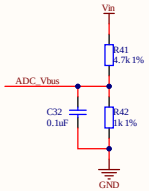

Adjust the resistance and package of each resistor according to the value of Vin

Inverter circuit

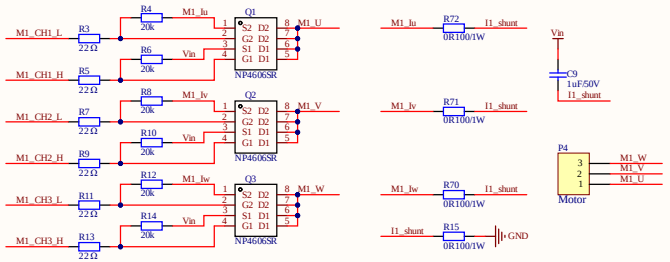

Motor interface

Select the Kelvin connection wiring method

Pseudo-differential routing

Select the resistance and package according to the actual current

Adjust the gate drive resistance value according to the actual conditions such as trace length and thickness, with the purpose of reducing gate oscillation

Title		
Size: C	Number	Revision
Date: 11/05/2026		Sheet of
File: F:\CH32M007E8R_FAN_R0.SchDoc		Drawn By:

Comment	Description	Designator	Footprint	LibRef	Quantity