
PANEL GLIDES INSTALLATION



IMPORTANT NOTES:


- 1. Please check that all parts have been supplied before you begin to assemble your new Panel Glide.
- 2. The finished blind width is the finished track size
- 3. The finished blind drop is the drop requested less 10mm for clearance.
- 4. Ensure that the blind is mounted level for correct operation.
- 5. If your track is wider than 3 metres it will come in two (2) pieces. To join the two (2) pieces please refer to Joiner Installation instruction assembling

1. Positioning Blind

- As per your order, determine the correct fitting location
- i) inside the window frame (Inside Mount) or;
- ii) on the window frame or wall (Outside Mount)

2. Installing Mounting Brackets

INSIDE MOUNT: The Installation Brackets are fixed directly to the mounting surface, in the desired location, with edge 1 and 2 (see diagram) to the back of the panel glide. Make sure all brackets are in a straight line so that the track will attach easily. (Wood screws have been provided, however screws suitable for gyprock or brick walls may need to be purchased).




OUTSIDE MOUNT:

I) Attach the Installation Bracket (A) to the under side of the long end of the Outside Mount L Bracket (B), with the nut and bott provided (C). Please make sure the nut is on the top of the L Bracket and the edges 1 and 2 of the Installation Bracket are facing the back of the panel glide. (Figure 1)

ii)Attach the Outside Mount L Brackets to the wall or architrave (Figure 2) in the desired location, spaced evenly, ensuring they are all level. The brackets should not be installed on the very end of the track.


iii) If your track is **wider than 3 metres**, it will come in two (2) pieces. A mounting bracket must be installed directly over the join to add extra strength. Please refer to "Track Joiner Installation Instruction".

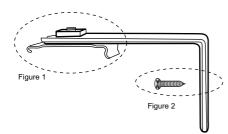

3. Attaching Blind to Brackets

Position the track into the front edge of the insta llation bracket and gently push upwards to **edge 1 only**. Before pushing upwards to edge 1 ensure the track is in the correct position, **and then** push upwards until the track clicks into edge 2.

Attach the panels to the Velcro on the glides ensur ing they are parallel to each other.



4. Operating Blind

To operate the blind successfully, attach the wand to the lead panel (choose the front or back locating hole to suit), and draw smoothly across the track.

