


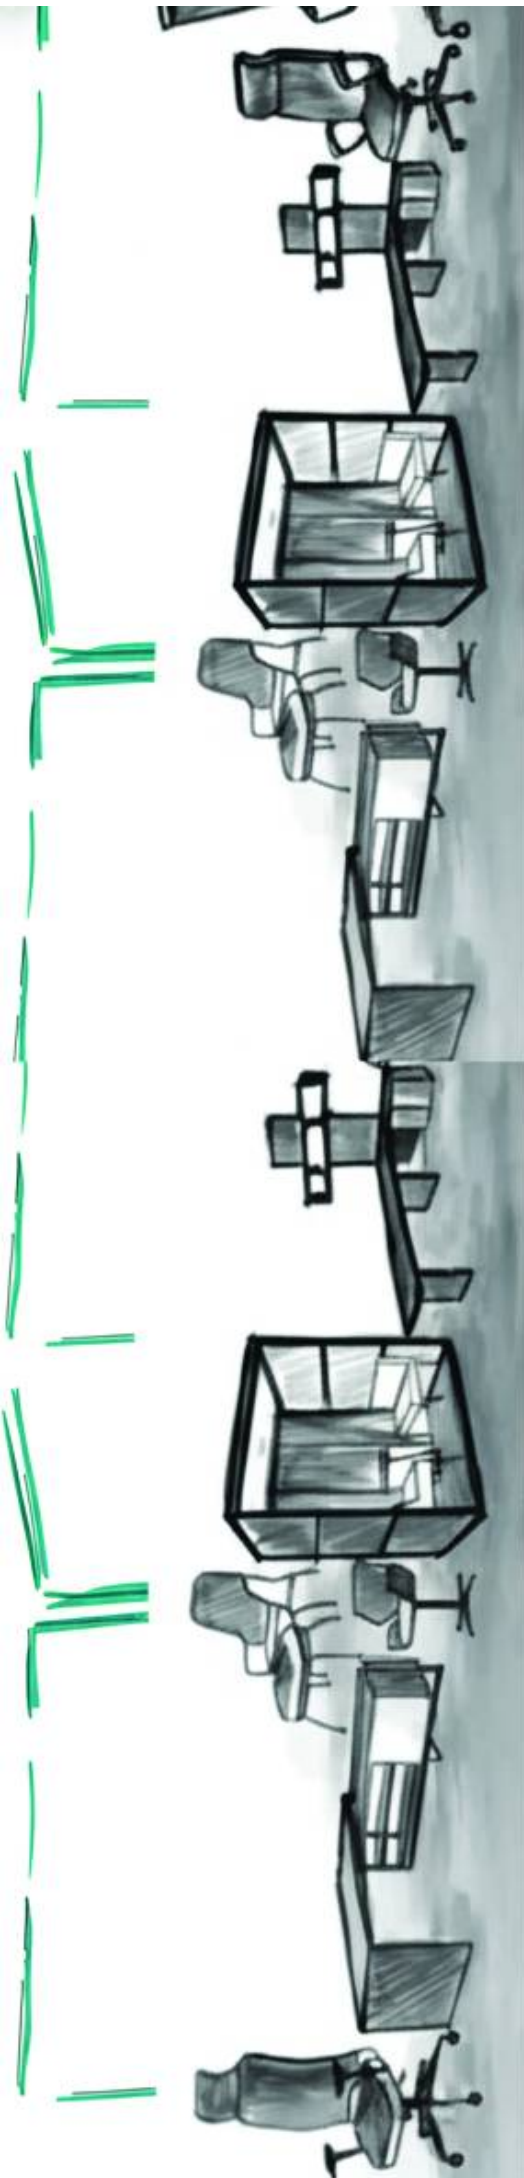

FURNICONCEPTS BRAND PROFILE 3.0

+919363607900 | +971 562263715 | +971 50 378 2215 

LETSTALK@FURNICONCEPTS.COM 

WWW.FURNICONCEPTS.COM 

BUSINESS BAY, DUBAI, UAE & CHENNAI, INDIA. 



METRO SOFA ELITE

BUILD WITH CONFIDENCE



Application

Airport Terminal | Railway Station | Metro Station | Bus Terminal
Hospital | Banks | Diagnostic Centres | Other Public Seating Areas.

METRO SOFA ELITE

3 SEATER



SPECIFICATION

* WARRANTY APPLICABLE ONLY
FOR MANUFACTURING DEFECTS



* **Seat & Back**

Processed with 1.0 mm thickness cold rolled MS sheet and furnished with powder coating.

* **Armrest**

Processed with 1.2 mm MS tube and furnished with powder coating.



* **Leg**

Processed with 1.0mm thickness ms sheet and furnished with powder coating.

* **Center support beam**



Processed with 2.0 mm thickness MS seat and also furnished with powder coating.

METRO SOFA ELITE DIMENSIONS

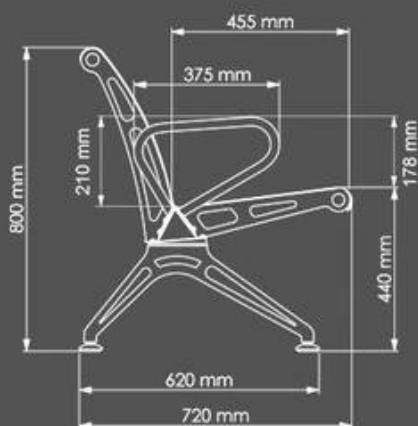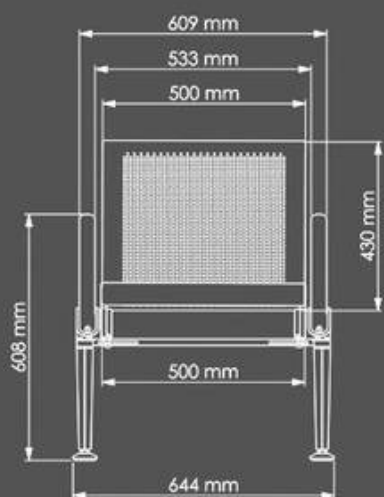


METRO SOFA ELITE - 1 SEATER
WEIGHT
NET WEIGHT - 13.71 KG
GROSS WEIGHT - 15.33 KG


METRO SOFA ELITE - 2 SEATER
WEIGHT
NET WEIGHT - 22.72 KG
GROSS WEIGHT - 24.08 KG

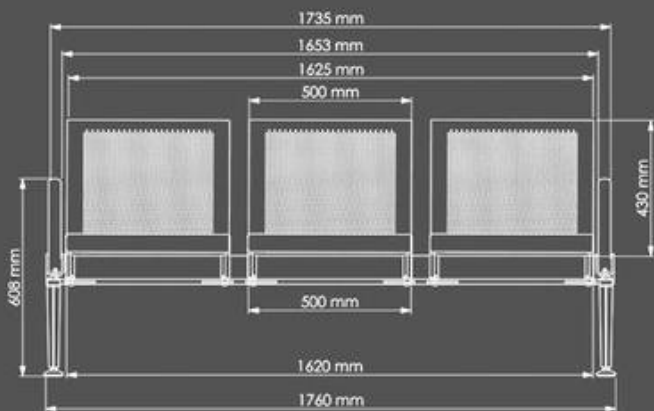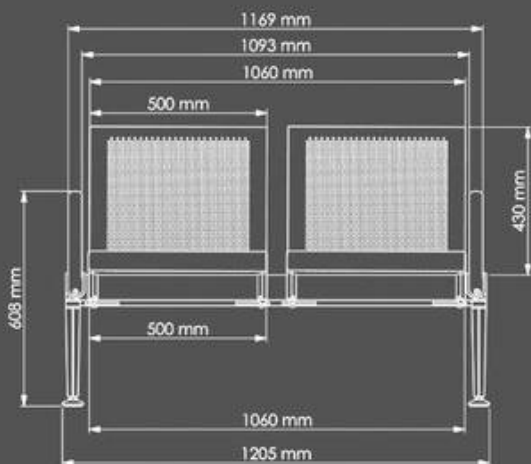

METRO SOFA ELITE - 3 SEATER
WEIGHT
NET WEIGHT - 31.18 KG
GROSS WEIGHT - 33.34 KG

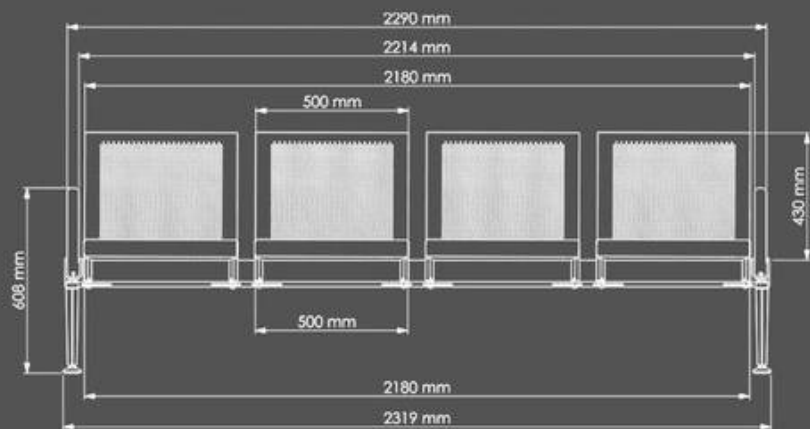

METRO SOFA - 4 SEATER
WEIGHT | NET WEIGHT - 39.96 KG | GROSS WEIGHT - 42.94 KG

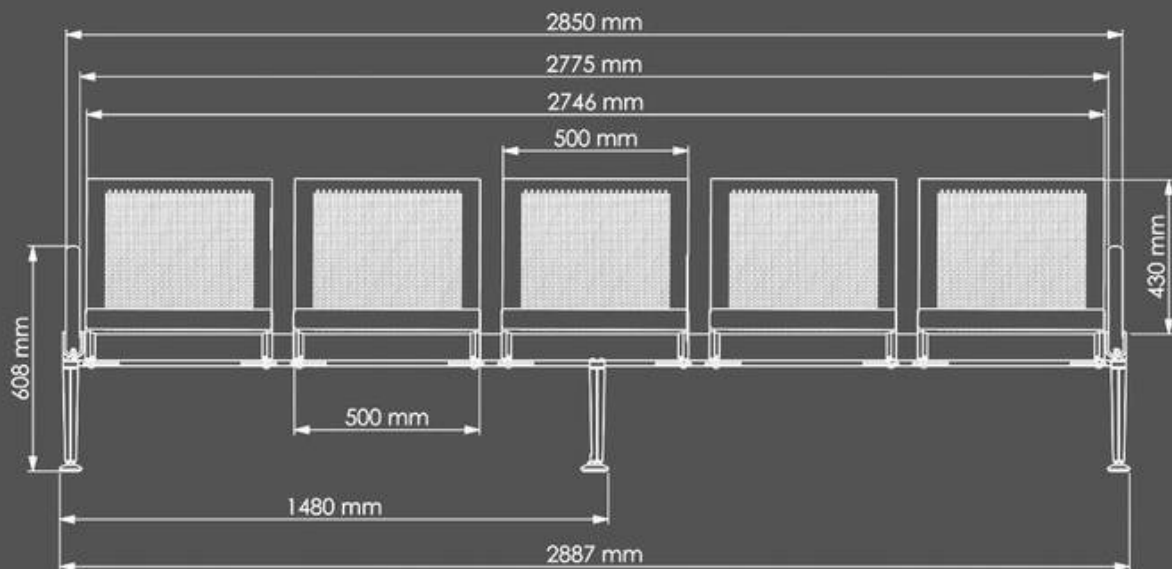


METRO SOFA - 5 SEATER
WEIGHT | NET WEIGHT - 50.21 KG | GROSS WEIGHT - 53.47 KG



* All dimensions are in MM

METRO SOFA ELITE 3 SEATER ASSEMBLY INSTRUCTION

METRO SOFA 3 SEATER CHILD PARTS & ACCESSORIES

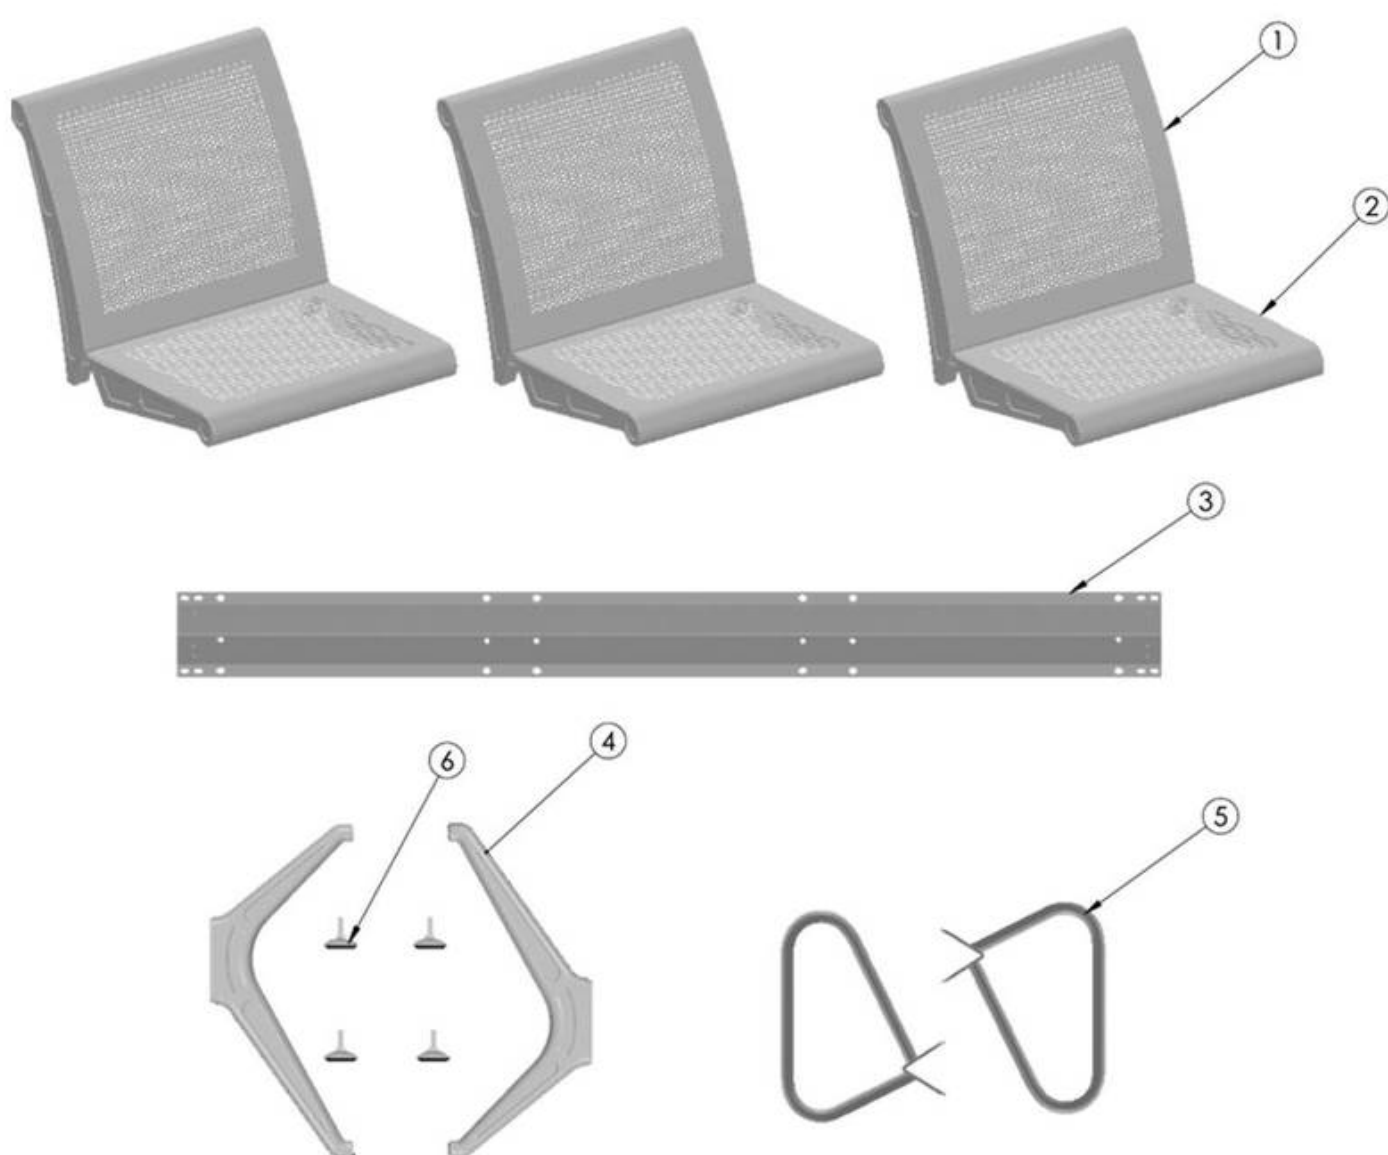


METRO SOFA SEAT & BACK ASSEMBLY

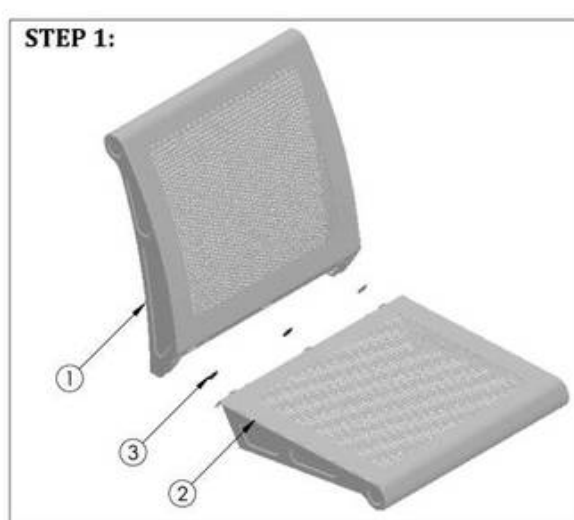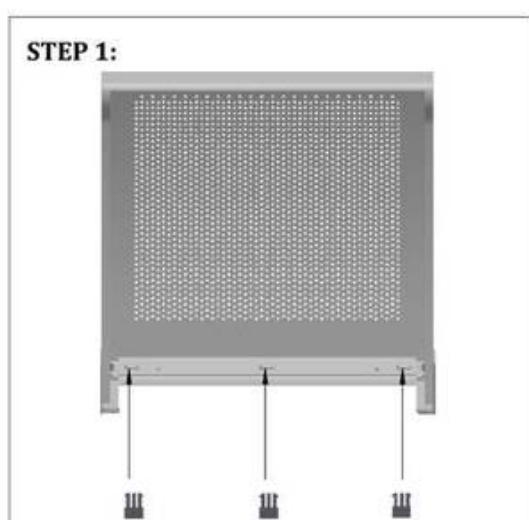

ASSEMBLY INSTRUCTION:-

STEP 1: Insert the Lock Part into the Seat & Back Connection Slot . Place the Seat & Back with Lock Part.

METRO SOFA ELITE 3 SEATER LEG ASSEMBLY

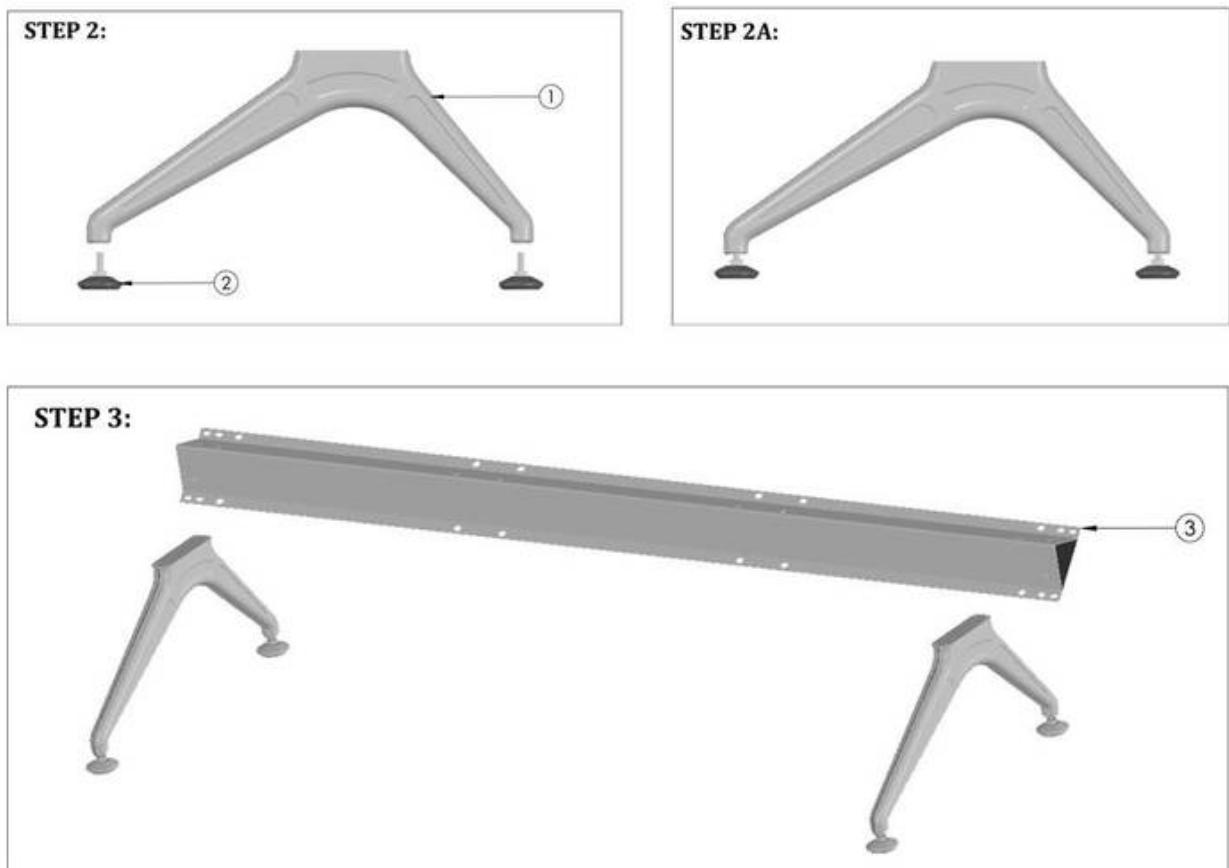


ASSEMBLY INSTRUCTION:-

STEP 2: Place the Leveller on the legs.

STEP 2A: Fasten the Leveller on both the legs.

STEP 3: Place the Legs on both end of centre beam.

METRO SOFA LEG, CENTRE BEAM & WEDGE ASSEMBLY

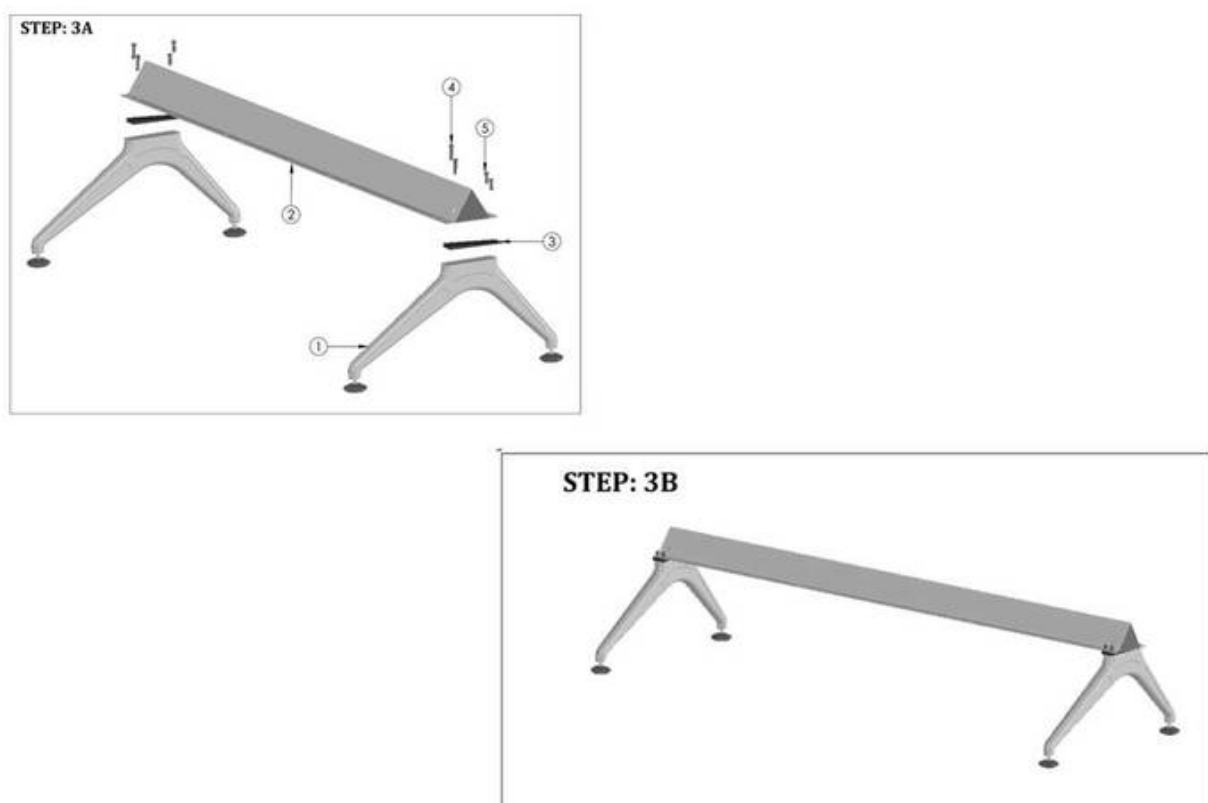


ASSEMBLY INSTRUCTION:-

STEP 3A: Place the centre beam on the legs,
Place the wedge between leg & centre beam,
Fasten the M8 bolts into the leg with allen key.

STEP 3B: Leg, wedge and center beam in assembled condition.

STEP 4:

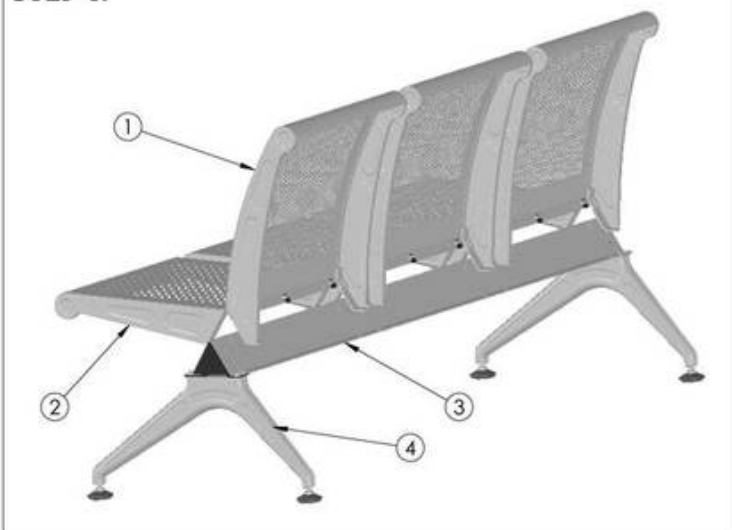

STEP 4A:



ASSEMBLY INSTRUCTION:-


STEP 4: Place the Seat & Back on the Center Beam.

STEP 4A: Locate the Seat & Back on centre beam mounting holes.

STEP 5:





STEP 5:

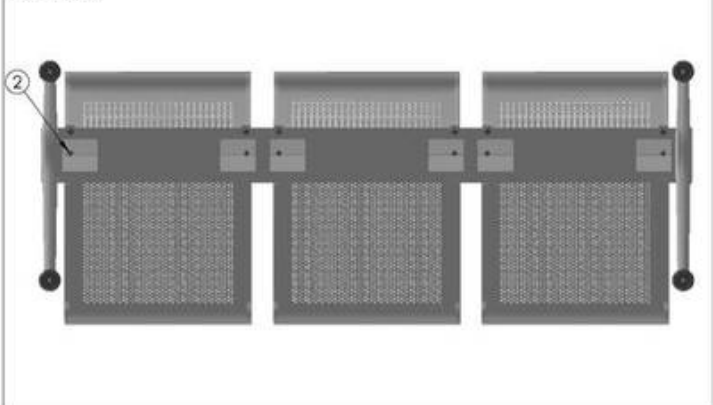

ASSEMBLY INSTRUCTION:-

STEP 5: Insert the M8 bolt on the Angle side of the back & fasten with M8 nut.

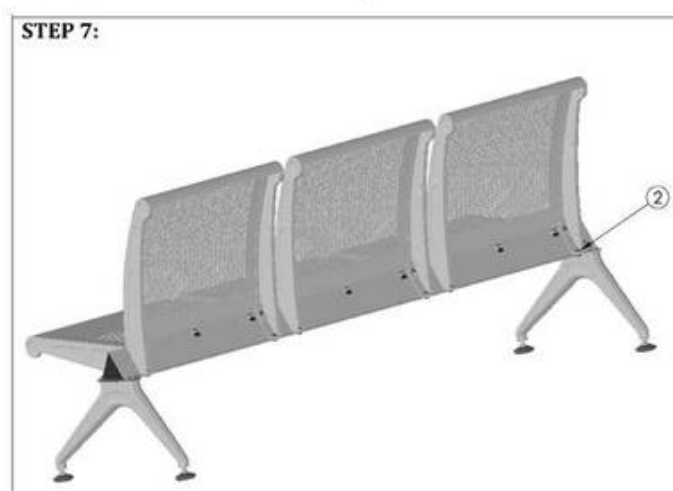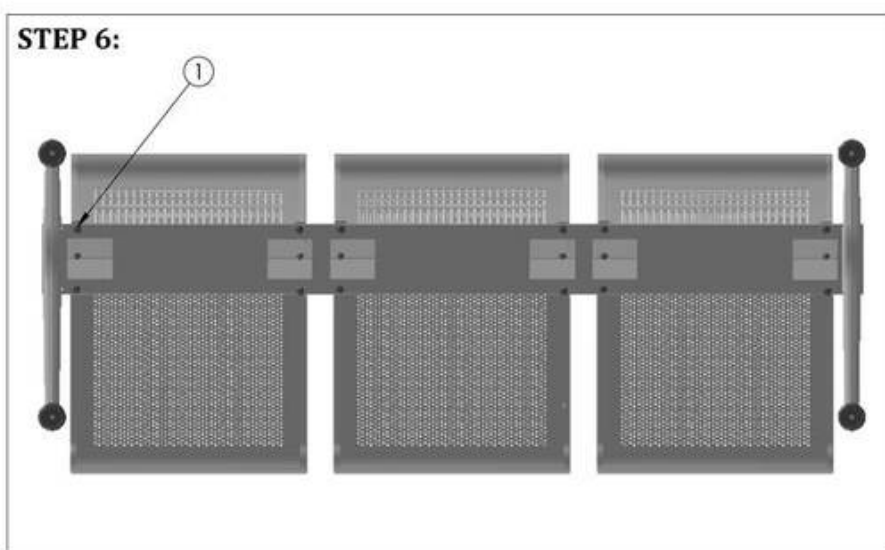

ASSEMBLY INSTRUCTION:-

STEP 6: Insert the M10 bolt on bottom side of the seat with the centre beam.

STEP 7: Insert the M10 bolt on bottom side of the back with the centre beam.



ASSEMBLY INSTRUCTION:-

STEP 8: Tighten the bolts 1, 2 & 3 in sequence as shown in the figure.

ARM REST ASSEMBLY

STEP: 8A



STEP: 9



STEP: 9A




ASSEMBLY INSTRUCTION:-

STEP 8A: Ensure no gap observed between seat and back locking area.

STEP 9: Attach arm to the centre beam. Insert M8 bolts and fasten the arm to the centre beam end.

STEP 9A: Fasten the bolts with arm to the center beam both ends.

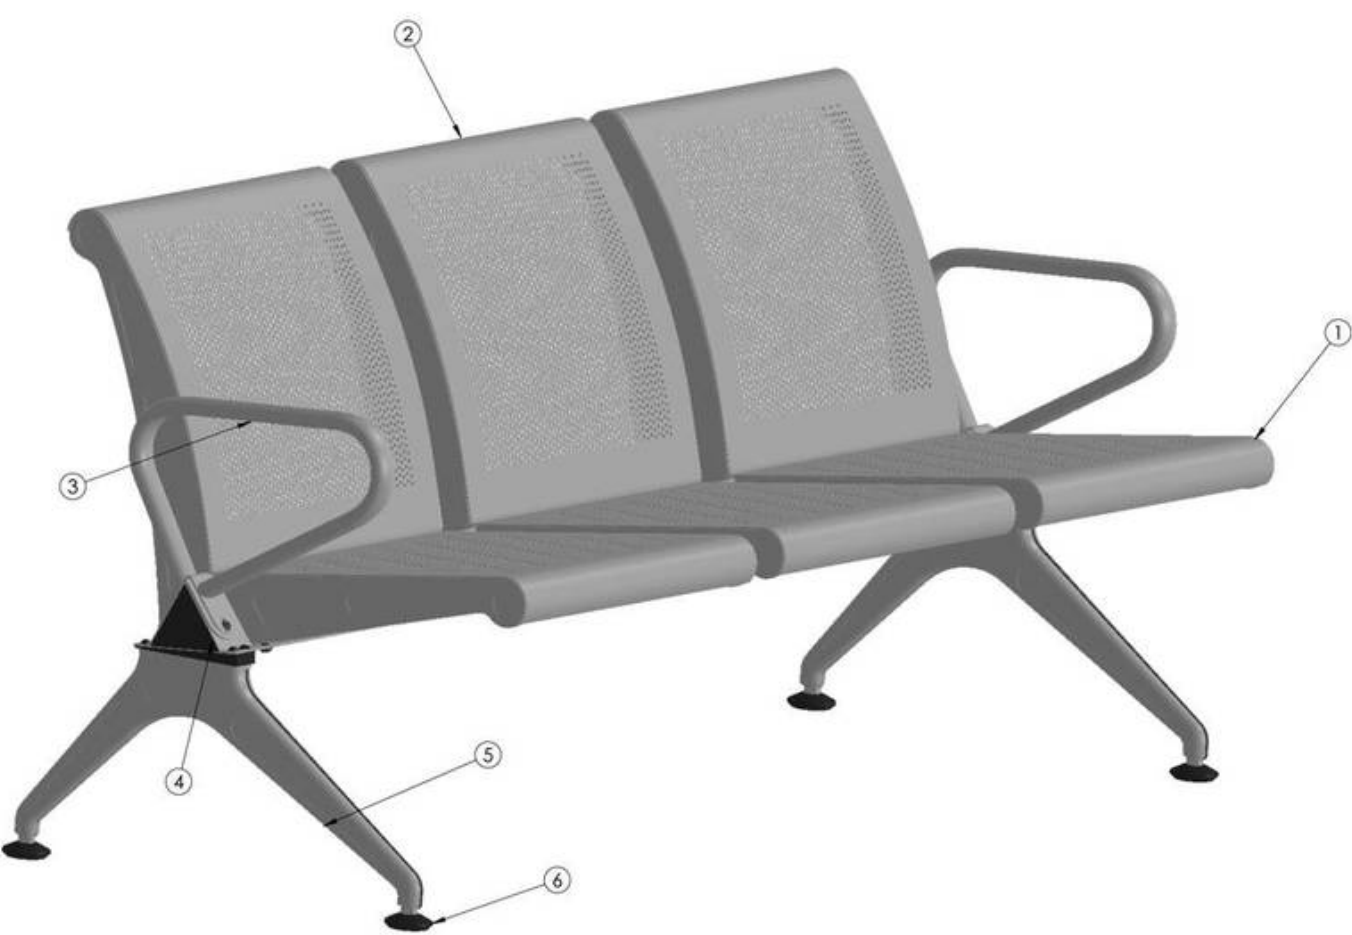

STEP 10: Fasten all the bolts & check carefully the joints. Metro sofa three seater is ready to use.


S.No	Part Name	Quantity
1	Seat	3
2	Back	3
3	Arm Rest	2
4	Centre Beam	1
5	Leg	2
6	Leveller Cup	4

UAE ADDRESS

📍 FURNICONCEPTS MIDDLE EAST FURNITURE TRADING LLC - AL WASL BUILDING - OFFICE 208, RAWDAT - SHEIKH ZAYED RD - BUSINESS BAY - DUBAI

☎ +91 93636 07900 |
+971 50 378 2215

✉ LETSTALK@FURNICONCEPTS.COM

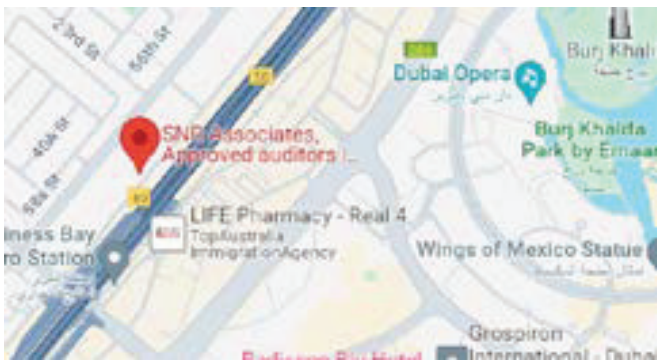

INDIA ADDRESS

📍 ZTOA FURNICONCEPTS INDIA PRIVATE LIMITED - SOUTHERN INDIA CHAMBER OF COMMERCE AND INDUSTRIES, ESPLANADE RD, ESPLANADE, GEORGE TOWN, CHENNAI, TAMIL NADU 600104, INDIA

☎ +91 93636 07900 |
+971 50 378 2215

✉ LETSTALK@FURNICONCEPTS.COM

