

# Dr. Gregory J. Mazzaro Fall 2013

# ELEC 313 – Electronics Laboratory Lab Orientation & Quick Reference

#### **Lab Orientation Outline**



- ELEC 313 introduction
  - Syllabus, lab notebooks, lab reports
- Laboratory equipment
  - Signal generation & capture hardware
- Circuit terminology
  - Essentials from ELEC 201, 202, 204
- Electronic components & breadboarding
  - Parts used for experiments
- PSpice circuit simulator



<u>Instructor</u>: **Dr. Gregory J. Mazzaro**, Grimsley Hall Room 312

phone: 843-953-0429, e-mail: gmazzaro@citadel.edu

office hours: MW 16:00-17:00, TR 13:30-17:00 (and by appointment)

#### Skills to be developed:

- (1) DC characterization of diodes
- (2) DC characterization of transistors
- (3) Design and measurement of op-amp circuits
- (4) AC measurements using voltmeters and oscilloscopes
- (5) Frequency response measurements
- (6) Preparation of lucid, succinct technical reports
- (7) Working as part of a technical team

<b>Grading</b> :	Pre-lab exercises, 20%	$90\% \le A < 100\%$
	Lab notebook, 10%	$80\% \le B < 90\%$
	Lab reports, 60%	$70\% \le C < 80\%$
	Lab practical, 10%	$60\% \le D < 70\%$
	_	F < 60%



#### Dr. Gregory J. Mazzaro

Assistant Professor of Electrical Engineering at The Citadel
Department of Electrical & Computer Engineering, Grimsley Hall, Room 312



Office Hours

Email

CV, Short

**Publications** 

<u>Participations</u>

Fall 2013 courses:

**ELEC 201** 

**ELEC 313** 

#### **Education**

- Ph.D., Electrical Engineering, North Carolina State University, Raleigh, NC, 2009
- M.S., Electrical Engineering, State University of New York at Binghamton, Binghamton, NY, 2006
- . B.S., Electrical Engineering, Boston University, Boston, MA, 2004, summa cum laude

#### Areas of Expertise

- · Radar: Non-linear and ultra-wideband
- · RF electronics and systems
- Electromagnetics

#### **Experience**

- Electronics Engineer, U.S. Army Research Laboratory, Adelphi, MD, 2009-2013
- Intern, U.S. Army Research Laboratory, Adelphi, MD, Summer 2007
- Research Assistant, Electronics Research Laboratory, N.C. State University, Raleigh, NC, 2006-2009
- Intern, U.S. Air Force Research Laboratory, Rome, NY, Summer 2006
- Teaching Assistant, State University of New York, Binghamton, NY, 2004-2006
- Engineering Tutor, Boston University College of Engineering, Boston, MA, 2003-2004



Attendance: A student missing a lab must work out a time with the instructor to make it up.

<u>Lab teams</u>: The students will be divided into teams of two to three individuals. The lab work,

lab notebook, and technical reports are the responsibility of all team members.

<u>Website</u>: Assignments and course announcements will be distributed to the class via the

course website. <a href="http://ece.citadel.edu/mazzaro">http://ece.citadel.edu/mazzaro</a> ("ELEC 313", left-hand menu)

Decorum: Each lab team member is expected to earnestly participate in each experiment.

Students must respect the lab equipment and clean their lab bench by properly

stowing all wires and components after each experiment. Food and drink are not

permitted at any time in the laboratories.

Notebooks: Each lab team will keep a handwritten lab notebook.

Reports: Lab reports are to be submitted at the *beginning* of class on the due date.

Additional policies are listed in the full syllabus.



Week	(Mon)	(Wed)	Due at start of class	Activity
1	26-Aug	28-Aug		Lab orientation
2	2-Sept	4-Sept		(no lab)
3	9-Sept	11-Sept	Pre-lab #1	Lab #1, Amplifier models
4	16-Sept	18-Sept	Pre-lab #2, Report #1	Lab #2, Diode characterization
5	23-Sept	25-Sept	Pre-lab #3, Report #2	Lab #3, Diode circuits
6	30-Sept	2-Oct	Pre-lab #4a, Report #3	Lab #4a, DC Motor Driver Kit
7	7-Oct	9-Oct	Pre-lab #4b, Report #4a	Lab #4b, DC Motor Driver
8	14-Oct	16-Oct	Pre-lab #5, Report #4b	Lab #5, CMOS circuits
9	21-Oct	23-Oct		(no lab – office hours instead)
10	28-Oct	30-Oct	Pre-lab #6, Report #5	Lab #6, MOSFET characterization
11	4-Nov	6-Nov	Pre-lab #7, Report #6	Lab #7, MOSFET amplifier
				configurations
12	11-Nov	13-Nov	Pre-lab #8, Report #7	Lab #8, BJT characterization
13	18-Nov	20-Nov	Pre-lab #9, Report #8	Lab #9, Common-emitter transistor
				amplifier
14	25-Nov	27-Nov		(no lab)
15		4-Dec	Notebooks, Report #9	Lab practical
16	9-Dec			

# **Sequence of Events for Each Week**



- 1. The instructor performs a demonstration of the current laboratory experiment.
- 2. The instructor approaches each team (individually) while students begin the current lab experiment.
  - (a) The instructor returns the **team's** graded report (submitted previously).
  - (b) The **team** turns in its new <u>lab report</u> (for the previous experiment).
  - (c) The instructor checks & grades the **team's** current <u>pre-lab</u> assignment.
- 3. The instructor monitors students' experiments & assists each team as necessary. Students complete the lab experiment (i.e. record all required data) <u>during class</u>.
- 4. Outside of class... Each **team** creates a lab report for the current experiment.

  Each **team** completes the next pre-lab assignment.

#### Lab Notebooks



#### Why keep a laboratory notebook?

- (1) Most companies **require** their engineers to keep notebooks of their work.
- (2) Notebooks serve as legal protection of **intellectual property**.

#### How will we keep our notebooks?

- (1) Team members are expected to **alternate** each week in keeping the notebook.
- (2) The notebook must be **bound**. Loose-leaf notebooks are not acceptable.
- (3) All **pages** must be **sequentially numbered**. Each side is 1 page.
- (4) The first sheet is the **Table of Contents**. Numbering starts after this sheet.
- (5) Label the first page used to record data for a particular experiment with **the title of the experiment**. Record the page number in the Table of Contents.
- (6) All entries are made in **ink**. (Do not erase anything.)

# Lab Notebooks (Continued)



#### How will we keep our notebooks?

- (7) Do not remove **any** pages. If changes need to be made, draw a line through the material that is to be deleted even if you have to cross out an entire page.
- (8) The **date** that the entries were made must appear on **every page**.
- (9) Each page is **signed** by the engineer taking the data.
- (10) No blank numbered pages are permitted. If a page needs to be left blank, write "Intentionally Blank" and draw a diagonal line across the page.
- (11) Any **material added**, such as a computer print out, must be **permanently affixed** (staples, tape, glue) to the notebook page. The material itself must be signed and dated.

Guidelines for notebooks are posted on the course website.

# Lab Reports: General



#### Why create a lab report?

The lab report is a document that allows a reader (familiar with basic electrical measurements and procedures) to **reproduce** an experiment.

#### How will we generate lab reports?

- (1) Reports will be composed on a word processor and printed out.
- (2) Reports will be **succinct**, grammatically correct, and **typo-free**.
  - -- past tense describes the experiment; present tense discusses the report
  - -- each figure & table is *referenced* in the discussion (e.g. "According to Figure 2...")
- (3) Each lab report should include:
  - -- Cover page signed by each team member
  - -- Purpose of the experiment
  - -- Block diagram of the test configuration(s) and/or circuit schematic(s)
  - -- Test procedure (in the student's own words)
  - -- Measured results
  - -- Comparison with theoretical results
  - -- Conclusions

An example report is provided on the course website.

# **Lab Reports: Grading**



#### ELEC 313 Lab Report Grading Sheet

Student 1	Lab #
Student 2	

Item	Pts	Comments
Pre – Lab & Lab Notebook (2)		
Lab Performance (1)		
Introduction (1) Objectives/Background/ Principles		
Procedure (1) Paragraph form/Circuit diagrams		
Presentation & Discussion of Results (3) All theoretical & experimental data Differences explained Sample calculations Tables & plots easy to read		
Conclusions (1) Support of objectives & general principles Lab questions answered General (1)		
Spelling/grammar/neatness  Total Points (10)		

#### Lab Notebooks: Data



Best practices:

(1) Record the **conditions** under which the data is taken.

What do I need to remember to *reproduce* the experiment?

- -- Record those details.
- (2) Take enough data to show a **clear** trend.

Does the data *clearly* indicate a particular pattern?

-- If not, take more data outside/within the record.

$$% error = \frac{|measured - nominal|}{nominal} \times 100\%$$
 ...

...always *positive* by convention

"nominal" = *true* or *ideal* value

# Lab Reports: Tables & Plots



#### Best practices:

- (1) **Do not skip** any table entries.
- (2) Add more table entries (rows, columns) as necessary.
- (3) Clearly label plot **axes** (horizontal, vertical).
- (4) Denote proper **units** for all recorded data entries & plot points.

Shortcuts: Write units at top/left of column/row.

Write units in the horizontal/vertical axis label.

(5) Note **points-of-interest**.


Examples: --where a trend stops/reverses

--where the measured data deviates substantially from the trend

# Lab Reports: Tables & Plots



V <sub>DS</sub> (V)									
I <sub>D</sub> (mA)	0.0	2.4	3.6	4.2	4.5	4.7	4.8	4.6	4.9

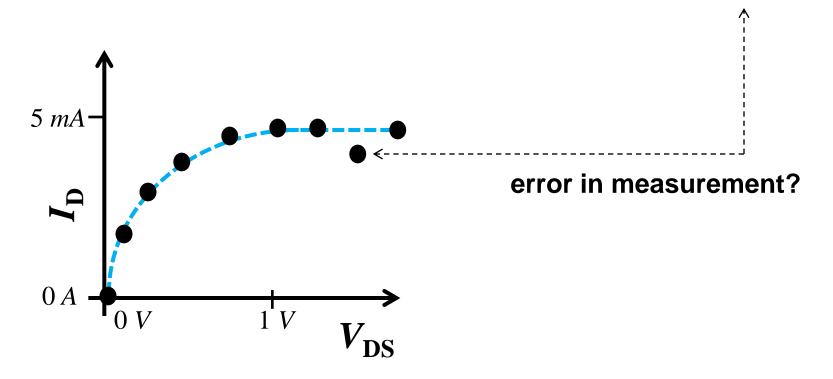

#### **Lab Orientation Outline**



- ELEC 313 introduction
  - Syllabus, lab notebooks, lab reports
- Laboratory equipment
  - Signal generation & capture hardware
- Circuit terminology
  - Essentials from ELEC 201, 202, 204
- Electronic components & breadboarding
  - Parts used for experiments
- PSpice circuit simulator

# **Direct Current (DC) Power Supply**



- Triple output: up to 6 V at 5 A, up to 25 V at 1 A, down to -25 V at 1 A
- <u>Current limiting</u>: can set current limits (below 5A, 1A)
- controlled by knob (up/down) and arrows (decimal place)



**HP E3631A** 

#### **Function Generator**



- Multiple waveforms: sinusoid, square wave, triangular, modulations
- Frequencies up to 15 MHz: set using "Freq" button; entered w/ knob & arrows
- Amplitudes up to 20 V: set using "Ampl" button; entered w/ knob & arrows

#### **HP 33120A**

#### To set high-impedance mode:

- (1) "Shift" button
- (2) "MENU" button
- (3) ">" until "D: SYS" shows
- (4) "v" until "PARAMETER" shows "50 OHM"
- (5) ">" until "HIGH Z" shows
- (6) "Enter" button



# Multimeter



measures AC/DC voltage, current, resistance

Fluke 8010A





# Oscilloscope



- <u>2-channel signal capture</u>: observe two signals simultaneously
- 100 MHz bandwidth: capture signals at 200 x 10<sup>6</sup> samples/s (200 MSa/s)



Agilent 54622D

# **Laboratory Safety**



100 mA	Burns, breathing stops			
80 mA	Extreme breathing difficulty			
60 mA	Breathing difficulty			
40 mA	Severe shock			
20 mA	Muscular paralysis			
10 mA	Pain, cannot let go of wire			
1 mA	Threshold of sensation			

#### Physiological reaction to current

# DISCONNECT POWER AT THE FIRST SIGN OF TROUBLE

#### **Best practices**:

- Check equipment for damage. Replace cut cords, cracked terminals, etc.
- Avoid creating a pathway for current with your free hand (especially while measuring *V*, *I*, *R*).
- Do not work with power connected unless it is absolutely necessary.
- Do not work at your bench while wearing wet clothes, shoes, etc.
- Do not wear jewelry or headphones that might touch your equipment.
- Do not touch components until after they have cooled.
- Discharge large capacitors before handling them.


#### **Lab Orientation Outline**




- ELEC 313 introduction
  - Syllabus, lab notebooks, lab reports
- Laboratory equipment
  - Signal generation & capture hardware
- Circuit terminology
  - Essentials from ELEC 201, 202, 204
- Electronic components & breadboarding
  - Parts used for experiments
- PSpice circuit simulator




**<u>node</u>**: a collection of points of equal voltage

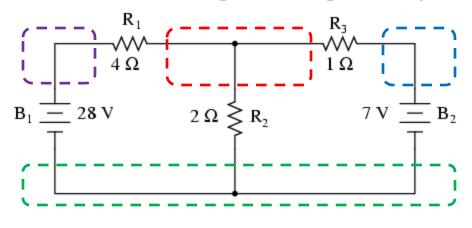


**mesh**: a loop of current that does not contain other loops

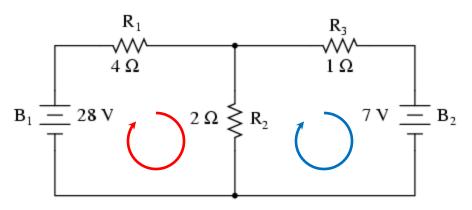

<u>impedance</u>: ratio of voltage to current, measured between 2 nodes

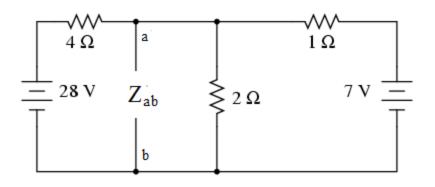

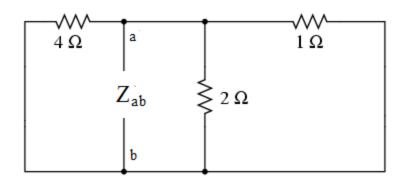

$$Z_{ab} = (4 \Omega) \| (2 \Omega) \| (1 \Omega) = 571 \text{ m}\Omega$$



$$G_{v} = \frac{v_{\text{out}}}{v_{\text{in}}}$$

Voltage gain: 
$$G_v = \frac{v_{\text{out}}}{v_{\text{in}}}$$
  $G_v = v_{\text{out}} - v_{\text{in}}$ 

$$G_i = \frac{i_{\text{out}}}{i_{\text{in}}}$$

$$G_i = i_{\text{out}} - i_{\text{in}}$$

Transresistance: 
$$r = \frac{v_{\text{out}}}{i_{\text{in}}}$$

Transconductance: 
$$g = \frac{l_{\text{out}}}{l_{\text{out}}}$$


$$g = \frac{i_{\text{out}}}{v_{\text{in}}}$$


<u>Truth table</u>: indicates output state(s) for different combinations of input state(s)

	V <sub>1</sub> = 0 V	V <sub>1</sub> = 5 V
V <sub>2</sub> = 0 V	<b>V</b> <sub>out</sub> = <b>0 V</b>	<b>V</b> <sub>out</sub> = 5 <b>V</b>
V <sub>2</sub> = 5 V	<b>V</b> <sub>out</sub> = 5 <b>V</b>	$V_{out} = 0 V$




#### **Transfer function:**

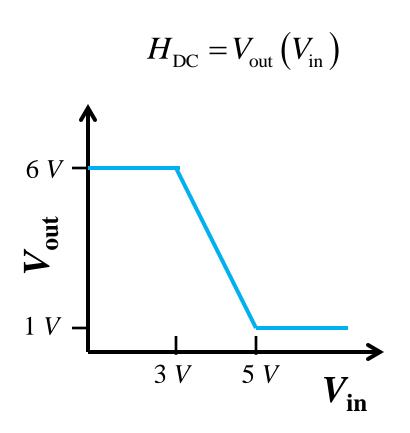

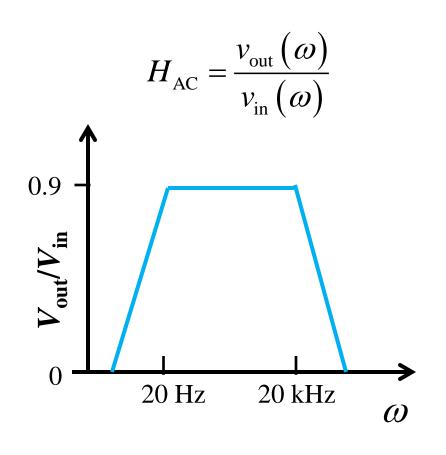




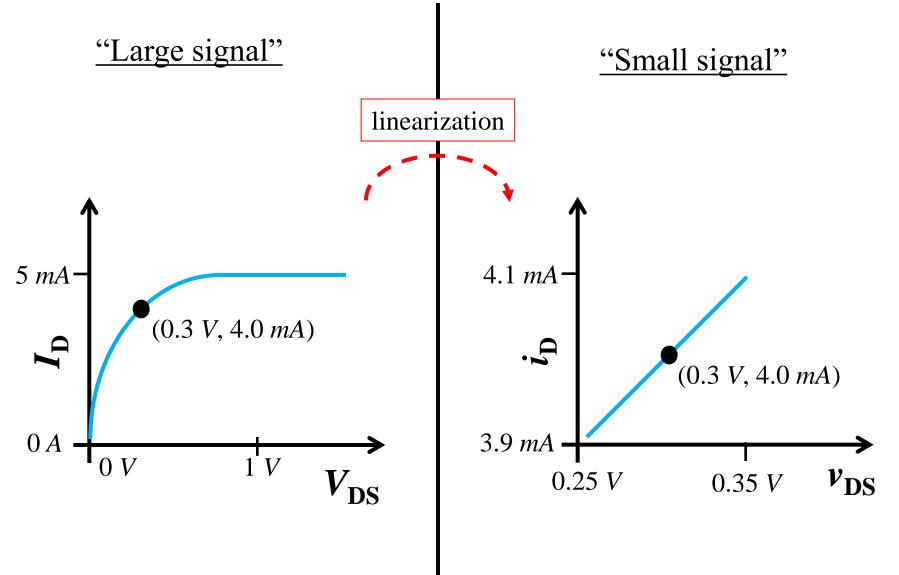

# Pulse Waveforms



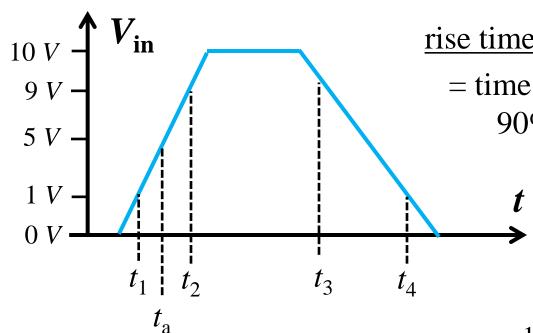

 $\underline{\text{rise time}} = t_2 - t_1$ 


= time difference between 90% and 10% of high value

 $\underline{\text{fall time}} = t_4 - t_3$ 

delay time / propagation delay

$$= t_{\rm b} - t_{\rm a}$$

= time between input at 50% and output at 50%

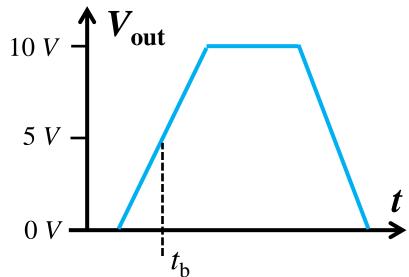


# **Lab Orientation Outline**



- ELEC 313 introduction
  - Syllabus, lab notebooks, lab reports
- Laboratory equipment
  - Signal generation & capture hardware
- Circuit terminology
  - Essentials from ELEC 201, 202, 204
- Electronic components & breadboarding
  - Parts used for experiments
- PSpice circuit simulator

#### **Printed Circuit Boards**



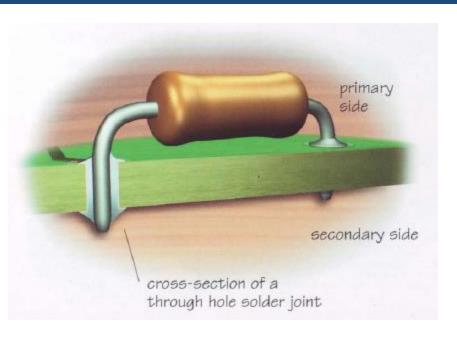


# "through-hole"

-- readily breadboarded and soldered (after leads are clipped)


# "surface-mount"

-- very short leads; soldered as part of a "brass-board" or final assembly

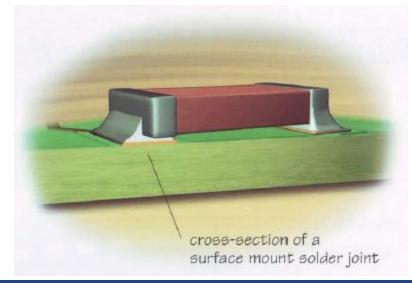


# **Breadboard**




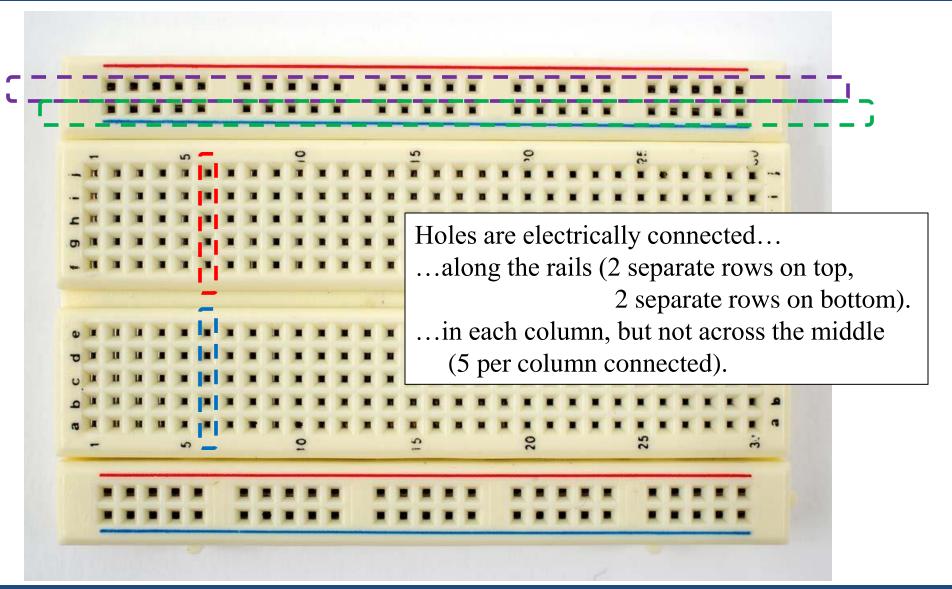


# **Polarity**



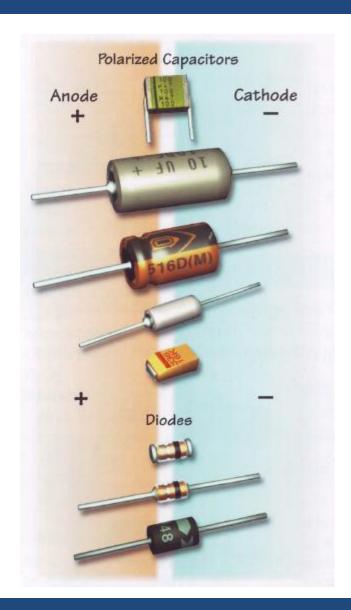

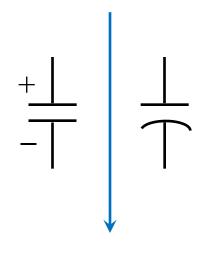


current

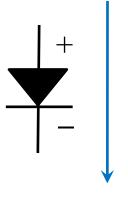

- The part is designed for current to flow along a designated direction.
- Forcing current flow in the opposite direction may damage the part.

#### **Tolerance**



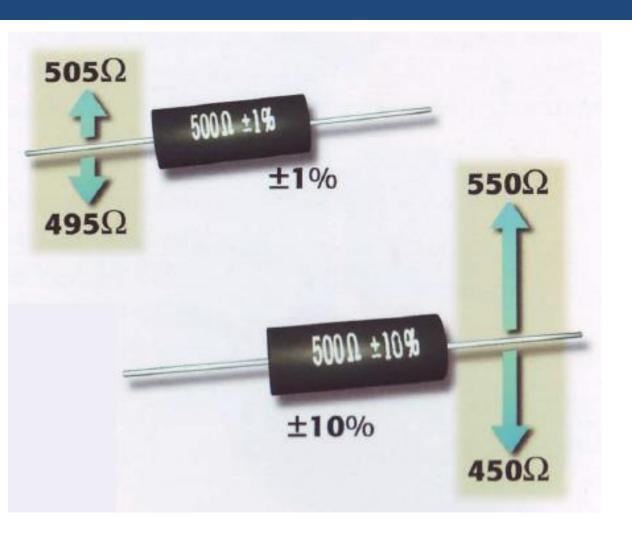

- The manufacturer guarantees that the part's value will fall within a certain percentage of the *nominal* value (above or below).
- Multiple parts
   cascaded together
   may deviate
   substantially from
   the nominal
   cascaded value.

# **Component Orientation**







- important to note for parts with multiple (3+) pins
- notch, dimple, wedge, etc. denotes **PIN 1**
- Numbering usually proceeds *around* the part (i.e. not criss-crossing *across* the part).
- When in doubt, check the manufacturer's <u>datasheet</u>.

#### **Resistors & Values**



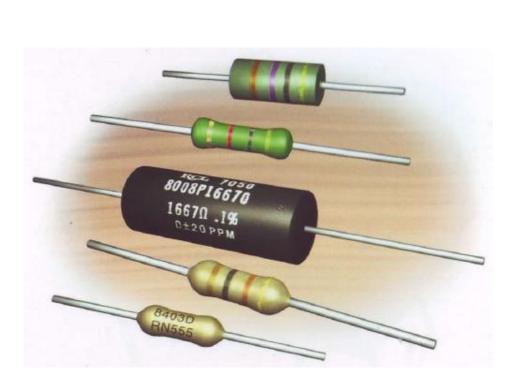


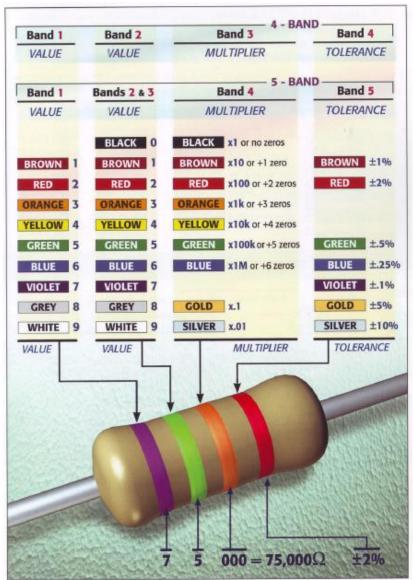


# Resistance, Measured






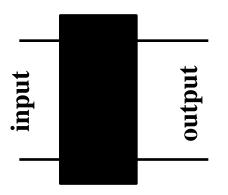


"loaded" (output)

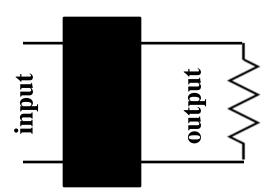

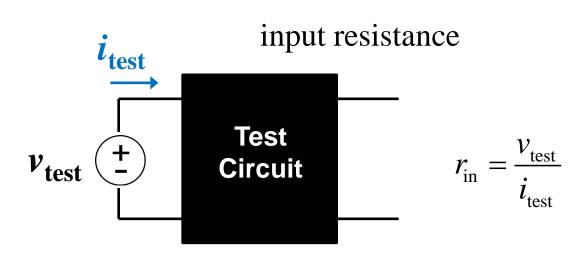

output resistance

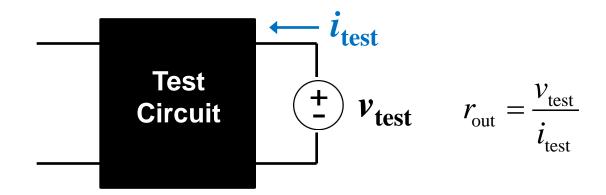

# **Resistive Decade Box**



• resistance =  $1 \Omega$  to 999,999  $\Omega$  in 1- $\Omega$  increments

• set by adjusting the knobs on the front of the box

(values add in series)

#### General Radio 1434-N






# **Capacitors**






Non-polarized

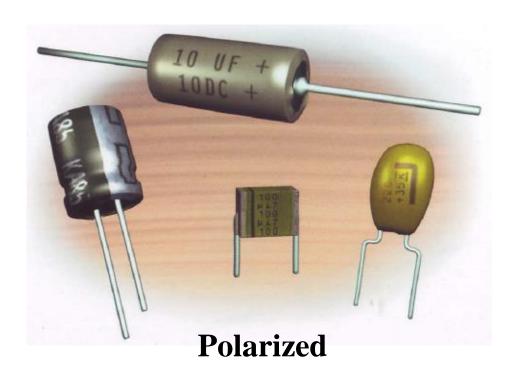


A **bypass capacitor** allows an AC signal to follow a low-impedance path (i.e. to avoid being blocked by a high-impedance path).

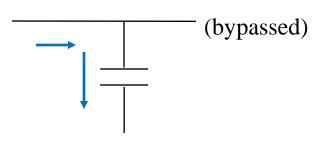

# **Capacitor Values**




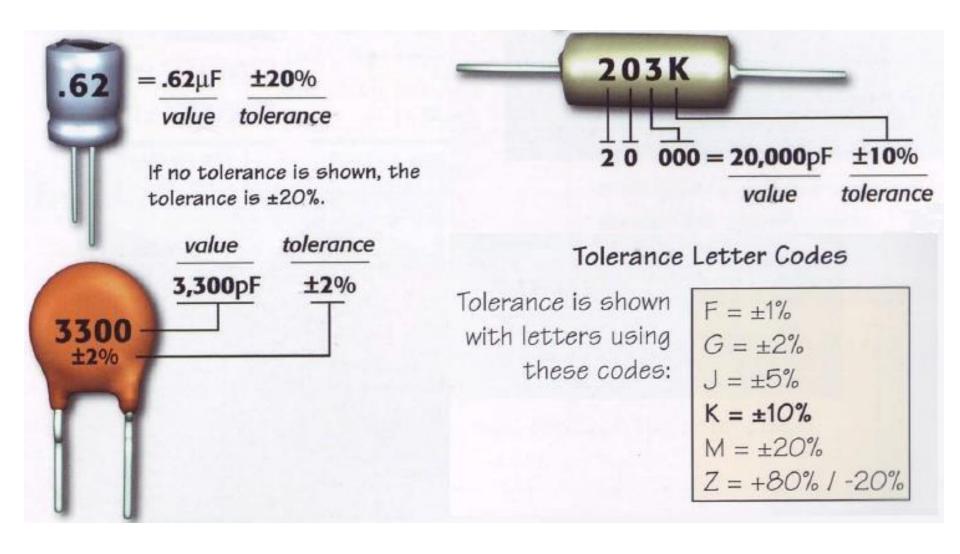


# Diodes



threshold for forward conduction

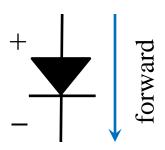


break-down voltage
threshold for
backward conduction

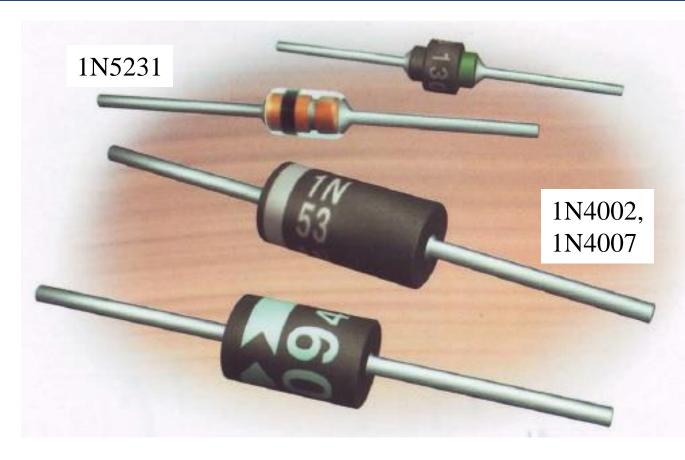

# **Transistors**




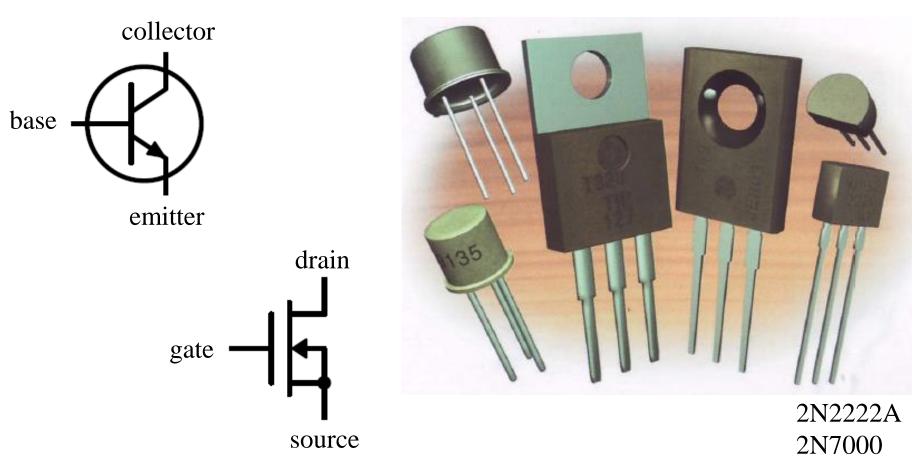


threshold voltage: minimum (base-emitter, gate-source) voltage to conduct current

# **Dual In-Line Package (DIP)**



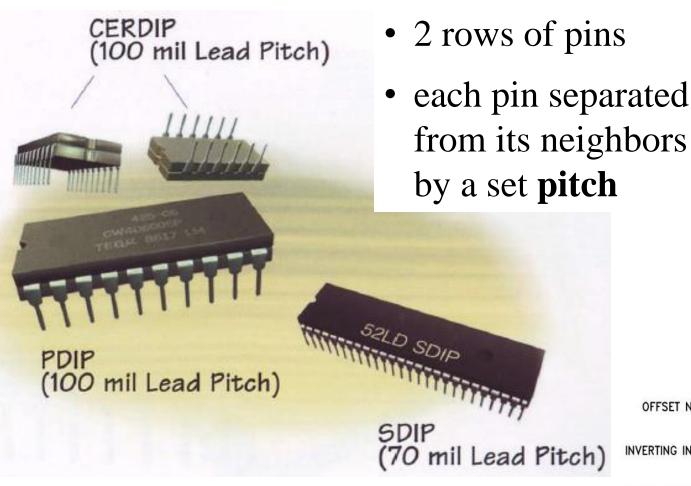


LM741 operational amplifier

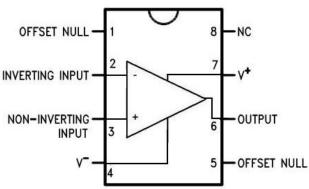

# Complementary Metal Oxide Semiconductor (CMOS) Circuits



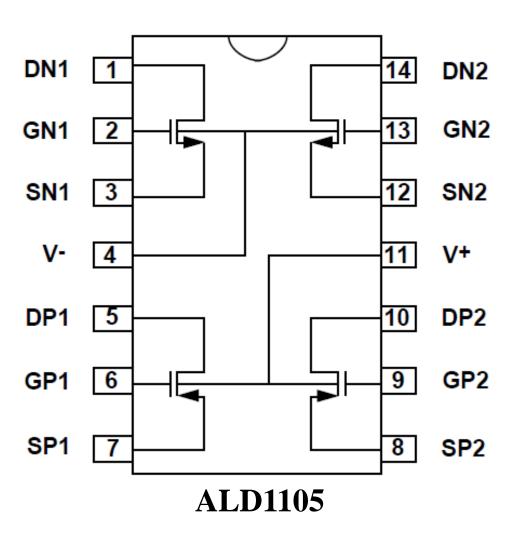

#### NMOS:

conducts current from Drain to Source when Gate-Source voltage is **above**  $V_{th}$  (positive value)

#### PMOS:

conducts current from Drain to Source when Gate-Source voltage is **below**  $V_{\text{th}}$  (negative value)

#### **Lab Orientation Outline**




- ELEC 313 introduction
  - Syllabus, lab notebooks, lab reports
- Laboratory equipment
  - Signal generation & capture hardware
- Circuit terminology
  - Essentials from ELEC 201, 202, 204
- Electronic components & breadboarding
  - Parts used for experiments
- PSpice circuit simulator

# **PSpice**




- tutorial & download instructions available on the course website
- software is available on ECE Dept computers
- PSpice exercises start with Pre-Lab #2

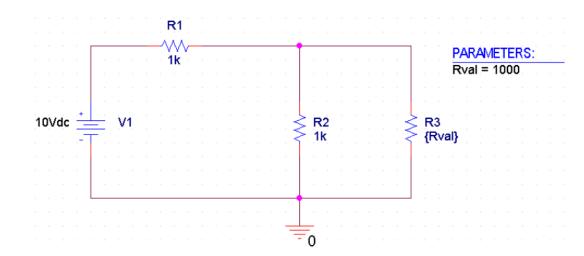

#### PSPICE Models

1. Model the following circuit using PSPICE. The diode is a 1N4002.

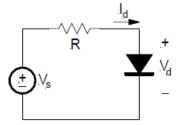

Given  $V_s$ =10 V, determine the dc operating point for R= 200, 500, 1K, 2K, 5K, 10K, 20K, 50K, and 100K. Make a table of your results.

# for Next Class (Lab #1)



Check that you received an e-mail from your instructor.

Choose a lab partner and obtain a lab notebook (1 per team).

• Complete the pre-lab assignment for Lab #1.

Using the course website...

- read the Lab Notebook Guidelines.
- read the Lab Report Guidelines.

If you have time...

follow the PSpice Tutorial: download & install

Remember: There is no lab next week.

Labs begin the week of 9-Sept.