

physical


physical media

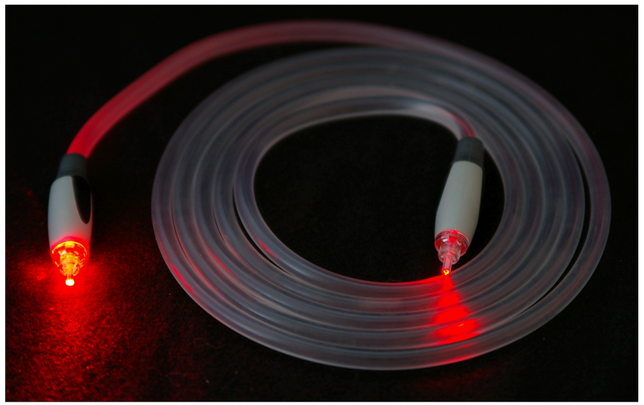


Hustvedt, CC BY-SA 3.0, via Wikimedia Commons

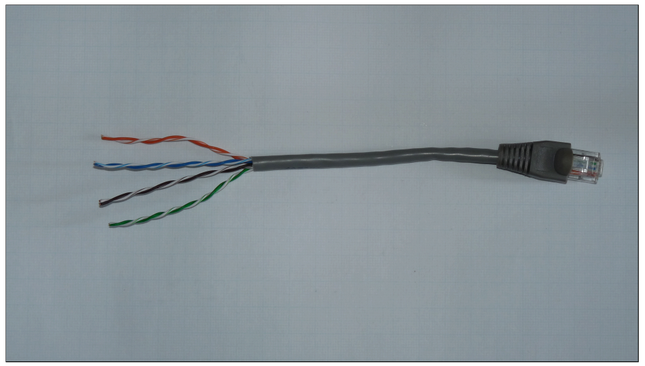

Dmitry G, CC BY-SA 3.0, via Wikimedia Commons

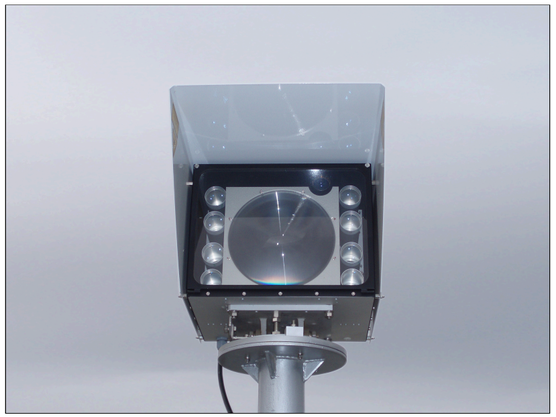

Adamantios, CC BY-SA 3.0, via Wikimedia Commons

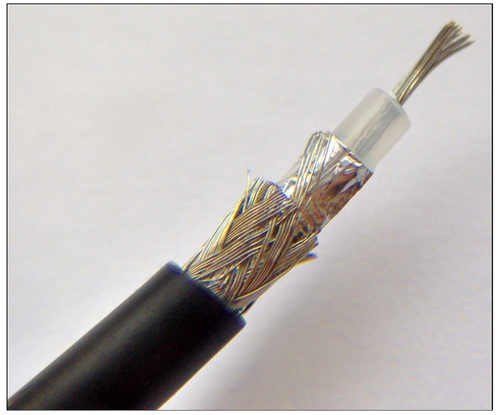

FDominec, CC BY-SA 3.0, via Wikimedia Commons




Evan-Amos, via Wikimedia Commons

...


physical media

fiber carrying light

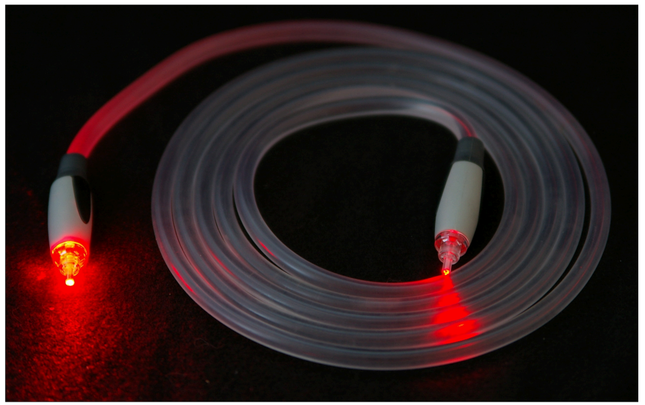


Hustvedt, CC BY-SA 3.0, via Wikimedia Commons

bundle of wires

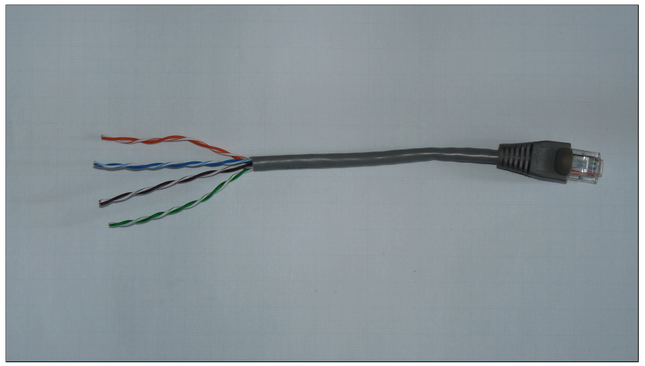


Dmitry G, CC BY-SA 3.0, via Wikimedia Commons

infrared through air

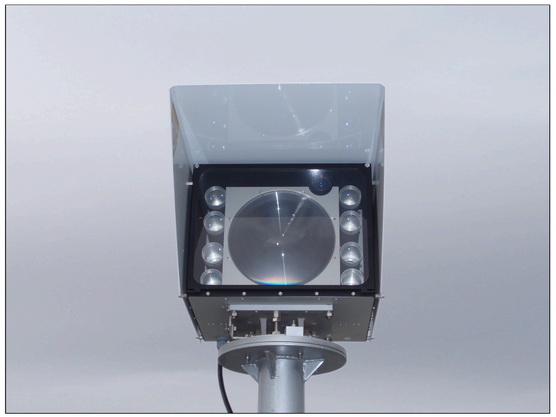

Adamantios, CC BY-SA 3.0, via Wikimedia Commons

single wire

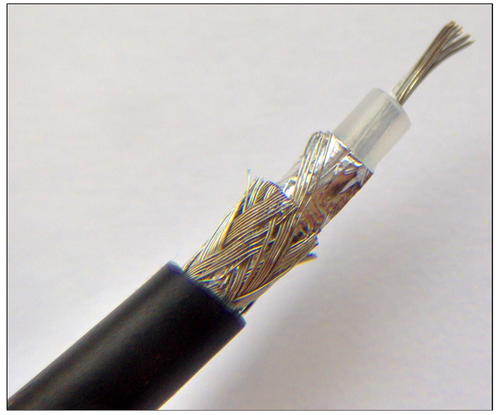

FDominec, CC BY-SA 3.0, via Wikimedia Commons

radio




Evan-Amos, via Wikimedia Commons

...

transmitting a signal

can vary…

- voltage
- radio/light intensity
- radio/light frequency
- …

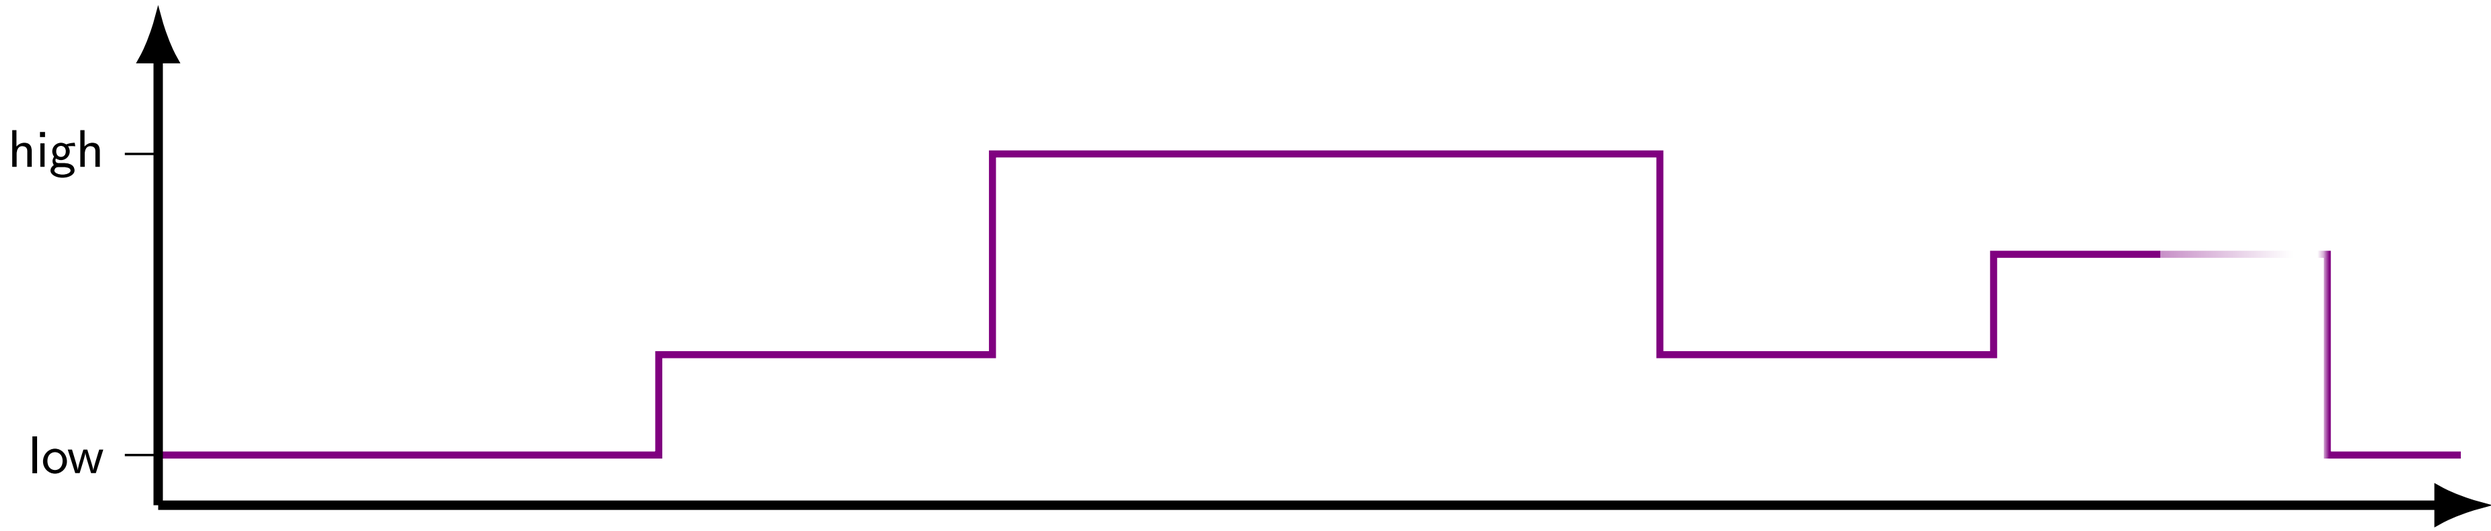


some simplifying assumptions

signal low/high — no in between


only one ‘channel’

- won’t have multiple wires/antennas/frequencies/etc.
- won’t modulate different things same time

want to send receive bits (0 or 1)

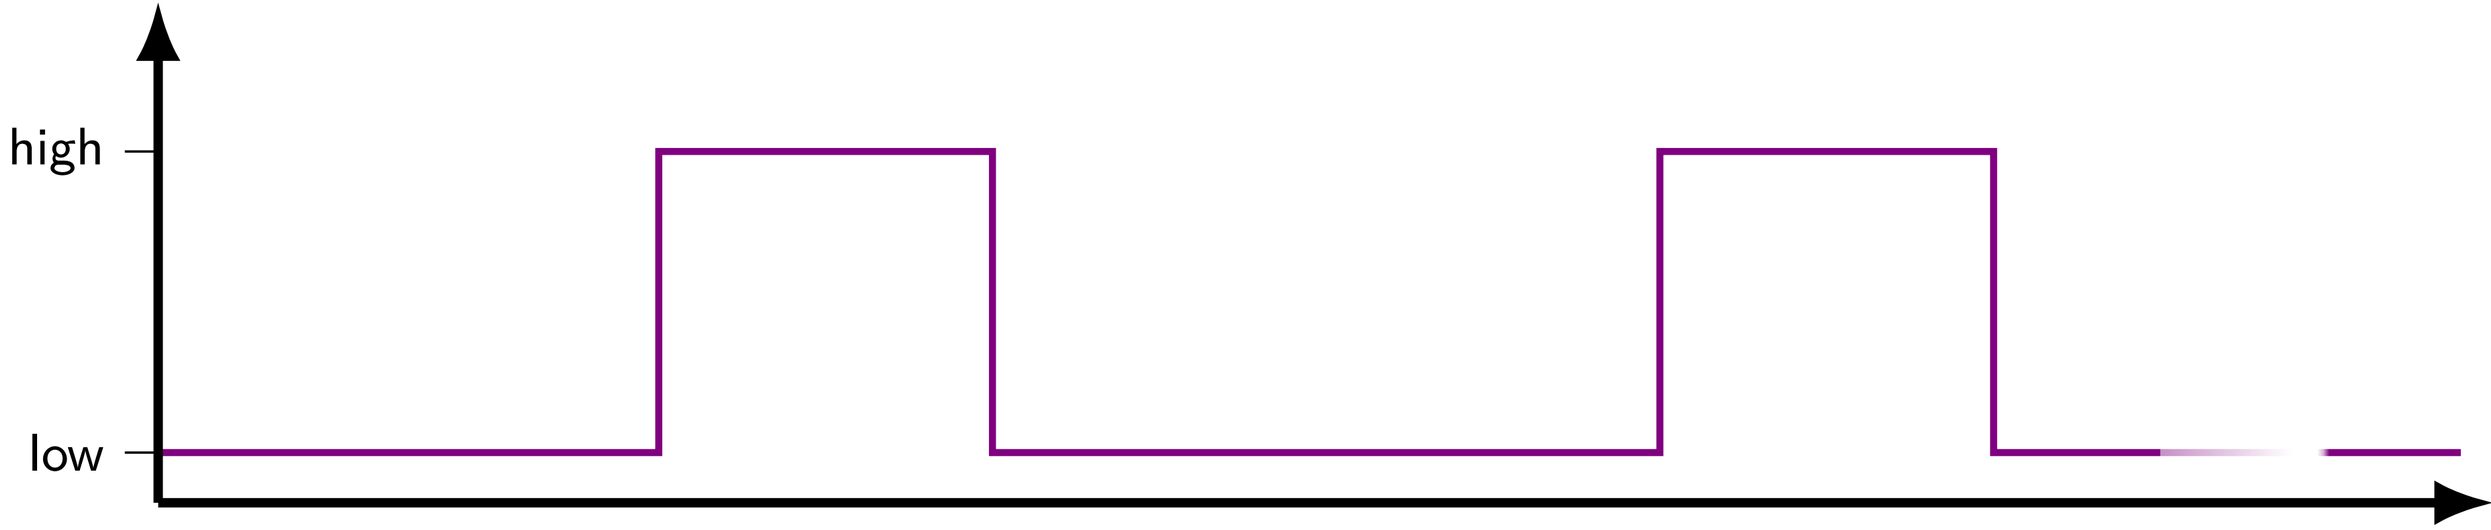


clocking

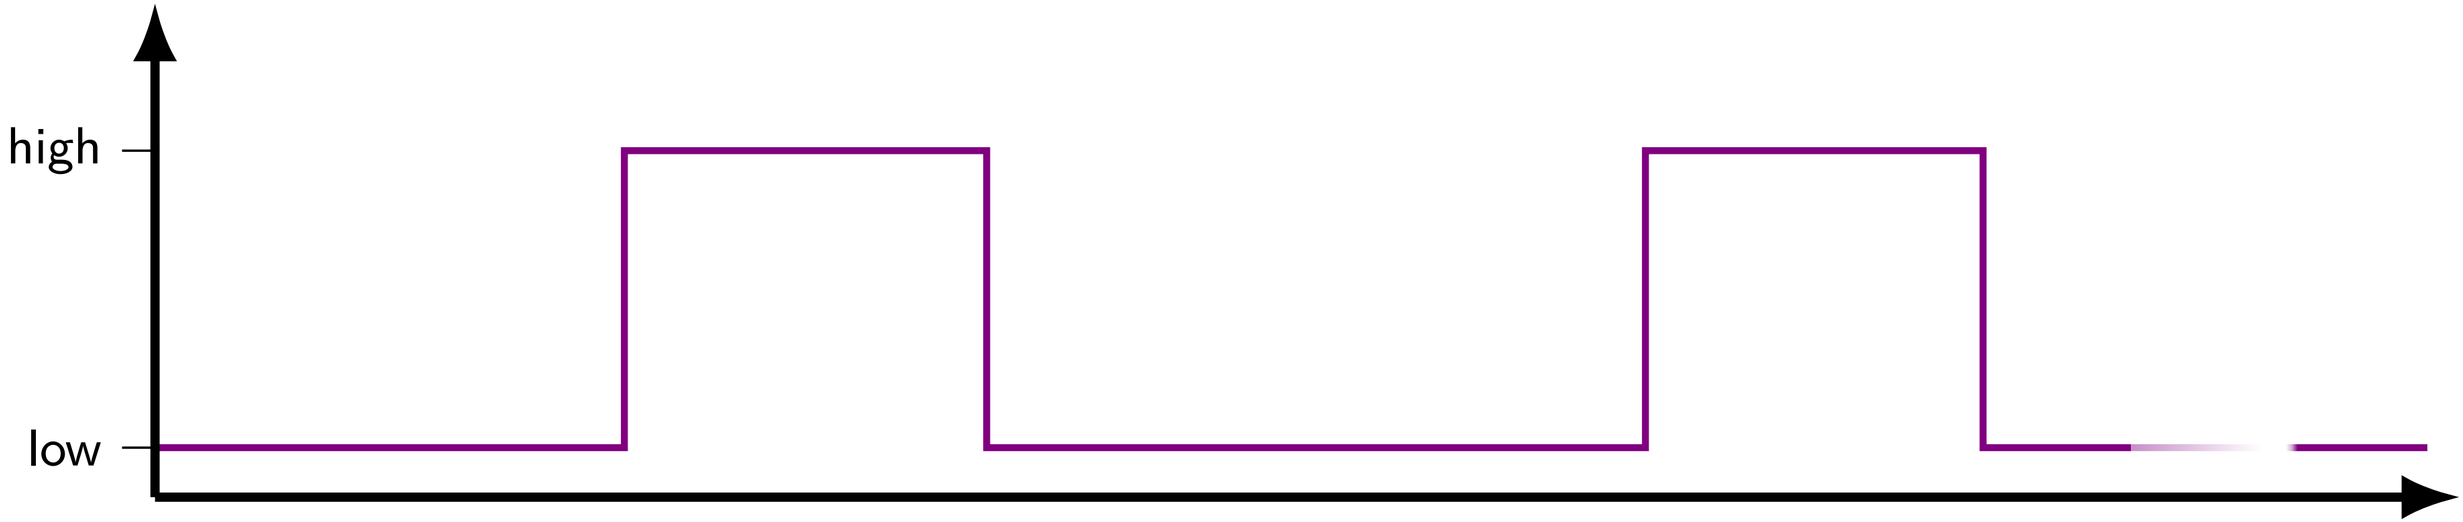


keeping a clock

keeping a clock

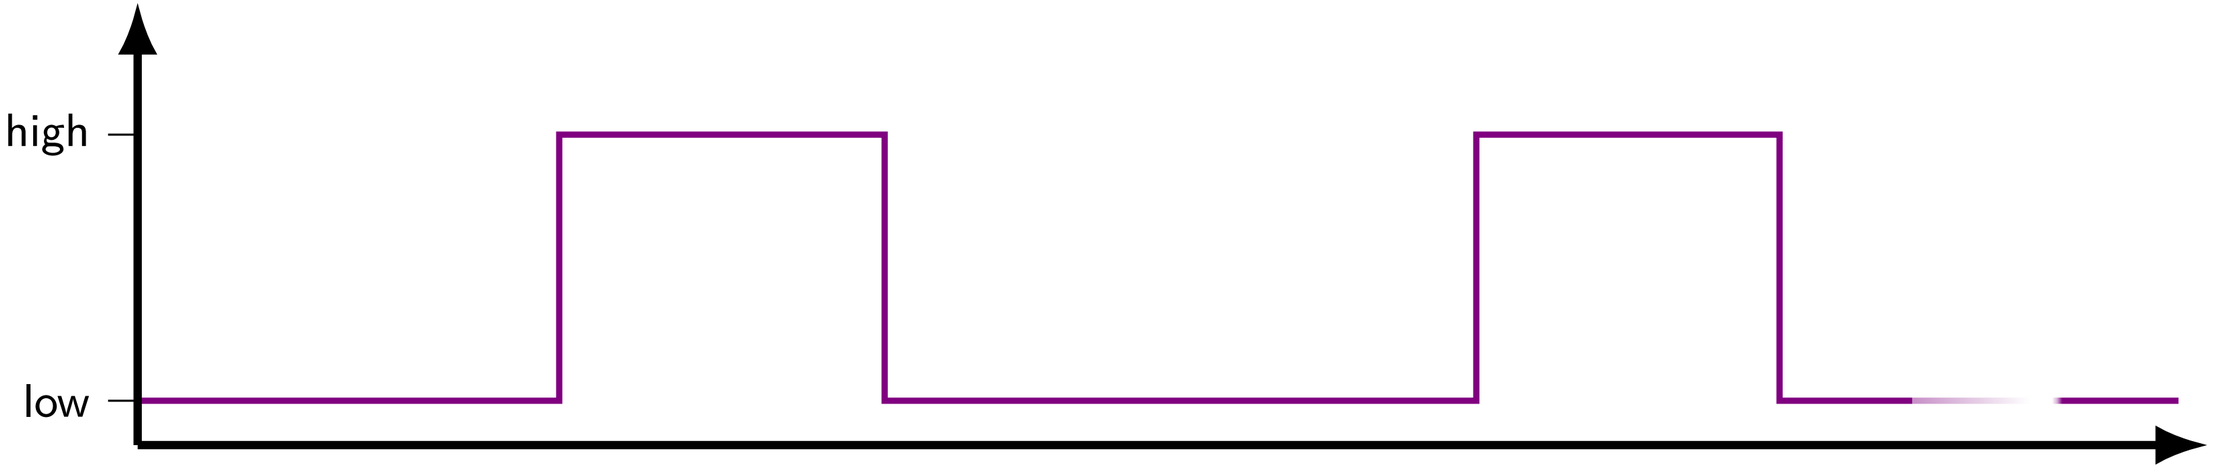





keeping a clock

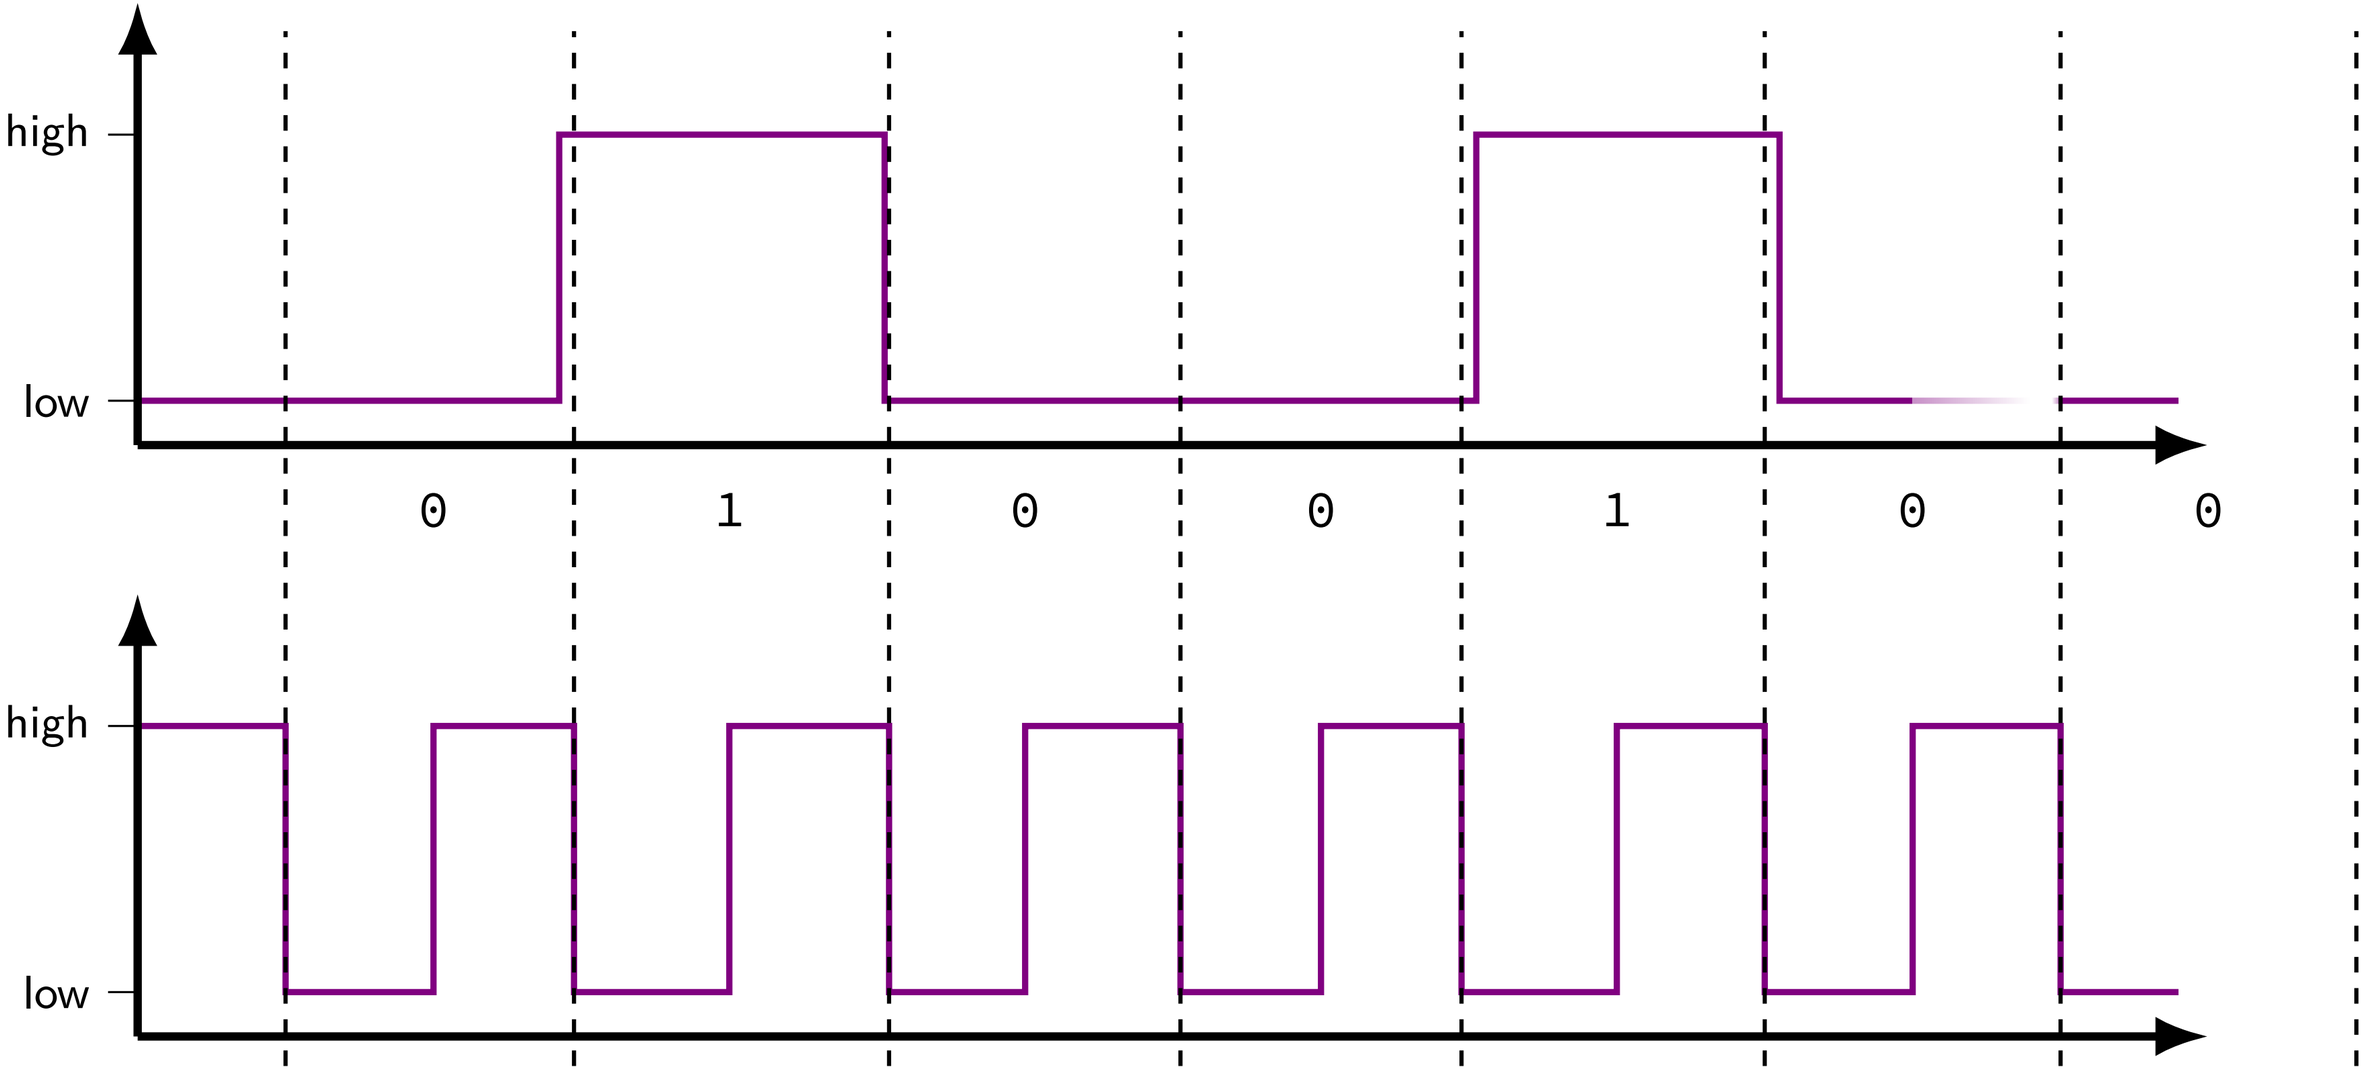

keeping a clock

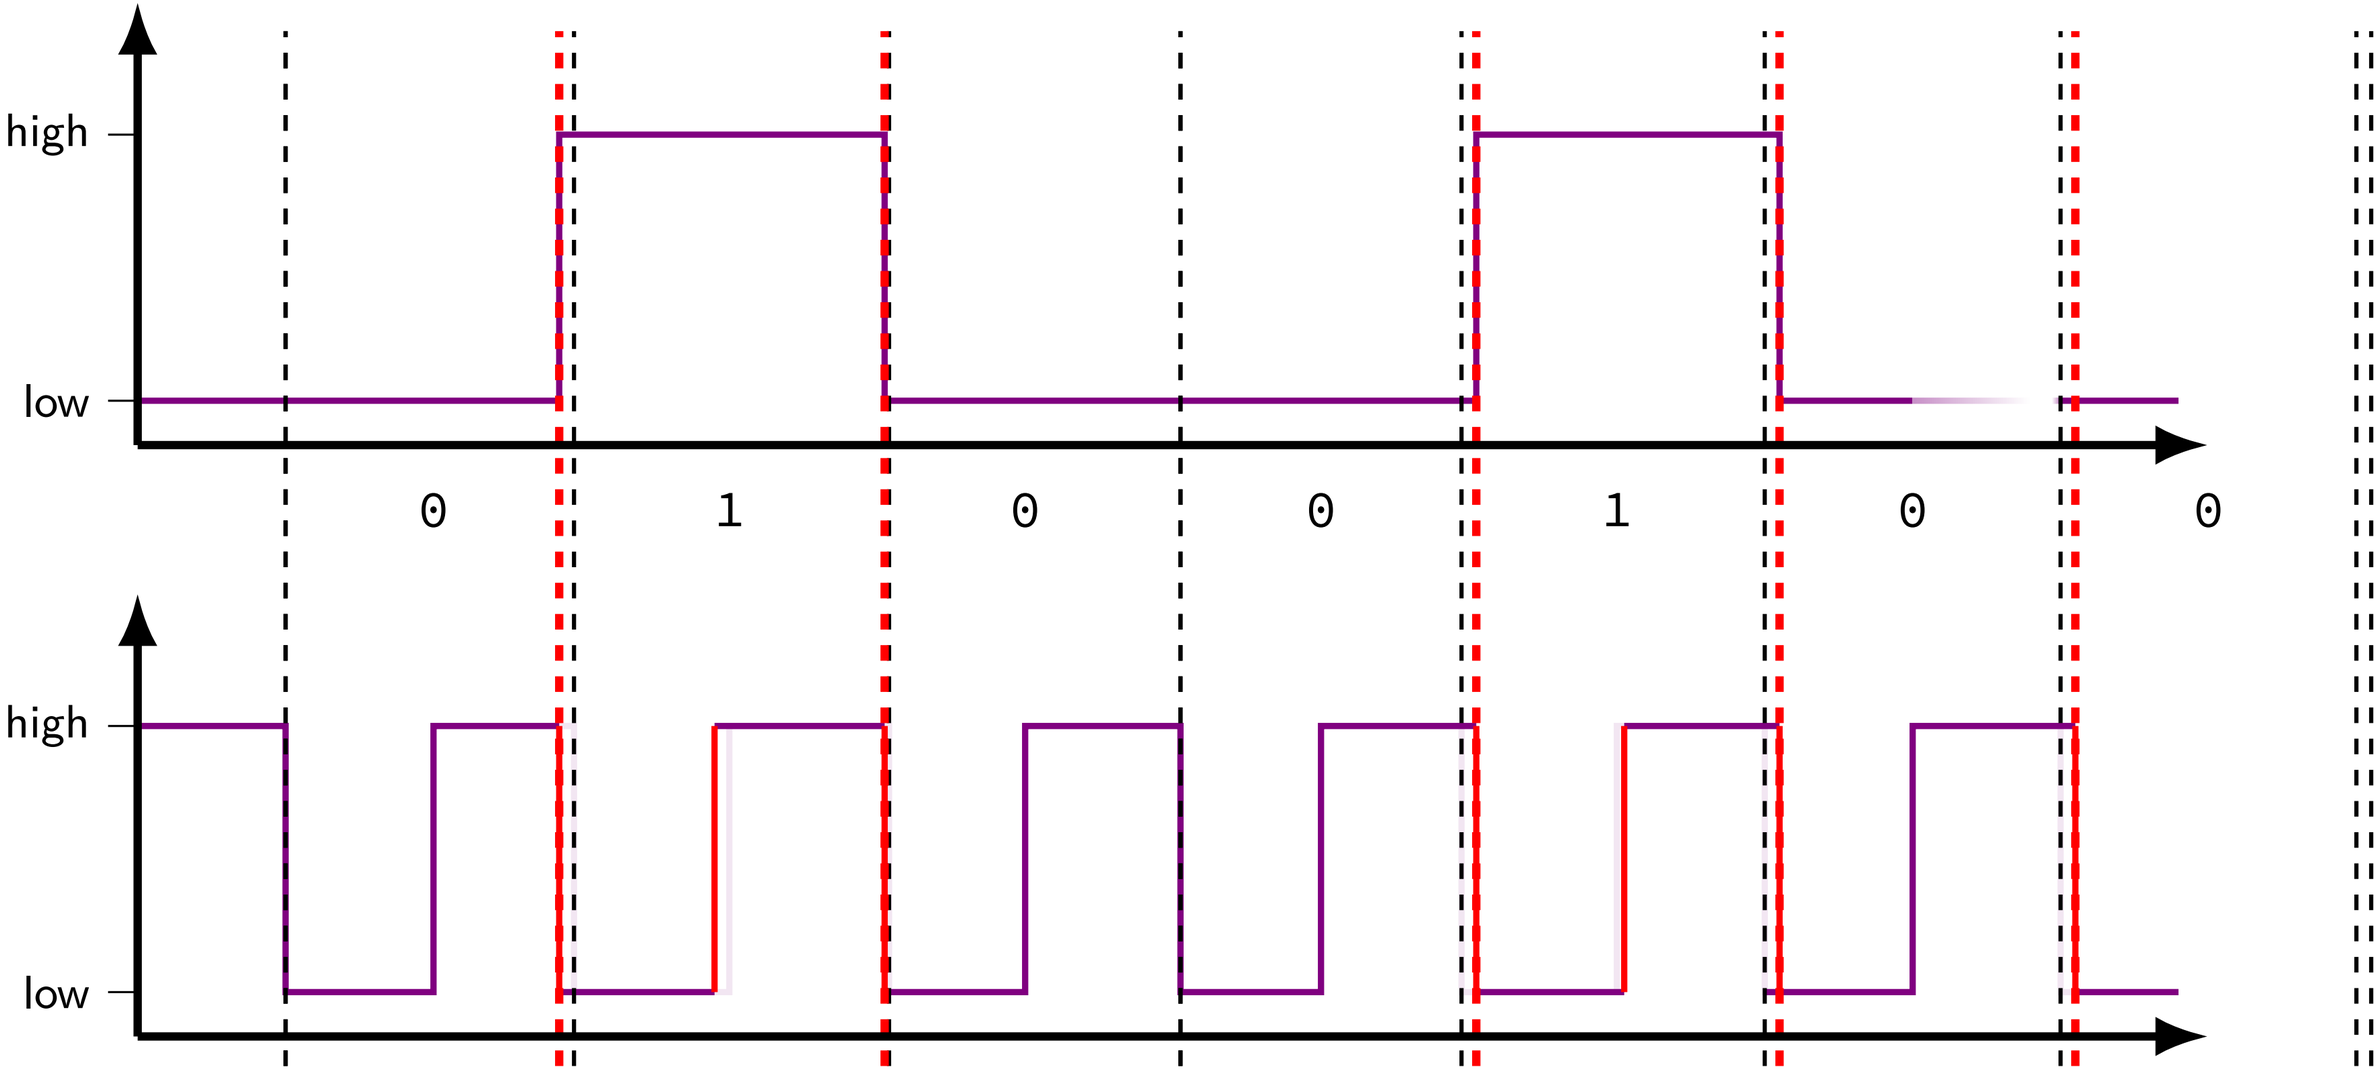

keeping a clock

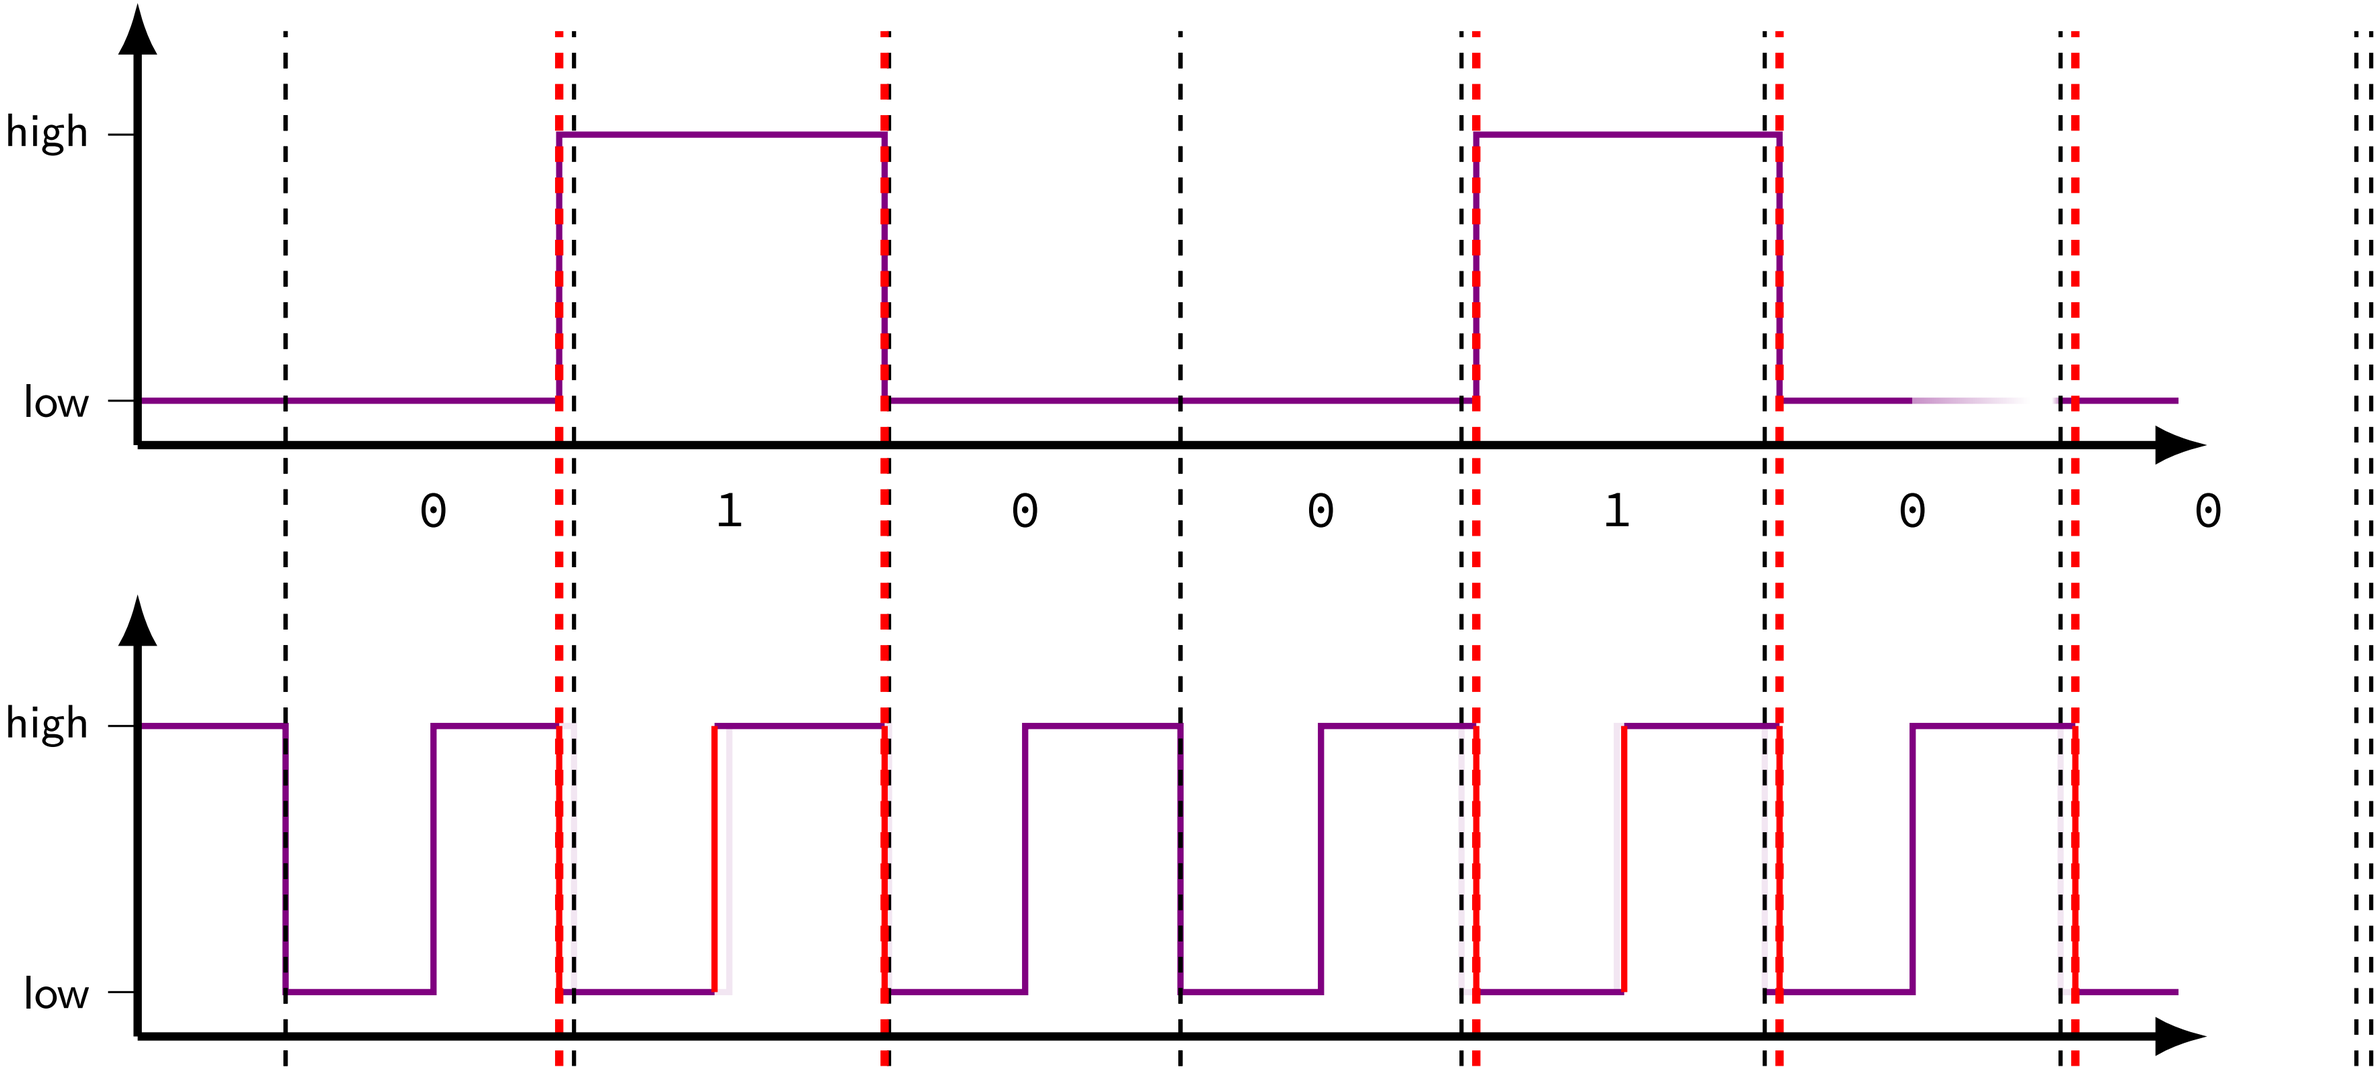

self-synchronizing?

can resynchronize clock by looking for transitions

but doesn’t work if lots of consecutive symbols

also, need to know where low and high point is

important to have transitions to low/high to calibrate this

self-sync and 'start-message'

one idea: set start-message to have lots of 0/1/0/1/0/1/0/1/etc.

something 10Mbit Ethernet does

but probably not enough to ensure things stay in sync on big message <hr class="vspace/>

alternate strategy — use encoding that adds extra transitions

example: Manchester encoding for 1-bit

other better encoding options

vary more than just one thing

- example: pulse amplitude and duration

use more than just low/high

- so more than just 0/1
- gives space for dedicated “start” symbol

probably covered in ECE Signals course?

used by almost all “fast” encodings

Backup slides

Manchester encoding

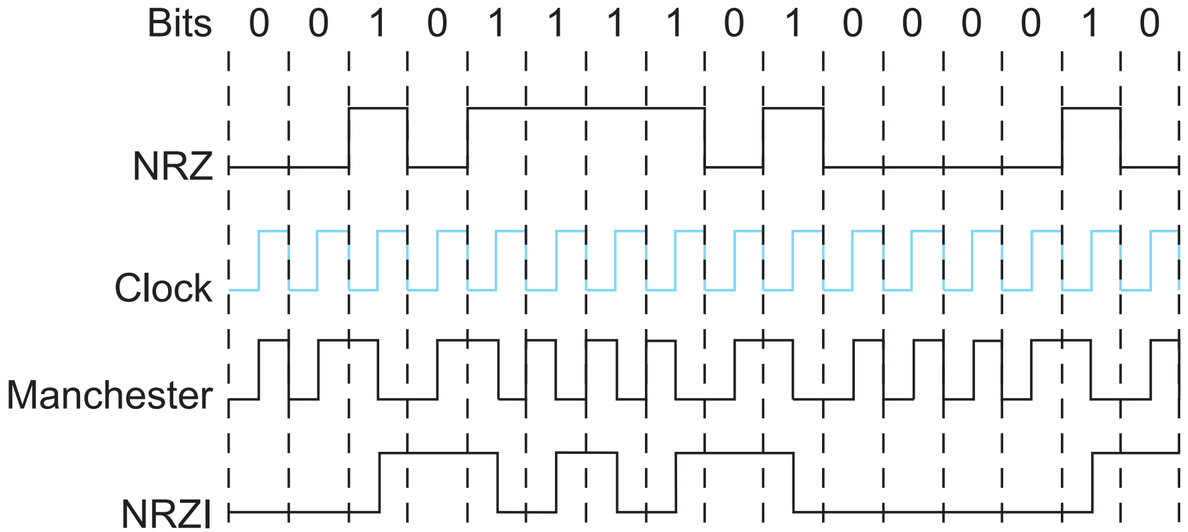


Figure 25 from Section 2.2 of Computer Networks: A Systems Approach (6th ed) (Peterson and Davie)

problem with Manchester

fixed the problem of too few transitions .5cm

but now most transitions don’t send information

means we aren’t making good use of wire/etc. capacity .5cm

there are more clever compromises

(example: 4B5B encoding)