
STIMULAN®


PREPARATION GUIDE FOR STIMULAN Rapid Cure

Use the mixing solution from the tube provided in the pack. Do not add any other fluid. View a preparation guide video at **biocomposites.com**

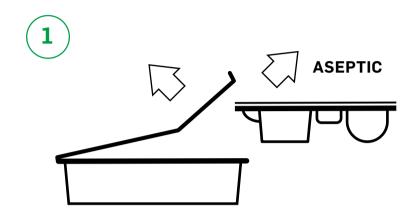


Open outer packaging using standard aseptic 'non-touch' technique to avoid contact with contents. Aseptic personnel only must handle the inner pack



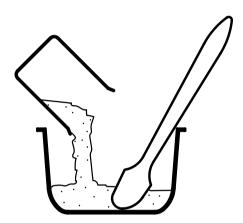


Empty **STIMULAN**Rapid Cure powder into the sterile mixing bowl provided

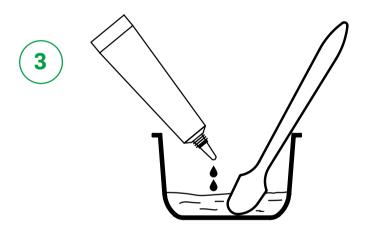

Add **STIMULAN** Rapid Cure mixing solution and mix thoroughly until a smooth paste is formed (approx. 30 seconds). Do not overmix. Paste will have a working time of I-2 minutes and will set approximately 4 minutes after mixing



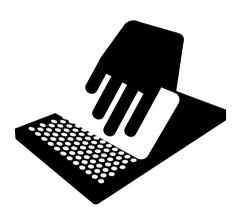

Select the size of bead required and apply a uniform layer of paste onto the bead mat provided. Use the paste applicator to ensure complete filling of each bead cavity





Allow paste to set undisturbed for at least 8 minutes after mixing. Flex bead mat to release beads





Check structural integrity by compressing a bead between thumb and index finger

For indications, contraindications, warnings and precautions see Instructions for Use. Concurrent use of locally administered antibiotics may affect the setting time.

©2016, Biocomposites and Stimulan are registered trademarks of Biocomposites Ltd. All rights reserved. No unauthorised copying, reproduction, distributing or republication is allowed unless prior written permission is granted by the owner, Biocomposites Ltd. Patents granted: GB2367552, EP I204599 US 678039I, EP 259423I BI, US 8883063, ZL 20I2I0466II7.X, GB24967I0/Patents pending: GBI502655.2, EP I61542I0.5, US I5/040075, CN 20I6I00897I0.5.

