


## Preparation guide for injection

Preparation of **genex** takes only a few careful moments. Use only the mixing solution provided. Do not add any additional substances to the paste. All times stated are measured from the start of the timer.





Open pack and remove all components using an aseptic, non-touch technique. Retain inner tray as a mixing bowl



Remove plunger from syringe and place to side. Screw extension tip on to the syringe



Gently tap pot, remove lid and empty powder into the sterile mixing bowl



Add pre-measured sterile solution to powder






Start timer



Mix thoroughly until paste is formed (approx. 15 seconds). Do not over mix

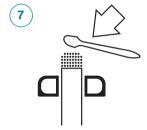

Use spatula to press paste into the syringe as quickly as possible



genex is now ready to use

## Surgeons tips

- Prepare site prior to commencing genex preparation
- 2. Use timer during preparation
- 3. Additional powder is provided to ensure the injected dose is correct after allowing for the small amount of paste that will remain in the cannula
- 4. If using an alternative cannula to the one provided a I2 gauge is the narrowest genex paste will flow through



**genex** is injectable up to 3 minutes from the addition of the mixing solution




At 15 minutes **genex** will have hardened and is ready for drilling or closure

## Preparation guide for manual implantation

Preparation of **genex** takes only a few careful moments. Use only the mixing solution provided. Do not add any additional substances to the paste. All times stated are measured from the start of the timer.





Open pack and remove all components using an aseptic, non-touch technique. Retain inner tray as a mixing bowl



Gently tap pot, remove lid and empty powder into the sterile mixing bowl



Add pre-measured sterile solution to powder



Start timer



Mix thoroughly until paste is formed (approx. 30 seconds). Do not over mix



Leave undisturbed until timer reaches 3 minutes.

genex is now ready to use



Mold and implant **genex**. Do not manipulate after 5 minutes



15 MIN

At I5 minutes **genex** will have hardened and is ready for drilling or closure

## Surgeons tips

- Prepare site prior to commencing genex preparation
- 2. Use timer during preparation

For indications, contraindications, warnings and precautions see Instructions for Use.

©2020, Biocomposites, genex and Power to Restore are trademarks/ registered trademarks of Biocomposites Ltd. All rights reserved. No unauthorized copying, reproduction, distributing or re-publication is allowed unless prior written permission is granted by the owner, Biocomposites Ltd.

Patents granted: EP I390086 BI, US 8632796, CN ZL02809194.9, US 8496955