

- Notes:
1. Apply Loctite to threads of FN5 prior to inserting into FN1
 2. Apply Loctite to threads of FN3 prior to inserting into FN5

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A	Initial Release	5/17/2014	

D

D

C


C

B

B

A

A

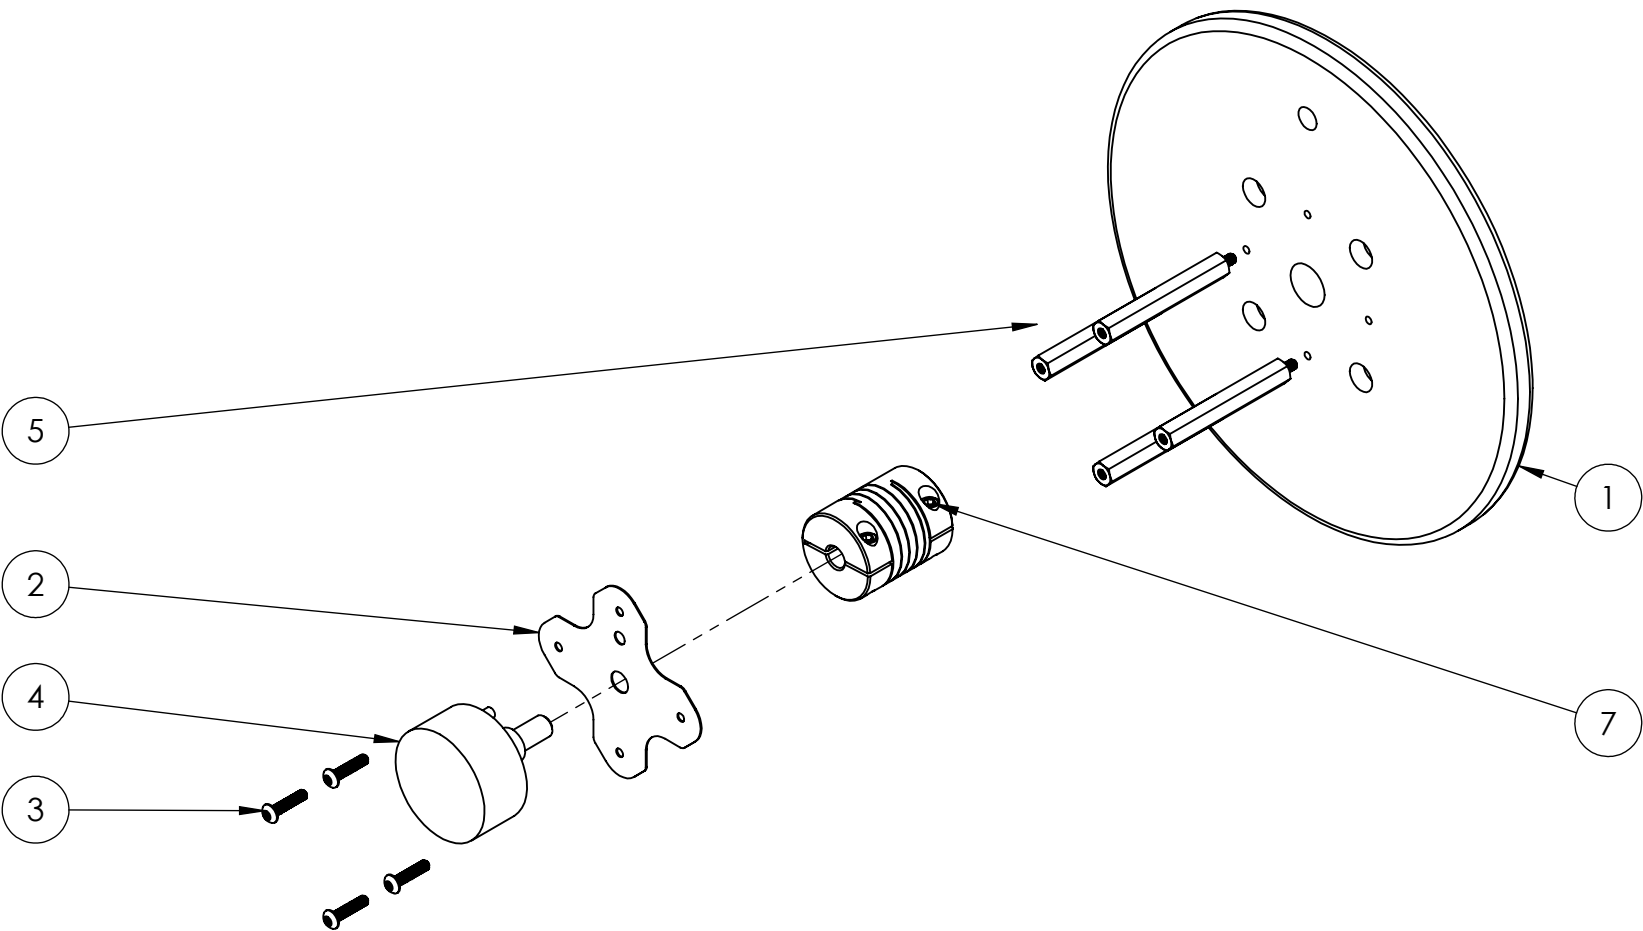

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	OM500001	Ring that Rotates within the Foot	1
2	OM500008	Holds potentiometer inside the vertical post	1
3	92949A110	18-8 Stainless Steel Button-Head Socket Cap Screw 4-40 Thread, 1/2" Length	4
4	Potentiometer, Vishay, 132,138,139	Potentiometer	1
5	91075A001	18-8 SS Male-Female Threaded Hex Standoff 1/4" Hex, 1-3/4" Length, 4-40 Screw Size	4
7	2505K131	Engineered Polymer Couper 0.25" to 0.25" Overall Length 1.1"	1

SolidWorks Student Edition.
For Academic Use Only.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UNIVERSITY OF UTAH. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF UNIVERSITY OF UTAH IS PROHIBITED.

			UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: ANGULAR: ±1° X.X ± 0.100 X.XX ± 0.030 X.XXX ± 0.010 BREAK SHAPR EDGES .005 MAX. ALL SMALL FILLITS .002 MAX. INTERPRET GEOMETRIC TOLERANCING PER: ASME Y14.5		NAME	DATE	UTAHTELEROBOTICS			
				DRAWN	RN	05/2014	TITLE:			
				CHECKED			Rotary Base Plate			
				ENG APPR.						
				MFG APPR.						
			MATERIAL	COMMENTS:			SIZE	DWG. NO.		REV
DASH	NEXT ASSY	USED ON	FINISH				B	OM700001		A
APPLICATION			DO NOT SCALE DRAWING				SCALE: 1:2		SHEET 1 OF 2	

8

7

6

5

4

3

2

1

