
01 VX INPUT / 5 V BUCK


TPS62130: 3 A, 2.5 MHz | Vout = 0.8 V x (1 + 120k / 22k) = 5.16 V

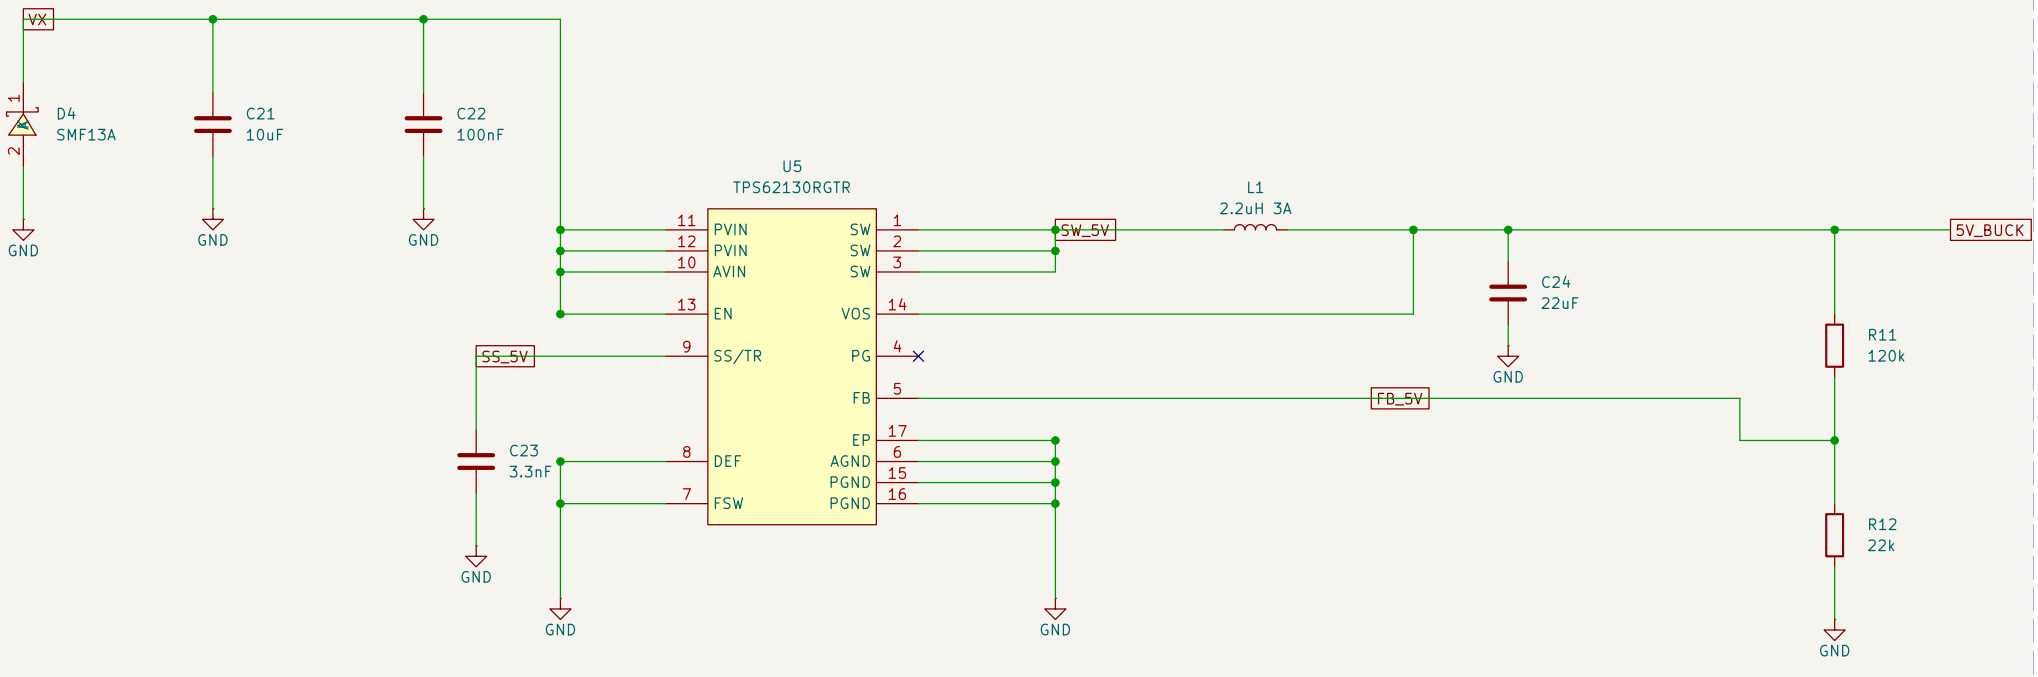

FSW = GND: 2.5 MHz; DEF = GND


02 5 V SOURCE PRIORITY

Buck–priority power mux | 5V_BUCK preferred, USB VBUS fallback

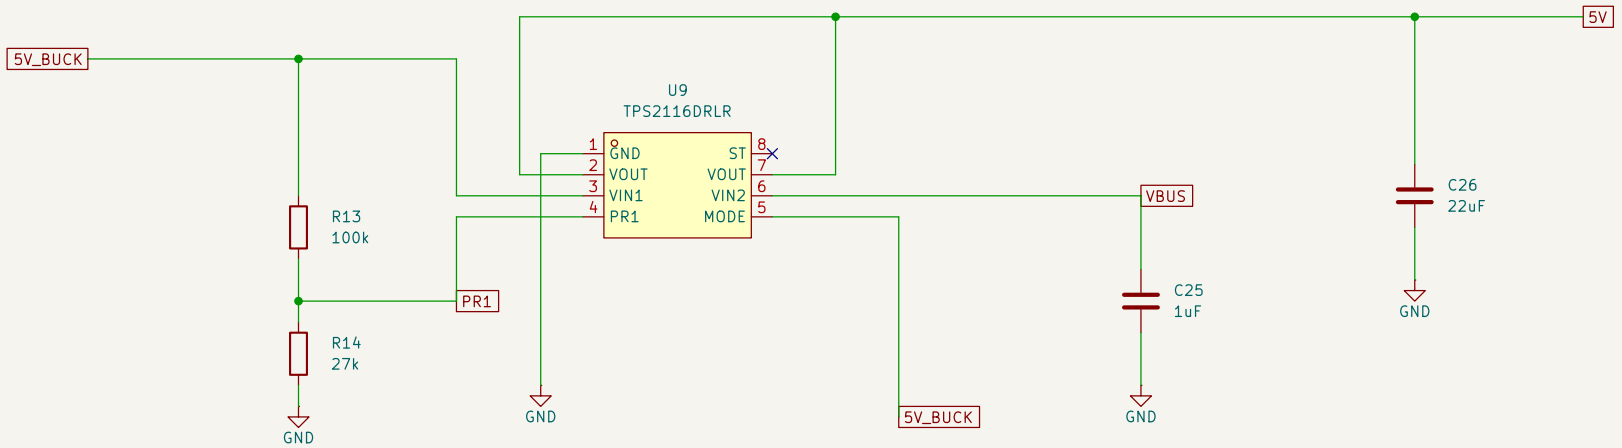


03 VSYS / MCU 3.3 V

Diode-OR supply -> TPS629210 -> MCU rail; fused DSM supply branch

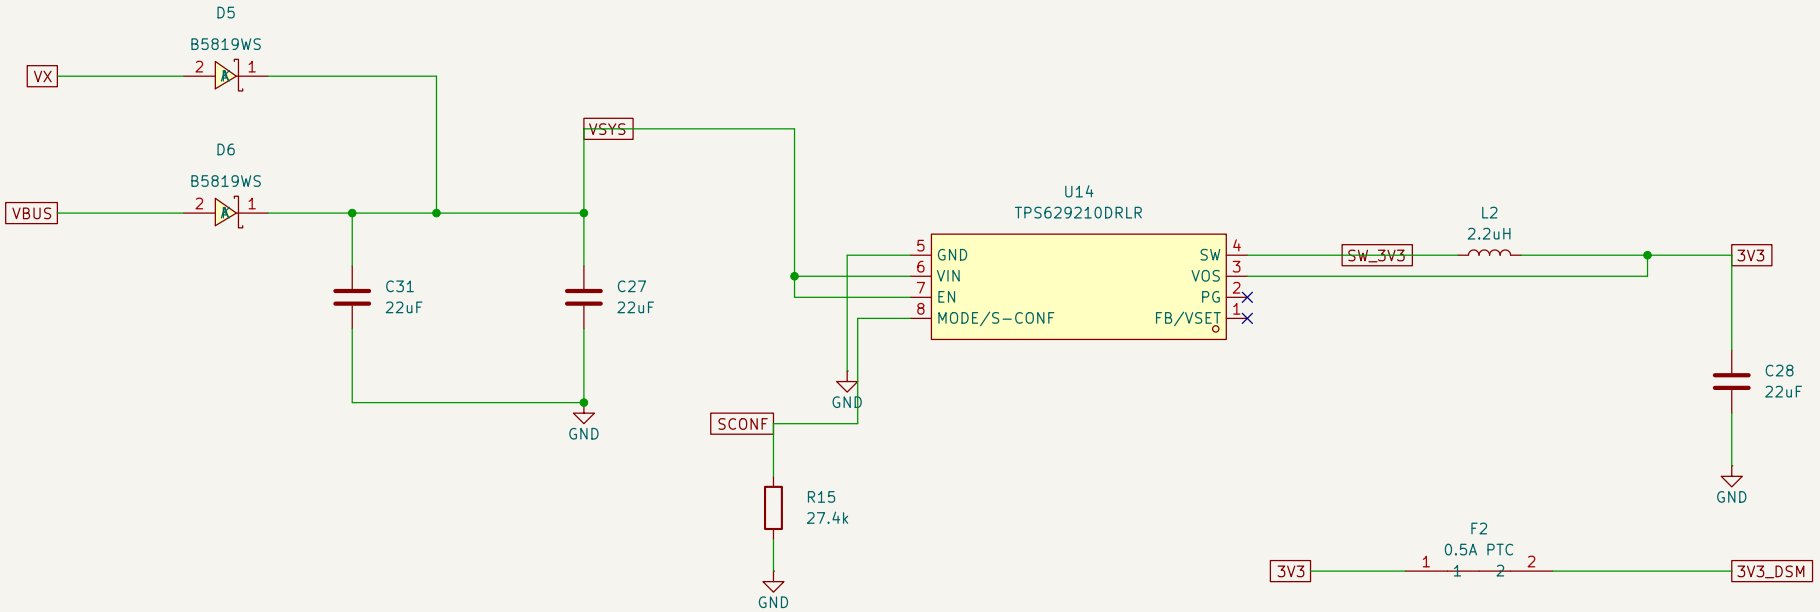

04 LOW-NOISE SENSOR SUPPLY


TPS70933: EN pin 3 intentionally floating, supported by internal pull-up

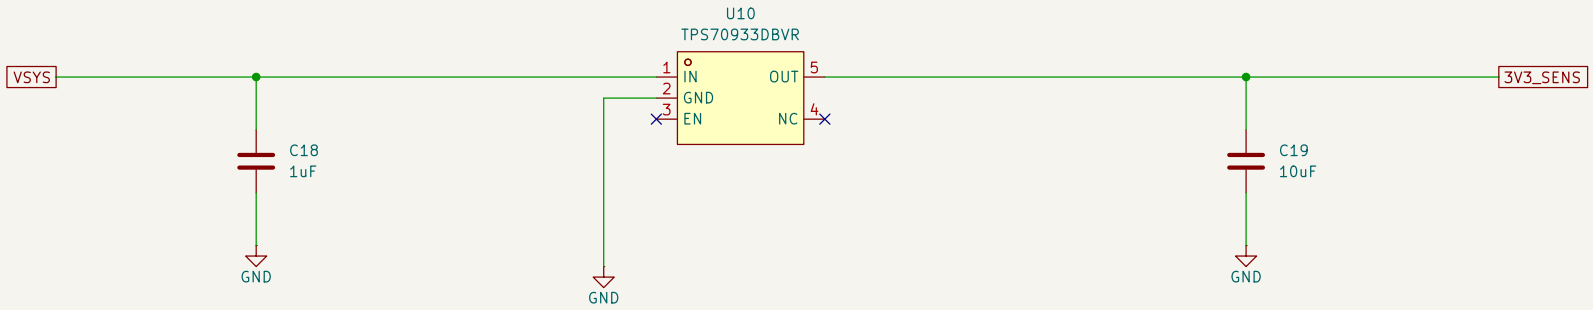

EN and NC are intentionally unconnected. Do not tie EN to VSYS.

05 VOLTAGE MONITORING / POWER FLAGS

ADC divider filters | VX_SENSE -> U1.9; 5V_SENSE -> U1.10

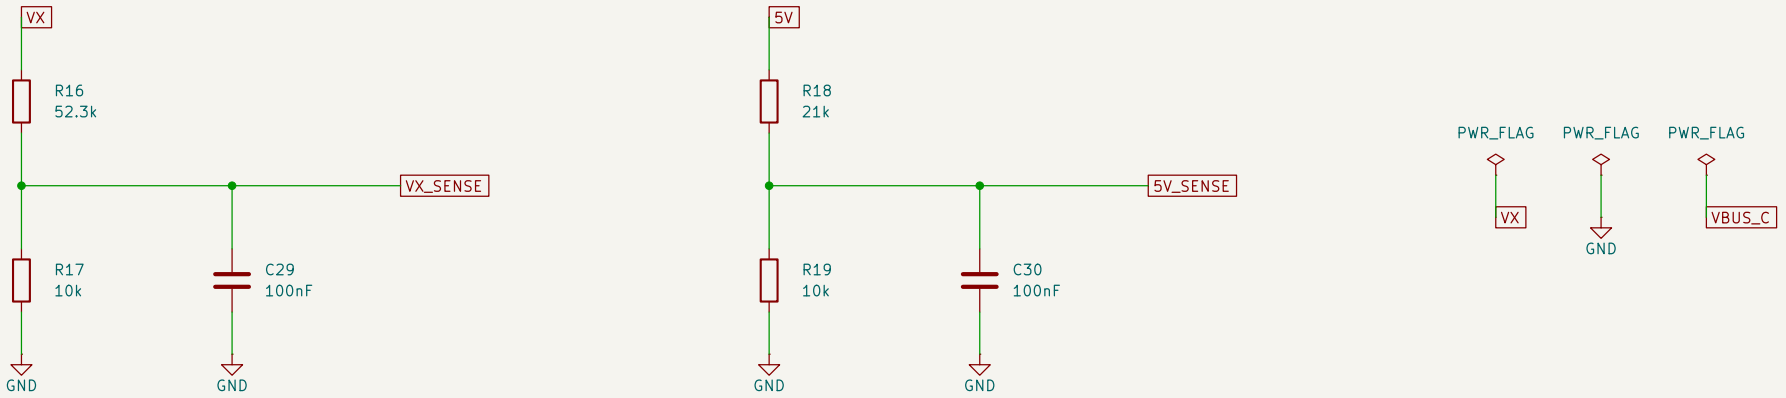


06 STM32F722 CORE

Rotorflight RDMS-NEXUS_F7 pin map; boundary labels connect the functional units

U1


STM32F722RET6

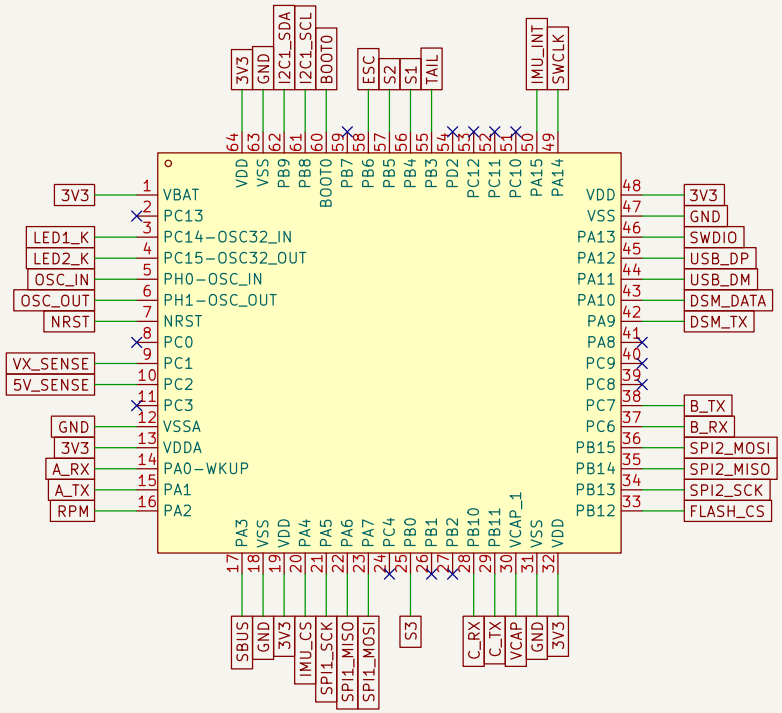

SPI1: inertial sensor | SPI2: blackbox | I2C1: barometer

07 CLOCK / BOOT / DEBUG

8 MHz HSE with load capacitors; BOOT0 button and pull-down; SWD / reset pads

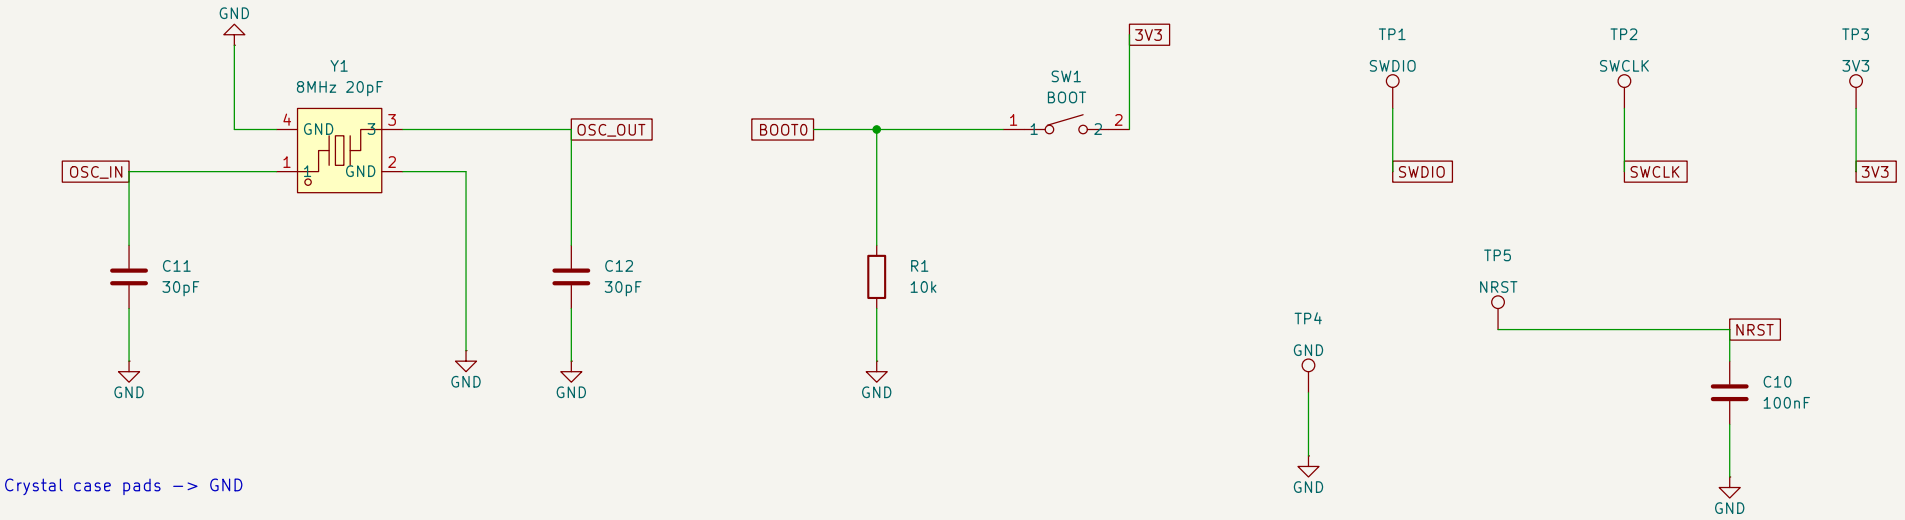


Crystal case pads -> GND

Press BOOT during reset for DFU

08 MCU DECOUPLING

Local 3V3 bypass: C1–4 VDD, C5 bulk, C6–7 VDDA, C8 VBAT; C9 VCAP only

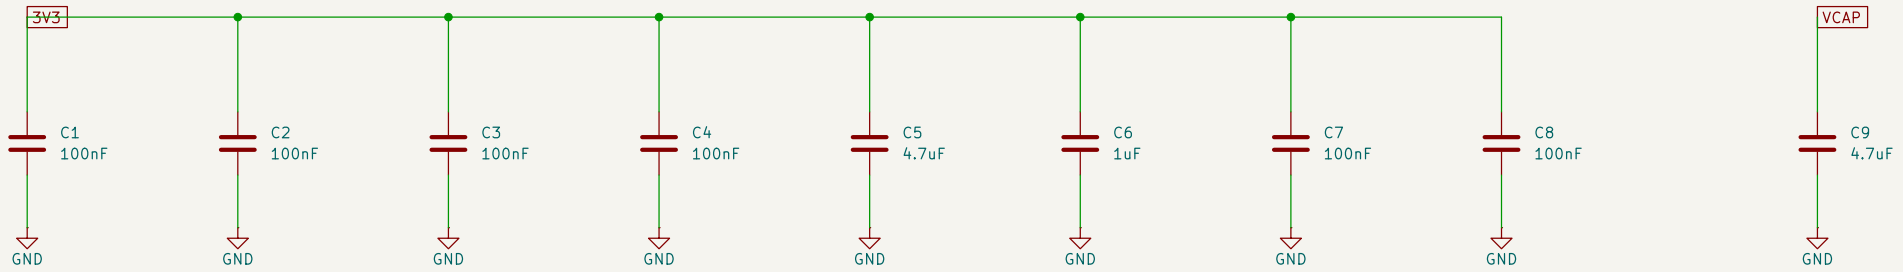


VDD pins 19 / 32 / 48 / 64

VDDA pin 13 / VBAT pin 1

VCAP pin 30


09 SPI1 INERTIAL SENSOR

ICM-42688-P; IMU_CS pull-up maintains SPI mode at startup; IMU_INT -> U1.50

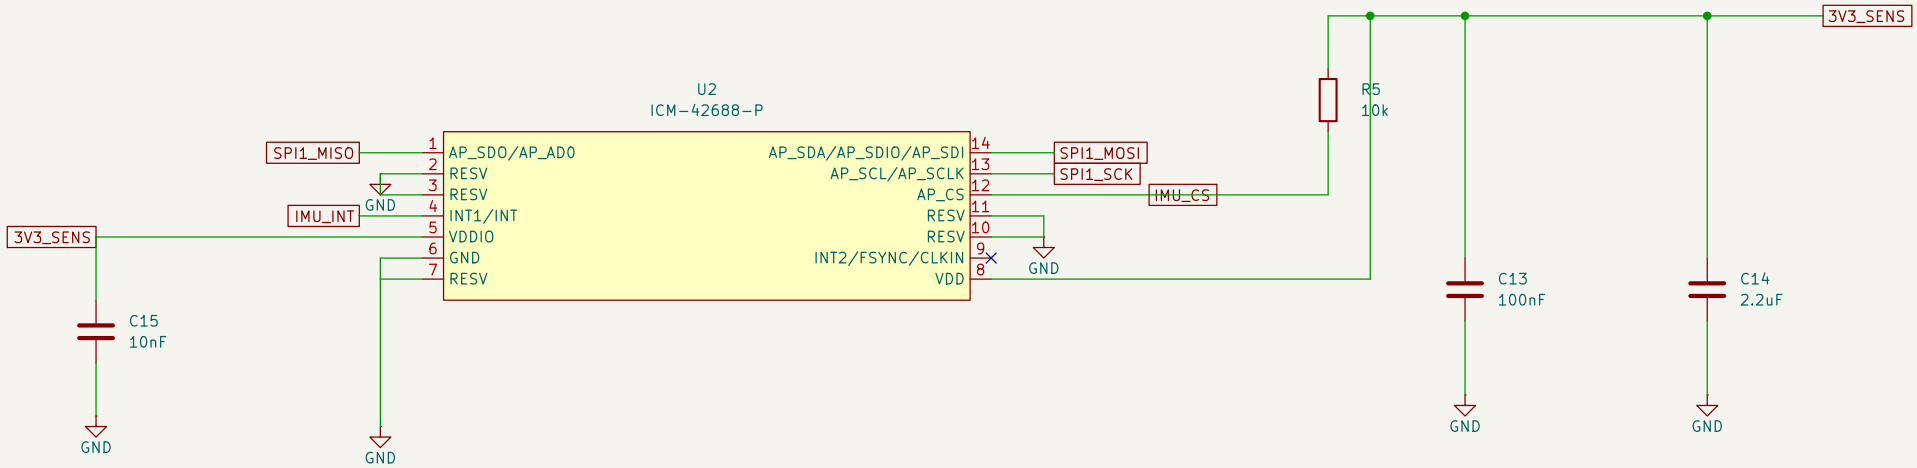


10 I2C1 PRESSURE SENSOR

DPS368 address 0x76: SDO low; CSB high selects I2C; local SCL / SDA pull-ups

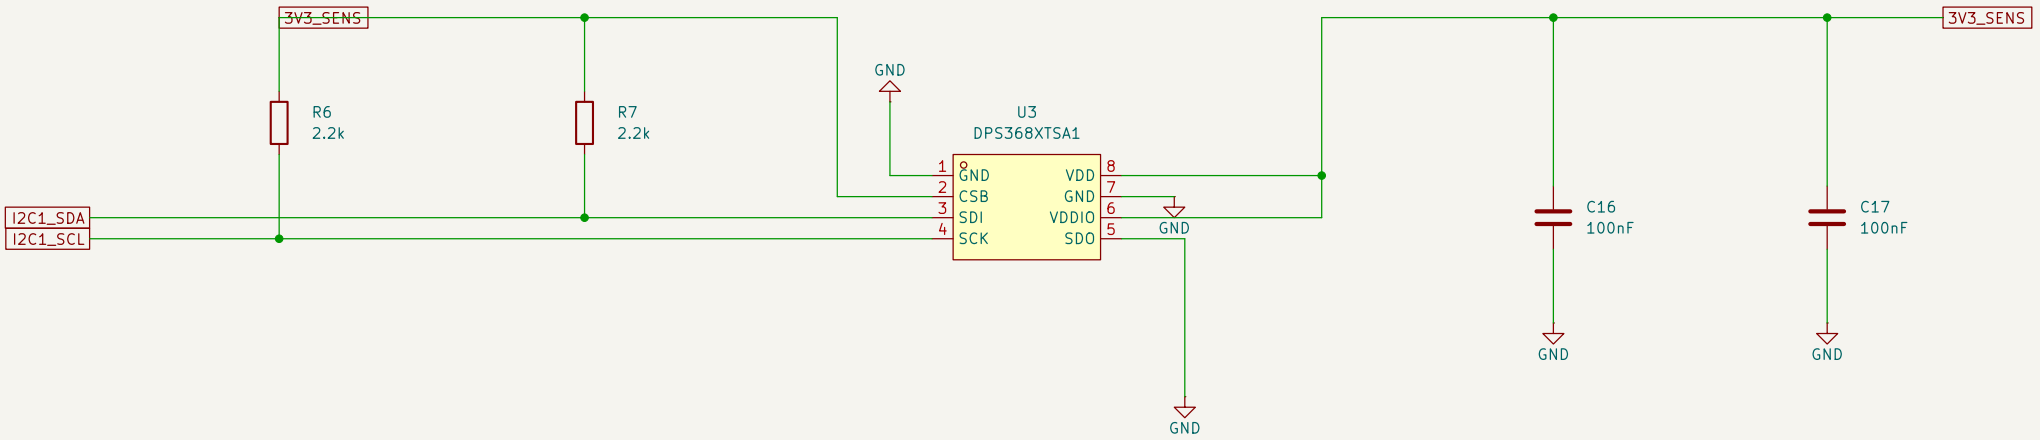


11 USB-C / PROTECTION

USB 2.0 device | CC pull-downs: 5.1k | F1: VBUS resettable fuse

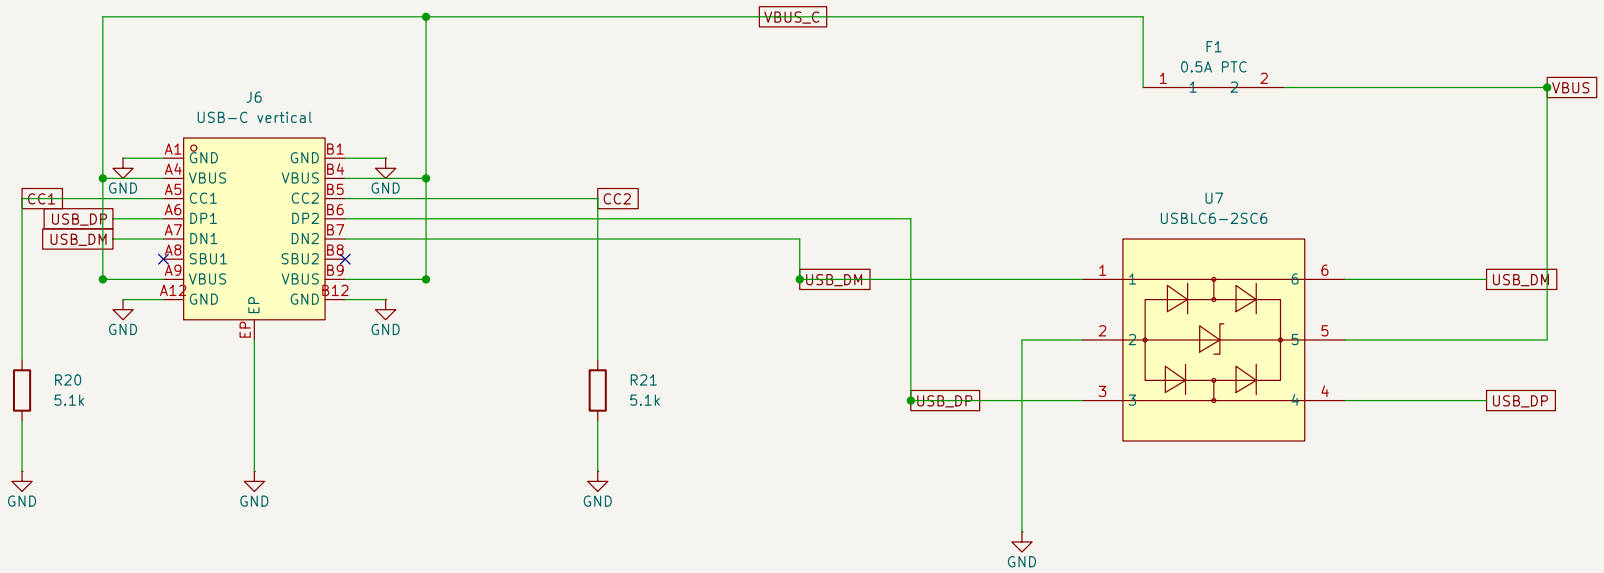


12 RECEIVER INTERFACES

A: UART4 / CRSF | B: UART6 | C: UART3 | DSM: UART1

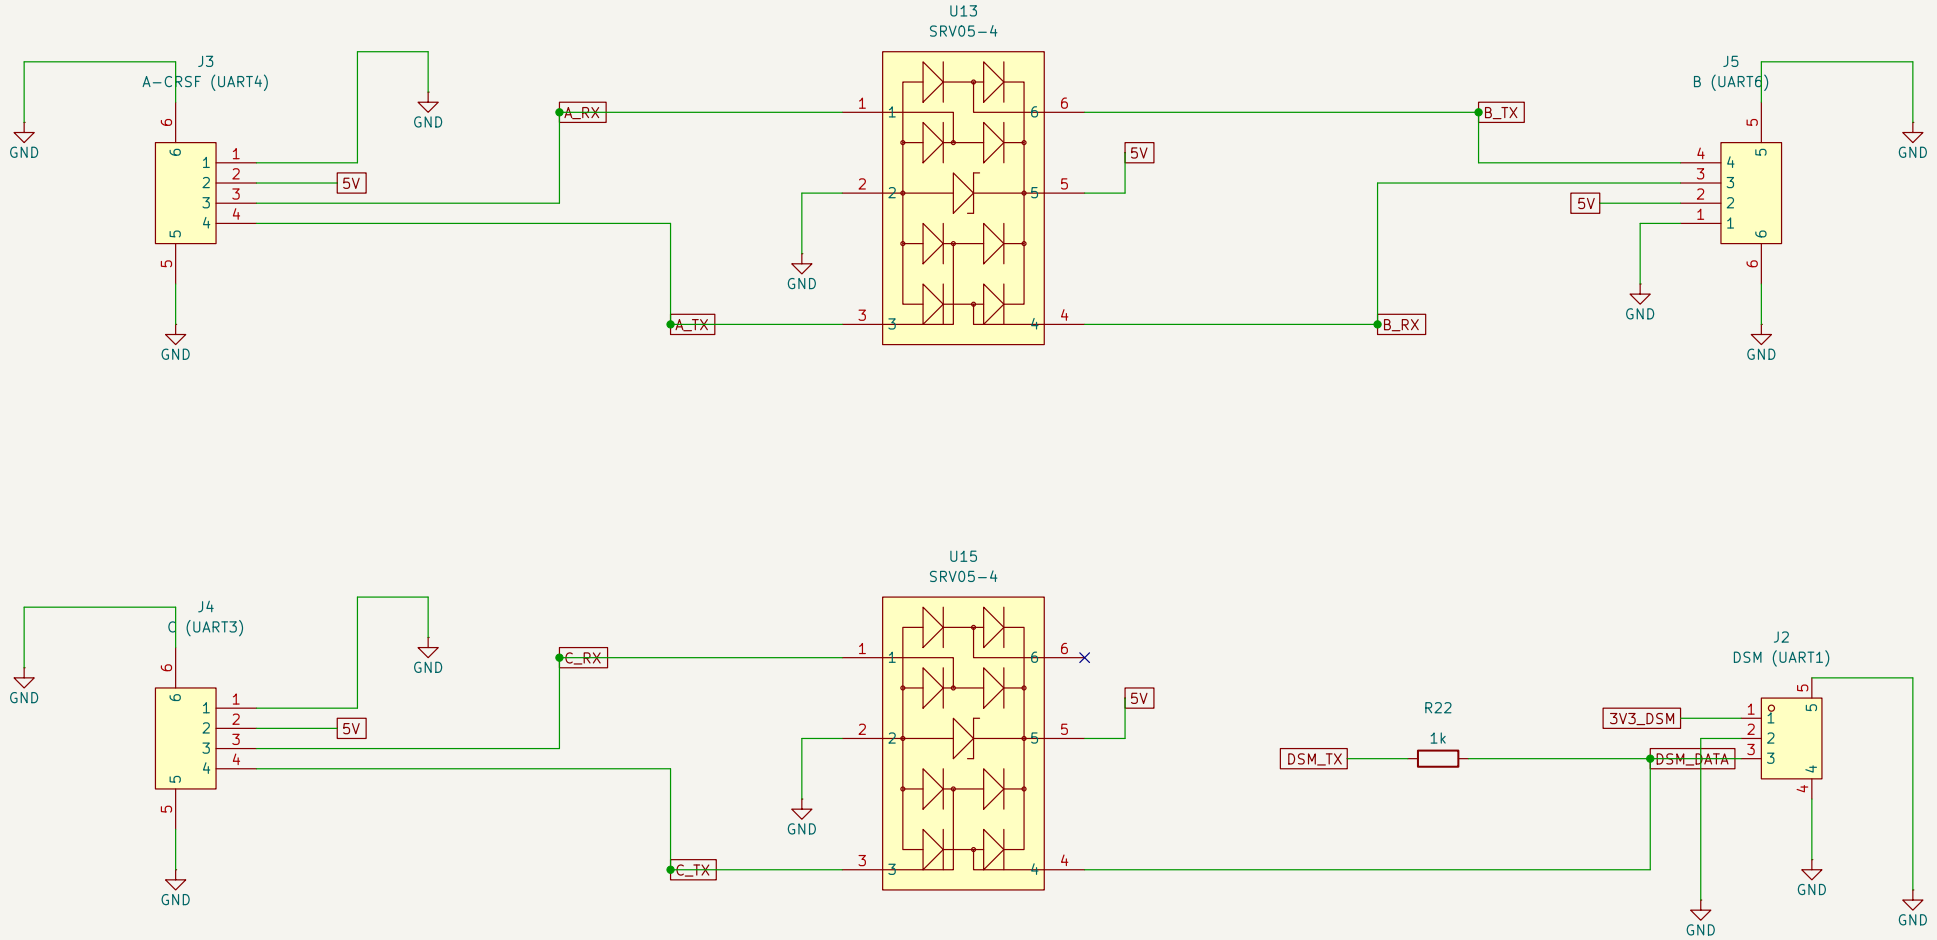


13 SERVO HEADER / SIGNAL CLAMPS

J1 connects the separate header board; VX / GND enter at pins 1 / 2

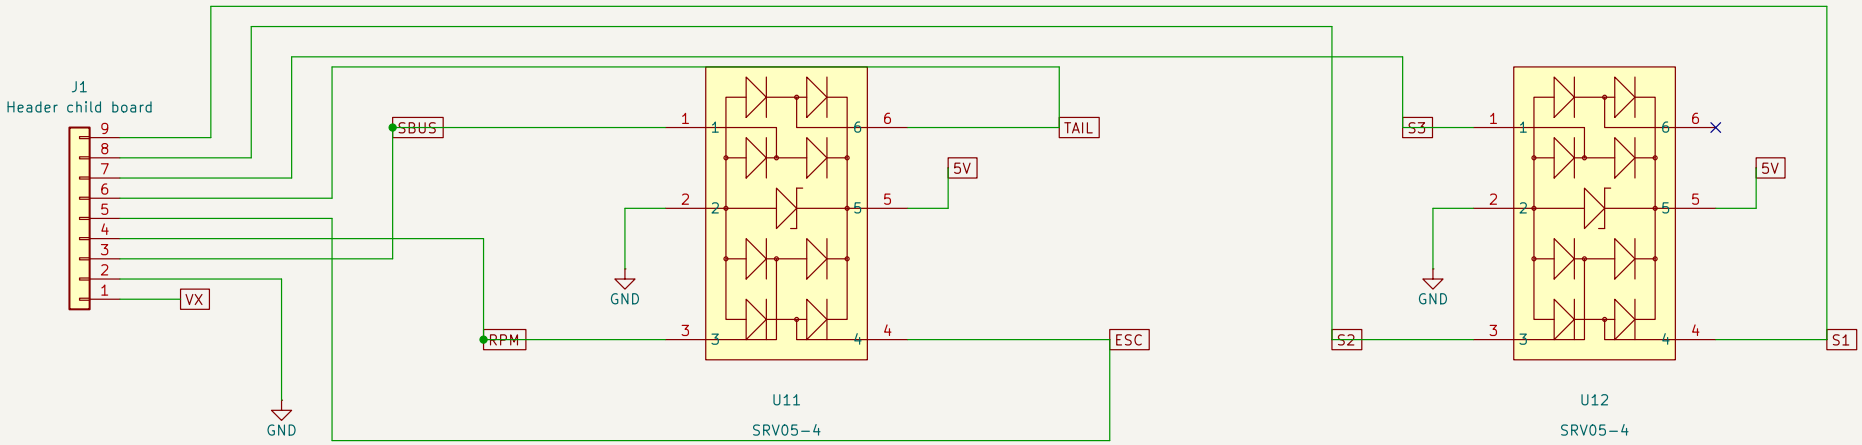

14 SPI2 BLACKBOX

W25N01GV 128 MB | /CS, /WP, /HOLD pull-ups | EP intentionally floating

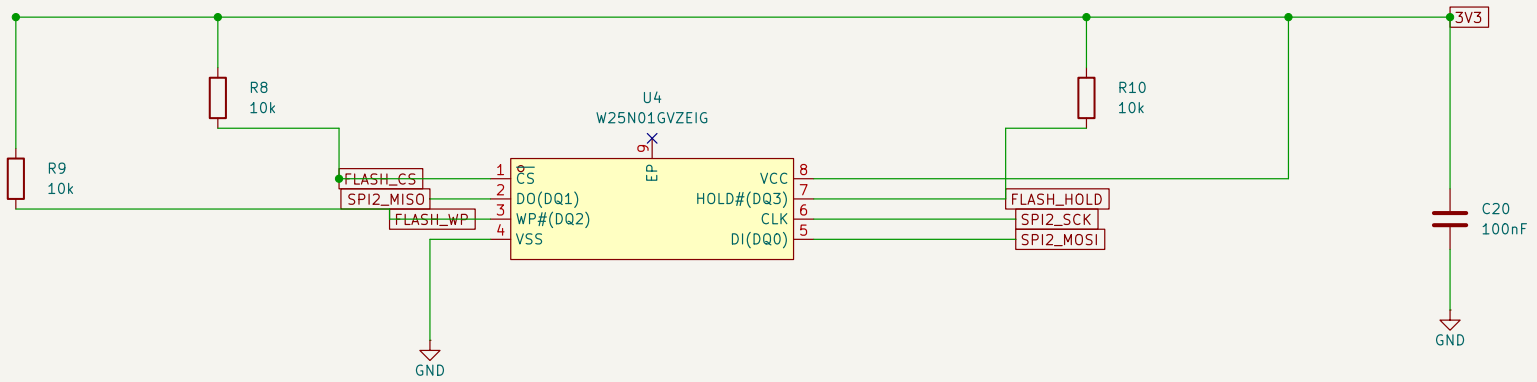

15 STATUS INDICATION

PC14 / PC15 sink current: active low | Blue indicates 5 V bus power

