


DC_OP_SIMS

```
.option wnflag=1 gmin=1e-18
.option savecurrents
.temp 27
.control
save all
op
write TT_LPCAS_FC_OTA.raw
set appendwrite
ac dec 20 1 1e10
let phase_mb = 180/PI*vp(Vout)
plot vdb(Vout) phase_mb
write TT_LPCAS_FC_OTA.raw
.endc
```

MODELS

```
.include $::180MCU_MODELS/design.ngspice
.lib $::180MCU_MODELS/sm141064.ngspice ss
```

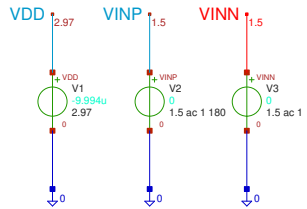

➔ Annotate OP

