

SERVICE PARTS LIST for 69NT40-541-001 to 199 Container Refrigeration Units



SERVICE PARTS LIST CONTAINER REFRIGERATION UNIT

MODELS 69NT40-541-001 to 199

TABLE OF CONTENTS

PARAGRAP	H NUMBER	<u>Page</u>
INTRODU	JCTION	iii
CONFIGI	JRATION IDENTIFICATION	iii
OPTION	DESCRIPTIONS	iii
1 QUICK AN	LIST - CLAMPS, FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS D REPLACEMENT UNIT FRAMES	1
	FRIGERATION UNIT ASSEMBLY	2
2.1	REFRIGERATION UNIT - AREA LOCATOR	2
2.1	REFRIGERATION UNIT - AREA LOCATOR	3
2.2	RAIN GUTTERS	4
2.3	HANDLES	4
2.4	THERMOMETER PORT	Ę
2.5	CONTROL BOX DOOR - LCD and LED Displays	6
2.5	CONTROL BOX DOOR - LCD and LED Displays	7
2.6	CONTROL BOX	8
2.7	CONTROL BOX - SHIELDS REMOVED, STD ELECTRICAL COMPONENTS, RM, HOURMETER & CFS, HOURMETER	10
2.8	SINGLE EVAPORATOR FAN CAPABILITY, EBS, ED	13
2.9	CONTROL BOX - CONTROLLER MODULE SECTION AND SOFTWARE CARDS	15
2.10	CONTROL BOX - DISPLAY MODULE AND COMMUNICATIONS INTERFACE MODULE SECTION	16
2.11	CONDENSER FAN MOTOR AND CONDENSER COIL SECTION	18
2.12	COMPRESSOR TUBING SECTION	20
2.13	RECEIVER SECTION	22
2.14	WATER-COOLED CONDENSER SECTION	24
2.15	SRS AND STS SECTION	26
2.16	THERMOSTATIC EXPANSION VALVE - Hermetic (Refer to Section 2.20)	27
2.17	UPPER FRESH AIR MAKE-UP AND ACCESS PANEL SECTION	28
2.18	LOWER FRESH AIR MAKE-UP VENT	30
2.19	EVAPORATOR FAN ASSEMBLY AND CONTROLLED ATMOSPHERE	32
2.20	EVAPORATOR COIL SECTION - REAR PANELS REMOVED	34
2.21	USDA SECTION	36
2.22	BACK PANEL ASSEMBLY - OPTION 1 - ALUMINUM BOLTED	38
2.23	BACK PANEL ASSEMBLY - OPTION 3 - ALUMINUM BOLTED W/PROBE ACCESS DOOR	40
2.24	BACK PANEL ASSEMBLY - OPTION 4 - ALUMINUM HINGED	42
2.25	BACK PANEL ASSEMBLY - OPTION 5 - STAINLESS STEEL HINGED	44
2.26	OPTION 7 AND OPTION 8 - ELECTRONIC PARTLOW TEMPERATURE RECORDER	46
2.27	OPTION 9 - NO TEMPERATURE RECORDER	46
2.28	COMPRESSOR MOUNTING, GUARD, CRANKCASE HEATER COMPONENTS	48
2.29	COMPRESSOR GAUGES AND TRANSDUCERS	50
2.30	CABLE RESTRAINT COMPONENTS	52
2.31	VOLTAGE CABLES	54
2.32	AUTOTRANSFORMER KIT	56
2.33	LABELS AND DECALS (Not Applicable to All Units)	58

i

TABLE OF CONTENTS (Continued)

PAR/	<u> AGRA</u>	PH NUMBER	<u>Page</u>
3	INTE	ERROGATOR AND ACCESSORIES	60
	3.1	DATAREADER	60
	3.2	INTERROGATOR RECEPTACLE	62
4	COM	PRESSOR ASSEMBLY	64
	4.1	OPTION 1R - SERVICE REPLACEMENT COMPRESSOR	65
	4.2	TERMINAL MOUNTING AND JUNCTION BOX GROUP	65
	4.3	SERVICE VALVE GROUP	65
	4.4	COMPRESSOR - MOTOR BODY GROUP	65
	4.5	PUMP END GROUP	66
	4.6	CRANKSHAFT, ROD AND PISTON GROUP	66
	4.7	VALVE PLATE GROUP	67
	4.8	GASKET SET	67
5	CONT	ROLLER/DATACORDER CONFIGURATION	68
6	TOOL	S	69

ii

INTRODUCTION

1 INTRODUCTION

The Carrier Transicold model 69NT40-541-001/199 series units are of lightweight aluminum frame construction, designed to fit in the front of a container and serve as the container front wall.

2 CONFIGURATION IDENTIFICATION

Unit identification information is provided on a plate located near the compressor. The plate provides the unit model number, the unit serial number and the unit parts identification number (PID). The model number identifies the overall unit configuration while the PID provides information on specific optional equipment, factory provision to allow for field installation of optional equipment and differences in detailed parts.

Configuration identification for the models covered herein may be obtained on the Container Products Group Information Center by authorized Carrier Transicold Service Centers.

3 OPTION DESCRIPTIONS

Various options may be factory or field fitted to the base unit. These options are listed in the tables and described in the following subparagraphs.

3.1 Battery

The refrigeration controller may be fitted with a rechargeable battery pack.

3.2 Dehumidification

The unit may be fitted with a humidity sensor. This sensor allows setting of a humidity set point in the controller. In the dehumidification mode the controller will operate to reduce internal container moisture level.

3.3 Control Box

The control box is made of a composite material and may be fitted with a lockable door.

3.4 Display Module

The unit may be fitted with a backlit Liquid Crystal Display (LCD) or a Light Emitting Diode (LED) Display.

3.5 Temperature Readout

The unit may be fitted with suction and discharge temperature sensors. The sensor readings may be viewed on the controller display.

3.6 Pressure Readout

The unit may be fitted with suction and discharge pressure gauges or suction and discharge transducers or no pressure readout. The transducer readings may be viewed on the controller display.

3.7 USDA

The unit may be supplied with fittings for additional temperature probes which allow recording of USDA Cold Treatment data by the integral DataCORDER function of the Micro-Link refrigeration controller.

3.8 Interrogator

Units that use the DataCORDER function are fitted with interrogator receptacles for connection of equipment to download the recorded data. Two receptacles may be fitted, one accessible from the front of the container and the other mounted inside the container (with the USDA receptacles).

3.9 Remote Monitoring

The unit may be fitted with a remote monitoring receptacle. This item allows connection of remote indicators for COOL, DEFROST and IN RANGE. Unless otherwise indicated, the receptacle is mounted at the control box location

3.10 Communications.

The unit may be fitted with a communications interface module. The communications interface module is a slave module which allows communication with a master central monitoring station. The module will respond to communication and return information over the main power line. Refer to the ship master system technical manual for further information.

3.11 Compressor

The unit is fitted with a single speed reciprocating compressor.

3.12 Condenser Coil

The unit is fitted with a 3 row coil using 7mm tubing.

3.13 Autotransformer

An autotransformer may be provided to allow operation on 190/230, 3phase, 50/60 hertz power. The autotransformer raises the supply voltage to the nominal 380/460 volt power required by the base unit. The autotransformer may also be fitted with an individual circuit breaker for the 230 volt power.

If the unit is fitted with an autotransformer and communications module, the autotransformer will be fitted with a transformer bridge unit (TBU) to assist in communications.

3.14 Temperature Recorder

Units may be fitted with an electronic recorder manufactured by Partlow Corporation.

3.15 Gutters

Rain gutters may be fitted over the control box and recorder section to divert rain away form the controls. The different gutters include standard length bolted gutters, extended length gutters and riveted gutters.

iii T-316PL

3.16 Handles

The unit may be fitted with handles to facilitate access to stacked containers. These handles may included fixed handles (located at the sides of the unit) and/or a hinged handle at the center (attached to the condenser coil cover).

3.17 Thermometer Port

The unit may be fitted with ports in the front of the frame for insertion of a thermometer to measure supply and/or return air temperature. If fitted, the port(s) will require a cap and chain.

3.18 Water Cooling

The refrigeration system may be fitted with a water cooled condenser. The condenser is constructed using copper-nickel tube for sea water applications. The water cooled condenser is in series with the air cooled condenser replaces the standard unit receiver. When operating on the water cooled condenser, the condenser fan is deactivated by either a water pressure switch or condenser fan switch.

3.19 Back Panels

Back panel designs that may be fitted include panels of aluminum and stainless steel. Panels may be fitted with access doors and/or hinge mounting.

3.20 460 Volt Cable

Various power cable and plug designs are available for the main 460 volt supply. The plug options tailor the cables to each customers requirements.

3.21 230 Volt Cable

Units equipped with an autotransformer require an additional power cable for connection to the 230 volt source. Various power cable and plug designs are available. The plug options tailor the cables to each customers requirements.

3.22 Cable Restraint

Various designs are available for storage of the power cables. These options are variations of the compressor section front cover.

3.23 Upper Air (Fresh Air Make Up)

The unit may be fitted with an upper fresh air makeup assembly. The fresh air makeup assembly is available with a Vent Positioning Sensor (VPS) and may also be fitted with USDA screens.

3.24 Lower Air (Fresh Air Make Up)

The unit may be fitted with a lower fresh air makeup assembly. These assemblies are available with a Vent Positioning Sensor (VPS) and may also be fitted with USDA screens.

3.25 Arctic Mode

To improve operation in cold ambients, the unit may be fitted with a crankcase heater. The crankcase heater is operated, before start-up, to warm the compressor oil and boil off any liquid refrigerant that may be present in the crankcase.

3.26 Power Correction

The unit may be fitted with a set of power factor correction capacitors to assist in correction of imbalance in current draw by the compressor.

3.27 Evaporator

Evaporator section options include a hermetic thermal expansion valve and two sizes of heat exchangers.

3.28 Evaporator Fan Operation

Two evaporator fan motor operation systems are available. On units with Normal Evaporator Fan Operation, opening of an evaporator fan internal protector will shut down the unit. On units equipped with Single Evaporator Fan Capability, additional contactors are installed to allow the unit to continue to operate on a single fan.

3.29 Labels

Operating Instruction and Function Code listing labels will differ depending on the options installed. For example, additional operating instructions are required to describe start-up of a unit equipped with an autotransformer. Where the labels are available with additional languages, they are listed in the parts list.

3.30 Plate Set

Each unit is equipped with a tethered set of wiring schematic and wiring diagram plates.

3.31 Controller

Replacement controllers may be ordered as a universal un-configured controller (without configuration software) or configured.

3.32 Condenser Grille

Two styles of condenser grilles are available, direct bolted grilles and hinged grilles.

3.33 Emergency Bypass

The unit may be equipped with switches to allow emergency bypass of the controller. The EMERGENCY BYPASS switch functions to bypass the controller in the event of controller failure. The EMERGENCY DEFROST switch functions to bypass the all controls and place the unit in the defrost mode.

T-316PL iv

OPTION LEGEND

Genera	al
-	Feature Not Applicable
Х	Features that apply to model
Р	Factory Installation of Equipment to Allow Field Installation
Battery	/ Codes
R	Rechargeable Cells
Contro	l Box Codes
С	Composite Box Without Door Lock
CL	Composite Box With Door Lock
Displa	y Module Codes
1	LCD Display
2	LED Display
Pressu	re Readout Codes
G	Factory Installed Pressure Gauges
Т	Factory Installed Pressure Transducers
SG	Factory Installed Suction Pressure Gauge
USDA/	Cable Codes
D/-	Option D Only
V/-	Option V Only
D/1	Option V/Option 1
V/1	Option V/Option 1
D/2	Option V/Option 2
V/2	Option V/Option 2
Interro	gator Codes
1	Left Straight Mount
2	Right Straight Mount
3	Box Mount
4	Left Mount
5	Left Angled Mount
6	Right Mount
	unications Codes
2	High Data Rate
4	Low Data Rate
	essor Codes
1R	Single Speed Reciprocating
	nser/Receiver Codes
3	Three Row (7mm) Coil

AutoTr	ansformer Codes
1	Transformer Fitted
2	Transformer With CB2 Fitted
3	Transformer With CB2 and Receptical
4	Transformer With CB2 and Transformer Bridging Unit
Tempe	rature Recorder Codes
7	Standard Electronic Partlow
8	Special Electronic Parlow
9	No Temperature Recorder
10	Electronic Partlow (Both)
Gutter	Codes
1	Standard Length Bolted Gutters
3	Extended Length Gutters
4	Rivieted Gutters
	Codes
1	Two Side and One Center
2	Two Side
3	One Center
4	One Right Side and Two Center
	ometer Port Codes
1	Supply Air Port
2	Return Air Port
В	Both Ports
	Cooling Codes
W	Water Pressure Switch
F	Condenser Fan Switch
	anel Codes
1	Bolted Panels
2	Bolted Panels With USDA Door
4	Hinged Panels
5 460 Vo	Hinged Stainless Steel Panels
	It Cable Codes
1	Option1
2	Option 2
3	Option 3
4	Option 4
5	Option 5
6	Option 6
7	Option 7
8	Option 8
9	Option 9
10	Option 10

230 Vo	It Cable Codes
1	Option 1
2	Option 2
3	Option 3
4	Option 4
5	Option 5
6	Option 6
7	Option 7
8	Option 8
9	Option 9
Cable I	Restraint Codes
1	Cable Door
2	Left Bungy Cord Only
3	J-Hook
4	Left and Right Bungy Cord
5	Left Bungy Cord With Left Extended Guard
6	Left & Right Bungy Cords With Extended Guards
Upper	Air Codes
1	No Upper Fresh Air
2	Upper Fresh Air Installed
3	Upper Fresh Air Installed With USDA Screen
4	Upper Fresh Air Installed with Vent Position Sensor (VPS)
Lower	Air Codes
1	No Lower Fresh Air
2	Lower Fresh Air Installed
3	Lower Fresh Air With USDA Screen Installed
4	Lower Fresh Air Installed with Vent Position Sensor (VPS)

Arctic	Mode Codes
С	Crankcase Heater
Conde	nser Grille Codes
В	Bolted Grille
Н	Hinged Grille
Evapoi	rator Codes
5	Coil With Hermetic TXV & Standard Heat Exchanger (6 Heaters)
6	Coil With Hermetic TXV & Large Heat Exchanger (6 Heaters)
Evapoi	rator Fan Codes
1	Normal Evaporator Fan Operation
2	Single Evaporator Fan Operation Capability
Label (Codes
1	English
2	English / Spanish
3	English / French
4	English / Korean
5	English / Traditional Chinese
6	English / Simplifed Chinese
7	English / Japanese / Chinese
8	English/German
Emerg	ency Bypass Codes
В	Emergency Bypass & Emergengy Defrost
EB	Emergency Bypass Only

Ordering Instructions

All orders and inquiries for parts must include: Parts Identification Number (PID), Model Number, Unit Serial Number, Part Number, Description of part as shown on list and Quantity required. Address all correspondence for parts to the following address:

> CARRIER TRANSICOLD DIVISION Replacement Components Group, TR-20 P.O. Box 4805, Syracuse, New York 13221 or FAX to: (315) 432-3778

Letter Designations

The following letter designations are used to classify parts throughout this list:

As Required A/R =Not Available N/A =

Not shown in illustration NS

NSS

Not sold separately - Order next higher assembly or kit Parts Identification Number - essential to identify unit configuration. PID

Purchase Locally


Stainless Steel - 300 Series unless otherwise specified. SST

Suffix SV - added to part number designates service replacement part.

T-316PL vi


1 QUICK LIST - CLAMPS, F UNIT FRAMES	FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS AND REPLACEMENT
PART NO.	DESCRIPTION
34-00373-51	Clamp, Tube, 1/4 - SST
34-00373-53	Clamp, Tube, 3/8 - SST
34-00373-05	Clamp, Tube, 1/2 - SST
34-00373-07	Clamp, Tube, 5/8 - SST
34-00373-59	Clamp, Tube, 3/4 - SST
34-00373-11	Clamp, Tube, 7/8 - SST
34-00373-65	Clamp, Tube, 1-1/8 - SST
34-00373-88	Clamp, Tube, 1-1/4 - SST
34-00373-69	Clamp, Tube, 1-3/8 - SST
34-00373-71	Clamp, Tube, 1-1/2 - SST
22-00066-01	Connector, Butt End, Wire Range - 22 to 16 AWG
22-00066-02	Connector, Butt End, Wire Range - 16 to 14 AWG
22-00066-03	Connector, Butt End, Wire Range - 12 to 10 AWG
22-00041-00	Connector, Closed End, Wire Range - 22 to 14 AWG
22-00041-02	Connector, Closed End, Wire Range - 18 to 10 AWG
14-00311-02SV	Filter-Drier
22-02336-02	Fuse, 5 Amp (F1 & F2)
22-02336-22	Fuse, 7.5 Amp (F3A/B)
22-01140-01	Ring Terminal, #6, Wire Range - 12 to 10 AWG
22-01140-02	Ring Terminal, #10, Wire Range - 12 to 10 AWG
22-01140-04	Ring Terminal, 3/8, Wire Range - 12 to 10 AWG
22-00119-04	Ring Terminal, 1/4, Wire Range - 12 to 10 AWG
22-00120-04	Ring Terminal, #10, Wire Range - 16 to 14 AWG
22-00120-07	Ring Terminal, 5/16, Wire Range - 16 to 14 AWG
22-00121-07	Ring Terminal, #10, Wire Range - 22 to 16 AWG
22-01139-04	Ring Terminal, 3/8, Wire Range - 16 to 14 AWG
22-01141-01	Spade Terminal, 1/4 x 5/16, Wire Range - 16 to 14 AWG
22-00595-01	Spade Terminal, 3/8, Wire Range - 12 to 10 AWG
22-01106-00	Spiral Wrap, 1/4 Diameter x 25 ft. lg.
22-01107-00	Spiral Wrap, 1/2 Diameter x 25 ft. lg.
66U1-3803	Tube, Heat Shrink, 1/4 ID x 2-1/8 lg.
66U1-3803-1	Tube, Heat Shrink, 1/2 ID x 2-3/4 lg.
44-01043-05	Ty-Raps, 5-1/2 inches lg.
44-01043-07	Ty-Raps, 11.00 inches lg.
22-50007 Series	Wire Markers
07-00345-00	Sealant, Pipe (Used to seal fittings on unit with R-134a)
07-00313-00	Cleaner, Coil
76-00397-00	Paint, Compressor Touch-Up, Blue
69NT-43-468	Unit Frame , Service Replacement
69NT-43-468-1	Contact Carrier Replacement Components Group for application


1

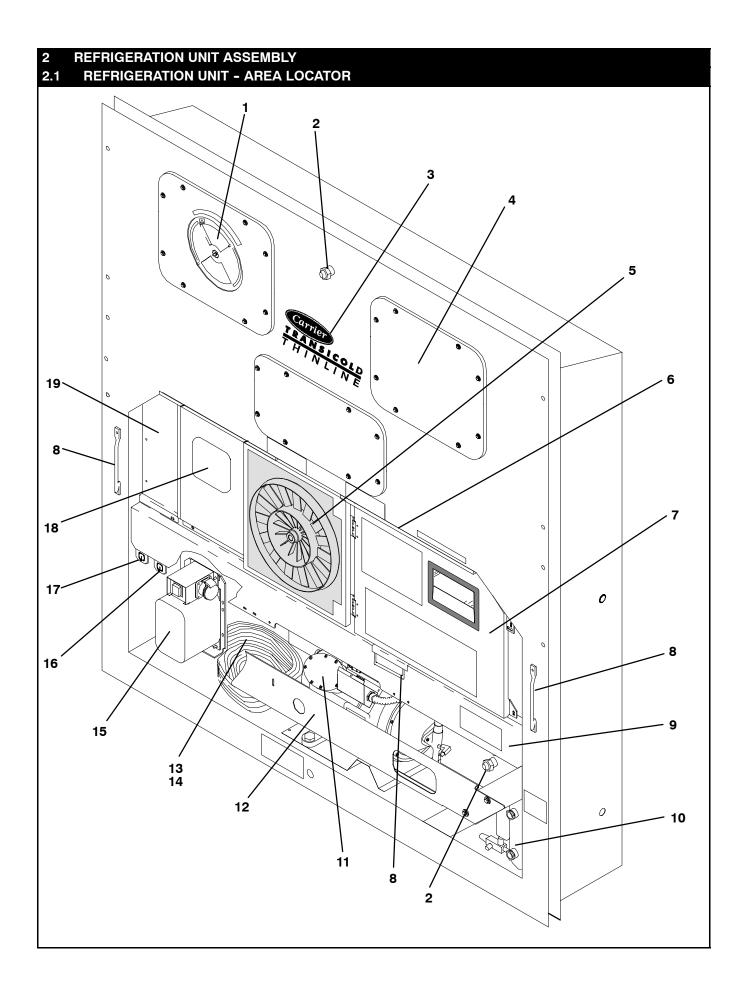


2.1	REFRIGERATION UNIT - AREA	A LOCATOR
Item	Section Number	Area Description
1	Refer to Section 2.17	Upper Fresh Air Makeup & Access Panels
2	Refer to Section 2.4	Thermometer Port
3	Refer to Section 2.33	Labels and Decals
4	Refer to Section 2.19	Evaporator Fan Assembly
5	Refer to Section 2.11	Motor, Condenser Fan
6	Refer to Section 2.2	Rain Gutters
7	Refer to Section 2.5 - 2.10	Box, Control
8	Refer to Section 2.3	Handles
9	Refer to Section 2.11	Coil, Condenser
10	Refer to Section 2.13 or 2.14	Receiver or Water-Cooled Condenser
11	Refer to Sections 2.28 or 4	Compressor
12	Refer to Section 2.28	Guard, Compressor
13	Refer to Section 2.31	Cable, Power
14	Refer to Section 2.31	Plug, Power
15	Refer to Section 2.32	Autotransformer
16	Refer to Section 2.19	Transfresh
17	Refer to Section 3	Interrogator and Accessories
18	Refer to Section 2.27	Temperature Recorder
19	Refer to Section 2.18	Lower Fresh Air Makeup


3

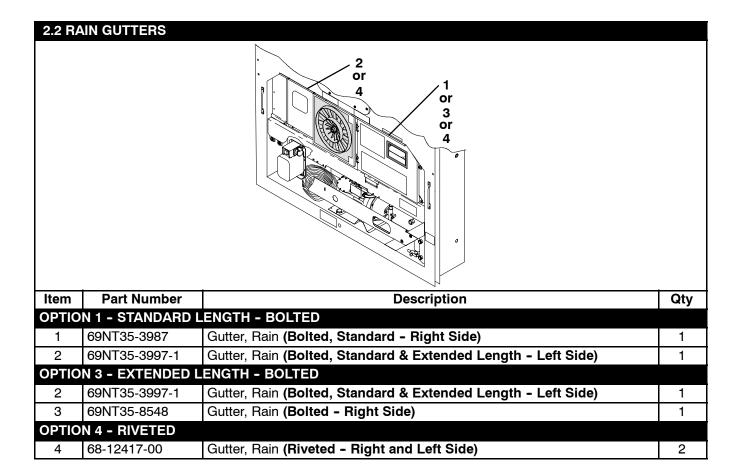

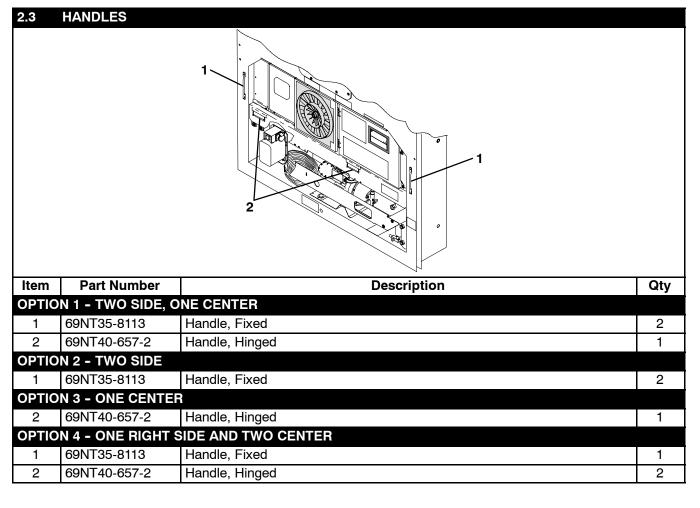

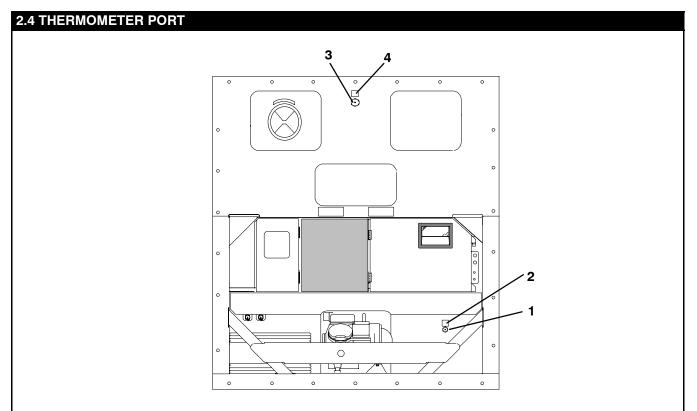


Item	Part Number	Description	Qty		
OPTIO	OPTION 1 - SUPPLY AIR PORT				
1	66U1-8662	Cap & Chain Assembly	1		
2	62-10557-00	Label	1		
OPTIO	N 2 - RETURN AIR	PORT			
3	66U1-8662	Cap & Chain Assembly	1		
4	62-10557-00	Label	1		
OPTIO	OPTION B - SUPPLY AND RETURN PORTS				
1 & 3	66U1-8662	Cap & Chain Assembly	2		
2 & 4	62-10557-00	Label	2		

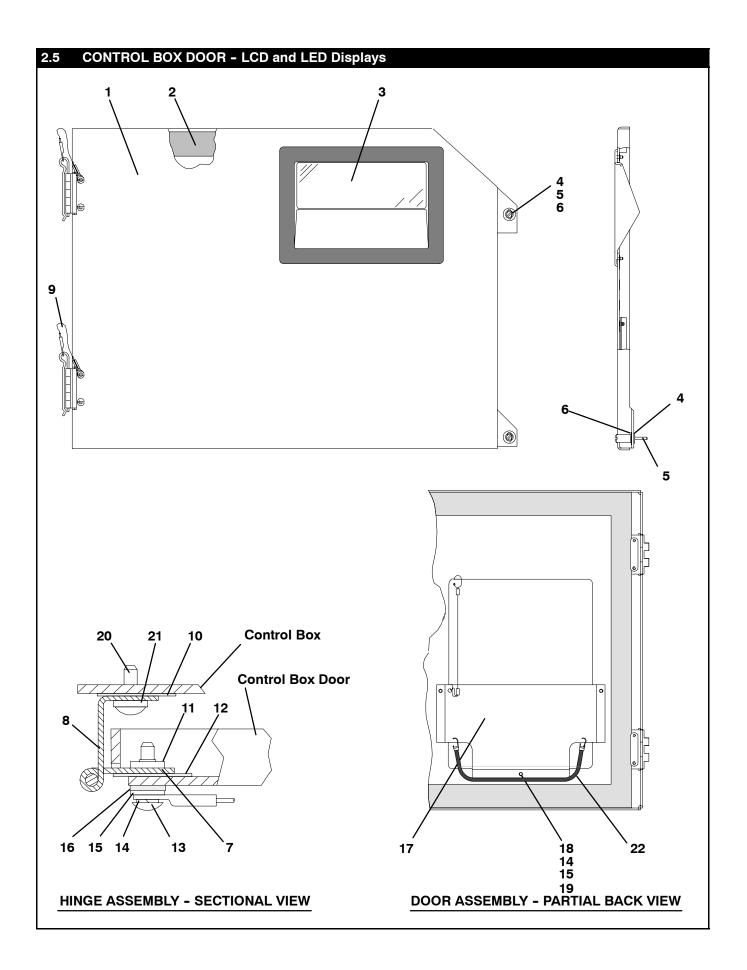

2.5 CO	NTROL BOX DOO	R - LCD and LED Displays	
Item	Part Number	Description	Qty
OPTIO	N 1, LCD DISPLAY		
1	69NT42-688-7	Door Assembly, LCD Display, Includes:	1
2	42-00270-02	Gasket, Door	1
3	58-04366-00SV	Window and Gasket Assembly, Control Box Door - Lexan	1
4	34-06169-00	Washer, Retaining - SST	2
5	66U1-6811-8	Screw, Retaining, Panel, 0.300-0.625 - SST	2
5	66U1-6811-15	Screw, Retaining, Wing, 0.300-0.625 - SST	2
6	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	4
7	44-00300-01	Hinge, Half	1
8	44-00300-02	Hinge, Half	1
9	44-00300-03	Pin Assembly, with Tether	1
10	58-04101-01	Protector, Mylar (Hinge) (Not Needed with Composite Box)	2
11	34-01167-01	Retainer, Nut	2
12	58-04101-00	Protector, Mylar (Hinge)	2
13	66U1-2403-1	Screw, Truss Head, #10-24 x 3/4 lg SST	4
14	66U1-5331-3	Washer, Lock, #10 - SST	7
15	66U1-5321-8	Washer, Flat, #10 - SST	7
16	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
17	68-13577-00	Pocket, Placard	1
18	34-00665-09	Locknut, Hex Head, #10-24 - SST	3
19	34-06107-00	Rivet, Blind, 1/8 Diameter, Grip Range - 0.188-0.250	3
20	66U1-5371-7	Screw, #10-24 x 1/2 lg SST	4
21	66U1-5321-8	Washer, Flat, #10 - SST	4
22	58-04346-00	Door Strap Kit	1
OPTIO	N 2, LED DISPLAY		
1	79-01911-00	Door Assembly, LED Display, Includes:	1
2	42-00270-02	Gasket, Door	1
3	69NT35-5022-6	Window	1
3	42-00611-00	Foam, Double Coated	1
4	34-06169-00	Washer, Retaining - SST	2
5	66U1-6811-8	Screw, Retaining, Panel, 0.300-0.625 - SST	2
3	66U1-6811-15	Screw, Retaining, Wing, 0.300-0.625 - SST	2
7	44-00300-01	Hinge, Half	1
8	44-00300-02	Hinge, Half	1
9	44-00300-03	Pin Assembly, with Tether	1
11	34-01167-01	Retainer, Nut	2
13	66U1-2403-1	Screw, Truss Head, #10-24 x 3/4 lg SST	4
14	34-00663-09	Washer, Lock, #10 - SST	4
15	66U1-5321-8	Washer, Flat, #10 - SST	4
16	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
17	58-04389-00	Pocket, Placard	1
18	34-00795-09	Locknut, Hex Head, #10-24 - SST	6
19	34-06107-00	Rivet, Blind, 1/8 Diameter, Grip Range - 0.188-0.250	3
21	66U1-5321-8	Washer, Flat, #10 - SST	4


7

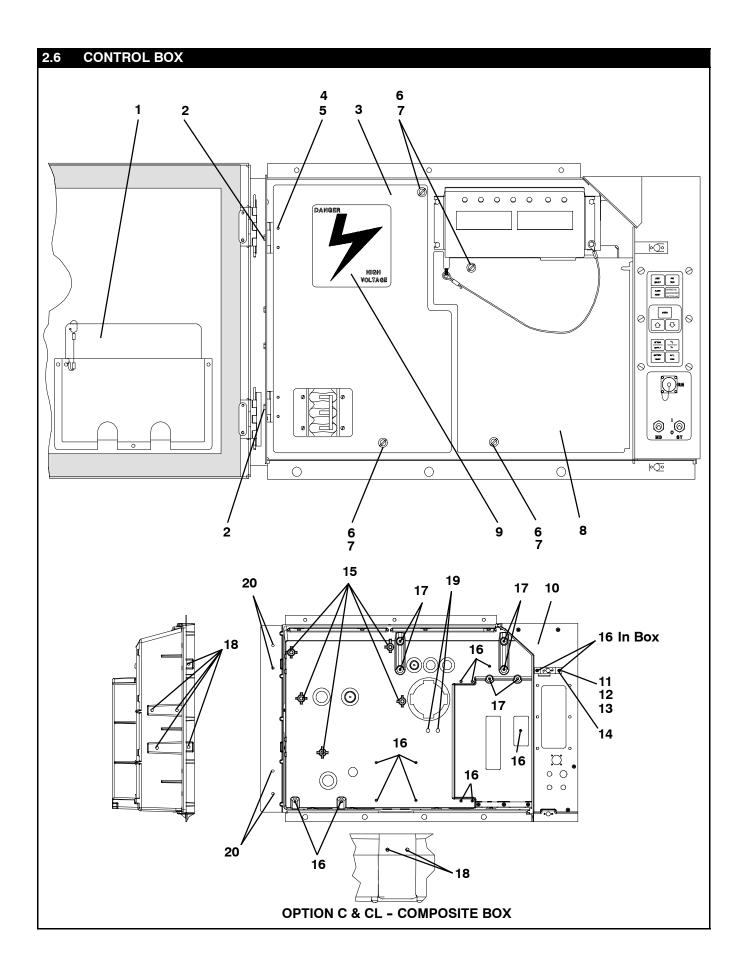

2.6 CONTROL BOX			
Item	Part Number	Description	Qty
1	-	Plate, Schematic & Diagram (Container Unit Matrix)	1
2	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
3	69NT43-125-1	Shield, High Voltage (Plastic) - Includes:	1
4	44-00343-00	Hinge	2
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16 - SST	4
6	34-50015-00	Stud & Retainer Package - Includes:	4
NS	NSS	Stud, Fastener	1
NS	NSS	Retainer, Fastener Stud	1
7	34-06139-03	Receptacle	4
8	69NT43-124-4SV	Shield, Low Voltage (Lexan) - With Tether	1
9	62-03957-02	Label, Danger-High Voltage	1
OPTIO	N C & CL - COMPO	OSITE CONTROL BOX	
10	58-04668-00	Control Box, Replacement for Standard Composite	1
-1-1	69NT35-6272	Bracket, Non-Locking	1
11	69NT35-2287	Bracket, Locking (See Note 3)	1
12	34-01142-01	Receptacle, Retaining	1
10	34-00928-01	Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8	2
13	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/18 - 3/16 (See Note 4)	2
14	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
NS	76-00724-00SV	Crack, Chip and Hole Repair Kit	1
NS	76-50084-00SV	Insert Repair Kit - Includes:	1
15	34-06231-01	Insert - 17.53 x 9.91 mm (.690 x .390 in) 1/4-20 Threads - NSS	10
16	34-06231-03	Insert - 15.88 x 6.35 mm (.625 x .250 in) 10-24 Threads - NSS	10
17	34-06231-04	Insert - 25.15 x 7.54 mm (.990 x .297 in) 10-24 Threads - NSS	10
18	34-06231-05	Insert - 10.16 x 9.53 mm (.400 x .375 in) 10-24 Threads - NSS	10
19	34-06231-06	Insert - 12.70 x 9.91 mm (.500 x .390 in) 1/4-20 Threads - NSS	10
20	34-06231-07	Insert - 9.53 x 6.76 mm (.375 x .266 in) 10-24Threads - NSS	10
NS	02-00082-00	Durabond Epoxy - NSS	1
NS	07-00390-00	Static Mixing Tube - NSS	1
NS	07-00391-00	Application Gun - Required for Insert Repair	1


NOTES

^{3.} The bracket is bolted to the control box - order 69NT35-2287 for locking bracket.
4. When 69NT35-2287 is used, 34-00928-02, rivet, is to be used in the upper door location.

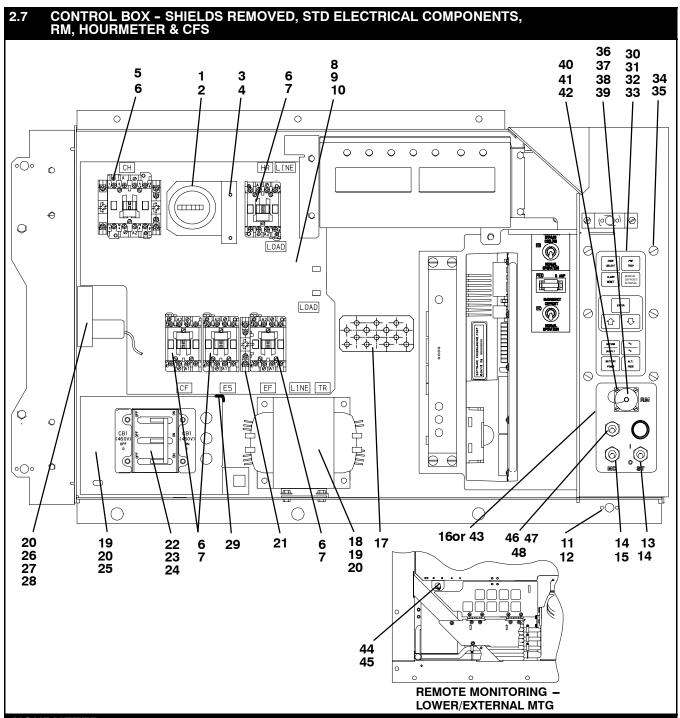


HOUR	HOURMETER		
Item	Part Number	Description	Qty
1	66U1-3823	Hourmeter	1
2	66U1-6651-15	Screw, Pan Head, #4-40 x 3/4 lg SST	3
3	68-12496-00	Bracket, Hourmeter	1
4	66U1-5381	Screw, Hex Head, #10-24 x .50 lg SST	2
5	10-00431-07	Contactor, Compressor (CH) (30 Amp)	1
6	34-06243-00	Screw, Pan Head, (Thread Cutting) #8-32 x 3/4 lg SST	10
7	10-00431-06	Contactors, (CF), (HR) & (EF & ES) (12 Amp)	4
8	68-13427-00SV	Panel, Contactor - Includes:	1
9	58-00967-00	Spacer (Used with sheet metal control box only)	5
10	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg SST	4


2.7 CO	NTROL BOX - SHI	ELDS REMOVED, STANDARD ELECTRICAL COMPONENTS (Continued)	
Item	Part Number	Description	Qty
11	34-00928-01	Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8	6
12	34-01142-01	Receptacle	1
13	10-01129-07 SV	Switch, Toggle (On-Off)	1
14	66U1-9752	Seal, Bushing	1
15	10-01129-10	Switch, Toggle (MDS) (if equipped)	1
	58-04145-01	Plate, Switch	A/R
40	68-14796-00	Plate, Switch (Start Only) NT-1200 and Up	A/R
16	68-14796-02	Plate, Switch (Start and Defrost LED), NT-1200 and Up	A/R
	68-14796-05	Plate, Switch (Start and MDS), NT-1200 and Up	A/R
17	69NT41-982-3	Plate, Ground	1
18	10-00332-21SV	Transformer, Base Unit	1
19	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	A/R
20	66U1-5321-8	Washer, Flat, #10 - SST	A/R
21	10-00431-02	Contact, Auxiliary	1
22	34-00663-07	Washer, Lock, #6 - SST	4
23	66U1-7842-13	Circuit Breaker - 460 vac, 25 Amp, (CB1)	1
24	66U1-6651-4	Screw, Pan Head, #6-32 x 3/8 lg SST	4
25	69NT35-6278	Bracket, Circuit Breaker	1
26	10-00439-00	Transformer, Current Sensing (CS)	1
27	66U1-5371-10	Screw, Hex Head, #10-24 x 1.00 lg SST	2
28	66U1-5321-8	Washer, Flat, #10 - SST	2
29	66CH1-1172-46	Trim, Flexible (85 Feet Long, Cut to Length)	A/R
30	79-01706-05SV	Pad, Key - Includes:	1
31	NSS	Gasket (Between Key Pad Plate Assembly and Connector)	1
32	NSS	Gasket (Between Key Pad and Key Pad Plate Assembly	1
33	NSS	Plate Assembly, Key Pad Mounting	1
04	34-06227-00	Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box)	6
34	66U1-2403	Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box)	6
35	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	6
REMO	TE MONITORING (STANDARD LOCATION)	
36	22-02341-00	Receptacle, Remote Monitoring (RM)	1
37	22-02368-00	Plug, Remote Monitoring	1
38	22-02341-01	Cap and Tether, Receptacle Assembly	1
39	66U1-6835	Gasket, Remote Monitoring Receptacle	1
40	34-00848-10	Screw, Round Head, #4-40 x 5/8 lg SST	4
41	66U1-5321-6	Washer, Flat, 0.125 ID - SST	4
42	34-00667-05	Nut, Self Locking, #4-40 - SST	4
	58-04145-00	Plate, Switch, with RM	A/R
43	68-14796-03	Plate, Switch, with RM NT-1200 and up	A/R
	68-14796-06	Plate, Switch with RM and MDS, NT-1200 and Up	A/R
REMO		LOWER LEFT/EXTERNAL LOCATION)	
44	22-01889-00	Receptacle, Remote Monitoring (RM)	1
45	69NT40-222	Bracket	1
OPTIC	N F - CONDENSE		
46	10-00298-01	Switch, Toggle (CFS)	1
47	66U1-9752	Seal, Bushing	1
48	58-04145-06	Plate, Switch (with extra switch location)	1

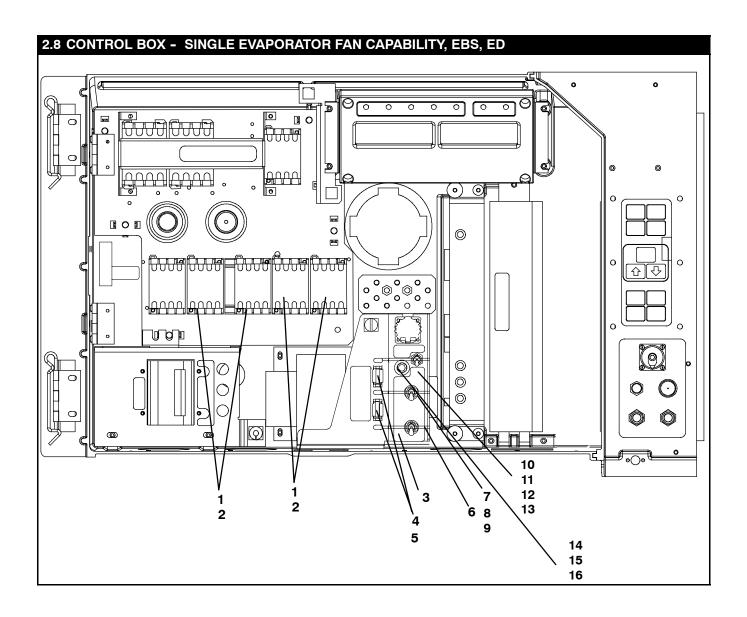


	ONTROL BOX - SIN E EVAPORATOR F	NGLE EVAPORATOR FAN CAPABILITY, EBS, ED AN CAPABILITY	
1	34-06243-00	Screw, Pan Head, Thread Cutting #8-32 x 3/4 lg SST	8
2	10-00431-06	Contactor, (E2 & S2) & (E1 & S1) (12 Amp)	4
EMER	GENCY BYPASS (E	BS)	
3	10-00446-00	Emergency Bypass Module	1
4	22-02336-04	Fuse (10A)	2
5	22-01455-03	Fuse Holder	2
6	66U1-5371-10	Wire Tire	3
EMER	GENCY DEFROST	(ED)	
7	68-14796-05	Plate, Switch (with light location, with RM)	A/R
8	10-01129-07	Switch, Toggle	2
9	68-12544-01	Bracket	1
10	34-06223-00	Screw, Captive Washer, #10-24 X .56 lg SST	2
11	10-01129-20	Hex Nut	2
12	66U1-9752	Seal, Bushing	2
13	22-01455-02	Holder Assembly, Fuse	1
14	22-02336-02	Fuse, 5 Amp	1
15	62-02874-01	Label, EB and ED	1
16	22-00518-01	Base, Pilot Light	1

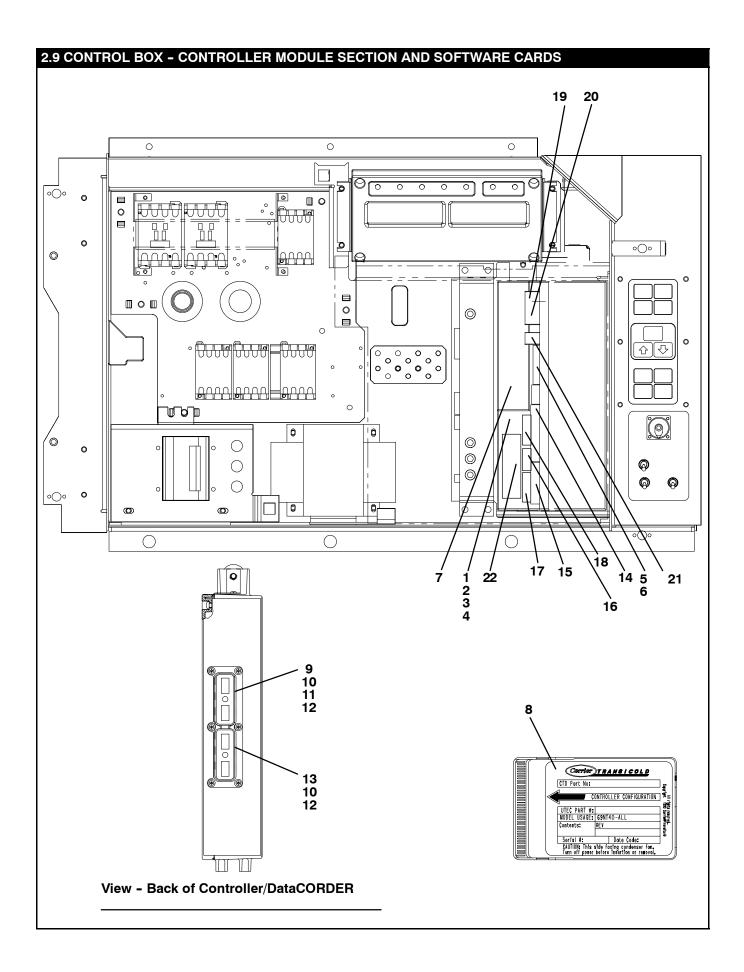

ltem	Part Number	NTROLLER MODULE SECTION AND SOFTWARE CARDS Description	Qty
1	_	Module, Controller/DataCORDER - Refer to Section 5 - Includes:	-
2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	1
3	69NT35-2692	Washer, Fender, 0.063 Thick - SST	1
4	58-01184-00	Retainer, Screw, 0.141 ID	1
5	22-02336-22	Fuse, 7.5 Amp (F3A/B)	3
6	22-02336-02	Fuse, 5 Amp (F1 & F2)	1
7	62-02719-00	Label, Controller/DataCORDER Port	1
8	12-00594-xx/5315	Card, Controller/DataCORDER Operation Software	1
9	22-01777-00SV	Connector (EC A-K) - 30 Pin	1
10	22-01777-03	Socket, 20 AWG	35
11	22-50100-00	Socket, 18 AWG	4
12	22-01777-04	Plug, Sealing	21
13	22-01777-01SV	Connector (EC L-Y) – 30 Pin	1
14	22-01556-02	Connector (KA) – 14 Pin	1
15	22-01556-01	Connector (KB) – 10 Pin	1
NS	22-01621-23	Connector (KP) - 9 Pin (Connects to Ribbon Cable)	1
16	22-4031-00	Connector (KD) - 4 Pin	1
17	22-4031-01	Connector (KE) - 5 Pin	1
18	22-4031-02	Connector (KC) - 6 Pin	1
19	22-01622-01	Connector (MA) - 12 Pin	1
20	22-01622-02	Connector (MB) - 16 Pin	1
21	22-01622-00	Connector (MC) - 8 Pin	1
NS	09-00369-00SV	Battery, Real Time Clock, (Within the Controller)	1
NS	22-50157-00	Wire Harness, Controller to Current Sensing Transformer)	1
NS	22-01713-06	Wire Harness, Display Module to Controller/DataCORDER Module	1
NS	62-02735-00	Label, Warning, Don't use 12-00327! -(Located on the control box behind the Controller/DataCORDER module.)	1
NS	62-02738-08	Label, Warning, 51xx Series - (Located on the high & low voltage shields)	1
NS	62-02738-05	Label, Warning, 51xx Series - (Located on the bottom panel of the control box between the Communications Interface module and the switch panel.)	1
OPTIO	ON R - RECHARGE	ABLE BATTERY PACK	
22	30-00407-02SV	Battery Pack - Controller/DataCORDER Module	1

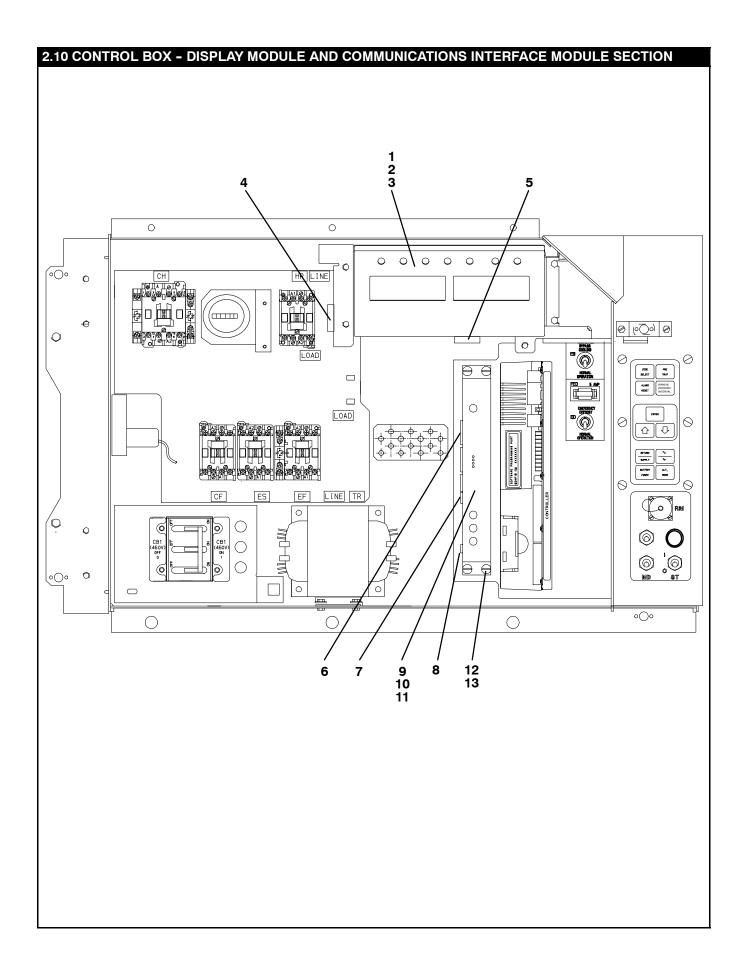


2.10 (CONTROL BOX - D	DISPLAY MODULE AND COMMUNICATIONS INTERFACE MODULE SEC	ΓΙΟΝ
Item	Part Number	Description	Qty
4	12-00433-00RP	Module, LCD Display (Option 1)	1
1	12-00433-02 RP	Module, LED Display (Option 2)	1
2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	4
3	69NT35-2692-4	Washer, Fender, 0.063 Thick - SST	4
4	22-01621-03	Connector (MK) - 9 Pin	1
5	22-01621-02	Connector (MB) - 16 Pin	1
6	22-02396-03	Connector (CIC) - 7 Pin	1
7	22-02396-02	Connector (CIB) - 3 Pin	1
8	22-01556-00	Connector (CIA) - 7 Pin	1
NS	22-01713-02	Wire Harness, Key Pad to Display Module	1
OPTIO	ON 2 - COMMUNIC	ATIONS INTERFACE MODULE - HIGH DATA RATE	
9	12-00573-00SV	Module, Communications Interface - Includes:	1
10	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
11	66U1-9212-1	Retainer, Push-on	4
12	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
13	58-01184-00	Retainer, Screw .75 O.D.	4
OPTIO	ON 4 - COMMUNIC	ATIONS INTERFACE MODULE - LOW DATA RATE	
9	12-00275-19SV	Module, Communications Interface - Includes:	1
10	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
11	66U1-9212-1	Retainer, Push-on	4
12	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
13	58-01184-00	Retainer, Screw .75 O.D.	4

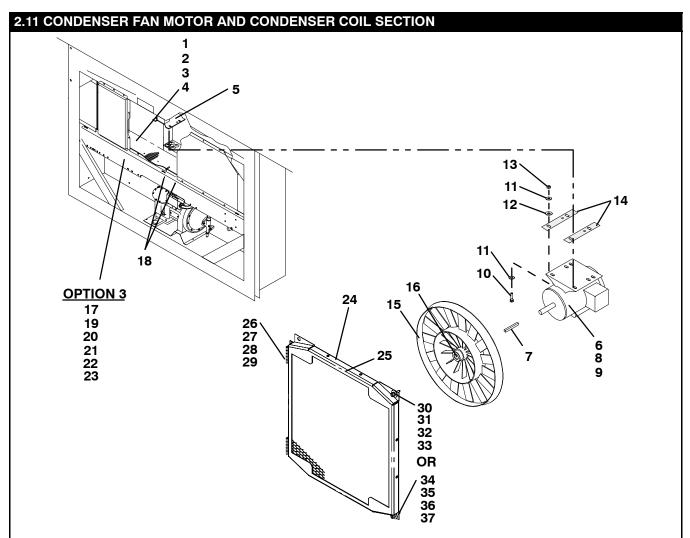


Item	Part Number	Description	Qty
1	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	10
2	66U1-5321-7	Washer, Flat, 1/4 - SST	10
3	34-06053-00	Washer, Mylar, 3/4 OD x 1/4 ID	10
4	34-06053-03	Washer, Mylar, 1.0 OD x 1/4 ID	2
5	69NT35-3547	Bracket, Condenser Motor Mount	1
6	54-00586-20	Motor, Condenser Fan - Includes:	1
7	PL	Key, 3/16 Square x 1-3/8 lg SST	1
8	04-50027-00	Bearing	2
9	22-50088-02	Capacitor, 15 uF	1
10	66U1-5361	Screw, Hex Head, 5/16-18 x 1-1/4 lg SST	4
11	34-01181-01	Washer, Flat, 5/16 - SST	8
12	34-06053-02	Washer, Mylar, 1.0 OD x 3/8 ID	4
13	34-00667-12	Locknut, 5/16-18 - SST	4
14	69NT35-6112	Protector, Condenser Fan Motor Mounting	2
15	38-00503-00	Fan, Condenser (17-1/2 diameter) - Composite - Includes:	1
16	PL	Set Screw,Square Head, 5/16-24 x 5/8 lg SST	2


2.11 C	ONDENSER FAN M	OTOR AND CONDENSER COIL SECTION (Continued)	
Item	Part Number	Description	Qty
OPTIC	N 3 - THREE ROW	(7MM) CONDENSER COIL	
17	68-13454-02SV	Cover, Condenser Coil, Blue Includes:	1
17	68-13454-03SV	Cover, Condenser Coil, White Includes:	1
18	58-04480-00	Bumper (for use with uncoated center handle)	2
16	58-04481-00	Plug (for use with coated handle or units with no center handle)	2
19	81-01575-00SV	Coil, Condenser(Copper) - 7MM 3 Row - Includes Mylar Washers	1
20	66CH1-1172-16	Trim, Flexible	2
21	69NT35-8693-7	Protector (Apply between frame and coil & coil cover)	4
22	69NT35-8693-10	Protector (Apply between frame and coil & coil cover)	2
23	58-04026-41	Protector, Mylar (Apply between coil & coil cover, RH &LH sides)	2
OPTIC	ON H - HINGED CO	NDENSER FAN GRILLE	
24	76-00704-01	Grille and Venturi Assembly - Includes:	1
25	66U1-8912	Label, Rotation	1
26	76-50075-00	Hinge Kit - Includes:	1
27	44-00374-00	Hinge	2
28	58-04101-07	Protector, Mylar	4
29	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	8
20	66U1-6811-8	Screw, Retaining - SST	2
30	66U1-6811-12	Screw, Retaining (Phillips Head) - SST	2
31	34-06169-00	Washer, Retaining - SST	2
32	34-06053-03	Washer, Mylar, 1/4ID x 1.00OD	2
33	69NT35-2692-1	Washer, Fender 1/4 - SST	2
OPTIC	ON B - BOLTED CO	NDENSER FAN GRILLE	
24	76-00704-01	Grille and Venturi Assembly - Includes:	1
25	66U1-8912	Label, Rotation	1
34	69NT35-2692-1	Washer, Fender 1/4 - SST	4
35	34-06053-03	Washer, Mylar, 1/4ID x 1.00OD	4
36	34-00663-11	Washer, Lock, 1/4 - SST	4
37	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	4

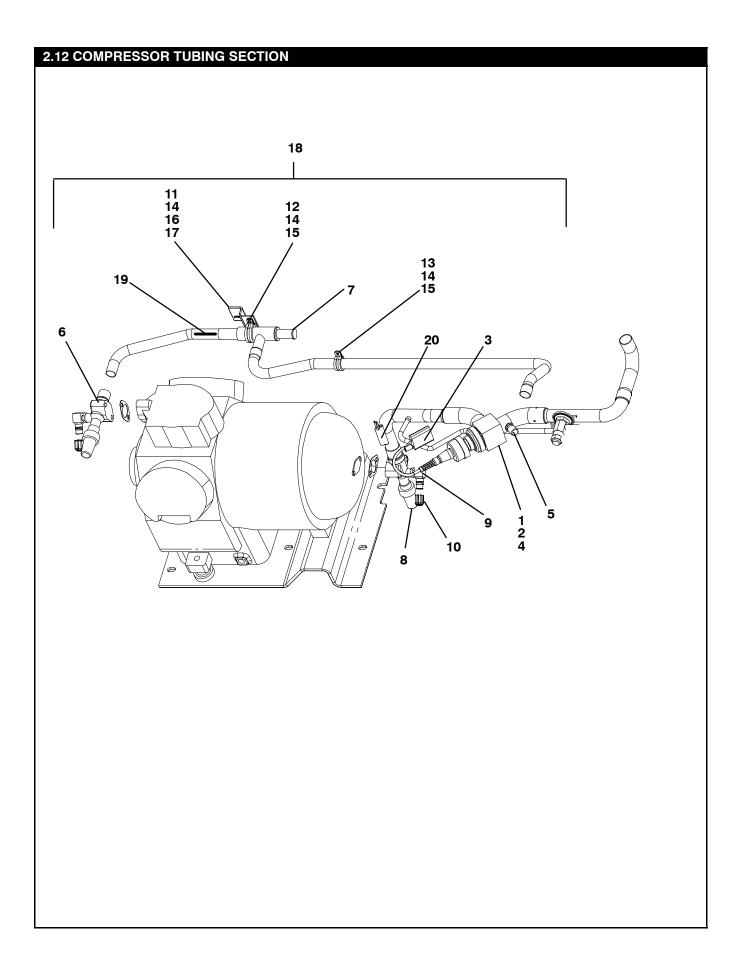

2.12 C	2.12 COMPRESSOR TUBING SECTION			
Item	Part Number	Description	Qty	
1	14-00263-00	Valve, Stepper Motor - Includes:	1	
2	14-00263-20	Piston and Motor Assembly - Includes:	1	
3	22-02392-03	Connector (To Power Pack)	1	
NS	22-02393-01	Pin, 18-20 Gauge (Used on 22-02392-03)	4	
NS	22-02394-03	Seal (Used on 22-02392-03)	4	
4	14-00263-23	O-Ring	1	
5	14-00263-22	Сар	1	
6	-	Valve, Service (Discharge) - See Section 4.3	1	
7	14-00204-02	Valve, Discharge Pressure Regulator (DPRV)	1	
8	-	Valve, Service (Suction) - See Section 4.3	1	
9	40-00542-00	Elbow, Adapter (R134a)	1	
10	40-00520-02	Cap, M8 x 1.0 - Nylon	1	
11	69NT41-702	Bracket Assembly	1	
12	66U1-3632-24	Clamp, Cushion, 1.18 Dia.	1	
13	34-00373-11	Clamp, Cushion, .88 Dia.	1	
14	66U1-5381-1	Screw, Hex Head, #10-24 x .75 lg SST	4	
15	34-06053-00	Washer, Mylar, .25 I.D. x .80 O.D.	3	
16	66U1-5321-8	Washer, Flat, #10 - SST	3	
17	34-06053-05	Washer, Mylar, .205 I.D. x .60 O.D.	3	
18	81-01482-00	Tubing assembly	1	
NS	22-01566-01	Socket (Used on 22-01585-04)	4	
NS	22-02393-00	Pin (Used on 22-01830-00)	4	
NS	22-02394-02	Seal (Used on 22-01835-00, 22-01585-04 and 22-01830-00)	A/R	
NS	22-01835-00	Connector (On Harness to Drive)	1	
NS	22-01566-00	Pin (Used on 22-01835-00)	5	
REFR	IGERATION TEMP	ERATURE SENSORS		
19	12-01105-02	Sensor, Thermistor (CPDS)	1	
20	12-01104-05	Sensor, Thermistor (CPSS)	1	

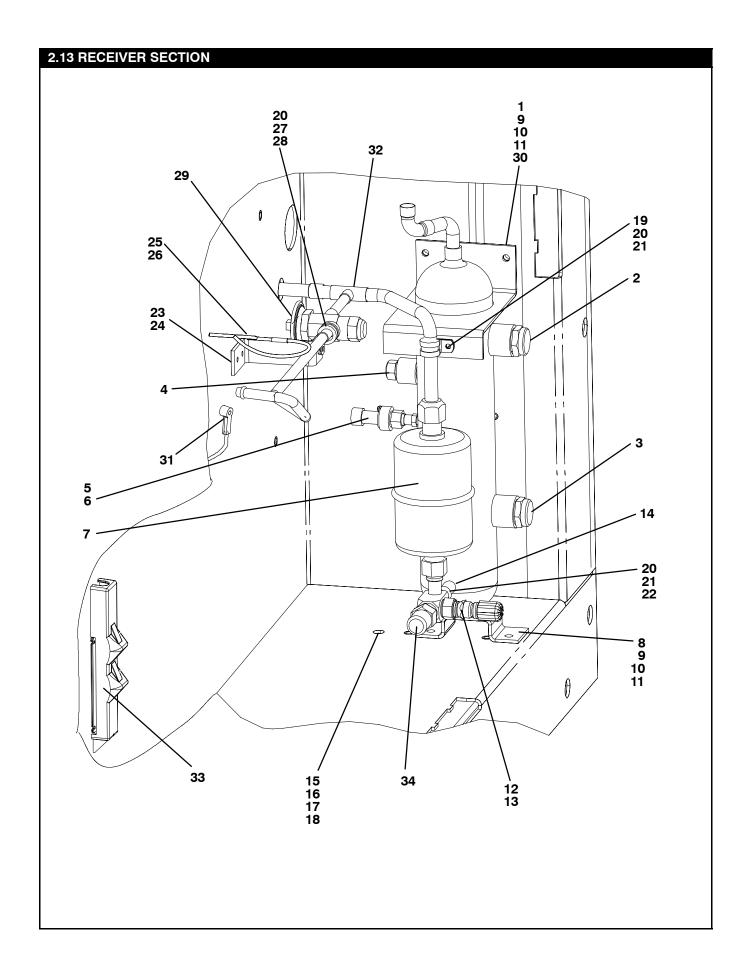

2.13 R	ECEIVER SECTION	N	
Item	Part Number	Description	Qty
1	69NT43-403-2	Receiver, Electro-Coated Modular, Copper - Includes:	1
2	14-00220-01	Glass, Sight, w/Red Balls, 1/2-14 npt	1
3	14-00221-01	Indicator, Moisture-Liquid	1
	14-01032-14	Plug, Fusible, 3/8 npt - Brass	1
4	14-00215-06	Disc, Rupture, 3/8 npt - Alternate	1
NS	22-02448-00SV	Connector, Female (Located on wire harness)	1
5	12-00352-00	Transducer, Condenser Pressure (CPT)	1
6	EC39DM062	Valve, Schrader	1
7	14-00341-02SV	Filter-Drier with O-Rings	1
8	69NT43-277	Bracket, Liquid Line Valve	1
9	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	A/R
10	66U1-5321-7	Washer, Flat, 1/4 - SST	3
11	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	4
12	40-00520-01	Coupling, M15 - Brass - Includes:	1
13	40-00520-03	Cap, Service Port	1
14	14-00221-00	Valve, Liquid Line	1
15	66U1-5361-7	Bolt, Hex Head, 3/8-16 x 1.00 lg SST	1
16	AU11JR241	Washer, Lock, 3/8 - SST	1
17	66U1-5321-5	Washer, Flat, 3/8 - SST	1
18	34-06053-02	Washer, Mylar, 0.375 ID x 1.00 OD	1
19	34-00373-05	Clamp, Cushion, 1/2 Diameter	1
20	66U1-5371-6	Screw, Machine, Hex Head, #10-24 x .75 lg SST	3
21	34-06053-05	Washer, Mylar, .205 I.D. x .60 O.D.	4
22	34-00373-07	Clamp, Cushion, 5/8 Diameter	1
23	69NT43-420	Bracket Assembly, Quench Valve	1
24	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4 - SST	2
25	66U2-1132-1	Connector	1
26	66U1-3803	Heat Shrink	1
27	34-00373-54	Clamp, Cushion, .44 Diameter	1
28	34-06053-03	Washer, Mylar, .25 I.D. x 1.00 O.D.	1
29	14-00212-03SV	Valve, Quench, Thermostatic Expansion - Includes:	1
NS	14-00212-21	Kit, Repair - Includes:	1
NS	NSS	Power Head	1
30	58-04026-23	Protector, Mylar	1
31	12-00495-02SV	Sensor, Ambient Thermistor (AMBS)	1
32	DE40BA203	Tee, Reducing 1/2 x 1/2 x 3/8	1
33	-	See Section 2.15 for Sensor Assembly and Related Parts	-
34	40-00501-50	Cap, Service Valve	1

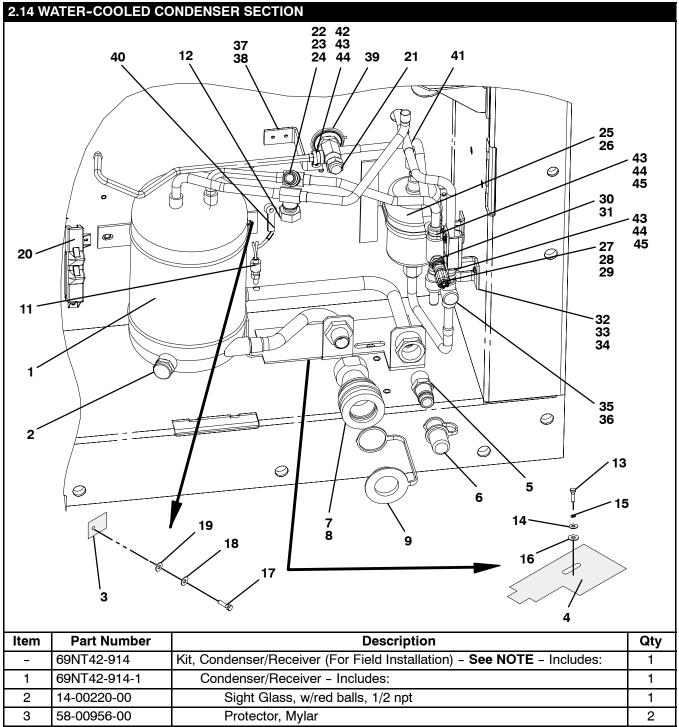


Item	Part Number	Description	Qty
-	69NT42-914	Kit, Condenser/Receiver (For Field Installation) - See NOTE - Includes:	1
1	69NT42-914-1	Condenser/Receiver - Includes:	1
2	14-00220-00	Sight Glass, w/red balls, 1/2 npt	1
3	58-00956-00	Protector, Mylar	2
4	58-00957-00	Protector, Mylar	1
5	66U1-2763-5	Coupling (Water-In)	1
6	66U2-1142	Cap, Dust	1
7	40-01129-00	Coupling, Self Draining - Includes:	1
7	66U1-2763-6	Coupling Assembly, Socket - Includes:	1
8	42-50000-00	Seal, O-Ring	1
9	66U2-1152	Cap, Dust (Use with 40-01129-00)	1
10	79-01757-00	Cap Assembly (Use with 66U1-2763-6)	1
11	12-01071-01SV	Switch,Water Pressure OPTION W	1
12	14-00215-05	Disc, Rupture, 3/8 npt	1

14 66U1-5321-5 Washer, Flat	k, 3/8 - SST ar, 3/8 ID x 1.00 OD	Qty 1 1 1
14 66U1-5321-5 Washer, Flat	, 3/8 - SST k, 3/8 - SST ar, 3/8 ID x 1.00 OD	1
·	k, 3/8 - SST ar, 3/8 ID x 1.00 OD	
15 AU11JR241 Washer, Loc	ar, 3/8 ID x 1.00 OD	1
16 34-06053-02 Washer, Myl		1
17 66U1-5361-25 Capscrew, H	ex Head, 1/4-20 x 3/4 lg SST	2
18 66U1-5321-7 Washer, Flat	, 1/4 - SST	2
19 34-06053-00 Washer, Myl	ar, 1/4 ID x 13/16 OD	2
20 - See Section	2.15 for Sensor Assembly and Related Parts	-
- 76-00677-00 Accessory K	it, Water-Cooled Condenser Tubing - Includes:	-
21 06DA403-844 Valve, S	chrader	1
22 12-00352-00 Transdu	cer, Condenser Pressure (CPT)	1
23 69NT41-477 Tube As	sembly - Includes:	1
24 40-00555-06 Tee,	1/2 x 1/2 x 3/8 npt - Brass	1
25 14-00341-02SV Filter-Dri	er with O-Rings	1
26 69NP20-1031 Clamp, F	Filter-Drier - Includes:	1
NS 58-50014-00 Gas	ket (16 ft., Cut to length)	1
- 69NT41-497 Tube As	sembly - Includes:	1
27 66U1-8552-2 Valv	e, Liquid Line - Includes:	1
28 40-00086-04	Cap, Flare - 1/4	1
29 17-21002-01	Cap, Valve	1
30 40-00520-01 Cou	oling, M15 - Brass - Includes:	1
31 40-00520-03	Cap, Service Port	1
32 68-12368-00 Bracket	·	1
33 66U1-5371-6 Screw, H	lex Head, #10-24 x 3/4 lg SST	2
34 34-06053-05 Washer,	Mylar, 0.205 ID x 0.600 OD	2
35 69NT41-487 Tube As	sembly - Includes:	1
36 14-01092-03 Indic	ator, Liquid Moisture - Brass	1
37 69NT43-420 Bracket Asset	embly	1
38 34-00928-09 Rivet, Blind,	5/32 Diameter, Grip Range - 1/8-1/4	2
39 14-00212-03SV Valve, Quen	ch, Thermostatic Expansion - Includes:	1
NS 14-00212-21 Kit, Repa	air - Includes:	1
NS NSS Pow	er Head	1
40 12-00495-02SV Sensor, Amb	ient Thermistor (AMBS)	1
41 DE40BA203 Tee, Reducir	ng, 1/2 x 1/2 x 3/8	1
42 34-00373-54 Clamp, Cush	ion, .44 Diameter	1
43 34-06053-03 Washer, Myl	ar, .25 I.D. x 1.00 O.D.	3
44 66U1-5371-6 Screw, Mach	ine Hex Head, #10-24 x .75 lg SST	3
45 34-00373-07 Clamp, Cush	nion, .62 Diameter	2

NOTE


Must order tubing accessory kit 76-00677-00 when ordering P/N 69NT42-914 for field installation on units provisioned for a water-cooled condenser.

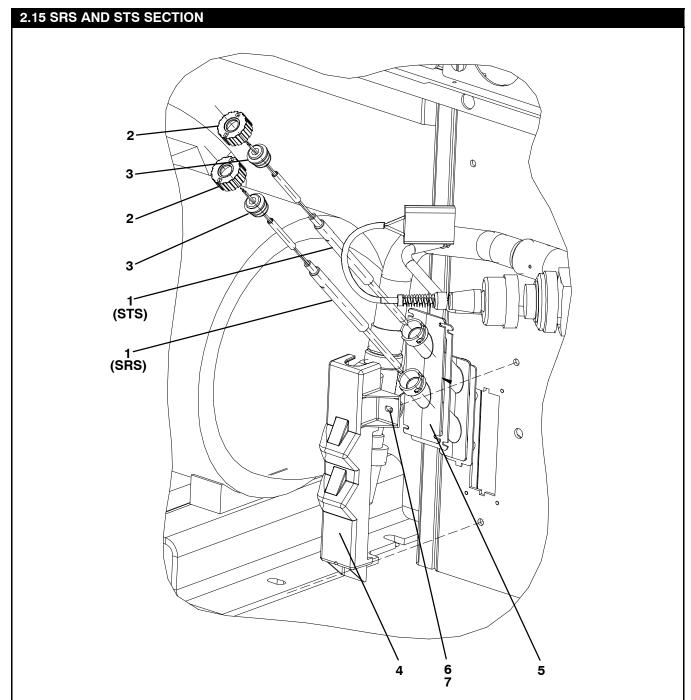


Item	Part Number	Description	Qty
1	12-00395-01SV	Sensor Assembly (STS & SRS)	1
2	58-04277-00SV	Cap, Probe - Includes:	2
3	58-04278-00	Grommet NSS	2
4	58-04279-00	Cover, Probe	1
5	58-04276-00	Holder, Probe	1
6	66U1-5321-7	Washer, Flat, 1/4 - SST	2
7	66U1-5371-7	Screw, Machine, Hex Head, #10-24 x .50 lg SST	2



OPTION - 2 & 3

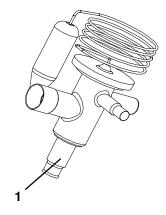

Item	Part Number	Description	Qty	
OPTION 2 AND 3 - EVAPORATOR COIL WITH HERMETIC TXV				
1	14-00273-03	Valve, Thermostatic Expansion	1	

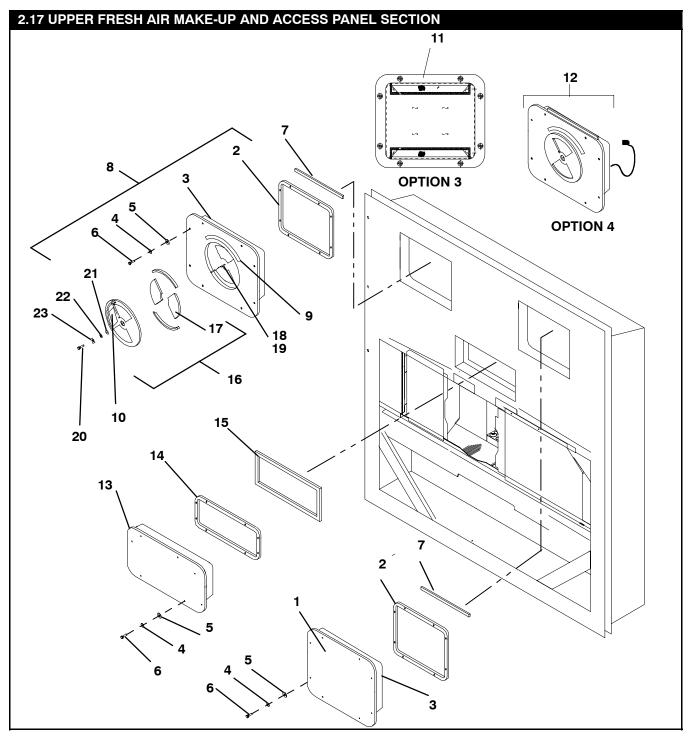


2.17 UPPER FRESH AIR MAKE-UP AND ACCESS PANEL SECTION			
Item	Part Number	Description	Qty
OPTIO	ON 1 EVAPORATO	R FAN ACCESS PANEL - PLAIN	
1	79-01697-06SV	Panel, Access (See NOTE 1) - Includes:	A/R
2	42-00296-01	Gasket	1
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
4	34-006212-12	Washer, Flat, 1/4 - SST	8
5	34-06053-13	Washer, Mylar, 1/4 ID X 0.80 OD	8
6	34-06154-00	Screw, Hex Head, 1/4-20 x 1.00 lg TIR	8
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1


OPTI	ON 2 EVAPORATOR	R FAN ACCESS PANEL - WITH FRESH AIR MAKEUP	
8	79-01694-00	Panel, Fresh Air Make-up w/Retaining Washers - Includes:	A/R
2	42-00296-01	Gasket	1
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1
9	-	Label, Fresh Air (See Section 2.33 for Language Selection)	1
10	62-02783-00	Label, Fresh Air	1
21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1
OPTI	ON 3 WITH FRESH	AIR MAKEUP AND SCREENS - USE ALL OF OPTION 2 AND ITEM E	BELOW
11	58-04251-00	Screen, Medfly	2
OPT	ON 4 EVAPORATO SENSOR (VPS)	OR FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VENT	POSITION
	79-01902-00	Panel (orange), Fresh Air Make-up w/VPS - Includes:	A/R
12	79-01902-01	Panel (white), Fresh Air Make-up w/VPS - Includes:	A/R
2	42-00296-01	Gasket	1
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1
9	-	Label, Fresh Air (See Section 2.33 for Language Selection)	1
10	62-02783-00	Label, Fresh Air	1
21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1
HEAT	TER ACCESS PANE	L	
13	79-01697-14	Panel, Access - Includes:	1
14	42-01052-02	Gasket	1
15	34-06212-12	Gasket, Access Panel	1
4	34-06053-13	Washer, Flat, 1/4 - SST	8
5	34-06053-00	Washer, Mylar, 1/4 ID X 0.80 OD	8
6	34-06154-00	Screw, Hex Head, 1/4-20 x 1.00 lg TIR	8
STUE	ASSEMBLY KITS	(REPLACEMENT)	
16	74-00201-02	Kit, Gasket and Stud Assembly (See NOTE 2) - Includes:	1
17	42-00407-00	Gasket (One Piece)	1
18	74-00201-01	Kit, Disc and Stud Assembly (See NOTE 3) - Includes:	1
19	NSS	Stud Assembly, 5/16-18	1
20	34-06185-01	Screw, Machine Pan Head, #8-32 x 1/2 lg SST	1
21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1

NOTES


- 1. Access panels with Transfresh option should be ordered from Transfresh, See Section 2.19 for address.
- 2. Disc and stud assembly kit, which will modify stud to 5/16-18, also includes new disc and gasket.
- 3. Must order 74-00201-01 stud assembly kit, which will modify stud to 5/16-18, and include 42-00407-01 (1 piece) gasket.

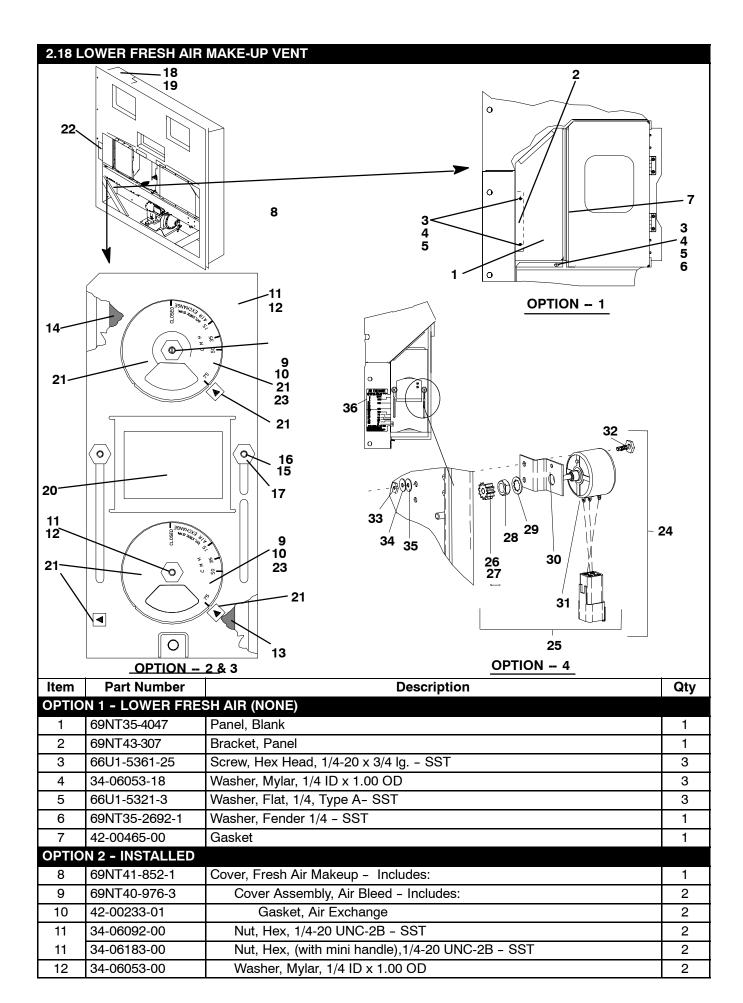

2.18 L0	OWER FRESH AIR I	MAKE-UP VENT	
Item	Part Number	Description	Qty
13	42-00295-01	Gasket, Cover	1
14	42-00295-00	Gasket, Cover	1
15	69NT41-782	Bushing	2
16	66U1-5321-7	Washer, Flat, 1/4 - SST	2
17	34-06092-00	Nut, Hex, 1/4-20 UNC-2B - SST	A/R
17	34-06183-00	Nut, Hex, (with mini handle),1/4-20 UNC-2B - SST	A/R
18	69NT35-8348	Baffle, Unpainted	1
19	34-00928-09	Rivet, Blind, .156 Diameter, Grip Range - 3/16-1/4	4
20	69NT35-7012	Label, Fresh Air	1
	76-50116-03	Label Kit - Includes:	1
	62-10540-04	Label, Air Exchange, CMH - English	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-00	Label Kit - Includes:	1
	69NT35-1417	Label, Air Exchange, CMH - English (Maersk Specification)	2
	66CH1-1002-33	Label, Arrow (Maersk Specification)	3
	76-50116-01	Label Kit - Includes:	1
21	69NT35-9238	Label, Air Exchange, CFM - English/Spanish	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-02	Label Kit - Includes:	1
	62-10540-00	Label, Air Exchange, CMH - English/Spanish/Chinese	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-04	Label Kit - Includes:	1
	62-10540-00	Label, Air Exchange, CMH - <i>English/Spanish/Chinese</i> (NYK Specification)	2
	62-10381-00	Label, Arrow (NYK Specification)	3
	69NT35-1287-1	Label, Fresh Air Exchange, CMH - English (Maersk Specification)	1
22	69NT35-9228	Label, Fresh Air Exchange, CFM - English/Spanish	1
	62-10537-00	Label, Fresh Air Exchange, CMH - English/Japanese/Chinese	1
	62-10381-00	Label, Fresh Air Exchange, CMH - English	1
OPTIO	N 3 - INSTALLED V	VITH SCREENS - USE ALL OF OPTION 2 PLUS ITEM BELOW	
23	58-04263-01	Screen Assembly, Medfly	2
OPTIO		VITH VENT POSITION SENSOR	
24	76-50136-00	Assembly, Vent Position Sensor - Includes:	1
25	79-01925-00	Sensor Assembly - Includes:	1
26	48-00377-00	Gear, 69nt, Auto LFA	1
27	34-06262-00	Screw, Set #8- 32 X .156lg	1
28	34-06287-00	Nut, Hex Jam 3/ 8- 32	1
29	34-06286-00	Washer, Lock 3/8-32	1
30	68-14955-00	Bracket, .063 Thk Sst	1
31	10-00455-00	Sensor, LVPS; Potentiometer	1
32	66U1-5371-7	Screw, Hex Head 10-24 x 1/2 gl. SST	2
33	34-00666-09	Nut, Hex, 10-24 UNC-2B - SST	2
34	66U1-5321-8	Washer, Flat, 1/2, Type A- SST	2
35	34-06053-04	Washer, Mylar	2
36	62-10984-00	Label, LVPS, Air Exchange	1

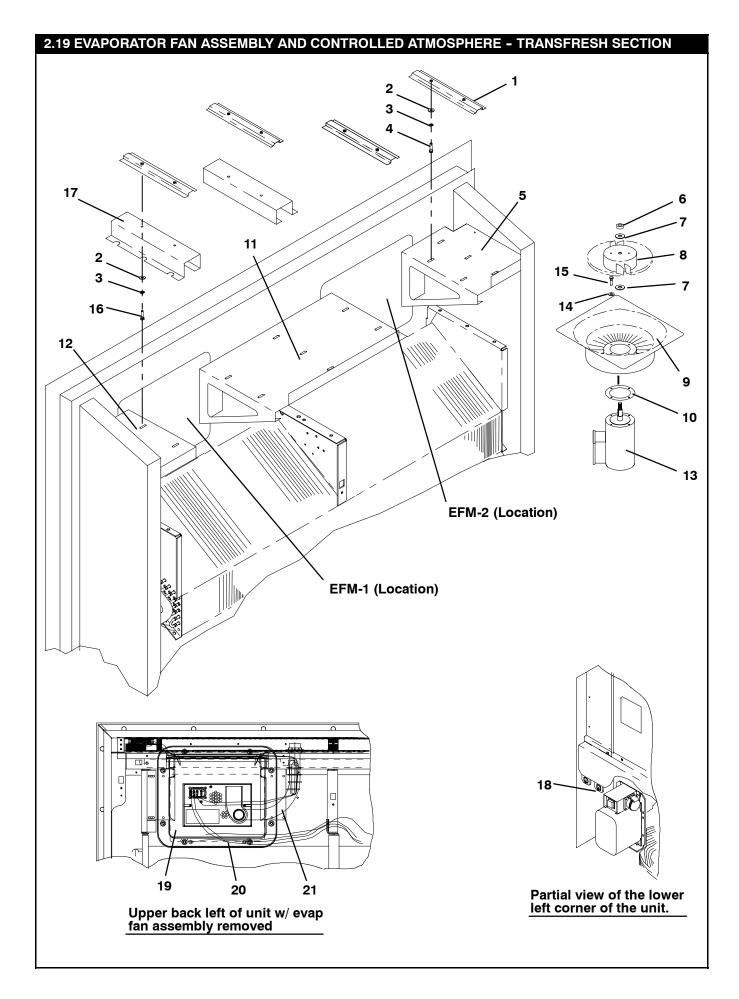


2.19 E	VAPORATOR FAN A	ASSEMBLY AND CONTROLLED ATMOSPHERE - TRANSFRESH SECTIO	N
Item	Part Number	Description	Qty
1	69NT43-295	Mounting Bracket, Evaporator Fan Assembly	4
2	69NT35-2692-1	Washer, Fender	8
3	34-00663-11	Washer, Lock, 1/4 - SST	8
4	34-06165-09	Screw, Hex Head, 1/4-20 x 1-1/4 lg SST	8
5	69NT43-284	Fan Deck, Right	1
6	34-00795-17	Nut, Self Locking, 5/8-18 - SST	2
7	34-00616-06	Washer, Special, 5/8 - SST	4
8	38-00557-00	Fan, Evaporator	2
9	48-00262-00	Stator, Evaporator	2
10	58-04066-00	Protector - Mylar	2
11	69NT43-285	Fan Deck, Center	1
12	69NT43-283	Fan Deck, Left	1
13	54-00585-20	Motor, Evaporator Fan - Includes:	2
NS	04-50027-00	Bearing, Front (Shaft End)	1
NS	22-50088-00	Capacitor (20 μF) High Speed	1
NS	22-01613-34	Pin #16	1
NS	22-01892-00	Plug Assembly, Motor (Located on Wire Harness) - Includes:	1
NS	22-01614-03	Plug	1
NS	22-01613-15	Contacts	A/R
NS	22-01892-01	Receptacle Assembly, Motor - Includes:	1
NS	22-01614-02	Receptacle	1
NS	22-01614-05	Strain Relief	1
NS	22-01613-14	Contacts	A/R
14	66U1-5321-3	Washer, Flat, 1/4 - SST	8
15	34-06165-09	Screw, Hex Head, 1/4-20 x 1-1/8 lg SST	8
CONT	ROLLED ATMOSP	HERE - TRANSFRESH	
-	76-00681-01	Kit, Transfresh Field Installation (For units with NO Transfresh Provision) - Includes:	-
16	34-00655-28	Screw, Hex Head, 1/4-20 x 3-1/2 lg SST	4
17	69NT35-6348	Bracket	2
NS	58-04290-00	Pipe Assembly, PVC	1
*18	69NT35-8734-4	Cable Assembly, Transfresh Communications Connector (TCC)	1
*19	69NT35-8734-16	Panel Assembly, Transfresh	1
*20	69NT35-8734-12	Cable, Power - A2C (Transfresh)	1
*21	69NT35-8734-5	Hose Assembly, Air (Transfresh)	1
*NS	69NT35-8734-14	Cable Assembly, Rear (Transfresh)	1
*NS	69NT35-8734-6	Fuse Assembly, In-line (Transfresh)	1
	* Contact -	NOTE TransFresh Corp., P.O. Box 1788, Salinas, CA 93902 to order these parts.	

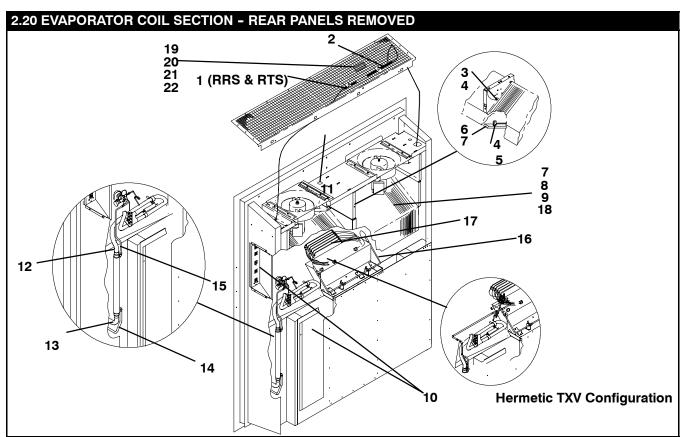


Item	Part Number	Description	Qty
1	12-00500-01SV	Sensor Assembly (RRS & RTS)	1
2	-	Sensor, Thermistor, (Temperature Recorder)	-
3	12-00495-02SV	Sensor, Thermistor, Defrost (DTS)	1
4	34-01178-22	Screw, Hex Head, #8-32 x 1/2 lg SST (For mounting DTS)	3
5	66U1-6912-16	Thermostat, Heat Termination (HTT)	1
6	AA06JA166	Capscrew, Hex Head, 1/4-20 x 1/2 lg.	1
7	AU11JR171	Washer, Lock, 1/4 - SST	10
8	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	9
9	69NT35-2692-1	Washer, Fender, 1/4 - SST	A/R
10	-	USDA Option - Refer to Section 2.21	-
NS	66U1-3803-1	Tube, Heat Shrink - 1/2 x 2-3/4 lg.	A/R
11	58-00616-00	Plug, Hole (2 inch diameter) (Located on Fan Deck)	16
NS	69NT35-6522	Retainer (For Heaters)	3
NS	69NT-35-6532	Clip (For Heaters)	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
12	69NT35-9674-1	Tube, Suction Line	1
13	56-07323-00	Tube, Suction Line	1
14	69NT35-4027-1	Tube, Liquid Line	1
15	56-07905-00	Tube, Liquid Line	1


		SECTION - REAR PANELS REMOVED OR COIL WITH HERMETIC TXV and LARGE HEAT EXCHANGER	
17	24-00006-02	Heater, Evaporator Coil	4
16	24-00003-00	Heater, Drain Pan	1
18	76-00748-00	Coil, Evaporator w/o Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	69NT-35-6532	Clip	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
18	76-00748-02	Coil, Evaporator w/Varnish- Hermetic Includes:	1
NS	81-01635-22	Coil (NSS)	1
NS	69NT-35-6532	Clip	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
OPTIC	N 5 - NEWCOIL W	ITH HERMETIC TXV STANDARD HEAT EXCHANGER AND 6 HEATERS	
17	24-00006-02	Heater, Evaporator Coil	6
18	76-00748-00	Coil, Evaporator w/o Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	44-00361-00	Clip	2
NS	68-13600-00	Retainer	1
NS	66U1-5371-13	Screw	3
18	76-00748-02	Coil, Evaporator w/Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	44-00361-00	Clip	2
NS	68-13600-00	Retainer	1
NS	66U1-5371-13	Screw	3
DEHL	JMIDIFICATION		
-	76-00675-01	Kit, Humidity Sensor(Field installation, units provisioned for - See Unit Matrix) - Includes:	ı
19	10-00413-00	Sensor, Humidity (HS)	1
20	66U1-5371-10	Screw, Hex Head, #10-24 x 1.00 lg SST	4
21	66U1-5321-8	Washer, Flat, #10 - SST	2
22	68-13181-00	Bracket Assembly, Humidity Sensor	1

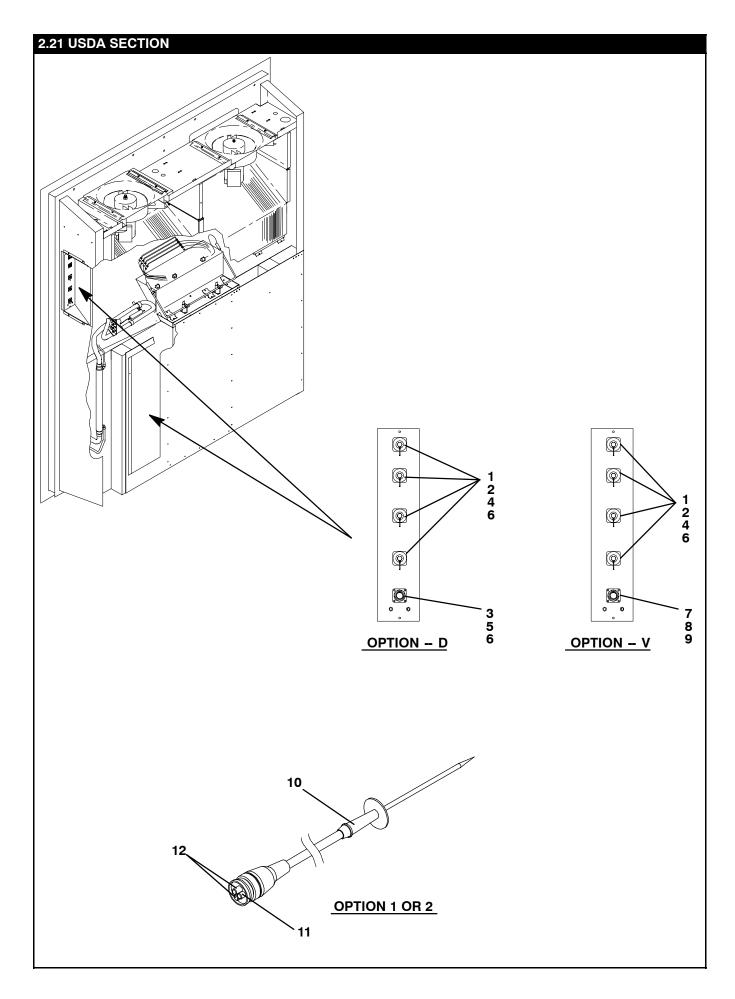


2.21 l	JSDA OPTION AND	PROBES	
Item	Part Number	Description	Qty
OPTIO	ON D		
-	76-00684-00	Kit, USDA (For field installation, units provisioned for rear-mounted USDA - See Unit Matrix) - Includes:	-
-	76-00760-00	Kit, USDA (For field installation, units provisioned for side-mounted USDA - See Unit Matrix) - Includes:	-
1	07-00397-12	Plug, Sealing	4
2	22-01660-00	Receptacle (PR1, PR2, PR3, Cargo Probe 4) (3 Pin)	4
3	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)1	1
NS	69NT41-992	Plate Assembly, USDA - Includes:	1
4	69NT43-175	Cap, Dust, with Tether (3 Pin)	4
5	69NT43-176	Cap, Dust, with Chain (5 Pin)	1
6	22-01613-14	Contact, Pin, #16 (Used with 22-01660-00 & 22-01660-03)	13
NS	69NT40-507-1	Door Assembly (Included and Used with REAR-mount USDA only)	1
NS	22-01660-04	Plug, Interrogator Socket (ICR) (5 Pin)	1
OPTIO	ON V		
1	22-01660-08	Plug, Sealing	4
2	22-01660-00	Receptacle (PR1, PR2, PR3, Cargo Probe 4) (3 Pin)	4
4	69NT43-175	Cap, Dust, with Tether (3 Pin)	4
6	22-01613-14	Contact, Pin, #16 (Used with 22-01660-00 & 22-01660-03)	13
7	22-02412-00	Receptacle, Interrogator (5 Pin)	1
8	22-02413-00	Cap, Dust, with Tether (5 Pin)	1
9	22-02398-02	Socket, Contact (Silver Plated)	A/R
9	22-02398-03	Socket, Contact (Gold Plated)	A/R
USDA	PROBE KITS		
OPTIO	ON 1		
10	12-00342-03	Sensor Assembly, 600" lg. (15M) (USDA Probe) - Includes:	A/R
11	22-50127-00	Plug, Socket (PR1, PR2, PR3, Cargo Probe 4)	1
12	22-01613-15	Contact, Socket, #16 (Used with 22-50127-00 & 22-01660-04)	A/R
OPTIO	ON 2		
10	12-00342-02	Sensor Assembly, 540" lg. (13.5M) (USDA Probe) - Includes:	A/R
10	12-00342-04	Sensor Assembly, 600" lg. (15M) (USDA Probe) - Includes:	A/R
11	22-50127-00	Plug, Socket (PR1, PR2, PR3, Cargo Probe 4)	1
12	22-01613-15	Contact, Socket, #16 (Used with 22-50127-00 & 22-01660-04)	A/R
		NOTE	
		Do not mix silver pins with gold pins and sockets.	

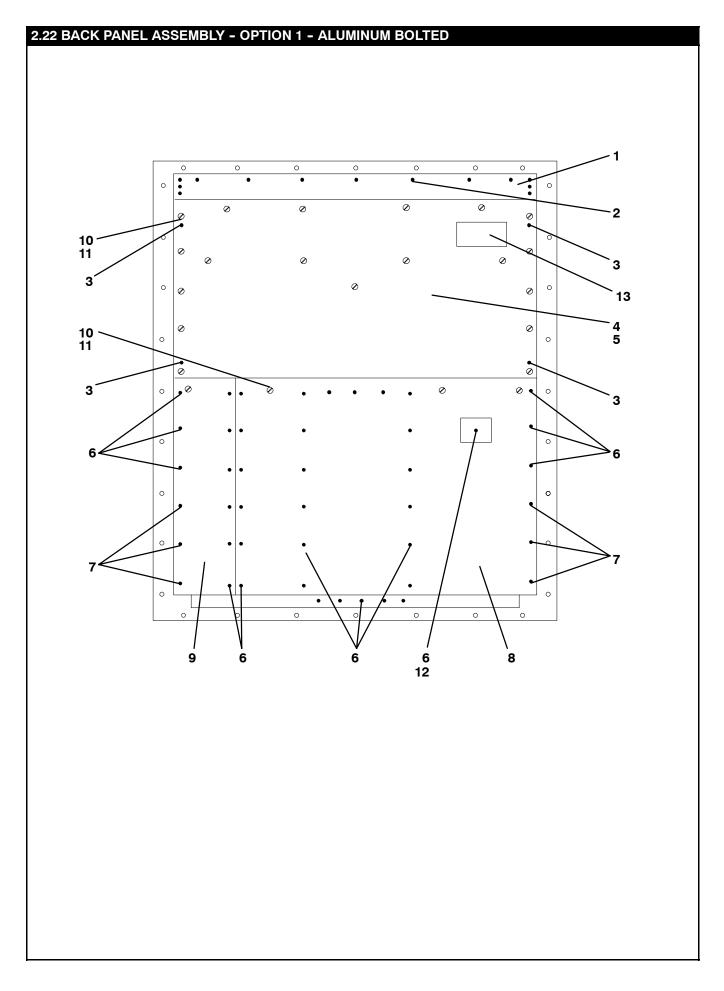


2.22 B	ACK PANEL ASSE	MBLY - OPTION 1 - ALUMINUM BOLTED	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top (Unpainted)	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	21
3	66U1-7982-2	Rivet, TIR, 3/16 Diameter, Grip Range - 5/64-11/64	4
4	69NT41-942-3	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side (Location - Behind upper panel)	2
NS	NSS	Drain Pan, Center (Location - Behind upper panel - Top)	1
5	42-00334-00	Gasket (Location - Behind upper panel)	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
6	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
7	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/4	3
8	68-13475-00	Panel, Bottom, (Painted)	1
8	68-13475-08	Panel, Bottom, (Unpainted)	1
9	68-13475-01	Panel, Bottom (Provision for heat exchanger location), (Painted)	1
9	68-13475-09	Panel, Bottom (Provision for heat exchanger location), (Unpainted)	1
10	66U1-2403	Screw, Machine, Truss Head, #10-24 x 1/2 lg SST	20
11	69NT35-2692	Washer, Fender, #10 x 1.00 OD - SST	20
12	69NT35-2257	Duct, Air	1
13	62-02822-01	Label, Carrier Transicold	1

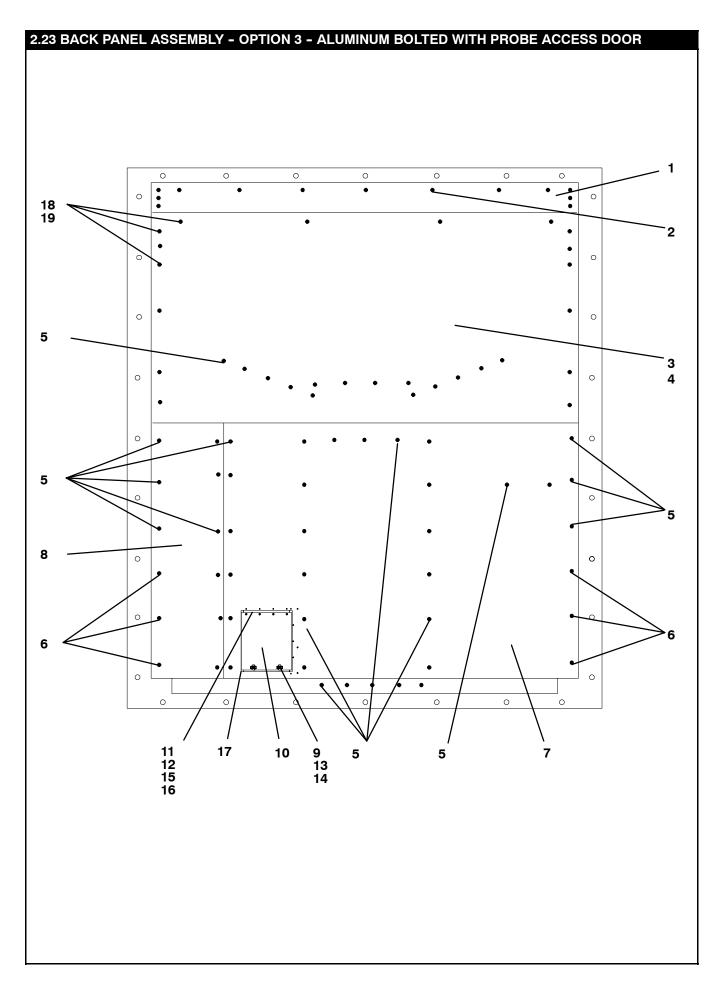


2.23 B	ACK PANEL ASSE	MBLY - OPTION 3 - ALUMINUM BOLTED WITH PROBE ACCESS DOOR	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	17
3	69NT41-942-3	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side	2
NS	NSS	Drain Pan, Center	1
4	42-00334-00	Gasket (Location - Behind upper panel)	1
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/4	8
7	68-13475-04	Panel, Bottom (Painted)	1
8	68-13475-01	Panel, Bottom (Painted	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
9	34-01150-31	Receptacle, Retaining	2
10	69NT43-471	Door Assembly, Probe Access - Includes:	1
11	66U1-2803-10	Hinge	1
12	69NT35-7662-3	Spacer, Hinge	1
13	34-01150-30	Washer, Retaining	2
14	34-01150-04	Stud, 1/4 Turn, 0.97 lg.	2
15	34-00928-04	Rivet, Blind, 1/8 Diameter, Grip Range - 1/4-5/16	8
16	69NT35-3286	Plate, Door Back - Upper	1
17	69NT35-3296	Plate, Door Back - Lower	1
18	66U1-2403	Screw, Machine, Truss Head, #10-24 x 1/2 lg SST	18
19	69NT35-2692	Washer, Fender, #10 x 1.00 OD - SST	18

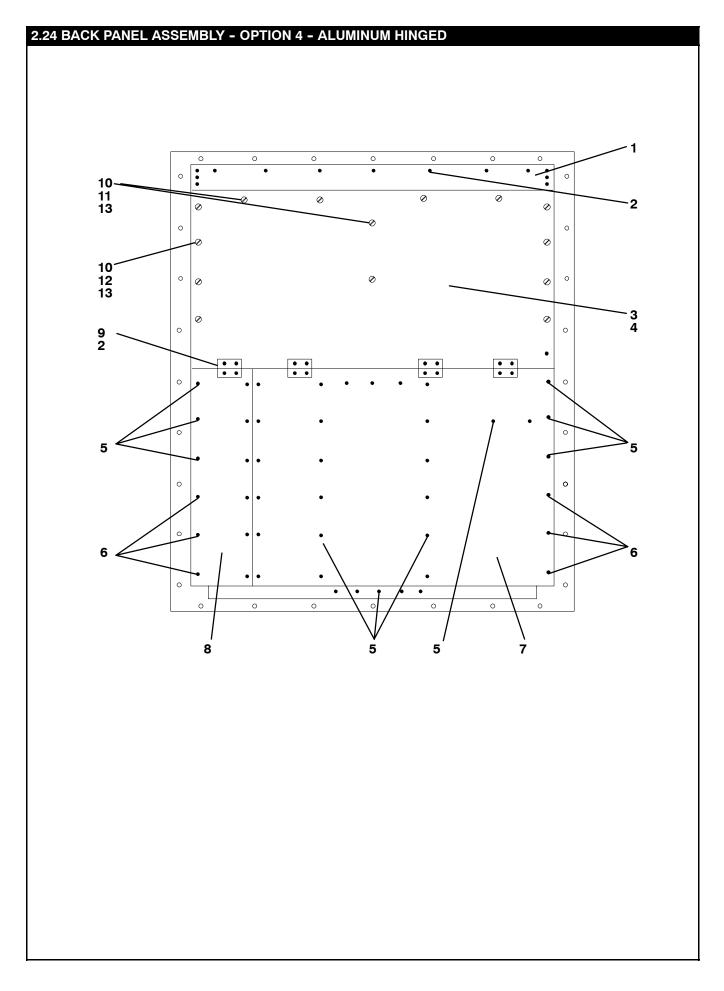


2.24 B	ACK PANEL ASSE	MBLY - OPTION 4 - ALUMINUM HINGED	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	37
3	69NT41-942-4	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side	2
NS	NSS	Drain Pan, Center	1
4	42-00334-00	Gasket (Location - Behind upper panel)	1
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/9	3
7	68-13475-00	Panel, Bottom, (Painted)	1
7	68-13475-08	Panel, Bottom, (Unpainted)	1
	68-13475-01	Panel, Bottom (Provision for USDA location), (Painted)	1
8	68-13475-09	Panel, Bottom (Provision for USDA location), (Unpainted)	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
9	69NT35-3282	Hinge	4
10	34-01150-30	Washer, Retaining	14
11	34-01150-06	Stud, 1/4 Turn, 1.03 lg.	6
12	34-01150-03	Stud, 1/4 Turn, 0.94 lg.	8
13	34-01150-31	Receptacle, Retaining	14

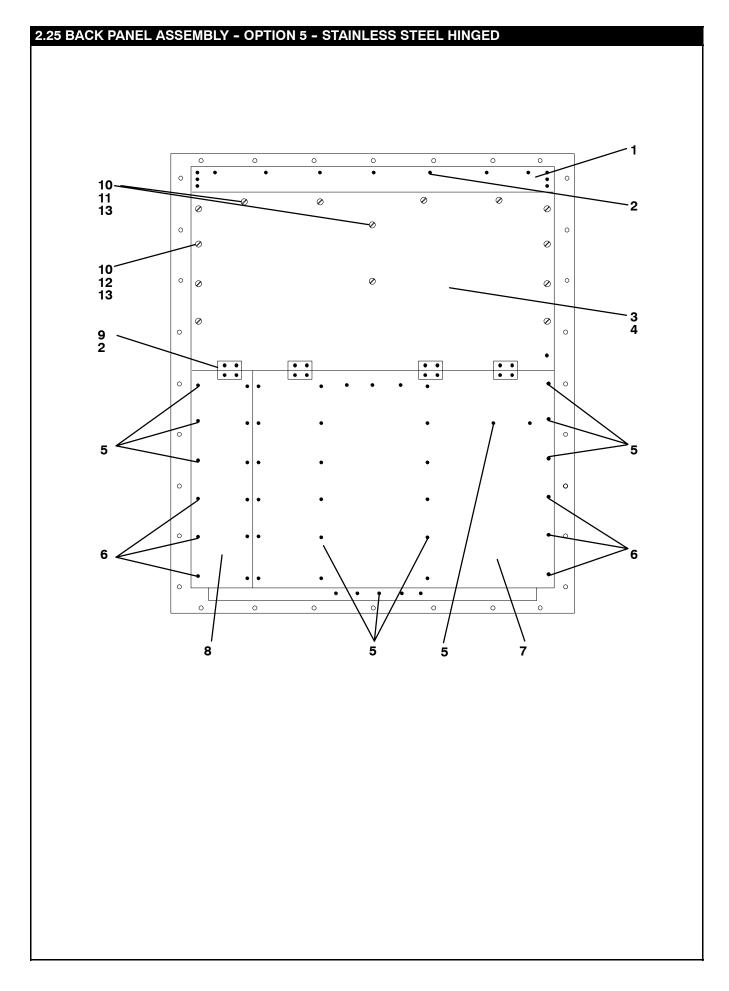


		MBLY - OPTION 5 - STAINLESS STEEL HINGED	
ltem	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	37
3	69NT41-942-5	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side	2
NS	NSS	Drain Pan, Center	1
4	42-00334-00	Gasket (Location - Behind upper panel)	1
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/9	3
7	69NT35-6598	Panel, Bottom. SST	1
8	69NT35-6598-1	Panel, Bottom (Provision for USDA location), SST	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
9	69NT35-3282	Hinge	4
10	34-01150-30	Washer, Retaining	14
11	34-01150-06	Stud, 1/4 Turn, 1.03 lg.	6
12	34-01150-03	Stud, 1/4 Turn, 0.94 lg.	8
13	34-01150-31	Receptacle, Retaining	14

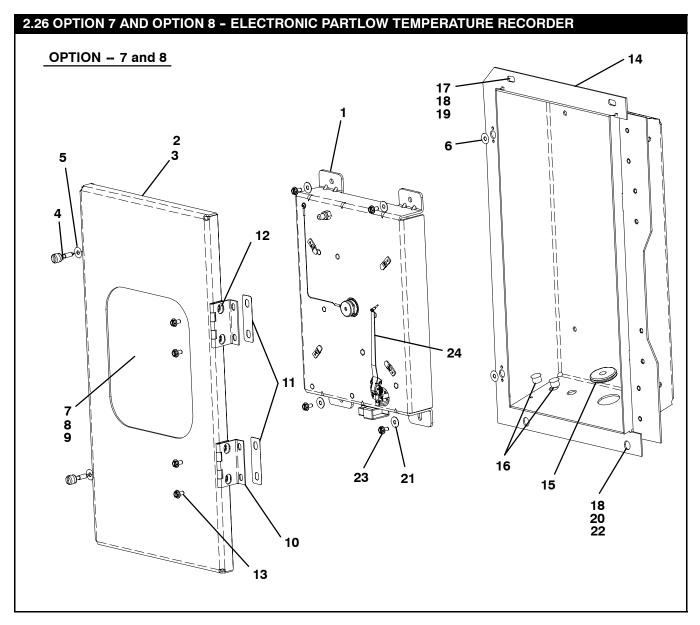

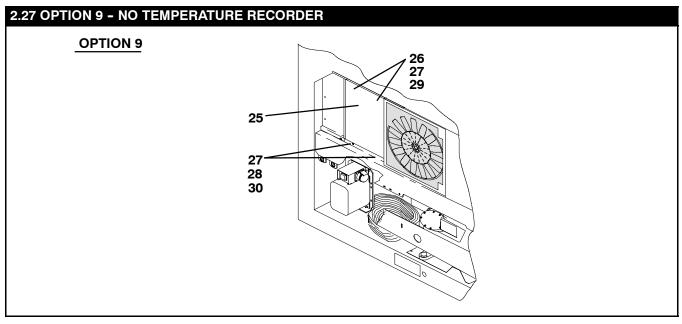

2.26 C	PTION 7 AND OPT	ION 8 - ELECTRONIC PARTLOW TEMPERATURE RECORDER	
Item	Part Number	Description	Qty
_	76-00701-11	Partlow Recorder Kit, Standard - Includes: Recorder, Box & Door Assy's	1
	OPTION 7	(For field installation, units provisioned for - Refer to Unit Matrix)	
1	12-00464-08	Electronic Temperature Recorder	1
_	76-00701-10 OPTION 8	Partlow Recorder Kit, Special - Includes: Recorder, Box & Door Assy's (For field installation, units provisioned for - Refer to Unit Matrix)	1
1	12-00464-04	Electronic Temperature Recorder	1
2	76-00701-05	Door Assembly - Includes:	1
3	42-01098-01	Seal, Door - Rubber	1
4	66U1-6811-8	Screw, Retaining300625 Panel Thickness - SST	2
5	34-06053-00	Washer, .25 I.D. x 1.00 O.D Mylar	4
6	34-06053-00	Washer, Retaining - SST	2
7	69NT35-5022-5	Washer, Retaining - SST Window	
-			1
8	69NT35-5352-1	Gasket	1
9	34-00795-09	Nut, Selflock, 1/4-20	4
10	44-00374-00	Hinge	2
11	58-04101-07	Protector - Mylar	4
12	34-06179-04	Screw, Hex Head, SEMS, #10-24 x 5/16 lg.	4
13	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	4
14	76-00701-06SV	Box Assembly - Includes:	1
15	58-00065-67	Grommet, 3/8 ID x 1.25 OD	1
16	58-00065-70	Plug, Hole, .50 DIA	2
17	66U1-5321-7	Washer, Flat, 1/4 - SST	2
18	66U1-5361-25	Screw, Cap, Hex Head, 1/4-20 x .75 lg SST	4
19	34-06053-13	Washer, Retaining, .19 I.D. x .80 O.D Mylar	2
20	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2
21	34-06053-05	Washer, 1/4 I.D. x 1 O.D Mylar	4
22	34-06053-03	Washer, .25 I.D. x .19 O.D Mylar	2
23	34-06179-00	Screw, Hex Head, SEMS, #10-24 x 7/16 lg.	4
24	09-00371-00	Stylus, Electronic Partlow Kit, Includes	
NS	-	Chart - Owner Supplied	A/R
NS	09-00128-00	Charts °F - 31 Day (Box of 50) (-20°F to +80°F)	A/R
NS	09-00128-01	Charts °C - 31 Day (Box of 50) (-25°C to +25°C)	A/R
NS	66U1-3882	Wire Tie	A/R
NS	58-04246-00	Base, Wire Tie	A/R


2.27 C	2.27 OPTION 9 - NO TEMPERATURE RECORDER				
Item	Part Number	Description	Qty		
25	68-12658-01	Panel	1		
26	66U1-5321-7	Washer, Flat, 1/4 - SST	2		
27	66U1-5361-25	Screw, Cap Hex Head, 1/4-20 x .75 lg SST	4		
28	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2		
29	34-06053-13	Washer, Retaining, .195 I.D. x .80 O.D Mylar	2		
30	34-06053-03	Washer, .25 I.D. x 1.00 O.D Mylar	2		

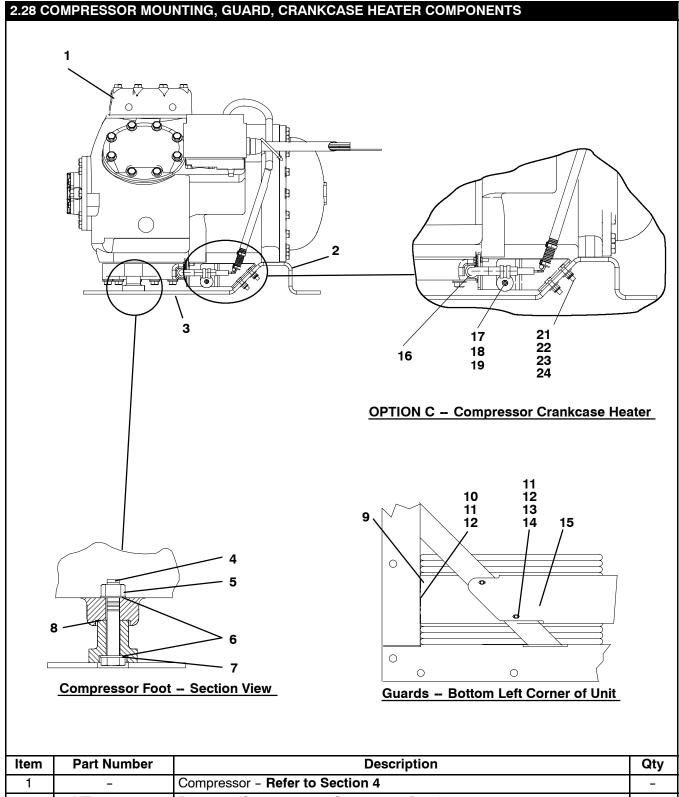


2	69NT35-6132	Protector (Compressor to Compressor Base)	1


2.28 C	OMPRESSOR MOU	INTING, GUARD, CRANKCASE HEATER COMPONENTS	
Item	Part Number	Description	Qty
3	69NT43-469	Base, Compressor	1
NS	66U1-5361-7	Bolt, Hex Head, 3/8-16 x 1.00 lg SST	7
NS	66U1-5321-5	Washer, Flat, 3/8 - SST	7
NS	AU11JR241	Washer, Lock, 3/8 - SST	7
NS	34-06053-02	Washer, Mylar, 0.375 ID x 1.00 OD	7
4	34-00849-22	Capscrew, 7/16-14 x 2-3/4 lg SST	2
5	34-00667-14	Locknut, 7/16-14 - SST	2
6	66U1-5321-8	Washer, Flat, 7/16 - SST	4
7	34-06053-07	Washer, Mylar, 0.438 ID x 0.922 OD	2
8	34-06053-01	Washer, Mylar, 0.438 ID x 1.125 OD	2
	68-12993-00	Panel, Guard	1
9	68-12523-00	Panel, Guard - Large	1
10	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	1
11	66U1-5321-7	Washer, Flat, 1/4 - SST	9
12	34-06053-00	Washer, Mylar, 1/4 ID x 3/4 OD	9
13	66U1-5361-11	Capscrew, Hex Head, 1/4-20 x 1-1/2 lg SST	4
14	34-00667-11	Locknut, 1/4-20 - SST	4
	68-12432-00	Guard, Compressor, .125 Thick Alum. (Blue)	1
4.5	68-12432-01	Guard, Compressor, .090 Thick Alum. (Blue)	1
15	68-12432-02	Guard, Compressor, .090 Thick Alum. (White)	1
	68-12432-03	Guard, Compressor, .125 Thick Alum., For Right Extended Guard (Blue)	1
OPTIO	N C - CRANKCASI	HEATER	
-	77-01018-05	Crackcase Heater Installation Kit - Includes:	1
16	24-02019-00	Heater, Compressor Crankcase (CCH) NSS	1
17	44-00370-03	Clamp, Tube, Cushioned, 1/2 Diameter - SST	1
18	34-06053-00	Washer, Mylar, 1/4 ID x 1.0 OD	1
19	66U1-5371-6	Screw, Machine Hex Head, #10-24 x .75 lg SST	1
20	69NT-35-8284	Bracket, Heater Mounting	1
NS	66U1-3882	Wire Tie	1
NS	66U1-3803	Heat Shrink Tubing	3
NS	22-01292-00	Butt Splice	3
NS	02-00086-00	Thermo Grease	1
21	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg - SST	2
22	34-06053-00	Washer, Mylar, 0.25 ID x 0.75 OD	4
23	34-00662-11	Washer, Flat, 1/4 x 0.05 Thk.	4
24	34-00667-11	Locknut, 1/4-20	2

2.29 COMPRESSOR GAUGES AND TRANSDUCERS

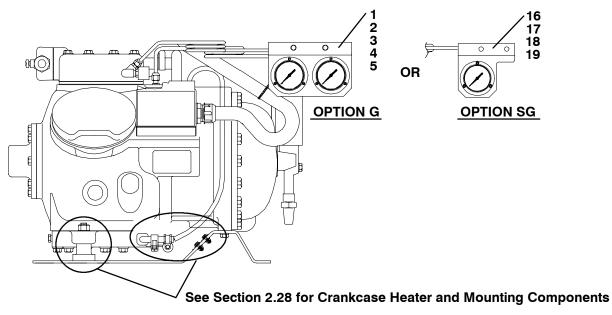


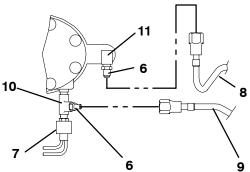


OPTION G - Center Cylinder Head View with Both gauges

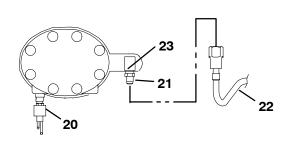

OPTION SG - Center Cylinder Head View with Suction Gauge Only

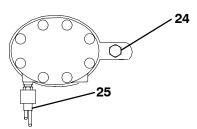


OPTION – Center Cylinder Head View without Gauges

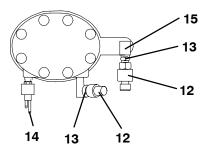


OPTION T - Center Cylinder Head View with Pressure Transducers

2.29 C	OMPRESSOR GAU	GES AND TRANSDUCERS	
Item	Part Number	Description	Qty
OPTIO	N G - PRESSURE	GAUGES	
1	69NT41-106-2	Stiffener Assembly	1
NS	66U1-5321-8	Washer, Flat, #10 - SST	2
NS	66U1-5371-6	Screw, Hex Head, #10-24 x 3/4 lg SST	2
NS	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
2	68-13472-03SV	Bracket Assembly, Gauge	1
3	12-01124-02	Gauge, Suction Pressure	1
4	12-01125-02	Gauge, Discharge Pressure	1
5	66U1-6651-19	Screw, Pan Head, #6-32 x 7/16 lg SST	6
6	06DA403-844	Valve Assembly, Core, Check (Schrader Valve) - Brass	2
7	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1
8	69NT41-553	Tube Assembly, Low Pressure	1
9	69NT41-543	Tube Assembly, High Pressure	1
10	CA21JA051	Tee, 1/4 npt	1
11	40-00060-02	Elbow, 90 Street, 1/4 FPT x 1/4 MPT - Brass	1
OPTIO	NT - PRESSURE	FRANSDUCERS	
12	12-00352-00	Transducer, Pressure	2
13	06DA403-844	Valve Assembly, Core, Check (Schrader Valve) - Brass	2
14	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1
15	40-00060-02	Elbow, 90 Street, 1/4 FPT x 1/4 MPT - Brass	1
OPTIO	N SG - SUCTION F	PRESSURE GAUGE ONLY	
16	69NT41-106-2	Stiffener Assembly	1
NS	66U1-5321-8	Washer, Flat, #10 - SST	2
NS	66U1-5371-6	Screw, Hex Head, #10-24 x 3/4 lg SST	2
NS	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
17	68-13472-01	Bracket Assembly, Gauge	1
18	12-01124-01	Gauge, Suction Pressure	1
19	66U1-6651-19	Screw, Pan Head, #6-32 x 7/16 lg SST	3
20	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1
21	06DA403-844	Valve Assembly, Core, Check (Schrader Valve) - Brass	2
22	69NT41-553	Tube Assembly, Low Pressure	1
23	40-00060-02	Elbow, 90 Street, 1/4 FPT x 1/4 MPT - Brass	1
OPTIO	N - NO GAUGES		
24	40-00123-02	Plug, Pipe, 1/4-18 NPTF - Brass	1
25	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1

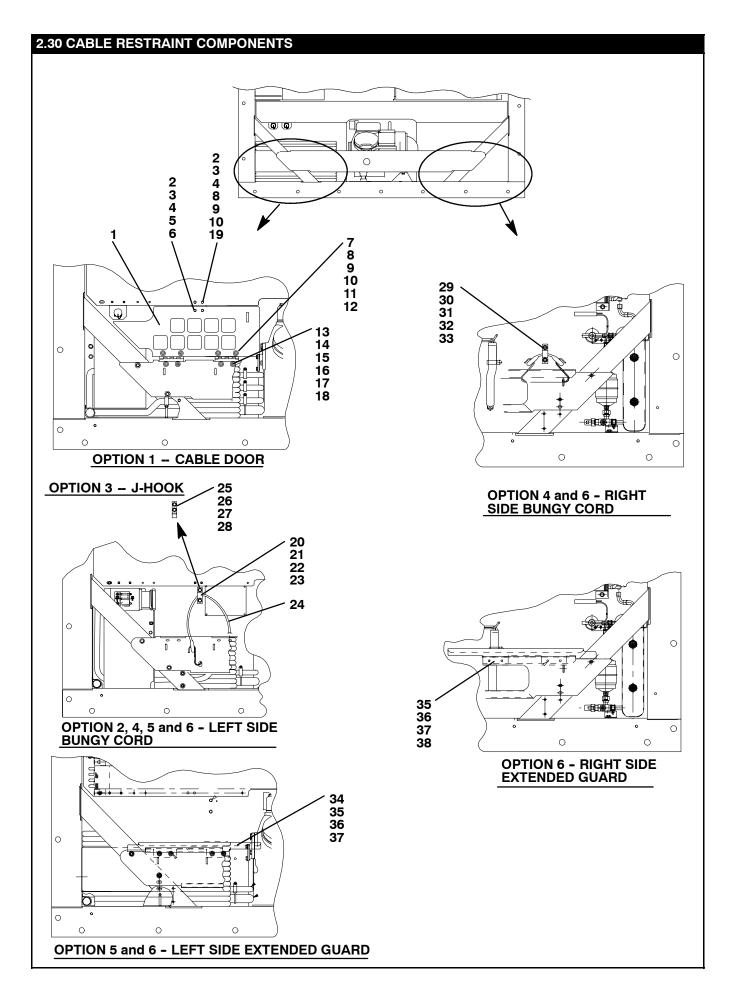


2.30 C	ABLE RESTRAINT	COMPONENTS	
Item	Part Number	Description	Qty
OPTIC	N 1 - CABLE DOO	R	
1	69NT41-724-4	Cover Assembly w/Latch, Cable Storage - Includes:	1
2	34-06126-08	Screw, Hex Head, #4-40 x 1/2 lg SST	2
3	34-00662-05	Washer, Flat, #4 -SST	4
4	34-00667-05	Locknut, Hex Head, #4-40	2
5	34-06053-08	Washer, Mylar, 1/8 ID x 3/8 OD	2
6	44-00340-03	Latch	1
7	69NT35-8032	Hinge	2
8	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	4
9	66U1-5321-8	Washer, Flat, #10	4
10	34-00667-09	Locknut, Hex Head, #10-24 - SST	4
11	34-06053-05	Washer, Mylar, 3/16 ID x 5/8 OD	4
12	58-04001-02	Protector, Mylar	2
13	58-04001-01	Protector, Mylar	1
14	34-06053-05	Washer, Mylar, 3/16 ID x 5/8 OD	2
15	34-01167-01	Retainer, Nut	1
16	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
17	66U1-5321-8	Washer, Flat, #10 - SST	2
18	66U1-5331-3	Washer, Lock, #10 - SST	4
19	44-00340-05	Latch, Catch	1
OPTIC	N 2 - LEFT BUNG	Y CORD ONLY	
20	69NT35-5992	Cable Restraint	1
21	66U1-5321-7	Washer, Flat, 1/4 - SST	2
22	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
23	34-06053-03	Washer, Mylar, .25 I.D. X 1.00 O.D.	2
24	66U1-2603	Strap, Tie Down	1
OPTIC	N 3 - J-HOOK		
25	69NT35-8382	Cable Restraint, J-Hook	1
26	58-04026-22	Protector, Mylar	1
27	66U1-5321-7	Washer, Flat, 1/4 - SST	2
28	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
OPTIC	N 4 - LEFT AND R	IGHT BUNGY CORD	
		Use Option 2 Plus the Items Below	
29	66U1-2603	Strap, Tie Down	1
30	69NT35-5992	Cable Restraint	1
31	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
32	66U1-5321-7	Washer, Flat, 1/4 - SST	2
33	34-06053-03	Washer, Mylar, .25 I.D. X 1.00 O.D.	2
OPTIC	N 5 - LEFT BUNG	Y CORD WITH LEFT EXTENDED GUARD	
		Use Option 2 Plus the Items Below	
34	68-13310-00	Bracket, Left	1
35	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	A/R
36	66U1-5321-8	Washer, Flat, #10 - SST	A/R
37	34-06053-05	Washer, Mylar, 3/16 ID x 5/8 OD	A/R
OPTIC	N 6 - LEFT AND R	IGHT BUNGY CORD WITH EXTENDED GUARDS	
		Use Option 4 and 5 Plus the Items Below	
38	68-13310-01	Bracket, Right	1
-	!	·	

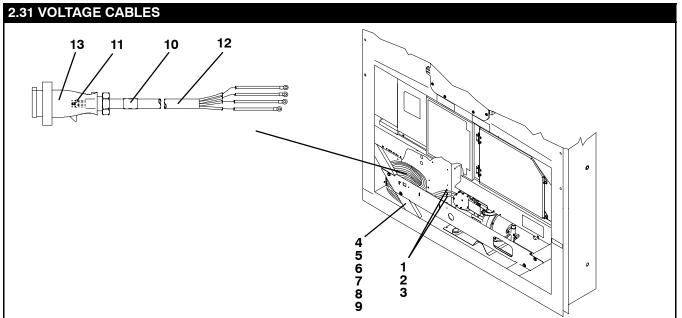


		7	
Item	Part Number	Description	Qty
CLAMI	PS ON BACK WALL	AND CABLE CUTTERS	
1	34-00373-56	Clamp, Tube, Cushioned, 9/16 Diameter (Used with Transicord)	A/R
'	34-00373-59	Clamp, Tube, Cushioned, 3/4 Diameter	A/R
2	66U1-5381-1	Screw, Hex Head, #10-24 x 3/4 lg SST	A/R
3	34-06053-03	Washer, Mylar, 1/4 ID x 1.00 OD	A/R
	69NT35-6412-2	Clamp, Cable Cutter, 8 AWG cable	1
4	68-14456-00	Clamp, Cable Cutter, 10 AWG cable	1
	58-14456-01	Clamp, Cable Cutter, 11 AWG cable	1
5	58-04026-07	Protector, Mylar	A/R
6	66U1-5361-11	Screw, Machined Hex Head, 1/4-20 x 1-1/2 lg SST	A/R
7	34-00667-11	Locknut, Hex Head, 1/4-20 - SST	A/R
8	66U1-5321-7	Washer, Flat, 1/4 - SST	A/R
9	34-06053-03	Washer, Mylar, 0.25 I.D. x 1.00 O. D.	A/R
		460V CABLES	
STANE	DARD PARTS FOR A		
10	66U1-2583	Heat Shrink Tube (Coil Label) - "460V"	1
44	22-02324-01	Bushing (Used with Standard Cable)	4
11	22-02324-05	Bushing (Used with Transicord)	4
OPTIO	N 1		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-02378-00	Plug, Power	1
OPTIO	N 2		·
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-02378-00	Plug, Power	1
OPTIO	N 3		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01891-00	Plug, Power	1
OPTIO	N 4		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01891-00	Plug, Power	1

2.31 V	OLTAGE CABLES	(Continued)	
Item	Part Number	Description	Qty
OPTIO	N 5		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01883-00	Plug, Power	1
OPTIO	N 6		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01891-00	Plug, Power	1
OPTIO	N 7		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01891-00	Plug, Power	1
OPTIO	N 8		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01932-00	Plug, Power	1
OPTIO	N 9		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-02232-00	Plug, Power	1
		230V CABLES	
STANE	DARD PARTS FOR	ALL 230V CABLES	
10	66U1-2583-1	Heat Shrink Tube (Coil Label) - "230V"	1
11	22-02324-02	Bushing (Used with 8 AWG)	4
12	66U1-9782-1	Cable, Power - Black, 35 amps, 8 AWG	A/R
OPTIO			
13	22-02188-00	Plug, Power	1
OPTIO			
13	22-02375-00	Plug, Power	1
OPTIO			
13	66U1-6782-3	Plug, Power	1
OPTIO			
13	22-01744-00	Plug, Power	1
OPTIO			
	22-02322-00	Plug, Power	1
OPTIO		Dive Deves	
13	22-01884-00	Plug, Power	1
OPTIO		Dive Deves	
13	66U1-6782	Plug, Power	1
OPTIO		Diver Devices	4
13	22-01931-00	Plug, Power	1
OPTIO		Diver Dower	1
13	22-01906-00	Plug, Power	1

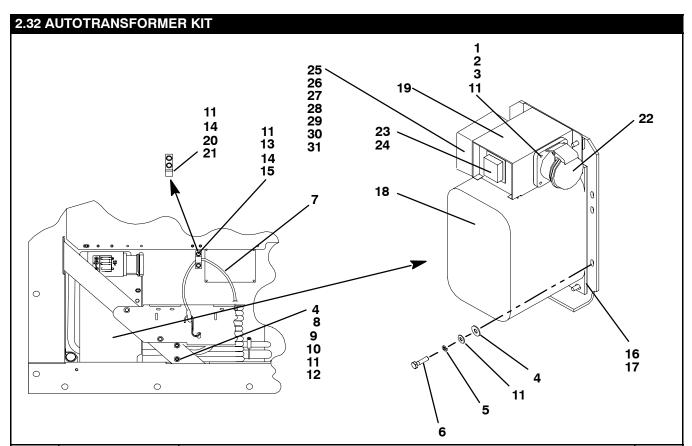


Item	Part Number	Description	Qty
STANE	DARD PARTS INCLU	UDED IN EVERY 76-00670 SERVICE KIT	
1	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	4
2	66U1-5321-8	Washer, Flat, #10 - SST	4
3	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
4	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	5
5	AU11JR171	Washer, Lock, 1/4 - SST	5
6	AA06JA170	Screw, Hex Head, 1/4-20 x 1.00 lg.	5
7	66U1-2603	Strap, Tie Down	1
	69NT35-6412-2	Clamp, Cable Cutter, 8 AWG cable	1
8	69NT35-6412	Clamp, Cable Cutter, 10 AWG cable	1
	69NT35-6412-1	Clamp, Cable Cutter, 11 AWG cable	1
9	58-04026-07	Protector, Mylar	1
10	66U1-5361-11	Screw, Machined Hex Head, 1/4-20 x 1-1/2 lg SST	2
11	66U1-5321-7	Washer, Flat, 1/4 - SST	A/R
12	34-00667-11	Locknut, Hex Head, 1/4-20 - SST	2
13	69NT35-5992	Clamp, Tie Down Strap	1
14	66U1-5361-25	Bolt, Hex Head, 1/4-20 x 3/4 lg SST	A/R
15	34-06053-03	Washer, Mylar, 0.25 ID x 1.00 O.D.	2
16	69NT43-374	Bracket Assembly	1
17	58-04026-17	Protector, Mylar	1

Item	2.32 A	UTOTRANSFORME	R KIT (Continued)	
See Previous Page for Standard Parts Included in the Kit and use with Items Below	Item	Part Number	Description	Qty
1	OPTIO	N 1 - AUTOTRANS	FORMER	ľ
18		See Previous F	Page for Standard Parts Included in the Kit and use with Items Below	
NS 22-01778-00 Terminal Block - Used only without CB2	_	76-00670-02		1
19	18	10-01139-04		1
20	NS	22-01778-00	Terminal Block - Used only without CB2	1
1	19		•	1
See Previous Page for Standard Parts Included in the Kit and use with Items Below	20	69NT35-8382	1.1	1
See Previous Page for Standard Parts Included in the Kit and use with Items Below				1
Transformer Kit, Field Installation, with CB2 - Includes:	OPTIO			,
18				
19 69NT43-470 Box Assembly - Used only with CB2 1 22-01679-00 Receptacle, 32 Amp 1 22-01679-00 Receptacle, 32 Amp 1 22-01679-01 Receptacle, w/ Screw Cap - 32 Amp, Alternate, SOLD SEPARATELY 1 20 69NT35-8382 Clamp, Tie Down Strap 1 78-00667-05 Circuit Breaker Kit, Field Installation - Includes:				+
22-01679-00 Receptacle, 32 Amp 1				
22	19		-	<u> </u>
22-01679-01 Heceptacle, w/ Screw Cap - 32 Amp, Alternate, SOLD SEPARATELY 1		22-01679-00	Receptacle, 32 Amp	1
21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation – Includes: 1 1 23 10-00083-05 Circuit Breaker, 70 amp – 250 vac, 50/60 hz 1 1 24 66U2-1531 Boot – Includes: 1 1 1 1 1 1 1 1 1	22	22-01679-01	Receptacle, w/ Screw Cap - 32 Amp, Alternate, SOLD SEPARATELY	1
- 76-00667-05	20	69NT35-8382	Clamp, Tie Down Strap	1
10-00083-05	21	58-04026-22	Protector, Mylar	1
1	-	76-00667-05	Circuit Breaker Kit, Field Installation - Includes:	1
NS	23	10-00083-05	Circuit Breaker, 70 amp - 250 vac, 50/60 hz	1
NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 OPTION 3 - AUTOTRANSFORMER WITH CB2 AND BRIDGING UNIT See Previous Page for Standard Parts Included in the Kit and use with Items Below - - 76-00670-03 Transformer Kit, Field Installation, with CB2 and TBU - Includes: 1 18 10-01139-04 Transformer, Dual Voltage Modular 1 19 69NT43-470-2 Box Assembly 1 20 69NT35-8382 Clamp, Tie Down Strap 1 21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06621-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 </td <td>24</td> <td>66U2-1531</td> <td>Boot - Includes:</td> <td>1</td>	24	66U2-1531	Boot - Includes:	1
OPTION 3 - AUTOTRANSFORMER WITH CB2 AND BRIDGING UNIT See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-03 Transformer Kit, Field Installation, with CB2 and TBU - Includes: 1 18 10-01139-04 Transformer, Dual Voltage Modular 1 19 69NT43-470-2 Box Assembly 1 20 69NT35-8382 Clamp, Tie Down Strap 1 21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2	NS	NSS	Frame	1
See Previous Page for Standard Parts Included in the Kit and use with Items Below	NS	NSS	Screw, Self Sealing, #6-32 x 3/8 lg SST	6
- 76-00670-03 Transformer Kit, Field Installation, with CB2 and TBU - Includes: 1 18 10-01139-04 Transformer, Dual Voltage Modular 1 19 69NT43-470-2 Box Assembly 1 20 69NT35-8382 Clamp, Tie Down Strap 1 21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-28 NST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31	OPTIO			
18 10-01139-04 Transformer, Dual Voltage Modular 1 19 69NT43-470-2 Box Assembly 1 20 69NT35-8382 Clamp, Tie Down Strap 1 21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01				
19 69NT43-470-2 Box Assembly 1 20 69NT35-8382 Clamp, Tie Down Strap 1 21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH	-			1
20 69NT35-8382 Clamp, Tie Down Strap 1 21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below Transformer Kit, Field Installation, with CB2 - Includes: 1 Everything in kit 76-00670-01 except replace Item #22 with below 1	18		<u> </u>	1
21 58-04026-22 Protector, Mylar 1 - 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-0667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22	19		Box Assembly	1
- 76-00667-05 Circuit Breaker Kit, Field Installation - Includes: 1 23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-0667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND REGEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below				
23 10-00083-05 Circuit Breaker, 70 amp - 250 vac, 50/60 hz 1 24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below	21	58-04026-22	•	1
24 66U2-1531 Boot - Includes: 1 NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-0667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1	_		,	1
NS NSS Frame 1 NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTAGLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1	23		·	1
NS NSS Screw, Self Sealing, #6-32 x 3/8 lg SST 6 25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1				1
25 12-00474-00 Bridge Unit, Transformer 1 26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1				
26 42-00470-00 Gasket, Transformer Bridge Unit 1 27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 0.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 0.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1			<u> </u>	
27 34-06221-00 Screw, Hex Head, #10-24 x 2.50 lg SST 2 28 34-0667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 l.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 l.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1			<u> </u>	
28 34-00667-09 Locknut, Hex Head, #10-24 - SST 2 29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 I.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 I.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1			•	
29 66U1-5321-8 Washer, Flat #10 - SST 2 30 34-06053-05 Washer, Mylar 0.205 I.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 I.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below 1				
30 34-06053-05 Washer, Mylar 0.205 I.D. x 0.600 O.D. 2 31 22-02324-01 Bushing, 0.142 I.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below				
31 22-02324-01 Bushing, 0.142 I.D. x 0.472 O.D. 3 OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: Everything in kit 76-00670-01 except replace Item #22 with below			•	
OPTION 4 - AUTOTRANSFORMER WITH CB2 AND RECEPTACLE See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: 1 Everything in kit 76-00670-01 except replace Item #22 with below				
See Previous Page for Standard Parts Included in the Kit and use with Items Below - 76-00670-04 Transformer Kit, Field Installation, with CB2 - Includes: 1 Everything in kit 76-00670-01 except replace Item #22 with below			5.	3
Everything in kit 76-00670-01 except replace Item #22 with below	OPTIO			
	_	76-00670-04		1
	22	22-01734-01		1

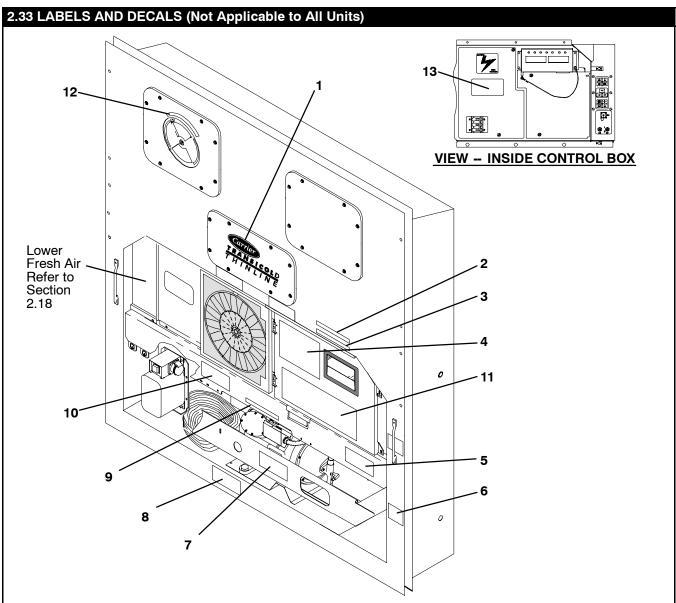


Item	Part Number	Description	Qty
STAN	DARD LABELS		
1	62-10769-00	Decal, Carrier Thinline	1
2	69NT35-3867	Label, Economy Mode	1
3	69NT35-3907	Label, Humidity Control Sensor	1
4	62-02721-00	Label, Function Code - English	1
4	62-02721-03	Label, Function Code, with Single Evaporator Fan Capability - English	1
	62-10902-02	Label, USDA Cold Certified	1
5	62-10902-03	Label, Micro-Link 3 with USDA Cold Certified	1
	62-10902-04	Label, Micro-Link 3 without USDA Cold Certified	1
6	62-02444-01	Label, Charge with R-134a	1
7	62-10259-00	Label, R-134a - Ozone Protection - English	1
7	62-02530-01	Label, R-134a - Ozone Protection, Umbrella Only - English	1
8	62-02458-00	Label, POE Compressor Oil	1
9	69NT35-8218	Label, Equipped w/Crankcase Heater (CCH)	1
10	62-02785-00	Label, CE	1
NS	69NT35-6118	Label, USDA (Location - Back of Unit, top left side)	1


	ABELS AND DECAL		
Item	Part Number	Description	Qty
OPTIO	N 1 - ENGLISH		
11	62-02720-00	Label, Operating Instructions (Partlow w/ Return Air)	1
11	62-02743-14	Label, Operating Instructions (Partlow w/ Supply Air)	1
11	62-02743-16	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air)	1
11	62-02743-12	Label, Operating Instructions (Saginomiya w/ Supply Air)	1
11	62-02743-13	Label, Operating Instructions (Saginomiya w/ Return Air)	1
11	62-02743-18	Label, Operating Instructions (No Recorder)	1
12	62-02723-00	Label, Fresh Air Makeup - <i>English</i>	1
12	62-02723-03	Label, Fresh Air Makeup (w/ Full CMH) - English	1
12	62-02723-10	Label, Fresh Air Makeup (w/ Full CMH + CFM) - English	1
13	62-10532-00	Label, Welding Precautions - English	1
	N 2 - ENGLISH/SPA		
11	62-02743-01	Label, Operating Instructions (Partlow w/ Return Air) - English/Spanish	1
11	62-02743-10	Label, Operating Instructions (No Recorder) - English/Spanish	1
12	62-02723-02	Label, Fresh Air Makeup - English/Spanish	1
12	62-02723-04	Label, Fresh Air Makeup (w/ Full CMH) - English/Spanish	1
13	62-10532-02	Label, Welding Precautions - English/Spanish	1
	N 3 - ENGLISH/FRI		
11	62-02743-00	Label, Operating Instructions (Partlow w/ return Air) - English/French	1
12	62-02723-01	Label, Fresh Air Makeup - English/French	1
13	62-10532-01 N 4 - ENGLISH/KO	Label, Welding Precautions - English/French	1
11	62-02743-02	Label, Operating Instructions (Partlow w/ Return Air) - English/Korean	1
11	62-02743-08	Label, Operating Instructions (Fartiow W/ Neturn Air) - English/Korean	1
12	62-02723-03	Label, Fresh Air Makeup (w/ Full CMH) - English	1
13	62-10532-00	Label, Welding Precautions - English	1
		ADITIONAL CHINESE	ı
11	62-02743-04	Label, Operating Instructions (Partlow w/ Return Air) - English/Chinese	1
11	62-02743-07	Label, Operating Instructions (Saginomia w/ Return Air) - English/Chinese	1
11	62-02743-19	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) - English/Chinese	1
12	62-02723-06	Label, Fresh Air Makeup - <i>English/Chinese</i>	1
13	62-10532-04	Label, Welding Precautions - English/Chinese	1
OPTIO	N 6 - ENGLISH/SIN	IPLIFIED CHINESE	
11	62-02743-15	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) - English/Simplified Chinese	1
11	62-02743-04	Label, Operating Instructions (Partlow w/ Return Air) - English/Simplified Chinese	1
12	62-02723-05	Label, Fresh Air Makeup - English/Simplified Chinese	1
13	62-10532-03	Label, Welding Precautions - English/Simplified Chinese	1
OPTIO	N 7 - ENGLISH/JAF	PANESE/CHINESE	
11	62-02743-09	Label, Operating Instructions (Saginomia w/ Supply and Return Air) - English/Japanese/Chinese	1
11	62-02743-17	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) - English/Japanese/Chinese	1
12	62-02723-09	Label, Fresh Air Makeup - English/Japanese/Chinese	1
12	62-02723-11	Label, Fresh Air Makeup - (w/ Shaded CMH) English/Japanese/Chinese	1
13	62-10532-06	Label, Welding Precautions - English/Japanese/Chinese	1

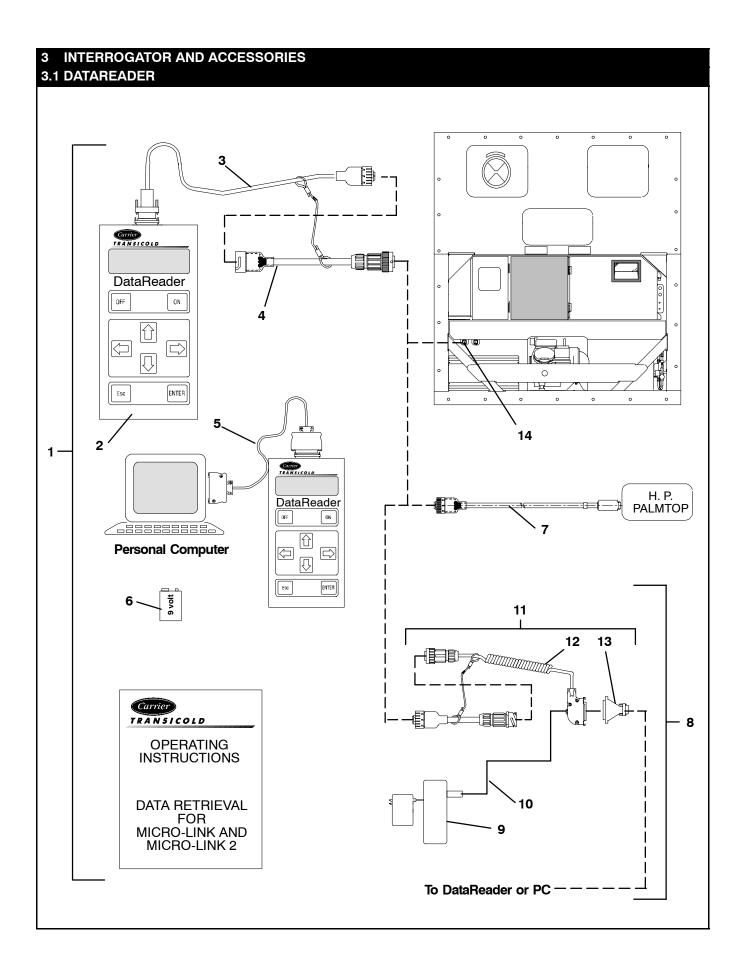

3.1 DA	3.1 DATAREADER			
Item	Part Number	Description	Qty	
1	07-00321-07/2.5	Kit, DataReader - Includes:	1	
2	12-00377-01/2.5	DataReader	1	
3	22-01737-00	Cable, Download	1	
4	22-01737-01	Cable, Adapter	1	
5	22-01743-00	Cable, Upload	1	
6	PL	Battery, Akaline - 9 Volt	1	
-	07-00421-00	DataLine Software	1	
7	22-01737-02	Cable, H.P. Palmtop	1	
8	76-50058-00	Kit, Battery, with Cable - Includes:	1	
9	NSS	Battery, External, with Battery Charger	1	
10	22-02401-00	Cable	1	
11	76-50059-00	Kit, Cable, with Adapter - Includes:	1	
12	22-02418-02	Cable, Interrogator	1	
13	22-02420-00	Adapter	1	
14	=	Receptacle - Refer to section 3.2	-	

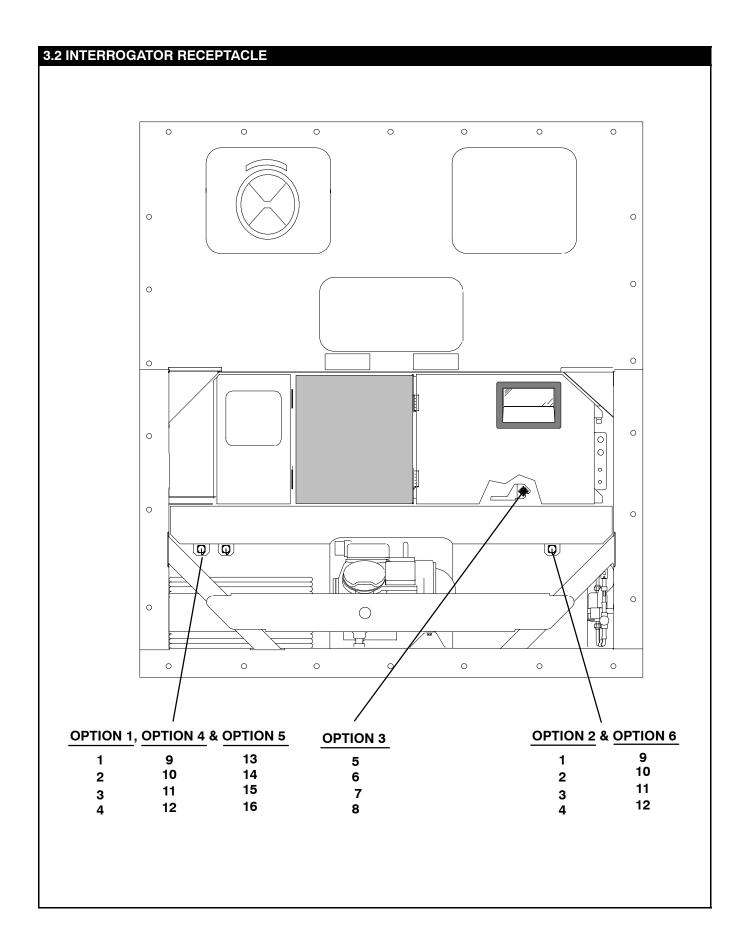

3.2 INT	3.2 INTERROGATOR RECEPTACLE			
Item	Part Number	Description	Qty	
OPTIO	N 1 - LEFT STRAIC	GHT MOUNT & OPTION 2 - RIGHT STRAIGHT MOUNT		
1	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1	
2	22-01613-14	Contact, Pin, #16	5	
3	69NT43-176	Cap, Dust, with Tether (5 Pin)	1	
4	69NT41-192	Bracket, Interrogator Connector	1	
OPTIO	N 3 - BOX MOUNT			
5	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1	
6	22-01613-14	Contact, Pin, #16	5	
7	68-12434-02	Bracket, Interrogator Connector	1	
8	42-00174-38	Gasket, Interrogator Connector Bracket	1	
OPTIO	N 4 - LEFT STRAIC	GHT MOUNT AND OPTION 6 - RIGHT STRAIGHT MOUNT	·	
9	22-02412-00	Receptacle, Interrogator (ICR) (5 Pin)	1	
10	22-02412-02	Contact, Pin, #16	5	
11	22-02413-00	Cap, Dust, with Tether (5 Pin)	1	
12	69NT40-222	Bracket, Interrogator Connector	1	
OPTIO	N 5 - LEFT ANGLE	ED MOUNT		
13	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1	
14	22-01613-14	Contact, Pin, #16	5	
15	69NT43-176	Cap, Dust, with Tether (5 Pin)	1	
16	68-12553-00	Bracket, Interrogator Connector	1	
		NOTE		
		Do not mix silver and gold pins and sockets.		

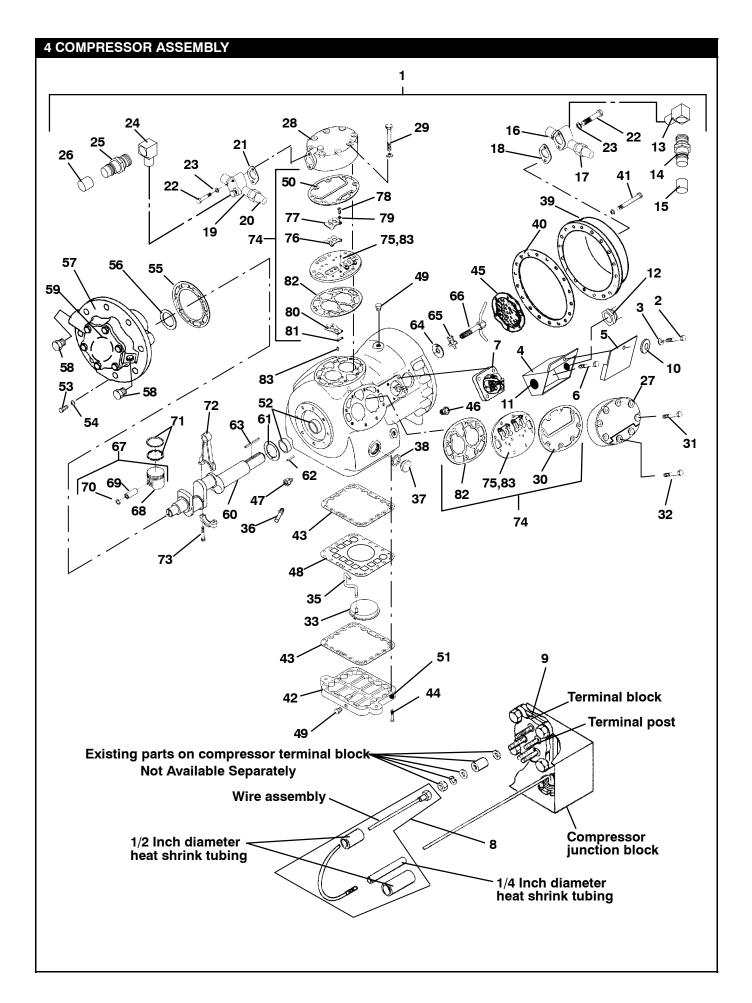

4.1	4.1 OPTION 1R - SERVICE REPLACEMENT COMPRESSOR					
Item						
1	18-00055-20SV	Compressor, 41 CFM, Single Speed , 460 vac/3 ph/60 hz	1			
NS	07-00292-00	SW20 Compressor Oil, Castrol Icematic (Quart)	4			
	NOTE					


Replacement Compressor is sold without terminal box and cover, and without shut-off valves. Customer should retain the original terminal box and valves for use on replacement compressor.

		the original terminal box and valves for use on replacement compressor.	
4.2	TERMINAL MOUNT	ING AND JUNCTION BOX GROUP	
2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg. (cover to box) - SST	2
3	66U1-5321-8	Washer, Flat, #10 (cover to box) - SST	2
4	69NT20-513-1SV	Box, Junction (Located on Front of Compressor) - Includes:	1
4	69NT20-513SV	Box, Junction (Located on Back of 230/460v Compressor) - Includes:	1
5	69NT20-2083	Cover, Junction Box	1
6	AD61JA124	Screw, Pan Head, #10-32 x 3/8 lg. (box to compressor)	4
7	17-40093-06	Terminal, Compressor (5 Terminals)	1
7	17-40093-05	Terminal, Compressor (6 Terminals)	1
8	76-00355-00	Kit, Compressor Terminal Wiring (Single Voltage)	1
NS	76-00384-00	Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage)	1
	17-40075-05	Gasket, Terminal Plate - Fiber	1
9	17-44128-00	Gasket, Terminal Plate - Coated Steel	1
10	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
11	66U1-5562-7	Plug, 1-1/4 Diameter - Plastic	A/R
12	22-02302-03	Connector, 3/4 Conduit	A/R
4.3	SERVICE VALVE G	ROUP	
13	40-00523-00	Elbow, M13 x M13 - Brass	1
14	40-00520-00	Coupling, M13 - Brass - Includes:	1
15	40-00520-02	Cap, Service Port	1
16	14-00206-00	Valve, Suction Shut-Off, 1-1/8 ODS	1
17	17-10812-00	Cap, Seal	1
18	17-10811-05	Gasket, Suction Service Valve	1
19	14-00206-01	Valve, Discharge Shut-Off, 7/8 ODS	1
20	17-10812-00	Cap, Seal	1
21	17-10811-05	Gasket, Discharge Service Valve	1
22	66U1-5361-46	Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST	2
23	17-40013-00	Gasket, Bolt, 5/16	2
24	40-00523-01	Elbow, M15 x M15 - Brass	1
25	40-00520-01	Coupling, M15 - Brass - Includes:	1
26	40-00520-03	Cap, Service Port	1
4.4	COMPRESSOR - N	IOTOR BODY GROUP	
NS	-	Gasket Set (Refer to Section 4.8)	
27	17-21040-00	Head, Cylinder - Side Bank (Shaved Head)	2
28	17-40016-01	Head, Cylinder - Center Bank	1
29	17-40018-05	Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5	8
30	17-44124-00	Gasket, Cylinder Head (Side Bank) - Coated Steel	3
31	17-40034-05	Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5	12
32	17-40037-05	Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5	4
33	17-40020-00	Screen Assembly, Oil Filter	1

4.4 CC	4.4 COMPRESSOR - MOTOR BODY GROUP (Continued)					
Item	Part Number	Description	Qty			
34	17-40007-00	Gasket, Bolt, 1/2	4			
35	17-21062-00	Tube, Oil Suction	1			
36	17-44763-00	Orifice, Oil Relief	1			
37	17-21201-00SV	Sight Glass Package, Oil Level - Includes:	1			
38	17-44021-00	Gasket, Sight Glass - Coated Steel	1			
39	17-20004-00	Cover, Motor End	1			
40	17-40029-05	Gasket, Motor End Cover - Fiber	1			
40	17-44136-00	Gasket, Motor End Cover - Coated Steel	1			
41	PL	Screw, Hex Head, 7/16-14 x 1-1/4 lg SAE Grade 5	18			
42	17-40032-00	Plate, Bottom	1			
43	17-40033-05	Gasket, Bottom Plate - Fiber	2			
43	17-44129-00	Gasket, Bottom Plate - Coated Steel	2			
44	17-40034-05	Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5	22			
45	17-20005-00	Strainer Assembly, Suction	1			
46	PL	Plug, Pipe, Oil Fill, 1/4	1			
47	17-40042-00	Check Valve Assembly, Oil Return	1			
48	17-21063-00	Plate, Screen Hold Down	1			
49	PL	Pipe Plug (High & Low Pressure Connection and Oil Drain), 1/4-18 NPT	3			
50	17-44123-00	Gasket, Cylinder Head (Center Bank)	1			
51	-	Heater, Crankcase - See section 2.28	1			
52	17-40025-00	Bushing, Motor End	2			
4.5	PUMP END GROUP					
53	17-40037-05	Screw, Hex Head, Bearing Head, 3/8-16 x 1.00 lg SAE Grade 5	8			
54	17-40019-00	Gasket, Capscrew, 3/8	8			
55	17-44022-00	Gasket, Cover Plate - Coated Steel	1			
56	17-55009-01	Washer, Thrust	1			
57	17-44137-00	Bearing Head & Low Profile Oil Pump Package - Includes:	1			
58	17-44037-00	Plug, Oil Pump (Includes O-ring)	2			
59	17-44139-00	Seal, O-ring	1			
	<u>, </u>	D AND PISTON GROUP				
60	17-40411-00	Crankshaft	1			
61	17-40050-00	Washer, Thrust	1			
62	17-40048-00	Pin, Spiral, 5/32 Diameter x 5/8 lg.	2			
63	34-01110-00	Key, Rotor Drive	1			
64	17-21075-00	Washer, Rotor	1			
65	17-21076-00	Washer, Star, Rotor, 5/8	1			
66	17-21077-00	Tube Assembly, Equalizer Piston & Pin Pkg (Standard) - Includes:	1			
67	17-44115-01	,	6 A/D			
67 68	17-44115-20 NSS	Piston & Pin Pkg (+0.020) - Includes:	A/R 1			
	17-40052-00	Piston Pin Diston				
69 70	17-40052-00	Pin, Piston Retainer, Piston Pin	2			
71	17-40055-00	Ring, Compression (Standard)	12			
71	17-40055-00	Ring, Compression (standard) Ring, Compression (+0.020)	12			
71	17-40056-02	Connecting Rod and Cap Assembly (Standard) - Includes:	6			
72	17-55023-00	Connecting Rod and Cap Assembly (standard) - includes:				
12	17-00020-00	Connecting flow and Cap Assembly (+0.010) - includes.	6			

T-316PL 66

4.6 CR	I.6 CRANKSHAFT, ROD AND PISTON GROUP - Continued					
Item	Part Number	Description	Qty			
NS	17-40057-00	Pin, Dowel	2			
73	17-55008-00	Capscrew - Special (Epoxy Coated)	2			
4.7	VALVE PLATE GR					
74	17-44109-00	Package, Valve Plate Assembly (All Banks - Canted) - Includes:	3			
NS	NSS	Plate Assembly, Valve - Includes:	1			
75	.	Plate, Valve	1			
76	17-40086-00	Valve, Discharge	2			
77	17-44160-00	Backer, Discharge Valve Stop	2			
78	17-44113-00	Screw, Hex Head, 1/4-28 x 3/8 lg.	4			
79	17-10715-00	Washer, Lock, 1/4	4			
80	17-40082-00	Valve, Suction	2			
81	17-40083-00	Spring, Suction Valve Positioning	2			
	17-44124-00	Gasket, Cylinder Head (Side Bank) - Coated Steel	1			
50	17-44123-00	Gasket, Cylinder Head (Center Bank) - Coated Steel	1 1			
82	17-55002-00	Gasket, Valve Plate	1			
		Pin, Dowel (Valve Plate)	12			
4.8	GASKET SET					
Item	Part Number	Description	Qty			
-	17-55020-21	Gasket Set - Includes:	1			
1	17-40005-05	Gasket, Suction Service Valve (4 Bolt)	1			
2	17-44124-00	Gasket, Cylinder Head - Side Bank (Standard)	2			
3	17-55002-00	Gasket, Valve Plate	3			
4	17-44123-00	Gasket, Cylinder Head - Center Bank	1			
5	17-44021-00	Gasket, Sight Glass	2			
6	17-40075-05	Gasket, Oil Pump Cover	2			
7	17-10811-05	Gasket, Service Valve (2 Bolt)	2			
8	17-40033-05	Gasket, Bottom Plate	2			
9	17-44022-00	Gasket, Pump End Bearing Head				
10	17-44022-00	Gasket, Motor End Cover	1 1			

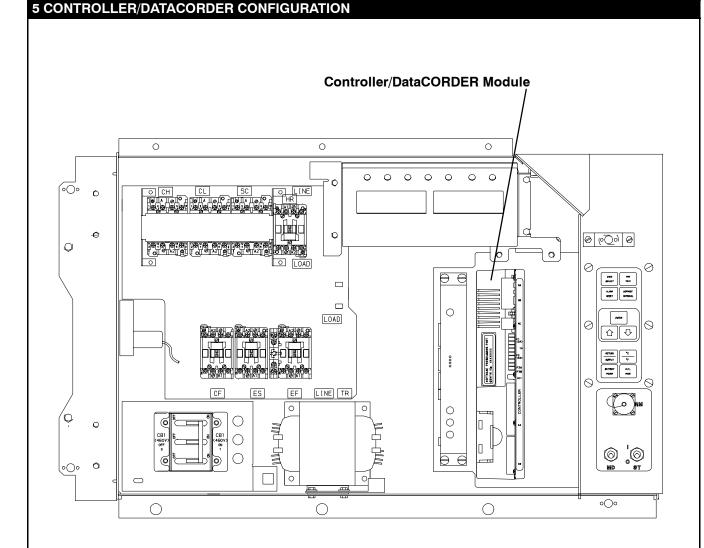

Part Number	Description	Qty
12-55006/5127	Controller - Un-Configured (See Note 1)	1
See Note 2	Controller - Configured (Container Unit Matrix)	1

NOTES

- The last four digits of the Part Number is the operation software revision.
 The Controller/DataCORDER module is shipped with the operational software already loaded, however, when ordering this part number the end user must load the configuration software at the time of installation.

T-316PL 68

6 TOOLS	
PART NO.	DESCRIPTION
07-00013-00	Temperature Tester (Simpson Meter)
07-00013-01	Temperature Test Lead (15 Foot)
07-00013-02	Temperature Test Lead (50 Foot)
07-00013-03	Adapter, Male (Both Ends) (Use with Temperature Tester)
07-00015-00	Case, Carrying (Used with 07-00013-00)
07-00450-00	Wrench, Compressor Sight Glass
07-00437-00	Inspection Light with Mirror
07-00228-00	Volt-Ohmmeter, Digital
07-00229-00	Amprobe Clamp (Used with 07-00228-00)
07-00238-00	Wrench, Service Valve
07-00243-10	Multimeter, Digital (Fluke)
07-00263-00	Pliers, Crimping (Used for compressor terminal block replacement)
07-00264-00	Grip, Wire Vise (Used for compressor terminal block replacement)
07-00277-00	Kit, Static Dissipative (Used for working on electronic components)
07-00304-00	Ground Strap, Wrist (Used for working on electronic components)
07-00294-00	Gauge Set, Manifold - Fahrenheit/PSI
07-00294-05	Gauge Set, Manifold - Centigrade/KPa
07-00295-00	Detector, Leak
07-00397-03	Extractor, Pin (Used on Fan Motor Plugs and Interrogator Plugs)
07-00397-02	Crimper, Pin (Used on Fan Motor Plugs and Interrogator Plugs)
07-00329-00	Extractor, Pin (Used on Controller module connectors)
07-00330-00	Crimper, Pin (Used on Controller module connectors)
07-00370-00	Crimper, Pin (Used on Stepper Valve, HPS)
07-00387-00	Extractor, Pin (Used on Stepper Valve, HPS)
07-00375-00	Tester, Portable, Stepper Motor Drive
07-00391-00	Application Gun (Used with 07-00390-00)
07-00398-00	Software Card Programmer
07-00408-00	Stepper Jumper Assembly
07-00418-00	Torx Driver Bit
	Refer to Manual 62-03213

69 T-316PL

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
02-00082-00	9	09-00128-01	47	14-00204-02	21
02-00086-00	49	09-00369-00SV	15	14-00206-00	65
04-50027-00	18, 33	10-00083-05	57	14-00206-01	65
06DA403-844	25, 51	10-00318-00	35	14-00212-03SV	23, 25
07-00013-00	69	10-00332-21SV	11	14-00212-000	23, 25
07-00013-01	69	10-00333-00	13	14-00215-03	24
07-00018-01	69	10-00431-02	11	14-00215-06	23
07-00018-02	69	10-00431-06	10	14-00210-00	24
07-00015-00	69	10-00431-07	10	14-00220-01	23
07-00228-00	69	10-00439-00	11	14-00221-01	23
07-00229-00	69	10-00455-00	31	14-00227-01	23
07-00238-00	69	10-01129-07	13	14-00263-00	21
07-00243-10	69	10-01129-07SV	11	14-00263-20	21
07-00248-10	69	10-01129-10	11	14-00263-22	21
07-00264-00	69	10-01129-20	13	14-00263-23	21
07-00204-00	69	10-01139-04	57	14-00273-03	27
07-00292-00	65	10-0298-01	11	14-00311-02SV	1
07-00294-00	69	12-00275-19SV	17	14-00341-02SV	23, 25
07-00294-05	69	12-00309-06	51	14-01032-14	23
07-00295-00	69	12-00342-02	37	14-01092-03	25
07-00304-00	69	12-00342-03	37	17-10715-00	67
07-00313-00	1	12-00342-04	37	17-10811-05	65, 67
07-00321-07/2.5	61	12-00352-00	23, 25, 51	17-10812-00	65
07-00329-00	69	12-00377-01	61	17-20004-00	66
07-00330-00	69	12-00395-01SV	26	17-20005-00	66
07-00345-00	1	12-00433-00RP	17	17-21002-01	25
07-00370-00	69	12-00433-02RP	17	17-21040-00	65
07-00375-00	69	12-00464-05	47	17-21062-00	66
07-00387-00	69	12-00464-08	47	17-21063-00	66
07-00390-00	9	12-00474-00	57	17-21075-00	66
07-00391-00	9, 69	12-00495-02SV	23, 25, 34	17-21076-00	66
07-00397-02	69	12-00500-01SV	34	17-21077-00	66
07-00397-03	69	12-00573-00SV	17	17-21201-00SV	66
07-00397-12	37	12-00594-xx/5315	15	17-40005-05	67
07-00398-00	69	12-01071-01SV	24	17-40007-00	66
07-00408-00	69	12-01104-05	21	17-40013-00	65
07-00418-00	69	12-01105-02	21	17-40016-01	65
07-00421-00	61	12-01124-01	51	17-40018-05	65
07-00437-00	69	12-01124-02	51	17-40019-00	66
07-00450-00	69	12-01125-02	51	17-40020-00	65
09-00128-00	47	12-55458-00/5121	68	17-40029-05	66, 67

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
17-40032-00	66	18-00055-20SV	65	22-01660-04	37
17-40033-05	66, 67	22-00041-00	1	22-01660-08	37
17-40034-05	65, 66	22-00041-02	1	22-01679-00	57
17-40037-05	65, 66	22-00066-01	1	22-01679-01	57
17-40042-00	66	22-00066-02	1	22-01713-02	17
17-40048-00	66	22-00066-03	1	22-01713-06	15
17-40050-00	66	22-00119-04	1	22-01731-00	54
17-40052-00	66	22-00120-04	1	22-01731-01	54
17-40053-00	66	22-00120-07	1	22-01734-01	57
17-40055-00	66	22-00121-07	1	22-01737-00	61
17-40056-02	66	22-00518-01	13	22-01737-01	61
17-40057-00	67	22-00595-01	1	22-01737-02	61
17-40075-05	65, 67	22-01106-00	1	22-01743-00	61
17-40082-00	67	22-01107-00	1	22-01744-00	55
17-40083-00	67	22-01139-04	1	22-01777-00SV	15
17-40086-00	67	22-01140-01	1	22-01777-01SV	15
17-40093-05	65	22-01140-02	1	22-01777-03	15
17-40093-06	65	22-01140-04	1	22-01777-04	15
17-40411-00	66	22-01141-01	1	22-01778-00	57
17-44021-00	66, 67	22-01292-00	49	22-01835-00	21
17-44022-00	66, 67	22-01455-02	13	22-01883-00	55
17-44037-00	66	22-01551-00	54, 55	22-01884-00	55
17-44109-00	67	22-01556-00	17	22-01889-00	11, 13
17-44113-00	67	22-01556-01	15	22-01891-00	55
17-44115-01	66	22-01556-02	15	22-01892-00	33
17-44115-20	66	22-01566-00	21	22-01892-01	33
17-44123-00	66, 67	22-01566-01	21	22-01906-00	55
17-44124-00	65, 67	22-01613-14	33, 37, 63	22-01931-00	55
17-44128-00	65	22-01613-15	33, 37	22-01932-00	55
17-44129-00	66	22-01613-34	33	22-02188-00	55
17-44136-00	66	22-01614-02	33	22-02232-00	55
17-44137-00	66	22-01614-03	33	22-02302-03	65
17-44139-00	66	22-01614-05	33	22-02322-00	55
17-44160-00	67	22-01621-02	17	22-02324-01	54, 57
17-44763-00	66	22-01621-03	17	22-02324-02	55
17-55002-00	67	22-01621-23	15	22-02324-05	54
17-55008-00	67	22-01622-00	15	22-02336-02	1, 13, 15
17-55009-01	66	22-01622-01	15	22-02336-22	1, 15
17-55020-21	67	22-01622-02	15	22-02341-00	11
17-55023-00	66	22-01660-00	37	22-02341-01	11
17-55025-00	66	22-01660-03	37, 63	22-02368-00	11

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
22-02375-00	55	34-00373-69	1	34-06053-00	7, 18, 21,
22-02378-00	54	34-00373-71	1		23, 25, 29, 30, 47, 49,
22-02392-00SV	51	34-00373-88	1		56, 47, 49, 56
22-02392-03	21	34-00616-06	33	34-06053-01	49
22-02393-00	21	34-006212-12	28	34-06053-02	18,23,25, 49
22-02393-01	21	34-00655-08	10, 49	34-06053-03	18, 19, 23,
22-02394-02	21	34-00655-28	33		25, 47, 53, 54, 56
22-02394-03	21	34-00662-05	53	34-06053-04	31
22-02396-02	17	34-00662-11	49	34-06053-05	7, 11, 21,
22-02396-03	17	34-00663-07	11	0. 00000 00	23, 25, 47,
22-02398-02	37	34-00663-09	7		51,53,56, 65
22-02398-03	37	34-00663-11	19, 33	34-06053-07	49
22-02401-00	61	34-00665-09	7	34-06053-08	53
22-02412-00	37, 63	34-00666-09	31	34-06053-13	28, 29, 47
22-02412-02	63	34-00667-05	11, 53	34-06053-18	30
22-02413-00	37, 63	34-00667-09	53, 57	34-06053-19	29
22-02418-02	61	34-00667-11	49, 54, 56	34-06092-00	30, 31
22-02420-00	61	34-00667-12	18	34-06107-00	7
22-02448-00SV	23	34-00667-14	49	34-06126-08	53
22-4031-00	15	34-00795-09	7, 47	34-06139-03	9
22-4031-01	15	34-00795-17	33	34-06154-00	28, 29
22-4031-02	15	34-00848-10	11	34-06165-09	33
22-50007 Series	1	34-00849-22	49	34-06169-00	7, 19, 47
22-50088-00	33	34-00928-01	9, 11	34-06179-00	19, 47
22-50088-02	18	34-00928-02	9, 34, 35	34-06179-04	47
22-50100-00	15		39,41,43, 45	34-06183-00	30, 31
22-50127-00	37	34-00928-03	39,41,43, 45	34-06185-01	29
22-50157-00	15	34-00928-04	41	34-06212-12	29
24-00003-00	35	34-00928-09	23, 25, 31, 39, 41, 43,	34-06221-00	57
24-00006-02	35		45	34-06223-00	13, 17
24-02019-00	49	34-01110-00	66	34-06227-00	11
30-00407-02SV	15	34-01142-01	9, 11	34-06231-01	9
34-00373-05	1, 23	34-01150-03	43, 45	34-06231-03	9
34-00373-07	1, 23, 25	34-01150-04	41	34-06231-04	9
34-00373-11	1, 21	34-01150-06	43, 45	34-06231-05	9
34-00373-51	1	34-01150-30	41, 43, 45	34-06231-06	9
34-00373-53	1	34-01150-31	41, 43, 45	34-06231-07	9
34-00373-54	23, 25	34-01167-01	7, 53	34-06243-00	10
34-00373-56	54	34-01178-22	34	34-06262-00	31
34-00373-59	1, 54	34-01181-01	18	34-06286-00	31
34-00373-65	1				

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
34-06287-00	31	44-01043-05	1	58-04481-00	19
34-50015-00	9	44-01043-07	1	58-04668-00	9
38-00503-00	18	48-00262-00	33	58-50014-00	25
38-00557-00	33	48-00377-00	31	62-02444-01	58
40-00060-02	51	54-00585-20	33	62-02458-00	58
40-00086-04	25	54-00586-20	18	62-02530-01	58
40-00123-02	51	56-07323-00	34	62-02719-00	15
40-00501-50	23	56-07905-00	34	62-02720-00	59
40-00520-00	65	58-00065-67	47	62-02721-00	58
40-00520-01	23, 25, 65	58-00065-70	47	62-02721-03	58
40-00520-02	21, 65	58-00616-00	34	62-02723-00	59
40-00520-03	23, 25	58-00956-00	24	62-02723-01	59
40-00523-00	65	58-00957-00	24	62-02723-02	59
40-00523-01	65	58-00967-00	10	62-02723-03	59
40-00542-00	21	58-01184-00	15, 17	62-02723-04	59
40-00555-06	25	58-04001-01	53	62-02723-05	59
40-01129-00	24	58-04001-02	53	62-02723-06	59
42-00174-38	63	58-04026-07	54, 56	62-02723-09	59
42-00233-01	30	58-04026-17	56	62-02723-10	59
42-00270-02	7	58-04026-22	53, 57	62-02723-11	59
42-00295-00	31	58-04026-23	23	62-02735-00	15
42-00295-01	31	58-04026-41	19	62-02738-04	15
42-00296-01	28, 29	58-04066-00	33	62-02738-08	15
42-00327-00	28, 29	58-04101-00	7	62-02743-00	59
42-00334-00	39,41,43, 45	58-04101-01	7	62-02743-01	59
42-00407-00	29	58-04101-07	19, 47	62-02743-02	59
42-00465-00	30	58-04145-00	11	62-02743-04	59
42-00470-00	57	58-04145-01	11	62-02743-07	59
42-00611-00	7	58-04145-06	11	62-02743-08	59
42-01052-02	29	58-04246-00	47	62-02743-09	59
42-01098-01	47	58-04251-00	29	62-02743-10	59
42-50000-00	24	58-04263-01	31	62-02743-12	59
44-00300-01	7	58-04276-00	26	62-02743-13	59
44-00300-02	7	58-04277-00SV	26	62-02743-14	59
44-00300-03	7	58-04278-00	26	62-02743-15	59
44-00340-03	53	58-04279-00	26	62-02743-16	59
44-00340-05	53	58-04290-00	33	62-02743-17	59
44-00343-00	9	58-04346-00	7	62-02743-18	59
44-00361-00	35	58-04366-00SV	7	62-02743-19	59
44-00370-03	49	58-04389-00	7	62-02783-00	29
44-00374-00	19, 47	58-04480-00	19	62-02785-00	58

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
62-02822-01	39	66U1-5321-5	23, 25, 49	66U1-8912	19
62-02874-01	13	66U1-5321-6	11	66U1-9212-1	17
62-03957-02	9	66U1-5321-7	18, 23, 25,	66U1-9752	11,13
62-10259-00	58		26, 31, 47,	66U1-9782	54, 55
62-10381-00	31		49, 53, 54, 56	66U1-9782-1	55
62-10532-00	59	66U1-5321-8	7, 11, 21,	66U2-1132-1	23
62-10532-01	59		31, 35, 49,	66U2-1142	24
62-10532-02	59		51, 53, 56, 57, 65	66U2-1152	24
62-10532-03	59	66U1-5331-3	7, 53	66U2-1531	57
62-10532-04	59	66U1-5361	18	68-12368-00	25
62-10532-06	59	66U1-5361-11	49, 54, 56	68-12417-00	4
62-10537-00	31	66U1-5361-25	18, 19, 23,	68-12432-00	49
62-10540-00	31		25, 30, 34, 47, 49, 53,	68-12432-01	49
62-10540-04	31		56	68-12432-02	49
62-10557-00	5	66U1-5361-46	65	68-12432-03	49
62-10769-00	58	66U1-5361-7	23, 25, 49	68-12434-02	63
62-10902-02	58	66U1-5362-2	29	68-12496-00	10
62-10902-03	58	66U1-5371-10	11, 35	68-12523-00	49
62-10902-04	58	66U1-5371-13	34, 35	68-12544-01	13
62-10984-00	31	66U1-5371-6	23,25,49, 51	68-12553-00	63
66CH1-1002-33	31	66U1-5371-7	7, 11, 15,17	68-12658-01	47
66CH1-1172-16	19		26,31,56,65	68-12993-00	49
66CH1-1172-46	11	66U1-5381	10	68-13181-00	35
66U1-2403	9, 11, 39,	66U1-5381-1	21, 54	68-13310-00	53
00114 0400 4	41, 53	66U1-5391-3	13	68-13310-01	53
66U1-2403-1	7	66U1-5562-7	65	68-13427-00SV	10
66U1-2552-185	28, 29	66U1-6651-15	10	68-13454-02SV	19
66U1-2583	54 55	66U1-6651-19	51	68-13454-03SV	19
66U1-2583-1	55 53, 56	66U1-6651-4	11	68-13472-01	51
66U1-2603 66U1-2763-5	•	66U1-6782	55	68-13472-03SV	51
66U1-2763-6	24	66U1-6782-3	55 10	68-13475-00	39, 43
66U1-2803-10	24 41	66U1-6811-12 66U1-6811-15	19 7	68-13475-01	39, 41, 43
66U1-3442-2	17	66U1-6811-8	7 10 47	68-13475-04	41
66U1-3632-24	21	66U1-6835	7, 19, 47 11	68-13475-08	39, 43
66U1-3803	1, 23, 49	66U1-6912-16	34	68-13475-09	39, 43
66U1-3803-1	1, 23, 49		11	68-13577-00	7
66U1-3823	1, 34	66U1-7842-13 66U1-7982-2	39	68-13600-00	35
66U1-3882	47, 49	66U1-8075	39,41,43,45	68-14329-00	34, 35
66U1-5321-13	29	66U1-8552-2	25	68-14796-00	11
66U1-5321-13	30, 33			68-14796-02	11
0001-0021-0	JU, JJ	66U1-8662	5		

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
68-14796-03	11	69NT35-6412-1	54, 56	69NT41-942-4	43
68-14796-05	11, 13	69NT35-6412-2	54, 56	69NT41-942-5	45
68-14796-06	11	69NT35-6522	34	69NT41-982-3	11
68-14955-00	31	69NT35-6532	34	69NT41-992	37
69NP20-1031	25	69NT35-6598	45	69NT42-688-7	7
69NT-35-6532	35	69NT35-6598-1	45	69NT42-914	24
69NT-35-8284	49	69NT35-7012	31	69NT42-914-1	24
69NT-43-468	1	69NT35-7662-3	41	69NT43-124-4SV	9
69NT-46-468-1	1	69NT35-8032	53	69NT43-125-1	9
69NT20-2083	65	69NT35-8113	4	69NT43-175	37
69NT20-513-1SV	65	69NT35-8218	58	69NT43-176	37, 63
69NT20-513SV	65	69NT35-8348	31	69NT43-277	23
69NT35-1287-1	31	69NT35-8382	53, 57	69NT43-283	33
69NT35-1417	31	69NT35-8548	4	69NT43-284	33
69NT35-2257	39	69NT35-8693-10	19	69NT43-285	33
69NT35-2287	9	69NT35-8693-7	19	69NT43-295	33
69NT35-2692	15, 39, 41	69NT35-8734-12	33	69NT43-307	30
69NT35-2692-1	19, 30, 33,	69NT35-8734-14	33	69NT43-374	56
	34, 47	69NT35-8734-16	33	69NT43-403-2	23
69NT35-2692-4	17	69NT35-8734-4	33	69NT43-420	23, 25
69NT35-3282	43,45	69NT35-8734-5	33	69NT43-464	39,41,43, 45
69NT35-3286	41	69NT35-8734-6	33	69NT43-469	49
69NT35-3296	41	69NT35-9228	31	69NT43-470	57
69NT35-3547	18	69NT35-9238	31	69NT43-470-1	57
69NT35-3867	58	69NT35-9674-1	34	69NT43-470-2	57
69NT35-3907	58	69NT40-222	11, 13, 63	69NT43-471	41
69NT35-3987	4	69NT40-507-1	37	74-00201-01	29
69NT35-3997-1	4	69NT40-657-2	4	74-00201-02	29
69NT35-4027-1	34	69NT40-976-3	30	76-00355-00	65
69NT35-4047	30	69NT41-106-2	51	76-00384-00	65
69NT35-5022-5	47	69NT41-192	63	76-00397-00	1
69NT35-5022-6	7	69NT41-477	25	76-00667-05	57
69NT35-5352-1	47	69NT41-487	25	76-00670-01	57
69NT35-5992	53, 56	69NT41-497	25	76-00670-02	57
69NT35-6112	18	69NT41-543	51	76-00670-03	57
69NT35-6118	58	69NT41-553	51	76-00670-04	57
69NT35-6132	48	69NT41-702	21	76-00675-01	35
69NT35-6272	9	69NT41-724-4	53	76-00677-00	25
69NT35-6278	11	69NT41-782	31	76-00681-01	33
69NT35-6348	33	69NT41-852-1	30		
69NT35-6412	54, 56	69NT41-942-3	39, 41		

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
76-00684-00	37	76-50116-03	31	Α	
76-00701-05	47	76-50116-04	31		
76-00701-06SV	47	76-50136-00	31	AA06JA166	34
76-00701-10	47	77-01018-05	49	AA06JA170	56
76-00701-11	47	79-01694-00	29	AD61JA124	65
76-00704-01	19	79-01697-06SV	28	AU11JR171	34, 56
76-00724-00SV	9	79-01697-14	29	AU11JR241	23, 25, 49
76-00748-00	35	79-01706-05SV	11	_	
76-00748-02	35	79-01757-00	24	С	
76-00760-00	37	79-01902-00	29	CA21JA051	51
76-50058-00	61	79-01902-01	29		
76-50059-00	61	79-01925-00	31	D	
76-50075-00	19	81-01482-00	21	U	
76-50084-00SV	9	81-01575-00SV	19	DE40BA203	23, 25
76-50116-00	31	81-01635-20	35		
76-50116-01	31	81-01635-22	35	E	
76-50116-02	31			EC39DM062	23



Carrier Transicold Division, Carrier Corporation Container Products Group P.O. Box 4805 Syracuse, N.Y. 13221 U.S A

www.carrier.transicold.com

