
# CRR 40-119, 800, 800A/B/C/D/E Maersk SeaLand

TK 50680-6.16

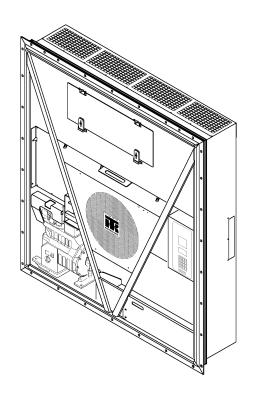

Printed (February 14, 2006)

Copyright @ 2001 - Thermo King Corp. - Minneapolis, MN U.S.A. Electronically printed in U.S.A.

#### **General Information**

#### **Tables of Contents**

This Parts Manual contains a numerical table of contents listing each assembly name, its associated Grid number and page number. The numerical table of contents is arranged numerically by Grid number. There are references in a parts list referring to other Grid numbers, the numerical table of contents is arranged to facilitate finding the referenced illustrations. At the rear of this parts manual are two indexes, a numerical and alphabetical. The indexes contain all of the part numbers and descriptions which appear in this manual.

#### **Assemblies and Subassemblies**

When parts are indented in the description list, they are preceded with a bullet ( • ). This indicates that the part(s) is available separately or included in an assembly.

#### GRID NO. 67D6 SWITCH PANEL ASSEMBLY

REF	PART#	RT# DESCRIPTION	
	45-1239	PANEL - assy, switch	1
1	99-1960	• PANEL	1
	99-6280	• • NAMEPLATE - panel	1
2	33-743	• GASKET	1


For example: the switch panel nameplate (99-6280) is available separately, available as part of the switch panel (99-1960) and with the panel assembly (45-1239).

#### **ABBREVIATIONS** The following abbreviations appear in parts manuals

В	AC	current as required accumulator adjusting aluminum alternator ampere assembly board bearing breaker	F	(continued)   evap. evaporator   exch exchanger   exp expansion   ext external   F. Farenheit   fill fillister   fi fuel injection   fl flare   fpt female pipe   thread tt   ft feet   ftg fitting	O P	os oversized od outside diameter  pcb printed circuit
D	C	clockwise counter- clockwise camshaft compressor condenser connecting, connector cylinder defrost degree dehydrator	H I	hex	S	req required rpm revolutions per minute  sec second sld solder soc hd solder solder soc hd solenoid spl special sq square ss stainless steel std standard stl steel suct suction sw switch
E	DC	direct current discharge differential  Extended Maintenance Interval European Economic Community	N	lg long mm milimeter mpt male pipe thread mod modulating neg negative No number NS not supplied NSS not sold separately	U V	term terminal temp temperature thk thick us undersize vib vibrasorber W watt w/ with w/o without

# CRR 40-119, 800, 800A/B/C/D/E Maersk SeaLand Contents

Name	Grid	Page
CRR 40-119, 800, 800A/B/C/D/E Maersk SeaLand REFERENCE		
SHEET	5U4	3
EVAPORATOR FAN GROUP (3 FANS)	140D3	7
GAUGE PANEL GROUP	140D6	33
AIR VENT (40 FT CONTAINERS)	143D7	59
CONDENSER COMPONENTS (2 EVAPORATOR FANS w/		
HEATER DOOR)	145D8	65
HIGH VOLTAGE TRAY	146D7	53
SOLENOID VALVE	146E5	27
SENSOR RETAINERS	_	_
HUMIDITY CONTROL (OPTION 098033)		
REFRIGERATION COMPONENTS (DANFASS VALVES)		
ELECTRICAL COMPONENTS		
NAMEPLATES		_
KVQ VALVE		-
EVAPORATOR GROUP (TWO FANS)		
WATER COOLED CONDENSER	154E13	23
CONDENSER COMPONENTS (UNITS w/3 FANS & HEATER		
DOOR)		
CONTROL BOX DOOR (mPC 3000 w/RMM)		
ELECTRICAL COMPONENTS		
CONTROL BOX (HEATER WIRING INSIDE BOX)		
CONDENSER COMPONENTS (3 FANS)		
REFRIGERATION COMPONENTS (MAERSK)		
COMPRESSOR GROUP (MAERSK)		
CONDENSER FAN GROUP		
USDA DOWNLOAD PANEL		
EVAPORATOR PANELS (2 FAN UNITS)		
DEFROST DRAIN		
CONTROL BOX.		
CONTROL BOX DOOR (MP3000-A w/ RMM)		
USDA RECEPTACLES		
REFRIGERATION COMPONENTS (CRR-40 800E)	185D7	19

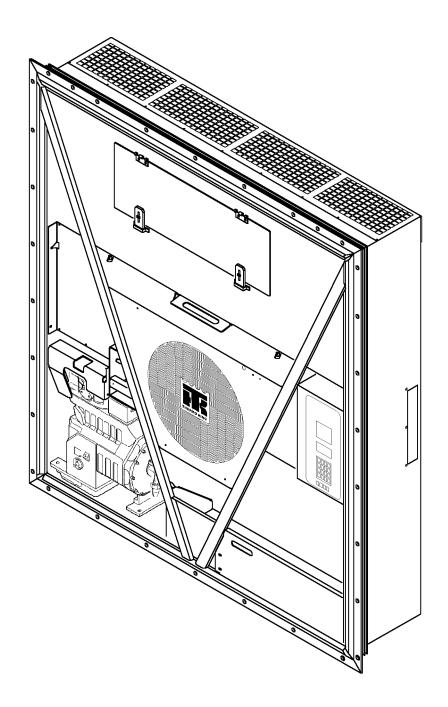


Revised 3/28/03

# CRR 40-119, 800, 800A/B/C/D/E Maersk SeaLand REFERENCE SHEET




B/M	DESCRIPTION	Date
916119	CRR40-119	10/01
916135	CRR40-119A	10/01
916800	CRR40-800	10/01
098018	CRR40-119	10/01
098800	CRR40-800	10/01
098808	CRR40-800A	10/01
098810	CRR40-800B	10/01
098820	CRR40-800C	10/01
098830	CRR40-800D	10/01
098983	CRR40-800E	3/03
098108	Water Cooled Condenser	10/01

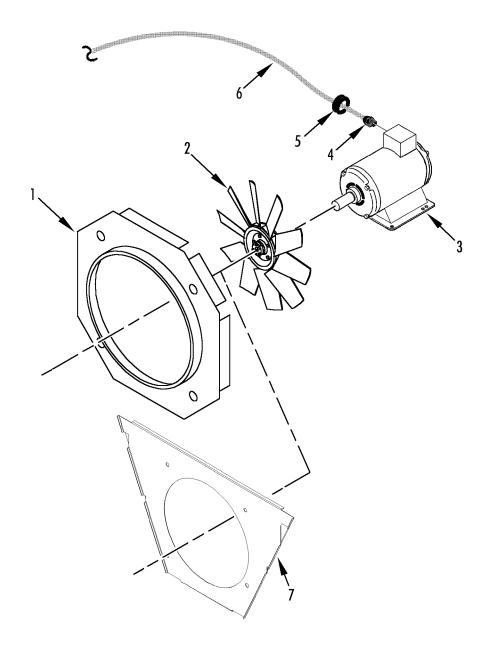

# CONDENSER FAN GROUP




REF	PART#	DESCRIPTION	QTY
1	98-5925	ORIFICE - condenser fan (119) (360-55026-02)	1
	503-120	GASKET - orifice (060-55656-07)	1
	55-8891	SCREW - orifice (K21-50224-25)	4
	55-8893	WASHER (K21-50411-06)	8
	55-9054	WASHER (nylon) (K21-50491-06)	8
	55-7042	NUT (K21-50100-06)	4
2	78-1079	FAN - condenser (w/ set screws, ccw rotation)	1
2	78-1197	FAN - condenser (w/ set screws, cw rotation)	1
3	104-689	MOTOR - condenser fan (K24-22021-00)	1
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
	55-8559	SCREW - motor (K21-50225-25)	4
	55-6988	FLATWASHER	8
	55-7342	LOCKWASHER	4
	55-7339	NUT	4
4	55-5900	CONNECTOR - liquid tite	1
	55-8908	NUT - fitting (K25-58202-16)	1
5	33-367	GROMMET - harness	1
6	41-2953	HARNESS - condenser fan	1
7	91-9912	ORIFICE - condenser fan	1
	55-7035	SCREW - orifice	4
	55-3045	WASHER - dome	4
	55-6997	NUT - captive	4

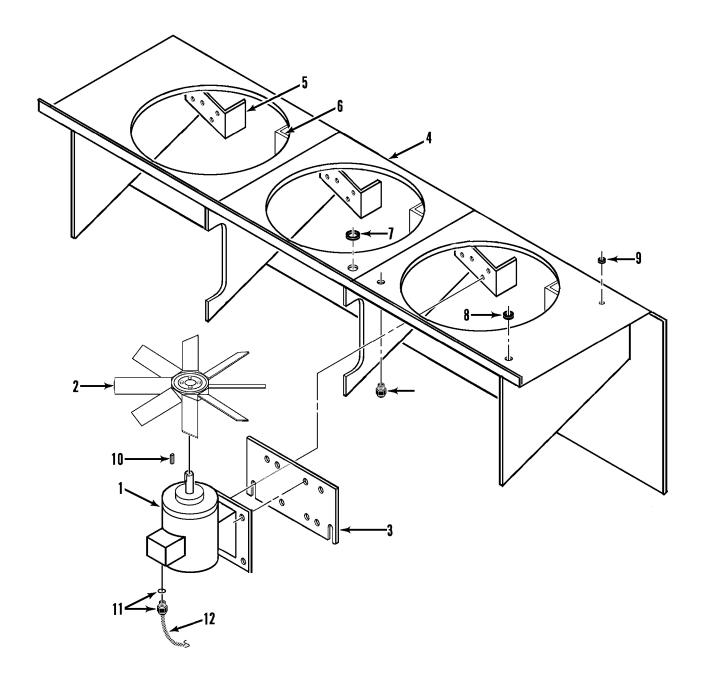

# **EVAPORATOR FAN GROUP (3 FANS)**




REF	PART#	DESCRIPTION	QTY
1	104-691	MOTOR - 2-speed (K24-21354-00)	3
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
	55-6993	SCREW - motor (K21-50225-25)	12
	55-6988	FLATWASHER (K21-50401-08)	9
	55-7085	LOCKWASHER (K21-50411-08)	3
	55-9380	NUT (K21-50100-08)	12
2	78-1268	FAN - evaporator (22 deg pitch)	3
3	91-8466	BRACKET - evaporator motor (060-55010-00)	3
	55-8903	SCREW - bracket (K21-50225-22)	12
	55-7066	LOCKWASHER (K21-50431-08)	6
	55-7085	FLATWASHER (K21-50411-08)	6
	55-7341	INSERT - threaded (K21-52141-02)	12
4	509-1655	SHROUD - evaporator (360-56511-02)	1
	55-8891	SCREW - section (K21-50087-00)	17
5	92-2209	BRACKET - motor	3
6	92-2208	BRACKET - motor	3
7	33-3215	GROMMET (47 mm) (K28-58207-07)	1
8	33-2946	GROMMET (37 mm) (K28-58207-06)	5
9	33-3838	GROMMET (22 mm) (K28-58207-04)	1
10	55-2324	KEY - fan	3
11	55-8907	GRIP - harness (K25-51784-19)	4
	55-8908	NUT - grip (K25-58202-16)	4
12	41-2954	HARNESS - evaporator fan	1

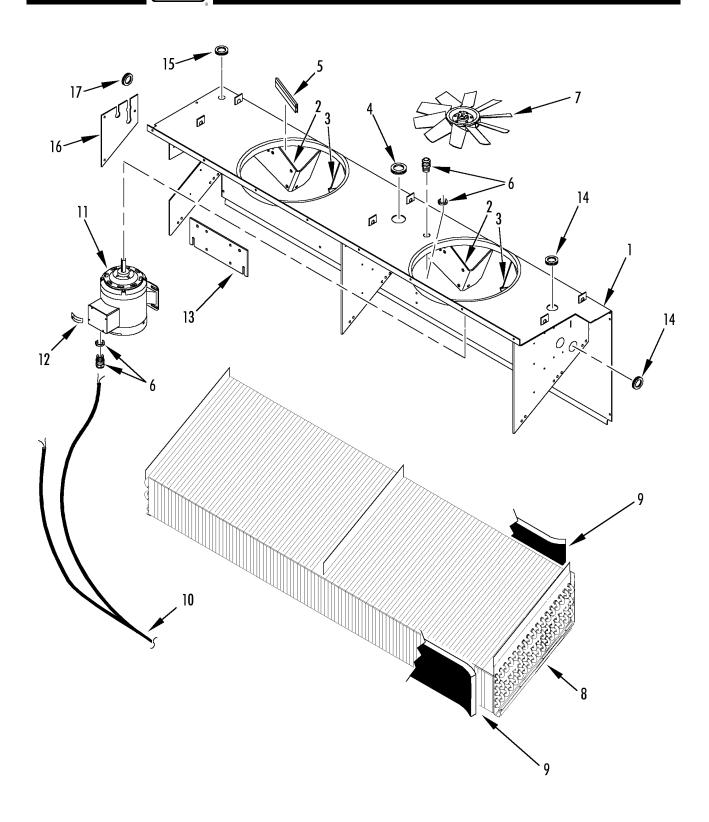

# **EVAPORATOR GROUP (TWO FANS)**




REF	PART#	DESCRIPTION	QTY
1	98-5475	HOUSING - evaporator (CRR 119)	1
	98-5918	HOUSING - evaporator (800 & 800A)	1
	98-5919	HOUSING - evaporator (800B)	1
	98-5768	HOUSING - evaporator (CRR 40-300)	1
	98-6213	HOUSING - evaporator (CRR 40-303 & 800D)	1
	98-6657	HOUSING - evaporator (800E & CRR40)	1
2	92-2331	BRACKET - left	2
	92-2779	• BRACKET - left (800E & CRR40)	2
3	92-2332	BRACKET - right	2
	55-9162	RIVET - shroud	10
4	33-3215	GROMMET (47 mm)	1
5	33-3044	TRIM - edge guard	A/R
6	55-5900	CONNECTOR - harness & sensor	3
7	78-1117	FAN - evaporator (14 in, 355 mm dia)	2
8	67-1558	COIL - evaporator	1
	67-1923	COIL - evaporator (800E & CRR40)	1
	55-8891	SCREW - coil	9
	55-9217	CAP - tube	3
9	91-9328	BLOCK - coil	2
10	41-3277	HARNESS - fan & heater (800 & 800A)	1
	41-3685	HARNESS - fan (CRR 40-300, units w/o heater door)	1
	41-4018	HARNESS - evap fan (800B & CRR40)	1
11	104-691	MOTOR - fan	2
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
	55-6993	SCREW - motor	8
	55-7066	LOCKWASHER (external tooth)	2
	55-7342	LOCKWASHER	6
	55-7085	FLATWASHER	8
12	99-4931	NAMEPLATE - arrow	1
13	91-8466	BRACKET - motor	2
	55-8903	SCREW - bracket	8
	55-8904	FLATWASHER	16
	55-7342	LOCKWASHER	8
	55-7339	NUT	8
14	33-2946	GROMMET (37 mm)	5
15	33-3838	GROMMET (22 mm)	2
16	92-2775	COVER - tube	1
	55-7172	SCREW - cover	3
	55-7075	FLATWASHER	3
17	33-367	GROMMET (0.625 id)	3

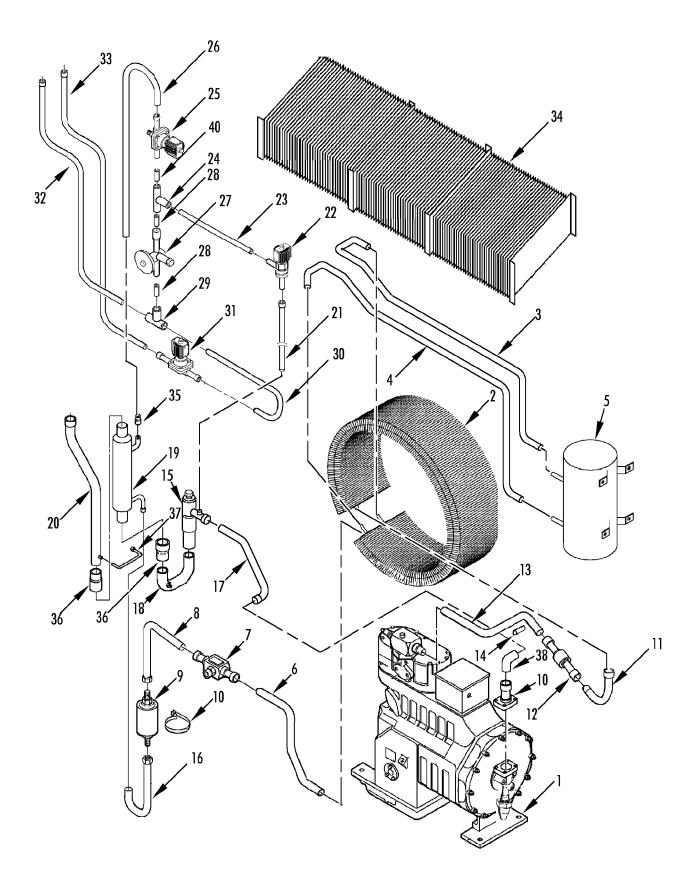

# $^{\mbox{\scriptsize Revised}}_{8/28/02}$ REFRIGERATION COMPONENTS (DANFASS VALVES)




REF	PART#	DESCRIPTION	QTY
1	8102-743	COMPRESSOR (see 146F2)	1
2	60-285	COIL - condenser (CRR 40-119)	1
	67-1632	COIL - condenser (800, 800A/B/C)	1
	99-5966	STRIP - gasket (15 x 15 mm)	A/R
	33-2950	GASKET (10 x 15 mm)	A/R
	55-8910	SCREW - coil	7
	55-6995	FLATWASHER	7
	55-9054	WASHER (nylon)	7
3	66-9412	TUBE - top (CRR 40-119)	1
	66-9875	TUBE - top (800, 800A/B/C)	1
4	66-9413	TUBE - bottom (CRR 40-119)	1
	66-9874	TUBE - bottom (800, 800A/B/C/D)	1
5	67-1533	TANK - condenser (CRR 40-119, see 152A2)	1
	67-1575	TANK - condenser (800A/B/C/D, see 154E13)	1
6	506-375	TUBE - condenser to indicator (119)	1
7	66-9125	VALVE - shutoff	1
8	506-374	TUBE - indicator to dehydrator (before 1/00)	1
	61-698	TUBE - indicator to dehydrator (1/00 & after, 119, 800, 800A)	1
9	61-786	DEHYDRATOR (w/ o-rings)	1
	61-156	DEHYDRATOR	1
10	55-4390	HANGER - dehydrator	2
	55-8891	SCREW - bracket	2
11	506-369	TUBE - discharge	1
12	66-8467	VALVE - check	1
13	506-370	TUBE - discharge	1
14	504-1418	TUBE - temperature sensor to compressor	1
15	66-9163	KVQ - valve (see 146E6)	1
16	66-9414	TUBE - exchanger to dehydrator	1
17	66-9071	TUBE - KVQ to compressor	1
18	61-726	TUBE - exchanger to KVQ	1
19	506-272	HEAT EXCHANGER (119, 800 & 800A)	1
20	66-9069	TUBE - evaporator to exchanger	1
21	61-727	TUBE - solenoid to KVQ	1
22	66-9168	VALVE - solenoid (pulse)	1
23	66-9214	TUBE - valve to tee	1
24	55-6218	TEE	1
25	66-9167	VALVE - solenoid (liquid normally closed, see 146E5)	1
26	66-9085	TUBE - valve to exchanger	1
27	66-9900	VALVE - expansion (or use 60-253 kit)	1
	66-1090	VALVE - expansion (non-adjustable)	1
28	66-9165	TUBE - valve to tee	1
29	55-2296	TEE	1

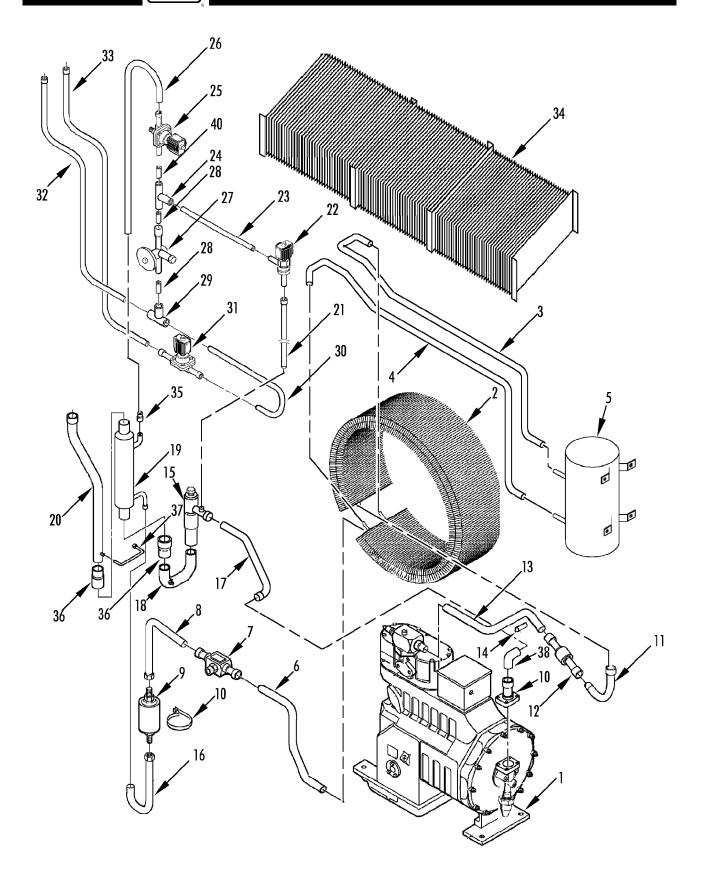


# $^{\mbox{\scriptsize Revised}}_{8/28/02}$ REFRIGERATION COMPONENTS (DANFASS VALVES)



REF	PART#	DESCRIPTION	QTY
30	66-9166	TUBE - tee to valve	1
31	66-9032	VALVE - solenoid (humidity control, normally open)	1
32	66-9084	TUBE - valve to coil	1
33	66-9087	TUBE - tee to coil	1
	66-9577	TUBE - tee to coil	1
34	67-1532	COIL - evaporator (units w/ 3 evap fans, 119)	1
	67-1558	COIL - evaporator (units w/ 2 evap fans, 800A/B/C)	1
35	55-2299	BUSHING (5/8 - 1/2)	1
36	66-9285	BUSHING (1-5/8 - 1-1/8)	1
37	66-9075	TUBE - equalizer (119, 800, 800A/B)	1
38	66-9072	ELBOW - suction (119, 800 & 800A)	1
39	66-9164	TUBE - valve to elbow	1
40	66-9210	TUBE - solenoid to tee	1

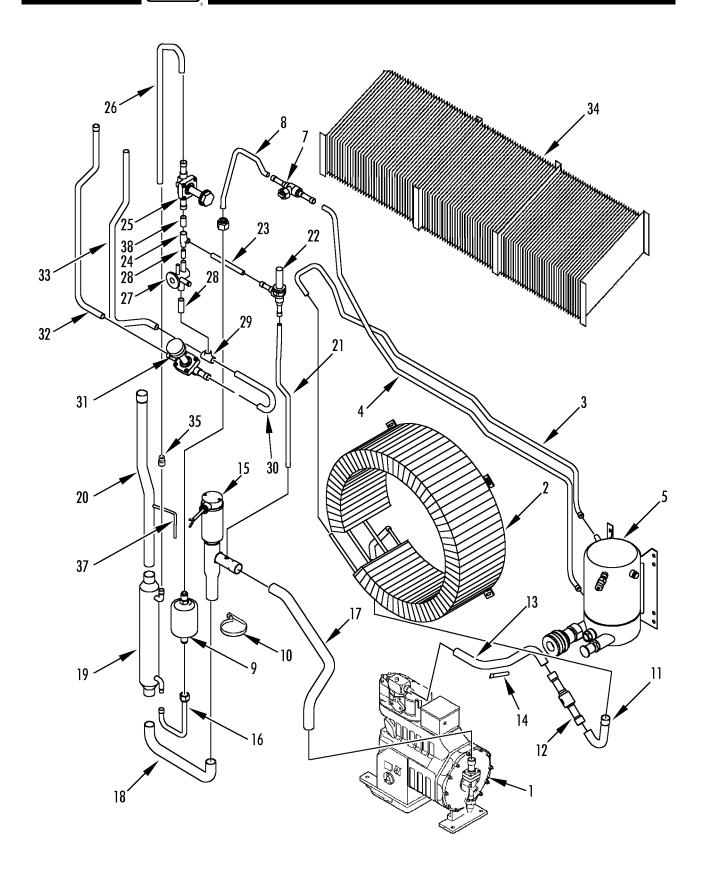


# **REFRIGERATION COMPONENTS (MAERSK)**



REF	PART#	DESCRIPTION	QTY
1	8102-743	COMPRESSOR (see 157G4, before 1/01)	1
2	67-1632	COIL - condenser (800, 800A/B/C)	1
	60-285	COIL - condenser (800D)	1
	99-5966	STRIP - gasket (15 x 15 mm)	A/R
	33-2950	GASKET (10 x 15 mm)	A/R
	55-8910	SCREW - coil	7
	55-6995	FLATWASHER	7
	55-9054	WASHER (nylon)	7
3	66-9875	TUBE - top (800, 800A/B/C)	1
	61-1305	TUBE - top (800D)	1
4	66-9874	TUBE - bottom (800, 800A/B/C/D)	1
5	67-1575	TANK - condenser (800, 800A/B/C/D, see 154E13)	1
6	506-375	TUBE - condenser to indicator	1
7	66-9125	VALVE - shutoff	1
8	61-698	TUBE - dehydrator to valve (119, 800, 800A)	1
	61-695	TUBE - dehydrator to valve (800B/C/D)	1
9	66-9015	DEHYDRATOR	1
10	55-4390	HANGER - dehydrator	2
	55-8891	SCREW - bracket	2
11	506-369	TUBE - discharge	1
12	66-8467	VALVE - check	1
13	506-370	TUBE - discharge	1
14	504-1418	TUBE - temperature sensor to compressor (800, 800A/B/C)	1
15	66-9163	KVQ - valve (see 146E6)	1
16	61-696	TUBE - exchanger to dehydrator	1
17	61-697	TUBE - KVQ to compressor (800B/C/D)	1
18	61-726	TUBE - exchanger to KVQ	1
19	67-1650	HEAT EXCHANGER (800B/C/D)	1
20	61-293	TUBE - evaporator to exchanger	1
21	61-727	TUBE - solenoid to KVQ	1
22	66-9168	VALVE - solenoid (pulse, Danfass valve, see 166F6)	1
23	66-9214	TUBE - valve to tee	1
24	55-6218	TEE	1
25	66-9167	VALVE - solenoid (liquid, normally closed, see 146E5, Danfass valve)	1
26	66-9085	TUBE - valve to exchanger (119, 800, 800A)	1
	61-1316	TUBE - valve to exchanger (800C/D)	1
	61-725	TUBE - valve to exchanger (800B)	1
27	66-9900	VALVE - expansion (or use Kit 60-253 for replacement of brass valves)	1
	61-2990	VALVE - cpr	1
	61-2237	VALVE - pressure regulator	1




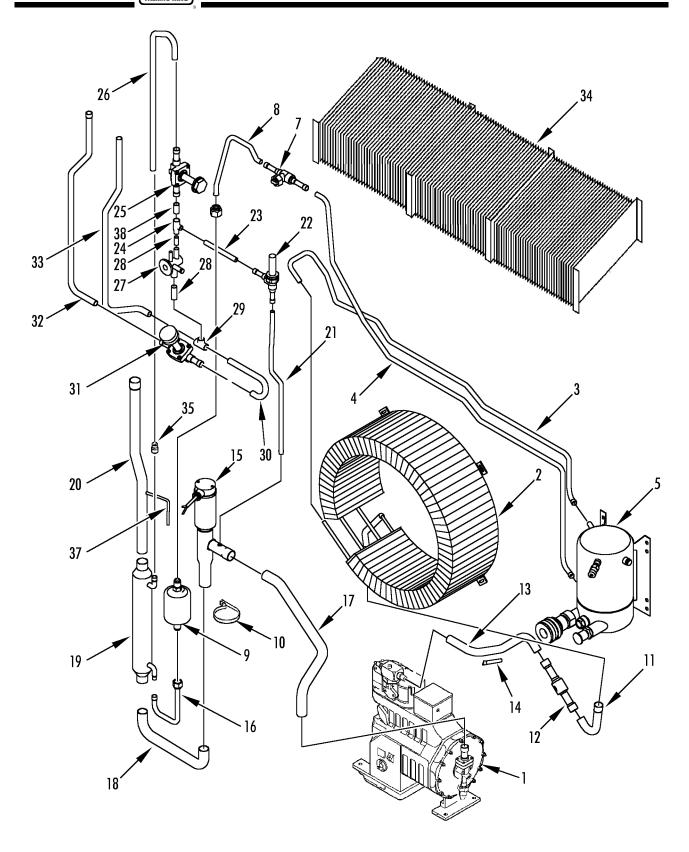

# REFRIGERATION COMPONENTS (MAERSK)




REF	PART#	DESCRIPTION	QTY
	61-2285	• COUPLING (1-1/8)	1
28	66-9164	TUBE - valve to tee	1
29	55-2296	TEE	1
30	66-9868	TUBE - tee to valve	1
31	66-9032	VALVE - solenoid (humidity control, normally open, Danfass valve)	1
32	61-295	TUBE - valve to coil (800B)	1
	61-724	TUBE - valve to coil (800C/D)	1
33	61-294	TUBE - tee to coil (800B)	1
	61-723	TUBE - tee to coil (800C/D)	
34	67-1532	COIL - evaporator (units w/ 3 evap fans, see 150G3)	1
	67-1806	COIL - evaporator (8/01 & after, 800, 800A/C/D)	1
	67-1673	COIL - evaporator (800B)	1
	67-1558	COIL - evaporator (before 7/01, units w/ 2 evap fans, 800A/C/D, see 152C1)	1
35	55-2299	BUSHING (5/8-1/2)	1
37	66-9075	TUBE - equalizer (119, 800, 800A/B)	1
	61-1307	TUBE - equalizer (800C/D)	1
38	66-9035	TUBE - solenoid to tee	1

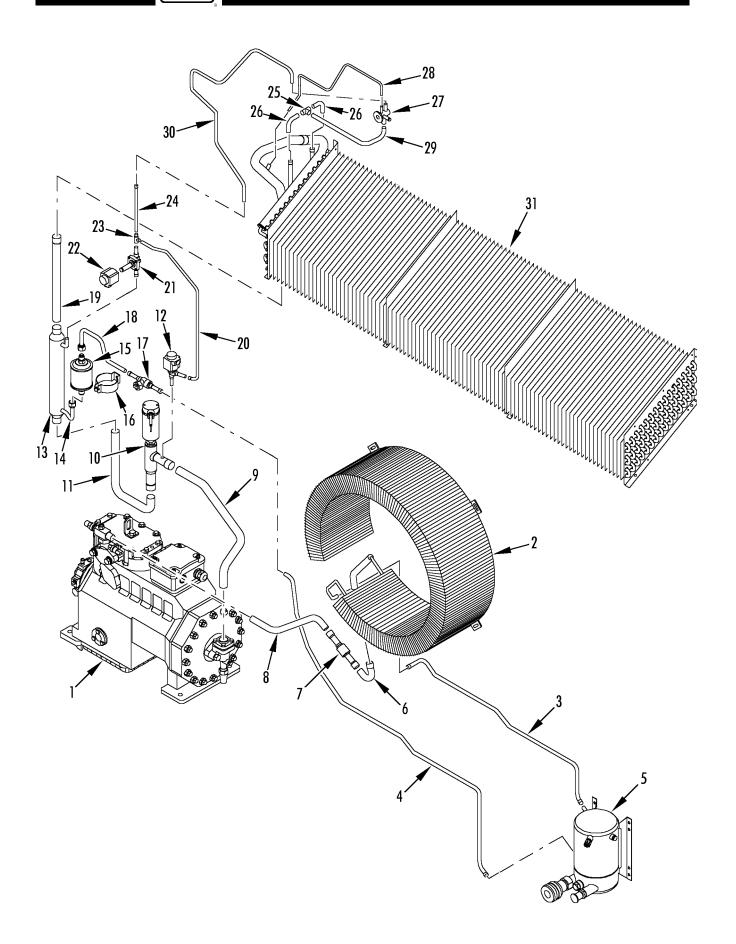

## **REFRIGERATION COMPONENTS (CRR-40 800E)**



REF	PART#	DESCRIPTION	QTY
1	8102-743	COMPRESSOR (see 172H0)	1
	55-8911	SCREW - compressor	4
	55-137	FLATWASHER	4
	55-7360	FLATWASHER	4
	55-8992	NUT - hexagon	4
2	60-285	COIL - condenser	1
	33-2950	GASKET (10 x 15 mm)	A/R
	55-7035	SCREW - coil	6
	51-167	FLATWASHER	6
	55-9054	WASHER - insulator	6
3	61-1305	TUBE - top	1
4	66-9874	TUBE - bottom	1
	55-6730	CLAMP - to tube	6
	55-7504	CLAMP (1.125 dia)	3
	55-8316	SCREW - clamp	9
	55-7075	FLATWASHER	12
5	67-1575	TANK - condenser (see 154E13)	1
	55-7341	SCREW - tank	4
	55-7342	LOCKWASHER	4
	55-7085	FLATWASHER	4
6	61-2219	TUBE - discharge, coil to compressor	1
7	66-8467	VALVE - check	1
8	61-2220	TUBE - discharge valve to compressor	1
9	61-2221	TUBE - KVQ to compressor	1
10	504-980	VALVE - KVQ (see 146E6)	1
	55-2331	BANDWRAP - valve	7
11	61-2222	TUBE - heat exchanger to KVQ	1
12	61-2223	VALVE - solenoid liquid injection	1
	41-5460	COIL - valve	1
13	67-1943	HEAT - exchanger	1
14	61-2224	TUBE - drier to heat exchanger	1
15	61-786	DEHYDRATOR (w/ o-rings)	1
16	55-4390	HANGER - dehydrator	1
	55-7035	SCREW - hanger	2
	55-9054	WASHER - insulating	2
	51-167	FLATWASHER	2
	55-8316	SCREW - dehydrator	1
	55-7075	FLATWASHER	2
	55-7042	NUT	1
17	66-9125	VALVE - shutoff	1
18	61-2225	TUBE - check valve to dehydrator	1
19	61-2226	TUBE - suction to evaporator	1

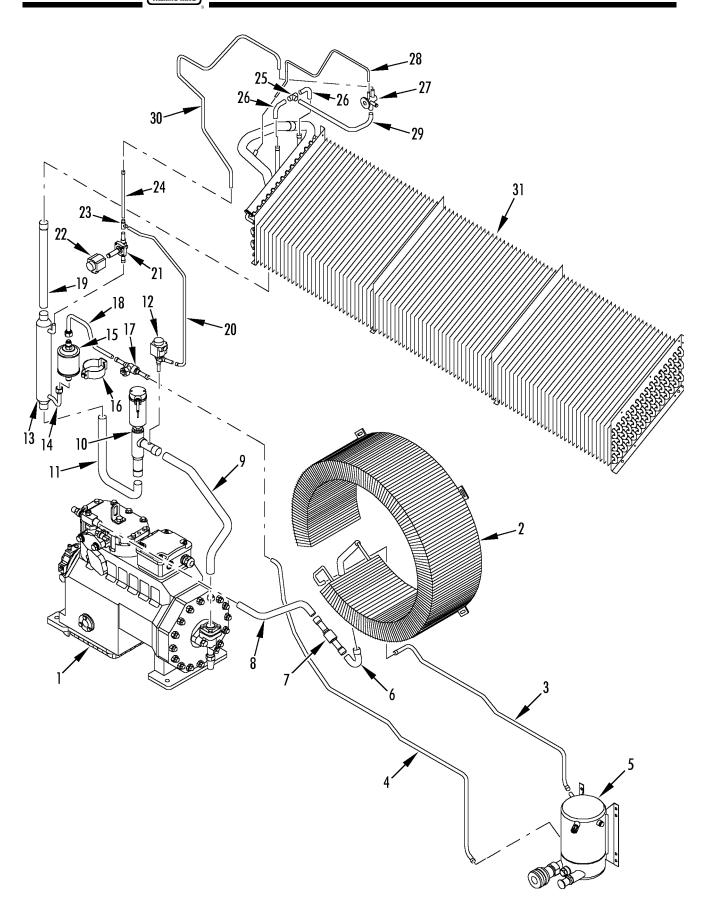


Revised 9/17/03

# **REFRIGERATION COMPONENTS (CRR-40 800E)**




REF	PART#	DESCRIPTION	QTY
20	61-2227	TUBE - liquid injection	1
21	61-2228	VALVE - solenoid	1
22	41-5460	COIL - valve	1
23	55-6218	TEE (1/2 x 3/8 x 3/8)	1
24	61-2229	TUBE - liquid to evaporator	1
25	55-2296	TEE (1/2)	1
26	61-2051	TUBE - tee to distributor	2
27	61-1626	VALVE - expansion	1
28	61-2048	TUBE - equalizer	1
29	61-2049	TUBE - expansion valve to tee	1
30	61-2050	TUBE - expansion valve to inlet	1
31	67-1923	COIL - evaporator	1

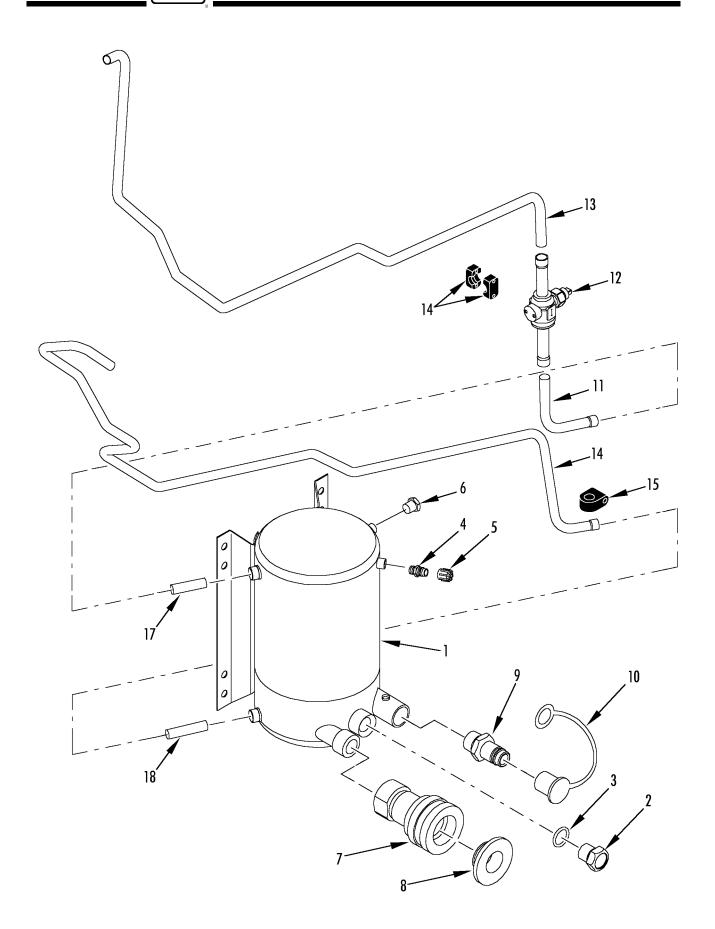

## WATER COOLED CONDENSER



REF	PART#	DESCRIPTION	QTY
1	67-1575	TANK - water cooled condenser	1
2	66-8811	INDICATOR	1
3	33-3007	O-RING	1
4	66-6610	FITTING - high side	1
5	66-7182	CAP - fitting	1
6	506-364	PLUG - fusible	1
	203-393	SEALER - locking	A/R
	51-1467	SCREW - tank	4
	51-1429	LOCKWASHER	4
	51-1430	FLATWASHER	4
7	66-4788	COUPLING - outlet	1
	203-385	SEALER - removable	A/R
8	91-6627	CAP - dust cover	1
9	55-1827	PLUG - outlet	1
10	91-6628	CAP - dust cover	1
11	61-3504	TUBE - condenser to filter	1
12	61-3525	VALVE - ball	1
13	61-3542	TUBE - valve to dehydrator	1
14	61-1305	TUBE - condenser to condenser	1
15	91-759	CLAMP - tube	2
	51-1462	SCREW - clamp	1
16	55-6730	CLAMP - tube	6
	55-7035	SCREW - clamp	2
	51-167	FLATWASHER	4
17	66-7543	TUBE - stub (1.88 lg)	1
18	66-9447	TUBE - stub (2.25 lg)	1

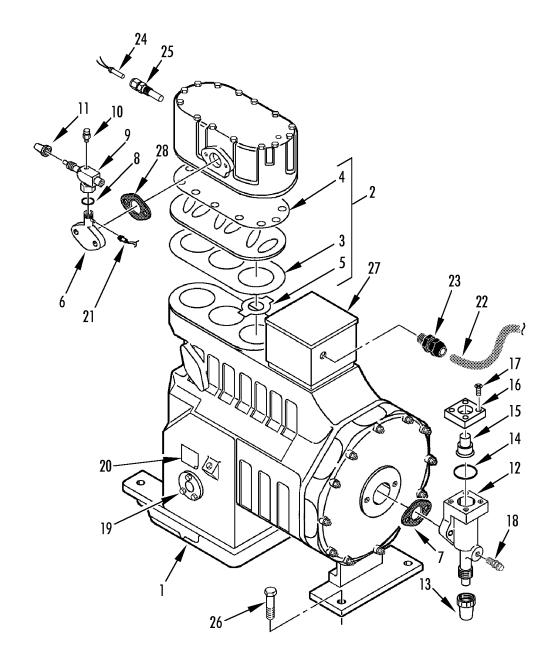



# COMPRESSOR GROUP (MAERSK)



REF	PART#	DESCRIPTION	QTY
1	8102-743	COMPRESSOR (3DST, CRR 40 & DF, see note)	1
2	22-1051	KIT - valve plate	1
	22-1132	KIT - valve plate (Delta Reed)	1
3	33-2510	•• GASKET - valve plate	1
	33-3513	GASKET - valve plate (Delta Reed)	1
4	503-278	•• GASKET - cylinder head	1
5	502-240	•• KIT - reed suction (non Delta Reed only)	1
	203-516	OIL - compressor	A/R
6	22-1186	ADAPTER - discharge	1
	55-2747	SCREW - adapter	2
	55-2159	LOCKWASHER	2
	55-2173	FLATWASHER	2
7	33-3175	GASKET - discharge & suction	2
8	33-981	GASKET - valve	1
9	66-9377	VALVE - discharge	1
10	66-6610	ADAPTER - service (discharge)	1
	66-7182	CAP - adapter (red)	1
11	506-161	CAP - discharge valve	1
12	66-9149	VALVE - suction	1
	61-2230	VALVE - suction (800E)	1
13	506-165	CAP - suction valve	1
14	503-230	GASKET - suction	1
15	66-1845	COUPLING	1
16	66-2457	COLLAR	1
17	55-3490	SCREW - collar	4
18	66-6607	FITTING - service (lowside)	1
	66-7183	CAP - fitting	1
19	22-398	SIGHT GLASS - oil	1
	33-2223	GASKET - sight glass	1
20	509-1153	LABEL - compressor oil	1
21	41-3250	SWITCH - hpco	1
22	41-2716	CABLE - compressor power	1
23	55-5257	FITTING - harness	1
24	41-4300	PROBE - high temperature	1
25	22-1161	POCKET - sensor	1
26	55-9037	SCREW - compressor (50 mm)	4
	55-7360	FLATWASHER	4
	55-5025	NUT	4
27	92-1682	BOX - junction (plastic, Maersk only)	1
28	33-3175	GASKET - discharge (rubberized)	1


### **DANFOSS**

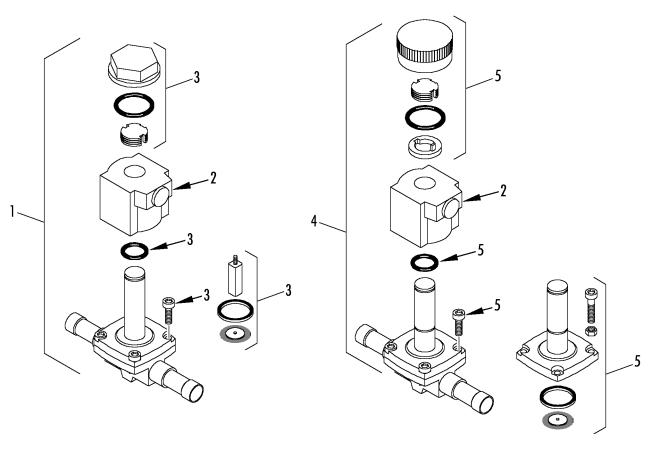

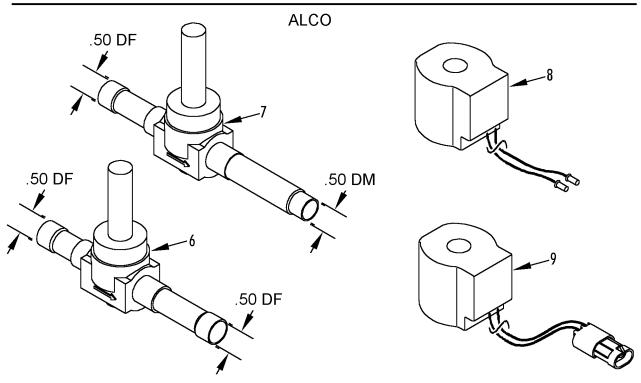




REF	PART#	DESCRIPTION	QTY
1	66-9167	VALVE - liquid line (less coil, normally closed, Danfoss)	1
2	41-5460	COIL - valve	1
	41-2399	COIL - valve (2 pin connector, gray, Danfoss)	1
3	504-977	KIT - repair (normally closed)	1
4	66-9032	VALVE - dehumidifier (less coil, normally open, Danfoss)	1
5	504-922	KIT - repair (normally open)	1
6	41-3303	VALVE - dehumidifier (less coil, normally open, Alco)	1
	66-9867	VALVE - liquid line (less coil, normally closed, Alco)	1
7	61-149	VALVE - liquid line (less coil, normally closed, Alco)	1
8	41-3301	COIL - valve (2.2 meter leads)	1
	41-3301	COIL - valve (2.2 meter leads w/ pin terminals)	1
9	41-3592	COIL - valve (200 mm leads w/ pin connector, white band)	1
	40-782	COIL - valve (200 mm leads w/ pin connectors, green band)	1

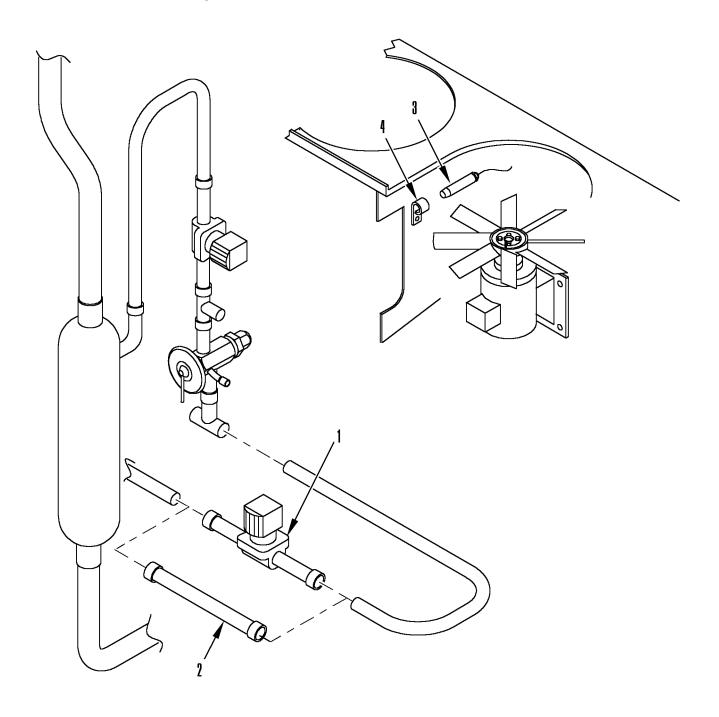


## **HUMIDITY CONTROL (OPTION 098033)**



REF	PART#	DESCRIPTION	QTY
1	66-9032	VALVE - solenoid (humidity control)	1
	504-977	KIT - repair (Danfoss, normally closed, no stem)	1
	41-2399	COIL - liquid line valve (w/ connector)	1
	41-5460	•• COIL	1
2	66-9159	TUBE (replaces valve)	1
3	41-5635	SENSOR - humidity	1
	41-2838	HARNESS - sensor	1
4	55-1203	CLAMP - sensor	2
	55-8991	SPACER - clamp	2
	55-9173	SCREW - clamp	2

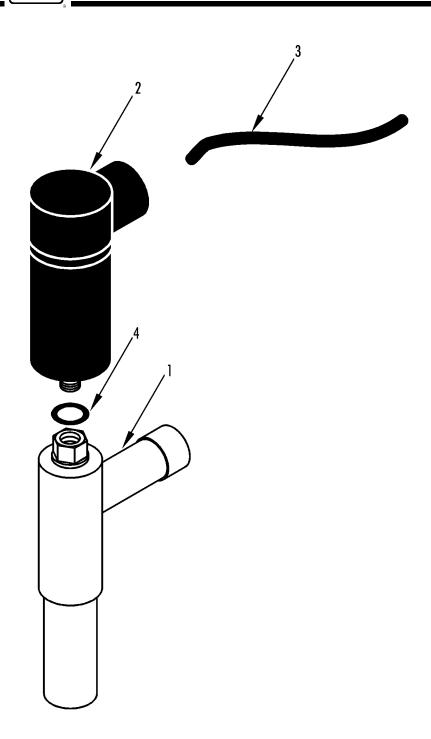


REF	PART#	DESCRIPTION	QTY
1	66-9163	VALVE - KVQ	1
2	504-980	• ACTUATOR	1
3	41-2603	HARNESS (before 10/02)	1
	41-5420	HARNESS (after 9/02)	1
4	503-291	GASKET	1

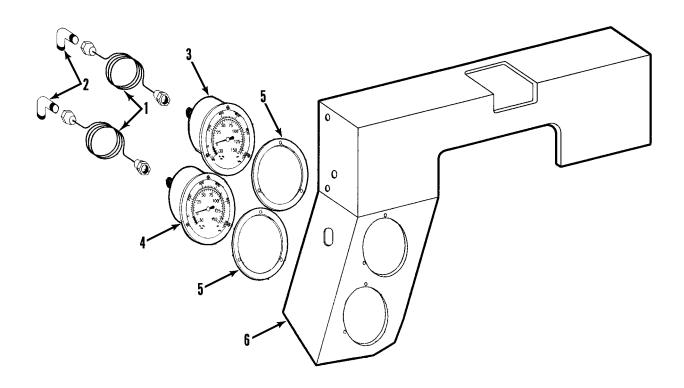

# GAUGE PANEL GROUP




REF	PART#	DESCRIPTION	QTY
1	61-154	TUBE - gauge (w/ Schrader)	2
2	55-9615	ELBOW - valve (w/ Schrader)	2
	66-9891	VALVE - Schrader	2
3	506-413	GAUGE - pressure (suction) (K26-23165-00)	1
4	66-9890	GAUGE - pressure (discharge) (K26-72464-00)	1
	55-8382	SCREW - gauge	6
	55-8410	WASHER	6
	55-9086	WASHER (nylon)	6
	55-7864	NUT (K21-50100-03)	6
5	33-3212	GASKET - gauge (K28-52133-00)	2
6	509-1636	GUARD - compressor (060-83030-02)	1
	55-7341	SCREW - guard (20 mm) (K21-50225-20)	2
	55-6993	SCREW - guard (25 mm) (K21-50225-25)	1
	55-8904	WASHER	3
	55-8955	WASHER (nylon)	3

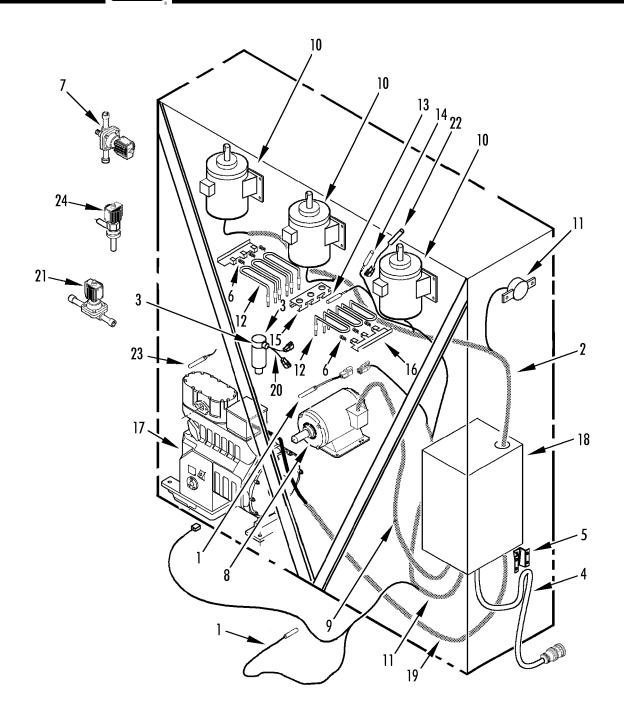

#### **ELECTRICAL COMPONENTS**




REF	PART#	DESCRIPTION	QTY
1	40-791	KIT - sensor (universal)	1
2	41-2954	HARNESS - evaporator fans & heaters (see 150G3)	1
3	504-980	COIL - KVQ (see 151A5)	1
4	41-2503	CABLE - power	1
	41-1976	PLUG - power (Minnekes)	1
5	91-6988	BRACKET - cable restraint	1
	55-9164	SCREW - cable	1
	55-7357	FLATWASHER	1
	55-7344	NUT	1
	55-7172	SCREW - bracket	4
	55-7075	FLATWASHER	4
	55-7170	LOCKWASHER	4
6	91-8140	SPRING - heater	6
7	66-9167	VALVE - solenoid (see 146E5)	2
8	104-689	MOTOR - condenser fan (see 150G2)	1
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
9	41-2953	HARNESS - condenser fan (see 150G2)	1
10	104-691	MOTOR - evaporator fan (units w/ 3 motors see 150G3, units w/ 2 motors see 152C1)	3
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
11	504-602	SWITCH - high temperature (130 deg F)	1
12	45-1791	HEATER	6
13	40-791	KIT - sensor (universal)	1
14	40-791	KIT - sensor (universal)	1
15	91-8142	BRACKET - heater	1
16	91-8467	BRACKET - heater	2
	55-8891	SCREW - bracket	11
17	8102-743	COMPRESSOR (see 162G5)	1
18	NSS	BOX - control (see 152A3)	1
	55-8075	SCREW - control box	4
	55-8893	WASHER	4
	55-9054	WASHER (nylon)	4
19	41-4015	CABLE - compressor	1
20	41-2603	HARNESS - KVQ	1
21	66-9032	VALVE - dehumidifier (see 147G12)	1
22	41-5635	SENSOR - humidity (see 147G12)	1
23	41-4300	PROBE - head temperature (see 160G1)	1
24	66-9168	VALVE - solenoid	1

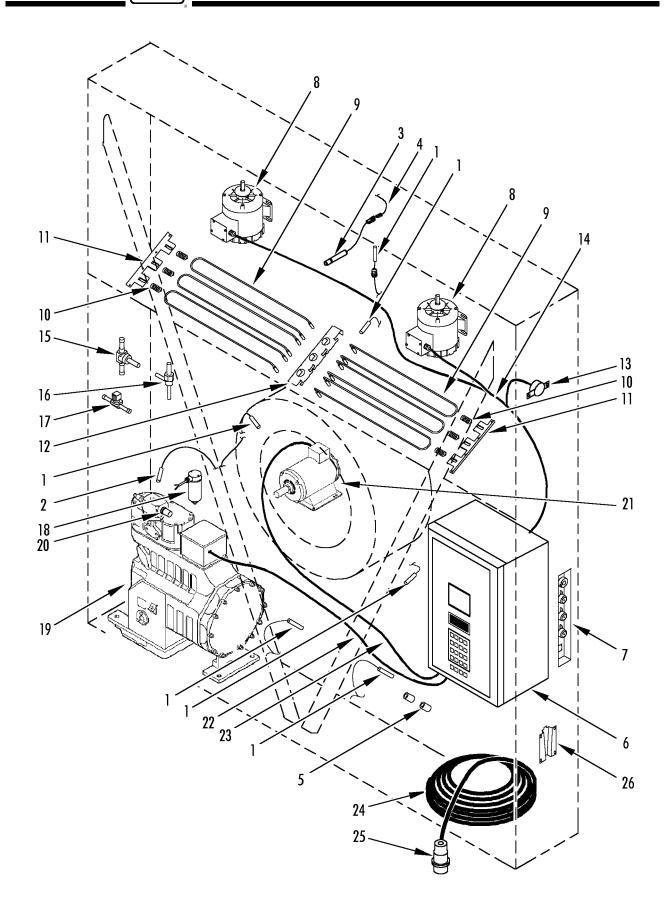

## ELECTRICAL COMPONENTS



REF	PART#	DESCRIPTION	QTY
1	40-791	KIT - sensor (universal)	A/R
	51-270	CONNECTOR - liquid tite	1
2	41-4300	SENSOR - compressor	1
3	41-5635	SENSOR - humidity (see 147G12)	1
	41-5635	SENSOR - humidity (800E)	1
4	41-2838	HARNESS - sensor (humidity, see 147G12)	1
5	91-9754	POCKET - sensor	1
6	NSS	BOX - control (see 160G2 & 146D7)	1
7	NSS	PANEL - USDA receptacle (see 157H2, 185D6 & 158E2)	1
8	104-691	MOTOR - fan	2
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
9	45-1791	HEATER (680W, 600 mm leads)	6
	45-1927	HEATER (680W, 2 meter leads)	6
10	91-8140	SPRING - heater	6
11	91-8467	BRACKET - heater	2
12	91-8142	BRACKET - heater	1
13	41-3401	THERMOSTAT - defrost termination	1
14	41-3277	HARNESS - evaporator (800 & 800A)	1
	41-3685	HARNESS - evaporator (CRR 40-300)	1
	41-4018	HARNESS - evaporator fan (2 fan units w/o heater doors, 800B & CRR40)	1
15	66-9167	VALVE - solenoid (less coil, see 145E5)	1
	61-2228	VALVE - solenoid (800E)	1
16	66-9168	VALVE - liquid injection (less coil, see 166F6)	1
	61-2223	VALVE - solenoid, liquid injection (800E)	1
17	66-9032	VALVE - solenoid (less coil, dehumidity, see 147G12)	1
18	66-9163	VALVE - KVQ (see 151A5)	1
19	8102-743	COMPRESSOR (see 165C9 & 185E3)	1
20	41-3302	SWITCH - hpco	1
21	104-689	MOTOR - condenser (see 155D4)	1
	77-1498	BEARING - shaft end	1
	77-1401	BEARING - opposite end	1
22	41-4015	CABLE - compressor	1
23	41-2953	HARNESS - condenser fan	1
24	45-1942	CABLE - power (22.3 meters, 73 ft)	1
	45-1992	CABLE - power (19.2 meters, 63 ft)	1
25	41-1976	• PLUG - power	1
26	92-270	BRACKET - cable restraint	1
	92-2777	BRACKET - power cable (800E & CRR40)	1
	55-9164	SCREW - cable	1
	55-7357	FLATWASHER	1

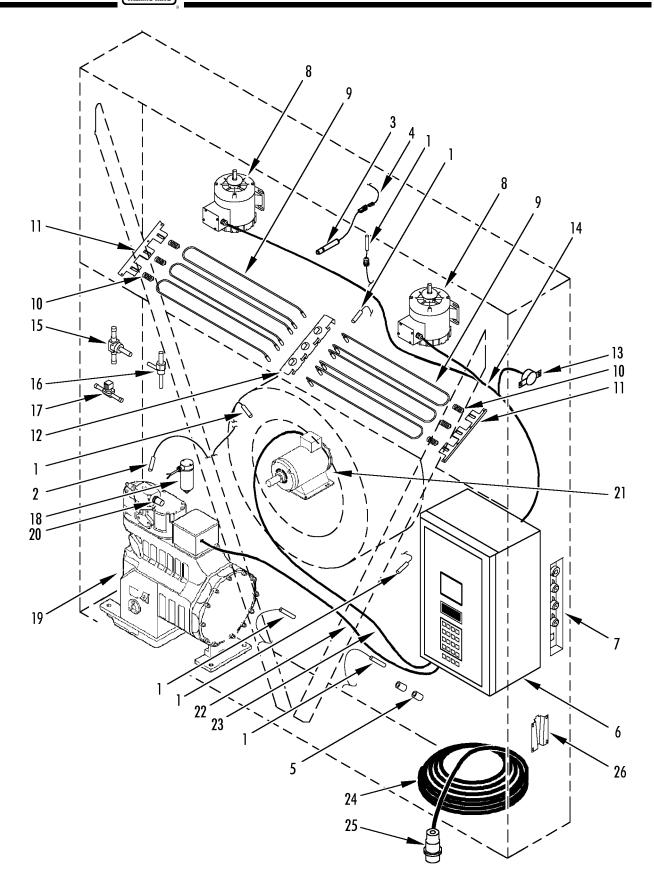


### **ELECTRICAL COMPONENTS**



REF	PART#	DESCRIPTION	QTY
	55-7344	NUT	1
	55-7172	SCREW - bracket	4
	55-7075	FLATWASHER	4
	55-7170	LOCKWASHER	4


**NOTE:** Use Universal Sensor Kit 40-791 to repair all sensors except 41-3594, 41-4156 & 41-4300.

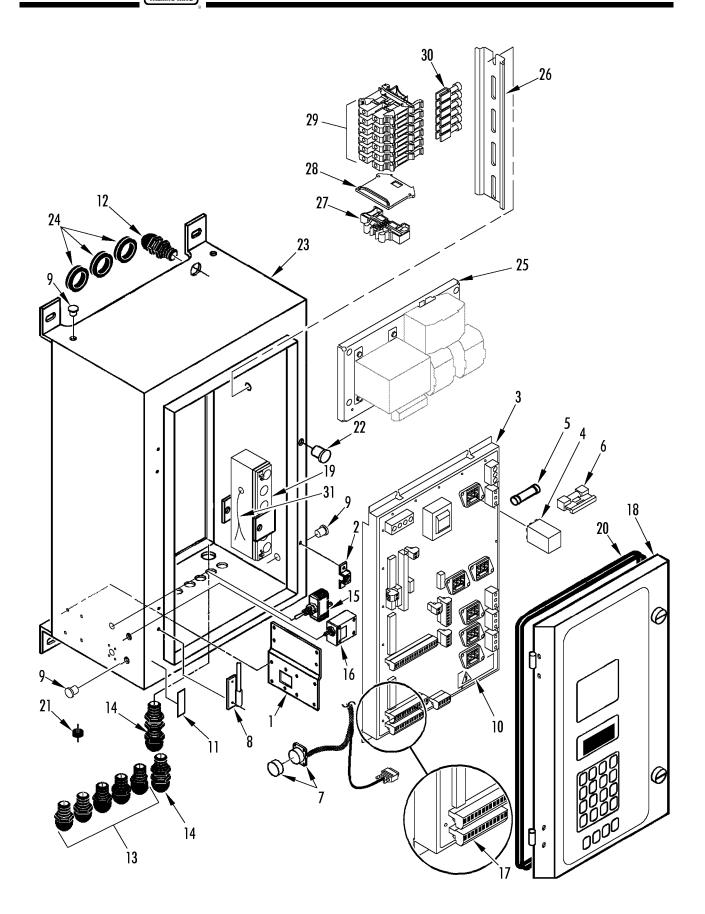

#### **CONTROL BOX (HEATER WIRING INSIDE BOX)**



REF	PART#	DESCRIPTION	QTY
1	92-236	BRACKET - diagram	1
	55-3272	RIVET - bracket	4
2	92-237	BRACKET (w/ receptacle)	2
	55-2074	NUT - speed	1
	55-9166	SCREW - bracket	4
	55-9444	WASHER - insulating (nylon)	4
3	845-2834	BOARD - relay (MP3000)	1
	55-9166	SCREW - relay board	6
4	504-514	RELAY - power	6
	92-860	CLIP - relay	6
5	504-970	FUSE (20 amp)	3
6	41-3430	HOLDER - fuse	1
7	41-3402	CABLE - retriever plug	1
	55-3272	RIVET - plug	4
	505-416	CAP - plug	1
8	92-238	HINGE - cover	2
	55-7172	SCREW - hinge	4
	55-8877	WASHER (nylon)	4
	509-955	INSULATOR	2
	55-6995	WASHER	2
	505-566	LOCKWASHER	2
	55-7042	NUT	4
9	505-408	PLUG - seal	3
10	91-9833	NAMEPLATE - Caution	1
11	92-244	NAMEPLATE - on/off	1
12	55-5885	CONNECTOR - liquid tite	1
13	55-8907	FITTING - harness	5
14	55-5257	FITTING - harness	2
15	41-3595	SWITCH - unit on/off	1
	92-239	BOOT - switch	1
16	41-3276	BREAKER - circuit	1
	44-8688	BOOT - circuit breaker	1
	41-2832	CONNECTOR - plug (2 pin)	1
17	41-3596	BLOCK - terminal (4 pole)	1
	41-3597	BLOCK - terminal (5 pole)	1
	41-3598	BLOCK - terminal (8 pole)	1
	41-3851	BLOCK - terminal (12 pole)	1
	41-3599	BLOCK - terminal (14 pole)	1
	41-3608	BLOCK - terminal (18 pole)	1
18	NSS	DOOR - controller (see 158D7)	1
19	203-509	BATTERY (12V, 1.9 AH)	1
20	33-3043	GASKET - cover	1

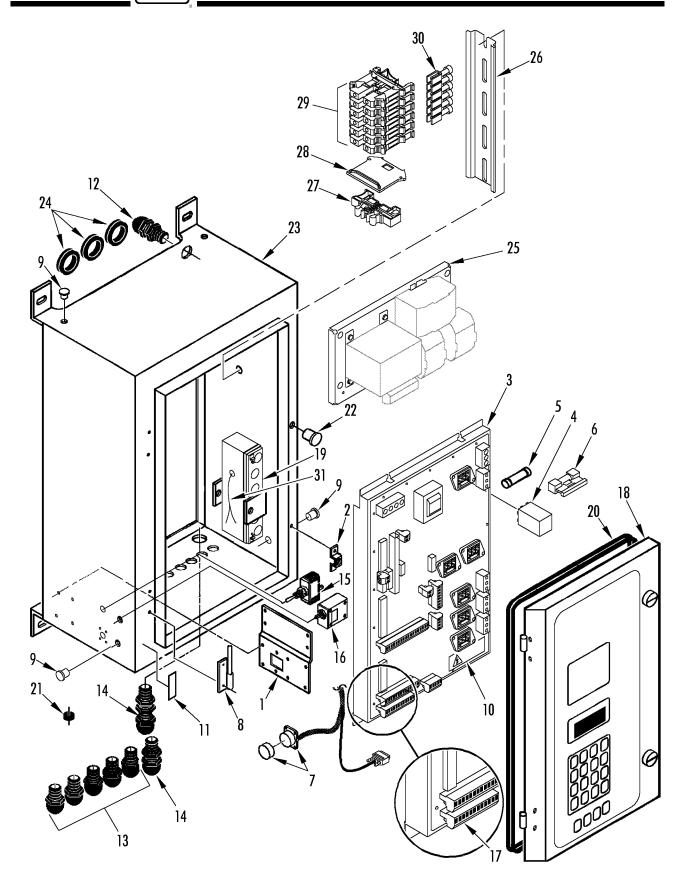


Revised 12/2/03

### CONTROL BOX (HEATER WIRING INSIDE BOX)




REF	PART#	DESCRIPTION	QTY
21	33-3838	GROMMET	1
22	55-9401	PLUG - seal	3
23	98-5454	BOX - control	1
	55-6994	SCREW - control box	4
	55-7075	FLATWASHER	4
	55-9054	WASHER - insulator	4
24	33-3215	GROMMET	3
25	NSS	TRAY - high voltage (see 158A1 or 146D7)	1
26	309-3066	RAIL - terminal block	1
	55-7169	SCREW - rail	2
	55-7033	FLATWASHER	2
	55-9445	WASHER - insulator	2
	55-7034	NUT	2
27	41-3687	TERMINAL - stop clip	2
28	41-3702	PLATE - end terminal	1
29	41-3688	BLOCK - terminal (UK, heaters)	6
30	41-3703	CONNECTOR - cross	1
31	41-3335	CABLE - battery	1



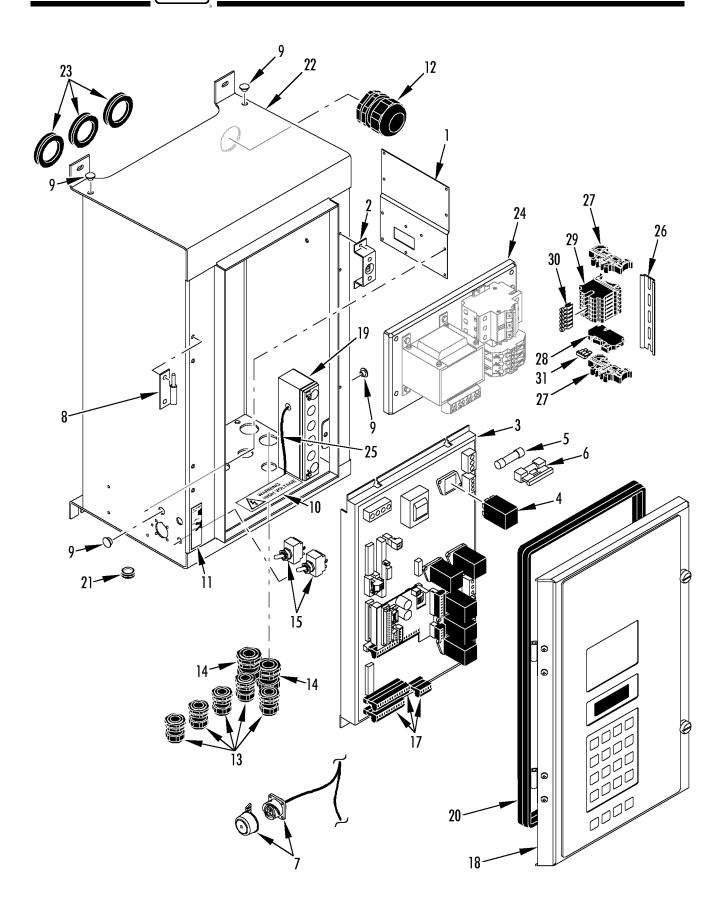


REF	PART#	DESCRIPTION	QTY
1	92-236	BRACKET - diagram	1
	55-3272	RIVET - bracket	4
2	92-237	BRACKET (w/ receptacle)	2
	55-2074	NUT - speed	4
	55-9166	SCREW - bracket	4
	55-9444	WASHER - insulating (nylon)	4
3	45-2010	BOARD - relay (MP3000 A)	1
4	504-514	RELAY - power	6
	92-860	CLIP - relay	6
5	504-970	• FUSE (20A)	3
6	41-3430	HOLDER - fuse	3
	51-336	SCREW - relay board	6
7	41-3402	CABLE - retriever plug (Deutsch, see 212G6)	1
	41-2583	CABLE - retriever plug (Cannon, see 212G6)	1
	55-9322	RIVET - plug	4
	41-2406	CAP - plug	1
	99-3685	CHAIN - cap	1
8	92-238	HINGE - cover	2
	55-7172	SCREW - hinge	4
	51-618	INSULATOR	2
	51-1423	FLATWASHER	4
	51-1424	LOCKWASHER	2
	55-7042	NUT	4
9	55-9346	PLUG - seal	2
10	91-9833	NAMEPLATE - Caution	1
11	91-9272	NAMEPLATE - On/Off	1
12	41-3686	CONNECTOR - liquid tite	1
13	55-5900	FITTING - harness	5
14	55-5257	FITTING - harness	2
15	41-3595	SWITCH - Unit On/Off; Cond Fan On/Off	2
	92-239	BOOT - switch	1
17	41-2832	CONNECTOR - plug (2 pin, short circuit)	1
	41-3596	BLOCK - terminal (4 pole)	1
	41-3597	BLOCK - terminal (5 pole)	1
	41-3598	BLOCK - terminal (8 pole)	1
	41-3851	BLOCK - terminal (12 pole)	1
	41-3599	BLOCK - terminal (14 pole)	1
	41-3608	BLOCK - terminal (18 pole)	1
18	NSS	DOOR - controller (see 183B5 & 188E8)	1
19	203-509	BATTERY (12V, 1.9 AH)	1
	55-9759	SCREW - battery	1
	55-6995	FLATWASHER	2



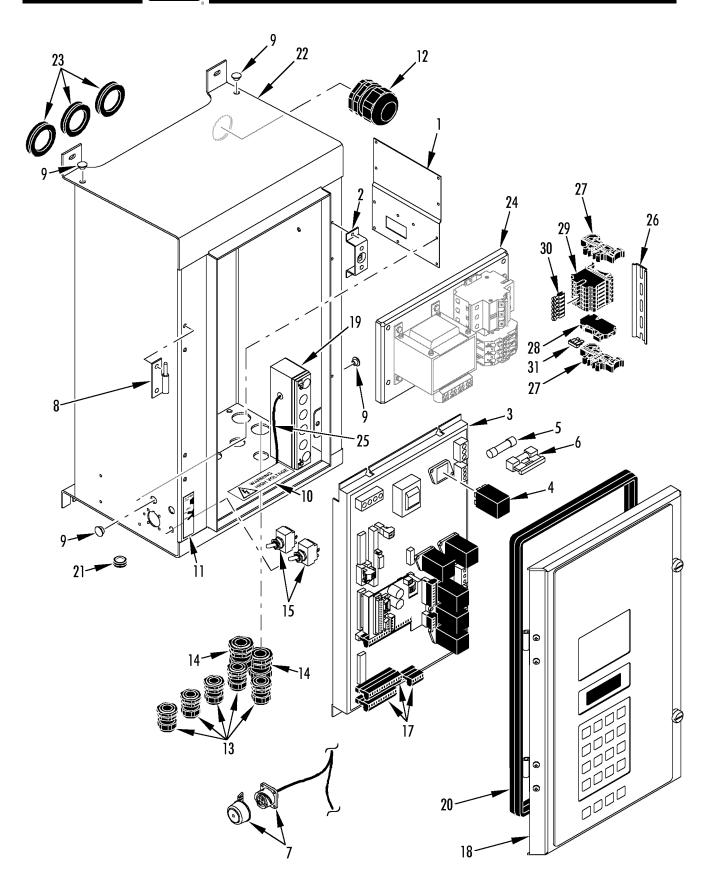

REF	PART#	DESCRIPTION	QTY
	55-7042	NUT	1
20	33-3837	GASKET - cover	1
21	33-3838	GROMMET	1
22	98-5454	BOX - control	1
	55-6994	SCREW - control box	4
	51-167	FLATWASHER	4
	55-9054	WASHER - insulator	4
23	33-3215	GROMMET	3
24	NSS	TRAY - high voltage (see 158A1)	1
25	41-3335	CABLE - battery	1
	41-4527	CONNECTOR (7 pin)	1
	44-6381	CONNECTOR (2 pin)	2
26	309-3066	RAIL - terminal block	1
	55-7169	SCREW - rail	2
	55-7033	FLATWASHER	2
	51-619	WASHER - insulator	2
	55-7034	NUT	2
27	41-3687	TERMINAL - stop clip	2
28	41-5105	PLATE - end terminal	1
29	41-3688	BLOCK - terminal	6
30	41-3703	CONNECTOR - cross	1
31	44-9359	FUSE (7.5 amp)	1
32	92-5520	BRACKET - battery	1
	55-2988	RIVET - bracket	1




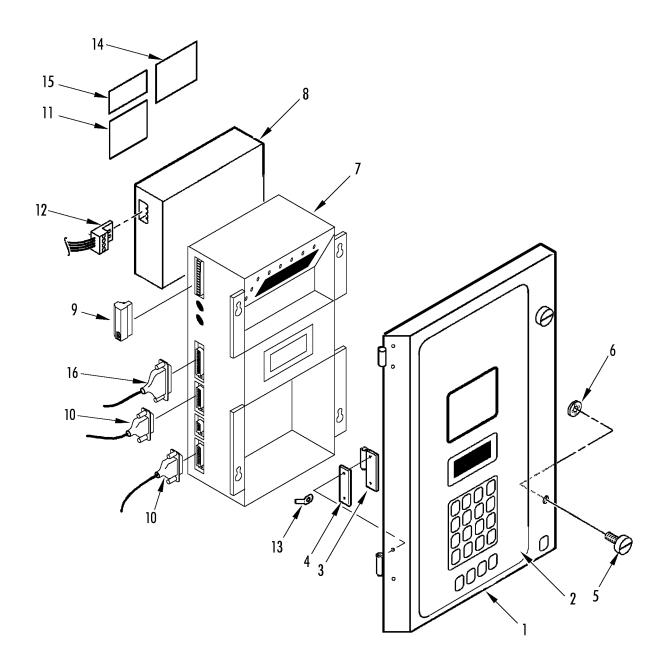

#### CONTROL BOX DOOR (mPC 3000 w/RMM)




REF	PART#	DESCRIPTION	QTY
1	91-9380	DOOR - control box	1
2	41-4142	KEYPAD (MP3000)	1
3	91-9381	HINGE - door	2
	55-7407	SCREW - hinge	4
	55-9444	WASHER (nylon)	4
	55-7033	WASHER	8
	55-7034	NUT	4
4	55-9392	INSULATOR - hinge	2
5	55-9393	SCREW - door	2
6	55-8919	RETAINER - screw	2
7	845-1909	CONTROLLER (MP3000)	1
	55-7034	NUT - controller	4
	55-8919	LOCKWASHER	2
	55-9444	WASHER - insulating (nylon)	4
8	845-1898	MODEM - RMM (option 098158, 098159)	1
9	41-3335	CONNECTOR (7 pin)	1
10	41-3602	CABLE - connecting (25 pin, No. 1 & 3)	2
11	91-9976	NAMEPLATE - Relay Board	1
12	41-3603	CABLE - connecting (RMM, option 098158, 098159)	1
13	55-9395	ADAPTER - push-on	1
	505-511	NUT	1
14	91-9382	NAMEPLATE - Controller Warning	1
15	91-9383	NAMEPLATE - Phase Select	1
16	41-2835	CABLE - connecting (No. 2)	1

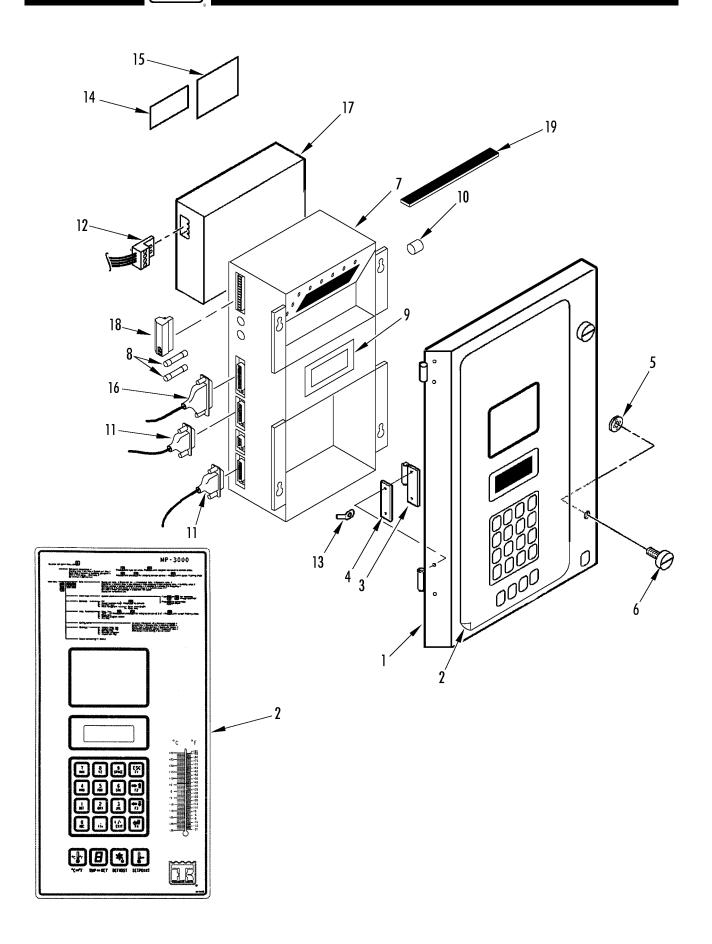


### CONTROL BOX DOOR (MP3000-A w/ RMM)



REF	PART#	DESCRIPTION	QTY
1	98-6784	DOOR - control box (complete, includes 1 thru 6, 8, 9, 10 & 13)	1
	91-9380	DOOR - control box	1
2	41-4142	• KEYPAD (MP3000)	1
3	91-9381	• HINGE - door	2
	51-1418	• SCREW - hinge	4
	55-9444	• WASHER (nylon)	4
	51-1420	• WASHER	8
	51-1419	• NUT	4
4	55-9392	• INSULATOR - hinge	2
5	55-8919	RETAINER - screw	2
6	55-9393	SCREW - door (knurled)	2
	51-1470	SCREW - door (Phillips)	2
7	45-2009	CONTROLLER (MP3000-A)	1
8	44-6777	• FUSE (2 amp)	2
9	41-4919	DISPLAY - controller	1
10	203-506	BATTERY - lithium	1
	51-1419	NUT - controller	4
	55-8919	LOCKWASHER	2
	55-9444	WASHER - insulating (nylon)	4
11	41-3602	CABLE - connecting (25 pin, No. 1 & 3)	2
12	41-3603	CABLE - connecting (RMM, option 098158, 098159)	1
13	55-9395	ADAPTER - push-on	1
	51-1419	NUT	1
14	91-9382	NAMEPLATE - Warning, Power Off	1
15	92-3446	NAMEPLATE - Phase Select	1
16	41-2835	CABLE - connecting (No. 2)	1
17	845-1898	MODEM (RMM, option 098158, 098159)	1
	41-3601	MODEM (MPC - 2000, 098983)	1
18	41-3335	CONNECTOR (7 pin)	1
19	92-3554	GASKET - controller	1

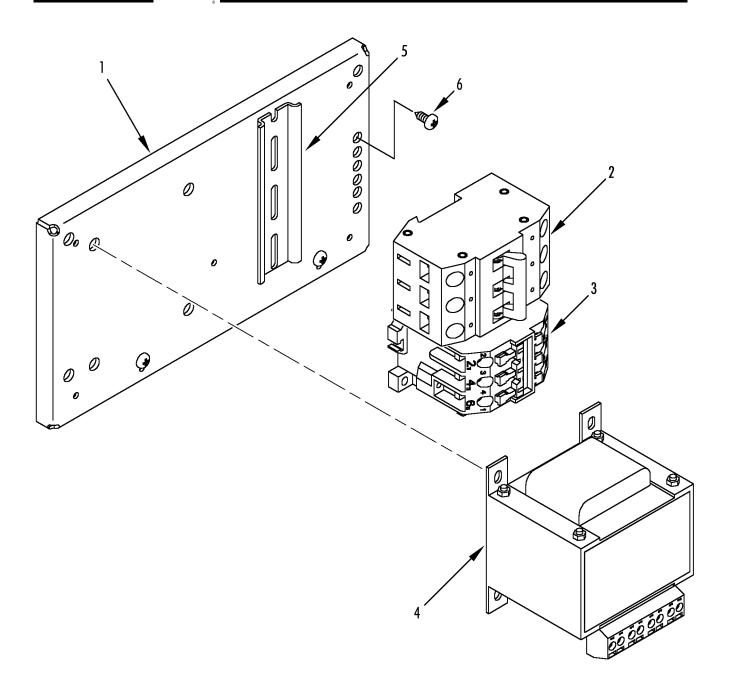

REF	PART#	DESCRIPTION	QTY
1	91-9913	PLATE - bottom	1
	55-7372	SCREW - plate to box	4
	51-619	WASHER - insulator	4
	55-7075	FLATWASHER	4
	55-7378	LOCKWASHER (internal tooth)	4
	55-7042	NUT	4
2	41-5104	BREAKER - circuit (25 amp)	1
3	41-3605	CONTACTOR (CI 25)	1
4	41-3317	TRANSFORMER	1
	55-9396	SCREW - transformer	4
5	91-9273	RAIL - din	1
	55-7404	LOCKWASHER	6
6	55-9166	SCREW (pan hd)	9

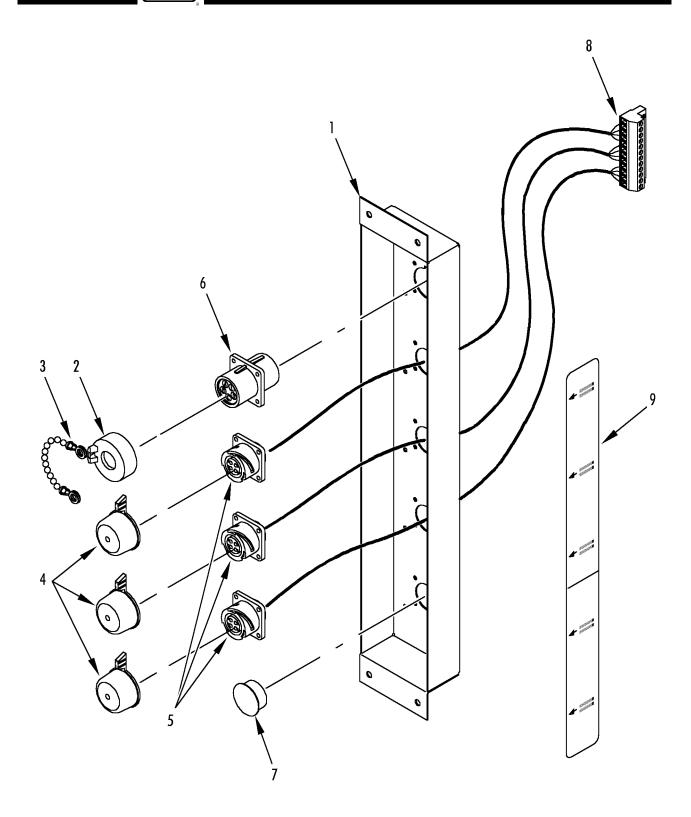


#### USDA DOWNLOAD PANEL




REF	PART#	DESCRIPTION	QTY
1	91-9834	PANEL - USDA receptacle	1
	55-9211	RIVET - panel	4
2	41-2406	CAP - dust	1
3	99-3685	CHAIN - cap	1
4	41-3588	CAP - dust	3
	55-9323	RIVET - cap	4
5	41-4016	RECEPTACLE (4 pin)	3
	55-9322	RIVET - connector	16
6	41-3586	RECEPTACLE (5 pin)	1
7	55-9402	PLUG - square hole	1
8	41-3585	CONNECTOR - plug (12 pin)	1
9	92-243	NAMEPLATE - Data Download USDA	1




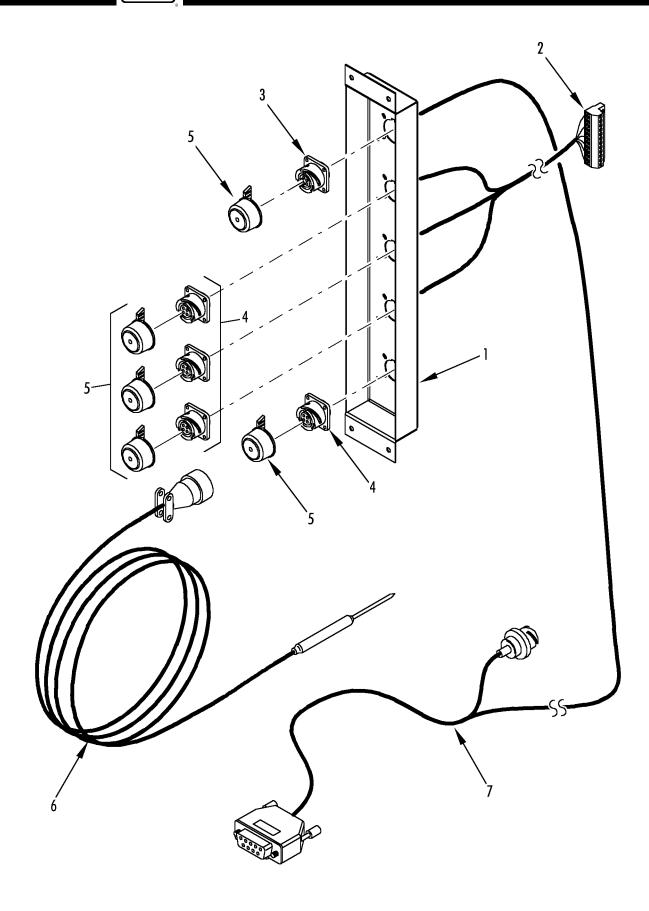

REF	PART#	DESCRIPTION	QTY
1	91-9834	PANEL - USDA receptacle	1
	51-620	RIVET - panel	4
2	41-5416	CONNECTOR (16 pin)	1
3	41-3586	RECEPTACLE (5 pin, cannon bayonet)	1
4	41-4016	RECEPTACLE (4 pin, cannon bayonet)	4
	55-9322	RIVET - receptacle	20
5	41-3588	CAP - receptacle	5
	55-9323	RIVET - cap	5
6	41-2853	CABLE & PLUG - retriever (cannon threaded)	1
7	41-5406	SENSOR - PT100 (15 m)	1

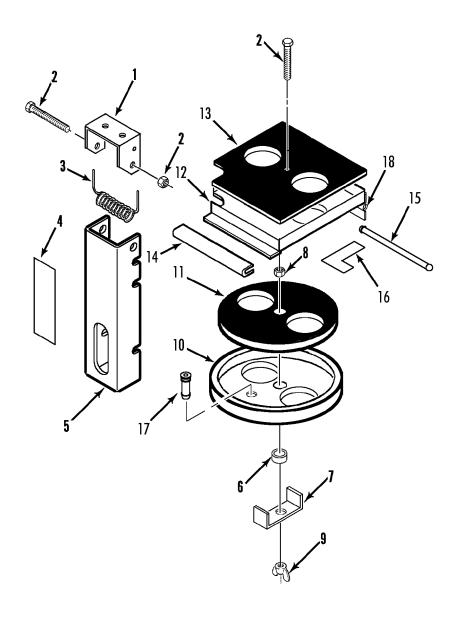


### AIR VENT (40 FT CONTAINERS)



REF	PART#	DESCRIPTION	QTY
	91-8252	VENT - air (complete)	1
1	91-9048	BRACKET - air vent handle	1
2	51-1426	SCREW - handle	1
	51-1474	• SCREW (M8 x 1.25 x 65, ss)	1
	55-9541	WASHER (nylon)	4
	51-1427	• NUT	1
3	91-8100	• SPRING	1
4	92-440	NAMEPLATE - Do Not Open Below 0 C	1
5	91-8102	HANDLE - air vent	1
6	77-2467	BEARING - slide	1
7	91-8104	BRACKET - handle	1
8	51-1428	• NUT	2
	51-1429	• LOCKWASHER	1
	51-1430	• FLATWASHER	1
9	51-1431	• NUT - wing	1
10	91-8103	DISK - air vent	1
11	33-4255	GASKET - air vent	1
12	91-8105	PLATE - air vent	1
	55-7172	SCREW - plate	4
	55-7075	• FLATWASHER	4
	55-9541	WASHER (nylon)	4
13	33-2944	GASKET - air vent	1
14	91-8663	• PROTECTOR - edge	1
15	91-8106	• PIN - hinge	1
16	91-8107	NAMEPLATE - Do Not Open Below 0 C	1
17	55-9168	ADAPTER - hose	1
18	92-411	HINGE - air vent	1
	51-619	SCREW - mtg vent	8
	55-8933	WASHER - insulator (6.4 id)	4
	55-7075	FLATWASHER	4
	55-9054	WASHER - insulator (8.4 id)	6
	51-167	FLATWASHER	6
	55-7339	NUT	6



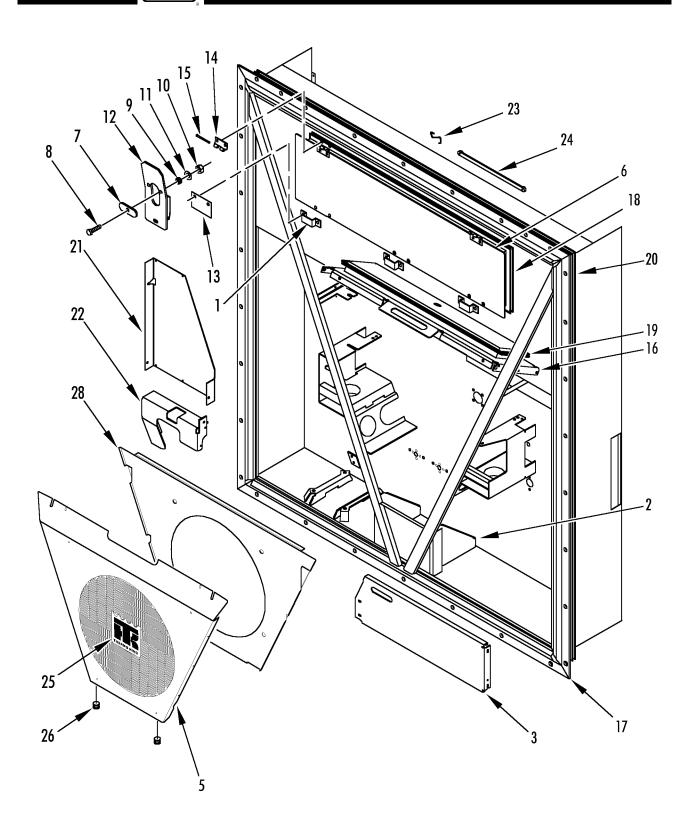


# CONDENSER COMPONENTS (UNITS w/3 FANS & HEATER DOOR)



REF	PART#	DESCRIPTION	QTY
1	91-8195	KEEPER - door latch	3
	55-7172	SCREW - keeper	6
	55-8893	WASHER	6
	55-8933	WASHER (nylon)	6
2	91-8108	BRACKET - frame	1
	55-6993	SCREW - bracket	3
	55-6988	WASHER	6
	55-8882	WASHER (nylon)	6
	55-9380	NUT	3
3	91-9678	PLATE - cable storage (front, 119, 800 & 800A)	1
	55-7035	SCREW - plate	4
	55-8893	FLATWASHER	6
	55-8877	WASHER (nylon)	6
	55-7008	NUT	2
4	Not Used		
5	98-5925	GRILLE - condenser	1
	98-5453	GRILLE - humidity	1
	55-6994	SCREW - grille	4
	55-7357	FLATWASHER	4
	55-9054	WASHER (nylon)	6
6	509-755	DOOR - evaporator (3 fan, units with 2 fans see 145D8)	1
	92-2995	HINGE - evap door	3
	51-620	RIVET - hinge	12
	509-1789	SEAL - door	A/R
7	91-9040	KNOB	3
8	55-7035	SCREW - door	3
9	91-8199	SPRING	3
10	55-7354	NUT	3
11	55-8877	WASHER (nylon)	3
12	91-9041	LATCH - door	3
	55-2864	RIVET - latch	6
13	91-8134	INSULATOR - latch	3
14	509-1654	HINGE	3
	55-7341	SCREW - hinge	6
	55-8882	WASHER (nylon)	6
15	91-8256	PIN - hinge (w/ snap)	3
16	91-9380	DOOR - heater section	1
	55-8882	WASHER (nylon)	8
	55-8904	WASHER	8
17	98-5303	FRAME - condenser (foamed)	1
	98-5455	FRAME - condenser (119)	1
18	33-3968	GASKET - evaporator door	1



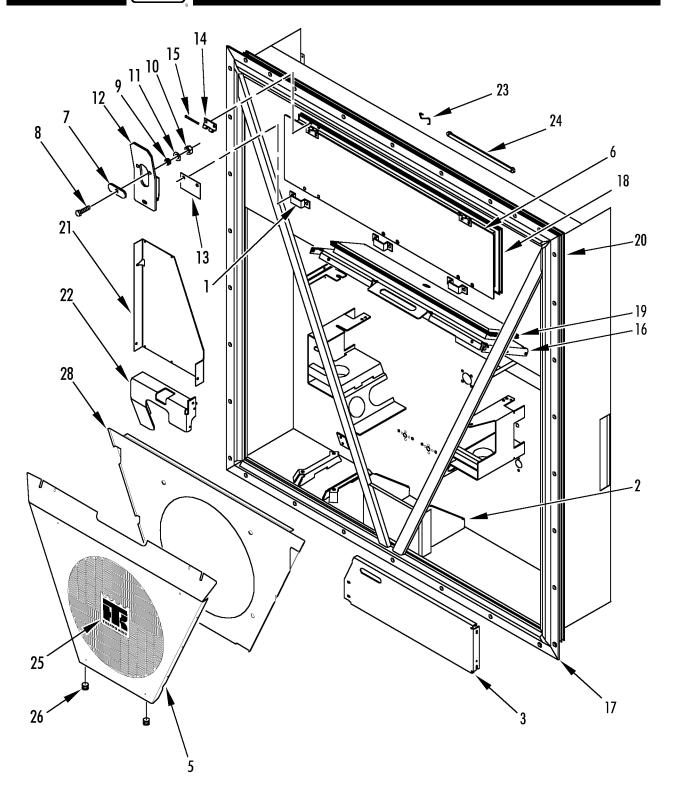


Revised 8/12/04

# CONDENSER COMPONENTS (UNITS w/3 FANS & HEATER DOOR)



REF	PART#	DESCRIPTION	QTY
19	33-3002	GASKET - door	1
20	33-2983	GASKET - unit	1
21	91-8728	COVER (instead of thermometer)	1
	55-7341	SCREW - cover	3
	55-8904	FLATWASHER	3
	55-8953	WASHER (nylon)	3
22	91-9820	PLATE - guard	1
	55-7341	SCREW - plate (20 mm)	2
	55-6993	SCREW - plate (25 mm)	1
	55-6988	FLATWASHER	3
	55-8953	WASHER	3
23	91-9039	HOOK - strap	1
	55-3065	CLAMP - hook	1
	55-7341	SCREW - clamp	1
24	509-937	STRAP - door	1
	55-9173	SCREW - strap	1
	55-7089	FLATWASHER	1
25	91-8475	NAMEPLATE - TK	1



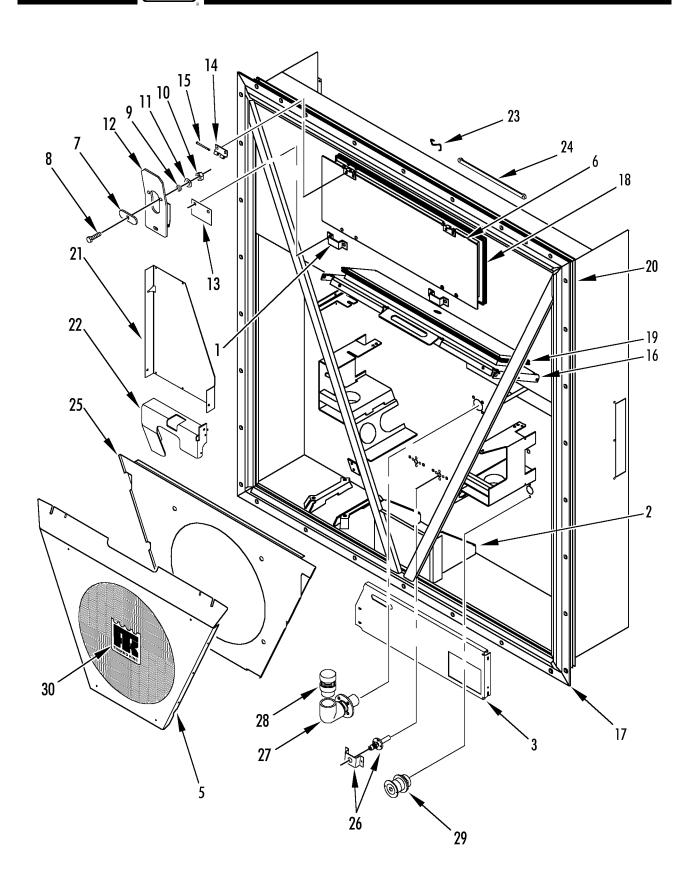


# CONDENSER COMPONENTS (2 EVAPORATOR FANS W/HEATER DOOR)



REF	PART#	DESCRIPTION	QTY
1	91-8195	KEEPER - door latch	2
	55-9312	SCREW - keeper	4
	55-6995	WASHER	4
	55-8933	WASHER (nylon)	4
	55-8877	WASHER (nylon)	4
2	91-8108	BRACKET - frame	1
	55-6993	SCREW - bracket	3
	55-6988	WASHER	6
	55-8882	WASHER (nylon)	6
	55-9380	NUT	3
3	98-6236	PLATE - cable storage (front)	1
	55-9168	NUT	2
	55-9054	WASHER (nylon)	6
	55-6994	SCREW - plate	2
	51-167	FLATWASHER	6
	55-8933	WASHER (nylon)	6
4	Not Used		
5	98-5925	GRILLE - condenser (119, 800 & 800A)	1
	55-6994	SCREW - grille	4
	55-6995	FLATWASHER	4
	55-9054	WASHER (nylon)	6
6	98-6518	DOOR - evaporator (units w/ two evaporator fans)	1
	92-2995	HINGE - evap door	2
	51-620	• RIVET - hinge	8
7	91-8133	• KNOB	2
8	55-7035	• SCREW - door	2
9	91-8199	• SPRING	2
10	55-7354	• NUT	2
11	55-9054	WASHER (nylon)	2
12	91-9041	• LATCH - door	2
	55-2864	• RIVET - latch	4
13	91-8134	INSULATOR - latch	2
14	509-1654	• HINGE	2
	55-7341	• SCREW - hinge	4
	55-8882	WASHER (nylon)	4
15	91-8148	• PIN - hinge (w/ snap)	2
16	98-5199	DOOR - heater section	1
	55-8882	WASHER (nylon)	8
17	98-5291	FRAME - condenser	1
	98-5312	FRAME - condenser (units w/ mPD)	1




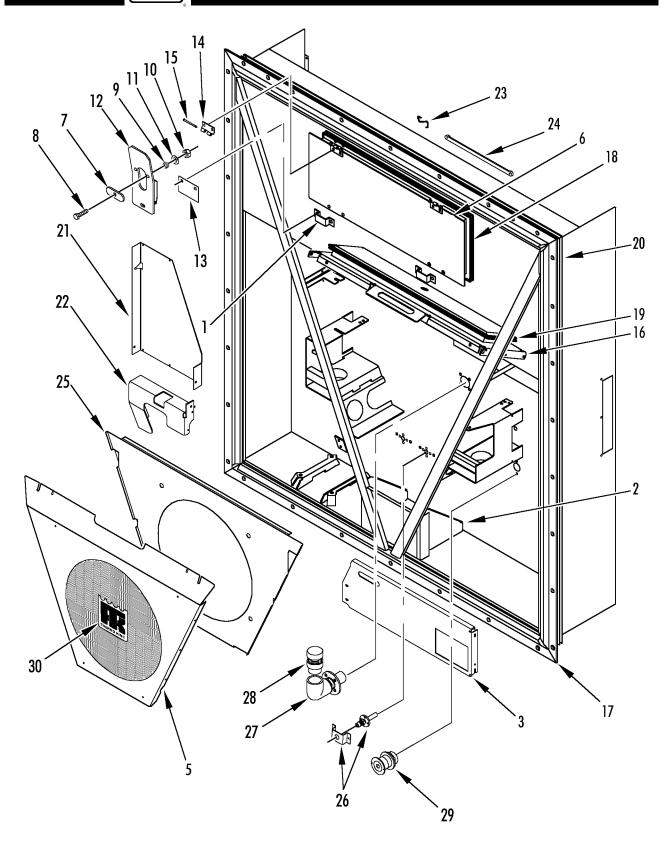

# CONDENSER COMPONENTS (2 EVAPORATOR FANS W/HEATER DOOR)




REF	PART#	DESCRIPTION	QTY
	98-5920	FRAME - condenser (800 & 800A)	1
	98-6237	FRAME - condenser (800B)	1
	98-5359	FRAME - condenser (w/ purge port)	1
	98-5332	FRAME - condenser (CRR 20)	1
	98-6658	FRAME - condenser (800E)	1
	98-5450	FRAME - condenser (C/atmosphere, option 098074)	1
	98-6658	FRAME - condenser (800E)	1
18	33-3001	GASKET - evaporator door	1
19	33-3002	GASKET - door	1
20	33-2983	GASKET - unit	1
21	91-8728	COVER (instead of thermometer)	1
	55-8891	SCREW - cover	3
	55-6988	FLATWASHER	3
22	91-8664	PLATE - guard	1
	55-7341	SCREW - plate (20 mm)	2
	55-6993	SCREW - plate (25 mm)	1
	55-6988	FLATWASHER	3
	55-8953	WASHER (nylon)	3
23	91-9039	HOOK - strap	1
	55-3065	CLAMP - hook	1
	55-7341	SCREW - clamp	1
24	509-937	STRAP - door	1
	55-9173	SCREW - strap	1
	55-7089	FLATWASHER	1
25	98-5479	ORIFICE - condenser	1
	55-7035	SCREW - orifice	4
	55-7075	FLATWASHER	4
	55-3045	WASHER - dome	4
	55-8849	NUT - captive	4
26	91-9949	PORT - injection	2
	55-9211	RIVET - port	4
27	91-9950	HOUSING - relief valve	1
	55-9211	RIVET - housing	4
28	91-9951	VALVE - pressure relief	1
29	91-9952	PORT - purge	1
	55-9211	RIVET - port	2
30	91-8475	NAMEPLATE - TK	1

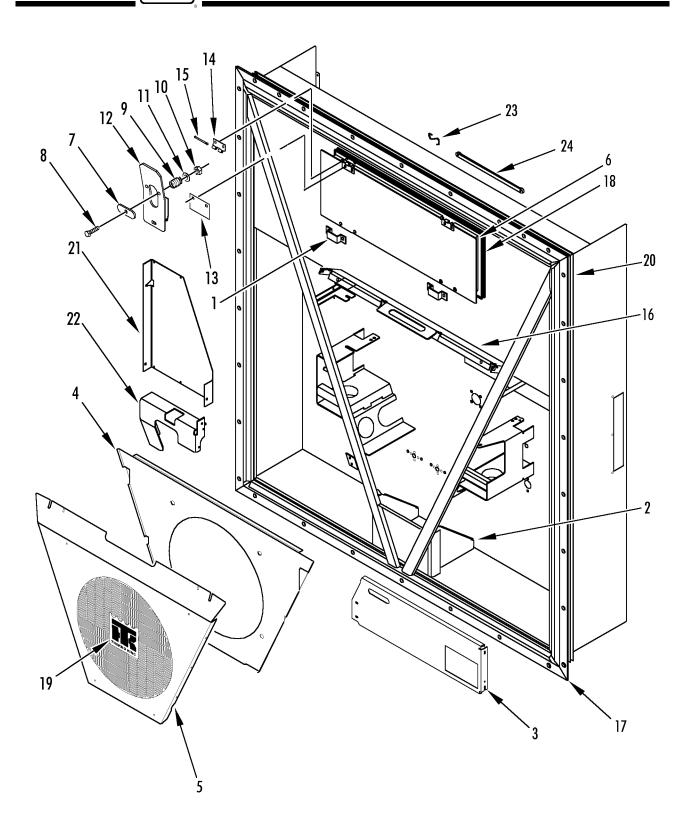

#### **CONDENSER COMPONENTS (3 FANS)**




REF	PART#	DESCRIPTION	QTY
1	91-8195	KEEPER - door latch	2
	55-9312	SCREW - keeper (TIR seal)	4
	55-6995	FLATWASHER	4
	55-9054	WASHER (nylon)	4
	505-2582	WASHER (nylon)	4
2	91-8108	BRACKET - frame	1
	55-7341	SCREW - bracket	3
	55-6988	WASHER	6
	55-9541	WASHER (nylon)	6
	55-7339	NUT	3
3	98-6236	PLATE - cable storage (front, 800B/C/D)	1
	91-9504	PLATE - cable storage (CRR40)	1
	55-9168	NUT	2
	55-9054	WASHER (nylon)	6
	55-6994	SCREW - plate	2
	51-167	FLATWASHER	6
	55-8933	WASHER (nylon)	6
4	91-9912	ORIFICE - condenser	1
	55-7035	SCREW - orifice	4
	55-7075	FLATWASHER	4
	55-3045	WASHER - dome	4
	55-8849	NUT - captive	4
5	98-5925	GRILLE - condenser (800B/C/D/E)	1
	33-3043	EXTRUSION (6.25 ft)	1
	55-6994	SCREW - grille	4
	51-167	FLATWASHER	4
	55-9054	WASHER (nylon)	4
6	98-6518	DOOR - evaporator	1
	92-2995	HINGE - evap door	2
	51-620	RIVET - hinge	8
7	91-9040	• KNOB	2
8	55-7035	• SCREW - door	2
9	91-8199	• SPRING	2
10	55-7354	• NUT	2
11	55-9054	WASHER (nylon)	2
12	91-9041	• LATCH - door	2
	55-2864	• RIVET - latch	4
13	91-8134	INSULATOR - latch	2
14	509-1654	• HINGE	2
	55-9313	SCREW - hinge (TIR seal)	4
	55-9541	WASHER (nylon)	4

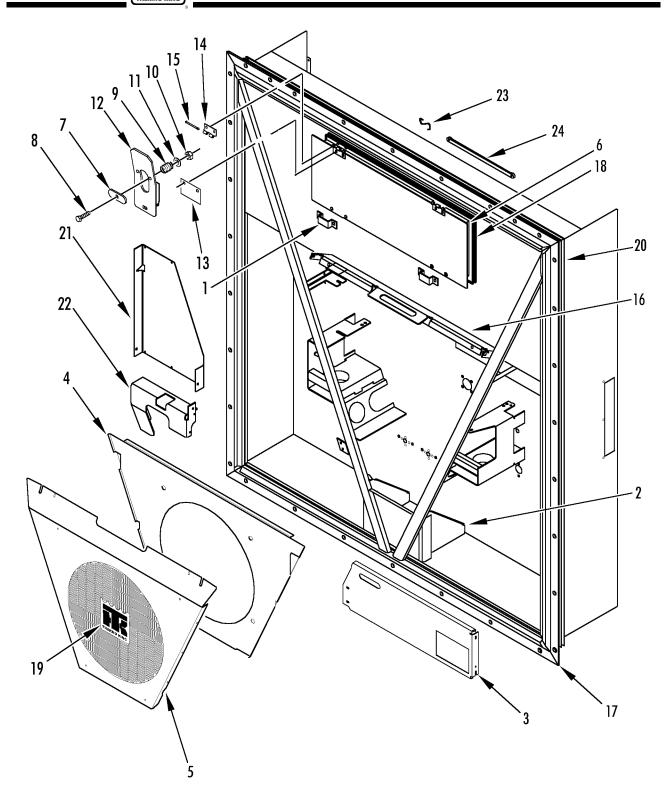

### CONDENSER COMPONENTS (3 FANS)




REF	PART#	DESCRIPTION	QTY
	55-7085	• FLATWASHER	4
15	91-8256	PIN - hinge (w/ snap)	2
16	92-891	BRACKET - safety hook (800B/C/D)	1
	55-9541	SCREW - bracket	4
	55-7085	FLATWASHER	4
	55-9541	WASHER	8
17	98-5932	FRAME - condenser (CRR 40-300)	1
	98-5921	FRAME - condenser (800B)	1
	98-6238	FRAME - condenser (800C)	1
	98-6239	FRAME - condenser (800D)	1
	98-6663	FRAME - condenser (CRR40)	1
18	33-3969	GASKET - evaporator door	1
19	91-8475	NAMEPLATE - TK	1
20	33-2983	GASKET - unit	1
21	91-8728	COVER (instead of thermometer)	1
	55-7391	SCREW - cover	3
	55-6988	FLATWASHER	3
22	91-8664	PLATE - guard	1
	55-7341	SCREW - plate (20 mm)	2
	55-6993	SCREW - plate (25 mm)	1
	55-8953	WASHER (nylon)	3
23	91-9039	HOOK - strap	1
	55-3065	CLAMP - hook	1
	55-9166	SCREW - clamp	1
24	509-937	STRAP - door	1
	55-9173	SCREW - strap	1
	55-7089	FLATWASHER	2

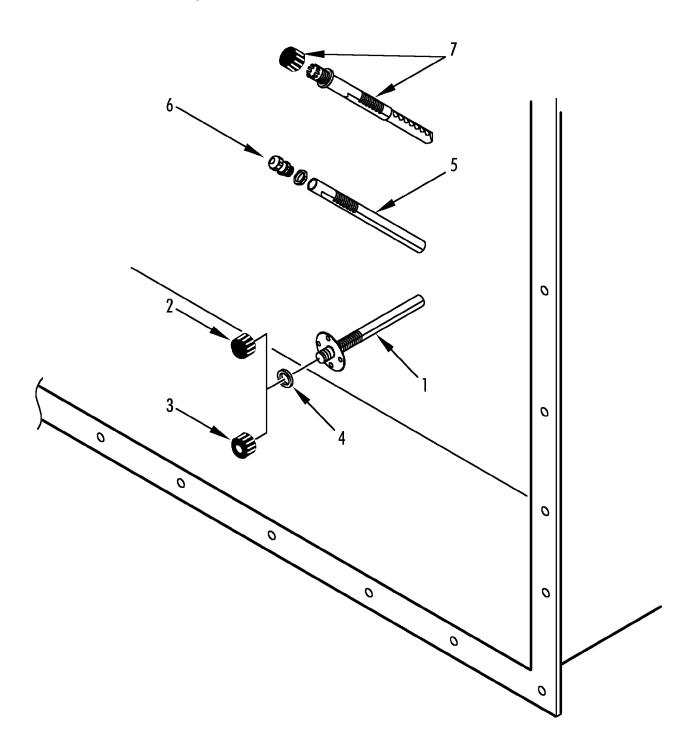

### SENSOR RETAINERS




REF	PART#	DESCRIPTION	QTY
1	91-8098	RETAINER - probe	1
2	509-964	CAP - retainer (w/o hole)	1
3	91-8702	CAP - retainer (w/ hole)	1
4	33-2960	GASKET - retainer	1
5	91-9754	POCKET - sensor	1
6	55-6409	CONNECTOR - sensor	1
7	91-9754	POCKET - sensor	2

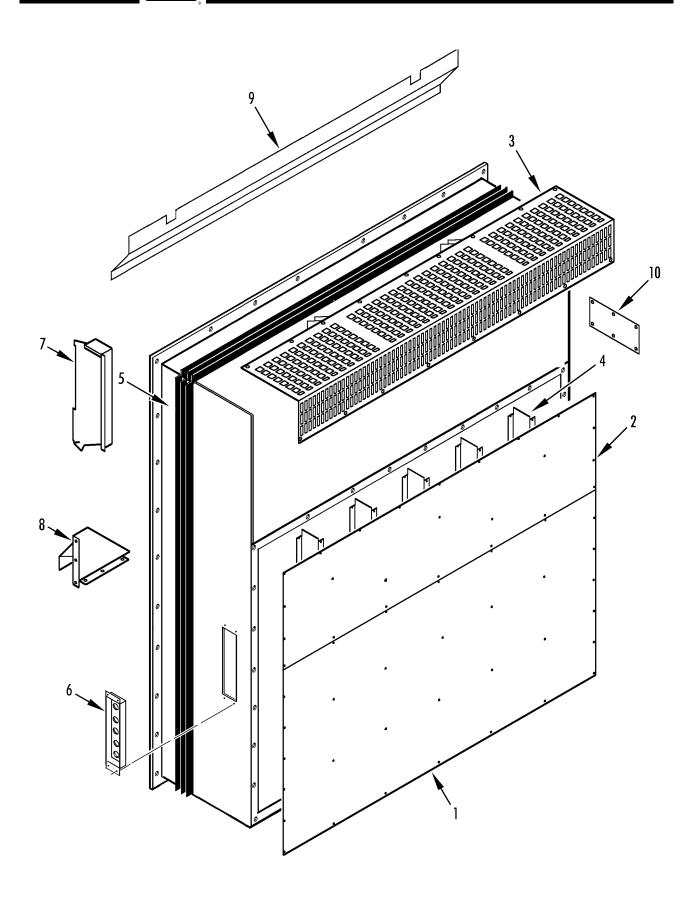


### **EVAPORATOR PANELS (2 FAN UNITS)**



REF	PART#	DESCRIPTION	QTY
1 98-5772		PLATE - rear (bottom)	1
	55-3136	RIVET - bottom rear plate	1
	98-6240	PLATE - rear (bottom, painted, 800B/C/D/E)	1
2	98-5924	PANEL - rear (top, CRR-40 800B/C/D)	1
	51-336	SCREW - panel	23
	55-9444	WASHER	23
3	98-5923	GRILLE - evaporator	1
	55-3136	RIVET - grille	17
4	92-427	CHANNEL - Z	5
	51-621	RIVET - channel	40
5	33-2983	GASKET - unit	1
6	91-9834	PANEL - USDA receptacle	1
	55-9055	RIVET - panel	4
7	91-9329	CHANNEL - air	1
	92-2773	CHANNEL - air (800E)	1
	203-389	SEALER - polyurethane	A/R
	55-8891	SCREW - channel	6
8	91-9330	INLET - fresh air	1
	55-9323	RIVET - inlet	10
	203-389	SEALER - polyurethane	A/R
9	91-9331	CHANNEL - fresh air	1
	55-9323	RIVET - channel	8
10	92-722	PLATE - cover	1
	55-9323	RIVET - plate	6

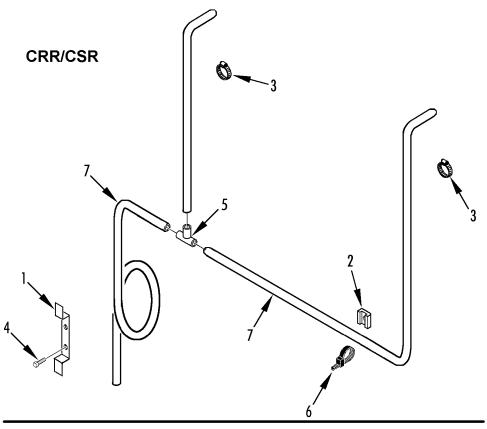

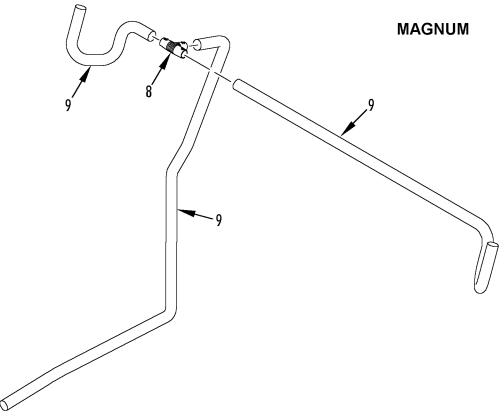



REF	PART#	DESCRIPTION	QTY
1	91-8244	BRACKET - hose	1
2	99-3281	MOUNT - cable tie	5
	55-2260	RIVET - mount	5
3	55-2686	CLAMP - hose	2
4	55-8891	SCREW - bracket	2
5	55-9208	CONNECTOR - T (hose)	1
6	55-2330	BANDWRAP	6
7	11-8983	HOSE - flex	1
8	11-9575	T-DRAIN	1
	11-9735	T-DRAIN (after 9/03)	1
9	11-9576	HOSE - flex (11/01 & after)	A/R





R134a

Compressor filled with ester oil

## **INGERSOLL** RAND

#### **WARNING FANS START AUTOMATICALLY**



7

DO NOT OPEN BELOW

0°C 32°F

150 m<sup>3</sup>/h

90 CFM

225 m<sup>3</sup>/h

135CFM

280 m<sup>3</sup>/h

165CFM

# HERMO KING





Hot Components Compressor discharge may be hot!

CO2 ADA PTEB


5 m²/h 3 CFM

10 m<sup>2</sup>/h 6 CFM

2 15 m³/1

BE 35 m /h

WARNING



12

°F

+75

-+65

-+60 - 455

-+50

-+45 -+40 -+35 ---+30+32

<del>-+85</del>+86

-+80

°C

## **WARNING**

**TURN POWER OFF BEFORE DISCONNECTING** DATALOGGER OR CONTROLLER.

11

**MANUAL CONTROL** 

5.

4. NOT IN LISE





3.

1. COOL 1







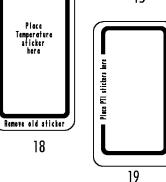



DATA PORT

USDA #1/ SPARE 1

SPARE \$

SPARE 3

MULP/

16



REF	PART#	DESCRIPTION	QTY
1	91-8475	NAMEPLATE - TK (crest)	1
2	91-8746	NAMEPLATE - Ingersoll Rand	1
3	92-863	NAMEPLATE - Ingersoll Rand	1
4	91-8756	NAMEPLATE - Thermo King	1
5	91-5459	NAMEPLATE - R134a	1
6	91-8694	NAMEPLATE - Warning, Fan Start	1
7	91-8695	NAMEPLATE - Warning, Hot Components	1
8	509-1653	NAMEPLATE - Temperature Conversion	1
9	91-7475	NAMEPLATE - Compressor	1
10	99-7834	NAMEPLATE - Caution	1
11	91-9382	NAMEPLATE - Warning	1
12	91-9383	NAMEPLATE - Main Relay Board	1
13	91-9384	NAMEPLATE - Main Relay Board	1
14	91-8107	NAMEPLATE - Air Exchanger	1
15	91-9441	NAMEPLATE - Air Exchanger	1
16	91-8734	NAMEPLATE - USDA Connections	1
17	92-1218	NAMEPLATE - Weld	1
18	92-2968	NAMEPLATE - Temp (front)	1
19	92-2969	NAMEPLATE - Front, Temp	1
20	92-2970	NAMEPLATE - Front, Star	1

104-689	6, 36, 38	41-3301	28	504-514	42, 46
104-691	8, 10, 36, 38	41-3302	38	504-602	36
11-8983	78	41-3303	28	504-922	28
11-9575	78	41-3317	54	504-970	42, 46
11-9576	78	41-3335	44, 48, 50, 52	504-977	28, 30
11-9735	78	41-3401	38	504-980	20, 32, 36
203-385	24	41-3402	42, 46	505-2582	70
203-389	76	41-3430	42, 46	505-408	42
203-393	24	41-3585	56	505-416	42
203-506	52	41-3586	56, 58	505-511	50
203-509	42, 46	41-3588	56, 58	505-566	42
203-516	26	41-3592	28	506-161	26
22-1051	26	41-3595	42, 46	506-165	26
22-1132	26	41-3596	42, 46	506-272	12
22-1161	26	41-3597	42, 46	506-364	24
22-1186	26	41-3598	42, 46	506-369	12, 16
22-398	26		42, 46		12, 16
		41-3599		506-370	
309-3066	44, 48	41-3601	52	506-374	12
33-2223	26	41-3602	50, 52	506-375	12, 16
33-2510	26	41-3603	50, 52	506-413	34
33-2944	60	41-3605	54	509-1153	26
33-2946	8, 10	41-3608	42, 46	509-1636	34
33-2950	12, 16, 20	41-3685	10, 38	509-1653	80
33-2960	74	41-3686	46	509-1654	62, 66, 70
33-2983	64, 68, 72, 76	41-3687	44, 48	509-1655	8
33-3001	68	41-3688	44, 48	509-1789	62
			44		62
33-3002	64, 68	41-3702		509-755	
33-3007	24	41-3703	44, 48	509-937	64, 68, 72
33-3043	42, 70	41-3851	42, 46	509-955	42
33-3044	10	41-4015	36, 38	509-964	74
33-3175	26	41-4016	56, 58	51-1418	52
33-3212	34	41-4018	10, 38	51-1419	52
33-3215	8, 10, 44, 48	41-4142	50, 52	51-1420	52
33-3513	26	41-4300	26, 36, 38	51-1423	46
33-367	6, 10	41-4527	48	51-1424	46
33-3837	48	41-4919	52	51-1426	60
33-3838	8, 10, 44, 48	41-5104	54	51-1427	60
					60
33-3968	62	41-5105	48	51-1428	
33-3969	72	41-5406	58	51-1429	24, 60
33-4255	60	41-5416	58	51-1430	24, 60
33-981	26	41-5420	32	51-1431	60
40-782	28	41-5460	20, 22, 28, 30	51-1462	24
40-791	36, 38	41-5635	30, 36, 38	51-1467	24
41-1976	36, 38	44-6381	48	51-1470	52
41-2399	28, 30	44-6777	52	51-1474	60
41-2406	46, 56	44-8688	42	51-167	20, 24, 48, 60, 66, 70
41-2503	36	44-9359	48	51-270	38
41-2583	46	45-1791	36, 38	51-336	46, 76
41-2603		45-1927	38	51-618	46
	32, 36				
41-2716	26	45-1942	38	51-619	48, 54, 60
41-2832	42, 46	45-1992	38	51-620	58, 62, 66, 70
41-2835	50, 52	45-2009	52	51-621	76
41-2838	30, 38	45-2010	46	55-1203	30
41-2853	58	502-240	26	55-137	20
41-2953	6, 36, 38	503-120	6	55-1827	24
41-2954	8, 36	503-230	26	55-2074	42, 46
41-3250	26	503-278	26	55-2159	26
41-3276	42	503-291	32	55-2173	26
41-3277	10, 38	504-1418	12, 16	55-2260	78
52.7	- 3,	20. 1110	- <b>, · -</b>	2000	

55-2296	12, 18, 22	55-8382	34	61-2048	22
55-2299	14, 18	55-8410	34	61-2049	22
55-2324	8	55-8559	6	61-2050	22
55-2330	78	55-8849	68, 70	61-2051	22
55-2331	20	55-8877	42, 62, 66	61-2219	20
55-2686	78	55-8882	62, 66	61-2220	20
55-2747	26	55-8891	6, 8, 10, 12, 16, 36, 68,		20
55-2864	62, 66, 70		76, 78	61-2222	20
55-2988	48	55-8893	6, 36, 62	61-2223	20, 38
55-3045	6, 68, 70	55-8903	8, 10	61-2224	20
55-3065	64, 68, 72	55-8904	10, 34, 62, 64	61-2225	20
55-3136	76	55-8907	8, 42	61-2226	20
55-3272	42, 46	55-8908	6, 8	61-2227	22
55-3490	26	55-8910	12, 16	61-2228	22, 38
55-4390	12, 16, 20	55-8911	20	61-2229	22
55-5025	26	55-8919	50, 52	61-2230	26
55-5257	26, 42, 46	55-8933	60, 62, 66, 70	61-2237	16
55-5885	42	55-8953	64, 68, 72	61-2285	18
55-5900	6, 10, 46	55-8955	34	61-293	16
55-6218	12, 16, 22	55-8991	30	61-294	18
55-6409	74	55-8992	20	61-295	18
55-6730	20, 24	55-9037	26	61-2990	16
55-6988	6, 8, 62, 64, 66, 68, 70,	55-9054	6, 12, 16, 20, 36, 44, 48,	61-3504	24
	72		60, 62, 66, 70	61-3525	24
55-6993	8, 10, 34, 62, 64, 66, 68,		76	61-3542	24
	72	55-9086	34	61-695	16
55-6994	44, 48, 62, 66, 70	55-9162	10	61-696	16
55-6995	12, 16, 42, 46, 66, 70	55-9164	36, 38	61-697	16
55-6997	6	55-9166	42, 46, 54, 72	61-698	12, 16
55-7008	62	55-9168	60, 66, 70	61-723	18
55-7033	44, 48, 50	55-9173	30, 64, 68, 72	61-724	18
	44, 48, 50	55-9208	78		16
55-7034				61-725	
55-7035	6, 20, 24, 62, 66, 68, 70	55-9211	56, 68	61-726	12, 16
55-7042	6, 20, 42, 46, 48, 54	55-9217	10	61-727	12, 16
55-7066	8, 10	55-9312	66, 70	61-786	12, 20
55-7075	10, 20, 36, 40, 44, 54,	55-9313	70	66-1090	12
	60, 68, 70	55-9322	46, 56, 58	66-1845	26
55-7085	8, 10, 20, 72	55-9323	56, 58, 76	66-2457	26
55-7089	64, 68, 72	55-9346	46	66-4788	24
55-7169	44, 48	55-9380	8, 62, 66	66-6607	26
55-7170	36, 40	55-9392	50, 52	66-6610	24, 26
55-7172	10, 36, 40, 42, 46, 60, 62		50, 52	66-7182	24, 26
55-7339	6, 10, 60, 70	55-9395	50, 52	66-7183	26
55-7341	8, 20, 34, 62, 64, 66, 68,		54	66-7543	24
	70, 72	55-9401	44	66-8467	12, 16, 20
55-7342	6, 10, 20	55-9402	56	66-8811	24
55-7344	36, 40	55-9444	42, 46, 50, 52, 76	66-9015	16
55-7354	62, 66, 70	55-9445	44	66-9032	14, 18, 28, 30, 36, 38
55-7357	36, 38, 62	55-9541	60, 70, 72	66-9035	18
55-7360	20, 26	55-9615	34	66-9069	12
55-7372	54	55-9759	46	66-9071	12
55-7378	54	60-285	12, 16, 20	66-9072	14
55-7391	72	61-1305	16, 20, 24	66-9075	14, 18
55-7404	54	61-1307	18	66-9084	14
55-7407	50	61-1316	16	66-9085	12, 16
55-7504	20	61-149	28	66-9087	14
55-7864	34	61-154	34	66-9125	12, 16, 20
55-8075	36	61-156	12	66-9149	26
55-8316	20	61-1626	22	66-9159	30

66-9163	12, 16, 32, 38	91-8134	62, 66, 70	92-239	42, 46
66-9164	14, 18	91-8140	36, 38	92-243	56
66-9165	12	91-8142	36, 38	92-244	42
66-9166	14	91-8148	66	92-270	38
66-9167	12, 16, 28, 36, 38	91-8195	62, 66, 70	92-2773	76
66-9168	12, 16, 36, 38	91-8199	62, 66, 70	92-2775	10
66-9210	14	91-8244	78	92-2777	38
66-9214	12, 16	91-8252	60	92-2779	10
66-9285	14	91-8256	62, 72	92-2968	80
66-9377	26	91-8466	8, 10	92-2969	80
66-9412	12	91-8467	36, 38	92-2970	80
66-9413	12	91-8475	64, 68, 72, 80	92-2995	62, 66, 70
66-9414	12	91-8663	60	92-3446	52
66-9447	24	91-8664	68, 72	92-3554	52
66-9577	14	91-8694	80	92-411	60
66-9867	28	91-8695	80	92-427	76
66-9868	18	91-8702	74	92-440	60
66-9874	12, 16, 20	91-8728	64, 68, 72	92-5520	48
66-9875	12, 16	91-8734	80	92-722	76
66-9890	34	91-8746	80	92-860	42, 46
66-9891	34	91-8756	80	92-863	80
66-9900	12, 16	91-9039	64, 68, 72	92-891	72
67-1532	14, 18	91-9040	62, 70	98-5199	66
67-1533	12	91-9041	62, 66, 70	98-5291	66
67-1558	10, 14, 18	91-9048	60	98-5303	62
67-1575	12, 16, 20, 24	91-9272	46	98-5312	66
67-1632	12, 16	91-9272	54	98-5332	68
67-1650	16	91-9273	10	98-5359	68
67-1673	18	91-9329	76	98-5359	68
67-1806	18	91-9329	76 76	98-5453	62
67-1923	10, 22	91-9331	76 76	98-5454	
	20				44, 48
67-1943		91-9380	50, 52, 62 50, 53	98-5455	62
77-1401	6, 8, 10, 36, 38	91-9381	50, 52	98-5475	10
77-1498	6, 8, 10, 36, 38	91-9382	50, 52, 80	98-5479	68
77-2467	60	91-9383	50, 80	98-5768	10 76
78-1079	6	91-9384	80	98-5772	76 10
78-1117	10	91-9441	80	98-5918	10
78-1197	6	91-9504	70	98-5919	10
78-1268	8	91-9678	62	98-5920	68
8102-743	12, 16, 20, 26, 36, 38	91-9754	38, 74	98-5921	72 76
845-1898	50, 52	91-9820	64	98-5923	76 70
845-1909	50	91-9833	42, 46	98-5924	76
845-2834	42	91-9834	56, 58, 76 6, 70	98-5925	6, 62, 66, 70
91-5459	80	91-9912	6, 70	98-5932	72
91-6627	24	91-9913	54	98-6213	10
91-6628	24	91-9949	68	98-6236	66, 70
91-6988	36	91-9950	68	98-6237	68
91-7475	80	91-9951	68	98-6238	72 70
91-759	24	91-9952	68	98-6239	72 70
91-8098	74	91-9976	50	98-6240	76
91-8100	60	92-1218	80	98-6518	66, 70
91-8102	60	92-1682	26	98-6657	10
91-8103	60	92-2208	8	98-6658	68
91-8104	60	92-2209	8	98-6663	72 50
91-8105	60	92-2331	10	98-6784	52
91-8106	60	92-2332	10	99-3281	78
91-8107	60, 80	92-236	42, 46	99-3685	46, 56
91-8108	62, 66, 70	92-237	42, 46	99-4931	10
91-8133	66	92-238	42, 46	99-5966	12, 16

A	CHAIN - cap <b>46, 56</b>	FUSE <b>42, 46, 48, 52</b>
ACTUATOR 32	CHANNEL - air <b>76</b>	•
ADAPTER - discharge 26	CHANNEL - fresh air <b>76</b>	G
ADAPTER - hose <b>60</b>	CHANNEL - Z <b>76</b>	GASKET <b>12</b> , <b>16</b> , <b>20</b> , <b>32</b>
ADAPTER - push-on 50, 52	CLAMP 20	GASKET - air vent 60
ADAPTER - service 26	CLAMP - hook <b>64</b> , <b>68</b> , <b>72</b>	GASKET - controller 52
_	CLAMP - hose <b>78</b>	GASKET - cover <b>42, 48</b>
В	CLAMP - sensor 30	GASKET - cylinder head 26
BANDWRAP <b>78</b>	CLAMP - to tube 20	GASKET - discharge 26
BANDWRAP - valve 20	CLAMP - tube 24	GASKET - discharge & suction 26
BATTERY <b>42, 46</b>	CLIP - relay <b>42</b> , <b>46</b>	GASKET - door <b>64, 68</b>
BATTERY - lithium <b>52</b>	COIL 30	GASKET - evaporator door <b>62</b> , <b>68</b> , <b>72</b>
BEARING - opposite end <b>6</b> , <b>8</b> , <b>10</b> , <b>36</b> ,	COIL - condenser 12, 16, 20	GASKET - gauge <b>34</b>
38	COIL - evaporator <b>10, 14, 18, 22</b>	GASKET - orifice 6
BEARING - shaft end 6, 8, 10, 36, 38	COIL - KVQ 36	GASKET - retainer <b>74</b>
BEARING - slide 60	COIL - liquid line valve 30	GASKET - sight glass 26
BLOCK - coil 10	COIL - valve <b>20, 22, 28</b> COLLAR <b>26</b>	GASKET - suction 26
BLOCK - terminal <b>42</b> , <b>44</b> , <b>46</b> , <b>48</b>	COMPRESSOR <b>12</b> , <b>16</b> , <b>20</b> , <b>26</b> , <b>36</b> , <b>38</b>	GASKET - unit <b>64</b> , <b>68</b> , <b>72</b> , <b>76</b>
BOARD - relay <b>42</b> , <b>46</b>	Cond Fan On/Off <b>46</b>	GASKET - valve 26 GASKET - valve plate 26
BOOT - circuit breaker 42	CONNECTOR <b>48</b> , <b>50</b> , <b>52</b> , <b>58</b>	GAUGE - pressure <b>34</b>
BOOT - switch <b>42</b> , <b>46</b>	CONNECTOR 48, 30, 32, 38  CONNECTOR - cross 44, 48	GRILLE - condenser <b>62</b> , <b>66</b> , <b>70</b>
BOX - control 36, 38, 44, 48	CONNECTOR - closs 44, 46  CONNECTOR - harness & sensor 10	GRILLE - evaporator <b>76</b>
BOX - junction 26	CONNECTOR - liquid tite 6, 38, 42, 46	GRILLE - humidity <b>62</b>
BRACKET <b>42</b> , <b>46</b>	CONNECTOR - plug <b>42</b> , <b>46</b> , <b>56</b>	GRIP - harness 8
BRACKET - air vent handle <b>60</b>	CONNECTOR - sensor 74	GROMMET 8, 10, 44, 48
BRACKET - battery 48	CONNECTOR - T 78	GROMMET - harness 6
BRACKET - cable restraint 36, 38	CONTACTOR 54	GUARD - compressor 34
BRACKET - diagram 42, 46	CONTROLLER 50, 52	CONTRO COMPTOCOCT CT
BRACKET - evaporator motor 8	COUPLING 18, 26	Н
BRACKET - frame <b>62</b> , <b>66</b> , <b>70</b>	COUPLING - outlet 24	HANDLE - air vent 60
BRACKET - handle <b>60</b> BRACKET - heater <b>36, 38</b>	COVER <b>64</b> , <b>68</b> , <b>72</b>	HANGER - dehydrator <b>12, 16, 20</b>
BRACKET - hose <b>78</b>	COVER - tube 10	HARNESS 32
BRACKET - left 10		HARNESS - condenser fan 6, 36, 38
BRACKET - motor 8, 10	D	HARNESS - evap fan 10
BRACKET - power cable 38	DEHYDRATOR <b>12</b> , <b>16</b> , <b>20</b>	HARNESS - evaporator 38
BRACKET - right 10	DISK - air vent 60	HARNESS - evaporator fan 8, 38
BRACKET - safety hook <b>72</b>	DISPLAY - controller 52	HARNESS - evaporator fans & heaters
BREAKER - circuit <b>42, 54</b>	DOOR - control box 50, 52	36
BUSHING 14, 18	DOOR - controller 42, 46	HARNESS - fan 10
, .	DOOR - evaporator <b>62, 66, 70</b>	HARNESS - fan & heater 10
C	DOOR - heater section <b>62</b> , <b>66</b>	HARNESS - KVQ <b>36</b>
CABLE - battery 44, 48	_	HARNESS - sensor 30, 38
CABLE - compressor 36, 38	E	HEAT - exchanger 20
CABLE - compressor power 26	ELBOW - suction 14	HEAT EXCHANGER 12, 16
CABLE - connecting 50, 52	ELBOW - valve 34	HEATER <b>36</b> , <b>38</b>
CABLE - power 36, 38	EXTRUSION 70	HINGE <b>62</b> , <b>66</b> , <b>70</b>
CABLE - retriever plug 42, 46	F	HINGE - air vent 60
CABLE & PLUG - retriever 58		HINGE - cover 42, 46
CAP - adapter <b>26</b>	FAN - condenser 6	HINGE - door <b>50</b> , <b>52</b>
CAP - discharge valve <b>26</b>	FAN - evaporator 8, 10	HINGE - evap door <b>62</b> , <b>66</b> , <b>70</b>
CAP - dust 56	FITTING - harness 26, 42, 46	HOLDER - fuse <b>42</b> , <b>46</b>
CAP - dust cover 24	FITTING - high side 24	HOOK - strap <b>64</b> , <b>68</b> , <b>72</b>
CAP - fitting 24, 26	FITTING - service 26	HOSE - flex 78
CAP - plug <b>42</b> , <b>46</b>	FLATWASHER 6, 8, 10, 12, 16, 20,	HOUSING - evaporator 10 HOUSING - relief valve 68
CAP - receptacle 58	24, 26, 36, 38, 40, 44, 46, 48, 54, 60, 62, 64	1003ING - IEIIEI VAIVE 00
CAP - retainer <b>74</b>	46, 48, 54, 60, 62, 64, 66, 68, 70, 72	1
CAP - suction valve 26	FRAME - condenser <b>62</b> , <b>66</b> , <b>68</b> , <b>72</b>	INDICATOR 24
CAP - tube <b>10</b>	TO WILL CONGENION OF, UU, UU, IZ	INDIONI ON ET

INLET - fresh air <b>76</b>	NAMEPLATE - Warning 80	RIVET - grille <b>76</b>
INSERT - threaded 8	NAMEPLATE - Warning, Fan Start 80	RIVET - hinge <b>62, 66, 70</b>
INSULATOR 42, 46	NAMEPLATE - Warning, Hot	RIVET - housing 68
INSULATOR - hinge 50, 52	Components 80	RIVET - inlet <b>76</b>
INSULATOR - latch <b>62</b> , <b>66</b> , <b>70</b>	NAMEPLATE - Warning, Power Off <b>52</b>	
1100E/11011 laten 02, 00, 10	<del>-</del>	RIVET - mount <b>78</b>
K	NAMEPLATE - Weld <b>80</b>	
	NUT 6, 8, 10, 20, 26, 34, 36, 40, 42,	RIVET - panel <b>56</b> , <b>58</b> , <b>76</b>
KEEPER - door latch 62, 66, 70	44, 46, 48, 50, 52, 54,	RIVET - plate <b>76</b>
KEY - fan 8	60, 62, 66, 70	RIVET - plug <b>42, 46</b>
KEYPAD <b>50, 52</b>	NUT - captive <b>6, 68, 70</b>	RIVET - port 68
KIT - reed suction 26	NUT - controller 50, 52	RIVET - receptacle 58
KIT - repair <b>28, 30</b>	NUT - fitting 6	RIVET - shroud 10
KIT - sensor 36, 38	NUT - grip 8	
KIT - valve plate 26	NUT - hexagon 20	S
KNOB <b>62</b> , <b>66</b> , <b>70</b>	NUT - speed <b>42</b> , <b>46</b>	SCREW <b>54, 60</b>
KVQ - valve <b>12</b> , <b>16</b>	NUT - wing <b>60</b>	SCREW - adapter 26
RVQ - valve 12, 10	NOT - Wing OU	
L	0	SCREW - battery 46
		SCREW - bracket 8, 10, 12, 16, 36, 40,
LABEL - compressor oil 26	OIL - compressor 26	42, 46, 62, 66, 70, 72, 78
LATCH - door <b>62, 66, 70</b>	ORIFICE - condenser 68, 70	SCREW - cable <b>36, 38</b>
LOCKWASHER 6, 8, 10, 20, 24, 26,	ORIFICE - condenser fan 6	SCREW - channel <b>76</b>
36, 40, 42, 46, 50, 52,	O-RING <b>24</b>	SCREW - clamp 20, 24, 30, 64, 68, 72
54, 60		SCREW - coil 10, 12, 16, 20
·	P	SCREW - collar 26
M	PANEL - rear <b>76</b>	SCREW - compressor 20, 26
MODEM 52	PANEL - USDA receptacle 38, 56, 58,	SCREW - control box <b>36</b> , <b>44</b> , <b>48</b>
MODEM - RMM 50	76	SCREW - cover <b>10</b> , <b>64</b> , <b>68</b> , <b>72</b>
MOTOR - 2-speed 8	PIN - hinge <b>60</b> , <b>62</b> , <b>66</b> , <b>72</b>	SCREW - dehydrator 20
MOTOR - condenser 38	PLATE - air vent <b>60</b>	SCREW - door <b>50</b> , <b>52</b> , <b>62</b> , <b>66</b> , <b>70</b>
MOTOR - condenser fan 6, 36	PLATE - bottom <b>54</b>	SCREW - gauge 34
MOTOR - evaporator fan 36	PLATE - cable storage 62, 66, 70	SCREW - grille <b>62, 66, 70</b>
MOTOR - fan <b>10, 38</b>	PLATE - cover <b>76</b>	SCREW - guard <b>34</b>
MOUNT - cable tie <b>78</b>	PLATE - end terminal 44, 48	SCREW - handle <b>60</b>
	PLATE - guard <b>64, 68, 72</b>	SCREW - hanger 20
N	PLATE - rear 76	SCREW - hinge 42, 46, 50, 52, 62, 66,
NAMEPLATE - Air Exchanger 80	PLUG - fusible 24	70
NAMEPLATE - arrow 10	PLUG - outlet 24	SCREW - keeper <b>62, 66, 70</b>
NAMEPLATE - Caution 42, 46, 80	PLUG - power <b>36, 38</b>	SCREW - motor <b>6</b> , <b>8</b> , <b>10</b>
NAMEPLATE - Compressor 80	PLUG - seal <b>42</b> , <b>44</b> , <b>46</b>	SCREW - mtg vent <b>60</b>
NAMEPLATE - Controller Warning <b>50</b>	PLUG - square hole <b>56</b>	SCREW - orifice <b>6</b> , <b>68</b> , <b>70</b>
NAMEPLATE - Data Download USDA	POCKET - sensor <b>26</b> , <b>38</b> , <b>74</b>	SCREW - panel <b>76</b>
56	PORT - injection 68	SCREW - plate <b>60</b> , <b>62</b> , <b>64</b> , <b>66</b> , <b>68</b> , <b>70</b> ,
NAMEPLATE - Do Not Open Below 0 C	PORT - purge 68	72
60	PROBE - head temperature 36	SCREW - plate to box <b>54</b>
NAMEPLATE - Front, Star 80	PROBE - high temperature 26	SCREW - rail <b>44, 48</b>
NAMEPLATE - Front, Temp 80	PROTECTOR - edge 60	SCREW - relay board <b>42, 46</b>
NAMEPLATE - Ingersoll Rand 80	_	SCREW - section 8
NAMEPLATE - Main Relay Board 80	R	SCREW - strap <b>64, 68, 72</b>
NAMEPLATE - On/Off 46	RAIL - din <b>54</b>	SCREW - tank 20, 24
NAMEPLATE - on/off 42	RAIL - terminal block 44, 48	SCREW - transformer <b>54</b>
NAMEPLATE - Phase Select 50, 52	RECEPTACLE 56, 58	SEAL - door 62
NAMEPLATE - R134a 80	RELAY - power <b>42</b> , <b>46</b>	SEALER - locking 24
NAMEPLATE - Relay Board <b>50</b>	RETAINER - probe <b>74</b>	SEALER - polyurethane <b>76</b>
NAMERIATE Temporature	RETAINER - screw 50, 52	SEALER - removable 24
NAMEPLATE - Temperature	RIVET - bottom rear plate <b>76</b>	SENSOR - compressor 38
Conversion 80	RIVET - bracket <b>42</b> , <b>46</b> , <b>48</b>	SENSOR - humidity <b>30</b> , <b>36</b> , <b>38</b>
NAMEPLATE - Thermo King 80	RIVET - cap <b>56, 58</b>	SENSOR - PT100 <b>58</b>
NAMEPLATE - TK <b>64</b> , <b>68, 72, 80</b>	RIVET - channel <b>76</b>	SHROUD - evaporator 8
NAMEPLATE - USDA Connections 80	RIVET - connector 56	SIGHT GLASS - oil 26

#### INDEX ALPHABETICAL BY DESCRIPTION

SPACER - clamp 30 TUBE - valve to exchanger 12, 16 SPRING 60, 62, 66, 70 TUBE - valve to tee 12, 16, 18 SPRING - heater 36, 38 V STRAP - door 64, 68, 72 VALVE - ball 24 STRIP - gasket 12, 16 SWITCH - high temperature 36 VALVE - check 12, 16, 20 SWITCH - hpco 26, 38 VALVE - cpr 16 SWITCH - Unit On/Off 46 VALVE - dehumidifier 28, 36 SWITCH - unit on/off 42 VALVE - discharge 26 VALVE - expansion 12, 16, 22 Т VALVE - KVQ 20, 32, 38 TANK - condenser 12, 16, 20 VALVE - liquid injection 38 TANK - water cooled condenser 24 VALVE - liquid line 28 T-DRAIN 78 VALVE - pressure regulator 16 TEE 12, 16, 18, 22 VALVE - pressure relief 68 TERMINAL - stop clip 44, 48 VALVE - Schrader 34 THERMOSTAT - defrost termination VALVE - shutoff 12, 16, 20 VALVE - solenoid 12, 14, 16, 18, 22, 38 TRANSFORMER 54 30, 36, 38 TRAY - high voltage 44, 48 VALVE - solenoid liquid injection 20 TRIM - edge guard 10 VALVE - solenoid, liquid injection 38 **TUBE 30** VALVE - suction 26 TUBE - bottom 12, 16, 20 VENT - air 60 TUBE - check valve to dehydrator 20 W TUBE - condenser to condenser 24 TUBE - condenser to filter 24 WASHER 6, 12, 16, 34, 36, 42, 50, 52, TUBE - condenser to indicator 12, 16 60, 62, 64, 66, 68, 70, TUBE - dehydrator to valve 16 72, 76 WASHER - dome 6, 68, 70 TUBE - discharge 12, 16 TUBE - discharge valve to compressor WASHER - insulating 20, 42, 46, 50, WASHER - insulator 20, 44, 48, 54, 60 TUBE - discharge, coil to compressor 20 TUBE - drier to heat exchanger 20 TUBE - equalizer 14, 18, 22 TUBE - evaporator to exchanger 12, 16 TUBE - exchanger to dehydrator 12, 16 TUBE - exchanger to KVQ 12, 16 TUBE - expansion valve to inlet 22 TUBE - expansion valve to tee 22 TUBE - gauge 34 TUBE - heat exchanger to KVQ 20 TUBE - indicator to dehydrator 12 TUBE - KVQ to compressor 12, 16, 20 TUBE - liquid injection 22 TUBE - liquid to evaporator 22 TUBE - solenoid to KVQ 12, 16 TUBE - solenoid to tee 14, 18 TUBE - stub 24 TUBE - suction to evaporator 20 TUBE - tee to coil 14, 18 TUBE - tee to distributor 22 TUBE - tee to valve 14, 18 TUBE - temperature sensor to compressor 12, 16 TUBE - top 12, 16, 20 TUBE - valve to coil 14, 18 TUBE - valve to dehydrator 24 TUBE - valve to elbow 14

#### INDEX ALPHABETICAL BY DESCRIPTION