

SERVICE PARTS LIST for **69NT40-511-300 to 399**

(excluding -310, -344 & -359)
Container Refrigeration Units



SERVICE PARTS LIST CONTAINER REFRIGERATION UNIT

MODELS 69NT40-511-300 to 399

(excluding -310, -344 & -359)

TABLE OF CONTENTS

INTROD	DUCTION	ii
CONFIG	GURATION IDENTIFICATION	ii
OPTION	N DESCRIPTIONS	ii
1. Q	UICK LIST - Clamps, Filter-Drier, Fuses, Ty-Raps, and Wire Terminals	1
2. RI	EFRIGERATION UNIT ASSEMBLY	2
2.1	Refrigeration Unit - Area Locator	2
2.2	Rain Gutters	2
2.3	Handles	4
2.4	Thermometer Port	5
2.5	Control Box Door	6
2.6	Control Box - Aluminum or Composite	8
2.7	Control Box - Standard Electrical Components, Remote Monitoring and Hourmeter	10
2.8	Control Box - Evaporator Fan Capability, EBS and EDS, EBS Only and Cond. Fan Switch	12
2.9	Control Box - Controller Module Section and Software Cards	14
2.10	Control Box - Display Module and Communications Interface Module Section	16
2.11	Condenser Fan Motor, Condenser Coil, and Bolted or Hinged Grille Section	18
2.12	Compressor Tubing Section	20
2.13	Receiver Section	22
2.14	Water-Cooled Condenser	24
2.15	STS and SRS Section	26
2.16	Thermostatic Expansion Valve (TXV), Alco or Hermetic	27
2.17	Upper Fresh Air Makeup and Access Panels	28
2.18	Lower Fresh Air Makeup Vent	30
2.19	Evaporator Fan Assembly and Transfresh	32
2.20	Evaporator Coil Section	34
2.21	USDA Option, Probe Kits	36
2.22	Back Panel Assembly - Aluminum Bolted	38
2.23	Back Panel Assembly - Aluminum Bolted with USDA Door	40
2.24	Back Panel Assembly - Aluminum Bolted with Probe Access Door	42
2.25	Back Panel Assembly - Aluminum Hinged	44
2.26	Back Panel Assembly - Stainless Steel Hinged	46
2.27	Partlow Temperature Recorder	48
2.28	Saginomiya Temperature Recorder	50
2.29	Electronic Partlow Temperature Recorder	52
2.30	Temperature Recorder - None	52
2.31	Compressor Mounting, Guards, Crankcase Heater and Drain Line Heater Components	54
2.32	Compressor Gauges and Transducers	56
2.33	Cable Restraint Components (Bungy Cords and J-Hooks)	58
2.34	Voltage Cables (460V and 230V)	60

i T-285PL

TABLE OF CONTENTS (Continued)

	2.35	Autotransformer (With and Without CB2 and Transformer Bridge Unit)	62
	2.36	Labels and Decals	64
3.	IN ⁻	TERROGATOR AND ACCESSORIES	66
	3.1	Datareader	66
	3.2	Interrogator Receptacle	68
4.	CC	DMPRESSOR - MOTOR ASSEMBLY	70
	4.1	Service Replacement Compressor	71
	4.2	Terminal Mounting and Junction Box Group	71
	4.3	Service Valve group	71
	4.4	Compressor - Motor Body Group	71
	4.5	Pump End Group	72
	4.6	Crankshaft, Rod and Piston Group	72
	4.7	Valve Plate Group	73
	4.8	Gasket Set	73
5.	CC	ONTROLLER/DATACORDER	74
	5.1	Controller/DataCorder Configuration	74
6.	TC	OOLS	75
PA	ART NU	JMBER INDEX	Index 1

T-285PL ii

INTRODUCTION

1 INTRODUCTION

The Carrier Transicold model 69NT40-511-300 series units are of lightweight aluminum frame construction, designed to fit in the front of a container and serve as the container front wall.

2 CONFIGURATION IDENTIFICATION

Unit identification information is provided on a plate located near the compressor. The plate provides the unit model number, the unit serial number and the unit parts identification number (PID). The model number identifies the overall unit configuration while the PID provides information on specific optional equipment, factory provision to allow for field installation of optional equipment and differences in detailed parts.

Configuration identification for the models covered herein are provided in the Carrier Transicold Container Unit Identification Matrix through www.container.carrier.com.

3 OPTION DESCRIPTIONS

Various options may be factory or field fitted to the base unit. These options are listed in the tables and described in the following subparagraphs.

3.1 Battery

The refrigeration controller may be fitted with standard replaceable batteries or rechargeable battery pack.

3.2 Dehumidification

The unit may be fitted with a humidity sensor. This sensor allows setting of a humidity set point in the controller. In the dehumidification mode the controller will operate to reduce internal container moisture level.

3.3 Control Box

The control box may be of aluminum or composite material and each type box may be fitted with a lockable door.

3.4 Display Module

The unit may be fitted with a backlit Liquid Crystal Display (LCD) or a Light Emitting Diode (LED) Display.

3.5 Temperature Readout

The unit may be fitted with suction and discharge temperature sensors. The sensor readings may be viewed on the controller display.

3.6 Pressure Readout

The unit may be fitted with suction and discharge pressure gauges or suction and discharge transducers or no pressure readout. The transducer readings may be viewed on the controller display.

3.7 USDA

The unit may be supplied with fittings for additional temperature probes which allow recording of USDA Cold Treatment data by the integral DataCORDER function of the Micro-Link refrigeration controller.

3.8 Interrogator

Units that use the DataCORDER function are fitted with interrogator receptacles for connection of equipment to download the recorded data. Two receptacles may be fitted, one accessible from the front of the container and the other mounted inside the container (with the USDA receptacles).

3.9 Remote Monitoring

The unit may be fitted with a remote monitoring receptacle. This item allows connection of remote indicators for COOL, DEFROST and IN RANGE. Unless otherwise indicated, the receptacle is mounted at the control box location

3.10 Communications.

The unit may be fitted with a communications interface module. The communications interface module is a slave module which allows communication with a master central monitoring station. The module will respond to communication and return information over the main power line. Refer to the ship master system technical manual for further information.

3.11 Compressor

The unit is fitted with a single speed reciprocating compressor.

3.12 Condenser Coil

The unit may be fitted with a 2 row or 4 row coil using nominal 3/8 inch tubing, or the unit may be fitted with a 3 row coil using 7mm tubing. The required refrigerant charge is different for each coil.

3.13 Autotransformer

An autotransformer may be provided to allow operation on 190/230, 3phase, 50/60 hertz power. The autotransformer raises the supply voltage to the nominal 380/460 volt power required by the base unit. The autotransformer may also be fitted with an individual circuit breaker for the 230 volt power.

If the unit is fitted with an autotransformer and communications module, the autotransformer will be fitted with a transformer bridge unit (TBU) to assist in communications.

3.14 Temperature Recorder

One of three temperature recording devices may be fitted to the unit. The devices include a mechanical recorder manufactured by Partlow Corporation, a mechanical recorder manufactured by Saginomiya Corporation, and an electronic recorder manufactured by Partlow Corporation.

3.15 Gutters

Rain gutters may be fitted over the control box and recorder section to divert rain away form the controls. The different gutters include standard length bolted gutters, extended length gutters and riveted gutters.

iii T-285PL

3.16 Handles

The unit may be fitted with handles to facilitate access to stacked containers. These handles may included fixed handles (located at the sides of the unit) and/or a hinged handle at the center (attached to the condenser coil cover).

3.17 Thermometer Port

The unit may be fitted with ports in the front of the frame for insertion of a thermometer to measure supply and/or return air temperature. If fitted, the port(s) will require a cap and chain.

3.18 Water Cooling

The refrigeration system may be fitted with a water cooled condenser. The condenser is constructed using copper-nickel tube for sea water applications. The water cooled condenser is in series with the air cooled condenser replaces the standard unit receiver. When operating on the water cooled condenser, the condenser fan is deactivated by either a water pressure switch or condenser fan switch.

3.19 Back Panels

Back panel designs that may be fitted include panels of aluminum and stainless steel. Panels may be fitted with access doors and/or hinge mounting.

3.20 460 Volt Cable

Various power cable and plug designs are available for the main 460 volt supply. The plug options tailor the cables to each customers requirements.

3.21 230 Volt Cable

Units equipped with an autotransformer require an additional power cable for connection to the 230 volt source. Various power cable and plug designs are available. The plug options tailor the cables to each customers requirements.

3.22 Cable Restraint

Various designs are available for storage of the power cables. These options are variations of the compressor section front cover.

3.23 Upper Air (Fresh Air Make Up)

The unit may be fitted with an upper fresh air makeup assembly. The fresh air makeup assembly is available with a Vent Positioning Sensor (VPS) and may also be fitted with screens.

3.24 Lower Air (Fresh Air Make Up)

The unit may be fitted with a lower fresh air makeup assembly. These assemblies are supplied in two designs, the standard design and the macro design. The openings may also be fitted with screens.

3.25 Controlled Atmosphere

The units may be fitted with the TransFresh option.

For information on the TransFresh system, contact TransFresh Corporation, P.O. Box 1788, Salinas CA 93902

3.26 Arctic Mode

To improve operation in cold ambients, the unit may be fitted with a crankcase heater and/or a condensate drain line heater. The crankcase heater is operated, before start-up, to warm the compressor oil and boil off any liquid refrigerant that may be present in the crankcase. The drain line heater is operated to prevent freezing of the evaporator condensate drain system.

3.27 Humidification

The unit may be equipped with the Carrier Transicold NatureFresh humidity management system. The system includes a water tank, water pump, water heater and atomizer along with various control and monitoring devices. It is designed to add additional moisture into the supply air for control of cargo moisture level. A separately bound manual covering operation and parts for the CTD NatureFresh System is available, see the following chart.

Manual	Equipment	Type of
Number	Covered	Manual
T-297	Humidity Management System Option	Technical Supplement

3.28 Power Correction

The unit may be fitted with a set of power factor correction capacitors to assist in correction of imbalance in current draw by the compressor.

3.29 Evaporator

Evaporator section options include a semi-hermetic thermal expansion valve, a hermetic thermal expansion valve and two sizes of heat exchangers.

3.30 Evaporator Fan Operation

Two evaporator fan motor operation systems are available. On units with Normal Evaporator Fan Operation, opening of an evaporator fan internal protector will shut down the unit. On units equipped with Single Evaporator Fan Capability, additional contactors are installed to allow the unit to continue to operate on a single fan.

3.31 Labels

Operating Instruction and Function Code listing labels will differ depending on the options installed. For example, additional operating instructions are required to describe start-up of a unit equipped with an autotransformer. Where the labels are available with additional languages, they are listed in the parts list.

T-285PL iv

3.32 Plate Set

Each unit is equipped with a tethered set of wiring schematic and wiring diagram plates.

3.33 Controller

Replacement controllers may be ordered as a universal un-configured controller (without configuration software) or configured.

3.34 Stepper Drive

All the units covered by this manual have suction modulating valves which act to control system capacity. Units indicated as being fitted with "stepper drive" have digital control motors fitted to the suction modulating valve to open and close the valve in steps as required.

3.35 Condenser Grille

Two styles of condenser grilles are available, direct bolted grilles and hinged grilles.

3.36 Emergency Bypass

The unit may be equipped with switches to allow emergency bypass of the controller. The EMERGENCY BYPASS switch functions to bypass the controller in the event of controller failure. The EMERGENCY DEFROST switch functions to bypass the all controls and place the unit in the defrost mode.

OPTION LEGEND

Genera	
-	Feature Not Applicable
X	!!
	Features that apply to model
Р	Factory Installation of Equipment to Allow Field Installation
Battery	Codes
S	Standard (throw away) Cells
R	Rechargeable Cells
Contro	I Box Codes
Α	Aluminum Box w/out Door Lock
AL	Aluminum Box with Door Lock
С	Composite Box Without Door Lock
CL	Composite Box With Door Lock
Display	/ Module Codes
1	LCD Display
2	LED Display
Pressu	re Readout Codes
G	Factory Installed Pressure Gauges
Т	Factory Installed Pressure Transducers
SG	Factory Installed Suction Pressure Gauge
USDA/	Cable Codes
D/-	Option D Only
V/-	Option V Only
D/1	Option V/Option 1
V/1	Option V/Option 1
D/2	Option V/Option 2
V/2	Option V/Option 2

Interrogator Codes				
1	Left Straight Mount			
2	Right Mount			
3	Box Mount			
4	Left Mount			
5	Left Angled Mount			
6	Right Mount			
Comm	unications Codes			
1	Standard			
2	High Data Rate			
3	Chipset Modem			
4	Low Data Rate			
Compr	essor Codes			
1R	Single Speed Reciprocating			
Conde	nser/Receiver Codes			
3	Three Row (7mm) Coil			
4	Four Row Coil			
5	Five Row Coil			
AutoTi	AutoTransformer Codes			
1	Transformer Fitted			
2	Transformer With CB2 Fitted			
3	Transformer With CB2 and Receptical			
4	Transformer With CB2 and Transformer Bridging Unit			

Tempe	rature Recorder Codes
1	Partlow Without Probe
2	Partlow With Probe
3	Battery Operated Parlow Without Probe
4	Battery Operated Parlow With Probe
5	Saginomiya Without Probe
6	Saginomiya With Probe
7	Standard Electronic Partlow
8	Special Electronic Parlow
9	No Temperature Recorder
10	Electronic Partlow (Both)
Gutter	Codes
1	Standard Length Bolted Gutters
3	Extended Length Gutters
4	Rivieted Gutters
Handle	Codes
1	Two Side and One Center
2	Two Side
3	One Center
4	One Right Side and Two Center
	ometer Port Codes
1	Supply Air Port
2	Return Air Port
В	Both Ports
water 0	Cooling Codes Water Pressure Switch
F	Condenser Fan Switch
•	anel Codes
1	Bolted Panels
2	Bolted Panels With USDA Door
3	Bolted Panels With Probe Access Door
4	Hinged Panels
5	Hinged Stainless Steel Panels
	It Cable Codes
1	Option1
2	Option 2
3	Option 3
4	Option 4
5	Option 5
6	Option 6
	·
7	Option 7
8	Option 8
9	Option 9
10	Option 10

230\/ol	t Cable Codes
_	
1	Option 1
2	Option 2
3	Option 3
4	Option 4
5	Option 5
6	Option 6
7	Option 7
8	Option 8
9	Option 9
Cable I	Restraint Codes
1	Cable Door
2	Left Bungy Cord Only
3	J-Hook
4	Left and Right Bungy Cord
5	Left Bungy Cord With Left Extended Guard
6	Left & Right Bungy Cords With Extended Guards
Upper	Air Codes
1	No Upper Fresh Air
2	Upper Fresh Air Installed
3	Upper Fresh Air Installed With Screen
4	Upper Fresh Air Installed with Vent Position Sensor (VPS)
Lower	Air Codes
1	No Lower Fresh Air
2	Lower Fresh Air Installed
3	Lower Fresh Air With Screen Installed
Contro	olled Atmosphere
1	TransFresh
2	Carrier Transicold Everfresh System
Arctic	Mode Codes
С	Crankcase Heater
L	Drainline Heater
В	Both Crankcase Heater & Drainline Heater
Conde	nser Grille Codes
В	Bolted Grille
Н	Hinged Grille
	3

T-285PL vi

Evaporator Codes			
1	Original Coil with Semi-Hermetic TXV & Standard Heat Exchanger		
2	Coil With Hermetic TXV & Standard Heat Exchanger (4 Heaters)		
3	Coil With Hermetic TXV & Large Heat Exchanger (4 Heaters)		
5	Coil With Hermetic TXV & Standard Heat Exchanger (6 Heaters)		
Evaporator Fan Codes			
1	Normal Evaporator Fan Operation		
2	Single Evaporator Fan Operation Capability		

Label Codes			
1	English		
2	English / Spanish		
3	English / French		
4	English / Korean		
5	English / Traditional Chinese		
6	English / Simplifed Chinese		
7	English / Japanese / Chinese		
8	English/German		
Emerg	Emergency Bypass Codes		
В	Emergency Bypass & Emergengy Defrost		
EB	Emergency Bypass Only		

Ordering Instructions

All orders and inquiries for parts must include: Parts Identification Number (PID), Model Number, Unit Serial Number, Part Number, Description of part as shown on list and Quantity required. Address all correspondence for parts to the following address:

CARRIER TRANSICOLD DIVISION Replacement Components Group, TR-20 P.O. Box 4805, Syracuse, New York 13221 or FAX to: (315) 432-3778

Letter Designations

The following letter designations are used to classify parts throughout this list:

A/R= As Required N/A =Not Available

= Not shown in illustration NS

NSS

Not sold separately - Order next higher assembly or kit Parts Identification Number - essential to identify unit configuration. PID

 PL = Purchase Locally


Stainless Steel - 300 Series unless otherwise specified. SST

Suffix SV - added to part number designates service replacement part.

vii T-285PL


I QUICK LIST - CLAMPS, F	ILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS AND ENT UNIT FRAMES
PART NO.	DESCRIPTION
34-00373-51	Clamp, Tube, 1/4 - SST
34-00373-53	Clamp, Tube, 3/8 - SST
34-00373-05	Clamp, Tube, 1/2 - SST
34-00373-07	Clamp, Tube, 5/8 - SST
34-00373-59	Clamp, Tube, 3/4 - SST
34-00373-11	Clamp, Tube, 7/8 - SST
34-00373-65	Clamp, Tube, 1-1/8 - SST
34-00373-88	Clamp, Tube, 1-1/4 - SST
34-00373-69	Clamp, Tube, 1-3/8 - SST
34-00373-71	Clamp, Tube, 1-1/2 - SST
22-00066-01	Connector, Butt End, Wire Range – 22 to 16 AWG
22-00066-02	Connector, Butt End, Wire Range – 16 to 14 AWG
22-00066-03	Connector, Butt End, Wire Range – 12 to 10 AWG
22-00041-00	Connector, Closed End, Wire Range – 22 to 14 AWG
22-00041-02	Connector, Closed End, Wire Range – 18 to 10 AWG
14-00311-02SV	Filter-Drier
22-02336-02	Fuse, 5 Amp (F1 & F2)
22-02336-04	Fuse, 10 Amp (F3)
22-01140-01	Ring Terminal, #6, Wire Range - 12 to 10 AWG
22-01140-02	Ring Terminal, #10, Wire Range - 12 to 10 AWG
22-01140-04	Ring Terminal, 3/8, Wire Range – 12 to 10 AWG
22-00119-04	Ring Terminal, 1/4, Wire Range – 12 to 10 AWG
22-00120-04	Ring Terminal, #10, Wire Range - 16 to 14 AWG
22-00120-07	Ring Terminal, 5/16, Wire Range – 16 to 14 AWG
22-00121-07	Ring Terminal, #10, Wire Range - 22 to 16 AWG
22-01139-04	Ring Terminal, 3/8, Wire Range – 16 to 14 AWG
22-01141-01	Spade Terminal, 1/4 x 5/16, Wire Range – 16 to 14 AWG
22-00595-01	Spade Terminal, 3/8, Wire Range – 12 to 10 AWG
22-01106-00	Spiral Wrap, 1/4 Diameter x 25 ft. lg.
22-01107-00	Spiral Wrap, 1/2 Diameter x 25 ft. lg.
66U1-3803	Tube, Heat Shrink, 1/4 ID x 2-1/8 lg.
66U1-3803-1	Tube, Heat Shrink, 1/2 ID x 2-3/4 lg.
44-01043-05	Ty-Raps, 5-1/2 inches lg.
44-01043-07	Ty-Raps, 11.00 inches lg.
22-50007 Series	Wire Markers
07-00345-00	Sealant, Pipe (Used to seal fittings on unit with R-134a)
07-00343-00	Cleaner, Coil
76-00313-00	Paint, Compressor Touch-Up, Blue
69NT-43-468	Unit Frame , Service Replacement
69NT-43-468-1	Contact Carrier Replacement Components Group for application


1

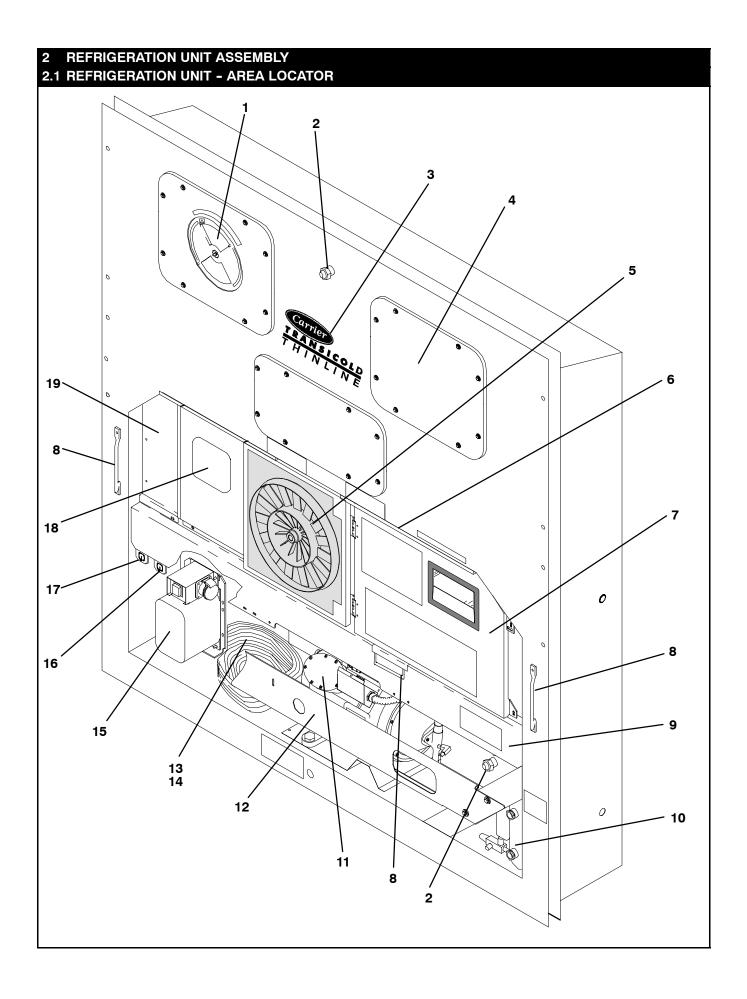


2.1 REFRIGERATION UNIT - AREA LOCATOR				
Item	Section Number	Area Description		
1	Refer to Section 2.17	Upper Fresh Air Makeup & Access Panels		
2	Refer to Section 2.4	Thermometer Port		
3	Refer to Section 2.36	Labels and Decals		
4	Refer to Section 2.19	Evaporator Fan Assembly		
5	Refer to Section 2.11	Motor, Condenser Fan		
6	Refer to Section 2.2	Rain Gutters		
7	Refer to Section 2.5 - 2.10	Box, Control		
8	Refer to Section 2.3	Handles		
9	Refer to Section 2.11	Coil, Condenser		
10	Refer to Section 2.13 or 2.14	Receiver or Water-Cooled Condenser		
11	Refer to Sections 2.31 or 4	Compressor		
12	Refer to Section 2.31	Guard, Compressor		
13	Refer to Section 2.34	Cable, Power		
14	Refer to Section 2.34	Plug, Power		
15	Refer to Section 2.35	Autotransformer		
16	Refer to Section 2.19	Transfresh		
17	Refer to Section 3	Interrogator and Accessories		
18	Refer to Section 2.27 - 2.30	Temperature Recorder		
19	Refer to Section 2.18	Lower Fresh Air Makeup		


3

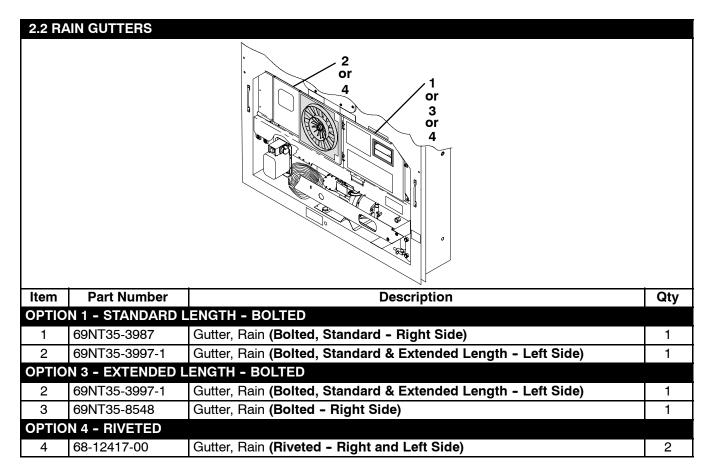

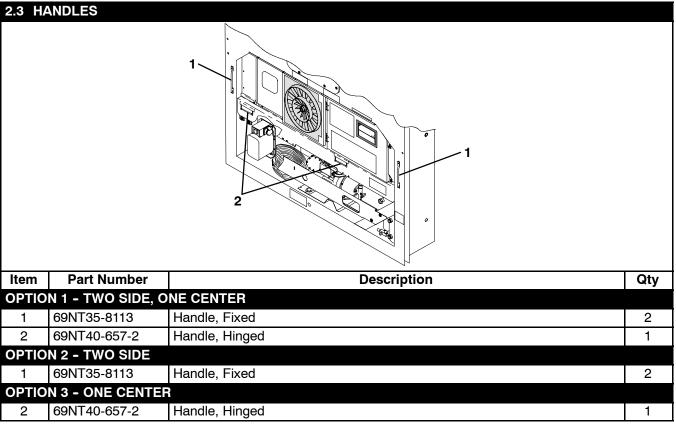

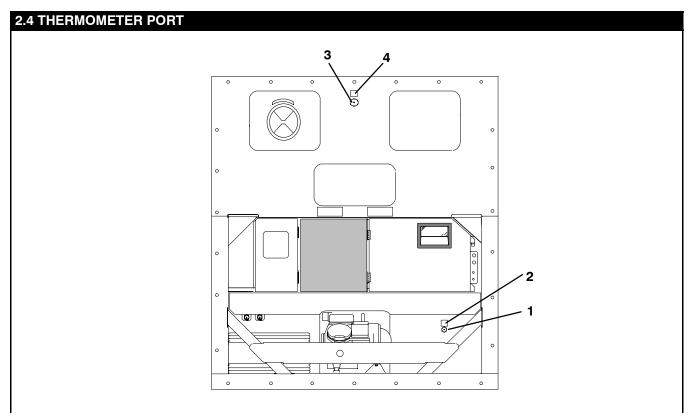


Item	Part Number	Description	Qty	
OPTION 1 - SUPPLY AIR PORT				
1	66U1-8662	Cap & Chain Assembly	1	
2	62-10557-00	Label	1	
OPTIO	OPTION 2 - RETURN AIR PORT			
3	66U1-8662	Cap & Chain Assembly	1	
4	62-10557-00	Label	1	
OPTIO	OPTION B - SUPPLY AND RETURN PORTS			
1 & 3	66U1-8662	Cap & Chain Assembly	2	
2 & 4	62-10557-00	Label	2	

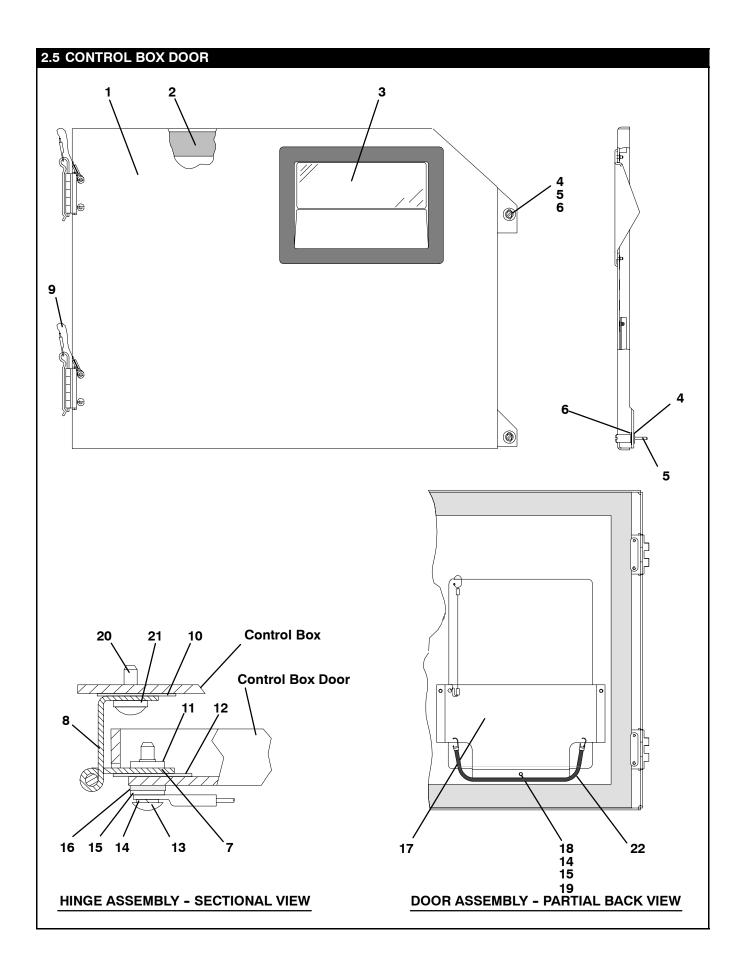

ltem	Part Number	Description	Qty
OPTIO	ON 1, LCD DISPLAY	·	
1	69NT42-688-7	Door Assembly, LCD Display, Includes:	1
2	42-00270-02	Gasket, Door	1
3	58-04366-00SV	Window and Gasket Assembly, Control Box Door - Lexan	1
4	34-06169-00	Washer, Retaining - SST	2
	66U1-6811-8	Screw, Retaining, Panel, 0.300-0.625 - SST	2
5	66U1-6811-15	Screw, Retaining, Wing, 0.300-0.625 - SST	2
6	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	4
7	44-00300-01	Hinge, Half	1
8	44-00300-02	Hinge, Half	1
9	44-00300-03	Pin Assembly, with Tether	1
10	58-04101-01	Protector, Mylar (Hinge) (Not Needed with Composite Box)	2
11	34-01167-01	Retainer, Nut	2
12	58-04101-00	Protector, Mylar (Hinge)	2
13	66U1-2403-1	Screw, Truss Head, #10-24 x 3/4 lg SST	4
14	66U1-5331-3	Washer, Lock, #10 - SST	7
15	66U1-5321-8	Washer, Flat, #10 - SST	7
16	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
17	68-13577-00	Pocket, Placard	1
18	34-00665-09	Locknut, Hex Head, #10-24 - SST	3
19	34-06107-00	Rivet, Blind, 1/8 Diameter, Grip Range - 0.188-0.250	3
20	66U1-5371-7	Screw, #10-24 x 1/2 lg SST	4
21	66U1-5321-8	Washer, Flat, #10 - SST	4
22	58-04346-00	Door Strap Kit	1
	ON 2, LED DISPLAY		•
1	79-01911-00	Door Assembly, LED Display, Includes:	1
2	42-00270-02	Gasket, Door	1
	69NT35-5022-6	Window	1
3	42-00611-00	Foam, Double Coated	1
4	34-06169-00	Washer, Retaining - SST	2
	66U1-6811-8	Screw, Retaining, Panel, 0.300-0.625 - SST	2
5	66U1-6811-15	Screw, Retaining, Wing, 0.300-0.625 - SST	2
7	44-00300-01	Hinge, Half	1
8	44-00300-02	Hinge, Half	1
9	44-00300-03	Pin Assembly, with Tether	1
11	34-01167-01	Retainer, Nut	2
13	66U1-2403-1	Screw, Truss Head, #10-24 x 3/4 lg SST	4
	34-00663-09	Washer, Lock, #10 - SST	4
14	0 + 00000-00	Washer, Flat, #10 - SST	4
14	66LI1-5321-8	T T T T T T T T T T	1 7
15	66U1-5321-8		1
15 16	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
15 16 17	34-06053-05 58-04389-00	Washer, Mylar, 0.205 ID x 0.600 OD Pocket, Placard	1
15 16	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	

7

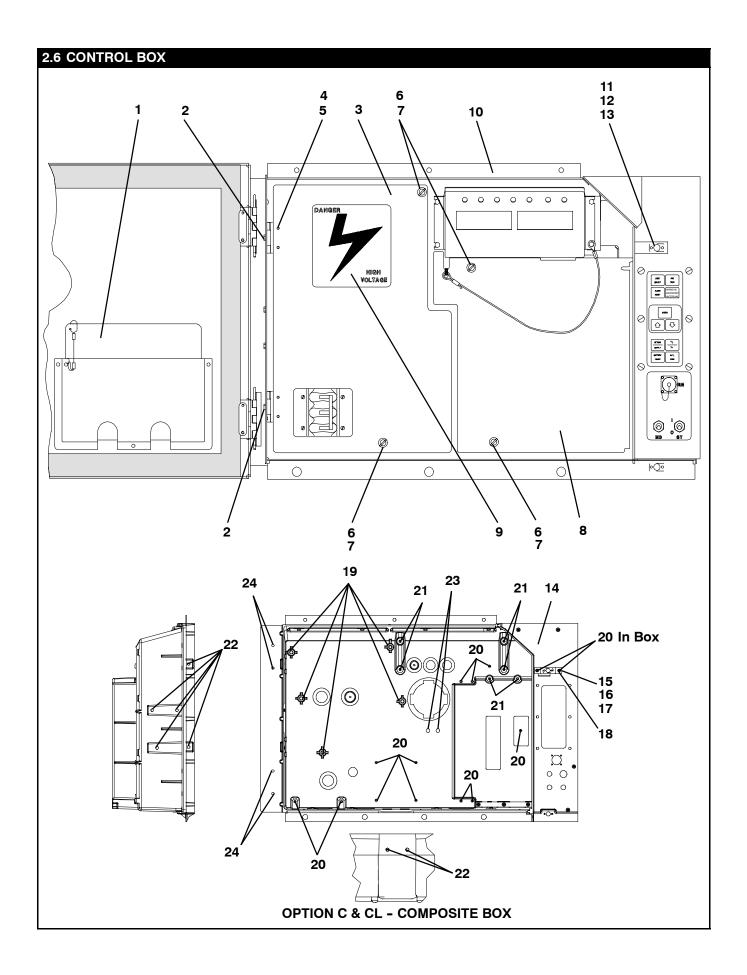

2.6 CO	2.6 CONTROL BOX			
Item	Part Number	Description	Qty	
1	-	Plate, Schematic & Diagram (Refer to T-300, Container Unit Matrix)	1	
2	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2	
3	69NT43-125-1	Shield, High Voltage (Plastic) - Includes:	1	
4	44-00343-00	Hinge	2	
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16 - SST	4	
6	34-50015-00	Stud & Retainer Package - Includes:	4	
NS	NSS	Stud, Fastener	1	
NS	NSS	Retainer, Fastener Stud	1	
7	34-06139-03	Receptacle	4	
8	69NT43-124-4SV	Shield, Low Voltage (Lexan) - With Tether	1	
9	62-03957-02	Label, Danger-High Voltage	1	
OPTIO	N A & AL - ALUMIN	NUM CONTROL BOX		
10	58-04668-21	Control Box, Replacement for Standard Aluminum	1	
11	68-12791-00	Bracket, Lock (See Note 1)	1	
12	34-01142-01	Receptacle, Retaining	1	
12	34-01152-02	Receptacle, Retaining (See Note 2)	1	

NOTES

Rivet, Blind, 1/8 Diameter, Grip Range - 3/16 - 1/4 (See Note 2)

34-00928-01

34-00928-03

13

1. The bracket is welded to the control box - order Item #11 for locking plate.
2. When Item #11 is used, 34-01152-02 and rivets, 34-00928-03 are to be used in the upper door location.

Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8

OPTIC	ON C & CL - COMP	OSITE CONTROL BOX	
14	58-04668-00	Control Box, Replacement for Standard Composite	1
4.5	69NT35-6272	Bracket, Non-Locking	1
15	69NT35-2287	Bracket, Locking (See Note 3)	1
16	34-01142-01	Receptacle, Retaining	1
17	34-00928-01	Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8	2
17	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/18 - 3/16 (See Note 4)	2
18	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
NS	76-00724-00SV	Crack, Chip and Hole Repair Kit	1
NS	76-50084-00SV	Insert Repair Kit - Includes:	1
19	34-06231-01	Insert - 17.53 x 9.91 mm (.690 x .390 in) 1/4-20 Threads - NSS	10
20	34-06231-03	Insert - 15.88 x 6.35 mm (.625 x .250 in) 10-24 Threads - NSS	10
21	34-06231-04	Insert - 25.15 x 7.54 mm (.990 x .297 in) 10-24 Threads - NSS	10
22	34-06231-05	Insert - 10.16 x 9.53 mm (.400 x .375 in) 10-24 Threads - NSS	10
23	34-06231-06	Insert - 12.70 x 9.91 mm (.500 x .390 in) 1/4-20 Threads - NSS	10
24	34-06231-07	Insert - 9.53 x 6.76 mm (.375 x .266 in) 10-24Threads - NSS	10
NS	02-00082-00	Durabond Epoxy - NSS	1
NS	07-00390-00	Static Mixing Tube - NSS	1
NS	07-00391-00	Application Gun - Required for Insert Repair	1


NOTES

9

- 3. The bracket is bolted to the control box order 69NT35-2287 for locking bracket.
 4. When 69NT35-2287 is used, 34-00928-02, rivet, is to be used in the upper door location.

2


2

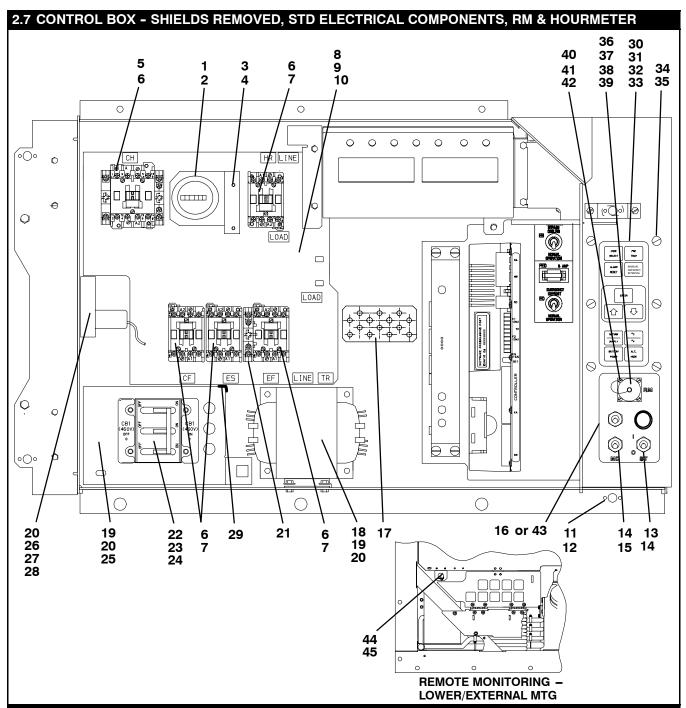


HOURMETER			
Item	Part Number	Description	Qty
1	66U1-3823	Hourmeter	1
2	66U1-6651-15	Screw, Pan Head, #4-40 x 3/4 lg SST	3
3	68-12496-00	Bracket, Hourmeter	1
4	66U1-5381	Screw, Hex Head, #10-24 x .50 lg SST	2
5	10-00431-07	Contactor, Compressor (CH) (30 Amp)	1
6	34-06243-00	Screw, Pan Head, (Thread Cutting) #8-32 x 3/4 lg SST	10
7	10-00431-06	Contactors, (CF), (HR) & (EF & ES) (12 Amp)	4
8	68-13427-00SV	Panel, Contactor - Includes:	1
9	58-00967-00	Spacer (Used with sheet metal control box only)	5
10	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg SST	4

11 34-00928-01 Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8 6	2.7 CC	NTROL BOX - SH	IELDS REMOVED, STANDARD ELECTRICAL COMPONENTS (Continued	d)
12 34-01142-01 Receptacle 10-01129-07 SV Switch, Toggle (On-Off) 10-01129-10 Switch, Toggle (On-Off) 10-01129-10 Switch, Toggle (MDS) (if equipped) 58-04145-01 Plate, Switch (Start Only) NT-1200 and Up 68-14798-00 Plate, Switch (Start and MDS), NT-1200 and Up A 68-14798-05 Plate, Switch (Start and MDS), NT-1200 and Up A 69NT41-982-3 Plate, Ground 17 69NT41-982-3 Plate, Ground 18 10-00332-21SV Transformer, Base Unit 19 66U1-5371-7 Screw, Hex Head, #10-24 x 1/2 Ig SST A 66U1-5321-8 Washer, Flat, #10 - SST A 10-00431-02 Contact, Auxiliary A 10-00431-03 Circuit Breaker - 460 vac, 25 Amp, (CB1) A 10-00431-03 Circuit Breaker - 460 vac, 25 Amp, (CB1) A 10-00431-03 Circuit Breaker - 460 vac, 25 Amp, (CB1) A 10-00431-03 Transformer, Current Sensing (CS) A 10-00431-03 Transformer, Current Sensin			· · · · · · · · · · · · · · · · · · ·	Qty
13 10-01129-07 SV Switch, Toggle (On-Off) 14 6801-9752 Seal, Bushing 15 10-01129-10 Switch, Toggle (MDS) (if equipped) 15 8-04145-01 Plate, Switch (Start Only) NT-1200 and Up 16 88-14796-00 Plate, Switch (Start and Defrost LED), NT-1200 and Up 17 68-14796-02 Plate, Switch (Start and Defrost LED), NT-1200 and Up 18 10-00332-21SV Transformer, Base Unit 19 66U1-5371-7 Screw, Hex Head, #10-24 x 1/2 lg SST 20 66U1-5321-8 Washer, Flat, #10 - SST 21 10-00431-02 Contact, Auxiliary 22 34-00663-07 Washer, Lock, #6 - SST 23 66U1-6914 Screw, Pan Head, #6-32 x 3/8 lg SST 24 66U1-6914 Screw, Pan Head, #6-32 x 3/8 lg SST 25 69NT35-6278 Bracket, Circuit Breaker 26 10-00439-00 Transformer, Current Sensing (CS) 27 66U1-5321-8 Washer, Flat, #10 - SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Transformer, Current Sensing (CS) 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) 30 79-01706-05SV Pad, Key Pad Mounting 31 NSS Gasket (Between Key Pad Ind Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 46 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 47 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 48 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 49 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 40 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 41 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 42 2-02341-00 Receptacle, Remote Monitoring (RM) 43 68-14796-03 Plug, Remote Monitoring (RM) 44 22-01899-00 Plug, Remote Monitoring (RM) 45 68-014796-06 Plate, Switch, with RM NT-1200 and up 46 68-01480-03 Plate, Switch, with RM NT-1200 and up 47 68-01480-00 Receptacle, Remote Monitoring (RM) 48 68-14796-06 Plate, Switch, with RM And MDS, NT-1200 and up 48 68-14796-06 Plate, Switch, with RM And MDS, NT-1200 and up 58 68-01480-00 Receptacle, Remote Monitorin	11	34-00928-01	Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8	6
14 66U1-9752 Seal, Bushing	12	34-01142-01	Receptacle	1
15	13	10-01129-07 SV	Switch, Toggle (On-Off)	1
S8-04145-01	14	66U1-9752	Seal, Bushing	1
68-14796-00	15	10-01129-10	Switch, Toggle (MDS) (if equipped)	1
168-14796-02		58-04145-01	Plate, Switch	A/R
68-14/96-05 Plate, Switch (Start and Defrost LEL), N1-1200 and Up A	40	68-14796-00	Plate, Switch (Start Only) NT-1200 and Up	A/R
17	10	68-14796-02	Plate, Switch (Start and Defrost LED), NT-1200 and Up	A/R
18		68-14796-05	Plate, Switch (Start and MDS), NT-1200 and Up	A/R
19	17	69NT41-982-3	Plate, Ground	1
20	18	10-00332-21SV	Transformer, Base Unit	1
21 10-00431-02 Contact, Auxiliary 22 34-00663-07 Washer, Lock, #6 - SST 24 66U1-6651-4 Screw, Pan Head, #6-32 x 3/8 lg SST 25 69NT35-6278 Bracket, Circuit Breaker - 460 vac, 25 Amp, (CB1) 25 69NT35-6278 Bracket, Circuit Breaker 26 10-00439-00 Transformer, Current Sensing (CS) 27 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) Ay 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad Plate Assembly and Connector) 37 NSS Gasket (Between Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 34-06053-05 Washer, Mylar, 0.205 lD x 0.600 OD 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 34-06053-05 Washer, Mylar, 0.205 lD x 0.600 OD 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 36 22-02341-00 Receptacle, Remote Monitoring (RM) Secupital Composite Society	19	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	A/R
22 34-00663-07 Washer, Lock, #6 - SST 23 66U1-7842-13 Circuit Breaker - 460 vac, 25 Amp, (CB1) 24 66U1-6651-4 Screw, Pan Head, #6-32 x 3/8 lg SST 25 69N735-6278 Bracket, Circuit Breaker 26 10-00439-00 Transformer, Current Sensing (CS) 27 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 36 22-02341-00 Receptacle, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00667-05 Nut, Self Locking, #4-40 - SST 42 34-0067-06 Plate, Switch, with RM 43 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch, with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	20	66U1-5321-8	Washer, Flat, #10 - SST	A/R
23 66U1-7842-13 Circuit Breaker - 460 vac, 25 Amp, (CB1) 24 66U1-6651-4 Screw, Pan Head, #6-32 x 3/8 lg SST 25 69NT35-6278 Bracket, Circuit Breaker 26 10-00439-00 Transformer, Current Sensing (CS) 27 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 36 22-02341-00 Receptacle, Remote Monitoring 37 22-02368-00 Plug, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-0848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 43 44 68-14796-06 Plate, Switch, with RM 44 68-14796-06 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch, with RM and MDS, NT-1200 and Up 76 REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 76 Receptacle, Remote Monitoring (RM)	21	10-00431-02	Contact, Auxiliary	1
24 66U1-6651-4 Screw, Pan Head, #6-32 x 3/8 lg SST 25 69NT35-6278 Bracket, Circuit Breaker 26 10-00439-00 Transformer, Current Sensing (CS) 27 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 78 CE-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00867-05 Nut, Self Locking, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 43 68-14796-06 Plate, Switch, with RM M 68-14796-06 Plate, Switch, with RM And MDS, NT-1200 and Up 68-14796-06 Plate, Switch, with RM And MDS, NT-1200 and Up 78 REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION)	22	34-00663-07	Washer, Lock, #6 - SST	4
25 69NT35-6278 Bracket, Circuit Breaker 26 10-00439-00 Transformer, Current Sensing (CS) 27 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD REMOTE MONITORING (STANDARD LOCATION) 36 22-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 43 45 68-14796-03 Plate, Switch, with RM M M A G8-14796-06 Plate, Switch, with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 68-14796-06 Receptacle, Remote Monitoring (RM)	23	66U1-7842-13	Circuit Breaker - 460 vac, 25 Amp, (CB1)	1
10-00439-00 Transformer, Current Sensing (CS) 127 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) Ay	24	66U1-6651-4	Screw, Pan Head, #6-32 x 3/8 lg SST	4
27 66U1-5371-10 Screw, Hex Head, #10-24 x 1.00 lg SST 28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad Mounting 34 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD REMOTE MONITORING (STANDARD LOCATION) 36 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM 43 68-14796-06 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	25	69NT35-6278	Bracket, Circuit Breaker	1
28 66U1-5321-8 Washer, Flat, #10 - SST 29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) A/ 30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34 66U1-2403 Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) 68 22-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 Ig SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM 68-14796-06 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	26	10-00439-00	Transformer, Current Sensing (CS)	1
29 66CH1-1172-46 Trim, Flexible (85 Feet Long, Cut to Length) A 30 79-01706-05SV Pad, Key - Includes:	27	66U1-5371-10	Screw, Hex Head, #10-24 x 1.00 lg SST	2
30 79-01706-05SV Pad, Key - Includes: 31 NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 67-100 Standard Location 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100 100	28	66U1-5321-8	Washer, Flat, #10 - SST	2
NSS Gasket (Between Key Pad Plate Assembly and Connector) 32 NSS Gasket (Between Key Pad and Key Pad Plate Assembly 33 NSS Plate Assembly, Key Pad Mounting 34-06227-00 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box) 68 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 68 REMOTE MONITORING (STANDARD LOCATION) 36 22-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 43 43 68-14796-03 Plate, Switch, with RM Ay 68-14796-06 Plate, Switch, with RM And MDS, NT-1200 and Up Ay REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) Receptacle, Remote Monitoring (RM) 56 56 56 56 56 56 56 5	29	66CH1-1172-46	Trim, Flexible (85 Feet Long, Cut to Length)	A/R
NSS	30	79-01706-05SV	Pad, Key - Includes:	1
33 NSS	31	NSS	Gasket (Between Key Pad Plate Assembly and Connector)	1
34-06227-00 Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Composite Box) 66U1-2403 Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD REMOTE MONITORING (STANDARD LOCATION) 36 22-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 Ig SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM 43 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	32	NSS	Gasket (Between Key Pad and Key Pad Plate Assembly	1
34 66U1-2403 Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) 35 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD REMOTE MONITORING (STANDARD LOCATION) 36 22-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring 17 38 22-02341-01 Cap and Tether, Receptacle Assembly 17 39 66U1-6835 Gasket, Remote Monitoring Receptacle 17 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 Ig SST 24 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 24 42 34-00667-05 Nut, Self Locking, #4-40 - SST 24 43 68-14796-03 Plate, Switch, with RM Ay 68-14796-06 Plate, Switch, with RM and MDS, NT-1200 and Up Ay REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM) 1	33	NSS	Plate Assembly, Key Pad Mounting	1
Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Box) Screw, Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan Head, #10-24 X 3/4 Ig SST (Use with Aluminum Pan	24	34-06227-00	Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Composite Box)	6
REMOTE MONITORING (STANDARD LOCATION) 36 22-02341-00 Receptacle, Remote Monitoring (RM) 1 37 22-02368-00 Plug, Remote Monitoring 1 38 22-02341-01 Cap and Tether, Receptacle Assembly 1 39 66U1-6835 Gasket, Remote Monitoring Receptacle 1 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 2 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 2 42 34-00667-05 Nut, Self Locking, #4-40 - SST 2 43 58-04145-00 Plate, Switch, with RM A/ 43 68-14796-03 Plate, Switch, with RM NT-1200 and up A/ 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up A/ REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) A/ 44 22-01889-00 Receptacle, Remote Monitoring (RM) 1	34	66U1-2403	Screw, Pan Head, #10-24 X 3/4 lg SST (Use with Aluminum Box)	6
36 22-02341-00 Receptacle, Remote Monitoring (RM) 37 22-02368-00 Plug, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 43 58-04145-00 Plate, Switch, with RM 43 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)				6
37 22-02368-00 Plug, Remote Monitoring 38 22-02341-01 Cap and Tether, Receptacle Assembly 39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 lD - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 43 58-04145-00 Plate, Switch, with RM 43 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	REMO	OTE MONITORING	(STANDARD LOCATION)	
38	36	22-02341-00	Receptacle, Remote Monitoring (RM)	1
39 66U1-6835 Gasket, Remote Monitoring Receptacle 40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM 43 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	37	22-02368-00		1
40 34-00848-10 Screw, Round Head, #4-40 x 5/8 lg SST 41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	38	22-02341-01	Cap and Tether, Receptacle Assembly	1
41 66U1-5321-6 Washer, Flat, 0.125 ID - SST 42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	39	66U1-6835	Gasket, Remote Monitoring Receptacle	1
42 34-00667-05 Nut, Self Locking, #4-40 - SST 58-04145-00 Plate, Switch, with RM Av. 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	40	34-00848-10	Screw, Round Head, #4-40 x 5/8 lg SST	4
58-04145-00 Plate, Switch, with RM A/ 68-14796-03 Plate, Switch, with RM NT-1200 and up A/ 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up A/ REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	41	66U1-5321-6	· · ·	4
43 68-14796-03 Plate, Switch, with RM NT-1200 and up 68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	42		•	4
68-14796-06 Plate, Switch with RM and MDS, NT-1200 and Up REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)				A/R
REMOTE MONITORING (LOWER LEFT/EXTERNAL LOCATION) 44 22-01889-00 Receptacle, Remote Monitoring (RM)	43		·	A/R
44 22-01889-00 Receptacle, Remote Monitoring (RM)			•	A/R
	REMO	OTE MONITORING	(LOWER LEFT/EXTERNAL LOCATION)	
45 69NT40-222 Bracket	44	22-01889-00	Receptacle, Remote Monitoring (RM)	1
	45	69NT40-222	Bracket	1


11

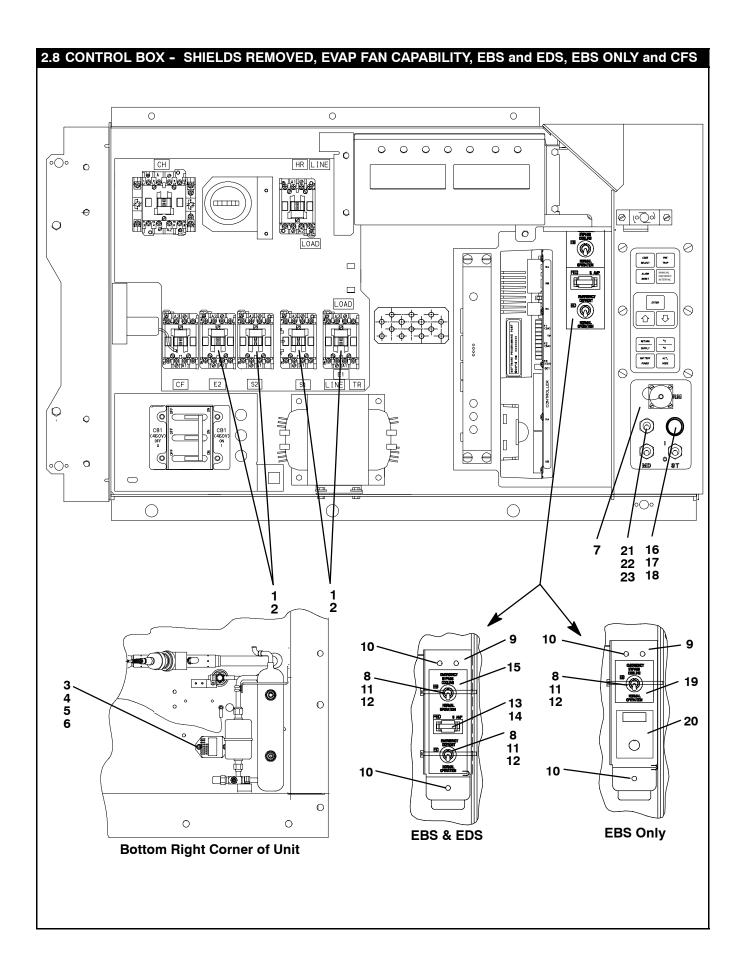


2.8 CC	NTROL BOX - SI	HIELDS REMOVED, EVAP FAN CAPABILITY, EBS and EDS, EBS ONL	Y and CFS
Item	Part Number	Description	Qty
OPTIO	ON 1 - NORMAL E	VAPORATOR FAN OPERATION	
	Sec	e Section 2.7 Items 6 and 7 for correct contactor placement	
OPTIO	ON 2 - SINGLE EV	APORATOR FAN CAPABILITY	
1	34-06243-00	Screw, Pan Head, Thread Cutting #8-32 x 3/4 lg SST	8
2	10-00431-06	Contactor, (E2 & S2) & (E1 & S1) (12 Amp)	4
OPTIO	ON B - EMERGEN	CY BYPASS SWITCH AND EMERGENCY DEFROST SWITCH	
3	10-00416-00	Module, Emergency Bypass	1
4	66U1-5371-6	Screw, Machine Hex Head, #10-24 x .75 lg SST	2
5	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
6	66U1-5321-8	Washer, Flat, #10 - SST	2
	58-04145-09	Plate, Switch (with light location)	1
	58-04145-07	Plate, Switch (with light location, with RM)	1
7	68-14796-01	Plate, Switch (with Start and CFS) NT-1200 and up	A/R
	68-14796-02	Plate, Switch (with light location) NT-1200 and up	A/R
	68-14796-04	Plate, Switch (with light location, with RM) NT-1200 and Up	A/R
8	10-01129-07	Switch, Toggle	2
9	68-12544-01	Bracket	1
10	34-06223-00	Screw, Captive Washer, #10-24 X .56 lg SST	2
11	10-01129-20	Hex Nut	2
12	66U1-9752	Seal, Bushing	2
13	22-01455-02	Holder Assembly, Fuse	1
14	22-02336-02	Fuse, 5 Amp	1
15	62-02874-01	Label, EB and ED	1
16	22-00518-01	Base, Pilot Light	1
17	22-00519-03	Light Assembly, Pilot	1
18	22-00049-01	Lamp, 24VDC	1
OPTIO	ON EB - EMERGE	NCY BYPASS SWITCH ONLY	
3	10-00416-00	Module, Emergency Bypass	1
4	66U1-5371-6	Screw, Machine, Hex Head, #10-24 x .75 lg SST	2
5	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
6	66U1-5321-8	Washer, Flat, #10 - SST	2
8	10-01129-07SV	Switch, Toggle	1
9	68-12544-01	Bracket	1
10	34-06223-00	Screw, Captive Washer, #10-24 X .56 lg SST	2
11	10-01129-20	Hex Nut	1
12	66U1-9752	Seal, Bushing	1
19	62-02874-00	Label, EB Upper	1
20	62-02874-02	Label, EB Lower	1
OPTIO	ON F - CONDENSI		
21	10-00298-01	Switch, Toggle (CFS)	1
22	66U1-9752	Seal, Bushing	1
23	58-04145-06	Plate, Switch (with extra switch location)	1

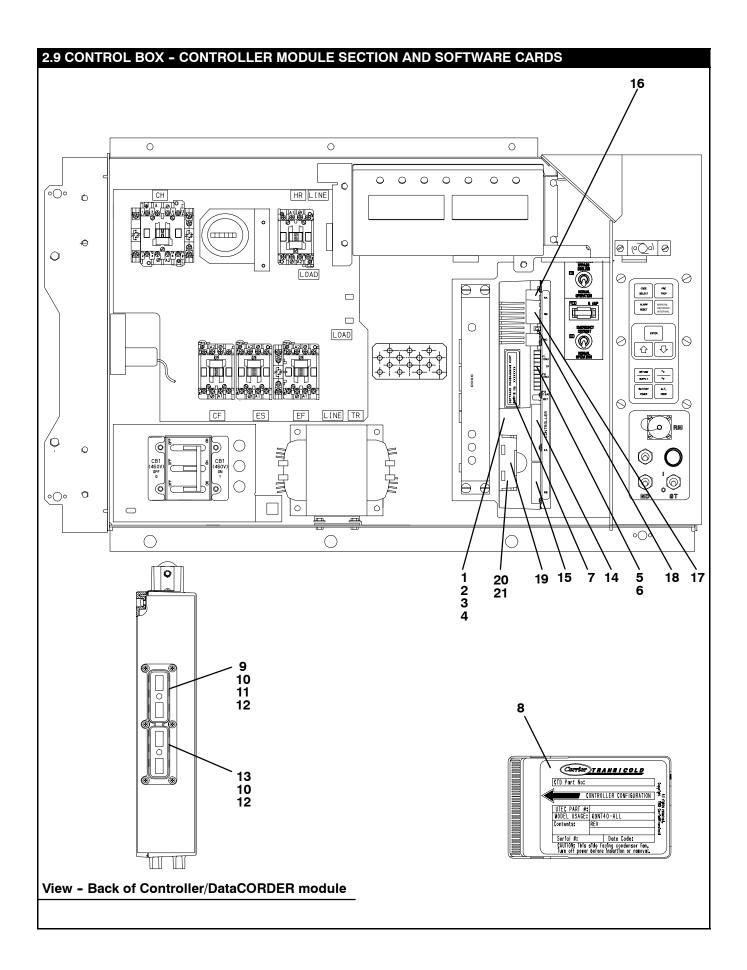

2.9 CO	NTROL BOX - CON	ITROLLER MODULE SECTION AND SOFTWARE CARDS	
ltem	Part Number	Description	Qty
1	-	Module, Controller/DataCORDER - Refer to Section 5 - Includes:	-
2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	1
3	69NT35-2692	Washer, Fender, 0.063 Thick - SST	1
4	58-01184-00	Retainer, Screw, 0.141 ID	1
5	22-02336-04	Fuse, 10 Amp (F3)	3
6	22-02336-02	Fuse, 5 Amp (F1 & F2)	1
7	62-02719-00	Label, Controller/DataCORDER Port	1
8	12-00397-00/5123	Card, Controller/DataCORDER Operation Software	1
NS	12-00402-xx	Card, Configuration Software	1
9	22-01777-00SV	Connector (EC A-K) - 30 Pin	1
10	22-01777-03	Socket, 20 AWG	35
11	22-50100-00	Socket, 18 AWG	4
12	22-01777-04	Plug, Sealing	21
13	22-01777-01SV	Connector (EC L-Y) - 30 Pin	1
14	22-01556-02	Connector (KA) - 14 Pin	1
15	22-01556-01	Connector (KB) - 10 Pin	1
NS	22-01621-23	Connector (KP) - 9 Pin (Connects to Ribbon Cable)	1
16	22-01622-01	Connector (MA) - 12 Pin	1
17	22-01622-02	Connector (MB) - 16 Pin	1
18	22-01622-00	Connector (MC) - 8 Pin	1
NS	09-00369-00SV	Battery, Real Time Clock, (Within the Controller)	1
NS	22-50157-00	Wire Harness, Controller to Current Sensing Transformer)	1
NS	22-01713-06	Wire Harness, Display Module to Controller/DataCORDER Module	1
NS	62-02735-00	Label, Warning, Don't use 12-00327! -(Located on the control box behind the Controller/DataCORDER module.)	1
NS	62-02738-05	Label, Warning, 5108 Series - (Located on the bottom panel of the control box between the transformer and the Communications Interface module.)	1
OPTIC	ON R - RECHARGE	ABLE BATTERY PACK	
19	30-00407-02SV	Battery Pack - Controller/DataCORDER Module	1
OPTIC	N S - STANDARD	CELLS	
20	PL	Battery ("AA")	6
21	30-00407-00	Cover, Controller Battery	1

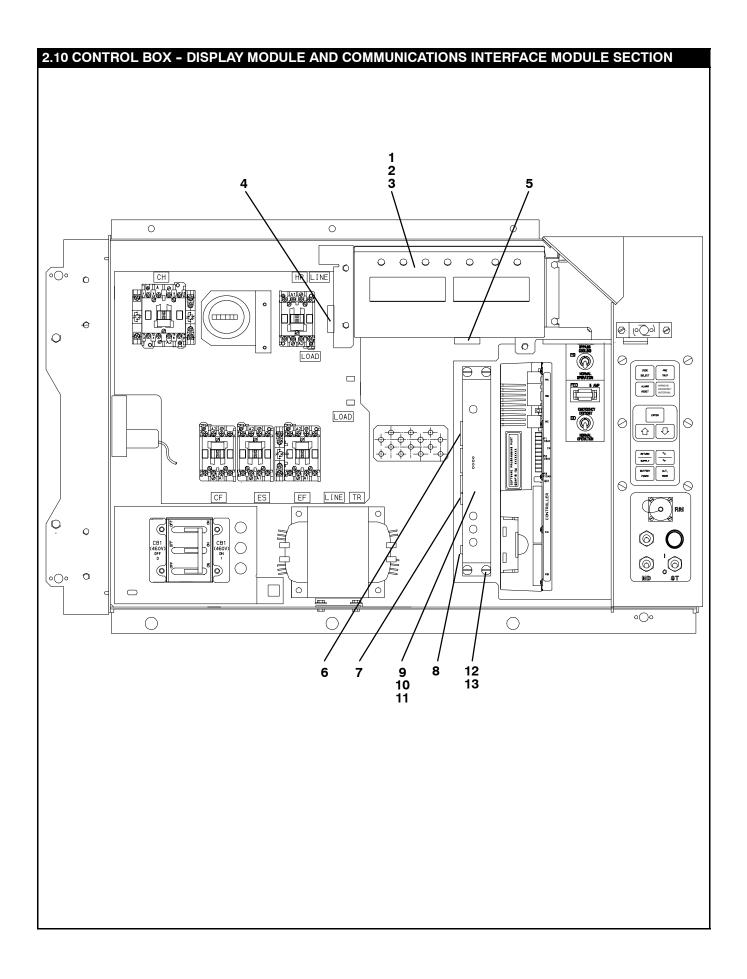


2.10 0	CONTROL BOX - D	ISPLAY MODULE AND COMMUNICATIONS INTERFACE MODULE SECT	ION
Item	Part Number	Description	Qty
4	12-00433-00RP	Module, LCD Display (Option 1)	1
1	12-00433-02 RP	Module, LED Display (Option 2)	1
2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	4
3	69NT35-2692-4	Washer, Fender, 0.063 Thick - SST	4
4	22-01621-03	Connector (MK) - 9 Pin	1
5	22-01621-02	Connector (MB) - 16 Pin	1
6	22-02396-03	Connector (CIC) - 7 Pin	1
7	22-02396-02	Connector (CIB) - 3 Pin	1
8	22-01556-00	Connector (CIA) - 7 Pin	1
NS	22-01713-02	Wire Harness, Key Pad to Display Module	1
OPTIO		ATIONS INTERFACE MODULE - STANDARD	
9	12-00573-00SV	Module, Communications Interface - Includes:	1
10	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
11	66U1-9212-1	Retainer, Push-on	4
12	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
13	58-01184-00	Retainer, Screw .75 O.D.	4
OPTIO	ON 2 - COMMUNICA	ATIONS INTERFACE MODULE - HIGH DATA RATE	
9	12-00573-00SV	Module, Communications Interface - Includes:	1
10	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
11	66U1-9212-1	Retainer, Push-on	4
12	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
13	58-01184-00	Retainer, Screw .75 O.D.	4
OPTIO		ATIONS INTERFACE MODULE - CHIPSET MODEM	
9	12-00573-00SV	Module, Communications Interface - Includes:	1
10	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
11	66U1-9212-1	Retainer, Push-on	4
12	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
13	58-01184-00	Retainer, Screw .75 O.D.	4
OPTIO		ATIONS INTERFACE MODULE - LOW DATA RATE	
9	12-00275-19SV	Module, Communications Interface - Includes:	1
10	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
11	66U1-9212-1	Retainer, Push-on	4
12	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
13	58-01184-00	Retainer, Screw .75 O.D.	4

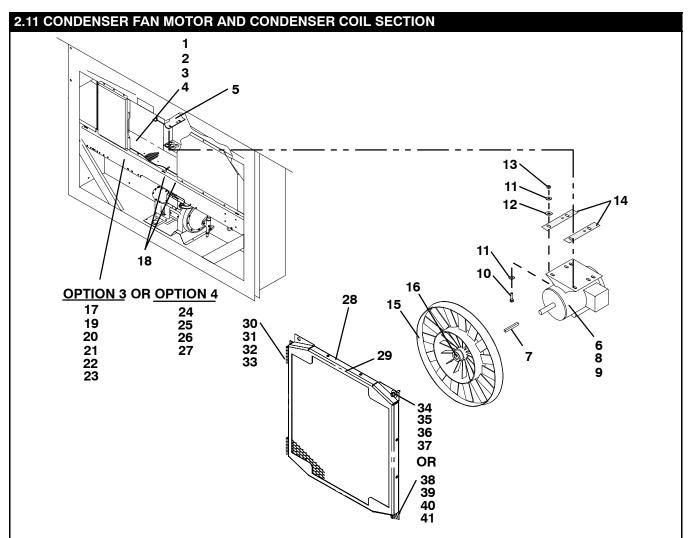


Item	Part Number	Description	Qty
1	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	10
2	66U1-5321-7	Washer, Flat, 1/4 - SST	10
3	34-06053-00	Washer, Mylar, 3/4 OD x 1/4 ID	10
4	34-06053-03	Washer, Mylar, 1.0 OD x 1/4 ID	2
5	69NT35-3547	Bracket, Condenser Motor Mount	1
6	54-00586-20	Motor, Condenser Fan - Includes:	1
7	PL	Key, 3/16 Square x 1-3/8 lg SST	1
8	04-50027-00	Bearing	2
9	22-50088-02	Capacitor, 15 uF	1
10	66U1-5361	Screw, Hex Head, 5/16-18 x 1-1/4 lg SST	4
11	34-01181-01	Washer, Flat, 5/16 - SST	8
12	34-06053-02	Washer, Mylar, 1.0 OD x 3/8 ID	4
13	34-00667-12	Locknut, 5/16-18 - SST	4
14	69NT35-6112	Protector, Condenser Fan Motor Mounting	2
15	38-00503-00	Fan, Condenser (17-1/2 diameter) - Composite - Includes:	1
16	PL	Set Screw,Square Head, 5/16-24 x 5/8 lg SST	2


2.11 C	ONDENSER FAN M	OTOR AND CONDENSER COIL SECTION (Continued)	
Item	Part Number	Description	Qty
OPTIO	ON 2 - TWO ROW C	ONDENSER COIL	
		Use Option 4 for 2-Row Coil Replacement	
OPTIO	ON 3 - THREE ROW	/ (7MM) CONDENSER COIL	
17	68-13454-02SV	Cover, Condenser Coil, Blue Includes:	1
17	68-13454-03SV	Cover, Condenser Coil, White Includes:	1
40	58-04480-00	Bumper (for use with uncoated center handle)	2
18	58-04481-00	Plug (for use with coated handle or units with no center handle)	2
19	81-01575-00SV	Coil, Condenser(Copper) - 7MM 3 Row - Includes Mylar Washers	1
20	66CH1-1172-16	Trim, Flexible	2
21	69NT35-8693-7	Protector (Apply between frame and coil & coil cover)	4
22	69NT35-8693-10	Protector (Apply between frame and coil & coil cover)	2
23	58-04026-41	Protector, Mylar (Apply between coil & coil cover, RH &LH sides)	2
OPTIO	ON 4 - FOUR ROW	(3/8") CONDENSER COIL	
04	69NT43-148-2	Cover, Condenser Coil, Blue Includes:	1
24	69NT43-148-4	Cover, Condenser Coil, White Includes:	1
40	58-04480-00	Bumper (for use with uncoated center handle)	2
18	58-04481-00	Plug (for use with coated handle or units with no center handle)	2
25	69NT43-202-10SV	Coil, Condenser(Copper) - 4 row - Includes Mylar Washers	1
26	69NT35-8703	Protector (Apply between frame and coil & coil cover)	4
27	58-04026-10	Protector, Mylar (Apply between coil & coil cover, RH &LH sides)	2
OPTIO	ON H - HINGED CO	NDENSER FAN GRILLE	
28	76-00704-01	Grille and Venturi Assembly - Includes:	1
29	66U1-8912	Label, Rotation	1
30	76-50075-00	Hinge Kit - Includes:	1
31	44-00374-00	Hinge	2
32	58-04101-07	Protector, Mylar	4
33	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	8
34	66U1-6811-8	Screw, Retaining - SST	2
34	66U1-6811-12	Screw, Retaining (Phillips Head) - SST	2
35	34-06169-00	Washer, Retaining - SST	2
36	34-06053-03	Washer, Mylar, 1/4ID x 1.00OD	2
37	69NT35-2692-1	Washer, Fender 1/4 - SST	2
OPTIO	ON B - BOLTED CO	NDENSER FAN GRILLE	
28	76-00704-01	Grille and Venturi Assembly - Includes:	1
29	66U1-8912	Label, Rotation	1
38	69NT35-2692-1	Washer, Fender 1/4 - SST	4
39	34-06053-03	Washer, Mylar, 1/4ID x 1.00OD	4
40	34-00663-11	Washer, Lock, 1/4 - SST	4
41	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	4

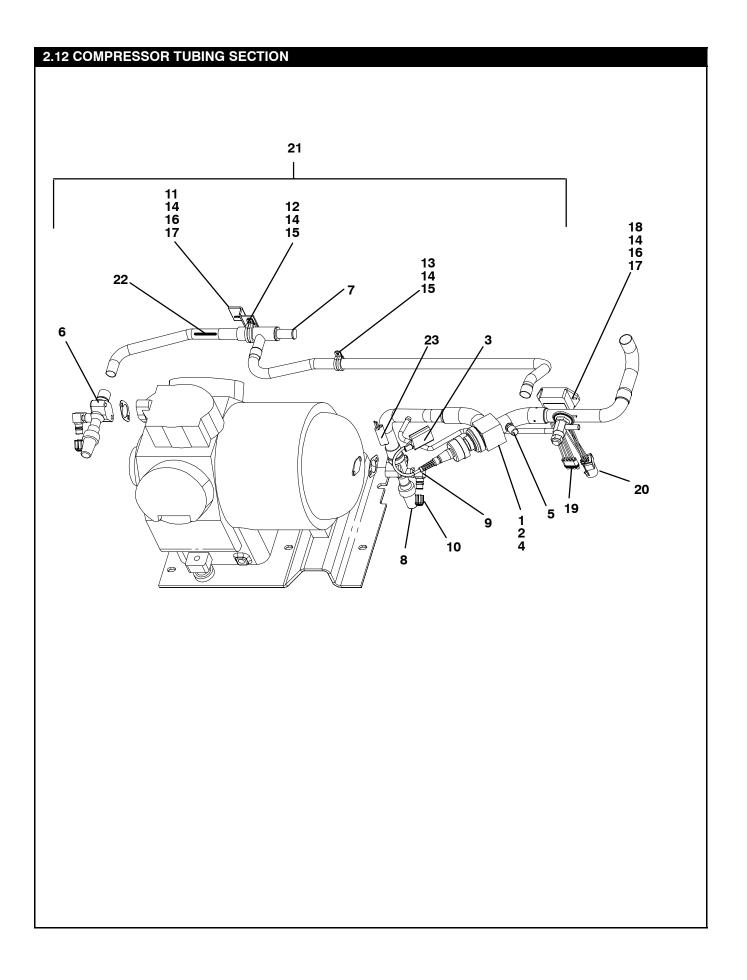

ltem	OMPRESSOR TUB Part Number	Description	Qty
1	14-00263-00	Valve, Stepper Motor - Includes:	1
2	14-00263-20	Piston and Motor Assembly - Includes:	1
3	22-02392-03	Connector (To Power Pack)	1
NS	22-02393-01	Pin, 18-20 Gauge (Used on 22-02392-03)	4
NS	22-02394-03	Seal (Used on 22-02392-03)	4
4	14-00263-23	O-Ring	1
5	14-00263-22	Cap	1
6	_	Valve, Service (Discharge) - See Section 4.3	1
7	14-00204-02	Valve, Discharge Pressure Regulator (DPRV)	1
8	-	Valve, Service (Suction) - See Section 4.3	1
9	40-00542-00	Elbow, Adapter (R134a)	1
10	40-00520-02	Cap, M8 x 1.0 - Nylon	1
11	69NT41-702	Bracket Assembly	1
12	66U1-3632-24	Clamp, Cushion, 1.18 Dia.	1
13	34-00373-11	Clamp, Cushion, .88 Dia.	1
14	66U1-5381-1	Screw, Hex Head, #10-24 x .75 lg SST	4
15	34-06053-00	Washer, Mylar, .25 I.D. x .80 O.D.	3
16	66U1-5321-8	Washer, Flat, #10 - SST	3
17	34-06053-05	Washer, Mylar, .205 I.D. x .60 O.D.	3
18	10-00388-00	Power Pack, Stepper Motor - Includes:	1
19	22-01585-04	Connector (To Valve)	1
20	22-01836-00	Connector (To Harness)	1
21	81-01482-00	Tubing assembly	1
NS	22-01566-01	Socket (Used on 22-01585-04)	4
NS	22-02393-00	Pin (Used on 22-01830-00)	4
NS	22-02394-02	Seal (Used on 22-01835-00, 22-01585-04 and 22-01830-00)	A/R
NS	22-01835-00	Connector (On Harness to Drive)	1
NS	22-01566-00	Pin (Used on 22-01835-00)	5
REFR	IGERATION TEMP	ERATURE SENSORS	
22	12-01105-02	Sensor, Thermistor (CPDS)	1
23	12-01104-05	Sensor, Thermistor (CPSS)	1

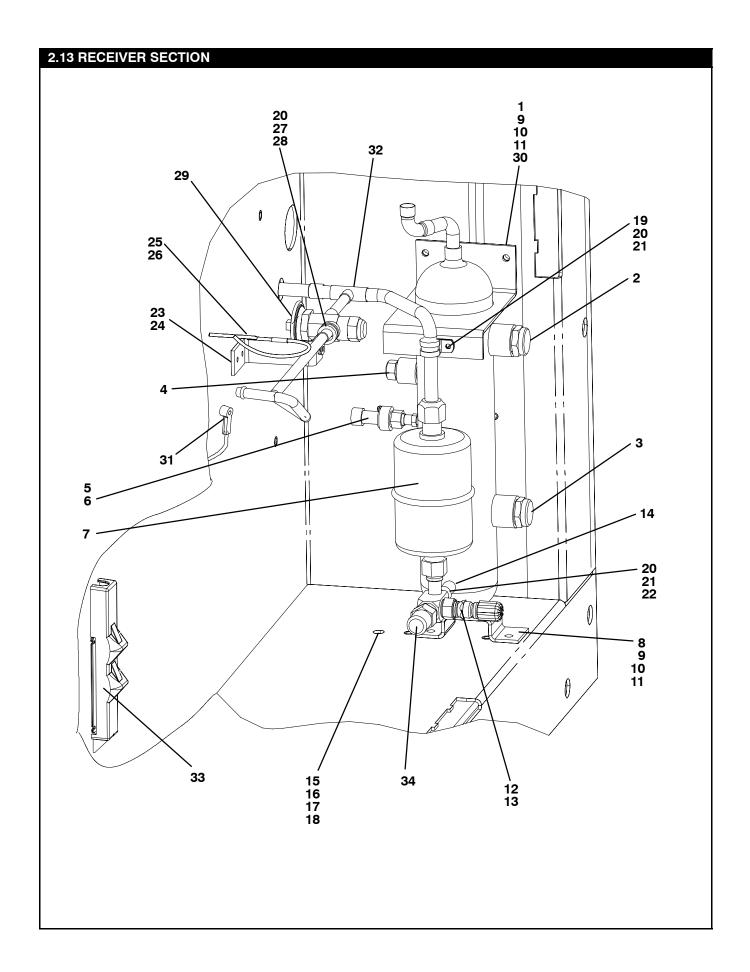

2.13 R	ECEIVER SECTION	N	
Item	Part Number	Description	Qty
1	69NT43-403-2	Receiver, Electro-Coated Modular, Copper - Includes:	1
2	14-00220-01	Glass, Sight, w/Red Balls, 1/2-14 npt	1
3	14-00221-01	Indicator, Moisture-Liquid	1
	14-01032-14	Plug, Fusible, 3/8 npt - Brass	1
4	14-00215-06	Disc, Rupture, 3/8 npt - Alternate	1
NS	22-02448-00SV	Connector, Female (Located on wire harness)	1
5	12-00352-00	Transducer, Condenser Pressure (CPT)	1
6	EC39DM062	Valve, Schrader	1
7	14-00341-02SV	Filter-Drier with O-Rings	1
8	69NT43-277	Bracket, Liquid Line Valve	1
9	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	A/R
10	66U1-5321-7	Washer, Flat, 1/4 - SST	3
11	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	4
12	40-00520-01	Coupling, M15 - Brass - Includes:	1
13	40-00520-03	Cap, Service Port	1
14	14-00221-00	Valve, Liquid Line	1
15	66U1-5361-7	Bolt, Hex Head, 3/8-16 x 1.00 lg SST	1
16	AU11JR241	Washer, Lock, 3/8 - SST	1
17	66U1-5321-5	Washer, Flat, 3/8 - SST	1
18	34-06053-02	Washer, Mylar, 0.375 ID x 1.00 OD	1
19	34-00373-05	Clamp, Cushion, 1/2 Diameter	1
20	66U1-5371-6	Screw, Machine, Hex Head, #10-24 x .75 lg SST	3
21	34-06053-05	Washer, Mylar, .205 I.D. x .60 O.D.	4
22	34-00373-07	Clamp, Cushion, 5/8 Diameter	1
23	69NT43-420	Bracket Assembly, Quench Valve	1
24	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4 - SST	2
25	66U2-1132-1	Connector	1
26	66U1-3803	Heat Shrink	1
27	34-00373-54	Clamp, Cushion, .44 Diameter	1
28	34-06053-03	Washer, Mylar, .25 I.D. x 1.00 O.D.	1
29	14-00212-03SV	Valve, Quench, Thermostatic Expansion - Includes:	1
NS	14-00212-21	Kit, Repair - Includes:	1
NS	NSS	Power Head	1
30	58-04026-23	Protector, Mylar	1
31	12-00495-02SV	Sensor, Ambient Thermistor (AMBS)	1
32	DE40BA203	Tee, Reducing 1/2 x 1/2 x 3/8	1
33	-	See Section 2.15 for Sensor Assembly and Related Parts	-
34	40-00501-50	Cap, Service Valve	1

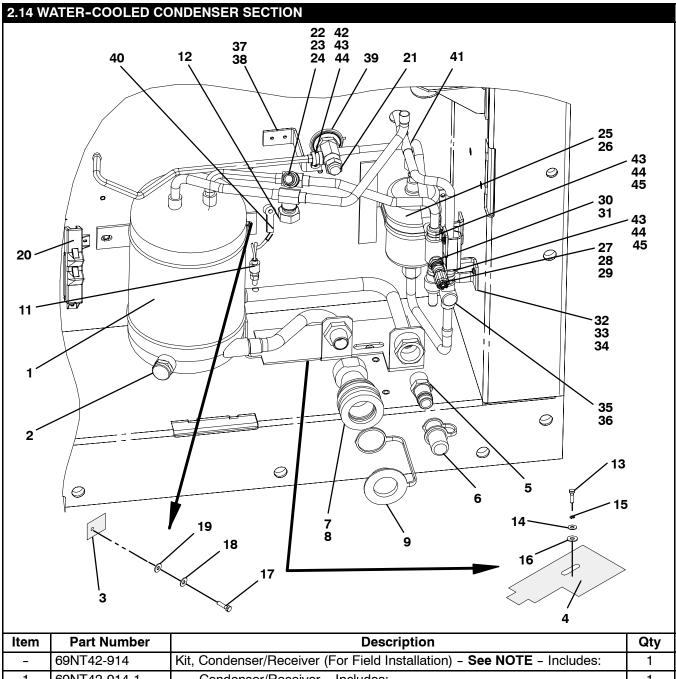


Item	Part Number	Description	Qty
-	69NT42-914	Kit, Condenser/Receiver (For Field Installation) - See NOTE - Includes:	1
1	69NT42-914-1	Condenser/Receiver - Includes:	1
2	14-00220-00	Sight Glass, w/red balls, 1/2 npt	1
3	58-00956-00	Protector, Mylar	2
4	58-00957-00	Protector, Mylar	1
5	66U1-2763-5	Coupling (Water-In)	1
6	66U2-1142	Cap, Dust	1
7	40-01129-00	Coupling, Self Draining - Includes:	1
7	66U1-2763-6	Coupling Assembly, Socket - Includes:	1
8	42-50000-00	Seal, O-Ring	1
9	66U2-1152	Cap, Dust (Use with 40-01129-00)	1
10	79-01757-00	Cap Assembly (Use with 66U1-2763-6)	1
11	12-01071-01SV	Switch,Water Pressure OPTION W	1
12	14-00215-05	Disc, Rupture, 3/8 npt	1


2.14	WATER-COOLED	CONDENSER SECTION (Continued)	
Item	Part Number	Description	Qty
13	66U1-5361-7	Bolt, Hex Head, 3/8-16 x 1.00 lg SST	1
14	66U1-5321-5	Washer, Flat, 3/8 - SST	1
15	AU11JR241	Washer, Lock, 3/8 - SST	1
16	34-06053-02	Washer, Mylar, 3/8 ID x 1.00 OD	1
17	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	2
18	66U1-5321-7	Washer, Flat, 1/4 - SST	2
19	34-06053-00	Washer, Mylar, 1/4 ID x 13/16 OD	2
20	-	See Section 2.15 for Sensor Assembly and Related Parts	-
_	76-00677-00	Accessory Kit, Water-Cooled Condenser Tubing - Includes:	-
21	06DA403-844	Valve, Schrader	1
22	12-00352-00	Transducer, Condenser Pressure (CPT)	1
23	69NT41-477	Tube Assembly - Includes:	1
24	40-00555-06	Tee, 1/2 x 1/2 x 3/8 npt - Brass	1
25	14-00341-02SV	Filter-Drier with O-Rings	1
26	69NP20-1031	Clamp, Filter-Drier - Includes:	1
NS	58-50014-00	Gasket (16 ft., Cut to length)	1
_	69NT41-497	Tube Assembly - Includes:	1
27	66U1-8552-2	Valve, Liquid Line - Includes:	1
28	40-00086-04	Cap, Flare - 1/4	1
29	17-21002-01	Cap, Valve	1
30	40-00520-01	Coupling, M15 - Brass - Includes:	1
31	40-00520-03	Cap, Service Port	1
32	68-12368-00	Bracket	1
33	66U1-5371-6	Screw, Hex Head, #10-24 x 3/4 lg SST	2
34	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
35	69NT41-487	Tube Assembly - Includes:	1
36	14-01092-03	Indicator, Liquid Moisture - Brass	1
37	69NT43-420	Bracket Assembly	1
38	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	2
39	14-00212-03SV	Valve, Quench, Thermostatic Expansion - Includes:	1
NS	14-00212-21	Kit, Repair - Includes:	1
NS	NSS	Power Head	1
40	12-00495-02SV	Sensor, Ambient Thermistor (AMBS)	1
41	DE40BA203	Tee, Reducing, 1/2 x 1/2 x 3/8	1
42	34-00373-54	Clamp, Cushion, .44 Diameter	1
43	34-06053-03	Washer, Mylar, .25 I.D. x 1.00 O.D.	3
44	66U1-5371-6	Screw, Machine Hex Head, #10-24 x .75 lg SST	3
45	34-00373-07	Clamp, Cushion, .62 Diameter	2
—	1	1	

NOTE


Must order tubing accessory kit 76-00677-00 when ordering P/N 69NT42-914 for field installation on units provisioned for a water-cooled condenser.

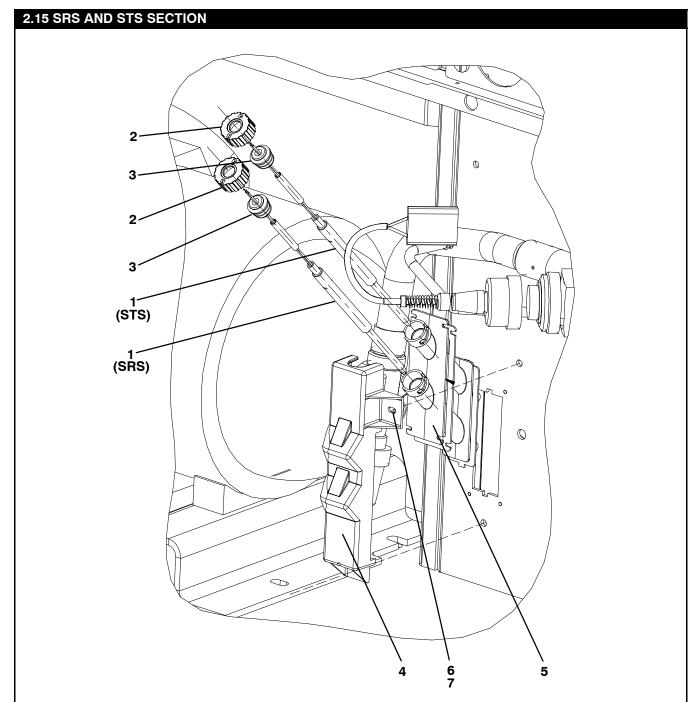

Item	Part Number	Description	Qty
1	12-00395-01SV	Sensor Assembly (STS & SRS)	1
2	58-04277-00SV	Cap, Probe - Includes:	2
3	58-04278-00	Grommet NSS	2
4	58-04279-00	Cover, Probe	1
5	58-04276-00	Holder, Probe	1
6	66U1-5321-7	Washer, Flat, 1/4 - SST	2
7	66U1-5371-7	Screw, Machine, Hex Head, #10-24 x .50 lg SST	2

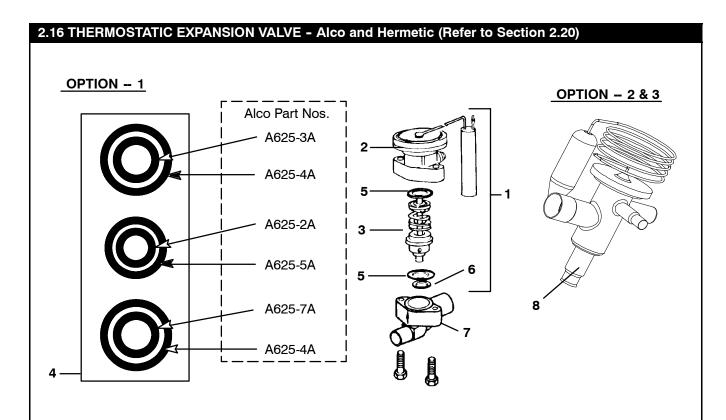

Item	Part Number	Description	Qty		
OPTIC	OPTION 1 EVAPORATOR COIL WITH SEMI-HERMETIC TXV				
1	14-00244-02	Kit, Repair - Includes:	1		
2	NSS	Power Head Assembly and Gasket, Item 5	1		
3	NSS	Cage Assembly and Gasket, Item 6	1		
4	66U1-6225	Gasket Set, Universal - Includes:	1		
5	NSS	Gasket, Body Flange A625-4A	2		
6	NSS	Gasket, Seat - A625-2A	1		
7	66U1-1214-13	Flange, Body	1		
OPTION 2 AND 3 - EVAPORATOR COIL WITH HERMETIC TXV					
8	14-00273-03	Valve, Thermostatic Expansion	1		

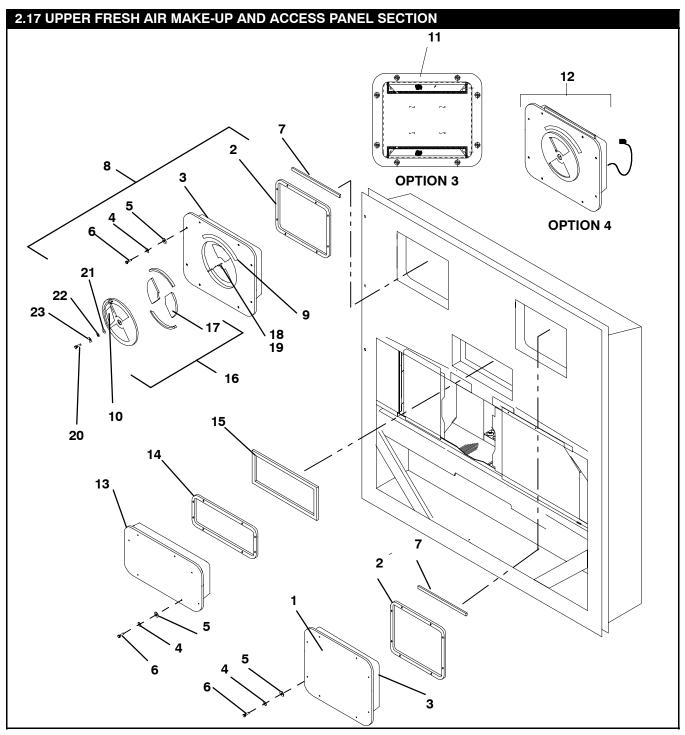


-		MAKE-UP AND ACCESS PANEL SECTION	0:
Item	Part Number	Description	Qty
OPTIO	ON 1 EVAPORATO	R FAN ACCESS PANEL - PLAIN	
1	79-01697-06SV	Panel, Access (See NOTE 1) - Includes:	A/R
2	42-00296-01	Gasket	1
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
4	34-006212-12	Washer, Flat, 1/4 - SST	8
5	34-06053-13	Washer, Mylar, 1/4 ID X 0.80 OD	8
6	34-06154-00	Screw, Hex Head, 1/4-20 x 1.00 lg TIR	8
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1


OPTI	ON 2 EVAPORATO	R FAN ACCESS PANEL - WITH FRESH AIR MAKEUP	
8	79-01694-00	Panel, Fresh Air Make-up w/Retaining Washers - Includes:	A/R
2	42-00296-01	Gasket	1
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1
9	-	Label, Fresh Air (See Section 2.36 for Language Selection)	1
10	62-02783-00	Label, Fresh Air	1
21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1
OPTI	ON 3 WITH FRESH	AIR MAKEUP AND SCREENS - USE ALL OF OPTION 2 AND ITEM	BELOW
11	58-04251-00	Screen, Medfly	2
OPT	ON 4 EVAPORATO SENSOR (VPS)	OR FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VEN	IT POSITION
	79-01902-00	Panel (orange), Fresh Air Make-up w/VPS - Includes:	A/R
12	79-01902-01	Panel (white), Fresh Air Make-up w/VPS - Includes:	A/R
2	42-00296-01	Gasket	1
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1
9	-	Label, Fresh Air (See Section 2.36 for Language Selection)	1
10	62-02783-00	Label, Fresh Air	1
21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1
HEAT	TER ACCESS PANE	iL	
13	79-01697-14	Panel, Access - Includes:	1
14	42-01052-02	Gasket	1
15	34-06212-12	Gasket, Access Panel	1
4	34-06053-13	Washer, Flat, 1/4 - SST	8
5	34-06053-00	Washer, Mylar, 1/4 ID X 0.80 OD	8
6	34-06154-00	Screw, Hex Head, 1/4-20 x 1.00 lg TIR	8
STUE	ASSEMBLY KITS	· · · · · · · · · · · · · · · · · · ·	
16	74-00201-02	Kit, Gasket and Stud Assembly (See NOTE 2) - Includes:	1
17	42-00407-00	Gasket (One Piece)	1
18	74-00201-01	Kit, Disc and Stud Assembly (See NOTE 3) - Includes:	1
19	NSS	Stud Assembly, 5/16-18	1
20	34-06185-01	Screw, Machine Pan Head, #8-32 x 1/2 lg SST	1
21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1

NOTES


- 1. Access panels with Transfresh option should be ordered from Transfresh, See Section 2.19 for address.
- 2. Disc and stud assembly kit, which will modify stud to 5/16-18, also includes new disc and gasket.
- 3. Must order 74-00201-01 stud assembly kit, which will modify stud to 5/16-18, and include 42-00407-01 (1 piece) gasket.

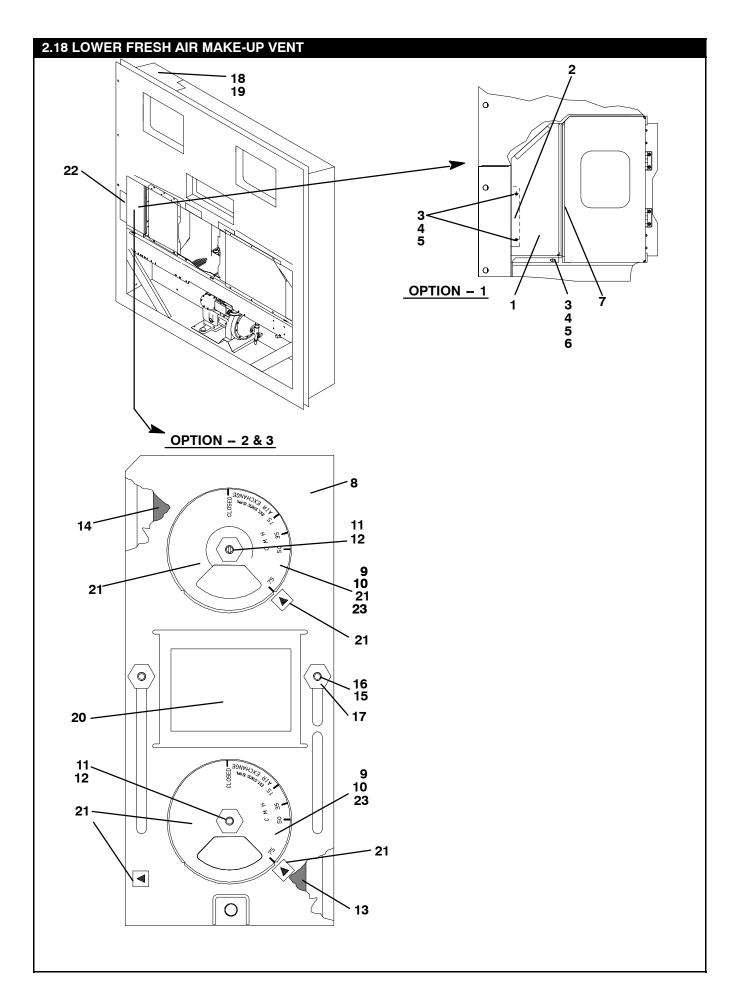

2.18 L	OWER FRESH AIR I	MAKE-UP VENT	
Item	Part Number	Description	Qty
OPTIO	N 1 - LOWER FRES	SH AIR (NONE)	
1	69NT35-4047	Panel, Blank	1
2	69NT43-307	Bracket, Panel	1
3	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	3
4	34-06053-18	Washer, Mylar, 1/4 ID x 1.00 OD	3
5	66U1-5321-3	Washer, Flat, 1/4, Type A- SST	3
6	69NT35-2692-1	Washer, Fender 1/4 - SST	1
7	42-00465-00	Gasket	1
OPTIO	N 2 - INSTALLED		
8	69NT41-852-1	Cover, Fresh Air Makeup - Includes:	1
9	69NT40-976-3	Cover Assembly, Air Bleed - Includes:	2
10	42-00233-01	Gasket, Air Exchange	2
44	34-06092-00	Nut, Hex, 1/4-20 UNC-2B - SST	2
11	34-06183-00	Nut, Hex, (with mini handle),1/4-20 UNC-2B - SST	2
12	34-06053-00	Washer, Mylar, 1/4 ID x 1.00 OD	2
13	42-00295-01	Gasket, Cover	1
14	42-00295-00	Gasket, Cover	1
15	69NT41-782	Bushing	2
16	66U1-5321-7	Washer, Flat, 1/4 - SST	2
47	34-06092-00	Nut, Hex, 1/4-20 UNC-2B - SST	A/R
17	34-06183-00	Nut, Hex, (with mini handle),1/4-20 UNC-2B - SST	A/R
18	69NT35-8348	Baffle, Unpainted	1
19	34-00928-09	Rivet, Blind, .156 Diameter, Grip Range - 3/16-1/4	4
20	69NT35-7012	Label, Fresh Air	1
	76-50116-03	Label Kit - Includes:	1
	62-10540-04	Label, Air Exchange, CMH - <i>English</i>	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-00	Label Kit - Includes:	1
	69NT35-1417	Label, Air Exchange, CMH - English (Maersk Specification)	2
	66CH1-1002-33	Label, Arrow (Maersk Specification)	3
	76-50116-01	Label Kit - Includes:	1
21	69NT35-9238	Label, Air Exchange, CFM - English/Spanish	2
21	66CH1-1002-33	Label, Arrow	3
	76-50116-02	Label Kit - Includes:	1
	62-10540-00	Label, Air Exchange, CMH - English/Spanish/Chinese	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-04	Label Kit - Includes:	1
	62-10540-00	Label, Air Exchange, CMH - English/Spanish/Chinese	2
		(NYK Specification)	
	62-10381-00	Label, Arrow (NYK Specification)	3
	69NT35-1287-1	Label, Fresh Air Exchange, CMH - English (Maersk Specification)	1
22	69NT35-9228	Label, Fresh Air Exchange, CFM - English/Spanish	1
	62-10537-00	Label, Fresh Air Exchange, CMH - English/Japanese/Chinese	1
	62-10381-00	Label, Fresh Air Exchange, CMH - English	1
OPTIO	N 3 - INSTALLED V	VITH SCREENS - USE ALL OF OPTION 2 PLUS ITEM BELOW	
23	58-04263-01	Screen Assembly, Medfly	2

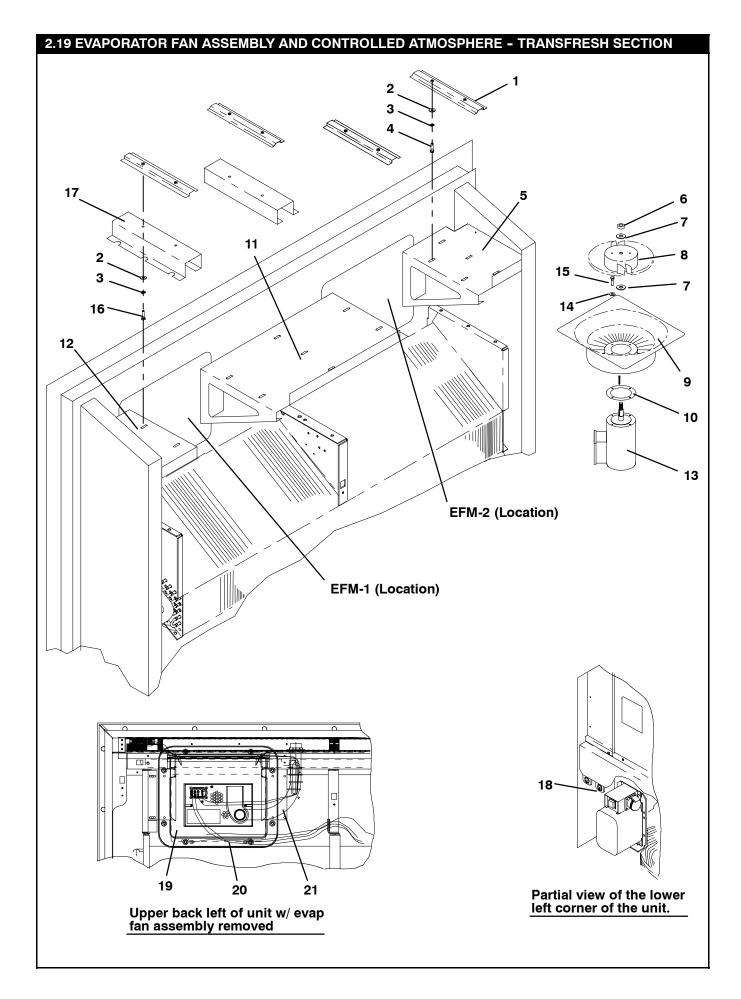


Item	Part Number	Description	Qty
1	69NT43-295	Mounting Bracket, Evaporator Fan Assembly	4
2	69NT35-2692-1	Washer, Fender	8
3	34-00663-11	Washer, Lock, 1/4 - SST	8
4	34-06165-09	Screw, Hex Head, 1/4-20 x 1-1/4 lg SST	8
5	69NT43-284	Fan Deck, Right	1
6	34-00795-17	Nut, Self Locking, 5/8-18 - SST	2
7	34-00616-06	Washer, Special, 5/8 - SST	4
8	38-00557-00	Fan, Evaporator	2
9	48-00262-00	Stator, Evaporator	2
10	58-04066-00	Protector - Mylar	2
11	69NT43-285	Fan Deck, Center	1
12	69NT43-283	Fan Deck, Left	1
13	54-00585-20	Motor, Evaporator Fan - Includes:	2
NS	04-50027-00	Bearing, Front (Shaft End)	1
NS	22-50088-01	Capacitor (15 μF) Low Speed	1
NS	22-50088-00	Capacitor (20 μF) High Speed	1
NS	22-01613-34	Pin #16	1
NS	22-01892-00	Plug Assembly, Motor (Located on Wire Harness) - Includes:	1
NS	22-01614-03	Plug	1
NS	22-01613-15	Contacts	A/R
NS	22-01892-01	Receptacle Assembly, Motor - Includes:	1
NS	22-01614-02	Receptacle	1
NS	22-01614-05	Strain Relief	1
NS	22-01613-14	Contacts	A/R
14	66U1-5321-3	Washer, Flat, 1/4 - SST	8
15	34-06165-09	Screw, Hex Head, 1/4-20 x 1-1/8 lg SST	8
		HERE - TRANSFRESH	
-	76-00681-01	Kit, Transfresh Field Installation (For units with NO Transfresh Provision) - Includes:	-
16	34-00655-28	Screw, Hex Head, 1/4-20 x 3-1/2 lg SST	4
17	69NT35-6348	Bracket	2
NS	58-04290-00	Pipe Assembly, PVC	1
*18	69NT35-8734-4	Cable Assembly, Transfresh Communications Connector (TCC)	1
*19	69NT35-8734-16	Panel Assembly, Transfresh	1
*20	69NT35-8734-12	Cable, Power - A2C (Transfresh)	1
*21	69NT35-8734-5	Hose Assembly, Air (Transfresh)	1
*NS	69NT35-8734-14	Cable Assembly, Rear (Transfresh)	1
*NS	69NT35-8734-6	Fuse Assembly, In-line (Transfresh)	1
	-	NOTE	

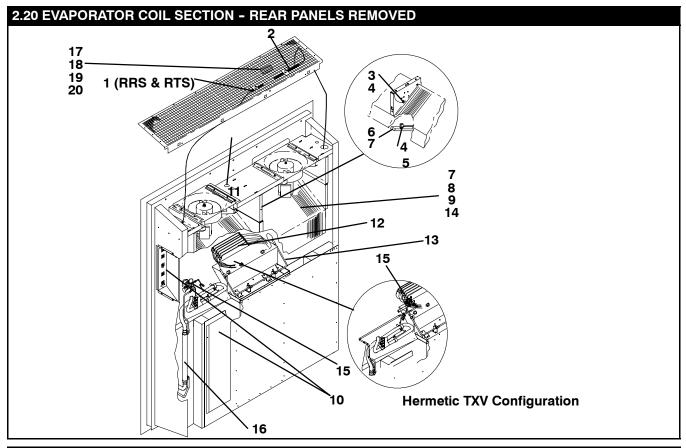


2.20 E	VAPORATOR COIL	SECTION - REAR PANELS REMOVED	
Item	Part Number	Description	Qty
1	12-00500-01SV	Sensor Assembly (RRS & RTS)	1
2	-	Sensor, Thermistor, (Temperature Recorder) - Refer to Section 2.27	-
3	12-00495-02SV	Sensor, Thermistor, Defrost (DTS)	1
4	34-01178-22	Screw, Hex Head, #8-32 x 1/2 lg SST (For mounting DTS)	3
5	66U1-6912-16	Thermostat, Heat Termination (HTT)	1
6	AA06JA166	Capscrew, Hex Head, 1/4-20 x 1/2 lg.	1
7	AU11JR171	Washer, Lock, 1/4 - SST	10
8	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	9
9	69NT35-2692-1	Washer, Fender, 1/4 - SST	A/R
10	_	USDA Option - Refer to Section 2.21	-
NS	66U1-3803-1	Tube, Heat Shrink - 1/2 x 2-3/4 lg.	A/R
11	58-00616-00	Plug, Hole (2 inch diameter) (Located on Fan Deck)	16
NS	69NT35-6522	Retainer (For Heaters)	3
NS	69NT35-6532	Clip (For Heaters)	A/R
OPTIC	ON 1 - EVAPORATO	OR COIL WITH SEMI-HERMETIC TXV and STANDARD HEAT EXCHANGE	R
12	24-00006-02	Heater, Evaporator Coil	4
13	24-00003-00	Heater, Drain Pan	1
14	69NT43-208-3	Coil, Evaporator (Does not include thermostats or heaters)	1
14	69NT43-208-5	Coil, Evaporator - Varnished (Does not include thermostats or heaters)	1
15	_	Valve, Thermostatic Expansion - Refer to Section 2.16	-
16	65-00144-00	Exchanger, Heat	1
OPTIC	ON 2 - EVAPORATO	OR COIL WITH HERMETIC TXV and STANDARD HEAT EXCHANGER	
12	24-00006-02	Heater, Evaporator Coil	4
13	24-00003-00	Heater, Drain Pan	1


OPTIC	N 2 (continued) -	EVAPORATOR COIL WITH HERMETIC TXV and STANDARD HEAT EXCHA	ANGER
Item	Part Number	Description	Qty
14	76-00748-00	Coil, Evaporator w/o Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	69NT-35-6532	Clip	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
14	76-00748-02	Coil, Evaporator w/Varnish- Hermetic Includes:	1
NS	81-01635-22	Coil (NSS)	1
NS	69NT-35-6532	Clip	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
15	14-00273-03	Valve, Thermostatic Expansion, Hermetic	1
16	65-00144-00	Exchanger, Heat	1
OPTIC	N 3 - EVAPORATO	OR COIL WITH HERMETIC TXV and LARGE HEAT EXCHANGER	
12	24-00006-02	Heater, Evaporator Coil	4
13	24-00003-00	Heater, Drain Pan	1
14	76-00748-00	Coil, Evaporator w/o Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	69NT-35-6532	Clip	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
14	76-00748-02	Coil, Evaporator w/Varnish- Hermetic Includes:	1
NS	81-01635-22	Coil (NSS)	1
NS	69NT-35-6532	Clip	6
NS	34-00928-02	Rivet, Blind	12
NS	68-14329-00	Retainer	1
NS	66U1-5371-13	Screw	3
OPTIO	N 5 - NEWCOIL W	ITH HERMETIC TXV STANDARD HEAT EXCHANGER AND 6 HEATERS	
12	24-00006-02	Heater, Evaporator Coil	6
14	76-00748-00	Coil, Evaporator w/o Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	44-00361-00	Clip	2
NS	68-13600-00	Retainer	1
NS	66U1-5371-13	Screw	3
14	76-00748-02	Coil, Evaporator w/Varnish- Hermetic Includes:	1
NS	81-01635-20	Coil (NSS)	1
NS	44-00361-00	Clip	2
NS	68-13600-00	Retainer	1
NS	66U1-5371-13	Screw	3
DEHU	MIDIFICATION		
-	76-00675-01	Kit, Humidity Sensor(Field installation, units provisioned for - See Unit Matrix) - Includes:	_
17	10-00413-00	Sensor, Humidity (HS)	1
18	66U1-5371-10	Screw, Hex Head, #10-24 x 1.00 lg SST	4
19	66U1-5321-8	Washer, Flat, #10 - SST	2
20	68-13181-00	Bracket Assembly, Humidity Sensor	1

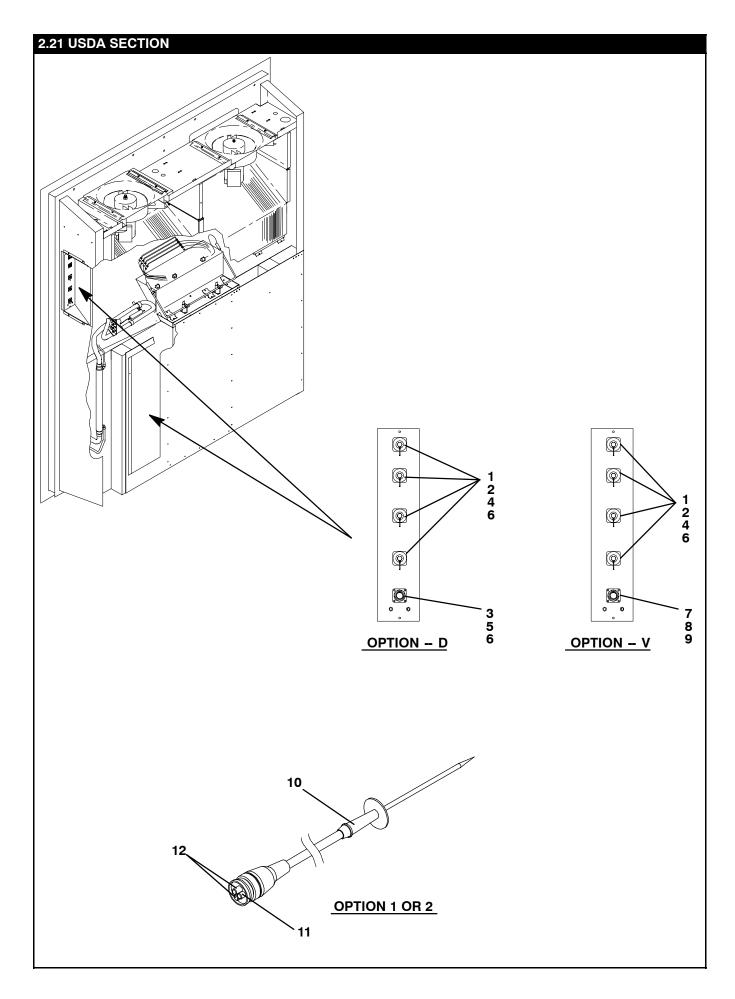


2.21 l	JSDA OPTION AND	PROBES	
Item	Part Number	Description	Qty
OPTIO	ON D		
_	76-00684-00	Kit, USDA (For field installation, units provisioned for rear-mounted USDA - See Unit Matrix) - Includes:	-
_	76-00760-00	Kit, USDA (For field installation, units provisioned for side-mounted USDA - See Unit Matrix) - Includes:	-
1	07-00397-12	Plug, Sealing	4
2	22-01660-00	Receptacle (PR1, PR2, PR3, Cargo Probe 4) (3 Pin)	4
3	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)1	1
NS	69NT41-992	Plate Assembly, USDA - Includes:	1
4	69NT43-175	Cap, Dust, with Tether (3 Pin)	4
5	69NT43-176	Cap, Dust, with Chain (5 Pin)	1
6	22-01613-14	Contact, Pin, #16 (Used with 22-01660-00 & 22-01660-03)	13
NS	69NT40-507-1	Door Assembly (Included and Used with REAR-mount USDA only)	1
NS	22-01660-04	Plug, Interrogator Socket (ICR) (5 Pin)	1
OPTIO	ON V		
1	22-01660-08	Plug, Sealing	4
2	22-01660-00	Receptacle (PR1, PR2, PR3, Cargo Probe 4) (3 Pin)	4
4	69NT43-175	Cap, Dust, with Tether (3 Pin)	4
6	22-01613-14	Contact, Pin, #16 (Used with 22-01660-00 & 22-01660-03)	13
7	22-02412-00	Receptacle, Interrogator (5 Pin)	1
8	22-02413-00	Cap, Dust, with Tether (5 Pin)	1
	22-02398-02	Socket, Contact (Silver Plated)	A/R
9	22-02398-03	Socket, Contact (Gold Plated)	A/R
USDA	PROBE KITS		
OPTIO	ON 1		
10	12-00342-03	Sensor Assembly, 600" lg. (15M) (USDA Probe) - Includes:	A/R
11	22-50127-00	Plug, Socket (PR1, PR2, PR3, Cargo Probe 4)	1
12	22-01613-15	Contact, Socket, #16 (Used with 22-50127-00 & 22-01660-04)	A/R
OPTIO	ON 2		
10	12-00342-02	Sensor Assembly, 540" lg. (13.5M) (USDA Probe) - Includes:	A/R
10	12-00342-04	Sensor Assembly, 600" lg. (15M) (USDA Probe) - Includes:	A/R
11	22-50127-00	Plug, Socket (PR1, PR2, PR3, Cargo Probe 4)	1
12	22-01613-15	Contact, Socket, #16 (Used with 22-50127-00 & 22-01660-04)	A/R
		NOTE	
		Do not mix silver pins with gold pins and sockets.	

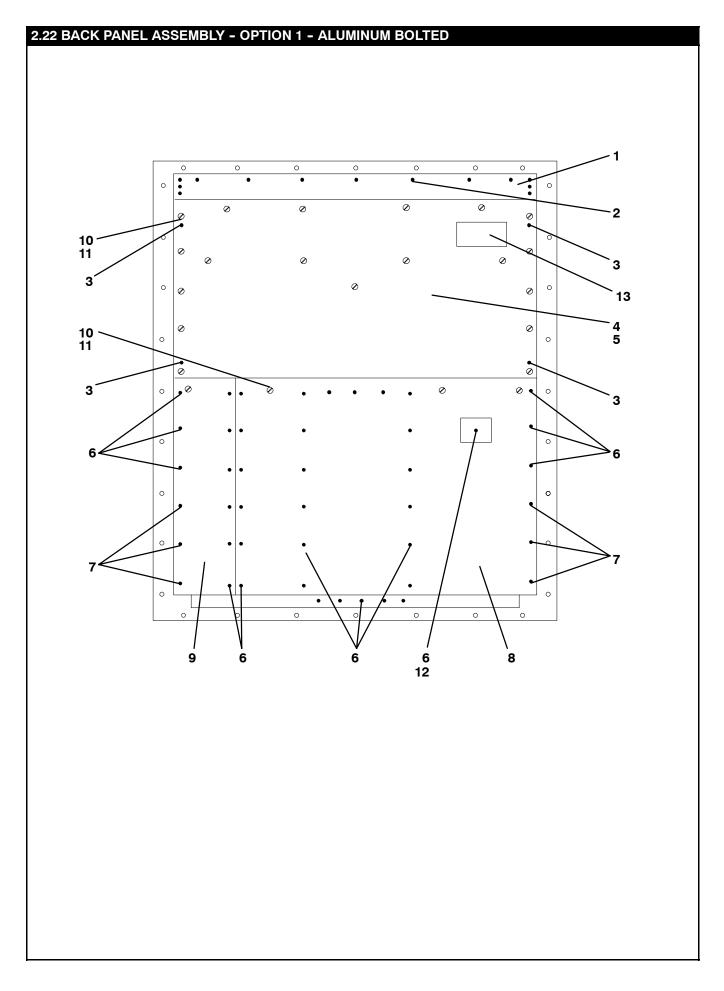


2.22 B	ACK PANEL ASSE	MBLY - OPTION 1 - ALUMINUM BOLTED	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top (Unpainted)	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	21
3	66U1-7982-2	Rivet, TIR, 3/16 Diameter, Grip Range - 5/64-11/64	4
4	69NT41-942-3	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side (Location - Behind upper panel)	2
NS	NSS	Drain Pan, Center (Location - Behind upper panel - Top)	1
5	42-00334-00	Gasket (Location - Behind upper panel)	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
6	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
7	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/4	3
8	68-13475-00	Panel, Bottom, (Painted)	1
8	68-13475-08	Panel, Bottom, (Unpainted)	1
9	68-13475-01	Panel, Bottom (Provision for heat exchanger location), (Painted)	1
9	68-13475-09	Panel, Bottom (Provision for heat exchanger location), (Unpainted)	1
10	66U1-2403	Screw, Machine, Truss Head, #10-24 x 1/2 lg SST	20
11	69NT35-2692	Washer, Fender, #10 x 1.00 OD - SST	20
12	69NT35-2257	Duct, Air	1
13	62-02822-01	Label, Carrier Transicold	1

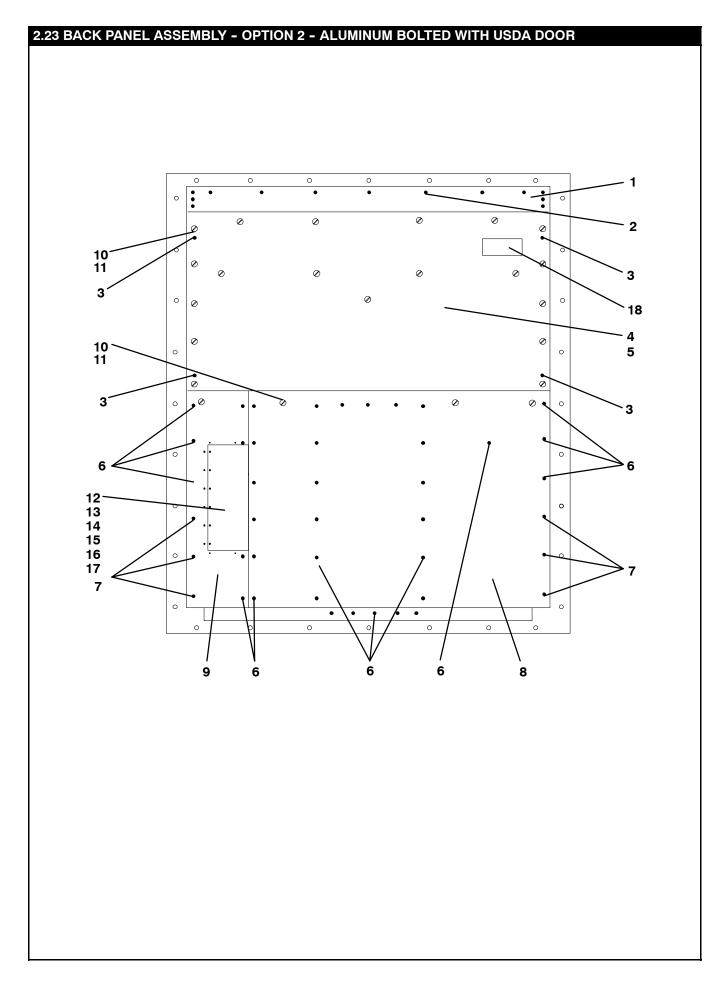


2.23 E	BACK PANEL ASSE	MBLY - OPTION 2 - ALUMINUM BOLTED WITH USDA DOOR	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	17
3	66U1-7982-2	Rivet, TIR, 3/16 Diameter, Grip Range - 5/64-11/64	4
4	69NT41-942-3	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side (Location - Behind upper panel)	2
NS	NSS	Drain Pan, Center (Location - Behind upper panel)	1
5	42-00334-00	Gasket (Location - Behind upper panel)	1
6	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	41
7	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/4	6
8	68-12881-00	Panel, Bottom	1
9	68-12881-01	Panel, Bottom (Provision for heat exchanger location)	1
10	66U1-2403	Screw, Machine, Truss Head, #10-24 x 1/2 lg SST	18
11	69NT35-2692	Washer, Fender, #10 x 1.00 OD - SST	18
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
12	69NT40-567-2	Door Assembly, Access- Includes:	1
13	44-00376-00	Hinge	1
14	69NT35-7662-2	Spacer, Hinge	1
15	34-01150-30	Washer, Retaining	2
16	34-01150-04	Stud, 1/4 Turn, 0.97 lg.	2
17	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/4-5/16	6
18	62-02822-01	Label, Carrier Transicold	1

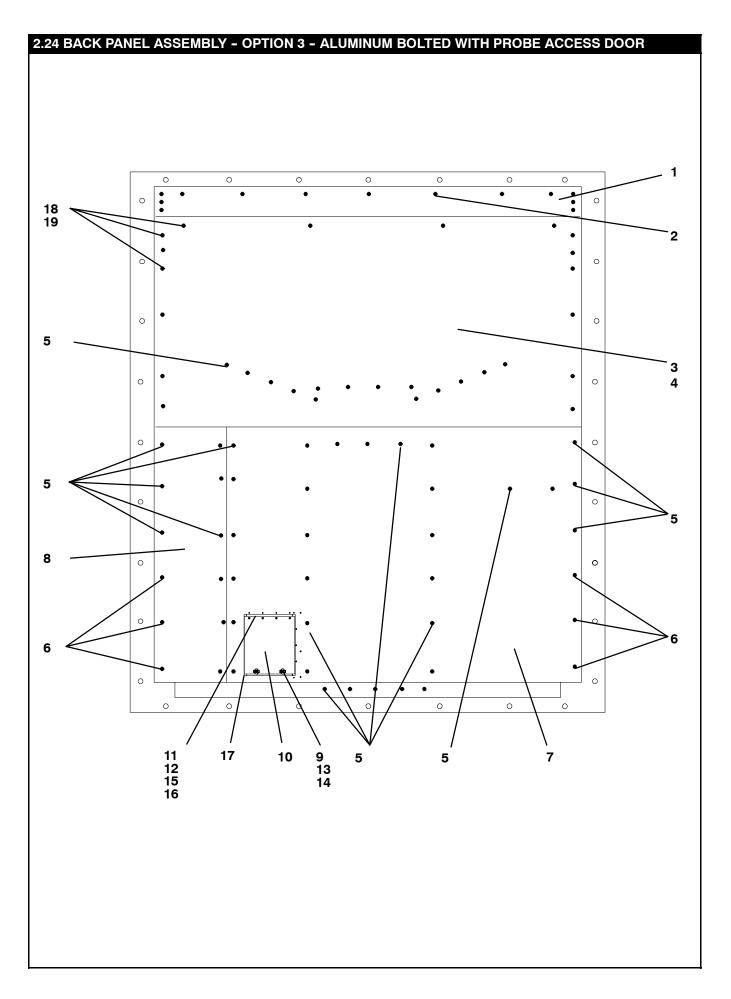


2.24 B	ACK PANEL ASSE	MBLY - OPTION 3 - ALUMINUM BOLTED WITH PROBE ACCESS DOOR	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	17
3	69NT41-942-3	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side	2
NS	NSS	Drain Pan, Center	1
4	42-00334-00	Gasket (Location - Behind upper panel)	1
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/4	8
7	68-13475-04	Panel, Bottom (Painted)	1
8	68-13475-01	Panel, Bottom (Painted	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
9	34-01150-31	Receptacle, Retaining	2
10	69NT43-471	Door Assembly, Probe Access - Includes:	1
11	66U1-2803-10	Hinge	1
12	69NT35-7662-3	Spacer, Hinge	1
13	34-01150-30	Washer, Retaining	2
14	34-01150-04	Stud, 1/4 Turn, 0.97 lg.	2
15	34-00928-04	Rivet, Blind, 1/8 Diameter, Grip Range - 1/4-5/16	8
16	69NT35-3286	Plate, Door Back - Upper	1
17	69NT35-3296	Plate, Door Back - Lower	1
18	66U1-2403	Screw, Machine, Truss Head, #10-24 x 1/2 lg SST	18
19	69NT35-2692	Washer, Fender, #10 x 1.00 OD - SST	18

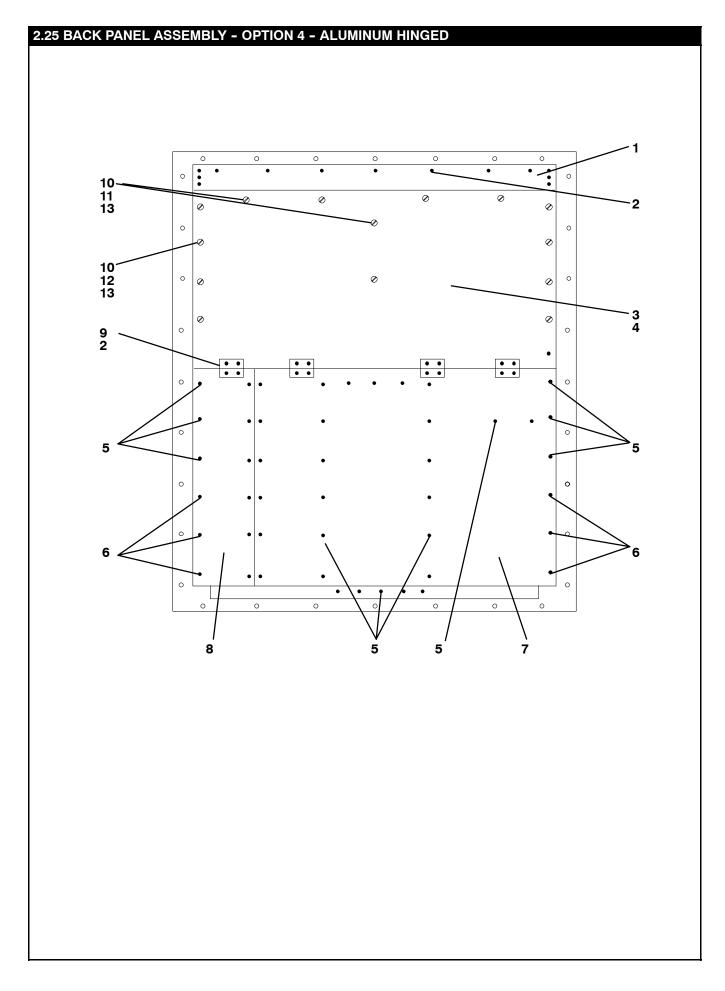

2.25 B	ACK PANEL ASSE	MBLY - OPTION 4 - ALUMINUM HINGED	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	37
3	69NT41-942-4	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side	2
NS	NSS	Drain Pan, Center	1
4	42-00334-00	Gasket (Location - Behind upper panel)	1
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/9	3
-	68-13475-00	Panel, Bottom, (Painted)	1
7	68-13475-08	Panel, Bottom, (Unpainted)	1
8	68-13475-01	Panel, Bottom (Provision for USDA location), (Painted)	1
8	68-13475-09	Panel, Bottom (Provision for USDA location), (Unpainted)	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
9	69NT35-3282	Hinge	4
10	34-01150-30	Washer, Retaining	14
11	34-01150-06	Stud, 1/4 Turn, 1.03 lg.	6
12	34-01150-03	Stud, 1/4 Turn, 0.94 lg.	8
13	34-01150-31	Receptacle, Retaining	14

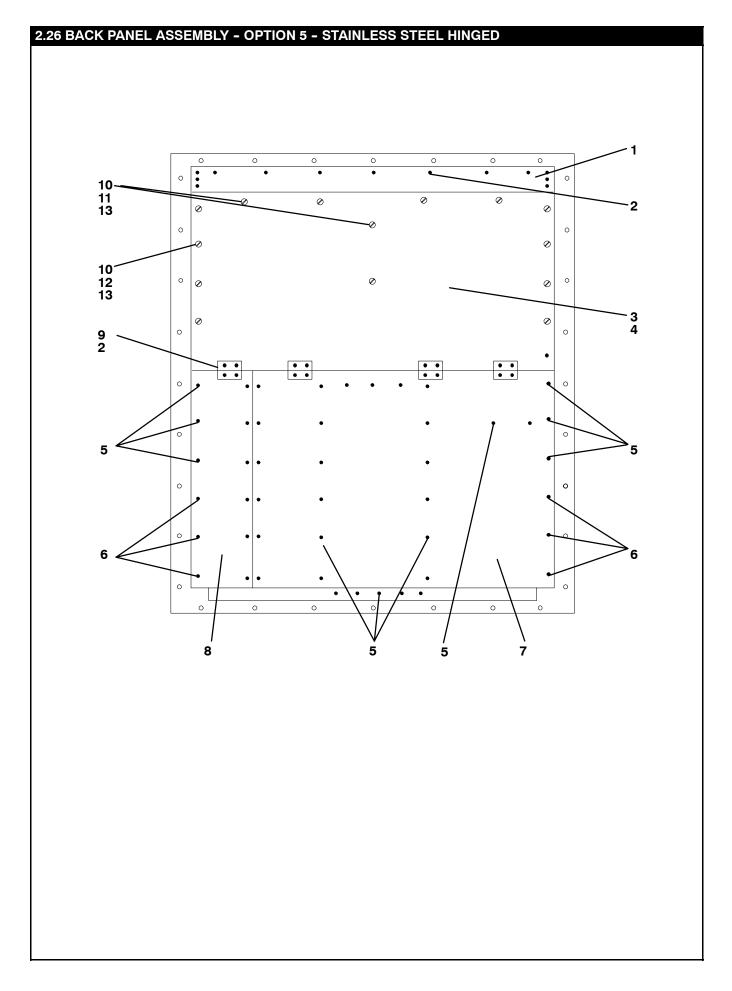


2.26 B	ACK PANEL ASSE	MBLY - OPTION 5 - STAINLESS STEEL HINGED	
Item	Part Number	Description	Qty
1	69NT43-464	Grille, Top	1
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	37
3	69NT41-942-5	Panel Assembly, Upper - Includes:	1
NS	NSS	Drain Pan, Side	2
NS	NSS	Drain Pan, Center	1
4	42-00334-00	Gasket (Location - Behind upper panel)	1
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/9	3
7	69NT35-6598	Panel, Bottom. SST	1
8	69NT35-6598-1	Panel, Bottom (Provision for USDA location), SST	1
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R
9	69NT35-3282	Hinge	4
10	34-01150-30	Washer, Retaining	14
11	34-01150-06	Stud, 1/4 Turn, 1.03 lg.	6
12	34-01150-03	Stud, 1/4 Turn, 0.94 lg.	8
13	34-01150-31	Receptacle, Retaining	14

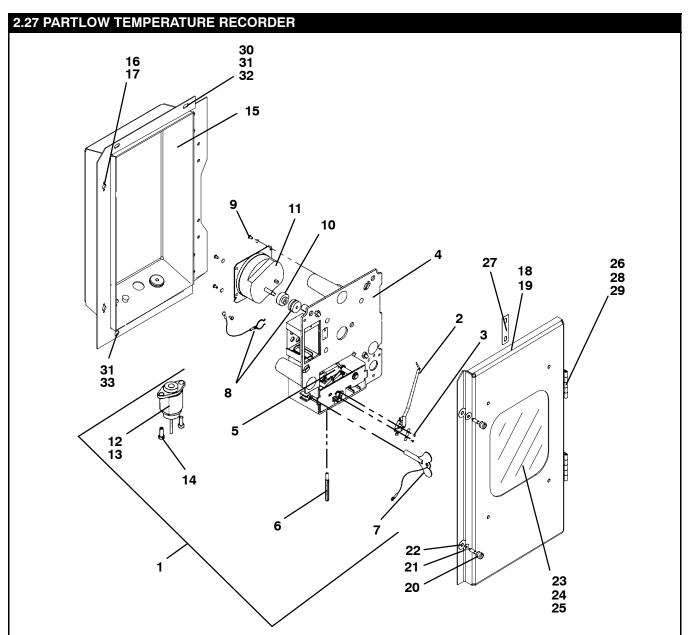



Item	Part Number	Description	Qty
OPTIO	N 1, OPTION 2, OP	TION 3 AND OPTION 4	
-	76-00701-04 OPTION 1	Recorder Kit-Partlow without Simpson Probe - Includes: Recorder, Box and Door Assy's	1
1	12-00421-02	Temperature Recorder without Simpson Probe-Includes:	1
-	76-00701-00 OPTION 2	Recorder Kit-Partlow with Simpson Probe - Includes: Recorder, Box and Door Assy's	1
1	12-00421-00	Temperature Recorder with Simpson Probe-Includes:	1
_	76-00701-01 OPTION 3	Recorder Kit-Partlow, Battery Operated without Simpson Probe - Includes: Recorder, Box and Door Assy's (For field installation, units provisioned for - Refer to Unit Matrix)	1
1	12-00421-01	Temperature Recorder, Battery Operated w/o Simpson Probe –Includes:	1
_	76-00701-12 OPTION 4	Recorder Kit-Partlow, Battery Operated without Simpson Probe - Includes: Recorder, Box and Door Assy's(For field installation, units provisioned for - Refer to Unit Matrix)	1
1	12-00421-03	Temperature Recorder, Battery Operated w/ Simpson Probe -Includes:	1

		THOUT PROBE & OPTION 2 - PARTLOW WITH PROBE (Continued)	01
Item	Part Number	Description	Qty
2	09-00104-05	Kit, Stylus - Includes:	1
3	NSS	Screw, Round Head, #2-56 x 3/16 lg.	2
4	09-00296-00	Mechanism and Platen Assembly	1
5	09-00345-00	Main Lever and Push Rod Assembly (Includes Setscrews)	1
6	09-00344-00	Rod, Push	1
7	09-00114-00	Key, Clock Winding	1
8	09-00119-00	Nut and Chain, Chart (Sonceboz Clock)	1
8	09-00180-00	Nut and Chain, Chart (Gluck Clock)	1
9	PL	Screw, Round Head #6-32 x 5/16	7
10	09-00118-00	Flange, Chart Drive (Sonceboz)	1
10	09-00180-01	Flange, Chart Drive (Gluck)	1
11	09-00123-00	Clock, 31 Day, CCW (Counterclockwise)	1
11	09-00302-00	Clock, 31 Day, CCW (Counterclockwise) Battery Operated Used with P/N 12-00421-01 & 03	1
12	09-00137-00	O-Ring, Element Flange	4
13	09-00209-00	Element, 9 ft. lg Includes:	1
NS	09-00222-00	Sensor, Thermistor (Accessory 344 and Jack) - 15 ft. lg.	1
13	09-00236-00	Element, 10 ft. lg. Used with P/N 12-00421-01 & -02	1
14	09-00136-00	Screw, Flange	2
15	76-00701-06SV	Box Assembly - Includes:	1
16	34-01142-01	Receptacle - #12	2
17	34-00928-01	Rivet, Blind, .125 Diameter, Grip Range .063125 - SST	4
NS	09-00303-00	Battery Cover (Includes Hardware)	1
NS	22-02243-00	Pin (Use with Partlow Thermistor Assembly)	3
NS	09-00128-00	Charts °F - 31 Day (Box of 50) (-20°F to +80°F)	A/R
NS	09-00128-01	Charts °C - 31 Day (Box of 50) (-25°C to +25°C)	A/R
18	76-00701-05	Door Assembly - Includes:	1
19	42-01098-01	Gasket, Door	1
20	66U1-6811-8	Screw, Retaining - SST	2
21	34-06053-00	Washer, 1/4 I.D. x 1 O.D Mylar	2
22	34-06169-00	Washer, Retaining - SST	2
23	69NT35-5022-5	Window	1
24	69NT35-5352-1	Gasket	1
25	34-00795-09	Nut, Selflock, 1/4-20 - SST	4
26	44-00374-00	Hinge - SST	2
27	58-04101-07	Protector, .010 Thick x .75 x 2.63 - Mylar	4
28	34-06179-00	Screw, Hex Head, Slotted, #10-24 x 7/16 lg SST	8
29	34-06179-04	Screw, Hex Head, Slotted, #10-24 x 5/16 lg SST	4
30	66U1-5321-7	Washer, Flat, 1/4 - SST	2
31	66U1-5361-25	Screw, Cap, Hex Head, 1/4-20 x .75 lg SST	4
32	34-06053-13	Washer, Retaining, .19 I.D. x .80 O.D Mylar	2
33	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2
NS	PL	Battery - 1.5 volt (D cell size) Alkaline	1

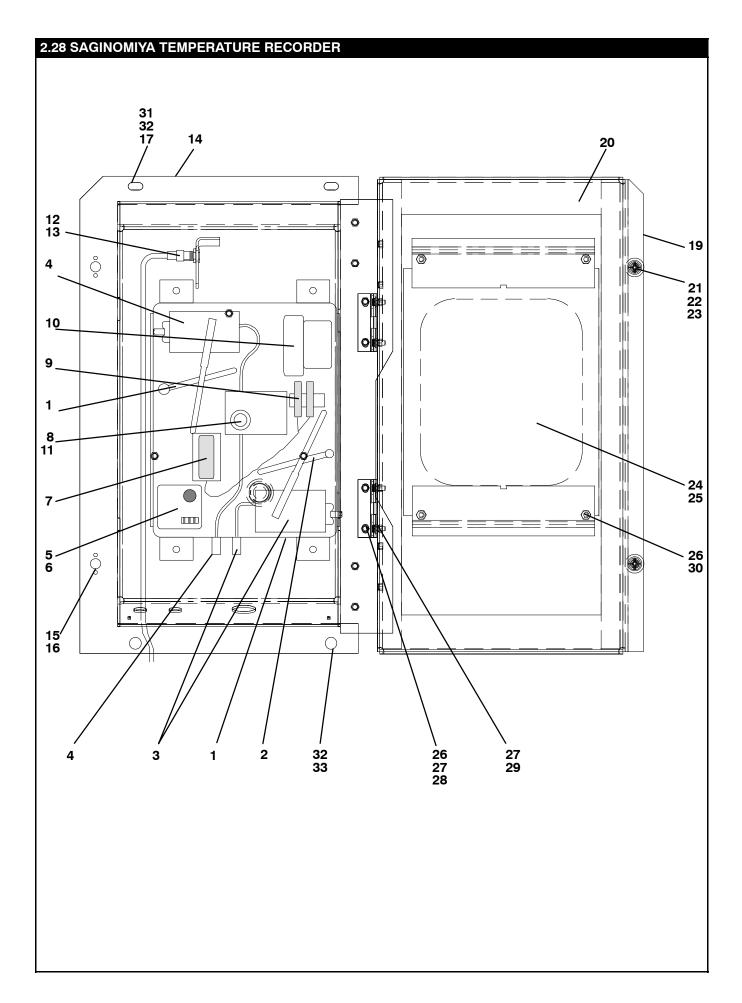


	AGINOMIYA TEMPE	RATURE RECORDER	
Item	Part Number	Description	Qty
OPTIO	N 5 - SAGINOMIYA	WITHOUT PROBE AND & OPTION 6 - SAGINOMIYA WITH PROBE	
-	76-00701-03 OPTION 5	Recording Thermometer Assembly w/Return Sensor - Includes: Recorder, Box and Door Assy's	1
1	12-01094-00	Recording Thermometer w/Return Sensor - Includes:	1
-	76-00701-02 OPTION 6	Recording Thermometer Assembly w/Return & Supply Sensor - Includes: Recorder, Box and Door Assy's	1
1	12-01094-01	Recording Thermometer w/Return and Supply Sensor - Includes:	1
2	09-00365-00	Stylus, Lift Arm (See NOTE)	1
3	09-00364-00	Element Assembly	1
4	09-00367-00	Element Assembly (Used on P/N 12-01094-01)	1
5	09-00362-00	Indicator, Voltage	1
6	09-00363-00	Plate, Recorder	1
7	PL	Battery (Mallory R14P/S 1.5 vdc)	1
8	09-00326-00	Shaft, Chart	1
9	09-00329-00	Block, Terminal	1
10	09-00322-00	Timer (31 Day)	1
11	09-00325-00	Nut, Chart (Male)	1
12	69NT40-402-1	Sensor Assembly, Return Temperature (Used on 76-00701-02) - Includes:	1
NS	12-01095-00	Sensor, Thermistor	1
13	22-02370-00	Jack, Phono (Used on 76-00701-02)	2
14	76-00701-06SV	Box Assembly, Recorder - Includes:	1
15	34-01142-01	Receptacle, Retaining	2
16	34-00928-01	Rivet, Blind, .125 Diameter, Grip Range .063125 - SST	4
17	34-06053-13	Washer, .195 I.D. x .80 O.D Mylar	2
18	34-01142-01	Receptacle, Retaining	2
19	76-00701-05	Door Assembly, Recorder Box - Includes:	1
20	42-01098-01	Gasket, Door	1
21	66U1-6811-8	Screw, Retaining - SST	2
22	34-06169-00	Washer, Retaining - SST	2
23	34-06053-00	Washer, 1/4 I.D. x 1.00 O.D Mylar	4
24	69NT35-5022-5	Window, Lexan	1
25	69NT35-5352-1	Gasket, Window	1
26	44-00374-00	Hinge Assembly - SST	2
27	58-04101-07	Protector, Mylar (For Hinge)	4
28	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	4
29	34-06179-04	Screw, Hex Head, #10-24 x 5/16 lg SST	4
30	34-00795-09	Nut, Selflock, #10-32 - SST	4
31	66U1-5321-7	Washer, Flat, 1/4 - SST	2
32	66U1-5361-25	Screw, Cap Hex Head, 1/4-20 x .75 lg SST	4
33	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2
	09-00128-00	Charts °F - 31 Day (Box of 50) (-20°F to +80°F)	A/R
NS	00 00120 00	, , , , , , , , , , , , , , , , , , , ,	

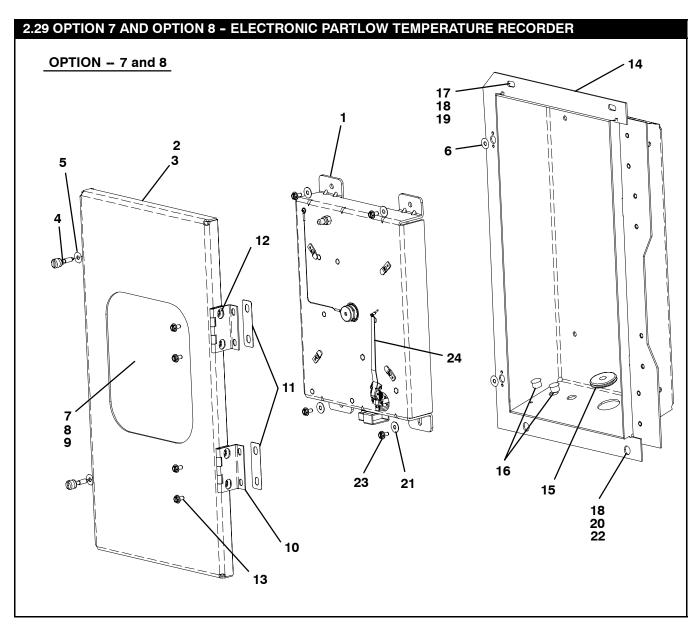

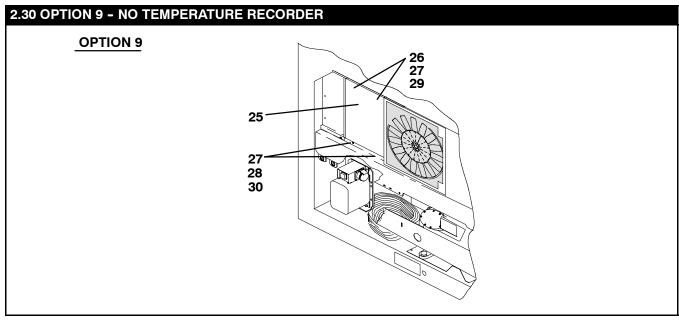

2.29 (PTION 7 AND OPT	TION 8 - ELECTRONIC PARTLOW TEMPERATURE RECORDER	
Item	Part Number	Description	Qty
1	76-00701-11 OPTION 7	Partlow Recorder Kit, Standard - Includes: Recorder, Box & Door Assy's (For field installation, units provisioned for - Refer to Unit Matrix)	1
1	12-00464-06	Electronic Temperature Recorder	1
-	76-00701-10 OPTION 8	Partlow Recorder Kit, Special - Includes: Recorder, Box & Door Assy's (For field installation, units provisioned for - Refer to Unit Matrix)	1
1	12-00464-04	Electronic Temperature Recorder	1
2	76-00701-05	Door Assembly - Includes:	1
3	42-01098-01	Seal, Door - Rubber	1
4	66U1-6811-8	Screw, Retaining300625 Panel Thickness - SST	2
5	34-06053-00	Washer, .25 I.D. x 1.00 O.D Mylar	4
6	34-06169-00	Washer, Retaining - SST	2
7	69NT35-5022-5	Window	1
8	69NT35-5352-1	Gasket	1
9	34-00795-09	Nut, Selflock, 1/4-20	4
10	44-00374-00	Hinge	2
11	58-04101-07	Protector - Mylar	4
12	34-06179-04	Screw, Hex Head, SEMS, #10-24 x 5/16 lg.	4
13	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	4
14	76-00701-06SV	Box Assembly - Includes:	1
15	58-00065-67	Grommet, 3/8 ID x 1.25 OD	1
16	58-00065-70	Plug, Hole, .50 DIA	2
17	66U1-5321-7	Washer, Flat, 1/4 - SST	2
18	66U1-5361-25	Screw, Cap, Hex Head, 1/4-20 x .75 lg SST	4
19	34-06053-13	Washer, Retaining, .19 I.D. x .80 O.D Mylar	2
20	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2
21	34-06053-05	Washer, 1/4 I.D. x 1 O.D Mylar	4
22	34-06053-03	Washer, .25 I.D. x .19 O.D Mylar	2
23	34-06179-00	Screw, Hex Head, SEMS, #10-24 x 7/16 lg.	4
24	09-00371-00	Stylus, Electronic Partlow Kit, Includes	
NS	-	Chart - Owner Supplied	A/R
NS	09-00128-00	Charts °F - 31 Day (Box of 50) (-20°F to +80°F)	A/R
NS	09-00128-01	Charts °C - 31 Day (Box of 50) (-25°C to +25°C)	A/R
NS	66U1-3882	Wire Tie	A/R
NS	58-04146-00	Base, Wire Tie	A/R

2.30 OPTION 9 - NO TEMPERATURE RECORDER				
Item	Part Number	Description	Qty	
25	68-12658-01	Panel	1	
26	66U1-5321-7	Washer, Flat, 1/4 - SST	2	
27	66U1-5361-25	Screw, Cap Hex Head, 1/4-20 x .75 lg SST	4	
28	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2	
29	34-06053-13	Washer, Retaining, .195 I.D. x .80 O.D Mylar	2	
30	34-06053-03	Washer, .25 I.D. x 1.00 O.D Mylar	2	

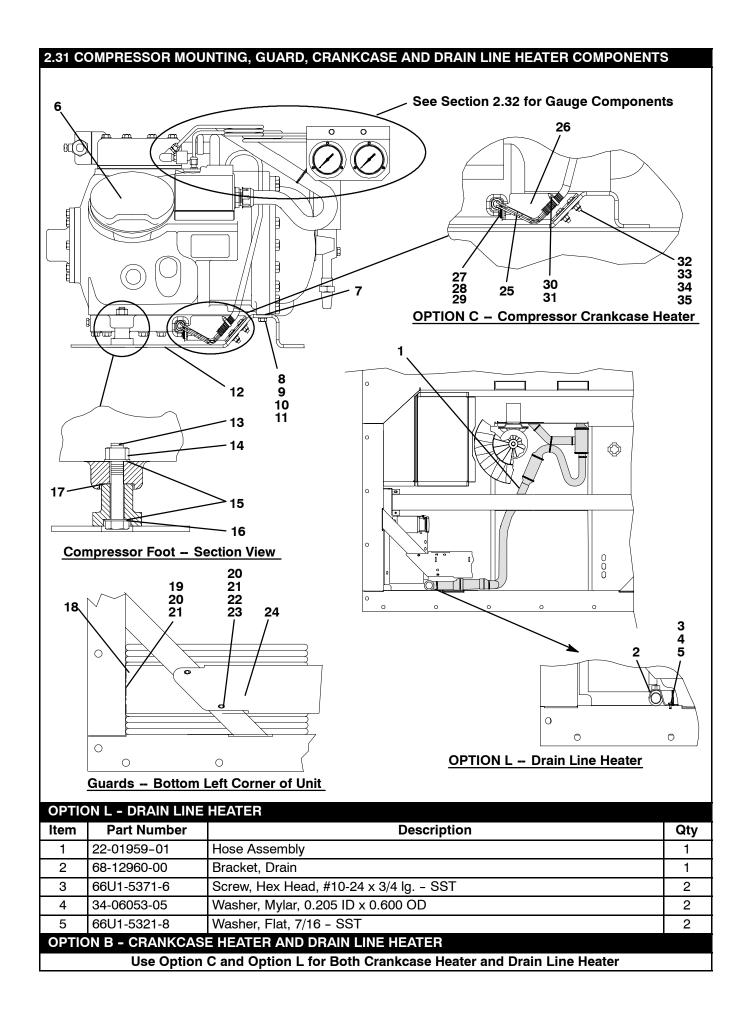



2.31 C	OMPRESSOR MOU	INTING, GUARD, CRANKCASE AND DRAIN LINE HEATER COMPONENT	Sy
Item	Part Number	Description	Qty
6	-	Compressor - Refer to Section 4	-
7	69NT35-6132	Protector (Compressor to Compressor Base)	1
8	AU11JR241	Washer, Lock, 3/8 - SST	2
9	AA06JA232	Capscrew, Hex Head, 3/8-16 x 1-1/4 lg SST	2
10	34-00829-13	Washer, Flat, 3/8 - SST	2
11	34-06053-02	Washer, Mylar, 0.375 ID x 1.00 OD	2
12	69NT43-469	Base, Compressor	1
NS	66U1-5361-7	Bolt, Hex Head, 3/8-16 x 1.00 lg SST	7
NS	66U1-5321-5	Washer, Flat, 3/8 - SST	7
NS	AU11JR241	Washer, Lock, 3/8 - SST	7
NS	34-06053-02	Washer, Mylar, 0.375 ID x 1.00 OD	7
13	34-00849-22	Capscrew, 7/16-14 x 2-3/4 lg SST	2
14	34-00667-14	Locknut, 7/16-14 - SST	2
15	66U1-5321-8	Washer, Flat, 7/16 - SST	4
16	34-06053-07	Washer, Mylar, 0.438 ID x 0.922 OD	2
17	34-06053-01	Washer, Mylar, 0.438 ID x 1.125 OD	2
10	68-12993-00	Panel, Guard	1
18	68-12523-00	Panel, Guard - Large	1
19	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	1
20	66U1-5321-7	Washer, Flat, 1/4 - SST	9
21	34-06053-00	Washer, Mylar, 1/4 ID x 3/4 OD	9
22	66U1-5361-11	Capscrew, Hex Head, 1/4-20 x 1-1/2 lg SST	4
23	34-00667-11	Locknut, 1/4-20 - SST	4
	68-12432-00	Guard, Compressor, .125 Thick Alum. (Blue)	1
04	68-12432-01	Guard, Compressor, .090 Thick Alum. (Blue)	1
24	68-12432-02	Guard, Compressor, .090 Thick Alum. (White)	1
	68-12432-03	Guard, Compressor, .125 Thick Alum., For Right Extended Guard (Blue)	1
OPTIO	N C - CRANKCASI	E HEATER (for PID NT-0850 and Up Only) See Note 1	
-	76-00766-00	Crackcase Heater Installation Kit - Includes:	1
25	24-02019-02	Heater, Compressor Crankcase (CCH) NSS	1
26	69NT-34-8248	Bracket, Heater NSS	1
27	44-00370-03	Clamp, Tube,Cushioned, 1/2 Diameter - SST	1
28	34-06053-03	Washer, Mylar, 1/4 ID x 1.0 OD	1
29	66U1-5371-6	Screw, Machine Hex Head, #10-24 x .75 lg SST	1
30	58-04316-00	Wire Tie Base	1
31	66U1-3882	Wire Tie	1
NS	66U1-3803	Heat Shrink Tubing	3
NS	22-01292-00	Butt Splice	3
NS	22-00121-27	Terminal, Ring	1
NS	02-00010-01	Thermo Grease	1
32	34-00655-08	Screw, Hex Head, 1/4-20 x 1.00 lg - SST	2
33	34-06053-00	Washer, Mylar, 0.25 ID x 0.75 OD	4
34	34-00662-11	Washer, Flat, 1/4 x 0.05 Thk.	4
35	34-00667-11	Locknut, 1/4-20	2

Notes:


 Contact your local service representative for crankcase heater applications previous to PID number NT-0850

2.32 COMPRESSOR GAUGES AND TRANSDUCERS

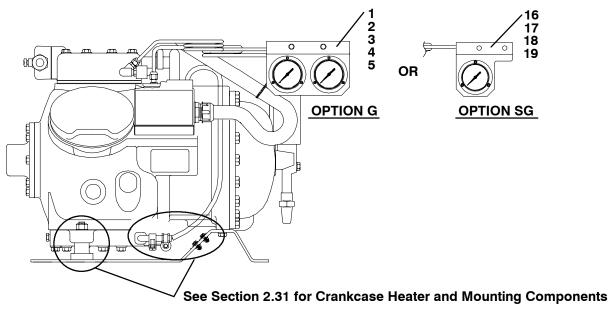


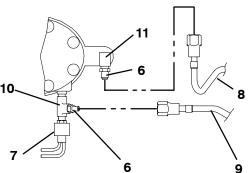


OPTION G - Center Cylinder Head View with Both gauges

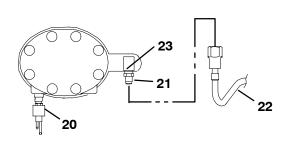

OPTION SG - Center Cylinder Head View with Suction Gauge Only

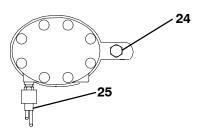


OPTION – Center Cylinder Head View without Gauges

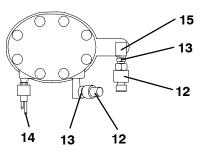


OPTION T - Center Cylinder Head View with Pressure Transducers

Item	Part Number	Description	Qty
	N G - PRESSURE	·	4.19
1	69NT41-106-2	Stiffener Assembly	1
NS	66U1-5321-8	Washer, Flat, #10 - SST	2
NS	66U1-5371-6	Screw, Hex Head, #10-24 x 3/4 lg SST	2
NS	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
2	68-13472-03SV	Bracket Assembly, Gauge	1
3	12-01124-02	Gauge, Suction Pressure	1
4	12-01125-02	Gauge, Discharge Pressure	1
5	66U1-6651-19	Screw, Pan Head, #6-32 x 7/16 lg SST	6
6	06DA403-844	Valve Assembly, Core, Check (Schrader Valve) - Brass	2
7	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1
8	69NT41-553	Tube Assembly, Low Pressure	1
9	69NT41-543	Tube Assembly, High Pressure	1
10	CA21JA051	Tee, 1/4 npt	1
11	40-00060-02	Elbow, 90 Street, 1/4 FPT x 1/4 MPT - Brass	1
OPTIO	N T - PRESSURE	TRANSDUCERS	
12	12-00352-00	Transducer, Pressure	2
13	06DA403-844	Valve Assembly, Core, Check (Schrader Valve) - Brass	2
14	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1
15	40-00060-02	Elbow, 90 Street, 1/4 FPT x 1/4 MPT - Brass	1
OPTIO	N SG - SUCTION	PRESSURE GAUGE ONLY	
16	69NT41-106-2	Stiffener Assembly	1
NS	66U1-5321-8	Washer, Flat, #10 - SST	2
NS	66U1-5371-6	Screw, Hex Head, #10-24 x 3/4 lg SST	2
NS	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
17	68-13472-01	Bracket Assembly, Gauge	1
18	12-01124-01	Gauge, Suction Pressure	1
19	66U1-6651-19	Screw, Pan Head, #6-32 x 7/16 lg SST	3
20	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1
21	06DA403-844	Valve Assembly, Core, Check (Schrader Valve) - Brass	2
22	69NT41-553	Tube Assembly, Low Pressure	1
23	40-00060-02	Elbow, 90 Street, 1/4 FPT x 1/4 MPT - Brass	1
OPTIO	N - NO GAUGES		
24	40-00123-02	Plug, Pipe, 1/4-18 NPTF - Brass	1
25	12-00309-06	Switch, High Pressure (HPS)	1
NS	22-02392-00SV	Connector, Female, 2 Pin Used w/12-00309-03 (Includes terminals & cable seal)	1

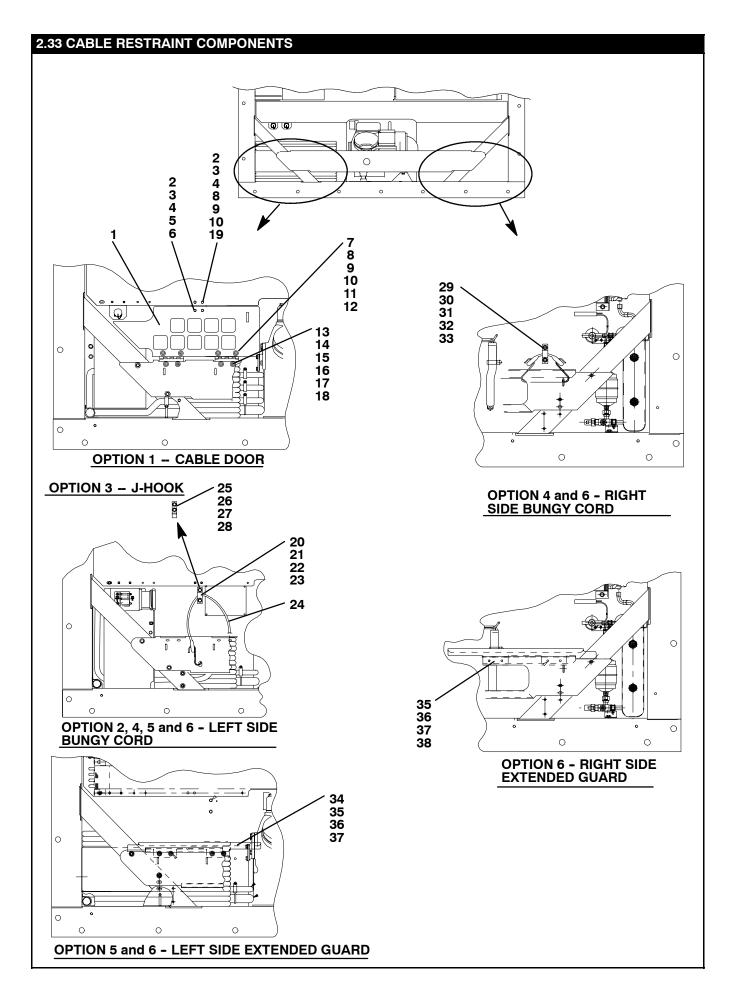


2.33 C	ABLE RESTRAINT	COMPONENTS	
Item	Part Number	Description	Qty
OPTIO	N 1 - CABLE DOO	R	
1	69NT41-724-4	Cover Assembly w/Latch, Cable Storage - Includes:	1
2	34-06126-08	Screw, Hex Head, #4-40 x 1/2 lg SST	2
3	34-00662-05	Washer, Flat, #4 -SST	4
4	34-00667-05	Locknut, Hex Head, #4-40	2
5	34-06053-08	Washer, Mylar, 1/8 ID x 3/8 OD	2
6	44-00340-03	Latch	1
7	69NT35-8032	Hinge	2
8	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	4
9	66U1-5321-8	Washer, Flat, #10	4
10	34-00667-09	Locknut, Hex Head, #10-24 - SST	4
11	34-06053-05	Washer, Mylar, 3/16 ID x 5/8 OD	4
12	58-04001-02	Protector, Mylar	2
13	58-04001-01	Protector, Mylar	1
14	34-06053-05	Washer, Mylar, 3/16 ID x 5/8 OD	2
15	34-01167-01	Retainer, Nut	1
16	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
17	66U1-5321-8	Washer, Flat, #10 - SST	2
18	66U1-5331-3	Washer, Lock, #10 - SST	4
19	44-00340-05	Latch, Catch	1
OPTIO	N 2 - LEFT BUNG	CORD ONLY	
20	69NT35-5992	Cable Restraint	1
21	66U1-5321-7	Washer, Flat, 1/4 - SST	2
22	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
23	34-06053-03	Washer, Mylar, .25 I.D. X 1.00 O.D.	2
24	66U1-2603	Strap, Tie Down	1
OPTIO	N 3 - J-HOOK		
25	69NT35-8382	Cable Restraint, J-Hook	1
26	58-04026-22	Protector, Mylar	1
27	66U1-5321-7	Washer, Flat, 1/4 - SST	2
28	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
OPTIO	N 4 - LEFT AND R	IGHT BUNGY CORD	
		Use Option 2 Plus the Items Below	
29	66U1-2603	Strap, Tie Down	1
30	69NT35-5992	Cable Restraint	1
31	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
32	66U1-5321-7	Washer, Flat, 1/4 - SST	2
33	34-06053-03	Washer, Mylar, .25 I.D. X 1.00 O.D.	2
OPTIO	N 5 - LEFT BUNGY	CORD WITH LEFT EXTENDED GUARD	
		Use Option 2 Plus the Items Below	
34	68-13310-00	Bracket, Left	1
35	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	A/R
36	66U1-5321-8	Washer, Flat, #10 - SST	A/R
37	34-06053-05	Washer, Mylar, 3/16 ID x 5/8 OD	A/R
OPTIO	N 6 - LEFT AND R	IGHT BUNGY CORD WITH EXTENDED GUARDS	
		Use Option 4 and 5 Plus the Items Below	
38	68-13310-01	Bracket, Right	1
-	•	•	

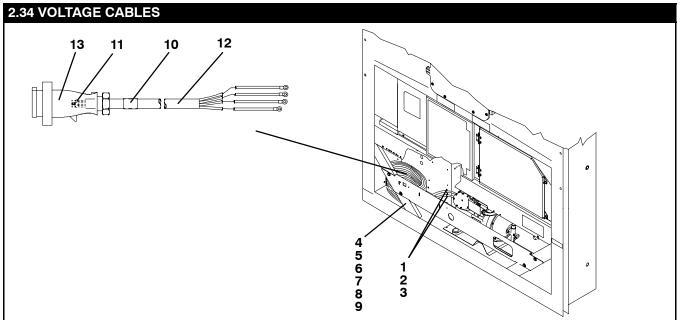


Item	Part Number	Description	Qty
CLAM	PS ON BACK WAL	AND CABLE CUTTERS	
_	34-00373-56	Clamp, Tube, Cushioned, 9/16 Diameter (Used with Transicord)	A/R
1	34-00373-59	Clamp, Tube, Cushioned, 3/4 Diameter	A/R
2	66U1-5381-1	Screw, Hex Head, #10-24 x 3/4 lg SST	A/R
3	34-06053-03	Washer, Mylar, 1/4 ID x 1.00 OD	A/R
	69NT35-6412-2	Clamp, Cable Cutter, 8 AWG cable	1
4	68-14456-00	Clamp, Cable Cutter, 10 AWG cable	1
	58-14456-01	Clamp, Cable Cutter, 11 AWG cable	1
5	58-04026-07	Protector, Mylar	A/R
6	66U1-5361-11	Screw, Machined Hex Head, 1/4-20 x 1-1/2 lg SST	A/R
7	34-00667-11	Locknut, Hex Head, 1/4-20 - SST	A/R
8	66U1-5321-7	Washer, Flat, 1/4 - SST	A/R
9	34-06053-03	Washer, Mylar, 0.25 I.D. x 1.00 O. D.	A/R
		460V CABLES	
STANE	DARD PARTS FOR	ALL 460V CABLES	
10	66U1-2583	Heat Shrink Tube (Coil Label) - "460V"	1
11	22-02324-01	Bushing (Used with Standard Cable)	4
11	22-02324-05	Bushing (Used with Transicord)	4
OPTIO			
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-02378-00	Plug, Power	1
OPTIO			
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-02378-00	Plug, Power	1
OPTIO			
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01891-00	Plug, Power	1
OPTIO			
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01891-00	Plug, Power	1

2.34 V	OLTAGE CABLES	(Continued)	
Item	Part Number	Description	Qty
OPTIC	N 5		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01883-00	Plug, Power	1
OPTIC	N 6		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01891-00	Plug, Power	1
OPTIC	ON 7		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01891-00	Plug, Power	1
OPTIC	N 8		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01932-00	Plug, Power	1
OPTIC	ON 9		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-02232-00	Plug, Power	1
		230V CABLES	
STAN		ALL 230V CABLES	
10	66U1-2583-1	Heat Shrink Tube (Coil Label) - "230V"	1
11	22-02324-02	Bushing (Used with 8 AWG)	4
12	66U1-9782-1	Cable, Power - Black, 35 amps, 8 AWG	A/R
OPTIC			
13	22-02188-00	Plug, Power	1
OPTIC			
13	22-02375-00	Plug, Power	1
OPTIC			
13	66U1-6782-3	Plug, Power	1
OPTIC			
13	22-01744-00	Plug, Power	1
OPTIC			
13	22-02322-00	Plug, Power	1
OPTIC			
13	22-01884-00	Plug, Power	1
OPTIC			
13	66U1-6782	Plug, Power	1
OPTIC			
13	22-01931-00	Plug, Power	1
OPTIO			
13	22-01906-00	Plug, Power	1

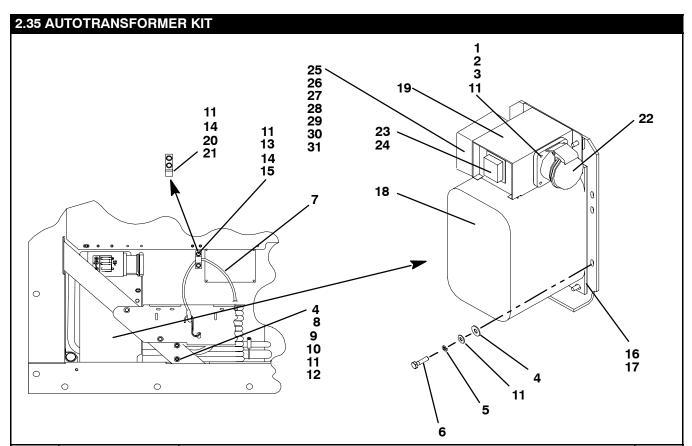


Item	Part Number	Description	Qty
STANE	DARD PARTS INCL	UDED IN EVERY 76-00670 SERVICE KIT	
1	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	4
2	66U1-5321-8	Washer, Flat, #10 - SST	4
3	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
4	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	5
5	AU11JR171	Washer, Lock, 1/4 - SST	5
6	AA06JA170	Screw, Hex Head, 1/4-20 x 1.00 lg.	5
7	66U1-2603	Strap, Tie Down	1
	69NT35-6412-2	Clamp, Cable Cutter, 8 AWG cable	1
8	69NT35-6412	Clamp, Cable Cutter, 10 AWG cable	1
	69NT35-6412-1	Clamp, Cable Cutter, 11 AWG cable	1
9	58-04026-07	Protector, Mylar	1
10	66U1-5361-11	Screw, Machined Hex Head, 1/4-20 x 1-1/2 lg SST	2
11	66U1-5321-7	Washer, Flat, 1/4 - SST	A/R
12	34-00667-11	Locknut, Hex Head, 1/4-20 - SST	2
13	69NT35-5992	Clamp, Tie Down Strap	1
14	66U1-5361-25	Bolt, Hex Head, 1/4-20 x 3/4 lg SST	A/R
15	34-06053-03	Washer, Mylar, 0.25 ID x 1.00 O.D.	2
16	69NT43-374	Bracket Assembly	1
17	58-04026-17	Protector, Mylar	1

2.35 A	UTOTRANSFORME	R KIT (Continued)	
Item	Part Number	Description	Qty
OPTIC	N 1 - AUTOTRANS	FORMER	
	See Previous F	Page for Standard Parts Included in the Kit and use with Items Below	
_	76-00670-02	Transformer Kit, Field Installation, without CB2 - Includes:	1
18	10-01139-04	Transformer, Dual Voltage Modular	1
NS	22-01778-00	Terminal Block - Used only without CB2	1
19	69NT43-470-1	Box Assembly	1
20	69NT35-8382	Clamp, Tie Down Strap	1
21	58-04026-22	Protector, Mylar	1
OPTIC		FORMER WITH CB2 AND RECEPTACLE	
	See Previous F	age for Standard Parts Included in the Kit and use with Items Below	_
-	76-00670-01	Transformer Kit, Field Installation, with CB2 - Includes:	1
18	10-01139-04	Transformer, Dual Voltage Modular	1
19	69NT43-470	Box Assembly - Used only with CB2	1
	22-01679-00	Receptacle, 32 Amp	1
22	22-01679-01	Receptacle, w/ Screw Cap - 32 Amp, Alternate, SOLD SEPARATELY	1
20	69NT35-8382	Clamp, Tie Down Strap	1
21	58-04026-22	Protector, Mylar	1
_	76-00667-05	Circuit Breaker Kit, Field Installation - Includes:	1
23	10-00083-05	Circuit Breaker, 70 amp - 250 vac, 50/60 hz	1
24	66U2-1531	Boot - Includes:	1
NS	NSS	Frame	1
NS	NSS	Screw, Self Sealing, #6-32 x 3/8 lg SST	6
OPTIC	N 3 - AUTOTRANS	FORMER WITH CB2 AND BRIDGING UNIT	
	See Previous F	Page for Standard Parts Included in the Kit and use with Items Below	
_	76-00670-03	Transformer Kit, Field Installation, with CB2 and TBU - Includes:	1
18	10-01139-04	Transformer, Dual Voltage Modular	1
19	69NT43-470-2	Box Assembly	1
20	69NT35-8382	Clamp, Tie Down Strap	1
21	58-04026-22	Protector, Mylar	1
-	76-00667-05	Circuit Breaker Kit, Field Installation - Includes:	1
23	10-00083-05	Circuit Breaker, 70 amp - 250 vac, 50/60 hz	1
24	66U2-1531	Boot - Includes:	1
NS	NSS	Frame	1
NS	NSS	Screw, Self Sealing, #6-32 x 3/8 lg SST	6
25	12-00474-00	Bridge Unit, Transformer	1
26	42-00470-00	Gasket, Transformer Bridge Unit	1
27	34-06221-00	Screw, Hex Head, #10-24 x 2.50 lg SST	2
28	34-00667-09	Locknut, Hex Head, #10-24 - SST	2
29	66U1-5321-8	Washer, Flat #10 - SST	2
30	34-06053-05	Washer, Mylar 0.205 I.D. x 0.600 O.D.	2
31 ODT/G	22-02324-01	Bushing, 0.142 I.D. x 0.472 O.D.	3
OPTIC		FORMER WITH CB2 AND RECEPTACLE	
	76-00670-04	Page for Standard Parts Included in the Kit and use with Items Below Transformer Kit, Field Installation, with CB2 - Includes:	1
		Everything in kit 76-00670-01 except replace Item #22 with below	1
22	22-01734-01	Receptacle, 32 Amp	1

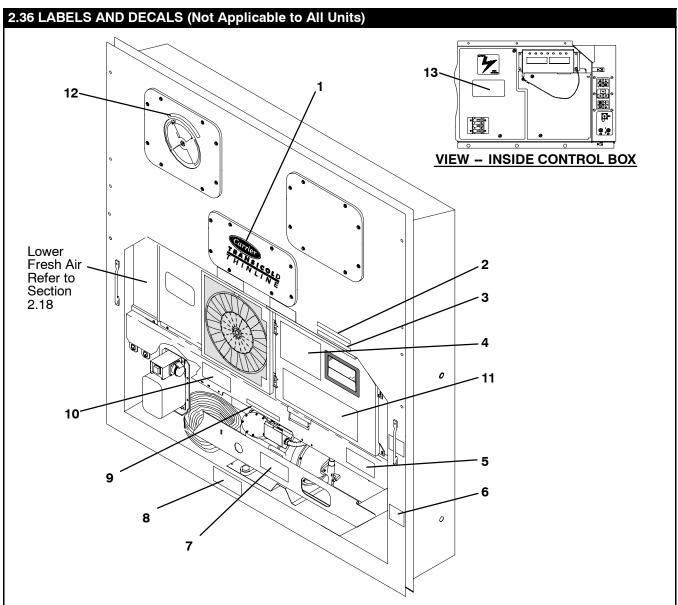


Item	Part Number	Description	Qty
STAN	DARD LABELS		
1	62-10769-00	Decal, Carrier Thinline	1
2	69NT35-3867	Label, Economy Mode	1
3	69NT35-3907	Label, Humidity Control Sensor	1
4	62-02721-00	Label, Function Code - English	1
4	62-02721-03	Label, Function Code, with Single Evaporator Fan Capability - English	1
_	62-02562-00	Label, Micro-Link 2i with USDA	1
5	62-02562-01	Label, Micro-Link 2i	1
6	62-02444-01	Label, Charge with R-134a	1
7	62-10259-00	Label, R-134a - Ozone Protection - English	1
7	62-02530-01	Label, R-134a - Ozone Protection, Umbrella Only - English	1
8	62-02458-00	Label, POE Compressor Oil	1
9	69NT35-8218	Label, Equipped w/Crankcase Heater (CCH)	1
10	62-02785-00	Label, CE	1
NS	69NT35-6118	Label, USDA (Location - Back of Unit, top left side)	1


2.36 L	ABELS AND DECAL	LS (Continued)	
Item	Part Number	Description	Qty
OPTIO	N 1 - ENGLISH		
11	62-02720-00	Label, Operating Instructions (Partlow w/ Return Air)	1
11	62-02743-14	Label, Operating Instructions (Partlow w/ Supply Air)	1
11	62-02743-16	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air)	1
11	62-02743-12	Label, Operating Instructions (Saginomiya w/ Supply Air)	1
11	62-02743-13	Label, Operating Instructions (Saginomiya w/ Return Air)	1
11	62-02743-18	Label, Operating Instructions (No Recorder)	1
12	62-02723-00	Label, Fresh Air Makeup - <i>English</i>	1
12	62-02723-03	Label, Fresh Air Makeup (w/ Full CMH) - English	1
12	62-02723-10	Label, Fresh Air Makeup (w/ Full CMH + CFM) - English	1
13	62-10532-00	Label, Welding Precautions - English	1
	N 2 - ENGLISH/SP		
11	62-02743-01	Label, Operating Instructions (Partlow w/ Return Air) - English/Spanish	1
11	62-02743-10	Label, Operating Instructions (No Recorder)- English/Spanish	1
12	62-02723-02	Label, Fresh Air Makeup - English/Spanish	1
12	62-02723-04	Label, Fresh Air Makeup (w/ Full CMH) - English/Spanish	1
13	62-10532-02	Label, Welding Precautions - English/Spanish	1
OPTIO	N 3 - ENGLISH/FR		
11	62-02743-00	Label, Operating Instructions (Partlow w/ return Air) - English/French	1
12	62-02723-01	Label, Fresh Air Makeup - English/French	1
13	62-10532-01	Label, Welding Precautions - English/French	1
	N 4 - ENGLISH/KO		
11	62-02743-02	Label, Operating Instructions (Partlow w/ Return Air) - English/Korean	1
11	62-02743-08	Label, Operating Instructions (Saginomia w/ Return Air) - English/Korean	1
12	62-02723-03	Label, Fresh Air Makeup (w/ Full CMH) - English	1
13	62-10532-00	Label, Welding Precautions - English	1
		ADITIONAL CHINESE	
11	62-02743-04	Label, Operating Instructions (Partlow w/ Return Air) - English/Chinese	1
11	62-02743-07	Label, Operating Instructions (Saginomia w/ Return Air) - English/Chinese	1
11	62-02743-19	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) - English/Chinese	1
12	62-02723-06	Label, Fresh Air Makeup - English/Chinese	1
13	62-10532-04	Label, Welding Precautions - English/Chinese	1
OPTIO	N 6 - ENGLISH/SIN	IPLIFIED CHINESE	
11	62-02743-15	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) - English/Simplified Chinese	1
11	62-02743-04	Label, Operating Instructions (Partlow w/ Return Air) - English/Simplified Chinese	1
12	62-02723-05	Label, Fresh Air Makeup - English/Simplified Chinese	1
13	62-10532-03	Label, Welding Precautions - English/Simplified Chinese	1
OPTIO	N 7 - ENGLISH/JAI	PANESE/CHINESE	
11	62-02743-09	Label, Operating Instructions (Saginomia w/ Supply and Return Air) - English/Japanese/Chinese	1
11	62-02743-17	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) -	1
12	62-02723-09	English/Japanese/Chinese Label, Fresh Air Makeup - English/Japanese/Chinese	1
12	62-02723-11	Label, Fresh Air Makeup - (w/ Shaded CMH) English/Japanese/Chinese	1
13	62-10532-06	Label, Welding Precautions - English/Japanese/Chinese	1
_ '0	102 1000E 00	Last, Tolding Freedoment English superious Offices	_ '

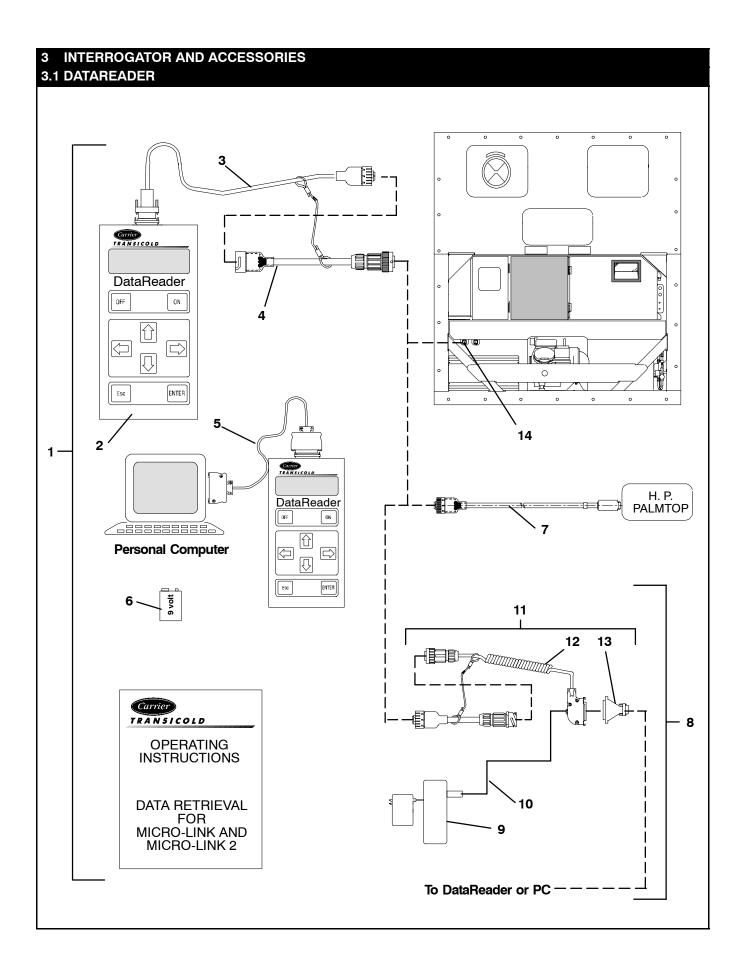

3.1 DA	TAREADER		
Item	Part Number	Description	Qty
1	07-00321-07/2.5	Kit, DataReader - Includes:	1
2	12-00377-01/2.5	DataReader	1
3	22-01737-00	Cable, Download	1
4	22-01737-01	Cable, Adapter	1
5	22-01743-00	Cable, Upload	1
6	PL	Battery, Akaline - 9 Volt	1
-	07-00421-00	DataLine Software	1
7	22-01737-02	Cable, H.P. Palmtop	1
8	76-50058-00	Kit, Battery, with Cable - Includes:	1
9	NSS	Battery, External, with Battery Charger	1
10	22-02401-00	Cable	1
11	76-50059-00	Kit, Cable, with Adapter - Includes:	1
12	22-02418-02	Cable, Interrogator	1
13	22-02420-00	Adapter	1
14	_	Receptacle - Refer to section 3.2	-

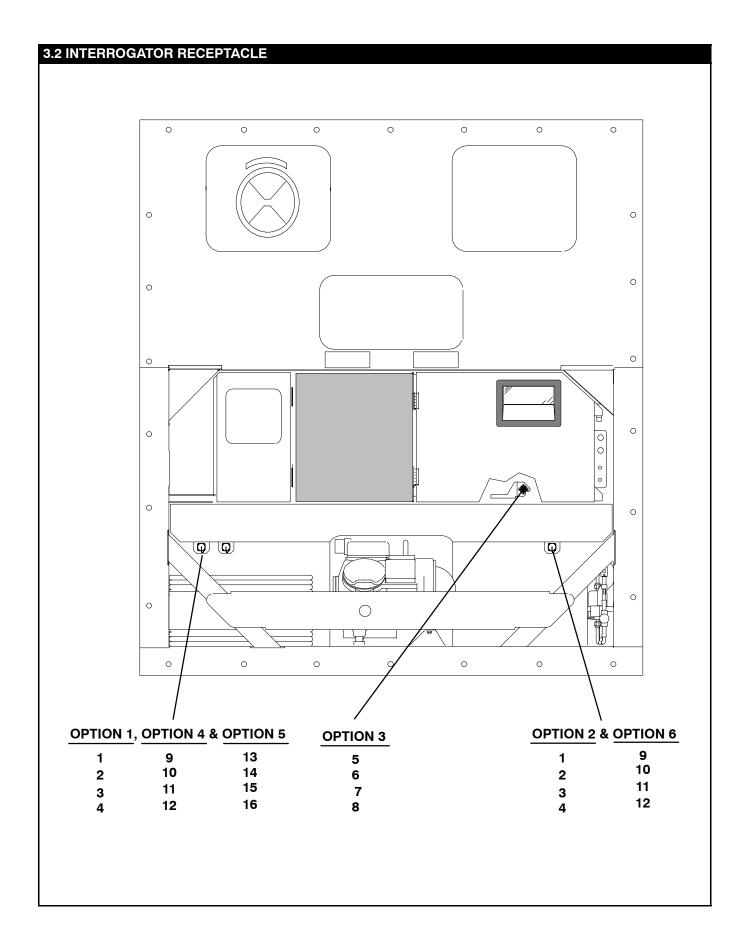

3.2 INT	ERROGATOR REC	EPTACLE	
Item	Part Number	Description	Qty
OPTIO	N 1 - LEFT STRAIG	GHT MOUNT & OPTION 2 - RIGHT STRAIGHT MOUNT	
1	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1
2	22-01613-14	Contact, Pin, #16	5
3	69NT43-176	Cap, Dust, with Tether (5 Pin)	1
4	69NT41-192	Bracket, Interrogator Connector	1
OPTIO	N 3 - BOX MOUNT		
5	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1
6	22-01613-14	Contact, Pin, #16	5
7	68-12434-02	Bracket, Interrogator Connector	1
8	42-00174-38	Gasket, Interrogator Connector Bracket	1
OPTIO	N 4 - LEFT STRAIG	GHT MOUNT AND OPTION 6 - RIGHT STRAIGHT MOUNT	
9	22-02412-00	Receptacle, Interrogator (ICR) (5 Pin)	1
10	22-02412-02	Contact, Pin, #16	5
11	22-02413-00	Cap, Dust, with Tether (5 Pin)	1
12	69NT40-222	Bracket, Interrogator Connector	1
OPTIO	N 5 - LEFT ANGLE	ED MOUNT	
13	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1
14	22-01613-14	Contact, Pin, #16	5
15	69NT43-176	Cap, Dust, with Tether (5 Pin)	1
16	68-12553-00	Bracket, Interrogator Connector	1
		NOTE	
		Do not mix silver and gold pins and sockets.	

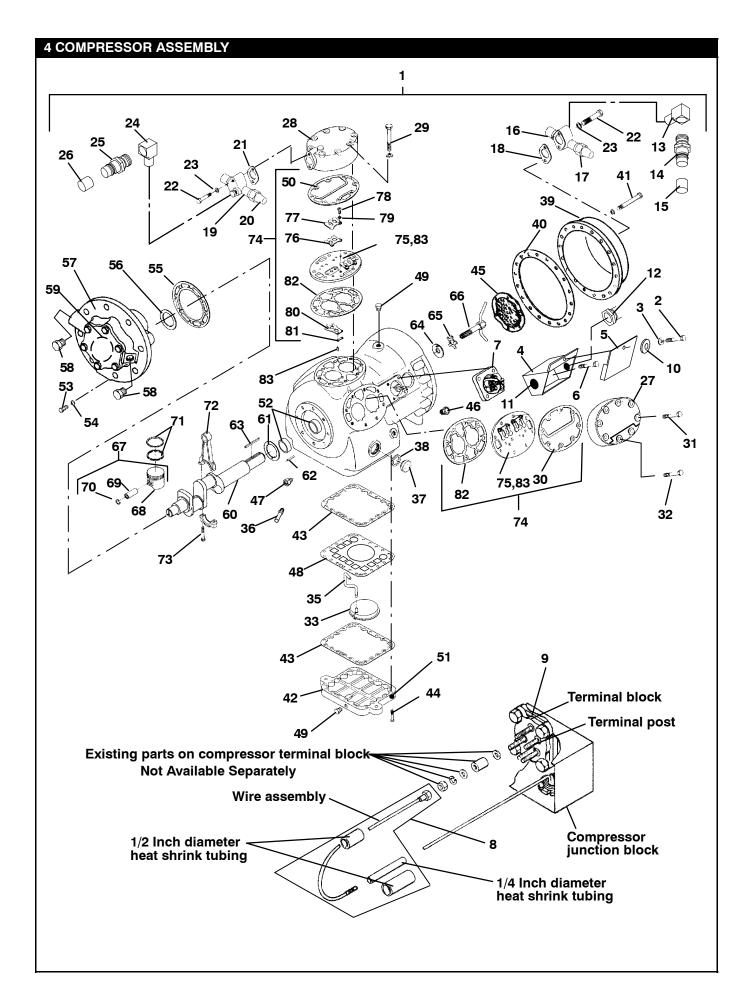

4.1 OPTION 1R - SERVICE REPLACEMENT COMPRESSOR					
Item	Part Number	Description	Qty		
1	18-00055-20SV	Compressor, 41 CFM, Single Speed, 460 vac/3 ph/60 hz	1		
NS	07-00292-00	SW20 Compressor Oil, Castrol Icematic (Quart)	4		

NOTE

Replacement Compressor is sold without terminal box and cover, and without shut-off valves. Customer should retain the original terminal box and valves for use on replacement compressor.

### 42 TERMINAL MOUNTING AND JUNCTION BOX GROUP 66U1-5371-7			in the original terminal box and valves for use on replacement compres	sor.
3 66U1-5321-8 Washer, Flat, #10 (cover to box) - SST 2 4 69NT20-513-1SV Box, Junction (Located on Front of Compressor) - Includes: 1 4 69NT20-513SV Box, Junction (Located on Back of 230/460v Compressor) - Includes: 1 5 69NT20-2083 Cover, Junction Box 1 17-40093-05 Terminal, Compressor (5 Terminals) 1 17-40093-06 Terminal, Compressor (5 Terminals) 1 17-40093-06 Terminal, Compressor (6 Terminals) 1 17-40093-05 Terminal, Compressor (6 Terminals) 1 17-40093-05 Terminal, Compressor (6 Terminals) 1 17-40075-05 Gasket, Terminal Wiring (Single Voltage) 1 17-40075-05 Gasket, Terminal Plate - Fiber 1 17-44128-00 Gasket, Terminal Plate - Fiber 1 17-44128-00 Gasket, Terminal Plate - Coated Steel 1 1 1 1 1 1 1 1 1	4.2 TE	RMINAL MOUNTIN	G AND JUNCTION BOX GROUP	
4 69NT20-513SV Box, Junction (Located on Front of Compressor) - Includes: 1	2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg. (cover to box) - SST	2
4	3	66U1-5321-8	Washer, Flat, #10 (cover to box) - SST	2
5 69NT20-2083 Cover, Junction Box 1 6 AD61JA124 Screw, Pan Head, #10-32 x 3/8 lg. (box to compressor) 4 7 17-40093-06 Terminal, Compressor (5 Terminals) 1 7 17-40093-05 Terminal, Compressor (6 Terminals) 1 8 76-00355-00 Kit, Compressor Terminal Wiring (Single Voltage) 1 NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 1 17-40075-05 Gasket, Terminal Plate - Fiber 1 1 17-44128-00 Gasket, Terminal Plate - Coated Steel 1 10 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 11 6601-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 12 22-0230-03 Connector, 3/4 Conduit A/R 43 SERVICE VALVE GROUP 4 13 40-00520-00 Coupling, M13 - Brass - Includes: 1 14 40-00520-01 Coupling, M13 - Br	4	69NT20-513-1SV	Box, Junction (Located on Front of Compressor) - Includes:	1
6 AD61JA124 Screw, Pan Head, #10-32 x 3/8 lg. (box to compressor) 4 7 17-40093-06 Terminal, Compressor (5 Terminals) 1 7 17-40093-05 Terminal, Compressor (5 Terminals) 1 8 76-00385-00 Kit, Compressor Terminal Wiring (Single Voltage) 1 NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 1NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 1NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 1NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 11 17-40075-05 Gasket, Terminal Plate - Coated Steel 1 10 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 4.3 SERVICE VALVE GROUP A/R 4.3 SERVICE VALVE GROUP 13 40-00520-03 Elbow, M13 x M13 x M13 x Brass - Includes: 1 14 40-00520-00 Coupling, M13 x M13 x Bra	4	69NT20-513SV	Box, Junction (Located on Back of 230/460v Compressor) - Includes:	1
7 17-40093-06 Terminal, Compressor (5 Terminals) 1 7 17-40093-05 Terminal, Compressor (6 Terminals) 1 8 76-00355-00 Kit, Compressor Terminal Wiring (Single Voltage) 1 NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 9 17-4075-05 Gasket, Terminal Plate - Fiber 1 10 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 12 22-02302-03 Connector, 3/4 Conduit A/R 4.3 SERVICE VALVE GROUP A/R A/R 13 40-00520-00 Elbow, M13 x M13 - Brass 1 14 40-00520-00 Elbow, M13 x M13 - Brass - Includes: 1 15 40-00520-00 Coupling, M13 - Brass - Includes: 1 16 14-00260-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Discharge Shut-Off, 7/8 ODS 1 <t< td=""><td>5</td><td>69NT20-2083</td><td>Cover, Junction Box</td><td>1</td></t<>	5	69NT20-2083	Cover, Junction Box	1
7 17-40093-05 Terminal, Compressor (6 Terminals) 1 8 76-00355-00 Kit, Compressor Terminal Wiring (Single Voltage) 1 NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 1 17-40075-05 Gasket, Terminal Plate - Fiber 1 10 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 12 22-02302-03 Connector, 3/4 Conduit A/R 4.3 SERVICE VALVE GROUP A/R 13 40-00520-00 Elbow, M13 x M13 - Brass 1 14 40-00520-00 Coupling, M13 - Brass - Includes: 1 15 40-00520-00 Coupling, M13 - Brass - Includes: 1 16 14-00260-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10812-00 Cap, Seal 1 20 17-10812-00 Cap, Seal 1 21 17-10812-00 Cap, Seal	6	AD61JA124	Screw, Pan Head, #10-32 x 3/8 lg. (box to compressor)	4
8 76-00355-00 Kit, Compressor Terminal Wiring (Single Voltage) 1 NS 76-00384-00 Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage) 1 9 17-40075-05 Gasket, Terminal Plate - Fiber 1 10 34-06053-05 Gasket, Terminal Plate - Coated Steel 1 10 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 12 22-02302-03 Connector, 3/4 Conduit A/R 4.3 SERVICE VALVE GROUP 4.3 SERVICE VALVE GROUP 4.4 13 40-00520-00 Elbow, M13 x M13 - Brass 1 1 14 40-00520-00 Coupling, M13 - Brass - Includes: 1 1 15 40-00520-02 Cap, Service Port 1 1 16 14-00206-00 Valve, Suction Service Valve 1 1 17 17-10812-00 Cap, Seal 1 1 20 17-10812-00 Cap, Seal 1 1 21 <t< td=""><td>7</td><td>17-40093-06</td><td>Terminal, Compressor (5 Terminals)</td><td>1</td></t<>	7	17-40093-06	Terminal, Compressor (5 Terminals)	1
NS	7	17-40093-05	Terminal, Compressor (6 Terminals)	1
17-4075-05 Gasket, Terminal Plate - Fiber 1 1 17-44128-00 Gasket, Terminal Plate - Coated Steel 1 1 1 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 2 11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 12 22-02302-03 Connector, 3/4 Conduit A/R 4.3 SERVICE VALVE GROUP	8	76-00355-00	Kit, Compressor Terminal Wiring (Single Voltage)	1
17-44128-00 Gasket, Terminal Plate - Coated Steel 1	NS	76-00384-00	Kit, Compressor Terminal Wiring (Dual Voltage or Single Voltage)	1
17-44128-00 Gasket, Ierminal Plate - Coated Steel 1 10 34-06053-05 Washer, Mylar, 0.205 ID x 0.600 OD 2 2 11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 4.3 SERVICE VALVE GROUP		17-40075-05	Gasket, Terminal Plate - Fiber	1
11 66U1-5562-7 Plug, 1-1/4 Diameter - Plastic A/R 12 22-02302-03 Connector, 3/4 Conduit A/R 4.3 SERVICE VALVE GROUP 13 40-00523-00 Elbow, M13 x M13 - Brass 1 14 40-00520-00 Coupling, M13 - Brass - Includes: 1 15 40-00520-02 Cap, Service Port 1 16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 21 17-10811-05 Gasket, Discharge Service Valve 1 21 17-10812-00 Cap, Seal 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 Service Valve 1 25 40-00523-01 Elbow, M15 x M15 - Brass 1 26 40-00523-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS	9	17-44128-00	Gasket, Terminal Plate - Coated Steel	1
12 22-02302-03 Connector, 3/4 Conduit A/R 4.3 SERVICE VALVE GROUP 13 40-00523-00 Elbow, M13 x M13 - Brass 1 14 40-00520-00 Coupling, M13 - Brass - Includes: 1 15 40-00520-02 Cap, Service Port 1 16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8)	10	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	2
4.3 SERVICE VALVE GROUP 13 40-00523-00 Elbow, M13 x M13 - Brass 1 14 40-00520-00 Coupling, M13 - Brass - Includes: 1 15 40-00520-02 Cap, Service Port 1 16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10812-00 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket St (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Sh	11	66U1-5562-7	Plug, 1-1/4 Diameter - Plastic	A/R
13 40-00523-00 Elbow, M13 x M13 - Brass 1 14 40-00520-00 Coupling, M13 - Brass - Includes: 1 15 40-00520-02 Cap, Service Port 1 16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP 4 NS - Gasket Set (Refer to Section 4.8) 27	12	22-02302-03	Connector, 3/4 Conduit	A/R
14 40-00520-00 Coupling, M13 - Brass - Includes: 1 15 40-00520-02 Cap, Service Port 1 16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 44 COMPRESSOR - MOTOR BODY GROUP 1 NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1	4.3 SE	RVICE VALVE GRO	UP	
15 40-00520-02 Cap, Service Port 1 16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP 1 NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Si	13	40-00523-00	Elbow, M13 x M13 - Brass	1
16 14-00206-00 Valve, Suction Shut-Off, 1-1/8 ODS 1 17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Ban	14	40-00520-00	Coupling, M13 - Brass - Includes:	1
17 17-10812-00 Cap, Seal 1 18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head,	15	40-00520-02	Cap, Service Port	1
18 17-10811-05 Gasket, Suction Service Valve 1 19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-4	16	14-00206-00	Valve, Suction Shut-Off, 1-1/8 ODS	1
19 14-00206-01 Valve, Discharge Shut-Off, 7/8 ODS 1 20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	17	17-10812-00	Cap, Seal	1
20 17-10812-00 Cap, Seal 1 21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	18	17-10811-05	Gasket, Suction Service Valve	1
21 17-10811-05 Gasket, Discharge Service Valve 1 22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	19	14-00206-01	Valve, Discharge Shut-Off, 7/8 ODS	1
22 66U1-5361-46 Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST 2 23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	20	17-10812-00	Cap, Seal	1
23 17-40013-00 Gasket, Bolt, 5/16 2 24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP 1 NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	21	17-10811-05	Gasket, Discharge Service Valve	1
24 40-00523-01 Elbow, M15 x M15 - Brass 1 25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	22	66U1-5361-46	Bolt, Hex Head, 5/16-18 x 1-7/8 lg SST	2
25 40-00520-01 Coupling, M15 - Brass - Includes: 1 26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	23	17-40013-00	Gasket, Bolt, 5/16	2
26 40-00520-03 Cap, Service Port 1 4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5	24	40-00523-01	Elbow, M15 x M15 - Brass	1
4.4 COMPRESSOR - MOTOR BODY GROUP NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	25	40-00520-01	Coupling, M15 - Brass - Includes:	1
NS - Gasket Set (Refer to Section 4.8) 27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	26	40-00520-03	Cap, Service Port	1
27 17-21040-00 Head, Cylinder - Side Bank (Shaved Head) 2 28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	4.4 CO	MPRESSOR - MOT	TOR BODY GROUP	
28 17-40016-01 Head, Cylinder - Center Bank 1 29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	NS	-	Gasket Set (Refer to Section 4.8)	
29 17-40018-05 Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5 8 30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	27	17-21040-00	Head, Cylinder - Side Bank (Shaved Head)	2
30 17-44124-00 Gasket, Cylinder Head (Side Bank) - Coated Steel 3 31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	28	17-40016-01	Head, Cylinder - Center Bank	1
31 17-40034-05 Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5 12 32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	29	17-40018-05	Screw, Hex Head - Center Head, 3/8-16 x 3.00 lg SAE Grade 5	8
32 17-40037-05 Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5 4	30	17-44124-00	Gasket, Cylinder Head (Side Bank) - Coated Steel	3
<u> </u>	31	17-40034-05	Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5	12
33 17-40020-00 Screen Assembly, Oil Filter 1	32	17-40037-05	Screw, Hex Head, 3/8-16 x 1.00 lg SAE Grade 5	4
	33	17-40020-00	Screen Assembly, Oil Filter	1

4.4 CC	MPRESSOR - MO	FOR BODY GROUP (Continued)	
Item	Part Number	Description	Qty
34	17-40007-00	Gasket, Bolt, 1/2	4
35	17-21062-00	Tube, Oil Suction	1
36	17-44763-00	Orifice, Oil Relief	1
37	17-21201-00SV	Sight Glass Package, Oil Level - Includes:	1
38	17-44021-00	Gasket, Sight Glass - Coated Steel	1
39	17-20004-00	Cover, Motor End	1
40	17-40029-05	Gasket, Motor End Cover - Fiber	1
40	17-44136-00	Gasket, Motor End Cover - Coated Steel	1
41	PL	Screw, Hex Head, 7/16-14 x 1-1/4 lg SAE Grade 5	18
42	17-40032-00	Plate, Bottom	1
43	17-40033-05	Gasket, Bottom Plate - Fiber	2
43	17-44129-00	Gasket, Bottom Plate - Coated Steel	2
44	17-40034-05	Screw, Hex Head, 3/8-16 x 2.00 lg SAE Grade 5	22
45	17-20005-00	Strainer Assembly, Suction	1
46	PL	Plug, Pipe, Oil Fill, 1/4	1
47	17-40042-00	Check Valve Assembly, Oil Return	1
48	17-21063-00	Plate, Screen Hold Down	1
49	PL	Pipe Plug (High & Low Pressure Connection and Oil Drain), 1/4-18 NPT	3
50	17-44123-00	Gasket, Cylinder Head (Center Bank)	1
51	-	Heater, Crankcase - See section 2.31	1
52	17-40025-00	Bushing, Motor End	2
	MP END GROUP		
53	17-40037-05	Screw, Hex Head, Bearing Head, 3/8-16 x 1.00 lg SAE Grade 5	8
54	17-40019-00	Gasket, Capscrew, 3/8	8
55	17-44022-00	Gasket, Cover Plate - Coated Steel	1
56	17-55009-01	Washer, Thrust	1
57	17-44137-00	Bearing Head & Low Profile Oil Pump Package - Includes:	1
58	17-44037-00	Plug, Oil Pump (Includes O-ring)	2
59	17-44139-00	Seal, O-ring	1
	<u>. </u>	AND PISTON GROUP	
60	17-40413-00	Crankshaft	1
61	17-40050-00	Washer, Thrust	1
62	17-40048-00	Pin, Spiral, 5/32 Diameter x 5/8 lg.	2
63	34-01110-00	Key, Rotor Drive	1
64	17-21075-00	Washer, Rotor	1
65	17-21076-00	Washer, Star, Rotor, 5/8	1
66	17-21077-00	Tube Assembly, Equalizer	1
67	17-44115-01	Piston & Pin Pkg (Standard) - Includes:	6
67	17-44115-20	Piston & Pin Pkg (+0.020) - Includes:	A/R
68	NSS	Piston	1
69	17-40052-00	Pin, Piston	1
70	17-40053-00	Retainer, Piston Pin	2
71	17-40055-00	Ring, Compression (Standard)	12
71	17-55025-00	Ring, Compression (+0.020)	12
72	17-40056-02	Connecting Rod and Cap Assembly (Standard) - Includes:	6
72	17-55023-00	Connecting Rod and Cap Assembly (+0.010) - Includes:	6

4.6 CF	RANKSHAFT, ROD	AND PISTON GROUP - Continued	
Item	Part Number	Description	Qty
NS	17-40057-00	Pin, Dowel	2
73	17-55008-00	Capscrew - Special (Epoxy Coated)	2
	LVE PLATE GROU		
74	17-44109-00	Package, Valve Plate Assembly (All Banks - Canted) - Includes:	3
NS		Plate Assembly, Valve - Includes:	1
75	NSS	Plate, Valve	1
	17-40086-00	Valve, Discharge	2
	17-44160-00	Backer, Discharge Valve Stop	2
	17-44113-00	Screw, Hex Head, 1/4-28 x 3/8 lg.	4
		Washer, Lock, 1/4	4
80	17-40082-00	Valve, Suction	2
81	17-40083-00	Spring, Suction Valve Positioning	2
	17-44124-00	Gasket, Cylinder Head (Side Bank) - Coated Steel	1
	17-44123-00	Gasket, Cylinder Head (Center Bank) - Coated Steel	1
	17-55002-00	Gasket, Valve Plate	1
	17-40057-00 ASKET SET	Pin, Dowel (Valve Plate)	12
2	26		

Item -	Part Number 17-55020-21		
Item - 1	Part Number	Description	8 C
-	Part Number 17-55020-21	Description Gasket Set - Includes:	8 0 8 8 P 1 P 1 P 1 P 1 P 1 P 1 P 1 P 1 P 1
- 1	Part Number 17-55020-21 17-40005-05	Description Gasket Set - Includes: Gasket, Suction Service Valve (4 Bolt)	8 0 8 8 8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9
- 1 2	Part Number 17-55020-21 17-40005-05 17-44124-00	Description Gasket Set - Includes: Gasket, Suction Service Valve (4 Bolt) Gasket, Cylinder Head - Side Bank (Standard)	Qty 1 1 2
- 1 2 3	Part Number 17-55020-21 17-40005-05 17-44124-00 17-55002-00	Description Gasket Set - Includes: Gasket, Suction Service Valve (4 Bolt) Gasket, Cylinder Head - Side Bank (Standard) Gasket, Valve Plate	8 0 8 8 8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9
- 1 2 3 4	Part Number 17-55020-21 17-40005-05 17-44124-00 17-55002-00 17-44123-00	Description Gasket Set - Includes: Gasket, Suction Service Valve (4 Bolt) Gasket, Cylinder Head - Side Bank (Standard) Gasket, Valve Plate Gasket, Cylinder Head - Center Bank	8 0 8 8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9

Gasket, Bottom Plate

Gasket, Motor End Cover

Gasket, Pump End Bearing Head

17-40033-05

17-44022-00

17-40029-05


8 9

10

2

1

1

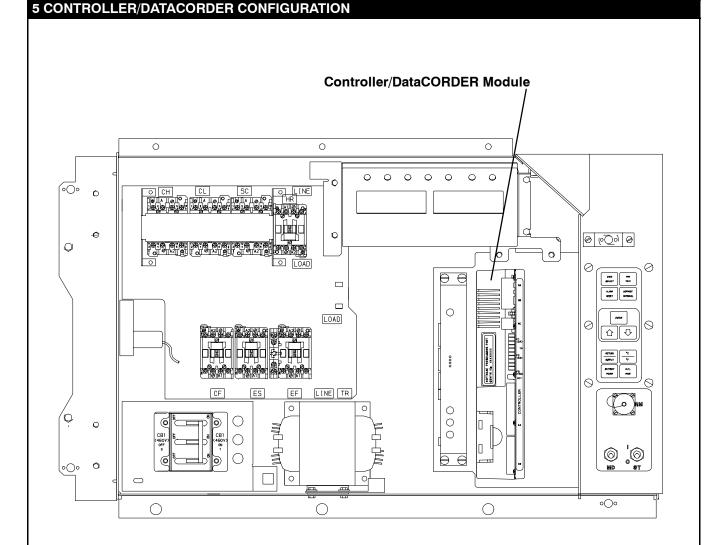

Part Number	Description		
12-55002/5121	Controller - Un-Configured (See Note 1)	1	
See Note 2	Controller - Configured (Container Unit Matrix)	1	

NOTES

- The last four digits of the Part Number is the operation software revision.
 The Controller/DataCORDER module is shipped with the operational software already loaded, however, when ordering this part number the end user must load the configuration software at the time of installation.

6 TOOLS	
PART NO.	DESCRIPTION
07-00013-00	Temperature Tester (Simpson Meter)
07-00013-01	Temperature Test Lead (15 Foot)
07-00013-02	Temperature Test Lead (50 Foot)
07-00013-03	Adapter, Male (Both Ends) (Use with Temperature Tester)
07-00015-00	Case, Carrying (Used with 07-00013-00)
07-00450-00	Wrench, Compressor Sight Glass
07-00437-00	Inspection Light with Mirror
07-00228-00	Volt-Ohmmeter, Digital
07-00229-00	Amprobe Clamp (Used with 07-00228-00)
07-00238-00	Wrench, Service Valve
07-00243-10	Multimeter, Digital (Fluke)
07-00263-00	Pliers, Crimping (Used for compressor terminal block replacement)
07-00264-00	Grip, Wire Vise (Used for compressor terminal block replacement)
07-00277-00	Kit, Static Dissipative (Used for working on electronic components)
07-00304-00	Ground Strap, Wrist (Used for working on electronic components)
07-00294-00	Gauge Set, Manifold - Fahrenheit/PSI
07-00294-05	Gauge Set, Manifold - Centigrade/KPa
07-00295-00	Detector, Leak
07-00397-03	Extractor, Pin (Used on Fan Motor Plugs and Interrogator Plugs)
07-00397-02	Crimper, Pin (Used on Fan Motor Plugs and Interrogator Plugs)
07-00329-00	Extractor, Pin (Used on Controller module connectors)
07-00330-00	Crimper, Pin (Used on Controller module connectors)
07-00370-00	Crimper, Pin (Used on Stepper Valve, HPS)
07-00387-00	Extractor, Pin (Used on Stepper Valve, HPS)
07-00375-00	Tester, Portable, Stepper Motor Drive
07-00391-00	Application Gun (Used with 07-00390-00)
07-00398-00	Software Card Programmer
07-00408-00	Stepper Jumper Assembly
07-00418-00	Torx Driver Bit
	Refer to Manual 62-03213

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
02-00010-01	55	09-00114-00	49	10-01139-04	63
02-00082-00	9	09-00118-00	49	10-0298-01	13
04-50027-00	18, 33	09-00119-00	49	12-00275-19SV	17
06DA403-844	25, 57	09-00123-00	49	12-00309-06	57
07-00013-00	75	09-00128-00	49, 51, 53	12-00342-02	37
07-00013-01	75	09-00128-01	49, 51, 53	12-00342-03	37
07-00013-02	75	09-00136-00	49	12-00342-04	37
07-00013-03	75	09-00137-00	49	12-00352-00	23, 25, 57
07-00015-00	. 5 75	09-00180-00	49	12-00377-01	67
07-00228-00	75	09-00180-01	49	12-00395-01SV	26
07-00229-00	75	09-00209-00	49	12-00397-00/5121	15
07-00238-00	75	09-00222-00	49	12-00402-45	15
07-00243-10	75	09-00236-00	49	12-00421-00	48
07-00263-00	75	09-00296-00	49	12-00421-01	48
07-00264-00	75	09-00297-00	49	12-00421-02	48
07-00277-00	75	09-00298-00	49	12-00421-03	48
07-00292-00	71	09-00302-00	49	12-00433-00RP	17
07-00294-00	75	09-00303-00	49	12-00433-02RP	17
07-00294-05	75	09-00322-00	51	12-00464-05	53
07-00295-00	75	09-00325-00	51	12-00464-06	53
07-00304-00	75	09-00326-00	51	12-00474-00	63
07-00313-00	1	09-00329-00	51	12-00495-02SV	23, 25, 34
07-00321-07/2.5	67	09-00362-00	51	12-00500-01SV	34
07-00329-00	75	09-00363-00	51	12-00573-00SV	17
07-00330-00	75	09-00364-00	51	12-01071-01SV	24
07-00345-00	1	09-00365-00	51	12-01094-00	51
07-00370-00	75	09-00367-00	51	12-01094-01	51
07-00375-00	75	09-00369-00SV	15	12-01095-00	51
07-00387-00	75	10-00083-05	63	12-01104-05	21
07-00390-00	9	10-00318-00	35	12-01105-02	21
07-00391-00	9, 75	10-00332-21SV	11	12-01124-01	57
07-00397-02	75	10-00333-00	10, 13	12-01124-02	57
07-00397-03	75	10-00333-01	10	12-01125-02	57
07-00397-12	37	10-00333-02	11	12-55458-00/5121	74
07-00398-00	75	10-00388-00	21	14-00204-02	21
07-00408-00	75	10-00416-00	13	14-00206-00	71
07-00418-00	75	10-00439-00	11	14-00206-01	71
07-00421-00	67	10-01129-07	11, 13	14-00212-03SV	23, 25
07-00437-00	75	10-01129-10	11	14-00212-21	23, 25
07-00450-00	75	10-01129-11	13	14-00215-03	24
09-00104-05	49	10-01129-20	13	14-00215-06	23

Index-1 T-285PL

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
14-00220-00	24	17-40052-00	72	22-00119-04	1
14-00220-01	23	17-40053-00	72	22-00120-04	1
14-00221-01	23	17-40055-00	72	22-00120-07	1
14-00222-01	23	17-40056-02	72	22-00121-07	1
14-00244-02	27	17-40057-00	73	22-00121-27	55
14-00263-00	21	17-40075-05	71, 73	22-00518-01	13
14-00263-20	21	17-40082-00	73	22-00519-03	13
14-00263-22	21	17-40083-00	73	22-00595-01	1
14-00263-23	21	17-40086-00	73	22-01106-00	1
14-00273-03	27, 35	17-40093-05	71	22-01107-00	1
14-00341-02SV	23, 25	17-40093-06	71	22-01139-04	1
14-01032-14	23	17-40413-00	72	22-01140-01	1
14-01092-03	25	17-44021-00	72, 73	22-01140-02	1
17-10715-00	73	17-44022-00	72, 73	22-01140-04	1
17-10811-05	71, 73	17-44037-00	72	22-01141-01	1
17-10812-00	71	17-44109-00	73	22-01292-00	55
17-20004-00	72	17-44113-00	73	22-01455-02	13
17-20005-00	72	17-44115-01	72	22-01551-00	60, 61
17-21002-01	25	17-44115-20	72	22-01556-00	17
17-21040-00	71	17-44123-00	72, 73	22-01556-01	15
17-21062-00	72	17-44124-00	71, 73	22-01556-02	15
17-21063-00	72	17-44128-00	71	22-01566-00	21
17-21075-00	72	17-44129-00	72	22-01566-01	21
17-21076-00	72	17-44136-00	72	22-01585-04	21
17-21077-00	72	17-44137-00	72	22-01613-14	33, 37, 69
17-21201-00SV	72	17-44139-00	72	22-01613-15	33, 37
17-40005-05	73	17-44160-00	73	22-01613-34	33
17-40007-00	72	17-44763-00	72	22-01614-02	33
17-40013-00	71	17-55002-00	73	22-01614-03	33
17-40016-01	71	17-55008-00	73	22-01614-05	33
17-40018-05	71	17-55009-01	72	22-01621-02	17
17-40019-00	72	17-55020-21	73	22-01621-03	17
17-40020-00	71	17-55023-00	72	22-01621-23	15
17-40029-05	72, 73	17-55025-00	72	22-01622-00	15
17-40032-00	72	18-00055-20SV	71	22-01622-01	15
17-40033-05	72, 73	22-00041-00	1	22-01622-02	15
17-40034-05	71, 72	22-00041-02	1	22-01660-00	37
17-40037-05	71, 72	22-00049-01	13	22-01660-03	37, 69
17-40042-00	72	22-00066-01	1	22-01660-04	37
17-40048-00	72	22-00066-02	1	22-01660-08	37
17-40050-00	72	22-00066-03	1	22-01679-00	63

T-285PL Index-2

I AITI ITOMBET IITOEA							
PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.		
22-01679-01	63	22-02370-00	51	34-00373-71	1		
22-01713-02	17	22-02375-00	61	34-00373-88	1		
22-01713-06	15	22-02378-00	60	34-00616-06	33		
22-01731-00	60	22-02392-00SV	57	34-00655-08	10, 55		
22-01731-01	60	22-02392-03	21	34-00655-10	33		
22-01734-01	63	22-02393-00	21	34-00655-28	33		
22-01737-00	67	22-02393-01	21	34-00662-05	59		
22-01737-01	67	22-02394-02	21	34-00662-11	28, 29, 55		
22-01737-02	67	22-02394-03	21	34-00663-07	11		
22-01743-00	67	22-02396-02	17	34-00663-09	7		
22-01744-00	61	22-02396-03	17	34-00663-11	19, 33		
22-01777-00SV	15	22-02398-02	37	34-00665-09	7		
22-01777-01SV	15	22-02398-03	37	34-00667-05	11, 59		
22-01777-03	15	22-02401-00	67	34-00667-09	59, 63		
22-01777-04	15	22-02412-00	37, 69	34-00667-11	55, 60, 62		
22-01778-00	63	22-02412-02	69	34-00667-12	18		
22-01835-00	21	22-02413-00	37, 69	34-00667-14	55		
22-01836-00	21	22-02418-02	67	34-00795-09	7, 49, 51, 53		
22-01883-00	61	22-02420-00	67	34-00795-17	33		
22-01884-00	61	22-02448-00SV	23	34-00829-13	55		
22-01889-00	11	22-50007 Series	1	34-00848-10	11		
22-01891-00	61	22-50088-00	33	34-00849-22	55		
22-01892-00	33	22-50088-01	33	34-00928-01	9, 11, 49, 51		
22-01892-01	33	22-50088-02	18	34-00928-02	9, 39, 41,		
22-01906-00	61	22-50100-00	15		43, 45, 47		
22-01931-00	61	22-50127-00	37	34-00928-03	9, 39, 41, 43, 45, 47		
22-01932-00	61	22-50157-00	15	34-00928-04	43, 43, 47		
22-01959-01	54	24-00003-00	34, 35	34-00928-09			
22-02188-00	61	24-00006-02	34, 35	34-00920-09	23, 25, 31, 39, 41, 43,		
22-02232-00	61	24-02019-02	55		45, 47		
22-02243-00	49	30-00407-02SV	15	34-01110-00	72		
22-02302-03	71	34-00373-05	1, 23	34-01142-01	9, 11, 49, 51		
22-02322-00	61	34-00373-07	1, 23, 25	34-01150-03	45, 47		
22-02324-01	60, 63	34-00373-11	1, 21	34-01150-04	41, 43		
22-02324-02	61	34-00373-51	1	34-01150-06	45, 47		
22-02324-05	60	34-00373-53	1	34-01150-30	41, 43, 45, 47		
22-02336-02	1, 13, 15	34-00373-54	23, 25	24 01150 21			
22-02336-04	1, 15	34-00373-56	60	34-01150-31	43, 45, 47		
22-02341-00	11	34-00373-59	1, 60	34-01152-02	9		
22-02341-01	11	34-00373-65	1	34-01167-01	7, 59		
22-02368-00	11	34-00373-69	1	34-01178-22	34		

Index-3 T-285PL

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
34-01181-01	18	38-00508-00	33	44-01043-07	1
34-06053-00	7, 18, 21,	40-00060-02	57	48-00262-00	33
	23, 25, 28, 29, 31, 49,	40-00086-04	25	54-00585-20	33
	51, 53, 55,	40-00123-02	57	54-00586-20	18
	62	40-00501-50	23	58-00065-67	53
34-06053-01	55	40-00520-00	71	58-00065-70	53
34-06053-02	18, 23, 25, 55	40-00520-01	23, 25, 71	58-00616-00	34
34-06053-03	18, 19, 23,	40-00520-02	21, 71	58-00956-00	24
01 00000 00	25, 53, 55,	40-00520-03	23, 25	58-00957-00	24
	59, 60, 62	40-00523-00	71	58-00967-00	10
34-06053-05	7, 11, 13, 21, 23, 25,	40-00523-01	71	58-01184-00	15, 17
	53, 54, 57,	40-00542-00	21	58-04001-01	59
	59, 62, 63, 71	40-00555-06	25	58-04001-02	59
34-06053-07	55	40-01129-00	24	58-04026-07	60, 62
34-06053-08	59	42-00174-38	69	58-04026-10	19
34-06053-13	49, 51, 53	42-00233-01	31	58-04026-17	62
34-06053-18	31	42-00270-02	7	58-04026-22	59, 63
34-06053-19	29	42-00295-00	31	58-04026-23	23
34-06092-00	31	42-00295-01	31	58-04026-41	19
34-06107-00	7	42-00296-00	29	58-04066-00	33
34-06126-08	59	42-00296-01	28, 29	58-04101-00	7
34-06139-03	9	42-00327-00	28, 29	58-04101-01	7
34-06154-00	28, 29	42-00334-00	39, 41, 43, 45, 47	58-04101-07	19, 49, 51, 53
34-06165-09	33	42-00407-00	29	58-04145-00	11
34-06169-00	7, 19, 49,	42-00465-00	31	58-04145-01	11
24 06170 00	51, 53	42-00470-00	63	58-04145-06	13
34-06179-00	19, 49, 51, 53	42-00611-00	7	58-04145-07	13
34-06179-04	49, 51, 53	42-01098-01	49, 51, 53	58-04145-09	13
34-06183-00	31	42-50000-00	24	58-04146-00	53
34-06185-01	29	44-00300-01	7	58-04251-00	29
34-06221-00	63	44-00300-02	7	58-04263-01	31
34-06223-00	13, 17	44-00300-03	7	58-04276-00	26
34-06227-00	11	44-00340-03	59	58-04277-00SV	26
34-06231-01	9	44-00340-05	59	58-04278-00	26
34-06231-03	9	44-00343-00	9	58-04279-00	26
34-06231-05	9	44-00370-03	55	58-04290-00	33
34-06231-06	9	44-00374-00	19, 49, 51,	58-04316-00	55
34-06231-07	9		53	58-04346-00	7
34-50015-00	9	44-00376-00	41	58-04366-00SV	7
38-00503-00	18	44-01043-05	1		

T-285PL Index-4

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
58-04389-00	7	62-02743-18	65	66U1-5321-5	23, 25, 55
58-04480-00	19	62-02743-19	65	66U1-5321-6	11
58-04481-00	19	62-02783-00	29	66U1-5321-7	18, 23, 25,
58-04668-00	9	62-02785-00	64		26, 31, 49,
58-04668-21	9	62-02822-01	39, 41		51, 53, 55, 59, 60, 62
58-50014-00	25	62-02874-00	13	66U1-5321-8	7, 11, 13,
62-02444-01	64	62-02874-01	13		21, 35, 54,
62-02458-00	64	62-02874-02	13		55, 57, 59, 62, 63, 71
62-02530-01	64	62-03957-02	9	66U1-5331-3	7, 59
62-02562-00	64	62-10259-00	64	66U1-5361	18
62-02562-01	64	62-10532-00	65	66U1-5361-11	55, 60, 62
62-02719-00	15	62-10532-01	65	66U1-5361-25	18, 19, 23,
62-02720-00	65	62-10532-02	65		25, 31, 34, 49, 51, 53,
62-02721-00	64	62-10532-03	65		55, 59, 62
62-02721-03	64	62-10532-04	65	66U1-5361-46	71
62-02723-00	65	62-10532-06	65	66U1-5361-7	23, 25, 55
62-02723-01	65	62-10557-00	5	66U1-5362-2	29
62-02723-02	65	62-10769-00	64	66U1-5371-10	11, 35
62-02723-03	65	65-00144-00	34, 35	66U1-5371-6	13, 23, 25,
62-02723-04	65	66CH1-1002-33	31		54, 55, 57
62-02723-05	65	66CH1-1172-16	19	66U1-5371-7	7, 11, 15, 17,26,62,71
62-02723-06	65	66CH1-1172-46	11	66U1-5381	10
62-02723-09	65	66U1-1214-13	27	66U1-5381-1	21, 60
62-02723-10	65	66U1-2403	9, 11, 39,	66U1-5391-3	10, 13
62-02723-11	65	66111 0400 1	41, 43, 59	66U1-5562-7	, 71
62-02735-00	15	66U1-2403-1	7	66U1-6225	27
62-02738-05	15	66U1-2552-185	28, 29	66U1-6651-15	10
62-02743-00	65	66U1-2583	60	66U1-6651-19	57
62-02743-01	65	66U1-2583-1	61	66U1-6651-4	11
62-02743-02	65	66U1-2603 66U1-2763-5	59, 62 24	66U1-6782	61
62-02743-04	65		24	66U1-6782-3	61
62-02743-07	65	66U1-2763-6 66U1-2803-10	43	66U1-6811-12	19
62-02743-08	65	66U1-3442-2	43 17	66U1-6811-15	7
62-02743-09	65	66U1-3632-24	21	66U1-6811-8	7, 19, 49,
62-02743-10	65	66U1-3803	1, 23, 55		51, 53
62-02743-12	65	66U1-3803-1	1, 23, 55	66U1-6835	11
62-02743-13	65	66U1-3823	1, 34	66U1-6912-16	34
62-02743-14	65	66U1-3882	53, 55	66U1-7472-1	1
62-02743-15	65	66U1-5321-13	55, 55 29	66U1-7842-13	11
62-02743-16	65	66U1-5321-13		66U1-7982-2	39, 41
62-02743-17	65	0001-3321-3	31, 33		

Index-5 T-285PL

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
66U1-8075	39, 41, 43,	68-13475-04	43	69NT35-6118	64
	45, 47	68-13475-08	39, 45	69NT35-6132	55
66U1-8115	29	68-13475-09	39, 45	69NT35-6272	9
66U1-8552-2	25	68-13577-00	7	69NT35-6278	11
66U1-8662	5	68-14796-00	11	69NT35-6348	33
66U1-8912	19	68-14796-01	13	69NT35-6412	60, 62
66U1-9212-1	17	68-14796-02	11, 13	69NT35-6412-1	60, 62
66U1-9752	11, 13	68-14796-03	11	69NT35-6412-2	60, 62
66U1-9782	60, 61	68-14796-04	13	69NT35-6522	34
66U1-9782-1	61	68-14796-05	11	69NT35-6532	34
66U2-1132-1	23	68-14796-06	11	69NT35-6598	47
66U2-1142	24	69NP20-1031	25	69NT35-6598-1	47
66U2-1152	24	69NT-34-8248	55	69NT35-7012	31
66U2-1531	63	69NT-43-468	1	69NT35-7662-2	41
68-12368-00	25	69NT-46-468-1	1	69NT35-7662-3	43
68-12417-00	4	69NT20-2083	71	69NT35-8032	59
68-12432-00	55	69NT20-513-1SV	71	69NT35-8113	4
68-12432-01	55	69NT20-513SV	71	69NT35-8218	64
68-12432-02	55	69NT35-1287-1	31	69NT35-8348	31
68-12432-03	55	69NT35-1417	31	69NT35-8382	59, 63
68-12434-02	69	69NT35-2257	39	69NT35-8548	4
68-12496-00	10	69NT35-2287	9	69NT35-8693-10	19
68-12523-00	55	69NT35-2692	15, 39, 41,	69NT35-8693-7	19
68-12544-01	13		43	69NT35-8703	19
68-12553-00	69	69NT35-2692-1	19, 31, 33,	69NT35-8734-12	33
68-12658-01	53		34, 49, 51, 53	69NT35-8734-14	33
68-12791-00	9	69NT35-2692-4	17	69NT35-8734-16	33
68-12881-00	41	69NT35-3282	45, 47	69NT35-8734-4	33
68-12881-01	41	69NT35-3286	43	69NT35-8734-5	33
68-12960-00	54	69NT35-3296	43	69NT35-8734-6	33
68-12993-00	55	69NT35-3547	18	69NT35-9238	31
68-13181-00	35	69NT35-3867	64	69NT40-222	11, 69
68-13310-00	59	69NT35-3907	64	69NT40-402-1	51
68-13310-01	59	69NT35-3987	4	69NT40-507-1	37
68-13427-00SV	10	69NT35-3997-1	4	69NT40-567-2	41
68-13454-02	19	69NT35-4047	31	69NT40-657-2	4
68-13454-03	19	69NT35-5022-5	49, 51, 53	69NT40-976-3	31
68-13472-01	57	69NT35-5022-6	7	69NT41-106-2	57
68-13472-03SV	57	69NT35-5352-1	49, 51, 53	69NT41-106-2SV	57
68-13475-00	39, 45	69NT35-5992	59, 62		
68-13475-01	39, 43, 45	69NT35-6112	18		

T-285PL Index-6

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
69NT41-192	69	69NT43-464	39, 41, 43,	76-50059-00	67
69NT41-477	25		45, 47	76-50075-00	19
69NT41-487	25	69NT43-469	55	76-50084-00SV	9
69NT41-497	25	69NT43-470	63	76-50094-00	55
69NT41-543	57	69NT43-470-1	63	79-01694-00	29
69NT41-553	57	69NT43-470-2	63	79-01697-06SV	28
69NT41-702	21	69NT43-471	43	79-01697-14	29
69NT41-724-4	59	74-00201-01	29	79-01706-05SV	11
69NT41-782	31	74-00201-02	29	79-01757-00	24
69NT41-852-1	31	76-00355-00	71	79-01902-00	29
69NT41-942-3	39, 41, 43	76-00384-00	71	79-01902-01	29
69NT41-942-4	45	76-00397-00	1	81-01482-00	21
69NT41-942-5	47	76-00667-05	63	81-01549-00	35
69NT41-982-3	11	76-00670-01	63	81-01575-00SV	19
69NT41-992	37	76-00670-02	63	86-04217-00	49
69NT42-688-7	7	76-00670-03	63		
69NT42-914	24	76-00670-04	63	Α	
69NT42-914-1	24	76-00675-01	35		
69NT43-124-2	9	76-00677-00	25	AA06JA166	34
69NT43-125-1	9	76-00681-01	33	AA06JA170	62
69NT43-148-2	19	76-00684-00	37	AA06JA232	55
69NT43-148-4	19	76-00701-00	48	AD61JA124	71
69NT43-175	37	76-00701-01	48	AU11JR171	34, 62
69NT43-176	37, 69	76-00701-02	51	AU11JR241	23, 25, 55
69NT43-202-10SV	19	76-00701-03	51		
69NT43-208-3	34	76-00701-04	48	С	
69NT43-208-5	34	76-00701-05	49, 51, 53	CA21JA051	57
69NT43-277	23	76-00701-06SV	51, 53	0/12/10/1001	O1
69NT43-283	33	76-00701-10	53	D	
69NT43-284	33	76-00701-11	53	D	
69NT43-285	33	76-00701-12	48	DE40BA203	23, 25
69NT43-295	33	76-00704-01	19		
69NT43-307	31	76-00724-00SV	9	E	
69NT43-374	62	76-00760-00	37		
69NT43-403-2	23	76-50058-00	67	EC39DM062	23
69NT43-420	23, 25				

Index-7 T-285PL



Carrier Transicold Division, Carrier Corporation Container Products Group P.O. Box 4805 Syracuse, N.Y. 13221 U.S A

www.carrier.transicold.com

