

SERVICE PARTS LIST for 69NT40-551-400 to 425 Container Refrigeration Units



SERVICE PARTS LIST CONTAINER REFRIGERATION UNIT

MODEL 69NT40-551-400 to 425

TABLE OF CONTENTS

CONFIGURATION IDENTIFICATION OPTION DESCRIPTIONS ORDERING INSTRUCTIONS LETTER DESIGNATIONS 1 QUICK LIST - CLAMPS, FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS 2 REFRIGERATION UNIT ASSEMBLY 2.2 RAIN GUTTERS 2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
ORDERING INSTRUCTIONS LETTER DESIGNATIONS 1 QUICK LIST - CLAMPS, FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS 2 REFRIGERATION UNIT ASSEMBLY 2.2 RAIN GUTTERS 2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
LETTER DESIGNATIONS 1 QUICK LIST - CLAMPS, FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS 2 REFRIGERATION UNIT ASSEMBLY 2.2 RAIN GUTTERS 2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
1 QUICK LIST - CLAMPS, FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS 2 REFRIGERATION UNIT ASSEMBLY 2.2 RAIN GUTTERS 2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
2 REFRIGERATION UNIT ASSEMBLY 2.2 RAIN GUTTERS 2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
2.2 RAIN GUTTERS 2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
2.3 HANDLES 2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
2.4 THERMOMETER PORT 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.5 CONTROL BOX DOOR - LCD and LED Displays 2.6 CONTROL BOX
2.5 CONTROL BOX DOOR - LCD and LED Displays
2.5 CONTROL BOX DOOR - LCD and LED Displays
2.6 CONTROL BOX
2.7 CONTROL BOX - SHIELDS REMOVED, STD ELECTRICAL COMPONENTS, RM, CFS, EBS
2.8 CONTROL BOX- CONTROLLER MODULE SECTION AND SOFTWARE CARDS
2.9 CONTROL BOX- DISPLAY MODULE & COMMUNICATIONS INTERFACE MODULE SECTION
2.10 CONDENSER FAN MOTOR AND CONDENSER COIL SECTION
2.11 COMPRESSOR TUBING SECTION
2.12 RECEIVER SECTION
2.13 WATER-COOLED CONDENSER SECTION
2.14 ECONOMIZER, ECONOMIZER EXPANSION VALVE, ECONOMIZER SOLENOID VALVE
2.15 SRS AND STS SECTION
2.16 EVAPORATOR FAN ASSEMBLY
2.17 UPPER FRESH AIR MAKE-UP AND ACCESS PANEL SECTION
2.18 LOWER FRESH AIR MAKE-UP VENT
2.19 EVAPORATOR COIL SECTION - REAR PANELS REMOVED
2.20 USDA SECTION
2.21 BACK PANEL ASSEMBLY - OPTION 1 - ALUMINUM BOLTED
2.22 OPTION 7 AND OPTION 8 - ELECTRONIC PARTLOW TEMPERATURE RECORDER
2.23 COMPRESSOR MOUNTING COMPONENTS AND GUARD
2.24 TRANSDUCERS
2.25 CABLE RESTRAINT COMPONENTS
2.26 VOLTAGE CABLES
2.27 AUTOTRANSFORMER KIT
2.28 LABELS AND DECALS (Not Applicable to All Units)
INTERROGATOR AND ACCESSORIES
3.1 DATAREADER
3.2 INTERROGATOR RECEPTACLE
4 COMPRESSOR
5 CONTROLLER/DATACORDER CONFIGURATION
6 TOOLS

i T-327PL

INTRODUCTION

1 INTRODUCTION

The Carrier Transicold model 69NT40-551 series units are of lightweight aluminum frame construction, designed to fit in the front of a container and serve as the container front wall.

2 CONFIGURATION IDENTIFICATION

Unit identification information is provided on a plate located near the compressor. The plate provides the unit model number, the unit serial number and the unit parts identification number (PID). The model number identifies the overall unit configuration while the PID provides information on specific optional equipment, factory provision to allow for field installation of optional equipment and differences in detailed parts.

Configuration identification for the models covered herein is provided in the Carrier Transicold Container Unit Matrix at www.container.carrier.com.

3 OPTION DESCRIPTIONS

Various options may be factory or field fitted to the base unit. These options are listed in the tables and described in the following subparagraphs.

3.1 Battery

The refrigeration controller may be fitted with standard replaceable batteries or rechargeable battery pack.

3.2 Dehumidification

The unit may be fitted with a humidity sensor. This sensor allows setting of a humidity set point in the controller. In the dehumidification mode the controller will operate to reduce internal container moisture level.

3.3 Control Box

The control box is composite material and may be fitted with a lockable door.

3.4 Temperature Readout

The unit may be fitted with suction and discharge temperature sensors. The sensor readings may be viewed on the controller display.

3.5 Pressure Readout

The unit is fitted with standard suction and discharge transducers. The transducer readings may be viewed on the controller display.

3.6 USDA

The unit may be supplied with fittings for additional temperature probes which allow recording of USDA Cold Treatment data by the integral DataCORDER function of the Micro-Link refrigeration controller.

3.7 Interrogator

Units that use the DataCORDER function are fitted with interrogator receptacles for connection of equipment to download the recorded data. Two receptacles may be fitted, one accessible from the front of the container and the other mounted inside the container (with the USDA receptacles).

3.8 Remote Monitoring

The unit may be fitted with a remote monitoring receptacle. This item allows connection of remote indicators for COOL, DEFROST and IN RANGE. Unless otherwise indicated, the receptacle is mounted at the control box location

3.9 Communications.

The unit may be fitted with a communications interface module. The communications interface module is a slave module which allows communication with a master central monitoring station. The module will respond to communication and return information over the main power line. Refer to the ship master system technical manual for further information.

3.10 Compressor

The unit is fitted with a scroll compressor with either standard piping (equipped with suction, discharge, economizer and oil return service valves) or with semi-hermetic piping (equipped with suction, discharge and economizer service connections).

3.11 Condenser Coil

The unit is fitted with a 4 row coil using 7mm tubing.

3.12 Autotransformer

An autotransformer may be provided to allow operation on 190/230, 3phase, 50/60 hertz power. The autotransformer raises the supply voltage to the nominal 380/460 volt power required by the base unit. The autotransformer may also be fitted with an individual circuit breaker for the 230 volt power.

If the unit is fitted with an autotransformer and communications module, the autotransformer will be fitted with a transformer bridge unit (TBU) to assist in communications.

3.13 Temperature Recorder

The unit may be fitted with an electronic recorder manufactured by Partlow Corporation.

3.14 Gutters

i

Rain gutters may be fitted over the control box and recorder section to divert rain away form the controls. The different gutters include standard length bolted gutters, extended length gutters and riveted gutters.

3.15 Handles

The unit may be fitted with handles to facilitate access to stacked containers. These handles may included fixed handles (located at the sides of the unit) and/or a hinged handle at the center (attached to the condenser coil cover).

3.16 Thermometer Port

The unit may be fitted with ports in the front of the frame for insertion of a thermometer to measure supply and/or return air temperature. If fitted, the port(s) will require a cap and chain.

3.17 Water Cooling

The refrigeration system may be fitted with a water cooled condenser. The condenser is constructed using copper-nickel tube for sea water applications. The water cooled condenser is in series with the air cooled condenser replaces the standard unit receiver. When operating on the water cooled condenser, the condenser fan is deactivated by either a water pressure switch or condenser fan switch.

3.18 Back Panels

Back panel designs that may be fitted include panels of aluminum and stainless steel. Panels may be fitted with access doors and/or hinge mounting.

3.19 460 Volt Cable

Various power cable and plug designs are available for the main 460 volt supply. The plug options tailor the cables to each customers requirements.

3.20 230 Volt Cable

Units equipped with an autotransformer require an additional power cable for connection to the 230 volt source. Various power cable and plug designs are available. The plug options tailor the cables to each customers requirements.

3.21 Cable Restraint

Various designs are available for storage of the power cables. These options are variations of the compressor section front cover.

3.22 Upper Air (Fresh Air Make Up)

The unit may be fitted with an upper fresh air makeup assembly. The openings may also be fitted with screens.

3.23 Lower Air (Fresh Air Make Up)

The unit may be fitted with a lower fresh air makeup assembly. These assemblies are supplied in two designs, the standard design and the macro design. The openings may also be fitted with screens.

3.24 Controlled Atmosphere

The units may be fitted with the TransFresh option.

For information on the TransFresh system, contact TransFresh Corporation, P.O. Box 1788, Salinas CA 93902

3.25 Evaporator

The unit is fitted with an evaporator coil and a hermetic thermal expansion valve.

3.26 Evaporator Fan Operation

The units are fitted with Normal Evaporator Fan Operation, opening of an evaporator fan internal protector will shut down the unit.

3.27 Labels

Operating Instruction and Function Code listing labels will differ depending on the options installed. For example, additional operating instructions are required to describe start-up of a unit equipped with an autotransformer. Where the labels are available with additional languages, they are listed in the parts list.

3.28 Plate Set

Each unit is equipped with a tethered set of wiring schematic and wiring diagram plates.

The plate sets are ordered using a seven digit base part number and a two digit dash number. (See Unit Matrix)

3.29 Controller

Two different controllers are available:

- 1. Remanufactured Controller is the equivalent of a new OEM controller and is supplied with a 12 month warranty.
- 2. Repaired Controller has had previous faults repaired and upgraded with the latest software. Note: Repaired controllers are NOT to be used for warranty repairs only full OEM Remanufactured

controllers are to be used.

Controllers will be factory equipped with the latest version of operational software, but will NOT be configured for a specific model number and will need to be configured, at the time of installation or sale.

3.30 Stepper Drive

All the units covered by this manual have suction modulating valves which act to control system capacity. Units indicated as being fitted with "stepper drive" have digital control motors fitted to the suction modulating valve to open and close the valve in steps as required.

3.31 Condenser Grille

Two styles of condenser grilles are available, direct bolted grilles and hinged grilles.

T-327PL ii

OPTION LEGEND

Genera	al
-	Feature Not Applicable
X	Features that apply to model
Р	Factory Installation of Equipment to Allow Field Installation
Battery	/ Codes
S	Standard (throw away) Cells
R	Rechargeable Cells
	I Box Codes
С	Composite Box Without Door Lock
CL	Composite Box With Door Lock
	re Readout Codes
Т	Factory Installed Pressure Transducers
USDA	•
D	Option D
V	Option V
1	Option 1
2	Option 2
Interro	gator Codes
1	Left Straight Mount
2	Right Mount
3	Box Mount
4	Left Mount
5	Left Angled Mount
6 Comm	Right Mount unications Codes
1	Standard
2	High Data Rate
3	Chipset Modem
4	Low Data Rate
Compr	essor Codes
S	Scroll
SS	Scroll with Semi-Hermetic Piping
Conde	nser/Receiver Codes
4	Four Row Coil
AutoTr	ansformer Codes
1	Transformer Fitted
2	Transformer With CB2 Fitted
3	Transformer With CB2 and Receptical
4	Transformer With CB2 and Transformer Bridging Unit

Tempe	rature Recorder Codes
7	Standard Electronic Partlow
8	Special Electronic Parlow
9	No Temperature Recorder
10	Electronic Partlow (Both)
Gutter	Codes
1	Standard Length Bolted Gutters
3	Extended Length Gutters
4	Rivieted Gutters
Handle	Codes
2	Two Side
Thermo	ometer Port Codes
1	Supply Air Port
2	Return Air Port
В	Both Ports
	Cooling Codes
W	Water Pressure Switch
F	Condenser Fan Switch
Back P	anel Codes
1	Bolted Panels
460 Vo	It Cable Codes
1	Option1
2	Option 2
3	Option 3
4	Option 4
5	Option 5
6	Option 6
7	Option 7
8	Option 8
9	Option 9

iii T-327PL

230Vol	t Cable Codes
1	Option 1
2	Option 2
3	Option 3
4	Option 4
5	Option 5
6	Option 6
7	Option 7
8	Option 8
9	Option 9
10	Option 10
Cable I	Restraint Codes
1	Cable Door
2	Left Bungy Cord Only
3	J-Hook
4	Left and Right Bungy Cord
5	Left Bungy Cord With Left Extended Guard
6	Left & Right Bungy Cords With Extended Guards
R	Dummy Receptical
Upper	Air Codes
1	No Upper Fresh Air
2	Upper Fresh Air Installed
3	Upper Fresh Air Installed With Screen
4	Upper Fresh Air Installed With VPS

Lower	Air Codes
1	No Lower Fresh Air
2	Lower Fresh Air Installed
3	Lower Fresh Air With Screen Installed
3	Lower Fresh Air Installed With VPS
Contro	olled Atmosphere
1	TransFresh
2	Carrier Transicold Everfresh System
Arctic	Mode Codes
С	Crankcase Heater
L	Drainline Heater
В	Both Crankcase Heater & Drainline Heater
Conde	nser Grille Codes
В	Bolted Grille
Н	Hinged Grille
Evapo	rator Codes
4	Helicox Hatched
6	Streamline Coil
Evapo	rator Fan Codes
1	Normal Evaporator Fan Operation
Label (Codes
1	English
2	English / Spanish
5	English / Traditional Chinese
Emerg	ency Bypass Codes
В	Emergency Bypass & Emergengy Defrost
EB	Emergency Bypass Only

Ordering Instructions

All orders and inquiries for parts must include: Parts Identification Number (PID), Model Number, Unit Serial Number, Part Number, Description of part as shown on list and Quantity required. Address all correspondence for parts to the following address:

> CARRIER TRANSICOLD DIVISION Replacement Components Group, TR-20 P.O. Box 4805, Syracuse, New York 13221 or FAX to: (315) 432-3778

Letter Designations

The following letter designations are used to classify parts throughout this list:

A/R =As Required N/A =Not Available

NS Not shown in illustration

NSS

Not sold separately - Order next higher assembly or kit Parts Identification Number - essential to identify unit configuration. PID


Purchase Locally
Stainless Steel - 300 Series unless otherwise specified. SST

SV Suffix SV - added to part number designates service replacement part.


T-327PL iv


PART NO.	FILTER-DRIER, FUSE, TY-RAPS, WIRE TERMINALS DESCRIPTION
34-00373-51	Clamp, Tube, 1/4 - SST
34-00373-53	Clamp, Tube, 3/8 - SST
34-00373-05	Clamp, Tube, 1/2 - SST
34-00373-07	Clamp, Tube, 5/8 - SST
34-00373-59	Clamp, Tube, 3/4 - SST
34-00373-11	Clamp, Tube, 7/8 - SST
34-00373-65	Clamp, Tube, 1-1/8 - SST
34-00373-88	Clamp, Tube, 1-1/4 - SST
34-00373-69	Clamp, Tube, 1-3/8 - SST
34-00373-71	Clamp, Tube, 1-1/2 - SST
22-00066-01	Connector, Butt End, Wire Range - 22 to 16 AWG
22-00066-02	Connector, Butt End, Wire Range - 16 to 14 AWG
22-00066-03	Connector, Butt End, Wire Range - 12 to 10 AWG
22-00041-00	Connector, Closed End, Wire Range - 22 to 14 AWG
22-00041-02	Connector, Closed End, Wire Range - 18 to 10 AWG
14-00311-02SV	Filter-Drier
22-02336-02	Fuse, 5 Amp (F1 & F2)
22-02336-08	Fuse, 7.5 Amp (F3A/B)
22-01140-01	Ring Terminal, #6, Wire Range - 12 to 10 AWG
22-01140-02	Ring Terminal, #10, Wire Range - 12 to 10 AWG
22-01140-04	Ring Terminal, 3/8, Wire Range - 12 to 10 AWG
22-00119-04	Ring Terminal, 1/4, Wire Range - 12 to 10 AWG
22-00120-04	Ring Terminal, #10, Wire Range - 16 to 14 AWG
22-00120-07	Ring Terminal, 5/16, Wire Range - 16 to 14 AWG
22-00121-07	Ring Terminal, #10, Wire Range - 22 to 16 AWG
22-01139-04	Ring Terminal, 3/8, Wire Range - 16 to 14 AWG
22-01141-01	Spade Terminal, 1/4 x 5/16, Wire Range - 16 to 14 AWG
22-00595-01	Spade Terminal, 3/8, Wire Range - 12 to 10 AWG
22-01106-00	Spiral Wrap, 1/4 Diameter x 25 ft. lg.
22-01107-00	Spiral Wrap, 1/2 Diameter x 25 ft. lg.
66U1-3803	Tube, Heat Shrink, 1/4 ID x 2-1/8 lg.
66U1-3803-1	Tube, Heat Shrink, 1/2 ID x 2-3/4 lg.
44-01043-05	Ty-Raps, 5-1/2 inches lg.
44-01043-07	Ty-Raps, 11.00 inches lg.
22-50007 Series	Wire Markers
07-00345-00	Sealant, Pipe (Used to seal fittings on unit with R-134a)
07-00313-00	Cleaner, Coil
76-00397-00	Paint, Compressor Touch-Up, Blue


1

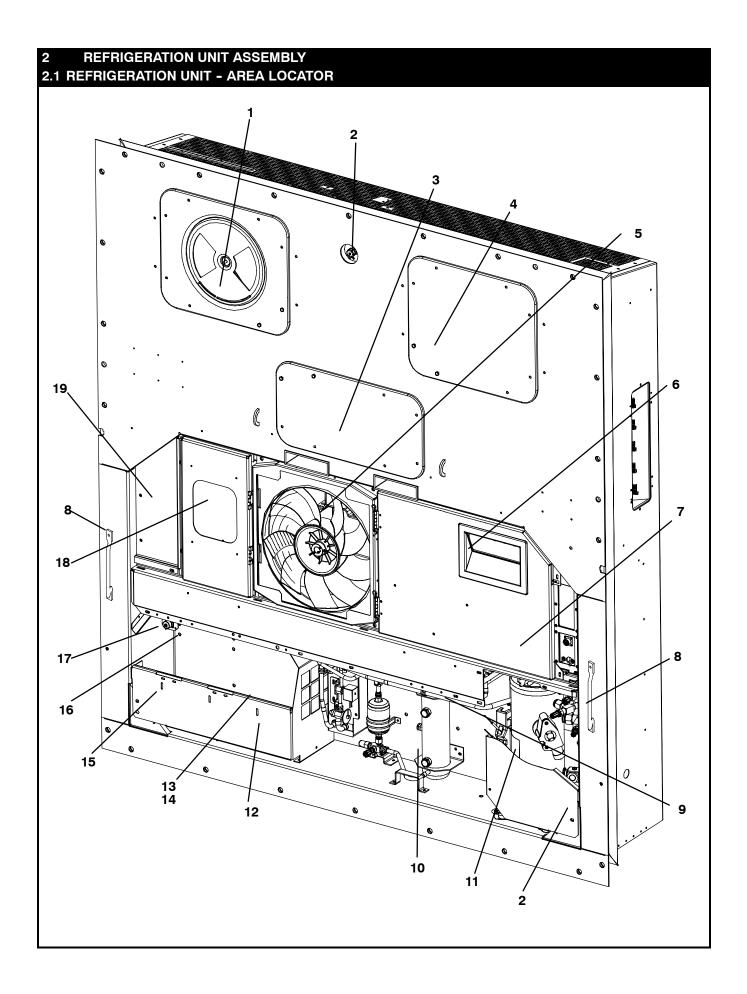


2.1 RE	FRIGERATION UNIT - AREA L	OCATOR
Item	Section Number	Area Description
1	Refer to Section 2.17	Upper Fresh Air Makeup & Access Panels
2	Refer to Section 2.4	Thermometer Port
3	Refer to Section 2.28	Labels and Decals
4	Refer to Section 2.16	Evaporator Fan Assembly
5	Refer to Section 2.10	Motor, Condenser Fan
6	Refer to Section 2.2	Rain Gutters
7	Refer to Section 2.9	Box, Control
8	Refer to Section 2.3	Handles
9	Refer to Section 2.10	Coil, Condenser
10	Refer to Section 2.12 or 2.13	Receiver or Water-Cooled Condenser
11	Refer to Sections 2.23 or 4	Compressor
12	Refer to Section 2.23	Guard, Compressor
13	Refer to Section 2.26	Cable, Power
14	Refer to Section 2.26	Plug, Power
15	Refer to Section 2.27	Autotransformer
16	Refer to Section 2.16	Transfresh
17	Refer to Section 3	Interrogator and Accessories
18	Refer to Section 2.26	Temperature Recorder
19	Refer to Section 2.18	Lower Fresh Air Makeup

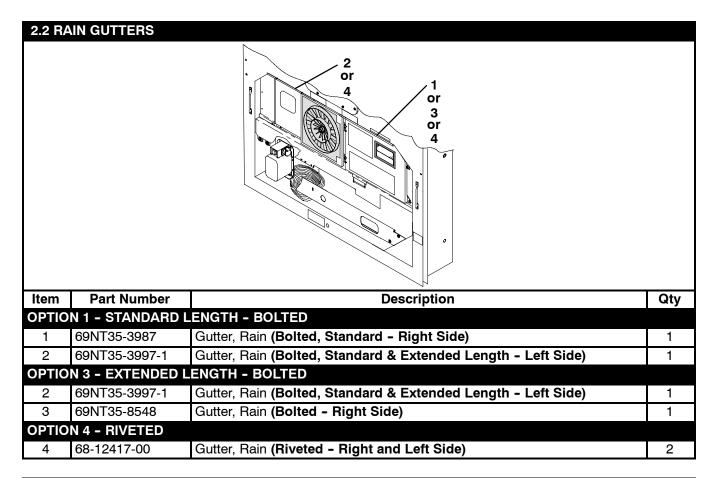

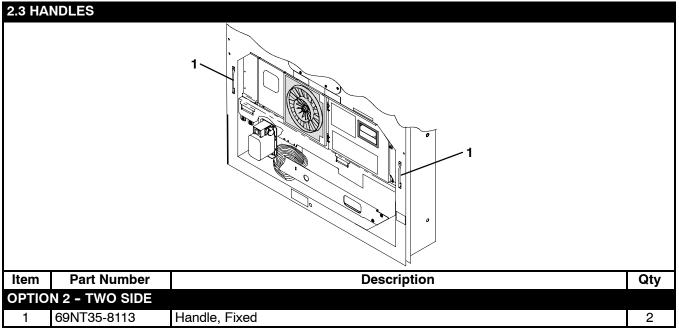

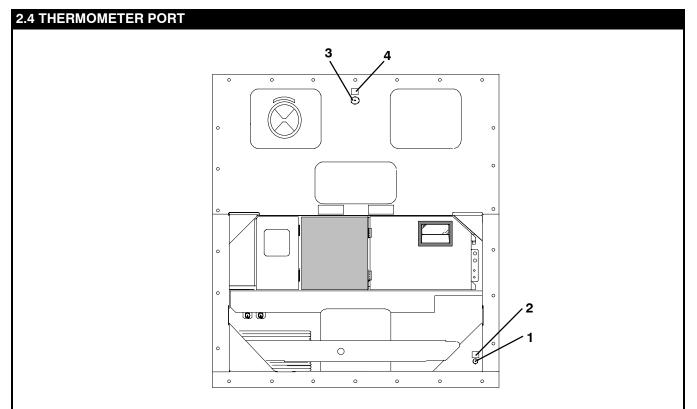


Item	Part Number	Description	Qty
OPTIO	N 1 - SUPPLY AIR	PORT	
1	66U1-8662	Cap & Chain Assembly	1
2	62-10557-00	Label	1
OPTIO	N 2 - RETURN AIR	PORT	
3	66U1-8662	Cap & Chain Assembly	1
4	62-10557-00	Label	1
OPTIO	N B - SUPPLY AND	RETURN PORTS	
1 & 3	66U1-8662	Cap & Chain Assembly	2
2 & 4	62-10557-00	Label	2

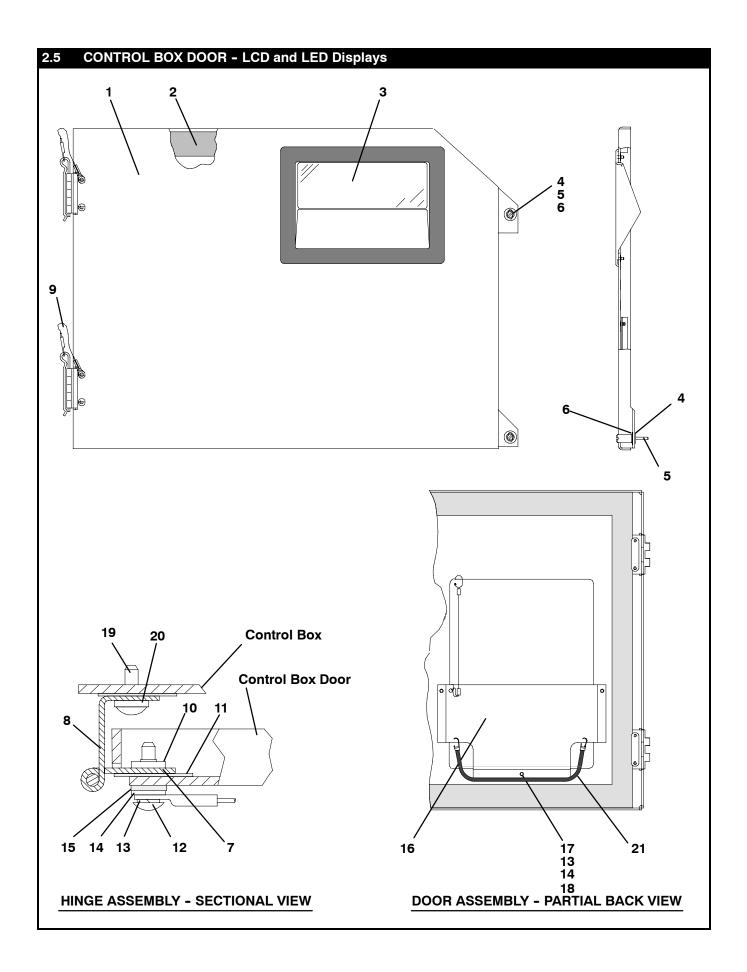

2.5 CC	NTROL BOX DOO	PR - LCD and LED Displays	
Item	Part Number	Description	Qty
OPTIC	N 1, LCD DISPLAY		
1	69NT42-688-10	Door Assembly, LCD Display, Includes:	1
2	42-00270-02	Gasket, Door	1
3	58-04366-00SV	Window and Gasket Assembly, Control Box Door - Lexan	1
4	34-06169-00	Washer, Retaining - SST	2
5	66U1-6811-8	Screw, Retaining, Panel, 0.300-0.625 - SST	2
5	66U1-6811-15	Screw, Retaining, Wing, 0.300-0.625 - SST	2
6	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	4
7	44-00300-01	Hinge, Half	1
8	44-00300-02	Hinge, Half	1
9	44-00300-03	Pin Assembly, with Tether	1
10	34-01167-01	Retainer, Nut	2
11	58-04101-00	Protector, Mylar (Hinge)	2
12	66U1-2403-1	Screw, Truss Head, #10-24 x 3/4 lg SST	4
13	66U1-5331-3	Washer, Lock, #10 - SST	7
14	66U1-5321-8	Washer, Flat, #10 - SST	7
15	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
16	68-13577-00	Pocket, Placard	1
17	34-00665-09	Locknut, Hex Head, #10-24 - SST	3
18	34-06107-00	Rivet, Blind, 1/8 Diameter, Grip Range - 0.188-0.250	3
19	66U1-5371-7	Screw, #10-24 x 1/2 lg SST	4
20	66U1-5321-8	Washer, Flat, #10 - SST	4
21	58-04346-00	Door Strap Kit	1
OPTIC	N 2, LED DISPLAY		
1	79-01911-00	Door Assembly, LED Display, Includes:	1
2	42-00270-02	Gasket, Door	1
	69NT35-5022-6	Window	1
3	42-00611-00	Foam, Double Coated	1
4	34-06169-00	Washer, Retaining - SST	2
_	66U1-6811-8	Screw, Retaining, Panel, 0.300-0.625 - SST	2
5	66U1-6811-15	Screw, Retaining, Wing, 0.300-0.625 - SST	2
7	44-00300-01	Hinge, Half	1
8	44-00300-02	Hinge, Half	1
9	44-00300-03	Pin Assembly, with Tether	1
10	34-01167-01	Retainer, Nut	2
12	66U1-2403-1	Screw, Truss Head, #10-24 x 3/4 lg SST	4
13	34-00663-09	Washer, Lock, #10 - SST	4
14	66U1-5321-8	Washer, Flat, #10 - SST	4
15	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
16	58-04389-00	Pocket, Placard	1
17	34-00795-09	Locknut, Hex Head, #10-24 - SST	6
18	34-06107-00	Rivet, Blind, 1/8 Diameter, Grip Range - 0.188-0.250	3
20	66U1-5321-8	Washer, Flat, #10 - SST	4


7

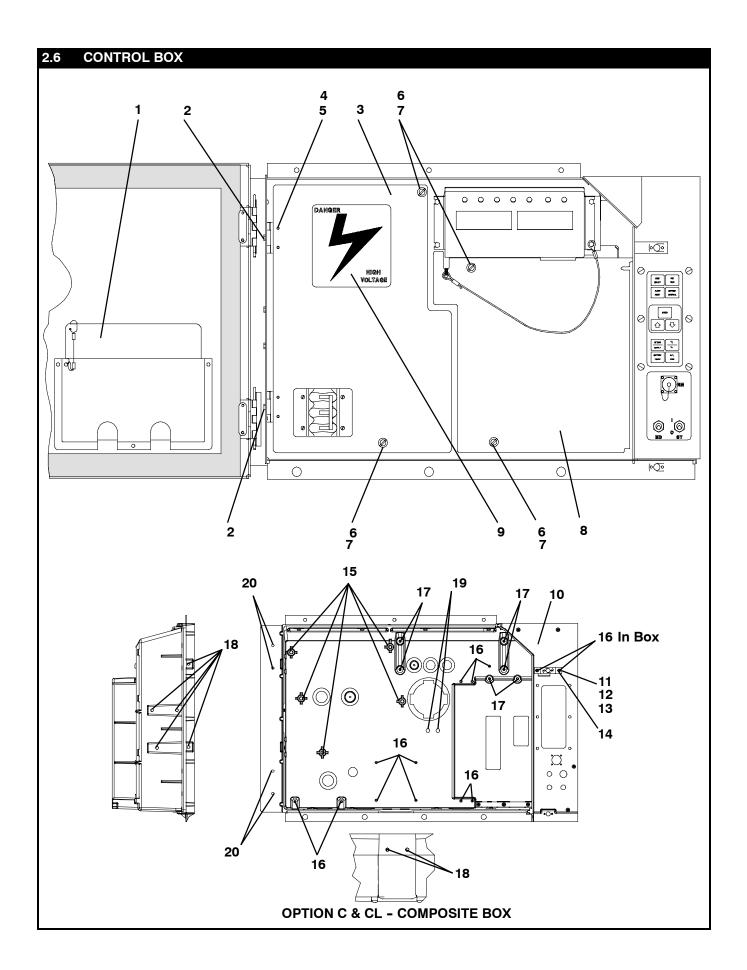

	NTROL BOX (Con	,	
Item	Part Number	Description	Qty
1	-	Plate, Schematic & Diagram (Refer to Container Unit Matrix)	1
2	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
3	69NT43-125-1	Shield, High Voltage (Plastic) - Includes:	1
4	44-00343-00	Hinge	2
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16 - SST	4
6	34-50015-00	Stud & Retainer Package - Includes:	4
NS	NSS	Stud, Fastener	1
NS	NSS	Retainer, Fastener Stud	1
7	34-06139-03	Fastener	4
8	69NT43-124-5	Shield, Low Voltage (Lexan) - With Tether	1
9	62-03957-01	Label, Danger-High Voltage	1
10	58-04668-00	Control Box, Standard Composite	1
	69NT35-6272	Bracket, Non-Locking, White	1
11	69NT35-6272-1	Bracket, Non-Locking, Orange	1
	69NT35-2287	Bracket, Locking (See Note 1)	1
12	34-01142-01	Receptacle, Retaining	1
-10	34-00928-01	Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8	2
13	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/18 - 3/16 (See Note 2)	2
14	66U1-2403	Screw, Truss Head, #10-24 x 1/2 lg SST	2
NS	76-00724-00SV	Crack, Chip and Hole Repair Kit	1
NS	76-50084-00SV	Insert Repair Kit - Includes:	1
15	34-06231-01	Insert - 17.53 x 9.91 mm (.690 x .390 in) 1/4-20 Threads - NSS	10
16	34-06231-03	Insert - 15.88 x 6.35 mm (.625 x .250 in) 10-24 Threads - NSS	10
17	34-06231-04	Insert - 25.15 x 7.54 mm (.990 x .297 in) 10-24 Threads - NSS	10
18	34-06231-05	Insert - 10.16 x 9.53 mm (.400 x .375 in) 10-24 Threads - NSS	10
19	34-06231-06	Insert - 12.70 x 9.91 mm (.500 x .390 in) 1/4-20 Threads - NSS	10
20	34-06231-07	Insert - 9.53 x 6.76 mm (.375 x .266 in) 10-24Threads - NSS	10
NS	02-00082-00	Durabond Epoxy - NSS	1
NS	07-00390-00	Static Mixing Tube - NSS	1
NS	07-00391-00	Application Gun - Required for Insert Repair	1

NOTES


^{1.} The bracket is bolted to the control box – order 69NT35-2287 for locking bracket.
2. When 69NT35-2287 is used, 34-00928-02, rivet, is to be used in the upper door location.

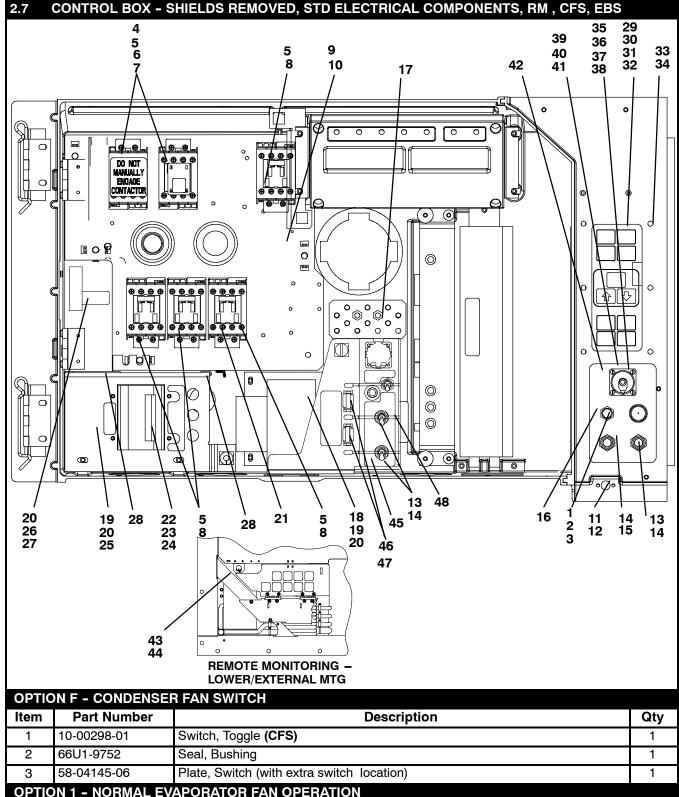


3	58-04145-06	Plate, Switch (with extra switch location)	1
OPTIO	OPTION 1 - NORMAL EVAPORATOR FAN OPERATION		
		See Items 6 and 7 for correct contactor placement	
4	10-00431-07	Contactor, Compressor (CH) (30 Amp)	2
5	34-06243-00	Screw, Hex Head w/ Washer, #8-32 x 5/8 lg SST	12
6	10-00431-08	Cover, Contactor	2
7	62-11018-00	Label, Contactor	12
8	10-00431-06	Contactors, (CF), (HR) & (EF & ES) (12 Amp)	4
9	68-13427-00SV	Panel, Contactor - Includes:	1
	_		

2.7 CO	NTROL BOX - SH	IELDS REMOVED, STANDARD ELECTRICAL COMPONENTS (Continued)	
Item	Part Number	Description	Qty
10	34-06224-01	Screw, Hex Head, Captive Washer 1/4-20 x .62 lg SST	4
11	34-00928-01	Rivet, Blind, 1/8 Diameter, Grip Range - 1/16 - 1/8	6
12	34-01142-01	Receptacle	1
13	10-01129-07	Switch, Toggle (On-Off)	1
14	66U1-9752	Seal, Bushing	2
15	10-01129-10	Switch, Toggle (MDS) (if equipped)	1
16	58-04145-01	Plate, Switch	1
17	69NT41-982-3	Plate, Ground	1
18	10-00332-06	Transformer, Base Unit	1
19	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	A/R
20	66U1-5321-8	Washer, Flat, #10 - SST	A/R
21	10-00431-02	Contact, Auxiliary	1
22	34-00663-07	Washer, Lock, #6 - SST	4
23	66U1-7842-13	Circuit Breaker - 460 vac, 25 Amp, (CB1)	1
24	66U1-6651-4	Screw, Pan Head, #6-32 x 3/8 lg SST	4
25	69NT35-6278	Bracket, Circuit Breaker	1
26	10-00439-01	Transformer, Current Sensing (CS)	1
27	34-06223-00	Screw, Captive Washer, #10-24 x .56 lg SST	2
28	66CH1-1172-46	Trim, Flexible (85 Feet Long, Cut to Length)	A/R
29	79-01706-05SV	Pad, Key - Includes:	1
30	NSS	Gasket (Between Key Pad Plate Assembly and Connector)	1
31	NSS	Gasket (Between Key Pad and Key Pad Plate Assembly	1
32	NSS	Plate Assembly, Key Pad Mounting	1
33	34-06227-00	Screw, Pan Head, #10-24 X 3/4 lg SST	6
34	66U1-5321-8	Washer, Plain, #10	6
REMC	TE MONITORING	(STANDARD LOCATION)	
35	22-02341-00	Receptacle, Remote Monitoring (RM)	1
36	22-02368-00	Plug, Remote Monitoring	1
37	22-02341-01	Cap and Tether, Receptacle Assembly	1
38	66U1-6835	Gasket, Remote Monitoring Receptacle	1
39	34-00848-10	Screw, Round Head, #4-40 x 5/8 lg SST	4
40	66U1-5321-6	Washer, Flat, 0.125 ID - SST	4
		11 . 0 . (1 . 1	4
41	34-00667-05	Nut, Self Locking, #4-40 - SST	4
42	62-10914-00	Plate, Switch, with RM	1
42	62-10914-00 TE MONITORING	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION)	<u> </u>
42 REMC 43	62-10914-00 TE MONITORING 22-01889-00	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION) Receptacle, Remote Monitoring (RM)	<u> </u>
42 REMO 43 44	62-10914-00 TE MONITORING 22-01889-00 69NT40-222	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION)	1
42 REMO 43 44	62-10914-00 TE MONITORING 22-01889-00 69NT40-222 GENCY BYPASS	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION) Receptacle, Remote Monitoring (RM) Bracket	1
42 REMO 43 44	62-10914-00 TE MONITORING 22-01889-00 69NT40-222 GENCY BYPASS 10-00446-00	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION) Receptacle, Remote Monitoring (RM) Bracket Emergency Bypass Module	1
42 REMC 43 44 EMERC	62-10914-00 TE MONITORING 22-01889-00 69NT40-222 GENCY BYPASS 10-00446-00 22-02336-04	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION) Receptacle, Remote Monitoring (RM) Bracket Emergency Bypass Module Fuse (10A)	1 1 1
42 REMO 43 44 EMERO 45	62-10914-00 TE MONITORING 22-01889-00 69NT40-222 GENCY BYPASS 10-00446-00	Plate, Switch, with RM (LOWER LEFT/EXTERNAL LOCATION) Receptacle, Remote Monitoring (RM) Bracket Emergency Bypass Module	1 1 1


11

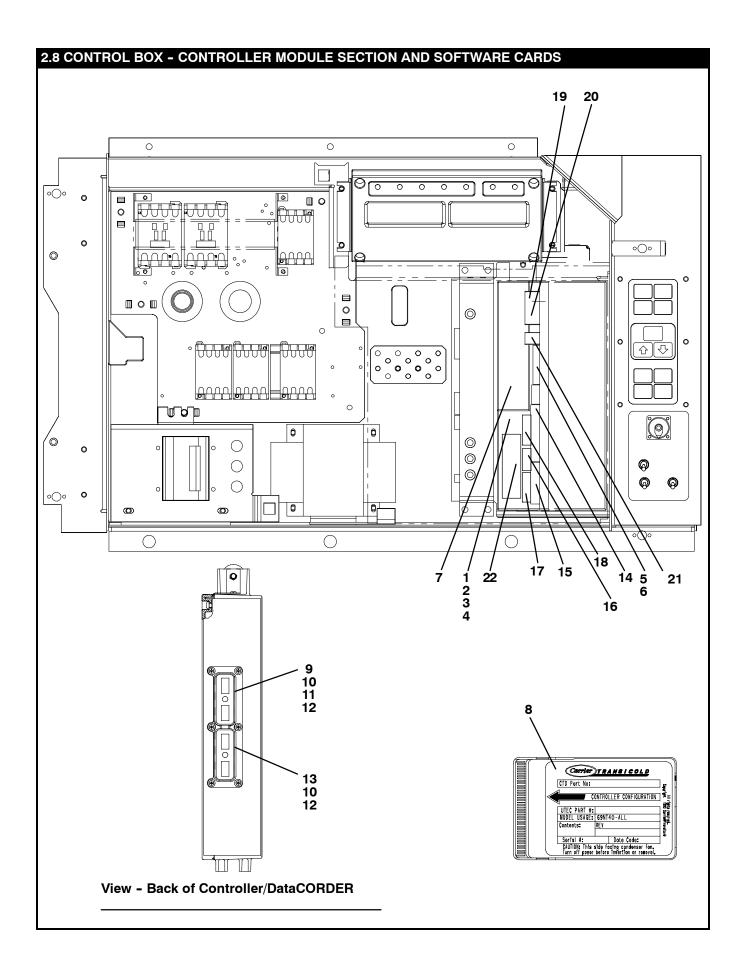

2.8 CO	NTROL BOX - CO	NTROLLER MODULE SECTION AND SOFTWARE CARDS	
Item	Part Number	Description	Qty
1	-	Module, Controller/DataCORDER - Refer to Section 5 - Includes:	-
2	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	1
3	69NT35-2692	Washer, Fender, 0.063 Thick - SST	1
4	58-01184-00	Retainer, Screw, 0.141 ID	1
5	22-02336-22	Fuse, 7.5 Amp (F3A/B)	3
6	22-02336-02	Fuse, 5 Amp (F1 & F2)	1
7	62-02719-00	Label, Controller/DataCORDER Port	1
8	12-00594-xx/5315	Card, Controller/DataCORDER Operation Software	1
9	22-01777-00SV	Connector (EC A-K) - 30 Pin	1
10	22-01777-03	Socket, 20 AWG	35
11	22-50100-00	Socket, 18 AWG	4
12	22-01777-04	Plug, Sealing	21
13	22-01777-01SV	Connector (EC L-Y) - 30 Pin	1
14	22-01556-02	Connector (KA) - 14 Pin	1
15	22-01556-01	Connector (KB) - 10 Pin	1
NS	22-01621-23	Connector (KP) - 9 Pin (Connects to Ribbon Cable)	1
16	22-4031-00	Connector (KD) - 4 Pin	1
17	22-4031-01	Connector (KE) - 5 Pin	1
18	22-4031-02	Connector (KC) - 6 Pin	1
19	22-01622-01	Connector (MA) - 12 Pin	1
20	22-01622-02	Connector (MB) - 16 Pin	1
21	22-01622-00	Connector (MC) - 8 Pin	1
NS	09-00369-00SV	Battery, Real Time Clock, (Within the Controller)	1
NS	22-50157-00	Wire Harness, Controller to Current Sensing Transformer)	1
NS	22-01713-06	Wire Harness, Display Module to Controller/DataCORDER Module	1
NS	62-02735-00	Label, Warning, Don't use 12-00327! -(Located on the control box behind the Controller/DataCORDER module.)	1
NS	62-02738-08	Label, Warning, 55xx Series - (Located on the high & low voltage shields)	1
NS	62-02738-04	Label, Warning, 55xx Series - (Located on the bottom panel of the control box between the Communications Interface module and the switch panel.)	1
OPTIC	ON R - RECHARGE	ABLE BATTERY PACK	
22	30-00407-02SV	Battery Pack - Controller/DataCORDER Module	1

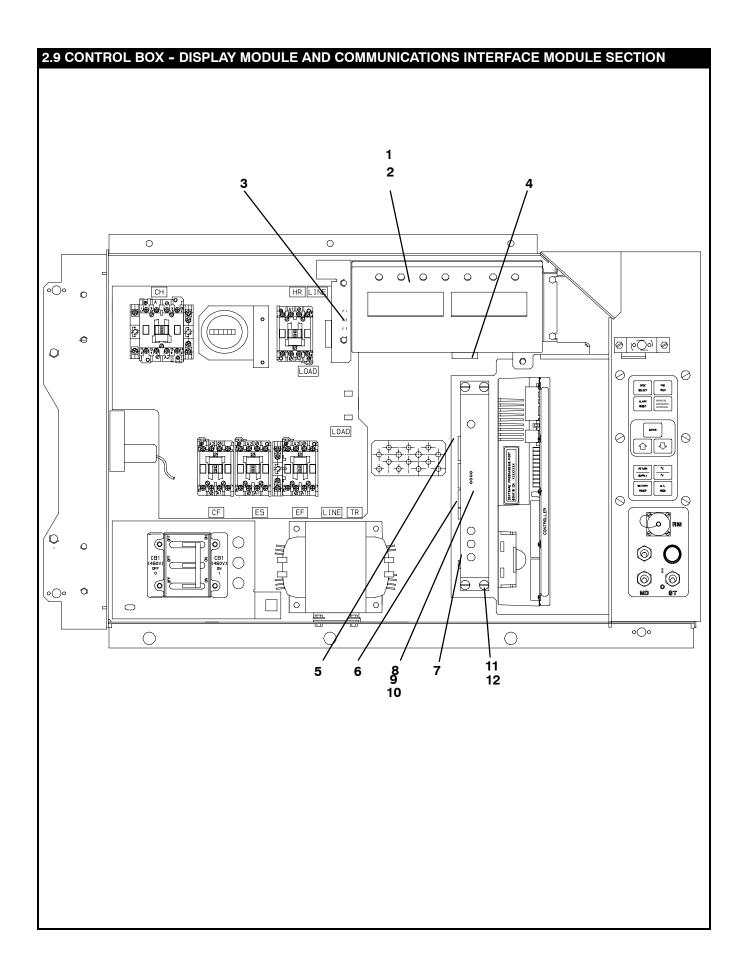


2.9 CONTROL BOX - DISPLAY MODULE AND COMMUNICATIONS INTERFACE MODULE SECTION			
Item	Part Number	Description	Qty
4	12-00433-00RP	Module, LCD Display (Option 1)	1
1	12-00433-02 RP	Module, LED Display (Option 2)	1
2	34-06223-01	Screw, Hex Head, #10-24 x 1/2 lg SST	4
3	22-01621-03	Connector (MK) - 9 Pin	1
4	22-01556-06	Connector (MB) - 16 Pin	1
5	22-01556-04	Connector (CIC) - 7 Pin	1
6	22-02396-02	Connector (CIB) - 3 Pin	1
7	22-01556-00	Connector (CIA) - 7 Pin	1
NS	22-01713-02	Wire Harness, Key Pad to Display Module	1
OPTIC	ON 2 - COMMUNICA	ATIONS INTERFACE MODULE - HIGH DATA RATE	
8	12-00573-00SV	Module, Communications Interface - Includes:	1
9	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
10	66U1-9212-1	Retainer, Push-on	4
11	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	2
12	58-01184-01	Retainer, Screw .75 O.D.	2
OPTIC	ON 4 - COMMUNICA	ATIONS INTERFACE MODULE - LOW DATA RATE	
8	12-00275-19SV	Module, Communications Interface - Includes:	1
9	66U1-3442-2	Stud, Fastener, 1/4 turn, 0.705 lg SST	4
10	66U1-9212-1	Retainer, Push-on	4
11	34-06223-00	Screw, Captive Washer #10-24 x 0.56 - SST	4
12	58-01184-00	Retainer, Screw .75 O.D.	4

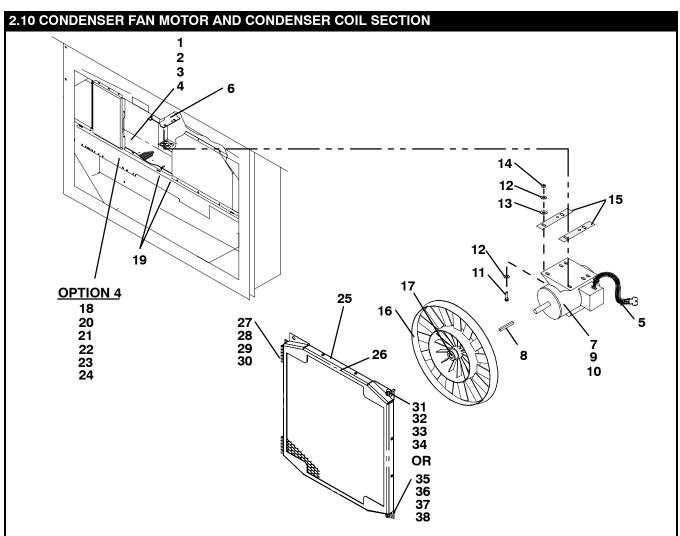


Item	Part Number	Description	Qty
1	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	10
2	66U1-5321-7	Washer, Flat, 1/4 - SST	10
3	34-06053-00	Washer, Mylar, 3/4 OD x 1/4 ID	10
4	34-06053-03	Washer, Mylar, 1.0 OD x 1/4 ID	2
5	22-04018-00SV	Pigtail Connector	1
6	68-14085-00	Bracket, Condenser Motor Mount	1
7	54-00586-20	Motor, Condenser Fan - Includes:	1
8	PL	Key, 3/16 Square x 1-3/8 lg SST	1
9	04-50027-00	Bearing	2
10	22-50088-02	Capacitor, 15 uF	1
11	66U1-5361	Screw, Hex Head, 5/16-18 x 1-1/4 lg SST	4
12	34-01181-01	Washer, Flat, 5/16 - SST	8
13	34-06053-02	Washer, Mylar, 1.0 OD x 3/8 ID	4
14	34-00667-12	Locknut, 5/16-18 - SST	4
15	69NT35-6112	Protector, Condenser Fan Motor Mounting	2
16	38-00585-00	Fan, Condenser (17-1/2 diameter) - Composite - Includes:	1
17	PL	Set Screw,Square Head, 5/16-24 x 5/8 lg SST	2

19 20 21 22 23	Part Number 68-14546-05 68-14546-06 58-04481-00 81-01855-22 66CH1-1172-16 69NT35-8693-8 69NT35-8693-9 58-04026-41 N H - HINGED CO 76-00704-01	Description Cover, Condenser Coil, White Includes: Cover, Condenser Coil, Orange Includes: Plug (for use with coated handle or units with no center handle) Coil, Condenser(Copper) - 7MM 4 Row - Includes Mylar Washers Trim, Flexible Protector (Apply between frame and coil & coil cover) Protector (Apply between frame and coil & coil cover) Protector, Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	Qty 1 1 2 1 2 4 2 2
19 20 21 22 23	68-14546-06 58-04481-00 81-01855-22 66CH1-1172-16 69NT35-8693-8 69NT35-8693-9 58-04026-41 N H - HINGED CO	Cover, Condenser Coil, Orange Includes: Plug (for use with coated handle or units with no center handle) Coil, Condenser(Copper) - 7MM 4 Row - Includes Mylar Washers Trim, Flexible Protector (Apply between frame and coil & coil cover) Protector (Apply between frame and coil & coil cover) Protector, Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	1 2 1 2 4 2 2
19 20 21 22 23	58-04481-00 81-01855-22 66CH1-1172-16 69NT35-8693-8 69NT35-8693-9 58-04026-41 N H - HINGED CO	Plug (for use with coated handle or units with no center handle) Coil, Condenser(Copper) - 7MM 4 Row - Includes Mylar Washers Trim, Flexible Protector (Apply between frame and coil & coil cover) Protector (Apply between frame and coil & coil cover) Protector, Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	2 1 2 4 2
20 21 22 23	81-01855-22 66CH1-1172-16 69NT35-8693-8 69NT35-8693-9 58-04026-41 N H - HINGED CO	Coil, Condenser(Copper) - 7MM 4 Row - Includes Mylar Washers Trim, Flexible Protector (Apply between frame and coil & coil cover) Protector (Apply between frame and coil & coil cover) Protector, Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	1 2 4 2
21 22 23	66CH1-1172-16 69NT35-8693-8 69NT35-8693-9 58-04026-41 N H - HINGED CO	Trim, Flexible Protector (Apply between frame and coil & coil cover) Protector (Apply between frame and coil & coil cover) Protector, Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	2 4 2
22 23	69NT35-8693-8 69NT35-8693-9 58-04026-41 N H - HINGED CO	Protector (Apply between frame and coil & coil cover) Protector (Apply between frame and coil & coil cover) Protector,Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	4 2
23	69NT35-8693-9 58-04026-41 N H - HINGED CO	Protector (Apply between frame and coil & coil cover) Protector, Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	2
	58-04026-41 N H - HINGED CO	Protector,Mylar (Apply between coil & coil cover, RH &LH sides) NDENSER FAN GRILLE	
24	N H - HINGED CO	NDENSER FAN GRILLE	2
OPTIO	76-00704-01	O allowed Mark a Assessed District Laborator	
25		Grille and Venturi Assembly, Blue - Includes:	1
25	76-00704-02	Grille and Venturi Assembly, White - Includes:	1
26	66U1-8912	Label, Rotation	1
27	76-50075-00	Hinge Kit - Includes:	1
28	44-00374-00	Hinge	2
29	58-04101-07	Protector, Mylar	4
30	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	8
0.4	66U1-6811-8	Screw, Retaining - SST	2
31	66U1-6811-12	Screw, Retaining (Phillips Head) - SST	2
32	34-06169-00	Washer, Retaining - SST	2
33	34-06053-03	Washer, Mylar, 1/4ID x 1.00OD	2
34	69NT35-2692-1	Washer, Fender 1/4 - SST	2
OPTIO	NB-BOLTED CO	NDENSER FAN GRILLE	
25	76-00704-01	Grille and Venturi Assembly, Blue - Includes:	1
25	76-00704-02	Grille and Venturi Assembly, White - Includes:	1
26	66U1-8912	Label, Rotation	1
35	69NT35-2692-1	Washer, Fender 1/4 - SST	4
36	34-06053-03	Washer, Mylar, 1/4ID x 1.00OD	4
37	34-00663-11	Washer, Lock, 1/4 - SST	4
38	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	4
ORANG	GE CONDENSER F	AN GRILLE	
12	68-12635-20	Panel, Venturi 0.063 Thk Alum	1
16	68-12636-20	Grille Assy Painted	1
14	68-13642-20	Frame 0.040 Thk Alum	1

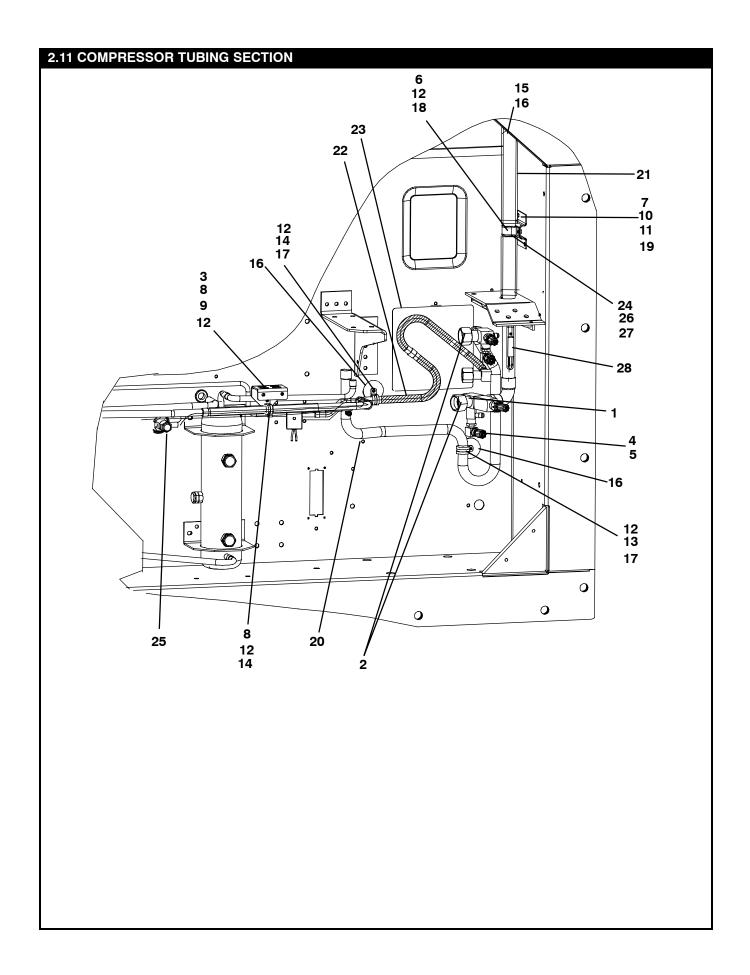


2.11 COMPRESSOR TUBING SECTION				
Item	Part Number	Description	Qty	
1	42-00384-01	Seal 1-14	1	
2	42-00384-02	Seal 1 1/4-12	2	
	68-14142-00	Bracket, White	1	
3	68-14142-01	Bracket, Orange	1	
4	40-00542-00	Elbow Adapter	1	
5	40-00520-02	Сар	1	
6	66U1-5371-7	Screw hxhd #10-24 X .500	2	
7	66U1-5361-25	Screw hxhd 1/4-20 X .75	2	
8	66U1-5371-6	Screw hxhd 10-24 X .750	3	
9	66U1-5321-8	Washer plain #10	2	
10	66U1-5321-7	Washer plain 1/4	2	
11	34-06053-00	Washer .250 ID X .800 OD	2	
12	34-06053-05	Washer .205 ID X .600 OD	7	
13	66U1-3632-20	Tube Clamp	1	
14	34-00373-07	Tube Clamp	2	
15	66CH-11172	Flexible Trim	1	
16	34-06295-00	Washer Fender #10-1.690-2.000	2	
17	66U1-5371-10	Screw mach hxhd #10-24 X 1.00	2	
18	KA-66FA-060	Tube Clamp	1	
19	68-14129-00	Bracket, White	1	
19	68-14129-01	Bracket, Orange	1	
20	81-01907-01	Tube assy Discharge w/ fitting	1	
21	81-01980-01	Tube assy suction w/fitting	1	
22	81-01996-01	Tube assy Econo. w/fitting	1	
23	58-04026-26	Protector 7.50 x 7.50	1	
24	66U1-3882-3	Wire tie 1/16-4.0 Selflinking	12	
25	58-00969-00	Wire tie 2.80 Dia dlbe loop	7	
26	42-00659-00	Insulation, Assembly Pre-Taped	1	
27	42-00660-00	Insulation,Tube Pre-Taped	1	
REFRI	GERATION TEMPE	ERATURE SENSORS		
28	12-00493-08	Sensor, Thermistor (CPDS)	1	
-		Sensor, Thermistor (CPSS) See Section 2.19	1	

2.12 RECEIVER SECTION

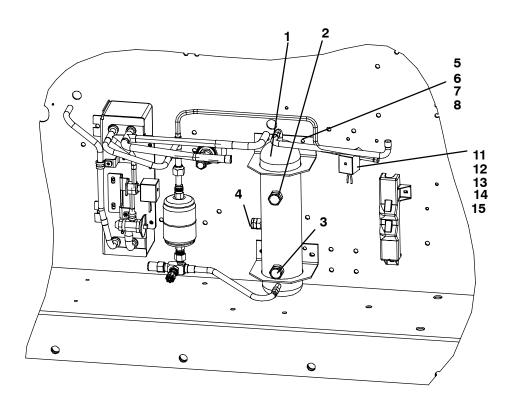


Item	Part Number	Description	Qty
1	79-01785-01	Receiver Assembly - Includes:	1
2	14-00220-01	Glass, Sight	1
3	14-00221-03	Indicator, Moisture-Liquid	1
4	14-01032-14	Plug, Fusible, 3/8 npt - Brass	1
5	58-04026-61	Protector, Mylar	2
6	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	4
7	66U1-5321-7	Washer, Flat, 1/4 - SST	4
8	34-06035-00	Washer, Mylar	4
9	12-00495-20	Sensor, Ambient Thermistor (AMBS)	1
10	-	See Section 2.15 for Sensor Assembly and Related Parts	-
11	34-06053-11	Washer, Mylar, .205 I.D. x .60 O.D.	4
12	66U1-5321-8	Washer, Plain, #10 - SST	3
13	14-00285-00	Valve, Solenoid	1
14	14-01091-01	Coil, Valve	1
15	68-15148-00	Bracket, White	1
15	68-15148-01	Bracket, Orange	1


2.13 WATER-COOLED CONDENSER SECTION

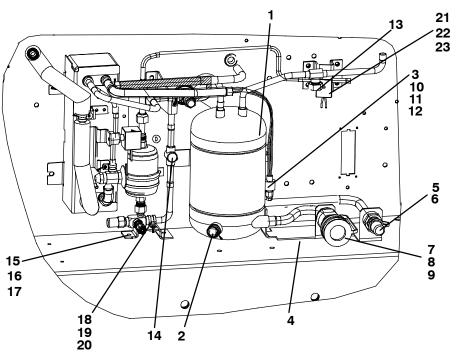


Item	Part Number	Description	Qty
-	76-00734-00	Kit, Condenser/Receiver (For Field Installation) - Includes:	1
1	69NT42-954-4	Condenser/Receiver - Includes:	1
2	14-00220-00	Sight Glass, w/red balls, 1/2 npt	1
3	58-00956-00	Protector, Mylar	2
4	58-04436-00	Protector, Mylar	1
5	66U1-2763-5	Coupling (Water-In)	1
6	66U2-1142	Cap, Dust	1
7	40-01129-00	Coupling, Self Draining - Includes:	1
8	42-50000-00	Seal, O-Ring	1
9	66U2-1152	Cap, Dust	1
10	12-01071-01SV	Switch,Water Pressure OPTION W	1
11	66U2-1132-1	Connector	2
12	66U1-3803	Heat Shrink	2
13	14-00215-05	Disc, Rupture, 3/8 npt	1
14	14-01092-03	Indicator, Liquid Moisture - Brass	1
15	40-01129-00	Tee, 1/2 X 1/2 X 3/8 NPT - Brass	1
16	66U1-5371-6	Screw, Hex Head, #10-24 x 3/4 lg SST	4
17	34-00667-09	Nut, Self-Lock, #10-24 - SST	4
18	34-06053-11	Washer, Mylar, .205 I.D. x .60 O.D.	4
19	66U1-5321-8	Washer, Plain, #10 - SST	3
20	34-00373-05	Clamp, Cushion, 1/2 Diameter	1
21	14-00285-00	Valve, Solenoid	1
22	14-01091-01	Coil, Valve	1
23	68-15148-00	Bracket , White	1
	68-15148-01	Bracket , Orange	1

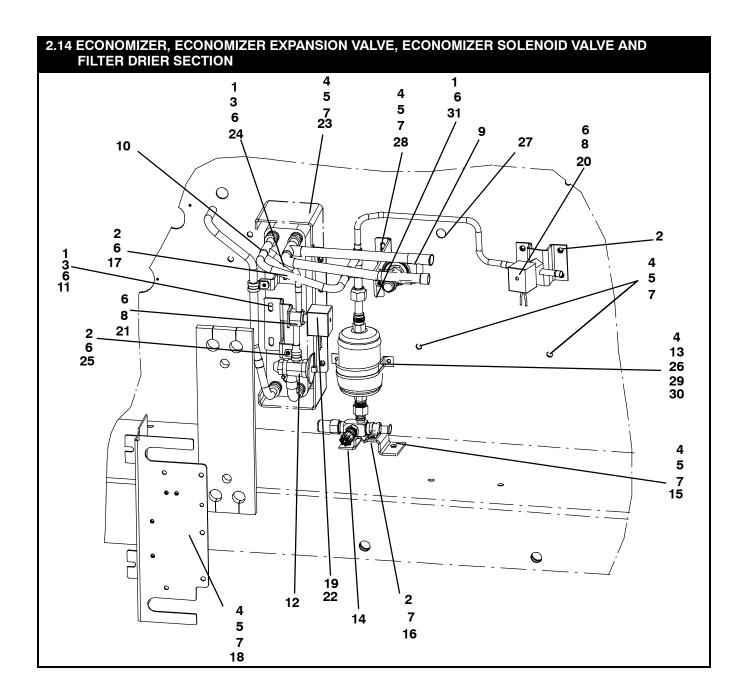


	CONOMIZER, ECO LTER DRIER SECT	NOMIZER EXPANSION VALVE, ECONOMIZER SOLENOID VALVE AND	
Item	Part Number	Description	Qty
1	66U1-5371-7	Screw Mach HXHD #10-24 X .500	3
2	66U1-5371-6	Screw Mach HXHD #10-24 X .750	8
3	66U1-5321-8	Washer plain #10	4
4	66U1-5361-25	Screw cap HXHD 1/4-20 X .75	34
5	66U1-5321-7	Washer plain 1/4	41
6	34-06053-05	Washer .205 ID X .600	11
7	34-06053-00	Washer .250 ID X .800	41
8	58-04026-59	Protector Valve	2
9	DE40BA3-03	Tee,Reducing 5/8 X 5/8 X 3/8	1
10	DE40BA-203	Tee,Reducing 1/2 X 1/2 X 3/8	2
44	68-14278-00	Bracket, White	1
11	68-14278-01	Bracket, Orange	1
12	14-00232-30	Valve expansion	1
13	14-50341-02SV	Filter Drier	1
14	40-00520-01	Coupling W/Cap	1
15	68-14989-00	Bracket	1
16	66U1-5732-1	Clamp,Tube	1
17	44-00370-03	Clamp Cushioned	1
10	68-14269-01	Cover, White	1
18	68-14269-02	Cover, Orange	1
19	14-01091-01	Coil Solenoid Valve	2
20	14-00285-00	Solenoid Valve	1
21	14-01090-12	Valve body	1
22	66U13803	Tube, Heat Shrink	4
00	68-14268-00	Bracket, White	1
23	68-14268-01	Bracket, Orange	1
0.4	68-14413-00	Bracket, White	1
24	68-14413-01	Bracket, Orange	1
25	34-00373-54	Clamp, Tube Cushion	1
26	14-00284-20	O-Ring Filter Drier	2
27	58-00065-27	Grommet .62 ID X.88 OD	1
00	68-15001-00	Bracket, White	1
28	68-15001-01	Bracket, Orange	1
29	69NP20-1031	Clamp, Tube Cushion	1
30	66U12552-133	Gasket Neoprene	1
31	34-00373-53	Clamp, Tube Cushion .38 Dia	1

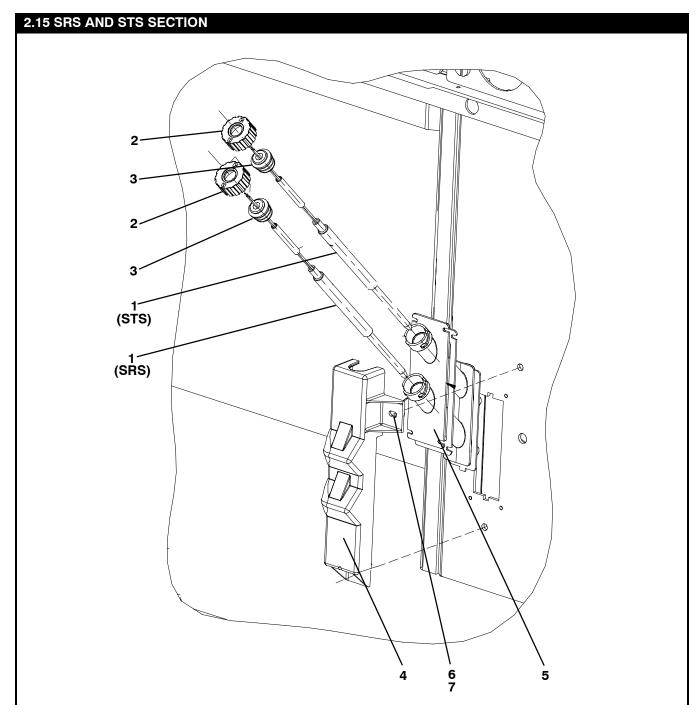

Item	Part Number	Description	Qty
1	12-00395-01SV	Sensor Assembly (STS & SRS)	1
2	58-04277-00SV	Cap, Probe - Includes:	2
3	58-04278-00	Grommet NSS	2
4	58-04279-00	Cover, Probe	1
5	58-04276-00	Holder, Probe	1
6	66U1-5321-7	Washer, Flat, 1/4 - SST	2
7	66U1-5371-7	Screw, Machine, Hex Head, #10-24 x .50 lg SST	2

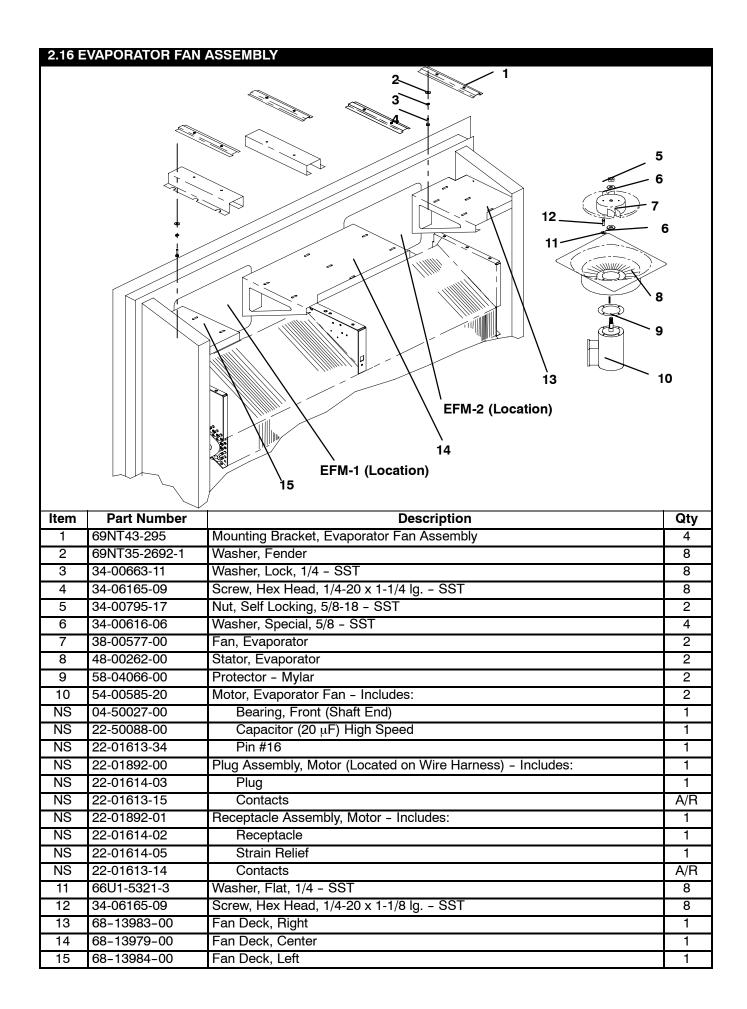

25

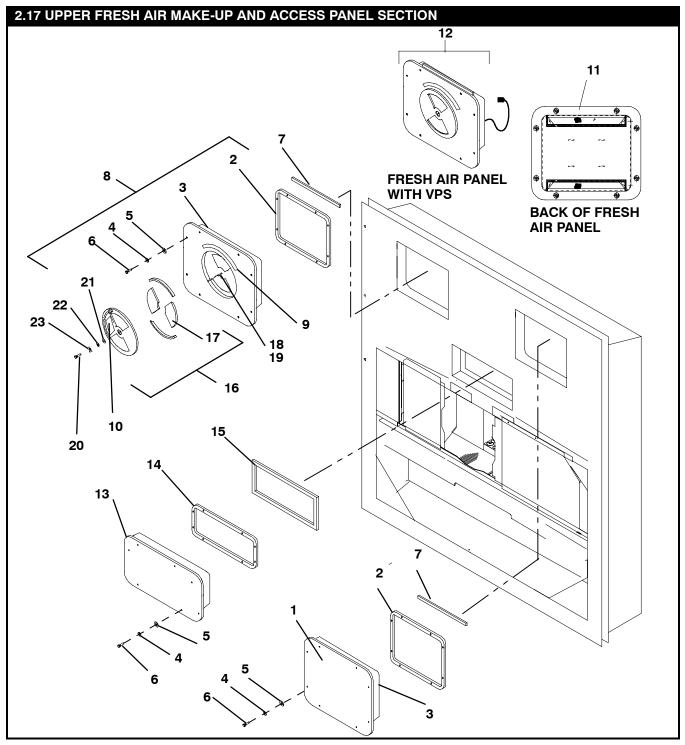


2.17 U	2.17 UPPER FRESH AIR MAKE-UP AND ACCESS PANEL SECTION				
Item	Part Number	Description	Qty		
OPTIC	ON 1 EVAPORATOR	FAN ACCESS PANEL - PLAIN			
1	79-01697-06SV	Panel, Access (See NOTE 1) - Includes:	A/R		
2	42-00296-01	Gasket	1		
3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1		
4	34-006212-12	Washer, Flat, 1/4 - SST	8		
5	34-06053-13	Washer, Mylar, 1/4 ID X 0.80 OD	8		
6	34-06154-00	Screw, Hex Head, 1/4-20 x 1.00 lg TIR	8		
7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1		

8 79-01684-00 Panel, Fresh Air Make-up w/Retaining Washers - Includes: A/R	OPTIO	ON 2 EVAPORATOR	FAN ACCESS PANEL - WITH FRESH AIR MAKEUP	
3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1	8	79-01694-00	Panel, Fresh Air Make-up w/Retaining Washers - Includes:	A/R
7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 9 — Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 OPTION 3 WITH FRESH AIR MAKEUP AND SCREENS - USE ALL OF OPTION 2 AND ITEM BELOW 1 11 58-04251-00 Screen, Medfly 2 OPTION 4 EVAPORATOR FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VENT POSITIONING SENSOR (VPS) 2 12 79-01902-00 Panel, Fresh Air Make-up w/VPS - Includes: A/R 2 42-00296-01 Gasket 1 3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 7 66U1-2552-185 Gasket, O.75 x 1.5 x 16.63 1 9 — Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13	2	42-00296-01	Gasket	1
9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 25 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 26 FOPTION 3 WITH FRESH AIR MAKEUP AND SCREENS - USE ALL OF OPTION 2 AND ITEM BELOW 1 27 FOPTION 4 EVAPORATOR FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VENT POSITIONING SENSOR (VPS) 1 28 79-01902-00 Panel, Fresh Air Make-up w/VPS - Includes: A/R 1 29 42-00296-01 Gasket 1 20 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 20 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 24 42-01052-02 Gasket 1 25 34-06053-19 Washer, Flat, 5/16 - SST 1 26 34-06053-19 Washer, Flat, 5/16 - SST 1 27 34-06053-10 Washer, Mylar, 1.00 OD x 0.312 ID 1 28 64U1-5362-12 Gasket 1 29 Gasket 1 20 34-06053-10 Washer, Flat, 5/16 - SST 1 20 34-06053-10 Washer, Mylar, 1.00 OD x 0.312 ID 1 29 Gasket 1 20 Gasket 1 21 34-06053-10 Washer, Mylar, 1.00 OD x 0.312 ID 1 21 34-06053-10 Washer, Mylar, 1.00 OD x 0.312 ID 1 21 34-06012-112 Gasket 1 21 34-06053-10 Washer, Mylar, 1.00 OD x 0.312 ID 1 21 34-06053-10 Washer, Mylar, 1.14 ID X 0.80 OD 8 21 34-06053-00 Washer, Mylar, 1.14 ID X 0.80 OD 8 22 66U1-5362-2 Kit, Gasket 1 23 34-06053-00 Washer, Mylar, 1.14 ID X 0.80 OD 8 23 34-06053-00 Washer, Mylar, 1.14 ID X 0.80 OD 8 24 34-06053-00 Gasket One Piece) 1 25 34-06053-10 Washer, Mylar, 1.16 ID X 0.80 OD 8 26 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 25 TUD ASSEMBLY KITS (REPLACEMENT) 1 26 40-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 27 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 28 66U1-5321-13 Washer, Flat, 5/16 - SST 1 29 66U1-5321-13 Washer, Flat, 5/16 - SST 1	3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
10	7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1
21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 1 1 1 1 1 1 1 1	9	-	Label, Fresh Air (See Section 2.28 for Language Selection)	1
22 66U1-5321-13 Washer, Flat, 5/16 - SST	10	62-02783-00	Label, Fresh Air	1
23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1	21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
OPTION 3 WITH FRESH AIR MAKEUP AND SCREENS - USE ALL OF OPTION 2 AND ITEM BELOW 11 58-04251-00 Screen, Medfly 2 2 OPTION 4 EVAPORATOR FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VENT POSITIONING SENSOR (VPS) 12 79-01902-00 Panel, Fresh Air Make-up w/VPS - Includes: A/R 2 42-00296-01 Gasket 1 3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 1 1 1 62-02783-00 Label, Fresh Air (See Section 2.28 for Language Selection) 1 1 1 62-02783-00 Label, Fresh Air (See Section 2.28 for Language Selection) 1 1 22 66U1-5321-13 Washer, Mylar, 1.00 OD x 0.312 ID 1 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 1 1 1 1 1 1 1 1	22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
11	23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1
OPTION 4 EVAPORATOR FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VENT POSITIONING SENSOR (VPS) 12 79-01902-00 Panel, Fresh Air Make-up w/VPS - Includes: A/R 2 42-00296-01 Gasket 1 3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 14 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 STUD ASSEMBLY KITS (REPLACEMEN	OPTIO	ON 3 WITH FRESH	AIR MAKEUP AND SCREENS - USE ALL OF OPTION 2 AND ITEM BELO	W
SENSOR (VPS) 12 79-01902-00 Panel, Fresh Air Make-up w/VPS - Includes: A/R 2 42-00296-01 Gasket 1 3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 14 42-01052-02 Gasket 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 ST	11	58-04251-00	Screen, Medfly	2
2 42-00296-01 Gasket 1 3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 HEATER ACCESS PANEL 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 14 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17	OPTI		R FAN ACCESS PANEL - WITH FRESH AIR MAKEUP AND VENT POSITI	ONING
3 42-00327-00 Gasket, - 0.26 x 0.50 Halfmoon 1 7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06052-02 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-13 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud	12	79-01902-00	Panel, Fresh Air Make-up w/VPS - Includes:	A/R
7 66U1-2552-185 Gasket, 0.75 x 1.5 x 16.63 1 9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 HEATER ACCESS PANIEL 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-13 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1	2	42-00296-01	Gasket	1
9 - Label, Fresh Air (See Section 2.28 for Language Selection) 1 10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 1 HEATER ACCESS PANEL 1 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 Ig SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1	3	42-00327-00	Gasket, - 0.26 x 0.50 Halfmoon	1
10 62-02783-00 Label, Fresh Air 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 HEATER ACCESS PANEL 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1	7	66U1-2552-185	Gasket, 0.75 x 1.5 x 16.63	1
21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 HEATER ACCESS PANEL 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 Ig TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 Ig SST 1 21 34-06053-19 Washer, Flat, 5/16 - SST 1	9	-	Label, Fresh Air (See Section 2.28 for Language Selection)	1
22 66U1-5321-13 Washer, Flat, 5/16 - SST 1 23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 HEATER ACCESS PANEL 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	10	62-02783-00	Label, Fresh Air	1
23 66U1-5362-2 Nut, Wing, 5/16-18 - SST 1 HEATER ACCESS PANEL 13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	21	34-06053-19	Washer, Mylar, 1.00 OD x 0.312 ID	1
HEATER ACCESS PANEL 13	22	66U1-5321-13	Washer, Flat, 5/16 - SST	1
13 79-01697-14SV Panel, Access - Includes: 1 14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	23	66U1-5362-2	Nut, Wing, 5/16-18 - SST	1
14 42-01052-02 Gasket 1 15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	HEAT			
15 34-06212-12 Gasket, Access Panel 1 4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	13	79-01697-14SV	Panel, Access - Includes:	1
4 34-06053-13 Washer, Flat, 1/4 - SST 8 5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	14	42-01052-02	Gasket	1
5 34-06053-00 Washer, Mylar, 1/4 ID X 0.80 OD 8 6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg. – TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) – Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) – Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg. – SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 – SST 1	15	34-06212-12	Gasket, Access Panel	1
6 34-06154-00 Screw, Hex Head, 1/4-20 x 1.00 lg. – TIR 8 STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) – Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) – Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg. – SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 – SST 1	4		Washer, Flat, 1/4 - SST	8
STUD ASSEMBLY KITS (REPLACEMENT) 16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	5		•	8
16 74-00201-02 Kit, Gasket and Stud Assembly (See NOTE 2) - Includes: 1 17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1				8
17 42-00407-00 Gasket (One Piece) 1 18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	STUD	ASSEMBLY KITS (REPLACEMENT)	
18 74-00201-01 Kit, Disc and Stud Assembly (See NOTE 3) - Includes: 1 19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	16	74-00201-02	Kit, Gasket and Stud Assembly (See NOTE 2) - Includes:	1
19 NSS Stud Assembly, 5/16-18 1 20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	17	42-00407-00	,	1
20 34-06185-01 Screw, Machine Pan Head, #8-32 x 1/2 lg SST 1 21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 lD 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1				1
21 34-06053-19 Washer, Mylar, 1.00 OD x 0.312 ID 1 22 66U1-5321-13 Washer, Flat, 5/16 - SST 1				1
22 66U1-5321-13 Washer, Flat, 5/16 - SST 1	20		-	1
			1	1
23 66U1-5362-2 Nut, Wing, 5/16-18 – SST 1				1
	23	66U1-5362-2	Nut, Wing, 5/16-18 – SST	1

NOTES

27

- 1. Access panels with Transfresh option should be ordered from Transfresh, See Section 2.16 for address.
- 2. Disc and stud assembly kit, which will modify stud to 5/16-18, also includes new disc and gasket.
- 3. Must order 74-00201-01 stud assembly kit, which will modify stud to 5/16-18, and include 42-00407-01 (1 piece) gasket.

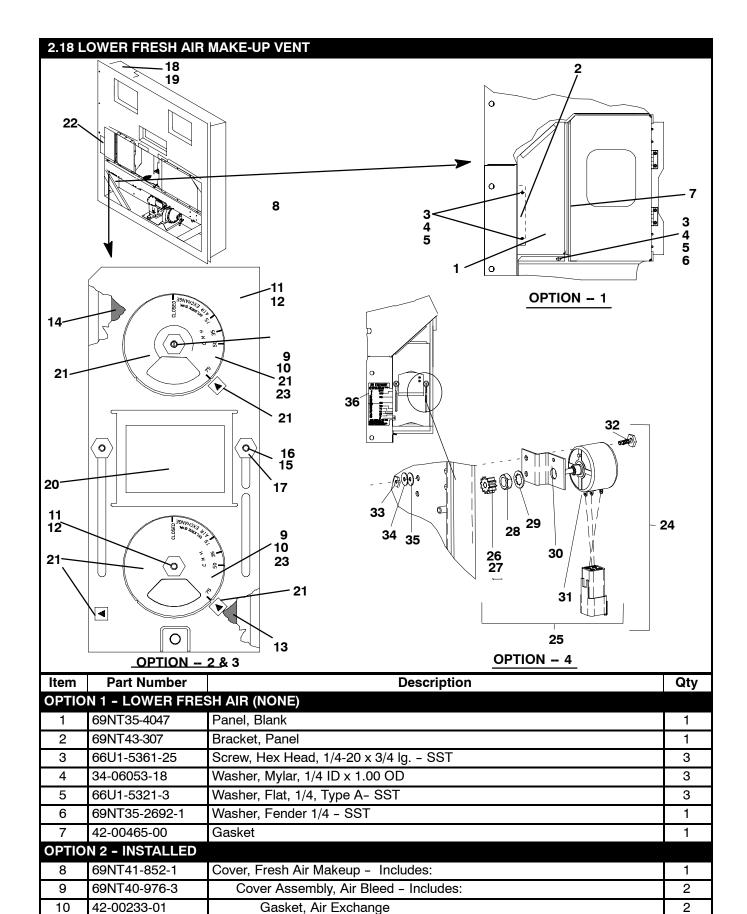

Nut, Hex, 1/4-20 UNC-2B - SST

Washer, Mylar, 1/4 ID x 1.00 OD

Nut, Hex, (with mini handle),1/4-20 UNC-2B - SST

2

2

2

T-327PL 28

34-06092-00

34-06183-00


34-06053-00

11

12


2.18 L0	OWER FRESH AIR I	MAKE-UP VENT	
Item	Part Number	Description	Qty
13	42-00295-01	Gasket, Cover	1
14	42-00295-00	Gasket, Cover	1
15	69NT41-782	Bushing	2
16	66U1-5321-7	Washer, Flat, 1/4 - SST	2
17	34-06092-00	Nut, Hex, 1/4-20 UNC-2B - SST	A/R
17	34-06183-00	Nut, Hex, (with mini handle),1/4-20 UNC-2B - SST	A/R
18	69NT35-8348	Baffle, Unpainted	1
19	34-00928-09	Rivet, Blind, .156 Diameter, Grip Range - 3/16-1/4	4
20	69NT35-7012	Label, Fresh Air	1
	76-50116-03	Label Kit - Includes:	1
	62-10540-04	Label, Air Exchange, CMH - <i>English</i>	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-00	Label Kit - Includes:	1
	69NT35-1417	Label, Air Exchange, CMH - English (Maersk Specification)	2
	66CH1-1002-33	Label, Arrow (Maersk Specification)	3
	76-50116-01	Label Kit - Includes:	1
21	69NT35-9238	Label, Air Exchange, CFM - <i>English/Spanish</i>	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-02	Label Kit - Includes:	1
	62-10540-00	Label, Air Exchange, CMH - English/Spanish/Chinese	2
	66CH1-1002-33	Label, Arrow	3
	76-50116-04	Label Kit - Includes:	1
	62-10540-00	Label, Air Exchange, CMH - English/Spanish/Chinese (NYK Specification)	2
	62-10381-00	Label, Arrow (NYK Specification)	3
	69NT35-1287-1	Label, Fresh Air Exchange, CMH - English (Maersk Specification)	1
00	69NT35-9228	Label, Fresh Air Exchange, CFM - English/Spanish	1
22	62-10537-00	Label, Fresh Air Exchange, CMH - English/Japanese/Chinese	1
	62-10381-00	Label, Fresh Air Exchange, CMH - English	1
OPTIO	N 3 - INSTALLED V	VITH SCREENS - USE ALL OF OPTION 2 PLUS ITEM BELOW	
23	58-04263-01	Screen Assembly, Medfly	2
OPTIO	N 4 - INSTALLED V	VITH VENT POSITION SENSOR	
24	76-50136-00	Assembly, Vent Position Sensor - Includes:	1
25	79-01925-00	Sensor Assembly - Includes:	1
26	48-00377-00	Gear, 69nt, Auto LFA	1
27	34-06262-00	Screw, Set #8- 32 X .156lg	1
28	34-06287-00	Nut, Hex Jam 3/ 8- 32	1
29	34-06286-00	Washer, Lock 3/8-32	1
30	68-14955-00	Bracket, .063 Thk Sst	1
31	10-00455-00	Sensor, LVPS; Potentiometer	1
32	66U1-5371-7	Screw, Hex Head 10-24 x 1/2 gl. SST	2
33	34-00666-09	Nut, Hex, 10-24 UNC-2B - SST	2
34	66U1-5321-8	Washer, Flat, 1/2, Type A- SST	2
35	34-06053-04	Washer, Mylar	2
36	62-10984-00	Label, LVPS, Air Exchange	1

29

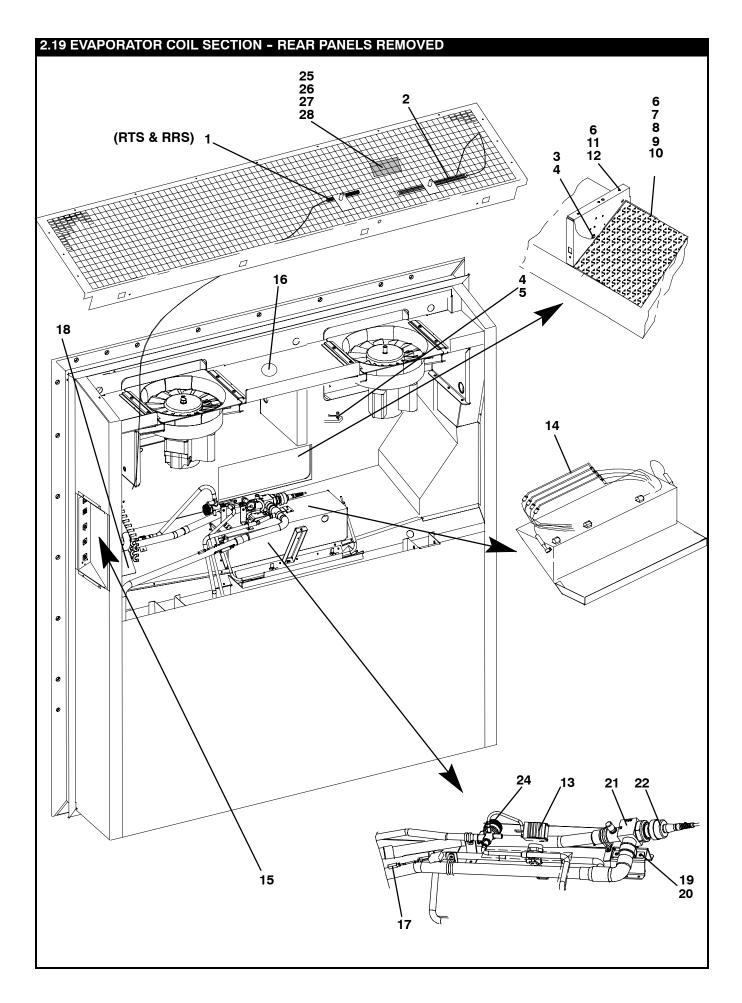


2.19 EV	VAPORATOR COIL	SECTION - REAR PANELS REMOVED	
Item	Part Number	Description	Qty
1	12-00500-01SV	Sensor Assembly (RRS & RTS)	1
2	_	Sensor, Thermistor, (Temperature Recorder)	-
3	12-00495-20	Sensor, Thermistor, Defrost (DTS)	1
4	34-01178-22	Screw, Hex Head, #8-32 x 1/2 lg SST	3
5	66U1-6912-16	Thermostat, Heat Termination (HTT)	1
6	AU11JR171	Washer, Lock, 1/4 - SST	10
7	69NT35-6522	Retainer (For Heaters)	3
8	69NT35-6532	Clip (For Heaters)	4
9	69NT35-2692-1	Washer, Flat, 1/4 - SST	2
10	66U1-5371-13	Screw, Hex Head, #10-24 x 1.25 lg SST	2
11	66U1-5361-25	Capscrew, Hex Head, 1/4-20 x 3/4 lg SST	9
12	66U1-5321-3	Washer, Flat, 1/4 - SST	A/R
13	14-01091-02	Valve, Unloader and Coil	1
14	24-00006-02	Heater, Evaporator Coil	4
15	_	USDA Option - Refer to Section 2.20	-
16	12-00493-09	Plug, Hole (2 inch diameter) (Located on Fan Deck)	1
17	12-00493-06	Sensor, Thermistor, (CPSS)	1
18	58-04026-26	Protector, Mylar	2
19	KA66FA138	Clamp, Tube 1 3/8 2 Holes	1
20	66U1-5371-7	Screw, Machine, Hex Head, #10-24 x .50 lg SST	2
21	14-00263-05	Valve, Stepper Motor - Includes:	1
22	14-00263-20	Piston and Motor Assembly - Includes:	1
NS	22-02392-03	Connector (To Expansion Controller Module)	1
NS	22-02393-01	Pin, 18-20 Gauge (Used on 22-02392-03)	4
NS	22-02394-03	Seal (Used on 22-02392-03)	4
23	08-00297-00	Coil, Evaporator (Does not include thermostats or heaters)	1
24	14-00273-02	Valve, Thermostatic Expansion, Hermetic	1
DEHU	MIDIFICATION		
-	76-00675-01	Kit, Humidity Sensor(Field installation, units provisioned for - See Unit Matrix) - Includes:	-
25	10-00413-00	Sensor, Humidity (HS)	1
26	66U1-5371-10	Screw, Hex Head, #10-24 x 1.00 lg SST	4
27	66U1-5321-8	Washer, Flat, #10 - SST	2


31

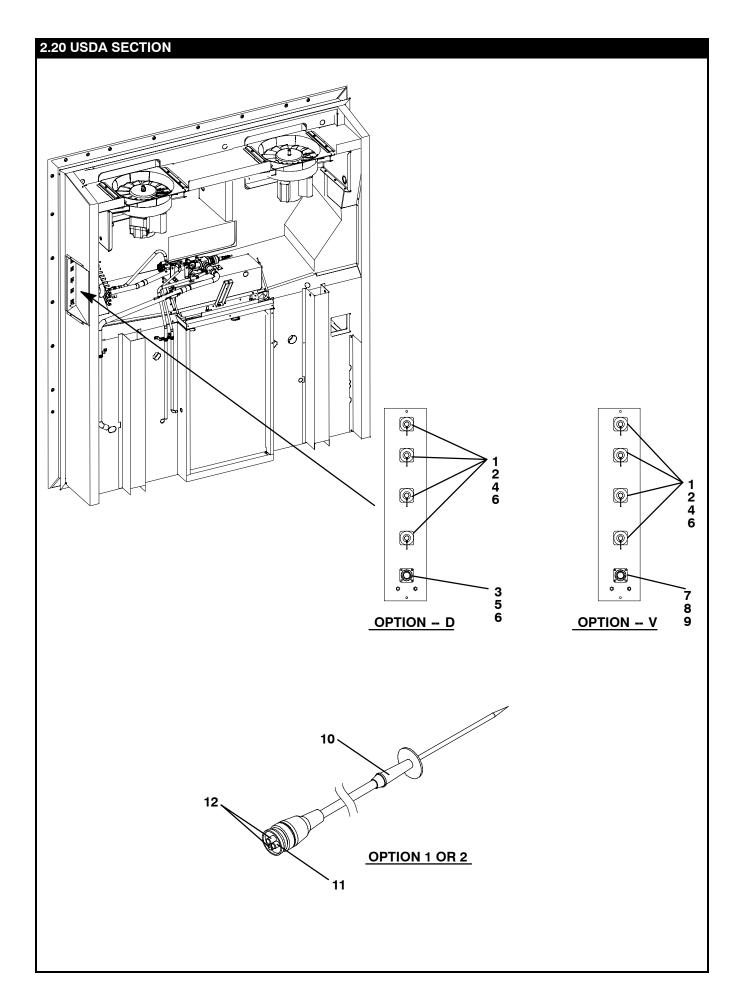

2.20 U	2.20 USDA OPTION			
Item	Part Number	Description	Qty	
OPTIC	N D			
1	22-01660-08	Plug, Sealing	4	
2	22-01660-00	Receptacle (PR1, PR2, PR3, Cargo Probe 4) (3 Pin)	4	
3	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)1	1	
NS	69NT41-992	Plate Assembly, USDA - Includes:	1	
4	69NT43-175	Cap, Dust, with Tether (3 Pin)	4	
5	69NT43-176	Cap, Dust, with Chain (5 Pin)	1	
6	22-01613-14	Contact, Pin, #16 (Used with 22-01660-00 & 22-01660-03)	13	
NS	22-01660-04	Plug, Interrogator Socket (ICR) (5 Pin)	1	
OPTIC	ON V			
1	22-01660-08	Plug, Sealing	4	
2	22-01660-00	Receptacle (PR1, PR2, PR3, Cargo Probe 4) (3 Pin)	4	
4	69NT43-175	Cap, Dust, with Tether (3 Pin)	4	
6	22-01613-14	Contact, Pin, #16 (Used with 22-01660-00 & 22-01660-03)	13	
7	22-02412-00	Receptacle, Interrogator (5 Pin)	1	
8	22-02413-00	Cap, Dust, with Tether (5 Pin)	1	
9	22-02398-02	Socket, Contact (Silver Plated)	A/R	
9	22-02398-03	Socket, Contact (Gold Plated)	A/R	
FIELD	INSTALLED KITS (1	for units with USDA provision)		
_	76-00676-00	Kit, USDA (For field installation, units provisioned for side-mounted USDA) - Includes all of OPTION D:	-	
USDA	PROBE KITS			
OPTIC	ON 1			
10	12-00342-03	Sensor Assembly, 600" lg. (15M) (USDA Probe) - Includes:	A/R	
11	22-50127-00	Plug, Socket (PR1, PR2, PR3, Cargo Probe 4)	1	
12	22-01613-15	Contact, Socket, #16 (Used with 22-50127-00 & 22-01660-04)	A/R	
OPTIC	N 2			
10	12-00342-02	Sensor Assembly, 540" lg. (13.5M) (USDA Probe) - Includes:	A/R	
10	12-00342-04	Sensor Assembly, 600" lg. (15M) (USDA Probe) - Includes:	A/R	
11	22-50127-00	Plug, Socket (PR1, PR2, PR3, Cargo Probe 4)	1	
12	22-01613-15	Contact, Socket, #16 (Used with 22-50127-00 & 22-01660-04)	A/R	
	NOTE			
		Do not mix silver pins with gold pins and sockets.		

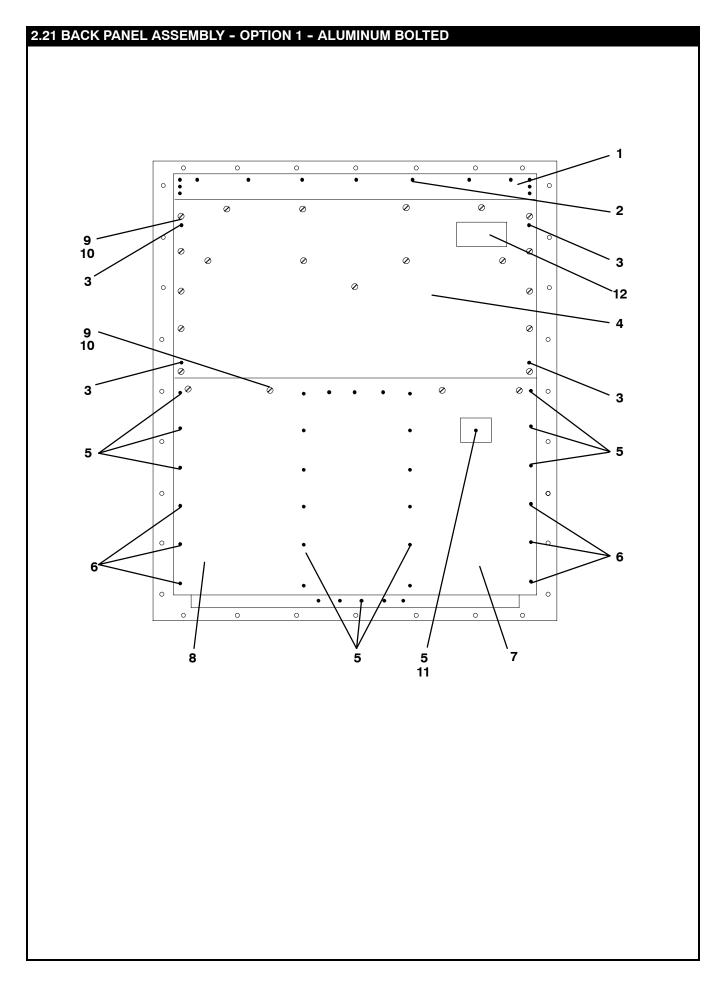


2.21 B	2.21 BACK PANEL ASSEMBLY - OPTION 1 - ALUMINUM BOLTED			
Item	Part Number	Description	Qty	
1	69NT43-464	Grille, Top (Unpainted)	1	
2	34-00928-09	Rivet, Blind, 5/32 Diameter, Grip Range - 1/8-1/4	21	
3	66U1-7982-2	Rivet, TIR, 3/16 Diameter, Grip Range - 5/64-11/64	4	
4	76-00746-05	Panel Assembly, Upper - Includes:	1	
NS	68-14038-04	Panel	1	
NS	68-15014-00	Drain Pan, Side (Location - Behind upper panel)	1	
NS	68-15013-00	Drain Pan, Center (Location - Behind upper panel - Top)	1	
NS	58-04624-00	Drain	1	
NS	68-14373-00	Plate	1	
NS	NSS	Drain Pan (Location - Behind upper panel)	2	
NS	42-00334-00	Gasket (Location - Behind upper panel)	1	
NS	66U1-8075	Gasket (25 ft., Cut to length)	A/R	
5	34-00928-02	Rivet, Blind, 1/8 Diameter, Grip Range - 1/8-3/16	46	
6	34-00928-03	Rivet, Blind, 1/8 Diameter, Grip Range - 3/16-1/4	3	
7	68-13475-00	Panel, Bottom, (Painted)	1	
7	68-13475-08	Panel, Bottom, (Unpainted)	1	
8	68-13475-01	Panel, Bottom (Provision for heat exchanger location), (Painted)	1	
8	68-13475-09	Panel, Bottom (Provision for heat exchanger location), (Unpainted)	1	
9	66U1-2403	Screw, Machine, Truss Head, #10-24 x 1/2 lg SST	20	
10	69NT35-2692	Washer, Fender, #10 x 1.00 OD - SST	20	
11	69NT35-2257	Duct, Air	1	
12	62-02822-01	Label, Carrier Transicold	1	

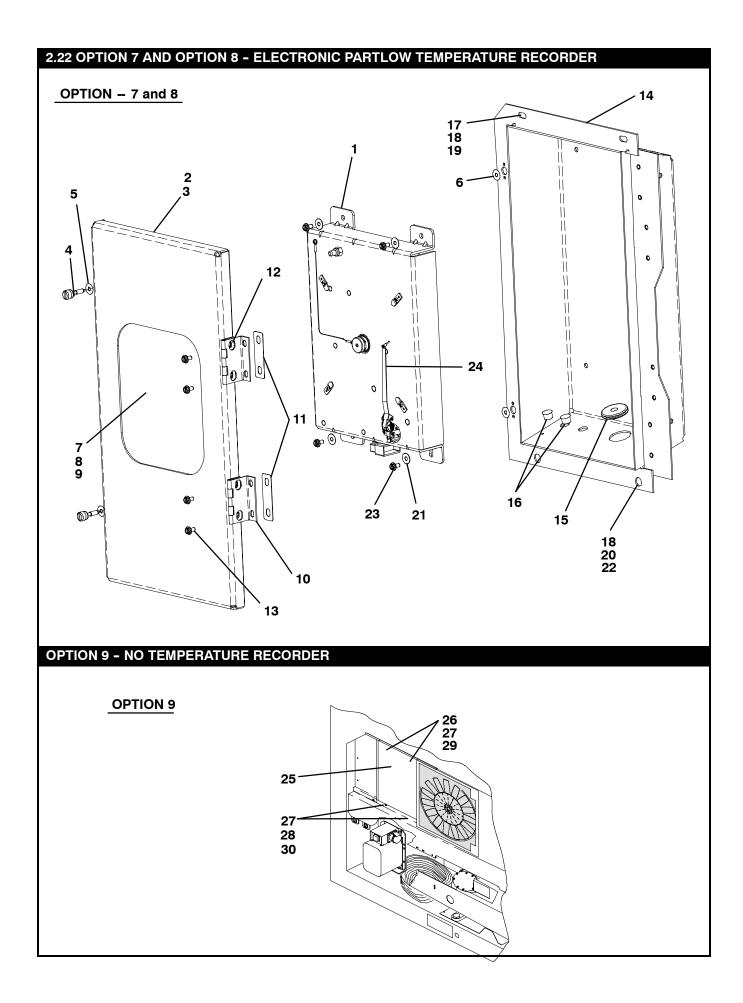


2.22 C	PTION 7 AND OPT	ION 8 - ELECTRONIC PARTLOW TEMPERATURE RECORDER	
Item	Part Number	Description	Qty
-	76-00701-11 OPTION 7	Partlow Recorder Kit, Standard - Includes: Recorder, Box & Door Assy's (For field installation, units provisioned for - Refer to Manual T-300)	1
1	12-00464-06	Electronic Temperature Recorder	1
-	76-00701-10 OPTION 8	Partlow Recorder Kit, Special - Includes: Recorder, Box & Door Assy's (For field installation, units provisioned for - Refer to Manual T-300)	1
1	12-00464-05	Electronic Temperature Recorder	1
2	76-00701-05	Door Assembly - Includes:	1
3	42-01098-01	Seal, Door - Rubber	1
4	66U1-6811-8	Screw, Retaining300625 Panel Thickness - SST	2
5	34-06053-00	Washer, .25 I.D. x 1.00 O.D Mylar	4
6	34-06169-00	Washer, Retaining - SST	2
7	69NT35-5022-5	Window	1
8	69NT35-5352-1	Gasket	1
9	34-00795-09	Nut, Selflock, 1/4-20	4
10	44-00374-00	Hinge	2
11	58-04101-07	Protector - Mylar	4
12	34-06179-04	Screw, Hex Head, SEMS, #10-24 x 5/16 lg.	4
13	34-06179-00	Screw, Hex Head, #10-24 x 7/16 lg SST	4
14	76-00701-06SV	Box Assembly - Includes:	1
15	58-00065-67	Grommet, 3/8 ID x 1.25 OD	1
16	58-00065-70	Plug, Hole, .50 DIA	2
17	66U1-5321-7	Washer, Flat, 1/4 - SST	2
18	66U1-5361-25	Screw, Cap, Hex Head, 1/4-20 x .75 lg SST	4
19	34-06053-13	Washer, Retaining, .19 I.D. x .80 O.D Mylar	2
20	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2
21	34-06053-05	Washer, 1/4 I.D. x 1 O.D Mylar	4
22	34-06053-03	Washer, .25 I.D. x .19 O.D Mylar	2
23	34-06179-00	Screw, Hex Head, SEMS, #10-24 x 7/16 lg.	4
24	09-00371-00	Stylus, Elecronic Partlow Kit, Includes:	
NS	-	Chart - Owner Supplied	A/R
NS	09-00128-00	Charts °F - 31 Day (Box of 50) (-20°F to +80°F)	A/R
NS	09-00128-01	Charts °C - 31 Day (Box of 50) (-25°C to +25°C)	A/R
OPTI	ON 9 - NO TEMPEI	RATURE RECORDER	
Item	Part Number	Description	Qty
05	68-12658-20	Panel, White	1
25	68-12658-04	Panel, Orange	1
26	66U1-5321-7	Washer, Flat, 1/4 - SST	2
27	66U1-5361-25	Screw, Cap Hex Head, 1/4-20 x .75 lg SST	4
28	69NT35-2692-1	Washer, Fender, 1/4 I.D. x .993-1.015 O.D.	2
29	34-06053-13	Washer, Retaining, .195 I.D. x .80 O.D Mylar	2
30	34-06053-03	Washer, .25 I.D. x 1.00 O.D Mylar	2

37

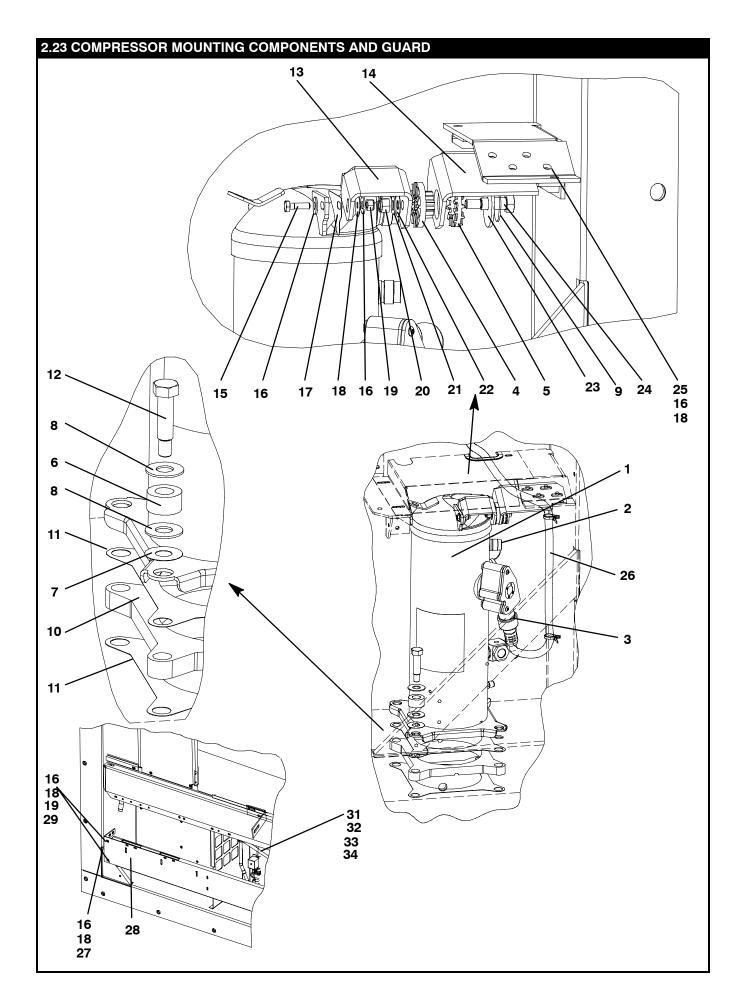


2.23 C	OMPRESSOR MOU	JNTING COMPONENTS AND GUARD	
Item	Part Number	Description	Qty
1	18-10134-21	Compressor, Scroll - Includes: (See Section 4)	-
2	42-00384-01	Seal, Rotolock, 1-14	1
NS	42-00384-02	Seal, Rotolock, 1-1/4-12	2
NS	07-00427-00	Compressor Oil	2
3	18-00077-41	O-Ring	1
4	58-04461-00	Shockmount, Bushing	1
5	58-04461-01	Shockmount, Ring	1
6	58-04451-00	Mount, Resilient, 80A	4
7	34-06053-20	Washer, Mylar - 1.50 X .65	4
8	34-06236-00	Washer, .687 X 1.50 X .078 - SST	8
9	58-04026-62	Protector, Mylar	1
10	48-00350-01SV	Base, Compressor (Painted) - Includes:	1
11	58-04435-00	Protector, Mylar	2
12	34-06174-03	Bolt, Shoulder, 1/2-13 UNC - SST	4
13	86-04406-00	Bracket Assembly	1
14	86-04405-00	Bracket Assembly	1
15	66U1-5361-47	Bolt, Machine Hex Head, 1/4-20 X 1.25 lg SST	1
16	66U1-5321-7	Washer, Plain 1/4 - SST	15
17	58-04463-00	Protector, Mylar	1
18	34-06053-00	Washer, Mylar .250 ID X .800 OD	14
19	34-00667-11	Nut, Self Lock 1/4-20 - SST	5
20	34-00667-13	Nut, Self Lock 3/8-16 - SST	1
21	66U1-5321-5	Washer, Plain 3/8 N Type A - SST	1
22	34-06053-02	Washer, Mylar .375 ID X 1.00 OD	1
23	34-06060-03	Washer, Snubbing .537 ID X 2.00 OD	1
24	34-06174-04	Bolt, Shoulder, 3/8-16 UNC - SST	1
25	34-00655-04	Screw, Cap Hex Head 1/4-20 x .50 - SST	4
26	22-04040-00	Cable, Power	1
27	66U1-5361-25	Screw, Hex Head, 1/4-20 x 3/4 lg SST	1
28	68-12993-00	Panel, Guard	1
29	66U1-5361-11	Capscrew, Hex Head, 1/4-20 x 1-1/2 lg SST	4
NS	68-15150-00	Cover, Compressor	1
30	68-14706-01	Guard (White), Compressor	1
31	66U1-5321-8	Washer, Flat, #10 - SST	7
32	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	7
33	68-15149-00	Partition	1
34	68-14778-00	Bracket	1

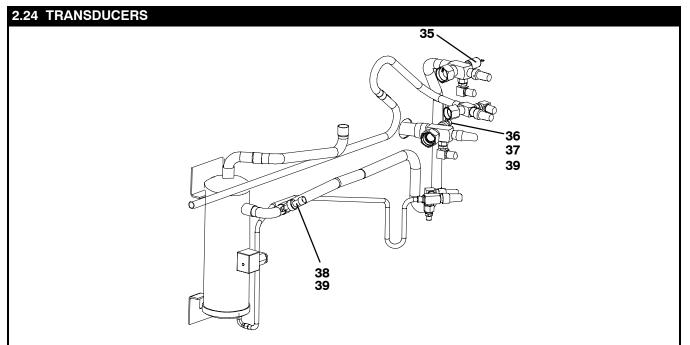


Option T - Transducer Locations

Item	Part Number	Description	Qty
OPTIO	N T - PRESSURE T	RANSDUCERS	
35	12-00309-05	Switch, Pressure	1
-	12-00352-07SV	Transducer Kit - Includes:	1
36	12-00352-07	Transducer, Suction NSS	1
37	22-01713-12	Cable, SPT Patch	1
38	12-00352-00	Transducer, Discharge	1
39	EC39DM070	Core, Check Valve (Used with 40-00604-00 Tee)	3

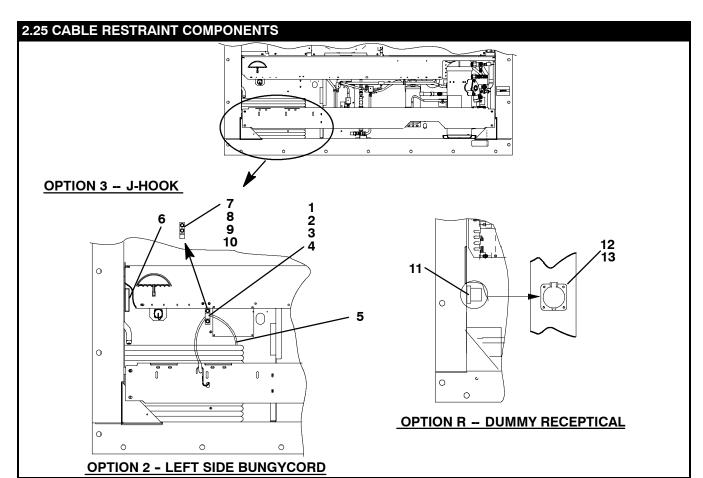


Item	Part Number	Description	Qty
OPTIO	N 2 - LEFT BUNGY	CORD ONLY	
1	69NT35-5992	Cable Restraint	1
2	66U1-5321-7	Washer, Flat, 1/4 - SST	2
3	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
4	34-06053-03	Washer, Mylar, .25 I.D. X 1.00 O.D.	2
5	66U1-2603	Strap, Tie Down	1
6	22-01679-03	Dummy Receptical	1
OPTIO	N 3 - J-HOOK		
7	69NT35-8382	Cable Restraint, J-Hook	1
8	58-04026-22	Protector, Mylar	1
9	66U1-5321-7	Washer, Flat, 1/4 - SST	2
10	66U1-5361-25	Screw, Cap, Hex, Head, 1/4-20 x .75 lg - SST	2
OPTIO	NR - DUMMY REC	EPTICAL	
11	22-01679-03	Receptical	1
12	66U1-5321-8	Washer, Flat, #10 SST	4
13	66U1-5371-6	Screw, Cap, Hex, Head, 10-24 x .75 lg - SST	4

41

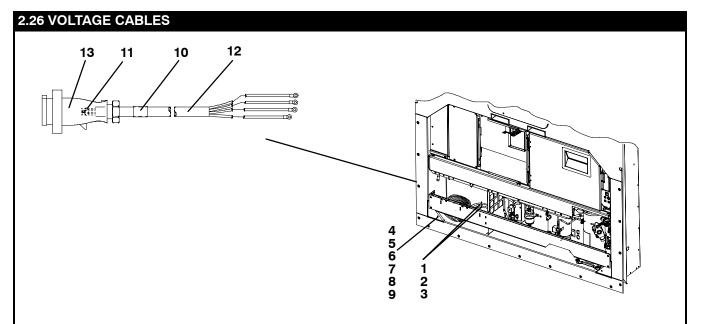

Item	Part Number	Description	Qty
CLAMI	PS ON BACK WAL	L AND CABLE CUTTERS	
4	34-00373-56	Clamp, Tube, Cushioned, 9/16 Diameter (Used with Transicord)	A/R
1	34-00373-59	Clamp, Tube, Cushioned, 3/4 Diameter	A/R
2	66U1-5381-1	Screw, Hex Head, #10-24 x 3/4 lg SST	A/R
3	34-06053-03	Washer, Mylar, 1/4 ID x 1.00 OD	A/R
	69NT35-6412-2	Clamp, Cable Cutter, 8 AWG cable	1
4	68-14456-00	Clamp, Cable Cutter, 10 AWG cable	1
	58-14456-01	Clamp, Cable Cutter, 11 AWG cable	1
5	58-04026-07	Protector, Mylar	A/R
6	66U1-5361-11	Screw, Machined Hex Head, 1/4-20 x 1-1/2 lg SST	A/R
7	34-00667-11	Locknut, Hex Head, 1/4-20 - SST	A/R
8	66U1-5321-7	Washer, Flat, 1/4 - SST	A/R
9	34-06053-03	Washer, Mylar, 0.25 I.D. x 1.00 O. D.	A/R
		460V CABLES	
STANE		ALL 460V CABLES	
10	66U1-2583	Heat Shrink Tube (Coil Label) - "460V"	1
11	22-02324-01	Bushing (Used with Standard Cable)	4
	22-02324-05	Bushing (Used with Transicord)	4
OPTIO			
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-02378-00	Plug, Power	1
OPTIO			
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-02378-00	Plug, Power	1
OPTIO			
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01891-00	Plug, Power	1
OPTIO			
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01891-00	Plug, Power	1


2.26 V	OLTAGE CABLES	(Continued)	
Item	Part Number	Description	Qty
OPTIO	N 5		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01883-00	Plug, Power	1
OPTIO	N 6		
12	22-01551-00	Cable, Power - Yellow, 33 amp, 11 AWG	A/R
13	22-01891-00	Plug, Power	1
OPTIO	N 7		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01891-00	Plug, Power	1
OPTIO	N 8		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-01932-00	Plug, Power	1
OPTIO	N 9		
12	66U1-9782	Cable, Power - Yellow, 10/4	A/R
13	22-02232-00	Plug, Power	1
		230V CABLES	
STANE	DARD PARTS FOR	ALL 230V CABLES	
10	66U1-2583-1	Heat Shrink Tube (Coil Label) - "230V"	1
11	22-02324-02	Bushing (Used with 8 AWG)	4
12	66U1-9782-1	Cable, Power - Black, 35 amps, 8 AWG	A/R
OPTIO	N 1		
13	22-02188-00	Plug, Power	1
OPTIO			
13	22-02375-00	Plug, Power	1
OPTIO			
13	66U1-6782-3	Plug, Power	1
OPTIO			
13	22-01744-00	Plug, Power	1
OPTIO			
	22-02322-00	Plug, Power	1
OPTIO			
13	22-01884-00	Plug, Power	1
OPTIO			
13	66U1-6782	Plug, Power	1
OPTIO			
13	22-01931-00	Plug, Power	1
OPTIO			
13	22-01906-00	Plug, Power	1

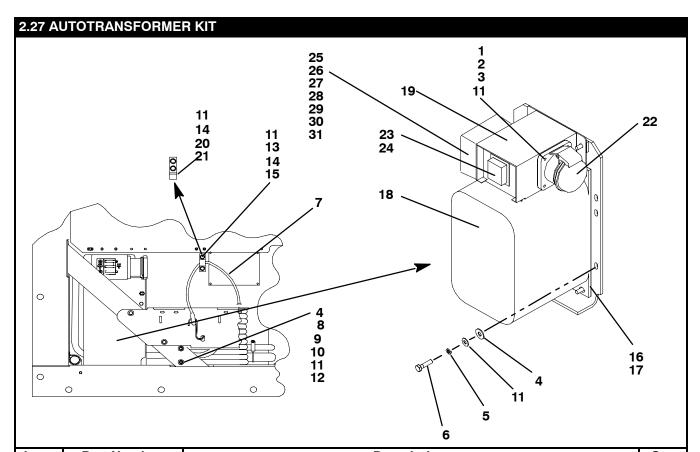

Item	Part Number	Description	Qty
STAND	ARD PARTS INCLU	JDED IN EVERY 76-00670 SERVICE KIT	
-	76-00670-xx	Standard Parts Included in the Service Kits Include:	1
1	66U1-5371-7	Screw, Hex Head, #10-24 x 1/2 lg SST	4
2	66U1-5321-8	Washer, Flat, #10 - SST	4
3	34-06053-05	Washer, Mylar, 0.205 ID x 0.600 OD	4
4	34-06053-00	Washer, Mylar, 0.250 ID x 0.800 OD	5
5	AU11JR171	Washer, Lock, 1/4 - SST	5
6	AA06JA170	Screw, Hex Head, 1/4-20 x 1.00 lg.	5
7	66U1-2603	Strap, Tie Down	1
	69NT35-6412-2	Clamp, Cable Cutter, 8 AWG cable	1
8	69NT35-6412	Clamp, Cable Cutter, 10 AWG cable	1
	69NT35-6412-1	Clamp, Cable Cutter, 11 AWG cable	1
9	58-04026-07	Protector, Mylar	1
10	66U1-5361-11	Screw, Machined Hex Head, 1/4-20 x 1-1/2 lg SST	2
11	66U1-5321-7	Washer, Flat, 1/4 - SST	A/R
12	34-00667-11	Locknut, Hex Head, 1/4-20 - SST	2
13	69NT35-5992	Clamp, Tie Down Strap	1
14	66U1-5361-25	Bolt, Hex Head, 1/4-20 x 3/4 lg SST	A/R
15	34-06053-03	Washer, Mylar, 0.25 ID x 1.00 O.D.	2
16	69NT43-374	Bracket Assembly	1
17	58-04026-17	Protector, Mylar	1


2.27 A	UTOTRANSFORME	R KIT (Continued)	
Item	Part Number	Description	Qty
OPTIO	N 1 - AUTOTRANS	FORMER	
	See Previous F	Page for Standard Parts Included in the Kit and use with Items Below	
-	76-00670-02	Transformer Kit, Field Installation, without CB2 - Includes:	1
18	10-01139-04	Transformer, Dual Voltage Modular	1
NS	22-01778-00	Terminal Block - Used only without CB2	1
19	69NT43-470-1	Box Assembly	1
20	69NT35-8382	Clamp, Tie Down Strap	1
21	58-04026-22	Protector, Mylar	1
OPTIO		FORMER WITH CB2 AND RECEPTACLE	
		Page for Standard Parts Included in the Kit and use with Items Below	
_	76-00670-01	Transformer Kit, Field Installation, with CB2 - Includes:	1
18	10-01139-04	Transformer, Dual Voltage Modular	1
19	69NT43-470	Box Assembly - Used only with CB2	1
	22-01679-00	Receptacle - 32 Amp	1
22	22-01679-01	Receptacle w/ Screw Cap - 32 Amp, Alternate, SOLD SEPARATELY	1
20	69NT35-8382	Clamp, Tie Down Strap	1
21	58-04026-22	Protector, Mylar	1
- -	76-00667-05	Circuit Breaker Kit, Field Installation - Includes:	1
23	10-00083-05	Circuit Breaker, 70 amp - 250 vac, 50/60 hz	1
24	66U2-1531	Boot - Includes:	1
NS	NSS	Frame	1
NS	NSS	Screw, Self Sealing, #6-32 x 3/8 lg SST	6
	N 3 - AUTOTRANS	FORMER WITH CB2 AND BRIDGING UNIT	
		Page for Standard Parts Included in the Kit and use with Items Below	
_	76-00670-03	Transformer Kit, Field Installation, with CB2 and TBU - Includes:	1
18	10-01139-04	Transformer, Dual Voltage Modular	1
19	69NT43-470-2	Box Assembly	1
20	69NT35-8382	Clamp, Tie Down Strap	1
21	58-04026-22	Protector, Mylar	1
-	76-00667-05	Circuit Breaker Kit, Field Installation - Includes:	1
23	10-00083-05	Circuit Breaker, 70 amp - 250 vac, 50/60 hz	1
24	66U2-1531	Boot - Includes:	1
NS	NSS	Frame	1
NS	NSS	Screw, Self Sealing, #6-32 x 3/8 lg SST	6
25	12-00474-00	Bridge Unit, Transformer	1
26	42-00470-00	Gasket, Transformer Bridge Unit	1
27	34-06221-00	Screw, Hex Head, #10-24 x 2.50 lg SST	2
28	34-00667-09	Locknut, Hex Head, #10-24 - SST	2
29	66U1-5321-8	Washer, Flat #10 - SST	2
30	34-06053-05	Washer, Mylar 0.205 I.D. x 0.600 O.D.	2
31	22-02324-01	Bushing, 0.142 I.D. x 0.472 O.D.	3
OPTIO		FORMER WITH CB2 AND RECEPTACLE Page for Standard Parts Included in the Kit and use with Items Below	
_	76-00670-04	Transformer Kit, Field Installation, with CB2 - Includes:	1
22	22-01734-01	Everything in kit 76-00670-01 except replace Item #22 with below Receptacle - 32 Amp	1
	0.70101		' '

45

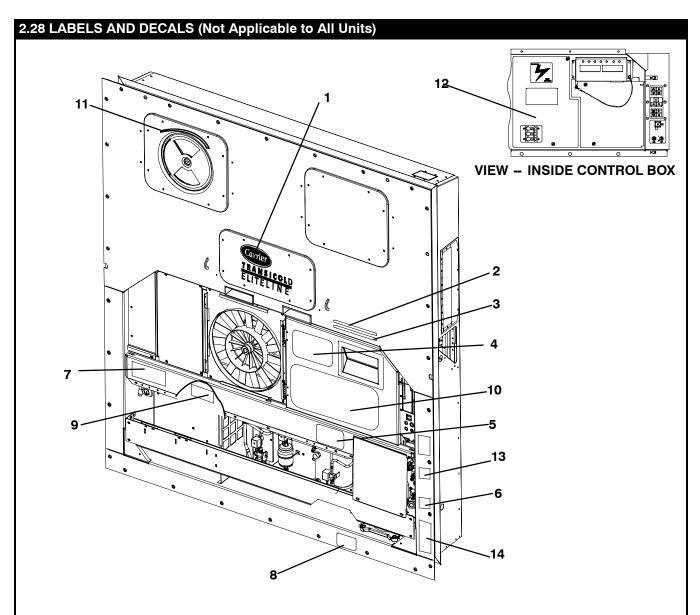


Item	Part Number	Description	Qty
STAN	DARD LABELS		
1	62-10754-00	Decal, Carrier Eliteline	1
2	69NT35-3867	Label, Economy Mode	1
3	69NT35-3907	Label, Humidity Control Sensor	1
4	62-02721-07	Label, Function Code - English	1
	62-10902-02	Label, USDA Cold Certified	1
5	62-10902-03	Label, Micro-Link 3 with USDA Cold Certified	1
	62-10902-04	Label, Micro-Link 3 without USDA Cold Certified	1
6	62-02444-01	Label, Charge with R-134a	1
7	62-10259-00	Label, R-134a - Ozone Protection - English	1
'	62-02530-01	Label, R-134a - Ozone Protection, Umbrella Only - English	1
8	62-02458-01	Label, POE Compressor Oil	1
9	62-02785-00	Label, CE	1
NS	69NT35-6118	Label, USDA (Location - Back of Unit, top left side)	1

2.28 L	ABELS AND DECA	LS (Continued)	
Item	Part Number	Description	Qty
OPTIO	N 1 - ENGLISH		
10	62-02743-16	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air)	1
10	62-02743-18	Label, Operating Instructions (No Recorder)	1
11	62-02723-00	Label, Fresh Air Makeup - English	1
11	62-02723-03	Label, Fresh Air Makeup (w/ Full CMH) - English	1
11	62-02723-10	Label, Fresh Air Makeup (w/ Full CMH + CFM) - English	1
12	62-10532-00	Label, Welding Precautions - English	1
13	62-10766-00	Label, Compressor Removal - English	1
14	62-10717-00	Label, Warning Compressor Power-Up - English	1
OPTIO	N 2 - ENGLISH/SP	ANISH	
10	62-02743-01	Label, Operating Instructions (Partlow w/ Return Air) - English/Spanish	1
10	62-02743-10	Label, Operating Instructions (No Recorder) - English/Spanish	1
11	62-02723-02	Label, Fresh Air Makeup - English/Spanish	1
11	62-02723-04	Label, Fresh Air Makeup (w/ Full CMH) - English/Spanish	1
12	62-10532-02	Label, Welding Precautions - English/Spanish	1
13	62-10532-00	Label, Compressor Removal - English/Spanish	1
14	62-10532-00	Label, Warning Compressor Power-Up - English/Spanish	1
OPTIO	N 5 - ENGLISH/TR	ADITIONAL CHINESE	
10	62-02743-19	Label, Operating Instructions (Electronic Partlow w/ Supply & Return Air) - English/Chinese	1
11	62-02723-06	Label, Fresh Air Makeup - English/Chinese	1
12	62-10532-04	Label, Welding Precautions - English/Chinese	1
13	62-10532-00	Label, Compressor Removal - English	1
14	62-10532-00	Label, Warning Compressor Power-Up - English	1

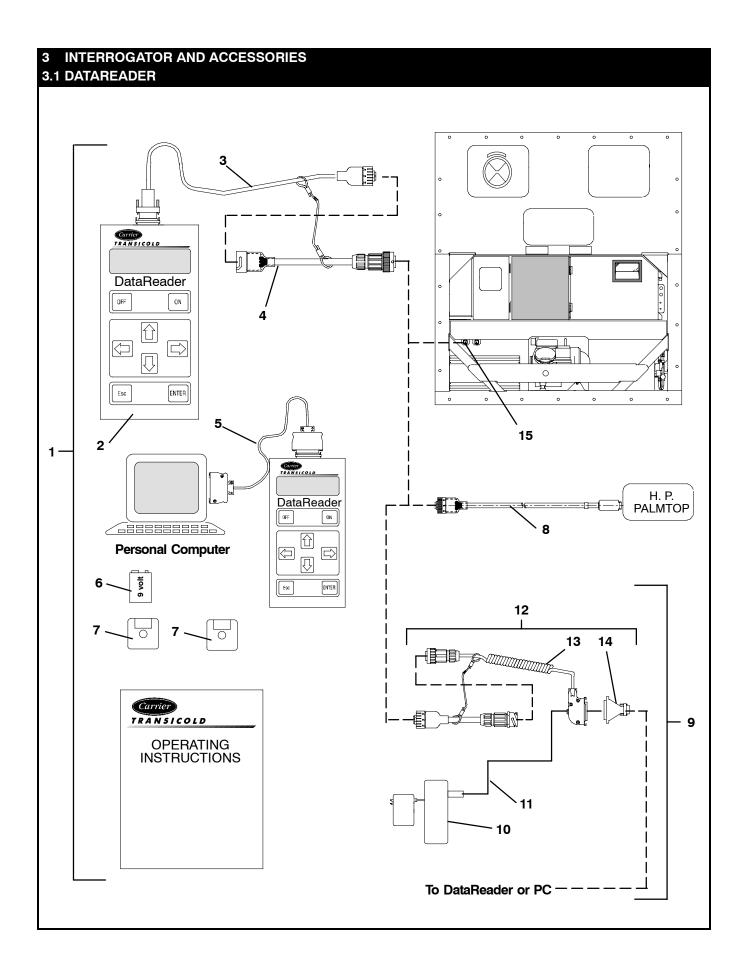


00321-07/2.5	Description	Qty			
00321-07/2.5	·				
	Kit, DataReader - Includes:	1			
00377-01	DataReader NSS	1			
01737-00	Cable, Download	1			
01737-01	Cable, Adapter	1			
01743-00	Cable, Upload	1			
PL	Battery, Akaline - 9 Volt	1			
00406-00	Disk Kit, DataView (DOS) (3.5 DS/HD Diskettes, Formatted)	1			
	(SEE NOTE) - Includes:				
00413-05SV	Software, DataView NSS	1			
00528-00	Software, DataView (Scroll) NSS	1			
01737-02	Cable, H. P. Palmtop	1			
50058-00	Kit, Battery, with Cable - Includes:	1			
NSS	Battery, External, with Battery Charger	1			
02401-00	Cable	1			
50059-00	Kit, Cable, with Adapter - Includes:	1			
02418-02	Cable, Interrogator	1			
02420-00	Adapter	1			
-	Receptacle - Refer to section 3.2	-			
)24°	18-02	18-02 Cable, Interrogator 20-00 Adapter			


Kit includes a 3.5 DS/HD Diskette, Formatted. If a DS/DD Diskette is required, contact a Customer Service Representative.

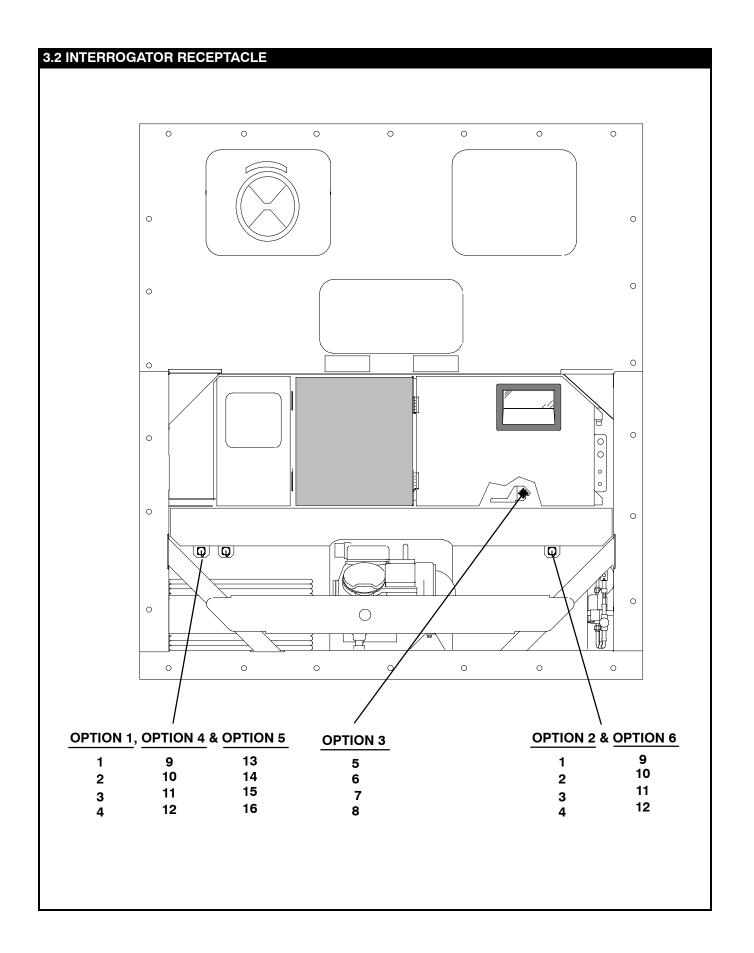

3.2 INT	TERROGATOR REC	EPTACLE	
Item	Part Number	Description	Qty
OPTIO	N 1 - LEFT STRAIG	GHT MOUNT & OPTION 2 - RIGHT STRAIGHT MOUNT	
1	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1
2	22-01613-14	Contact, Pin, #16	5
3	69NT43-176	Cap, Dust, with Tether (5 Pin)	1
4	69NT41-192	Bracket, Interrogator Connector	1
OPTIO	N 3 - BOX MOUNT		
5	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1
6	22-01613-14	Contact, Pin, #16	5
7	68-12434-02	Bracket, Interrogator Connector	1
8	42-00174-38	Gasket, Interrogator Connector Bracket	1
OPTIO	N 4 - LEFT STRAIG	GHT MOUNT AND OPTION 6 - RIGHT STRAIGHT MOUNT	
9	22-02412-00	Receptacle, Interrogator (ICR) (5 Pin)	1
10	22-02412-02	Contact, Pin, #16	5
11	22-02413-00	Cap, Dust, with Tether (5 Pin)	1
12	69NT40-222	Bracket, Interrogator Connector	1
OPTIO	N 5 - LEFT ANGLE	ED MOUNT	
13	22-01660-03	Receptacle, Interrogator (ICR) (5 Pin)	1
14	22-01613-14	Contact, Pin, #16	5
15	69NT43-176	Cap, Dust, with Tether (5 Pin)	1
16	68-12553-00	Bracket, Interrogator Connector	1
		NOTE	
		Do not mix silver and gold pins and sockets.	

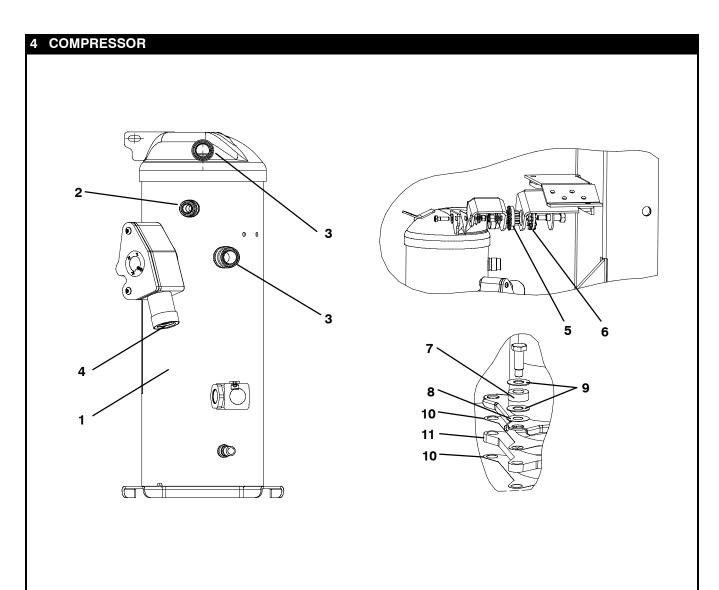

Item	Part Number	Description	Qty
1	18-10134-21	Compressor, Scroll (See Section 2.23) - Includes:	1
2	42-00384-01	Seal, Rotolock, 1-14	1
3	42-00384-02	Seal, Rotolock, 1-1/4-12	2
4	18-00077-41	O-Ring	1
5	58-04461-00	Shockmount, Bushing	1
6	58-04461-01	Shockmount, Ring	1
7	58-04451-00	Mount, Resilient, 80A	4
8	34-06053-20	Washer, Mylar - 1.50 X .65	4
9	34-06236-00	Washer687 X 1.50 X .78	8
10	58-04435-00	Protector, Mylar	2
11	48-00350-01SV	Base, Compressor (Painted)	1
NS	07-00427-00	Compressor Oil (Quart)	2

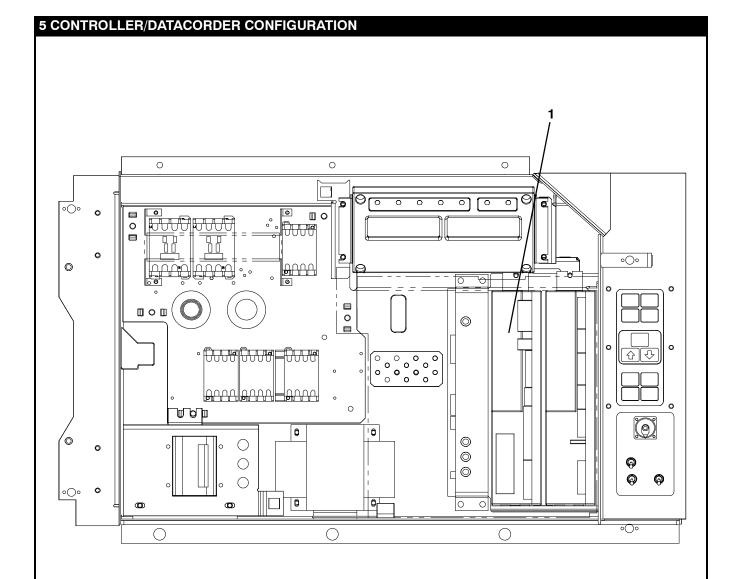

Item	Part Number	Description	Qty
	12-55009	Controller - Un-Configured (See Note 1)	1
1	1	Controller - Configured (See Note 2 and Refer to Container Unit Matrix)	1

NOTES

- 1. The last four digits of the Part Number refer to the operation software revision.
- 2. The Controller/DataCORDER module is shipped with the operational software already loaded, however, when ordering this part number the end user must load the configuration software at the time of installation.

6 TOOLS	
PART NO.	DESCRIPTION
07-00013-00	Temperature Tester (Simpson Meter)
07-00013-01	Temperature Test Lead (15 Foot)
07-00013-02	Temperature Test Lead (50 Foot)
07-00013-03	Adapter, Males (Both Ends) (Use with Temperature Tester)
07-00015-00	Case, Carrying (Used with 07-00013-00)
07-00450-00	Wrench, Compressor Sight Glass
07-00437-00	Inspection Light with Mirror
07-00228-00	Volt-Ohmmeter, Digital
07-00229-00	Amprobe Clamp (Used with 07-00228-00)
07-00238-00	Wrench, Service Valve
07-00243-10	Multimeter, Digital (Fluke)
07-00263-00	Pliers, Crimping (Used for compressor terminal block replacement)
07-00264-00	Grip, Wire Vise (Used for compressor terminal block replacement)
07-00277-00	Kit, Static Dissipative (Used for working on electronic components)
07-00304-00	Ground Strap, Wrist (Used for working on electronic components)
07-00294-00	Gauge Set, Manifold - Fahrenheit/PSI
07-00294-05	Gauge Set, Manifold - Centigrade/KPa
07-00295-00	Detector, Leak
07-00397-03	Extractor, Pin (Used on Fan Motor Plugs and Interrogator Plugs)
07-00397-02	Crimper, Pin (Used on Fan Motor Plugs and Interrogator Plugs)
07-00329-00	Extractor, Pin (Used on Controller module connectors)
07-00330-00	Crimper, Pin (Used on Controller module connectors)
07-00370-00	Crimper, Pin (Used on Stepper Valve, HPS)
07-00387-00	Extractor, Pin (Used on Stepper Valve, HPS)
07-00375-00	Tester, Portable, Stepper Motor Drive
07-00391-00	Application Gun (Used with 07-00390-00)
07-00398-00	Software Card Programmer
07-00408-00	Stepper Jumper Assembly
07-00418-00	Torx Driver Bit
07-00409-00	1-1/8", 3/8" Drive, u/o economizer valve
07-00410-00	1-3/8", 3/8" Drive, u/o suction/discharge valve
07-00411-00	2-1/8", 3/8" Drive, u/o SMV
	Refer to Manual 62-03213

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
02-00082-00	9	10-00083-05	45	14-00221-03	20
04-50027-00	16, 25	10-00332-06	11	14-00232-30	23
07-00013-00	54	10-00366-01SV	11	14-00263-05	31
07-00013-01	54	10-00413-00	31	14-00263-20	31
07-00013-02	54	10-00431-02	11	14-00273-02	31
07-00013-03	54	10-00431-06	10	14-00284-20	23
07-00015-00	54	10-00431-07	10	14-00285-00	23
07-00228-00	54	10-00431-08	10	14-00311-02SV	1
07-00229-00	54	10-00455-00	29	14-01032-14	20
07-00238-00	54	10-01129-07	11	14-01090-12	23
07-00243-10	54	10-01129-10	11	14-01091-01	20, 21, 23
07-00263-00	54	10-01139-04	45	14-01091-02	31
07-00264-00	54	10-0298-01	10	14-01092-03	21
07-00277-00	54	12-00275-19SV	15	14-50341-02SV	23
07-00294-00	54	12-00309-05	40	18-00077-41	39, 52
07-00294-05	54	12-00342-02	33	18-10134-21	39, 52
07-00295-00	54	12-00342-03	33	22-00041-00	1
07-00304-00	54	12-00342-04	33	22-00041-02	1
07-00313-00	1	12-00352-00	40	22-00066-01	1
07-00321-07/2.5	49	12-00352-07	40	22-00066-02	1
07-00329-00	54	12-00352-07SV	40	22-00066-03	1
07-00330-00	54	12-00377-01	49	22-00119-04	1
07-00345-00	1	12-00395-01SV	24	22-00120-04	1
07-00370-00	54	12-00413-05SV	49	22-00120-07	1
07-00375-00	54	12-00433-00RP	15	22-00121-07	1
07-00387-00	54	12-00433-02RP	15	22-00595-01	1
07-00390-00	9	12-00464-05	37	22-01106-00	1
07-00391-00	9, 54	12-00464-06	37	22-01107-00	1
07-00397-02	54	12-00474-00	45	22-01139-04	1
07-00397-03	54	12-00493-06	31	22-01140-01	1
07-00398-00	54	12-00493-08	19	22-01140-02	1
07-00406-00	49	12-00493-09	31	22-01140-04	1
07-00408-00	54	12-00495-20	20, 31	22-01141-01	1
07-00418-00	54	12-00500-01SV	31	22-01551-00	42, 43
07-00427-00	39, 52	12-00528-00	49	22-01556-00	15
07-00437-00	54	12-00573-00SV	15	22-01556-01	13
07-00450-00	54	12-00594-xx/5315	13	22-01556-02	13
08-00297-00	31	12-01071-01SV	21	22-01613-14	25, 33, 51
09-00128-00	37	12-55009	53	22-01613-15	25, 33
09-00128-01	37	14-00215-05	21	22-01613-34	25
09-00369-00SV	13	14-00220-01	20, 21	22-01614-02	25

Index-1 T-327PL

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
22-01614-03	25	22-02322-00	43	34-00373-51	1
22-01614-05	25	22-02324-01	42, 45	34-00373-53	1, 23
22-01621-03	15	22-02324-02	43	34-00373-54	23
22-01621-23	13	22-02324-05	42	34-00373-56	42
22-01622-00	13	22-02336-02	1, 13	34-00373-59	1, 42
22-01622-01	13	22-02336-08	1	34-00373-65	1
22-01622-02	13	22-02336-2	13	34-00373-69	1
22-01660-00	33	22-02341-00	11	34-00373-71	1
22-01660-03	33, 51	22-02341-01	11	34-00373-88	1
22-01660-04	33	22-02368-00	11	34-00616-06	25
22-01660-08	33	22-02375-00	43	34-00655-04	39
22-01679-00	45	22-02378-00	42	34-00655-10	25
22-01679-01	45	22-02392-03	31	34-00662-11	26, 27
22-01679-03	41	22-02393-01	31	34-00663-07	11
22-01713-02	15	22-02394-03	31	34-00663-09	7
22-01713-06	13	22-02396-02	15	34-00663-11	17, 25
22-01713-12	40	22-02396-03	15	34-00665-09	7
22-01731-00	42	22-02398-02	33	34-00666-09	29
22-01731-01	42	22-02398-03	33	34-00667-05	11
22-01734-01	45	22-02401-00	49	34-00667-09	21, 45
22-01737-00	49	22-02412-00	33, 51	34-00667-11	39, 42, 44
22-01737-01	49	22-02412-02	51	34-00667-12	16
22-01737-02	49	22-02413-00	33, 51	34-00667-13	39
22-01743-00	49	22-02418-02	49	34-00795-09	7, 37
22-01744-00	43	22-02420-00	49	34-00795-17	25
22-01777-00SV	13	22-04018-00SV	16	34-00848-10	11
22-01777-01SV	13	22-04040-00	39	34-00928-01	9, 11
22-01777-03	13	22-4031-00	13	34-00928-02	9, 35
22-01777-04	13	22-4031-01	13	34-00928-03	35
22-01778-00	45	22-4031-02	13	34-00928-09	29, 35
22-01883-00	43	22-50007 Series	1	34-01142-01	9, 11
22-01884-00	43	22-50088-00	25	34-01167-01	7
22-01889-00	11	22-50088-02	16	34-01178-22, 31	
22-01891-00	43	22-50100-00	13	34-01181-01	16
22-01892-00	25	22-50127-00	33	34-06053-00	7, 16,19 ,23,
22-01892-01	25	22-50157-00	13		26, 27, 28, 37, 39, 44
22-01906-00	43	24-00006-02	31	34-06053-02	16, 39
22-01931-00	43	30-00407-02SV	13	34-06053-03	16, 17, 37,
22-01932-00	43	34-00373-05	1, 21	J- 30000-00	41, 42, 44
22-02188-00	43	34-00373-07	1, 19	34-06053-04	29
22-02232-00	43	34-00373-11	1		

T-327PL Index-2

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
34-06053-05	7,19, 23, 32, 39, 44, 45	40-00520-02	19	58-04026-07	42, 44
34-06053-11	21	40-00542-00	19	58-04026-17	44
34-06053-11		40-01129-00	21	58-04026-22	41, 45
	37	42-00174-38	51	58-04026-26	19, 31
34-06053-18	28	42-00233-01	28	58-04026-33	20
34-06053-19	27	42-00270-02	7	58-04026-41	17
34-06053-20	39, 52	42-00295-00	29	58-04026-59	23
34-06060-03	39	42-00295-01	29	58-04066-00	25
34-06092-00	28, 29	42-00296-00	27	58-04101-00	7
34-06107-00	7	42-00296-01	26, 27	58-04101-07	17, 37
34-06139-03	9	42-00327-00	26, 27	58-04145-01	11
34-06154-00	26, 27	42-00334-00	35	58-04145-06	10
34-06165-09	25	42-00384-01	19, 39, 52	58-04251-00	27
34-06169-00	7, 17, 37	42-00384-02	19, 39, 52	58-04263-01	29
34-06174-03	39	42-00407-00	27	58-04276-00	24
34-06174-04	39	42-00465-00	28	58-04277-00SV	24
34-06179-00	17, 37	42-00470-00	45	58-04278-00	24
34-06179-04	37	42-00611-00	7	58-04279-00	24
34-06183-00	28, 29	42-00659-00	19	58-04346-00	7
34-06185-01	27	42-00660-00	19	58-04366-00SV	7
34-06211-01	10	42-01098-01	37	58-04389-00	7
34-06221-00	45	42-50000-00	21	58-04435-00	39, 52
34-06223-00	11, 15	44-00300-01	7	58-04436-00	21
34-06223-01	15	44-00300-02	7	58-04451-00	39, 52
34-06224-01	11	44-00300-03	7	58-04461-00	39, 52
34-06227-00	11	44-00343-00	9	58-04461-01	39, 52
34-06231-01	9	44-00370-03	23	58-04463-00	39
34-06231-03	9	44-00374-00	17, 37	58-04481-00	17
34-06231-04	9	44-01043-05	1	58-04624-00	35
34-06231-05	9	44-01043-07	1	58-04668-00	9
34-06231-06	9	48-00262-00	25	62-02444-01	46
34-06231-07	9	48-00350-01SV	39, 52	62-02458-01	46
34-06236-00	39, 52	48-00377-00	29	62-02530-01	46
34-06262-00	29	54-00548-20	25	62-02719-00	13
34-06286-00	29	54-00586-20	16	62-02721-07	46
34-06287-00	29	58-00065-27	23	62-02723-00	47
34-06295-00	19				
34-50015-00	9	58-00065-67 58-00065-70	37 37	62-02723-02	47 47
38-00577-00	25	58-00065-70	37	62-02723-03	47 47
38-00585-00	16	58-00956-00	21	62-02723-04	47 47
40-00520-01	23	58-00969-00	19	62-02723-06	47
- ·		58-01184-00	13, 15		

Index-3 T-327PL

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
62-02723-10	47	66U1-2763-5	21	66U1-8115	27
62-02735-00	13	66U1-3442-2	15	66U1-8662	5
62-02738-04	13	66U1-3632-20	19	66U1-8912	17
62-02738-08	13	66U1-3803	1, 21	66U1-9212-1	15
62-02743-01	47	66U1-3803-1	1	66U1-9752	10, 11
62-02743-10	47	66U1-3882-3	19	66U1-9782	42, 43
62-02743-16	47	66U1-5321-13	27	66U1-9782-1	43
62-02743-18	47	66U1-5321-3	25, 28, 31	66U2-1132-1	21
62-02743-19	47	66U1-5321-5	39	66U2-1142	21
62-02783-00	27	66U1-5321-6	11	66U2-1152	21
62-02785-00	46	66U1-5321-7	16,19,20,23,	66U2-1531	45
62-02822-01	35		24,29,37,39 41, 42, 44	68-12417-00	4
62-03957-01	9	66U1-5321-8	7, 11,19, 21,	68-12434-02	51
62-10259-00	46	3331 3321 3	23,29,31,39,	68-12553-00	51
62-10381-00	29		41, 44, 45 _	68-12658-04	37
62-10532-00	47	66U1-5331-3	7	68-12658-20	37
62-10532-02	47	66U1-5361	16	68-12758-00	39
62-10532-04	47	66U1-5361-11	39, 42, 44	68-12993-00	39
62-10537-00	29	66U1-5361-25	16,17,19,20, 23,28,31,37,	68-13181-00	31
62-10540-00	29		39, 41, 44	68-13294-00	39
62-10540-04	29	66U1-5361-47	39	68-13427-00SV	10
62-10557-00	5	66U1-5362-2	27	68-13475-00	35
62-10754-00	46	66U1-5371-10	19, 31	68-13475-01	35
62-10902-02	46	66U1-5371-13	31	68-13475-08	35
62-10902-03	46	66U1-5371-6	19,21,23, 41	68-13475-09	35
62-10902-04	46	66U1-5371-7	7,11,13, 19,	68-13577-00	7
62-10914-00	11		23,24,29,31, 44	68-13979-00	25
62-10984-00	29	66U1-5381-1	42	68-13983-00	25
62-11018-00	10	66U1-5732-1	23	68-13984-00	25
66CH-11172	19	66U1-6651-4	11	68-14038-04	35
66CH1-1002-33	29	66U1-6782	43	68-14085-00	16
66CH1-1172-16	17	66U1-6782-3	43	68-14129-00	19
66CH1-1172-46	11	66U1-6811-12	17	68-14129-01	19
66U12552-133	23	66U1-6811-15	7	68-14142-00	19
66U13803	23	66U1-6811-8	7, 17, 37	68-14142-01	19
66U1-2403	9, 35	66U1-6835	11	68-14268-00	23
66U1-2403-1	7	66U1-6912-16	31	68-14268-01	23
66U1-2552-185	26, 27	66U1-7842-13	11	68-14269-01	23
66U1-2583	42	66U1-7982-2	35	68-14269-02	23
66U1-2583-1	43	66U1-8075	35	68-14278-00	23
66U1-2603	41, 44				

T-327PL Index-4

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
68-14278-01	23	69NT35-6532	31	76-00676-00	33
68-14373-00	35	69NT35-7012	29	76-00701-05	37
68-14413-00	23	69NT35-8113	4	76-00701-06SV	37
68-14413-01	23	69NT35-8348	29	76-00701-10SV	37
68-14546-06	17	69NT35-8382	41, 45	76-00701-11SV	37
68-14706-01	39	69NT35-8548	4	76-00704-01	17
68-14955-00	29	69NT35-8693-8	17	76-00724-00SV	9
68-14989-00	23	69NT35-8693-9	17	76-00734-00	21
68-15001-00	23	69NT35-9228	29	76-00746-05	35
68-15001-01	23	69NT35-9238	29	76-50058-00	49
68-15013-00	35	69NT40-222	11, 51	76-50059-00	49
68-15014-00	35	69NT40-976-3	28	76-50075-00	17
68-15148-00	20, 21	69NT41-192	51	76-50084-00SV	9
68-15148-01	20, 21	69NT41-782	29	76-50116-00	29
68-15149-00	39	69NT41-852-1	28	76-50116-01	29
69NP20-1031	23	69NT41-982-3	11	76-50116-02	29
69NT35-1287-1	29	69NT41-992	33	76-50116-03	29
69NT35-1417	29	69NT42-688-10	7	76-50116-04	29
69NT35-2257	35	69NT42-688-7	7	76-50136-00	29
69NT35-2287	9	69NT42-954-4	21	79-01694-00	27
69NT35-2692	13,20,21, 35	69NT43-124-5	9	79-01697-06SV	26
69NT35-2692-1	17, 25, 28,	69NT43-125-1	9	79-01697-14SV	27
	31, 37	69NT43-175	33	79-01706-05SV	11
69NT35-3867	46	69NT43-176	33, 51	79-01785-01	20
69NT35-3907	46	69NT43-295	25	79-01902-00	27
69NT35-3987	4	69NT43-307	28	79-01925-00	29
69NT35-3997-1	4	69NT43-374	44	81-01855-22	17
69NT35-4047	28	69NT43-464	35	81-01907-01	19
69NT35-5022-5	37	69NT43-470	45	81-01980-01	19
69NT35-5022-6	7	69NT43-470-1	45	81-01996-01	19
69NT35-5352-1	37	69NT43-470-2	45	86-04405-00	39
69NT35-5992	41, 44	74-00201-01	27	86-04406-00	39
69NT35-6112	16	74-00201-02	27	AA06JA170	44
69NT35-6118	46	76-00397-00	1	AU11JR171	31, 44
69NT35-6272-1	9	76-00667-05	45	DE40BA-203	23
69NT35-6278	11	76-00670-01	45	DE40BA3-03	23
69NT35-6412	42, 44	76-00670-02	45	EC39DM070	40
69NT35-6412-1	42, 44	76-00670-03	45	KA-66FA-060	19
69NT35-6412-2	42, 44	76-00670-04	45	KA66FA138	31
69NT35-6522	31	76-00675-01	31	14.00174100	O1
		70-00070-01	01		

Index-5 T-327PL



Carrier Transicold Division, Carrier Corporation Container Products Group P.O. Box 4805 Syracuse, N.Y. 13221 U.S A

www.carrier.transicold.com

