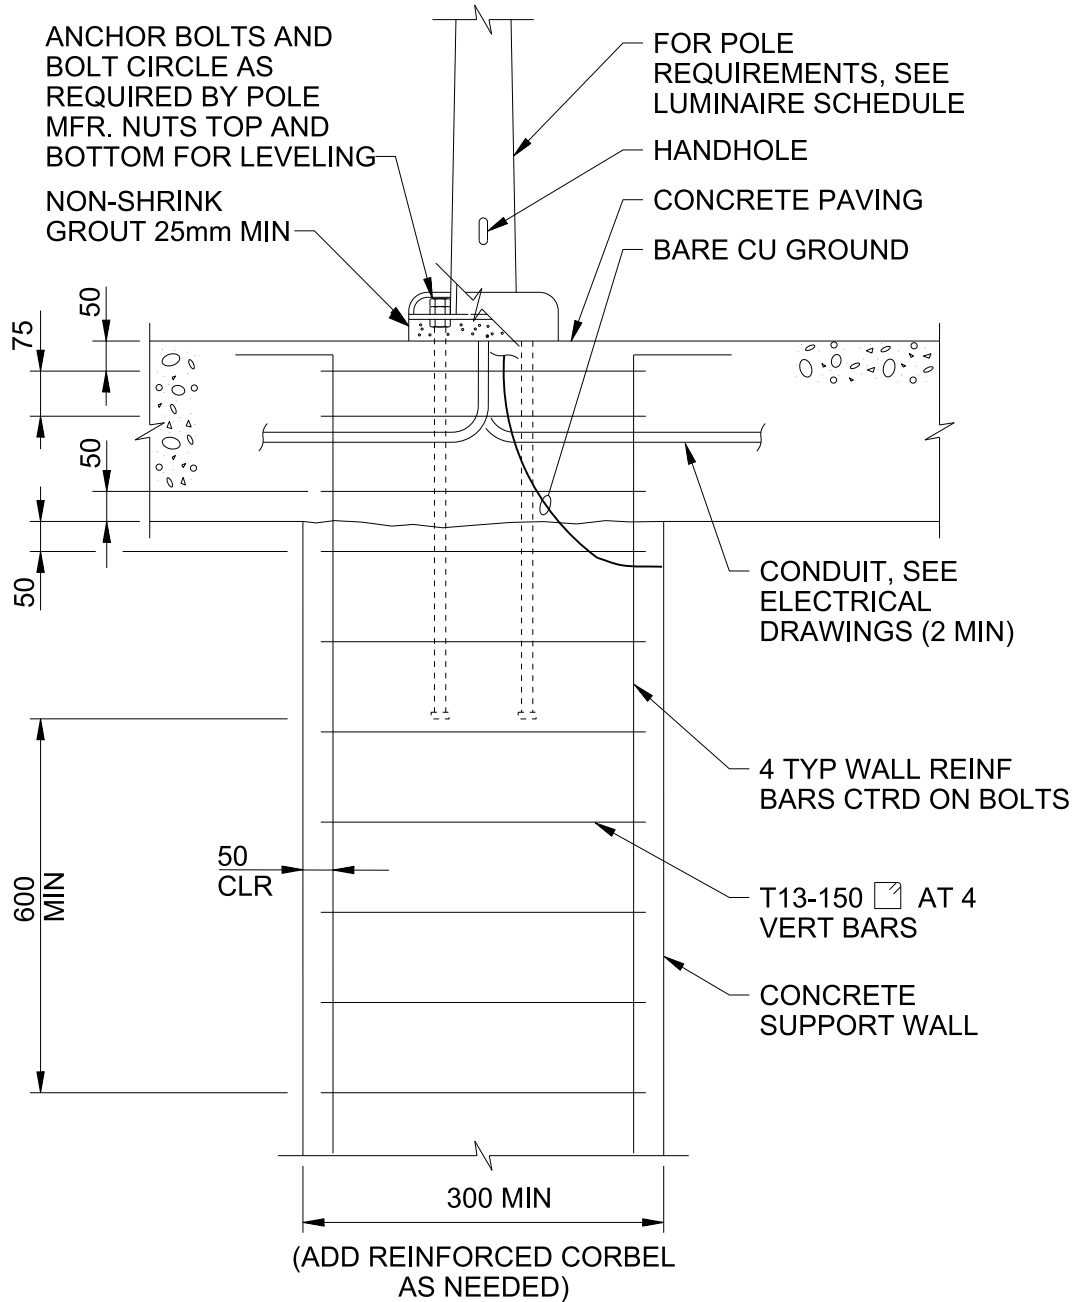


**NOTES:**

1. USE STAINLESS STEEL ANCHOR BOLTS, NUTS AND LOCKWASHERS.
2. CONDUITS SHALL BE STUBBED UP TO WITHIN 150mm OF POLE HANDHOLE.

TYPICAL LIGHT POLE BASE IN SUPPORT WALL

NTS

STANDARD DETAIL

16202B

JACOBS